

**HC10/FM100/FM200  
BEARING HOUSING KIT (MD #262272)  
INSTALLATION INSTRUCTIONS**

The bearing housing is found on HC10, FM100, FM200 models and reduces friction while supporting rotational force.


**Installation Instructions**

To install the Bearing Housing kit, follow these steps:

1. torque exterior housing bolts (A) to 12 Nm (106 lbf·in).

**IMPORTANT: DO NOT** overtighten exterior bearing housing bolts.

**NOTE:** This bearing housing is included in multiple assemblies on the machine.

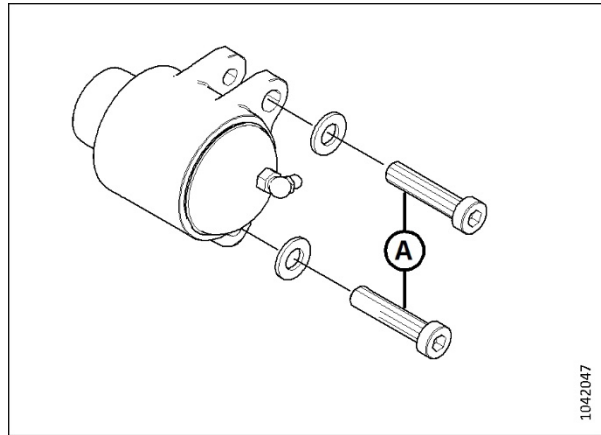

**Figure 1: Bearing Housing Cup with Dust Cap and Hardware**

© 2023 MacDon Industries, Ltd.

The information in this publication is based on the information available and in effect at the time of printing. MacDon Industries, Ltd. makes no representation or warranty of any kind, whether expressed or implied, with respect to the information in this publication. MacDon Industries, Ltd. reserves the right to make changes at any time without notice.