

MacDon[®]

M155 **Self-Propelled Windrower**

Operator's Manual

147959 Revision A

2017 Model Year

Original Instruction

The harvesting specialists.

M155 Self-Propelled Windrower. Featuring Dual Direction® and Ultra Glide® suspension.



Published August, 2016

California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm. Battery posts, terminals, and related accessories contain lead and lead components. Wash hands after handling.

Introduction

This manual contains information on the MacDon M155 Self-Propelled Windrower which, when coupled with one of MacDon's auger, rotary, or draper headers, provides a package designed to cut and lay in windrows a variety of grain, hay, and specialty crops.

The M155 Windrower is Dual Direction®, meaning that the windrower can be driven in the cab-forward or the engine-forward mode. Right and left designations are therefore determined by the operator's position, facing the direction of travel. This manual uses the terms "right cab-forward", "left cab-forward", "right engine-forward", and "left engine-forward" when referencing specific locations on the machine.

Use this manual as your first source of information about the machine. Use the Table of Contents and the Index to guide you to specific areas. Study the Table of Contents to familiarize yourself with how the material is organized.

When setting up the machine or making adjustments, review and follow the recommended machine settings in all relevant MacDon publications. Failure to do so may compromise the machine function and machine life and may result in a hazardous situation.

If you follow the instructions given here, your M155 Windrower will work well for many years.

Use this manual in conjunction with your header operator's manual.

A manual storage case is provided in the cab. Keep this manual handy for frequent reference and to pass on to new Operators or Owners. Call your Dealer if you need assistance, information, or additional copies of this manual.

CAREFULLY READ ALL THE MATERIAL PROVIDED BEFORE ATTEMPTING TO USE THE MACHINE.

MacDon provides warranty for Customers who operate and maintain their equipment as described in this manual. A copy of the MacDon Industries Limited Warranty Policy, which explains this warranty, should have been provided to you by your Dealer. Damage resulting from any of the following conditions will void the warranty:

- Accident
- Misuse
- Abuse
- Improper maintenance or neglect
- Abnormal or extraordinary use of the machine
- Failure to use the machine, equipment, component, or part in accordance with the manufacturer's instructions

NOTE: Keep your MacDon publications up-to-date. The most current version can be downloaded from our website www.macdon.com or from our Dealer-only site (<https://portal.macdon.com>) (login required).

NOTE:

Chinese and Russian translations of this manual can be ordered from MacDon, downloaded from the MacDon Dealer Portal (<https://portal.macdon.com>)(login required), or downloaded from the MacDon international website (<http://www.macdon.com/world>).

List of Revisions

At MacDon, we're continuously making improvements: occasionally these improvements impact product documentation. The following list provides an account of major changes from the previous version of this document.

Summary of Change	Location
Changed the publication date and part number.	Front cover
Added a statement about following the recommended machine settings in all relevant MacDon publications. Added warranty information.	Introduction, page i
Added pump identification information and illustration.	2.2 Specifications, page 30
Added note about egress lighting after engine shut down.	3.7.1 Field Light: Cab-Forward, page 49
Added stop lamp error information.	3.7.3 Road Light: Cab-Forward, page 51
Updated the software version information.	3.19.7 Cab Display Options, page 90
Added hazard light topic.	3.7.4 Hazard Light, page 52
Added auto road light topic.	3.7.6 Auto Road Light, page 53
Corrected description of BRAKE OFF message in Display Warnings and Alarms table. Deleted the TRANS OIL TEMP message from the Display Warnings and Alarms table; message is no longer valid.	Display Warnings and Alarms, page 86
Updated the Starting the Engine procedure to make it easier to follow.	Starting the Engine, page 160
Updated engine temperature normal range and high temperature alarm information to be consistent throughout the book.	Engine Temperature, page 164
Revised the emergency towing topic.	Towing the Windrower (Emergency), page 191
Added a note to ensure all header options are installed before adjusting header float.	4.4.2 Header Float, page 195
Added a specification for 40-foot headers to the knife speed table.	4.6.7 Knife Speed, page 293
Added a procedure for inspecting the cab suspension limit straps.	5.6 Cab Suspension Limit Straps, page 325
Added end-of-season battery storage information.	<ul style="list-style-type: none"> • Maintaining Batteries, page 371 • Removing Batteries, page 376
Added information about turning off the batteries when parking the windrower for periods longer than one week.	Battery Main Disconnect Switch, page 372
Updated the fuse box decal.	Fuse Box Decal, page 402
Updated formatting of the maintenance schedule and break-in inspections table. Added cab suspension limit straps inspection to maintenance schedule.	5.12.1 Maintenance Schedule/Record, page 431

Updated the header drive troubleshooting table.	6.4 Header Drive Troubleshooting, page 445
Updated gearbox lubricant specification.	8.2.3 Lubricants, Fluids, and System Capacities, page 477
Updated fault code table to sort by SPN number.	8.4 Engine Error Codes, page 480

Serial Number

If you require MacDon technical assistance, please have the serial number recorded and ready before you call. Record the model number, model year, and serial number of the windrower and engine on the lines below.

The windrower serial number plate (A) is located on the left side of the main frame near the walking beam.

Windrower model number _____
Windrower serial number _____
Year of manufacture _____

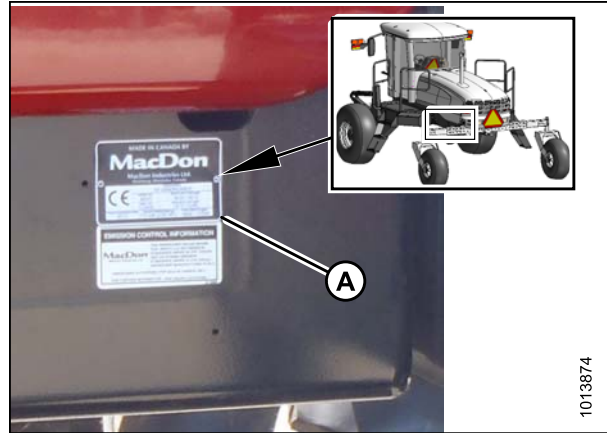


Figure 1: Machine Serial Number Location

The engine serial number plate (A) is located on top of the engine cylinder head cover.

Engine serial number _____
Date of manufacture _____



Figure 2: Engine Serial Number Location

TABLE OF CONTENTS

Introduction	i
List of Revisions	ii
Serial Number	iv
1 Safety	1
1.1 Safety Alert Symbols	1
1.2 Signal Words	2
1.3 General Safety	3
1.4 Maintenance Safety	5
1.5 Hydraulic Safety	6
1.6 Tire Safety	7
1.7 Battery Safety	8
1.8 Welding Precaution	9
1.9 Engine Safety	10
1.9.1 High Pressure Rails	10
1.9.2 Engine Electronics	11
1.10 Safety Signs	12
1.10.1 Installing Safety Decals	12
1.11 Safety Sign Locations	13
1.12 Understanding Safety Signs	17
2 Product Overview	27
2.1 Definitions	27
2.2 Specifications	30
2.3 Windrower Dimensions	34
2.4 Component Location	36
3 Operator's Station	39
3.1 Operator Console	39
3.2 Operator Presence System	41
3.2.1 Header Drive	41
3.2.2 Engine and Transmission	41
3.3 Operator's Seat Adjustments	42
3.3.1 Adjusting Fore-Aft Position	42
3.3.2 Adjusting Seat Suspension and Height	42
3.3.3 Adjusting Vertical Dampener	43
3.3.4 Adjusting the Armrest	43
3.3.5 Adjusting Fore-Aft Isolator Lock	44
3.3.6 Adjusting Seat Tilt	44
3.3.7 Adjusting Armrest Angle	45
3.3.8 Adjusting Lumbar Support	45
3.4 Training Seat	46
3.5 Using Seat Belts	47
3.6 Adjusting Steering Column	48
3.7 Lighting	49
3.7.1 Field Light: Cab-Forward	49
3.7.2 Road Light: Engine-Forward	50
3.7.3 Road Light: Cab-Forward	51
3.7.4 Hazard Light	52
3.7.5 Beacon Light (Optional)	53
3.7.6 Auto Road Light	53
3.7.7 HID Auxiliary Lighting (Optional)	54
3.8 Windshield Wipers	55
3.9 Rear View Mirrors	56
3.10 Cab Temperature	57
3.10.1 Heater Shut-Off	57

TABLE OF CONTENTS

3.10.2	Air Distribution	57
3.10.3	Climate Controls	58
	Refrigerant Oil	58
3.11	Interior Lights	59
3.12	Emergency Exit	60
3.13	Operator Amenities	61
3.14	Radio	63
3.14.1	AM/FM Radio	63
3.14.2	Mounting the Antenna	63
3.15	Horn	65
3.16	Engine Controls and Gauges	66
3.17	Windrower Controls	67
3.18	Header Controls	69
3.18.1	Header Drive Switch	69
3.18.2	Header Drive Reverse Button	69
3.18.3	Ground Speed Lever (GSL) Header Switches	70
	Display Selector Switch	71
	Header Position Switches	71
	Reel and Disc Speed Switches	72
3.18.4	Console Header Switches	72
	Deck Shift / Float Preset Switch	72
	Double Windrow Attachment (DWA) / Swath Roller Switch (if installed)	73
3.19	Cab Display Module (CDM)	74
3.19.1	Engine and Windrower Functions	74
3.19.2	Header Functions	75
3.19.3	Operating Screens	76
	Ignition ON, Engine Not Running	76
	Engine Running – At Initial Start Up	76
	Engine-Forward, Engine Running	77
	Cab-Forward, Engine Running, Header Disengaged	77
	Cab-Forward, Engine Running, Header Engaged, Auger Header Index Switch OFF	78
	Cab-Forward, Engine Running, Header Engaged, Auger Header Index Switch ON	79
	Engine Running, Header Engaged, Auger Header	80
	Cab-Forward, Engine Running, Header Engaged, Draper Header, Index Switch OFF	81
	Cab-Forward, Engine Running, Header Engaged, Draper Header Index Switch ON	82
	Cab-Forward, Engine Running, Header Engaged, Rotary Header Installed	83
	Miscellaneous Operational Information	84
3.19.4	Cab Display Module (CDM) Warning and Alarms	85
	Engine Warning Lights	85
	Display Warnings and Alarms	86
3.19.5	Programming Guidelines	88
3.19.6	Cab Display Module (CDM) Programming	89
3.19.7	Cab Display Options	90
	Setting the Cab Display Language	90
	Changing the Windrower Display Units	91
	Adjusting the Cab Display Buzzer Volume	92
	Adjusting the Cab Display Backlighting	93
	Adjusting the Cab Display Contrast	94
3.19.8	Calibrating the Header Sensors	95
	Calibrating the Header Height Sensor	95
	Calibrating the Header Tilt Sensor	98
	Calibrating the Header Float Sensors	100
3.19.9	Programming the Windrower	101
	Activating the Hydraulic Center-Link	101

TABLE OF CONTENTS

	Activating the Rotary Header Drive Hydraulics	102
	Setting the Header Knife Speed	103
	Setting the Knife Overload Speed	104
	Setting the Rotary Disc Overload Speed	105
	Setting the Hydraulic Overload Pressure	106
	Setting the Header Index Mode	107
	Setting the Return to Cut Mode	108
	Setting the Header Cut Width	109
	Activating the Double Windrow Attachment (DWA)	110
	Setting the Auto Raise Height	112
	Activating the Hay Conditioner	112
	Displaying Reel Speed	113
	Setting the Windrower's Tire Size	114
	Setting the Engine Intermediate Speed Control (ISC) RPM	115
	Clearing Sub-Acres	117
3.19.10	Activating Cab Display Lockouts	117
	Activating Knife Speed Control Lockout	117
	Activating Rotary Disc Speed Control Lockout	118
	Activating the Header Float Control Lockout	120
	Activating the Draper Speed Control Lockout	121
	Activating the Auger Speed Control Lockout	122
	Activating the Reel Speed Control Lockout	123
	Activating the Reel Fore-Aft Control Lockout	125
	Activating the Header Tilt Control Lockout	126
3.19.11	Displaying Activated Cab Display Lockouts	127
3.19.12	Troubleshooting Windrower Problems	129
	Displaying the Windrower and Engine Error Codes	129
	Switching the Installed Header Sensors ON or OFF	131
	Displaying Header Sensor Input Signals	132
	Forcing a Header ID	133
3.19.13	Troubleshooting Header Problems	135
	Testing the Header Up/Down Activate Function Using the Cab Display Module (CDM)	135
	Testing the Reel Up/Down Activate Function Using the Cab Display Module (CDM)	137
	Testing the Header Tilt Activate Function Using the Cab Display Module (CDM)	138
	Testing the Reel Fore-Aft Activate Function Using the Cab Display Module (CDM)	140
	Activating the Hydraulic Purge Using the Cab Display Module (CDM)	142
	Testing the Knife Drive Circuit Using the Cab Display Module (CDM)	143
	Testing the Draper Drive Circuit Activate Function Using the Cab Display Module (CDM)	145
	Testing the Reel Drive Circuit Activate Function Using the Cab Display Module (CDM)	147
	Testing the Rotary Disc Drive Circuit Activate Function Using the Cab Display Module (CDM)	148
	Testing the Double Windrower Attachment (DWA) Drive Activate Function Using the Cab Display Module (CDM)	150
3.19.14	Engine Error Codes	152
3.19.15	Cab Display Module (CDM) and Windrower Control Module (WCM) Fault Codes	152
4	Operation	153
4.1	Owner/Operator Responsibilities	153
4.2	Symbol Definitions	154
4.2.1	Engine Functions	154
4.2.2	Windrower Operating Symbols	155
4.2.3	Header Functions	156

TABLE OF CONTENTS

4.3	Operating the Windrower.....	157
4.3.1	Operational Safety	157
4.3.2	Break-In Period	158
4.3.3	Preseason Checks / Annual Service.....	158
	Air Conditioning (A/C) Compressor Coolant Cycling	159
4.3.4	Daily Checks and Maintenance	159
4.3.5	Engine Operation	160
	Starting the Engine	160
	Engine Warm-Up	162
	Engine Intermediate Speed Control (ISC).....	162
	Shutting down the Engine.....	162
	Filling the Fuel Tank.....	163
	Engine Temperature.....	164
	Engine Oil Pressure.....	164
	Cab Display Module (CDM) Voltage Display	164
	Engine Warning Lights	164
4.3.6	Driving the Windrower	165
	Entering and Exiting the Windrower	166
	Driving Forward in Cab-Forward Mode.....	167
	Driving Reverse in Cab-Forward Mode.....	168
	Driving Forward in Engine-Forward Mode.....	169
	Driving in Reverse in Engine-Forward Mode.....	171
	Spin Turning.....	172
	Stopping	172
4.3.7	Adjusting Caster Tread Width.....	173
4.3.8	Transporting.....	175
	Driving on the Road	175
	Towing Header with Windrower.....	177
	Towing the Windrower (Emergency).....	191
	Final Drives	191
4.3.9	Storing the Windrower	192
4.4	Operating with a Header	193
4.4.1	Engaging/Disengaging the Header Safety Props	193
4.4.2	Header Float.....	195
	Float Operating Guidelines	195
	Checking Float	195
	Float Options.....	198
4.4.3	Levelling the Header.....	199
4.4.4	Header Drive	202
	Engaging and Disengaging the Header	202
	Reversing the Header	203
4.4.5	Adjusting Header Angle	203
	Checking Self-Locking Center-Link Hook.....	205
4.4.6	Cutting Height	206
4.4.7	Return to Cut	207
	Programming the Return to Cut Feature	207
	Using the Return to Cut Feature	208
4.4.8	Auto Raise Height	209
	Programming the Auto Raise Height Feature.....	209
	Using the Auto Raise Height Feature	210
4.4.9	Header Drop Rate	210
4.4.10	Double Windrowing	211
	Double Windrow Attachment (DWA) Deck Position	211
	Double Windrow Attachment (DWA) Draper Speed.....	212

TABLE OF CONTENTS

4.4.11	Swath Roller Operation.....	212
4.5	Attaching and Detaching Headers.....	213
4.5.1	Attaching Header Boots.....	213
4.5.2	Attaching a D-Series Header.....	214
	Attaching a D-Series Header: Hydraulic Center-Link with Optional Self-Alignment.....	214
	Attaching a D-Series Header: Hydraulic Center-Link without Self-Alignment.....	219
	Attaching a D-Series Header: Mechanical Center-Link.....	225
4.5.3	Detaching a D-Series Header.....	229
	Detaching a D-Series Header: Hydraulic Center-Link.....	229
	Detaching a D-Series Header: Mechanical Center-Link.....	233
4.5.4	Attaching an A-Series Header.....	237
	Attaching an A-Series Header: Hydraulic Center-Link with Optional Self-Alignment.....	238
	Attaching an A-Series Header: Hydraulic Center-Link without Self-Alignment.....	243
	Attaching an A-Series Header: Mechanical Center-Link.....	249
4.5.5	Detaching an A-Series Header.....	253
	Detaching an A-Series Header: Hydraulic Center-Link.....	254
	Detaching an A-Series Header: Mechanical Center-Link.....	257
4.5.6	Attaching an R-Series Header.....	261
	Attaching an R-Series Header: Hydraulic Center-Link with Optional Self-Alignment.....	261
	Attaching an R-Series Header: Hydraulic Center-Link without Self-Alignment.....	266
	Attaching an R-Series Header: Mechanical Center-Link.....	271
4.5.7	Detaching an R-Series Header.....	276
	Detaching an R-Series Header: Hydraulic Center-Link.....	276
	Detaching an R-Series Header: Mechanical Center-Link.....	280
4.6	Operating with a D-Series Header.....	284
4.6.1	Configuring Hydraulics.....	284
4.6.2	Header Position.....	285
4.6.3	Adjusting the Reel Fore-Aft Position.....	285
4.6.4	Adjusting the Reel Height.....	286
4.6.5	Reel Speed.....	286
	Setting Reel to Ground Speed.....	286
	Setting the Reel Only Speed.....	289
4.6.6	Draper Speed.....	290
	Setting Draper to Ground Speed.....	290
	Setting Draper Minimum Speed.....	290
	Setting Draper Index.....	291
	Setting Draper Speed Independent of Ground Speed.....	292
4.6.7	Knife Speed.....	293
4.6.8	Deck Shift Control.....	294
	Deck Shift.....	294
	Setting Float Options with Deck Shift.....	295
4.7	Operating with an A-Series Header.....	297
4.7.1	Auger Speed.....	297
	Auger Speed on A30-D Headers.....	297
	Setting the Auger Speed on A40-D Headers.....	297
4.7.2	Reel Speed.....	298
	Reel Speed on A30-D Headers.....	298
	Reel Speed on A40-D Headers.....	298
4.7.3	Knife Speed.....	303
4.8	Operating with an R-Series Header.....	304
4.8.1	Disc Speed.....	304
	Setting Disc Speed.....	304
5	Maintenance and Servicing.....	307
5.1	Preparation for Servicing.....	307

TABLE OF CONTENTS

5.2	Engine Compartment Hood	308
5.2.1	Opening Hood (Lower Position).....	308
5.2.2	Closing Hood (Lower Position).....	309
5.2.3	Opening Hood (Highest Position)	309
5.2.4	Closing Hood (Highest Position).....	310
5.3	Maintenance Platforms	311
5.3.1	Opening Platforms (Standard Position).....	311
5.3.2	Closing Platforms (Standard Position).....	312
5.3.3	Opening Platforms (Major Service Position)	313
5.3.4	Closing Platforms (Major Service Position).....	315
5.4	Windrower Lubrication	316
5.4.1	Lubricating the Windrower	316
5.4.2	Lubrication Points.....	317
5.5	Operator's Station.....	318
5.5.1	Seat Belts	318
5.5.2	Safety Systems	318
	Checking Operator Presence System.....	318
	Checking Engine Interlock	319
5.5.3	Ground Speed Lever (GSL) Adjustments	319
	Adjusting Ground Speed Lever (GSL) Lateral Movement.....	319
	Adjusting Ground Speed Lever (GSL) Fore-Aft Movement.....	320
5.5.4	Steering Adjustments	321
	Checking Steering Link Pivots	321
	Checking and Adjusting Steering Chain Tension	323
5.5.5	Park Brake.....	324
5.6	Cab Suspension Limit Straps.....	325
5.7	Heating, Ventilating, and Air Conditioning (HVAC) System.....	326
5.7.1	Fresh Air Intake Filter	326
	Removing Fresh Air Filter	326
	Inspecting and Cleaning Fresh Air Filter Element	326
	Installing Fresh Air Filter.....	327
5.7.2	Return Air Cleaner/Filter	328
	Servicing the Return Air Cleaner/Filter.....	328
5.7.3	Air Conditioning Condenser	329
5.7.4	Air Conditioning (A/C) Evaporator Core	329
	Removing Air Conditioning (A/C) Cover.....	330
	Cleaning Air Conditioning (A/C) Evaporator Core.....	330
	Installing Air Conditioning (A/C) Cover.....	331
5.7.5	Air Conditioning (A/C) Compressor.....	332
	Servicing the Air Conditioning Compressor.....	332
5.8	Engine	333
5.8.1	General Engine Inspection	333
5.8.2	Turning the Engine Manually.....	333
5.8.3	Engine Oil.....	335
	Checking Engine Oil Level.....	335
	Changing Engine Oil	336
	Draining Engine Oil.....	336
	Replacing Engine Oil Filter	337
	Adding Engine Oil.....	337
5.8.4	Air Intake System	338
	Air Filter Restriction Indicator.....	339
	Removing Primary Air Filter	340
	Installing Primary Air Filter.....	342
	Cleaning Engine Air Filter Primary Element	343

TABLE OF CONTENTS

	Removing and Installing Secondary Air Filter	344
5.8.5	Fuel System.....	345
	Replacing Fuel Tank Vent Filter	345
	Maintaining Fuel Filters	346
	Removing Primary Fuel Filter	346
	Installing Primary Fuel Filter	347
	Removing Secondary Fuel Filter	348
	Installing Secondary Fuel Filter.....	348
	Draining Fuel Tank.....	349
	Fuel/Water Separator.....	351
	Removing Water from Fuel System.....	351
	System Priming	352
	Priming Fuel System.....	352
5.8.6	Engine Cooling System	353
	Inspecting Radiator Cap.....	353
	Checking Engine Coolant Strength	353
	Checking Coolant Level	354
	Changing Coolant.....	355
	Draining Coolant.....	355
	Adding Coolant.....	358
	Maintaining Engine Cooling Box	359
	Opening Cooler Box Screen	359
	Charge Air Cooling	360
	Cleaning Screens and Coolers	360
	Cleaning Cooler Box Components	361
	Adjusting Screen Cleaner Rotor to Screen Clearance	363
	Closing Cooler Box Screen.....	364
5.8.7	Gearbox	364
	Checking Lubricant Level and Adding Lubricant.....	364
	Changing Lubricant.....	365
5.8.8	Exhaust System	366
5.8.9	Belts.....	367
	Tensioning Alternator/Fan Belt	367
	Replacing Fan Belt	367
	Tensioning Air Conditioner (A/C) Compressor Belt	369
	Replacing Air Conditioner (A/C) Compressor Belt	369
5.8.10	Engine Speed	370
	Throttle Adjustment.....	370
5.9	Electrical System	371
5.9.1	Preventing Electrical System Damage	371
5.9.2	Battery.....	371
	Maintaining Batteries.....	371
	Battery Main Disconnect Switch.....	372
	Charging the Batteries	373
	Boosting the Batteries	375
	Adding Electrolyte to the Battery	375
	Removing Batteries.....	376
	Installing Batteries	378
	Connecting Batteries.....	379
5.9.3	Headlights: Engine-Forward	380
	Replacing Headlight Bulb	380
	Aligning Headlights	382
5.9.4	Field Lights: Cab-Forward	384
	Adjusting Field Lights.....	384

TABLE OF CONTENTS

	Replacing Field Light Bulb	384
5.9.5	Flood Lights: Forward.....	385
	Adjusting Forward Flood Lights.....	385
	Replacing Bulb in Cab-Forward Flood Light.....	385
5.9.6	High-Intensity Discharge (HID) Auxiliary Lighting (Optional – MD #B5596).....	386
	Adjusting High-Intensity Discharge (HID) Auxiliary Lights (if Installed).....	387
	Replacing High-Intensity Discharge (HID) Auxiliary Lights (if Installed).....	387
5.9.7	Flood Lights: Rear.....	389
	Adjusting Rear Flood Lights.....	389
	Replacing Bulb in Rear Flood Light.....	390
5.9.8	Replacing Bulbs in Red and Amber Lights	391
5.9.9	Replacing Red Taillights	392
5.9.10	Replacing the Bulbs in Beacon Lights (if installed).....	393
5.9.11	Replacing a Console Gauge Light	398
5.9.12	Replacing the Cabin Dome Light	399
5.9.13	Replacing the Ambient Light Fixture	399
5.9.14	Turn Signal Indicators.....	400
5.9.15	Circuit Breakers and Fuses.....	400
	Accessing Circuit Breakers and Fuses	400
	Checking and Replacing Fuses	400
	Replacing Circuit Breakers and Relays.....	401
	Fuse Box Decal	402
	Inspecting and Replacing 125A Main Fuses	403
5.10	Hydraulic System.....	405
5.10.1	Checking and Filling Hydraulic Oil	406
5.10.2	Hydraulic Oil Cooler	407
5.10.3	Changing the Hydraulic Oil	407
5.10.4	Changing Hydraulic Oil Filters	408
	Charge Oil Filter	408
	Removing Charge Oil Filter	409
	Installing Charge Oil Filter	409
	Return Oil Filter	409
	Removing Return Oil Filter	410
	Installing Return Oil Filter	410
5.10.5	Header and Reel Hydraulics	412
	Hoses and Lines.....	412
	Pressure Compensator Valve	412
	Flow Control Blocks	413
	Adjusting Header Drop Rate.....	413
	Adjusting Reel Drop Rate.....	414
5.10.6	Traction Drive Hydraulics.....	415
	Checking Transmission Oil Pressure.....	415
	Checking Charge Pump Pressure.....	416
5.11	Wheels and Tires.....	417
5.11.1	Drive Wheels	417
	Inflating Drive Wheel Tire	417
	Tightening Drive Wheel Nuts	418
	Lubricating Wheel Drive	418
	Checking Wheel Drive Lubricant Level	418
	Adding Wheel Drive Lubricant.....	419
	Changing Wheel Drive Lubricant.....	420
	Servicing Drive Wheel.....	420
	Raising Drive Wheel	421
	Removing Drive Wheel.....	421

TABLE OF CONTENTS

Installing Drive Wheel	422
Lowering Drive Wheel	423
5.11.2 Caster Wheels	424
Inflating Caster Tire.....	424
Tightening Caster Wheel Nuts	424
Servicing Caster Wheels	425
Raising Caster Wheel (Formed and Forked).....	426
Lowering Caster Wheel (Formed and Forked).....	426
Removing Forked Caster Wheel	427
Installing Forked Caster Wheel	428
Removing Formed Caster Wheel	428
Installing Formed Caster Wheel	429
Tightening Caster Wheel Anti-Shimmy Dampeners	429
Ballast Requirements	430
5.12 Maintenance Schedule.....	431
5.12.1 Maintenance Schedule/Record.....	431
6 Troubleshooting	437
6.1 Engine Troubleshooting	437
6.2 Electrical Troubleshooting	443
6.3 Hydraulics Troubleshooting	444
6.4 Header Drive Troubleshooting	445
6.5 Traction Drive Troubleshooting	446
6.6 Steering and Ground Speed Control Troubleshooting.....	449
6.7 Cab Air Troubleshooting.....	450
6.8 Operator's Station Troubleshooting.....	454
7 Options and Attachments	455
7.1 Cab	455
7.1.1 AM/FM Radio.....	455
7.1.2 Automated Steering Systems.....	455
7.1.3 HID Auxiliary Lighting	455
7.1.4 Lighting and Marking for Cab-Forward Road Travel	455
7.1.5 Pressure Sensor Kit	456
7.1.6 Warning Beacons.....	456
7.1.7 Windshield Shades.....	456
7.2 Engine	457
7.2.1 Engine Block Heater.....	457
7.2.2 Engine Fan Air Baffle.....	457
7.3 Header Operation	458
7.3.1 Spring with External Booster Spring Kit.....	458
7.3.2 Spring with Internal Booster Spring kit	458
7.3.3 Draper Header Case Drain Kit.....	458
7.3.4 Draper Header Reel Drive and Lift Plumbing.....	458
7.3.5 Double Windrow Attachment (DWA).....	458
7.3.6 Header Drive Reverser	459
7.3.7 Hydraulic Center-Link	459
7.3.8 Light Header Flotation	459
7.3.9 Mechanical Center-Link	459
7.3.10 Rotary Header Drive Hydraulics (13-Foot).....	459
7.3.11 Self-Aligning Center-Link	460
7.3.12 Swath Roller	460
7.4 Transport	461
7.4.1 Towing Harness	461
7.4.2 Weight Box	461

TABLE OF CONTENTS

8	Reference	463
8.1	Recommended Torques	463
8.1.1	Torque Specifications	463
	SAE Bolt Torque Specifications.....	463
	Metric Bolt Specifications	465
	Metric Bolt Specifications Bolting into Cast Aluminum	468
	Flare-Type Hydraulic Fittings	468
	O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)	470
	O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable).....	472
	O-Ring Face Seal (ORFS) Hydraulic Fittings	473
	Tapered Pipe Thread Fittings.....	475
8.2	Recommended Fuel, Fluids, and Lubricants	476
8.2.1	Storing Lubricants and Fluids	476
8.2.2	Fuel Specifications	476
8.2.3	Lubricants, Fluids, and System Capacities	477
8.2.4	Filter Part Numbers	478
8.3	Conversion Chart.....	479
8.4	Engine Error Codes	480
8.5	Cab Display Module (CDM) Error Codes	493
	Index	497

1 Safety

1.1 Safety Alert Symbols

This safety alert symbol indicates important safety messages in this manual and on safety signs on the machine.

This symbol means:

- **ATTENTION!**
- **BECOME ALERT!**
- **YOUR SAFETY IS INVOLVED!**

Carefully read and follow the safety message accompanying this symbol.

Why is safety important to you?

- Accidents disable and kill
- Accidents cost
- Accidents can be avoided



Figure 1.1: Safety Symbol

1.2 Signal Words

Three signal words, **DANGER**, **WARNING**, and **CAUTION**, are used to alert you to hazardous situations. The appropriate signal word for each situation has been selected using the following guidelines:

DANGER

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.

WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. It may also be used to alert against unsafe practices.

CAUTION

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may be used to alert against unsafe practices.

1.3 General Safety

CAUTION

The following are general farm safety precautions that should be part of your operating procedure for all types of machinery.

Protect yourself.

- When assembling, operating, and servicing machinery, wear all the protective clothing and personal safety devices that could be necessary for the job at hand. Do **NOT** take chances. You may need the following:
 - Hard hat
 - Protective footwear with slip resistant soles
 - Protective glasses or goggles
 - Heavy gloves
 - Wet weather gear
 - Respirator or filter mask
- Be aware that exposure to loud noises can cause hearing impairment or loss. Wear suitable hearing protection devices such as ear muffs or ear plugs to help protect against objectionable or loud noises.

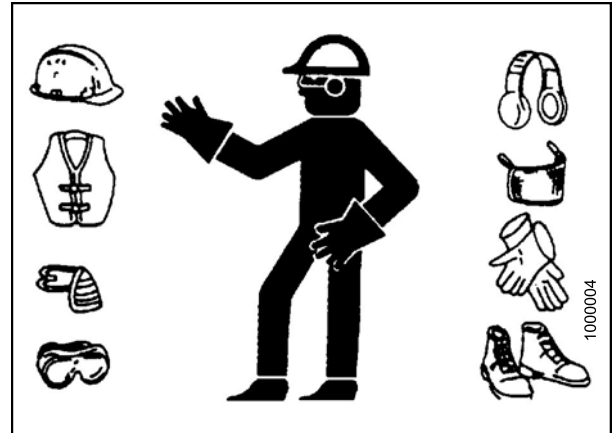


Figure 1.2: Safety Equipment



Figure 1.3: Safety Equipment

- Provide a first aid kit for use in case of emergencies.
- Keep a fire extinguisher on the machine. Be sure the fire extinguisher is properly maintained. Be familiar with its proper use.
- Keep young children away from the machinery at all times.
- Be aware that accidents often happen when the Operator is tired or in a hurry. Take the time to consider the safest way. Never ignore the warning signs of fatigue.

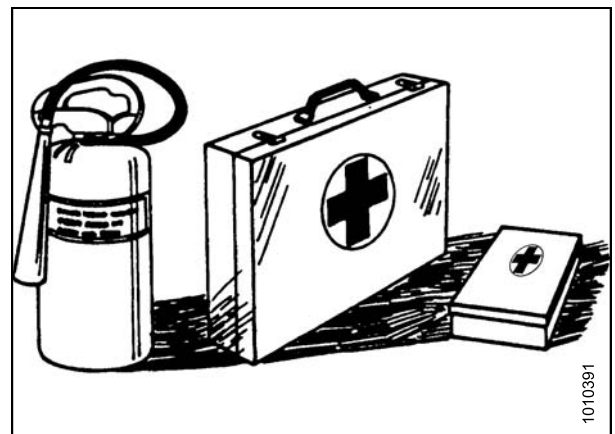


Figure 1.4: Safety Equipment

SAFETY

- Wear close-fitting clothing and cover long hair. Never wear dangling items such as scarves or bracelets.
- Keep all shields in place. **NEVER** alter or remove safety equipment. Make sure driveline guards can rotate independently of the shaft and can telescope freely.
- Use only service and repair parts made or approved by the equipment manufacturer. Substituted parts may not meet strength, design, or safety requirements.



Figure 1.5: Safety around Equipment

- Keep hands, feet, clothing, and hair away from moving parts. **NEVER** attempt to clear obstructions or objects from a machine while the engine is running.
- Do **NOT** modify the machine. Non-authorized modifications may impair machine function and/or safety. It may also shorten the machine's life.
- To avoid bodily injury or death from unexpected startup of machine, **ALWAYS** stop the engine and remove the key from ignition before leaving operator's seat for any reason.

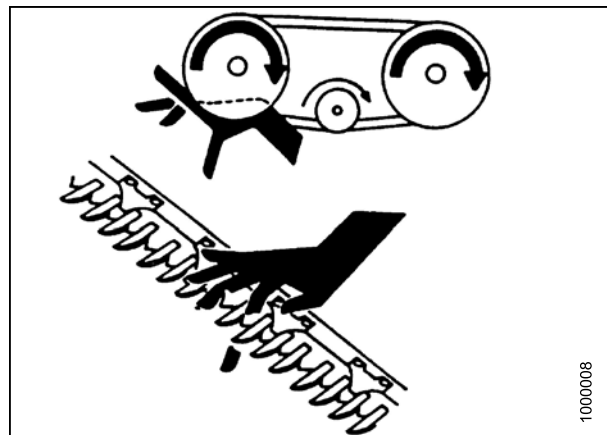


Figure 1.6: Safety around Equipment

- Keep the service area clean and dry. Wet or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment. Be sure all electrical outlets and tools are properly grounded.
- Keep work area well lit.
- Keep machinery clean. Straw and chaff on a hot engine is a fire hazard. Do **NOT** allow oil or grease to accumulate on service platforms, ladders, or controls. Clean machines before storage.
- **NEVER** use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.
- When storing machinery, cover sharp or extending components to prevent injury from accidental contact.



Figure 1.7: Safety around Equipment

1.4 Maintenance Safety

To ensure your safety while maintaining the machine:

- Review the operator's manual and all safety items before operation and/or maintenance of the machine.
- Place all controls in Neutral, stop the engine, set the park brake, remove the ignition key, and wait for all moving parts to stop before servicing, adjusting, and/or repairing.
- Follow good shop practices:
 - Keep service areas clean and dry
 - Be sure electrical outlets and tools are properly grounded
 - Use adequate lighting for the job at hand
- Relieve pressure from hydraulic circuits before servicing and/or disconnecting the machine.
- Make sure all components are tight and that steel lines, hoses, and couplings are in good condition before applying pressure to hydraulic systems.
- Keep hands, feet, clothing, and hair away from all moving and/or rotating parts.
- Clear the area of bystanders, especially children, when carrying out any maintenance, repairs or, adjustments.
- Install transport lock or place safety stands under the frame before working under the machine.
- If more than one person is servicing the machine at the same time, be aware that rotating a driveline or other mechanically-driven component by hand (for example, accessing a lube fitting) will cause drive components in other areas (belts, pulleys, and knives) to move. Stay clear of driven components at all times.
- Wear protective gear when working on the machine.
- Wear heavy gloves when working on knife components.



Figure 1.8: Safety around Equipment

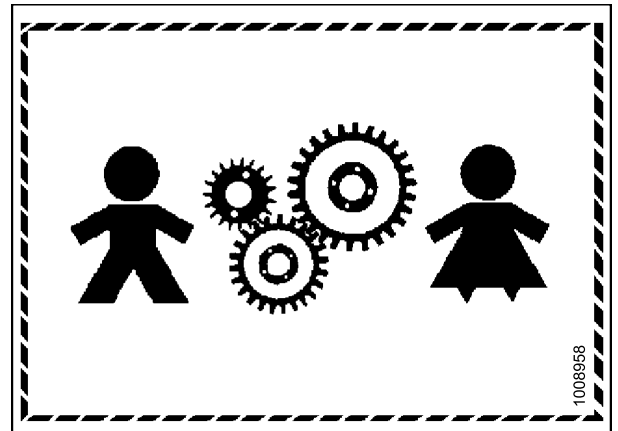


Figure 1.9: Equipment NOT Safe for Children

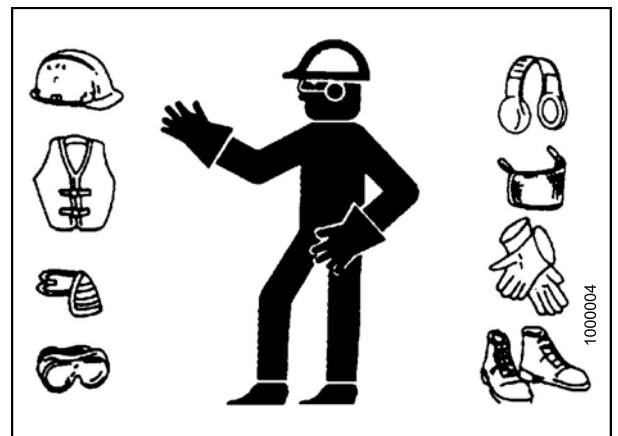


Figure 1.10: Safety Equipment

1.5 Hydraulic Safety

- Always place all hydraulic controls in Neutral before dismounting.
- Make sure that all components in the hydraulic system are kept clean and in good condition.
- Replace any worn, cut, abraded, flattened, or crimped hoses and steel lines.
- Do **NOT** attempt any makeshift repairs to the hydraulic lines, fittings, or hoses by using tapes, clamps, cements, or welding. The hydraulic system operates under extremely high pressure. Makeshift repairs will fail suddenly and create hazardous and unsafe conditions.

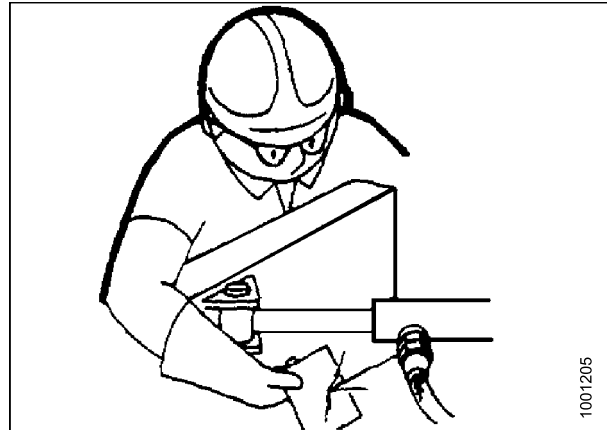


Figure 1.11: Testing for Hydraulic Leaks

- Wear proper hand and eye protection when searching for high-pressure hydraulic leaks. Use a piece of cardboard as a backstop instead of hands to isolate and identify a leak.
- If injured by a concentrated high-pressure stream of hydraulic fluid, seek medical attention immediately. Serious infection or toxic reaction can develop from hydraulic fluid piercing the skin.



Figure 1.12: Hydraulic Pressure Hazard

- Make sure all components are tight and steel lines, hoses, and couplings are in good condition before applying pressure to a hydraulic system.

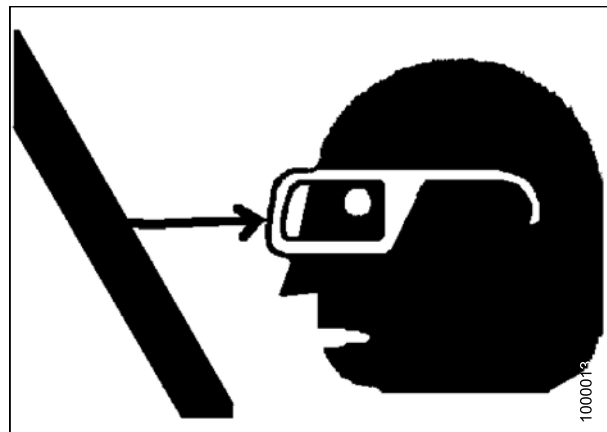


Figure 1.13: Safety around Equipment

1.6 Tire Safety

WARNING

- Service tires safely.
- A tire can explode during inflation which could cause serious injury or death.
- Follow proper procedures when mounting a tire on a wheel or rim. Failure to do so can produce an explosion that may result in serious injury or death.

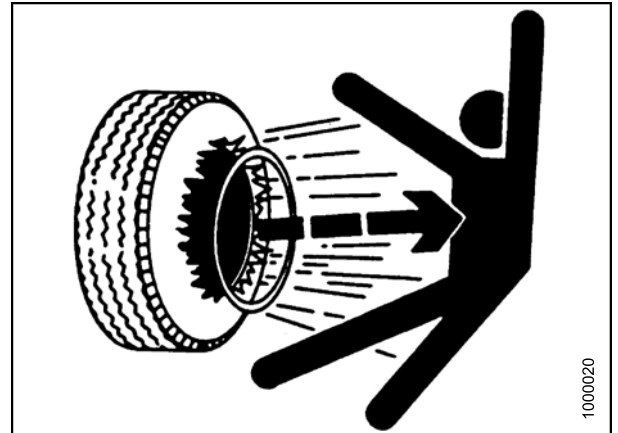


Figure 1.14: Overinflated Tire

WARNING

- Do NOT stand over tire. Use a clip-on chuck and extension hose.
- Never exceed air pressure of 241 kPa (35 psi) for field tires and 276 kPa (40 psi) for transport tires when seating the bead on the rim.
- Do NOT exceed maximum inflation pressure indicated on tire label.
- Replace tires that have defects.
- Replace wheel rims that are cracked, worn, or severely rusted.
- Never weld a wheel rim.
- Never use force on an inflated or partially inflated tire.
- Make sure the tire is correctly seated before inflating to operating pressure.
- If the tire is not correctly positioned on the rim or is overinflated, the tire bead can loosen on one side causing air to escape at high speed and with great force. An air leak of this nature can thrust the tire in any direction endangering anyone in the area.
- Make sure all the air is removed from the tire before removing the tire from the rim.
- Do NOT remove, install, or repair a tire on a rim unless you have the proper equipment and experience to perform the job.
- Take the tire and rim to a qualified tire repair shop.

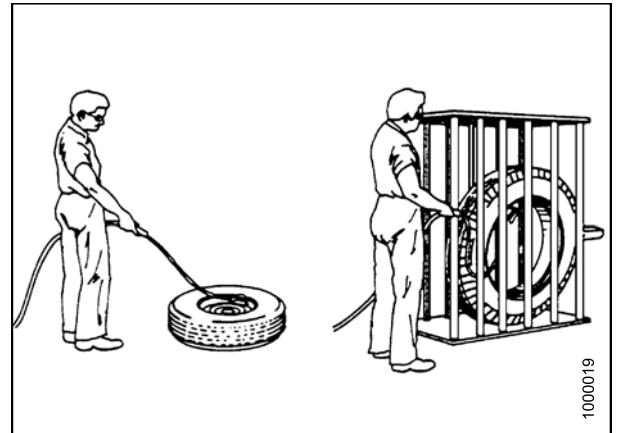


Figure 1.15: Safely Filling a Tire with Air

1.7 Battery Safety

WARNING

- Keep all sparks and flames away from the batteries, as a gas given off by electrolyte is explosive.
- Ventilate when charging in enclosed space.

WARNING

- Wear safety glasses when working near batteries.
- Do NOT tip batteries more than 45° to avoid electrolyte loss.
- Battery electrolyte causes severe burns. Avoid contact with skin, eyes, or clothing.
- Electrolyte splashed into the eyes is extremely dangerous. Should this occur, force the eye open, and flood with cool, clean water for five minutes. Call a doctor immediately.
- If electrolyte is spilled or splashed on clothing or the body, neutralize it immediately with a solution of baking soda and water, then rinse with clear water.

WARNING

- To avoid injury from spark or short circuit, disconnect battery ground cable before servicing and part of electrical system.
- Do NOT operate the engine with alternator or battery disconnected. With battery cables disconnected and engine running, a high voltage can be built up if terminals touch the frame. Anyone touching the frame under these conditions would be severely shocked.
- When working around storage batteries, remember that all of the exposed metal parts are live. Never lay a metal object across the terminals because a spark or short circuit will result.
- Keep batteries out of reach of children.



Figure 1.16: Safety around Batteries

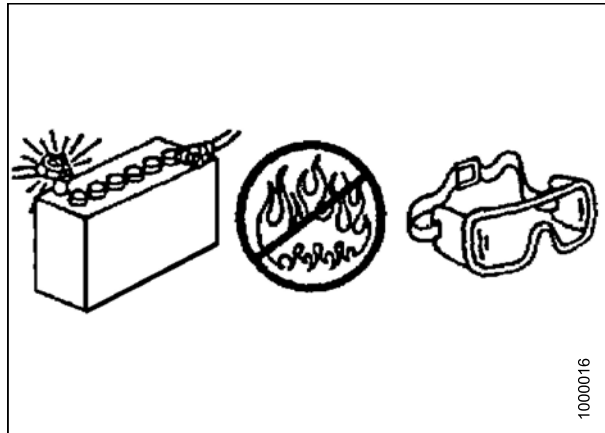


Figure 1.17: Safety around Batteries

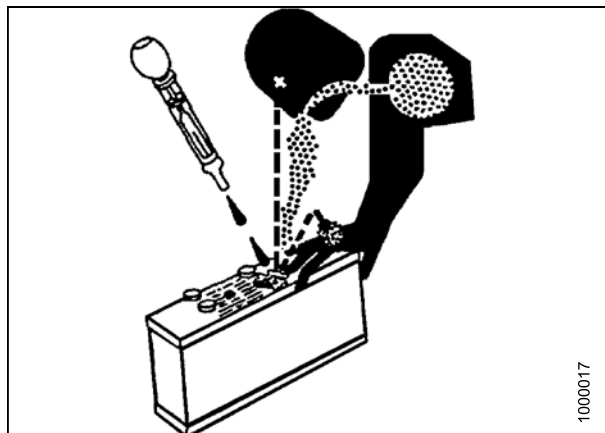


Figure 1.18: Safety around Batteries

1.8 Welding Precaution

High currents and voltage spikes associated with welding can cause damage to electronic components. Before welding on any part of the windrower or an attached header, disconnect all electronic module harness connections as well as the battery cables. Refer to your Dealer for proper procedures.

1.9 Engine Safety

WARNING

Do NOT use aerosol types of starting aids such as ether. Such use could result in an explosion and personal injury.

CAUTION

- In the initial start-up of a new, serviced, or repaired engine, always be ready to stop the engine in order to stop an over-speed. This may be accomplished by shutting off the air and/or fuel supply to the engine. Over-speed shut down should occur automatically for engines that are controlled electronically.
- Do NOT bypass or disable the automatic shutoff circuits. The circuits are provided in order to help prevent personal injury. The circuits are also provided in order to help prevent engine damage. Refer to your Dealer for repairs and adjustments.
- Inspect the engine for potential hazards.
- Before starting the engine, ensure that no one is on, underneath, or close to the engine. Ensure that people clear the area.
- All protective guards and all protective covers must be installed if the engine must be started in order to perform service procedures.
- To help prevent an accident that is caused by parts in rotation, work around the parts carefully.
- If a warning tag is attached to the engine start switch or to the controls, do NOT start the engine or move the controls. Consult with the person who attached the warning tag before the engine is started.
- Start the engine from the operator's compartment. Always start the engine according to the procedure that is described in the Starting the Engine section of the operator's manual. Knowing the correct procedure will help to prevent major damage to the engine components and prevent personal injury.
- To ensure that the jacket water heater (if equipped) and/or the lube oil heater (if equipped) is working correctly, check the water temperature gauge and/or the oil temperature gauge during the heater operation. Engine exhaust contains products of combustion which can be harmful to your health. Always start the engine and operate the engine in a well ventilated area. If the engine is started in an enclosed area, vent the engine exhaust to the outside.

NOTE:

The engine may be equipped with a device for cold starting. If the engine will be operated in very cold conditions, then an additional cold starting aid may be required. Normally, the engine will be equipped with the correct type of starting aid for your region of operation.

1.9.1 High Pressure Rails

CAUTION

Contact with high pressure fuel may cause fluid penetration and burn hazards. High pressure fuel spray may cause a fire hazard. Failure to follow these instructions may cause personal injury or death.

1.9.2 Engine Electronics

WARNING

Tampering with the electronic system installation or the original equipment manufacturer (OEM) wiring installation can be dangerous and could result in personal injury or death and/or engine damage.

WARNING

Electrical Shock Hazard. The electronic unit injectors use DC voltage. The engine control module (ECM) sends this voltage to the electronic unit injectors. Do NOT come in contact with the harness connector for the electronic unit injectors while the engine is operating. Failure to follow this instruction could result in personal injury or death.

This engine has a comprehensive, programmable engine monitoring system. The ECM has the ability to monitor the engine operating conditions. If conditions exceed the allowable range, the ECM will initiate an immediate action.

The following actions are available for engine monitoring control:

- Warning
- Derate
- Shut Down

The following monitored engine operating conditions have the ability to limit engine speed and/or the engine power:

- Engine coolant temperature
- Engine oil pressure
- Engine speed
- Intake manifold air temperature

The engine monitoring package can vary for different engine models and different engine applications. However, the monitoring system and the engine monitoring control will be similar for all engines. Together, the two controls provide the engine monitoring function for the specific engine application.

1.10 Safety Signs

- Keep safety signs clean and legible at all times.
- Replace safety signs that are missing or become illegible.
- If original parts on which a safety sign was installed are replaced, be sure the repair part also bears the current safety sign.
- Safety signs are available from your Dealer Parts Department.

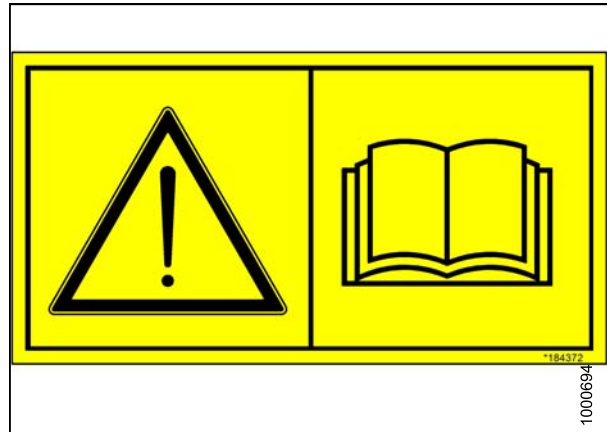


Figure 1.19: Operator's Manual Decal

1.10.1 Installing Safety Decals

1. Clean and dry installation area.
2. Decide on exact location before you remove decal backing paper.
3. Remove smaller portion of split backing paper.
4. Place sign in position and slowly peel back remaining paper, smoothing sign as it is applied.
5. Prick small air pockets with a pin and smooth out.

1.11 Safety Sign Locations

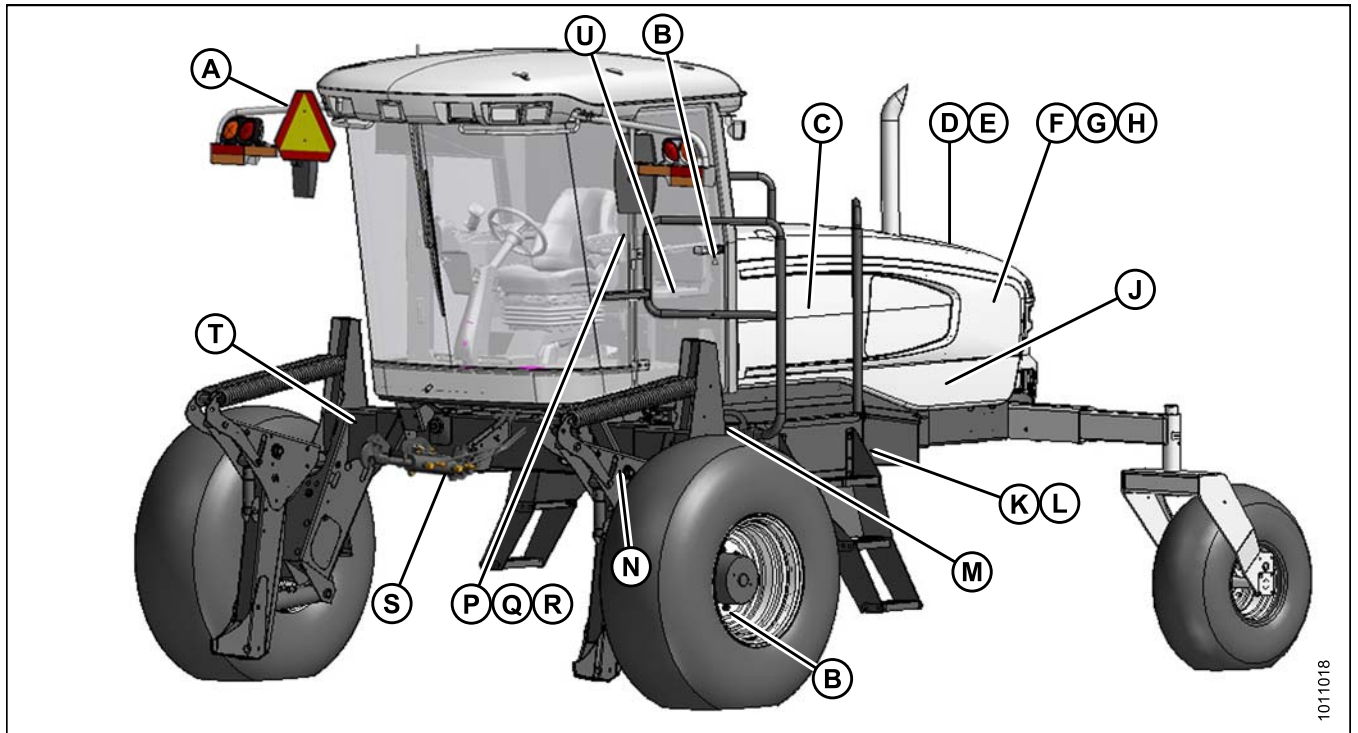


Figure 1.20: Safety Sign Locations (Left Cab-Forward Side)

A - Hazard Sign (MD #135378)

D - Exhaust Cover (MD #166450)

G - Fan Shroud (Middle) (MD #166451)

K - Platform (Left of Step) (MD #166425)

N - Lift Linkage (MD #166438)

R - Inner Post (MD #166463)

U - Trainers Seat (MD #167502)

B - Cab Door and Rim (MD #166454)

E - Close to Radiator Cap (MD #166461)

H - Fan Shroud (Bottom) (MD #166452)

L - Platform (Right of Step) (MD #166441)

P - Inner Post (MD #166457)

S - Neutral Interlock (MD #166425)

C - Oil Reservoir under Hood (MD #166466)

F - Fan Shroud (Top) (MD #166450)


J - Frame Opening (MD #166233)

M - Frame at Multifunction Block (MD #166466)

Q - Inner Post (MD #166234)

T - Frame (MD #166425)


SAFETY

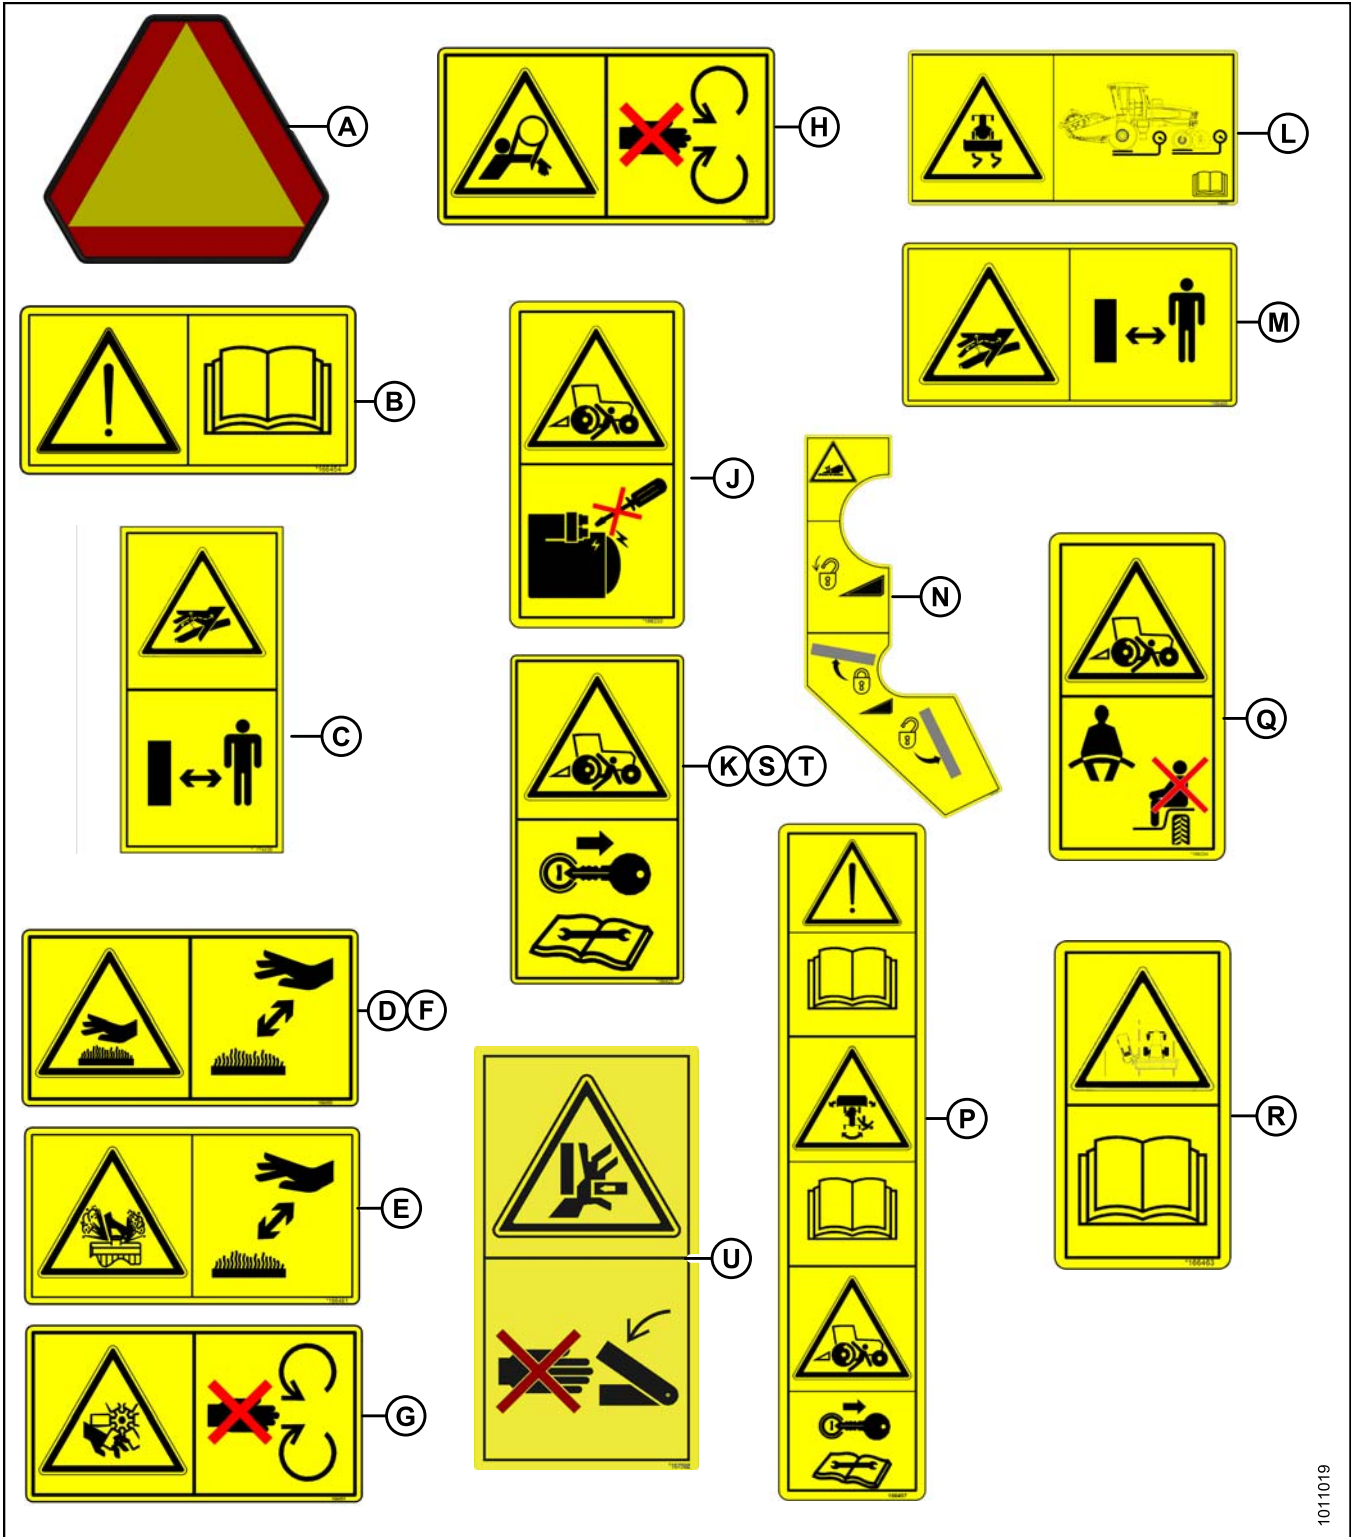

1011019

Figure 1.21: Safety Signs (Left Cab-Forward Side)

SAFETY

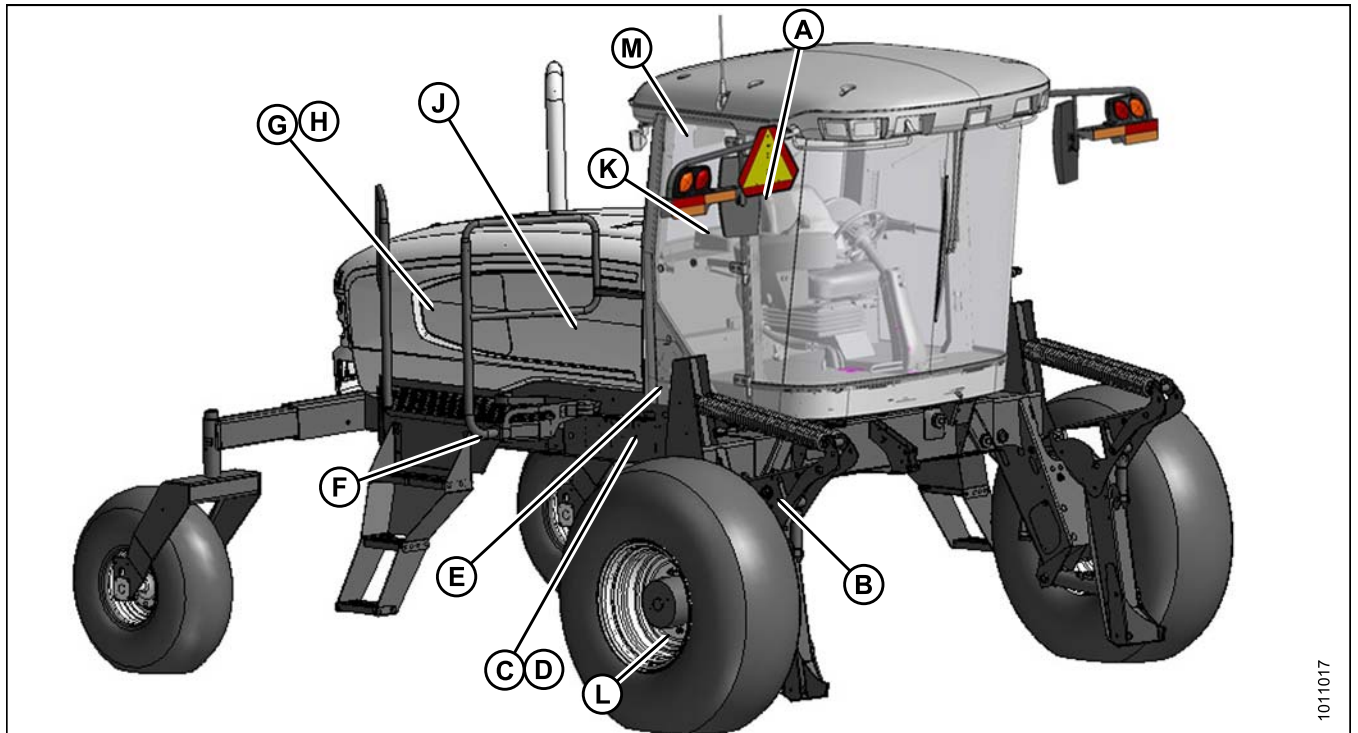

1011017


Figure 1.22: Safety Sign Locations (Right Cab-Forward Side)

A - Hazard Sign on Seat (MD #115148)
D - Frame (MD #166456)
G - Shroud (MD #166451)
K - Wiper Cover (MD #166465)

B - Lift Linkage (MD #166439)
E - Cab Frame (MD #184372)
L - Rim (MD #166454)

C - Frame (MD #166455)
F - Platform (MD #166425)
J - Hydraulic Reservoir (MD #174436)
M - Window (MD #167504)

SAFETY

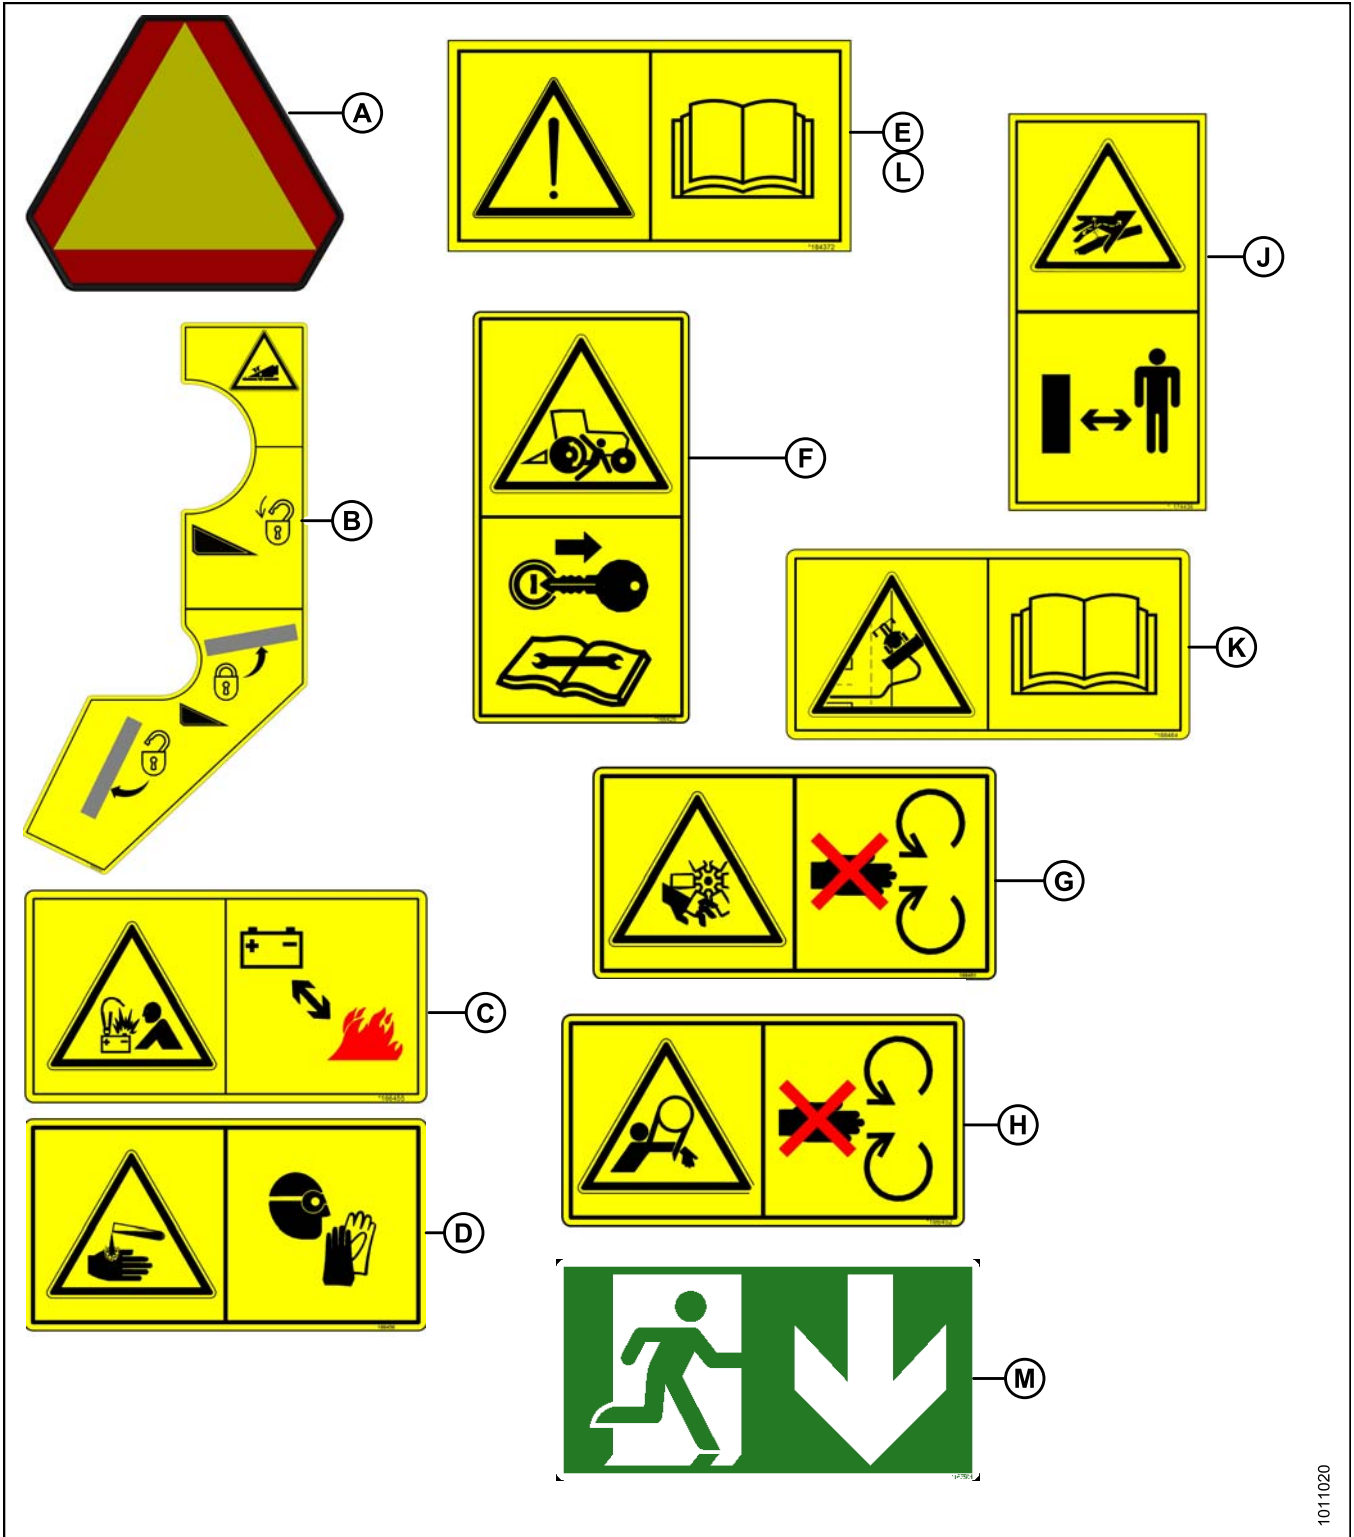

1011020

Figure 1.23: Safety Signs (Right Cab-Forward Side)

1.12 Understanding Safety Signs

MD #166233

Run-over hazard

DANGER

- Do not start engine by shorting across starter or starter relay terminals. Machine will start with drive engaged and move if starting circuitry is bypassed.
- Start engine only from operator's seat. Do not try to start engine with someone under or near machine.



Figure 1.24: MD #166233

MD #166234

Run-over hazard

WARNING

- The training seat is provided for an experienced Operator of the machine when a new Operator is being trained.
- The training seat is not intended as a passenger seat or for use by children.
- Use the seat belt whenever operating the machine or riding as a trainer.
- Keep all other riders off the machine.



Figure 1.25: MD #166234

MD #166425

Run-over hazard

WARNING

- Remove key from ignition.
- Read the windrower and header manuals for inspection and maintenance instructions.

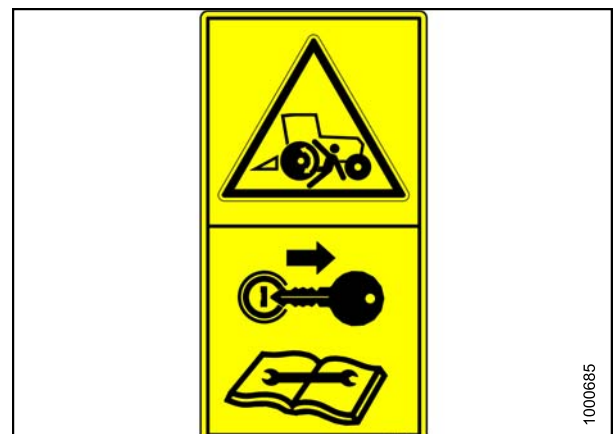


Figure 1.26: MD #166425

SAFETY

MD #166438

Crushing hazard

DANGER

- Rest header on ground or engage safety props before going under unit.

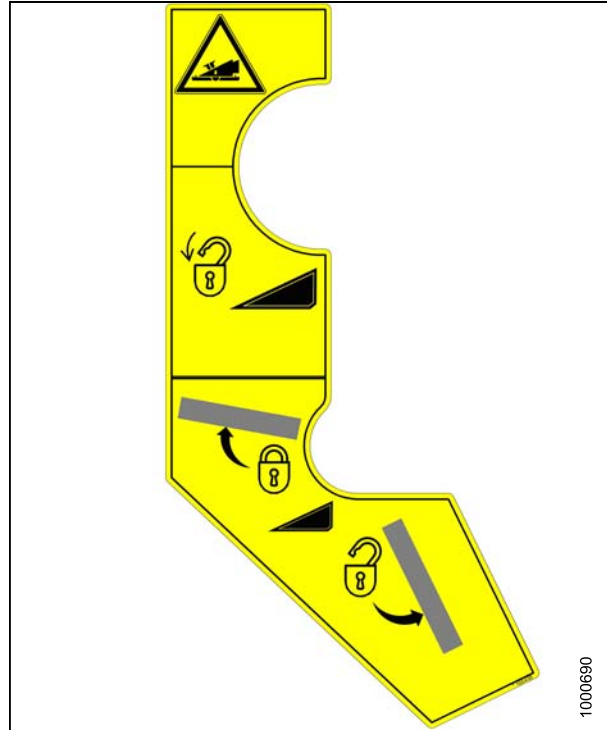


Figure 1.27: MD #166438

MD #166439

Crushing hazard

DANGER

- Rest header on ground or engage safety props before going under unit.

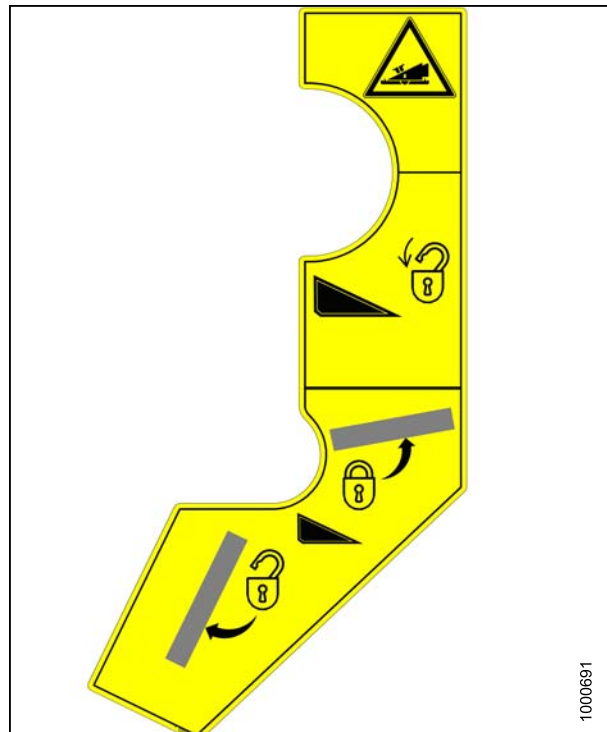


Figure 1.28: MD #166439

SAFETY

MD #166441

Loss of control hazard

CAUTION

- To prevent machine damage and/or loss of control, it is essential that the machine be equipped such that weights are within the specified limits.

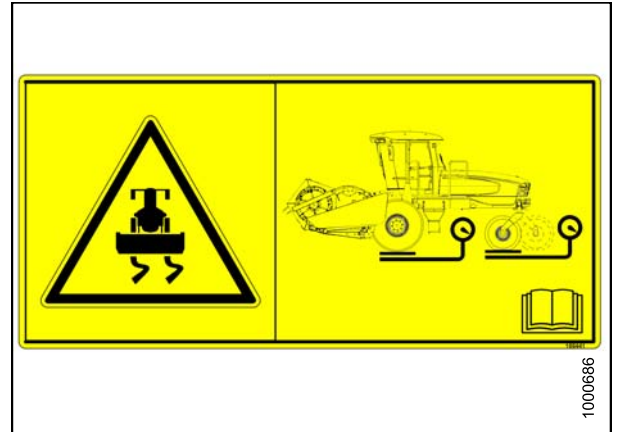


Figure 1.29: MD #166441

MD #166450

Hot surface hazard

WARNING

- To avoid injury, keep a safe distance from hot surface.

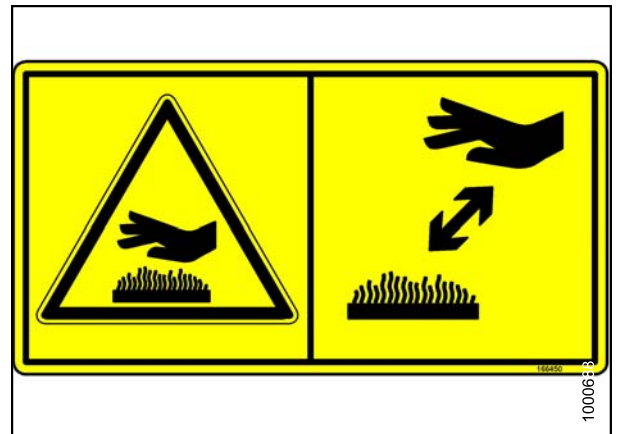


Figure 1.30: MD #166450

MD #166451

Rotating fan hazard

WARNING

- To avoid injury, stop the engine and remove the key before opening engine hood.

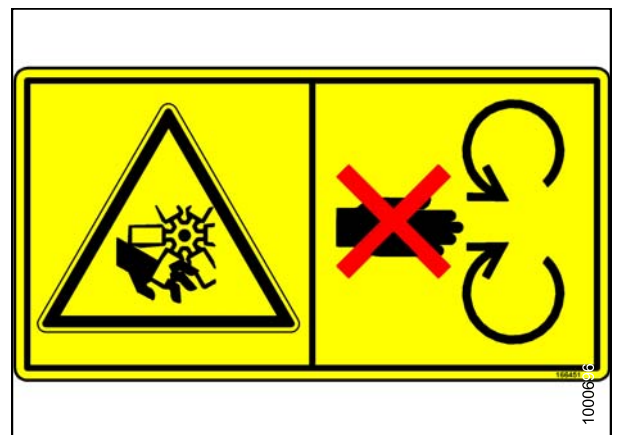


Figure 1.31: MD #166451

SAFETY

MD #166454

General hazard pertaining to machine operation and servicing.

CAUTION

- Read the operator's manual and follow all safety instructions. If you do not have a manual, obtain one from your Dealer.
- Do not allow untrained persons to operate the machine.
- Review safety instructions with all Operators every year.
- Ensure that all safety signs are installed and legible.
- Make certain everyone is clear of machine before starting engine and during operation.
- Keep riders off the machine.
- Keep all shields in place and stay clear of moving parts.
- Disengage header drive, put transmission in Neutral, and wait for all movement to stop before leaving operator's position.
- Stop the engine and remove the key from ignition before servicing, adjusting, lubricating, cleaning, or unplugging machine.
- Engage locks to prevent lowering of header or reel before servicing in the raised position.
- Use slow moving vehicle emblem and flashing warning lights when operating on roadways unless prohibited by law.

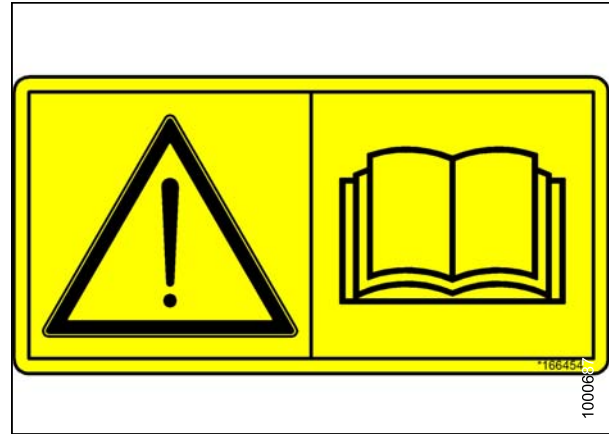


Figure 1.32: MD #166454

MD #166455

Explosion hazard

WARNING

- Prevent serious bodily injury caused by explosive battery gases.
- Keep sparks and flames away from the battery.
- Refer to operator's manual for battery boosting and charging procedures.



Figure 1.33: MD #166455

SAFETY

MD #166456

Battery acid hazard

WARNING

- Corrosive and poisonous battery acid. Acid can severely burn your body and clothing.



Figure 1.34: MD #166456

SAFETY

MD #166457

General hazard pertaining to machine operation and servicing

CAUTION

To avoid injury or death from improper or unsafe machine operation:

- Read the operator's manual and follow all safety instructions. If you do not have a manual, obtain one from your Dealer.
- Do not allow untrained persons to operate the machine.
- Review safety instructions with all Operators every year.
- Ensure that all safety signs are installed and legible.
- Make certain everyone is clear of machine before starting engine and during operation.
- Keep riders off the machine.
- Keep all shields in place and stay clear of moving parts.
- Disengage header drive, put transmission in Neutral and wait for all movement to stop before leaving operator's position.
- Stop the engine and remove the key from ignition before servicing, adjusting, lubricating, cleaning, or unplugging machine.
- Engage locks to prevent lowering of header or reel before servicing in the raised position.
- Use slow moving vehicle emblem and flashing warning lights when operating on roadways unless prohibited by law.

Run-over hazard

WARNING

- Machine will move if steering wheel is turned while engine is running.
- Steering response is opposite to what is normally expected when backing up. Turn bottom of steering wheel in direction you want to go.
- Always move ground speed lever to slow end of range before shifting high-low speed control.
- Stop the engine and remove the key from ignition before servicing, adjusting, lubricating, cleaning, or unplugging the machine.

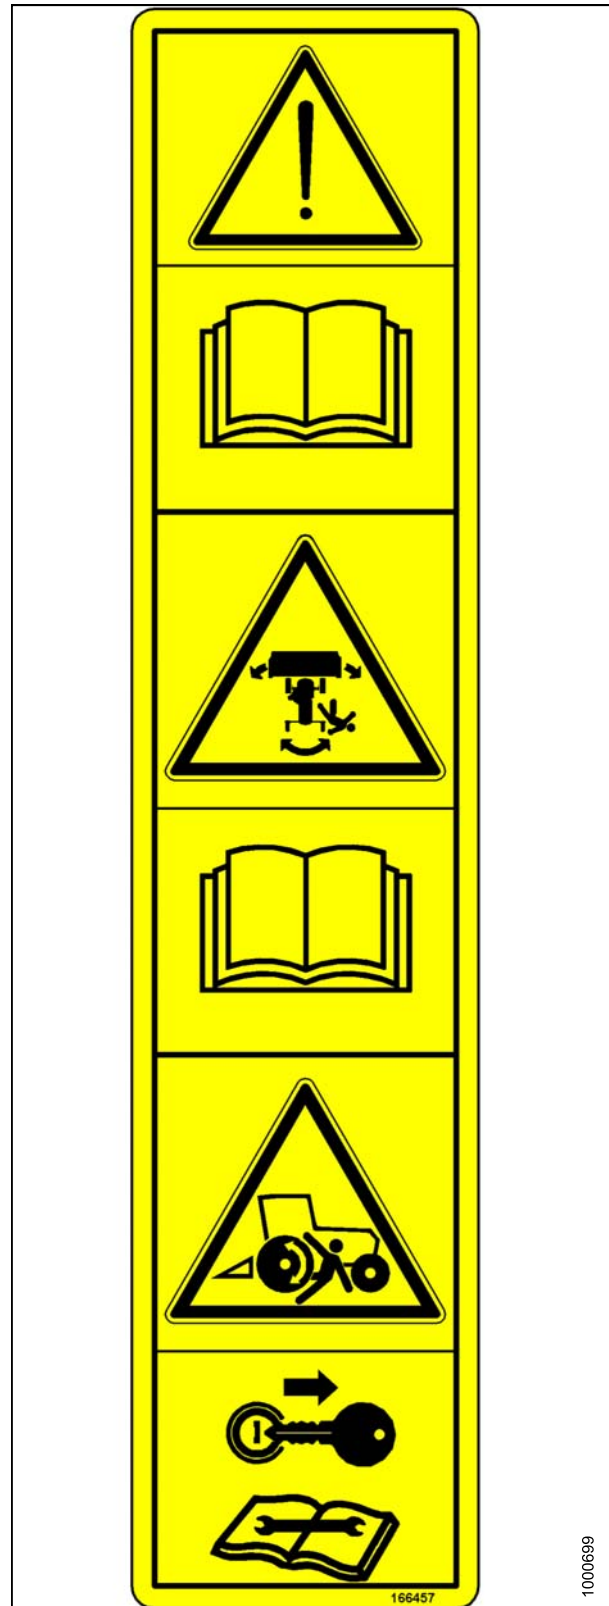


Figure 1.35: MD #166457

SAFETY

MD #166461

Hot fluid under pressure hazard

CAUTION

- Coolant is under pressure and may be hot. Never remove radiator cap when engine is hot.



Figure 1.36: MD #166461

MD #166463

Collision hazard in transport

WARNING

- Collision between windrower and other vehicles may result in injury or death.

When driving windrower on public roadways:

- Obey all highway traffic regulations in your area. Use pilot vehicles front and rear of windrower if required by law.
- Use slow moving vehicle emblem and flashing warning lights unless prohibited by law.
- If width of attached header impedes other vehicle traffic, remove header and install MacDon approved weight box. Refer to operator's manual for safe procedure to tow header.



Figure 1.37: MD #166463

SAFETY

MD #166465

Loss of control hazard

WARNING

To avoid serious injury or death from loss of control:

- Do not make abrupt changes in steering direction.
- Anticipate turns by slowing down well in advance.
- Do not rapidly accelerate or decelerate while turning.
- Limit speed to maximum 32 km/h (20 mph) when towing a header. To ensure steering control, refer to operator's manual for adding weight to drive wheels.

When travelling on steep slopes:

- Reduce speed and lower header.
- Move ground speed lever to slow end of range.
- Shift high-low speed control to low range.

With header removed, steering control is reduced if weight is not added to drive wheels. If you must drive the windrower without header or MacDon weight system:

- Operate in low speed range.
- Avoid slopes.
- Do not tow a header. **If control of machine is lost, immediately pull ground speed lever to neutral.**

MD #166466

High pressure oil hazard

WARNING

- Do not go near leaks.
- High pressure oil easily punctures skin causing serious injury, gangrene, or death.
- If injured, seek emergency medical help. Immediate surgery is required to remove oil.
- Do not use finger or skin to check for leaks.
- Lower load or relieve hydraulic pressure before loosening fittings.

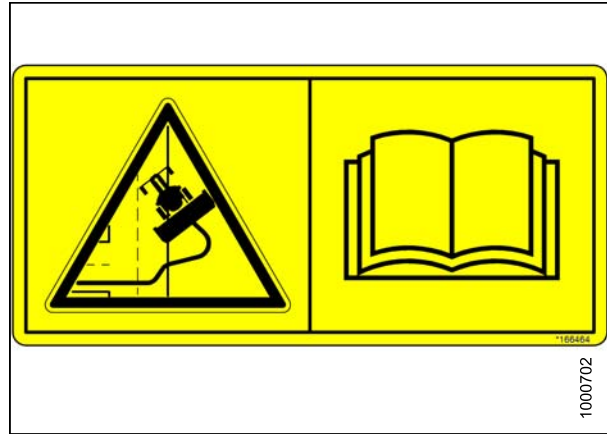


Figure 1.38: MD #166465



Figure 1.39: MD #166466

SAFETY

MD #166843

Steering control

WARNING

To avoid serious injury or death from loss of control:

- Do not make abrupt changes in steering direction.
- Anticipate turns by slowing down well in advance.
- Do not rapidly accelerate or decelerate while turning.
- Limit speed to maximum 32 km/h (20 mph) when towing a header. To ensure steering control, refer to operator's manual for adding weight to drive wheels.

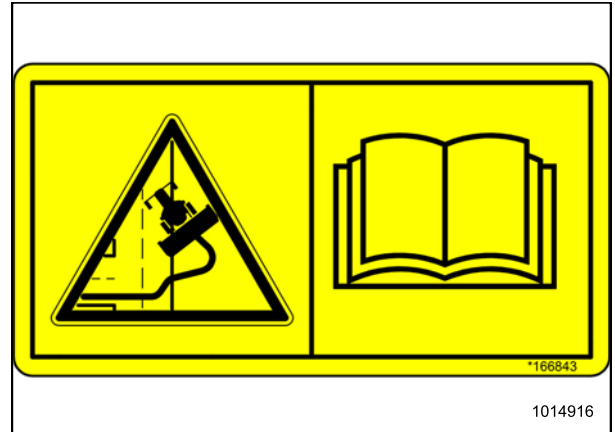


Figure 1.40: MD #166843

MD #167502

Pinch point hazard

WARNING

- To avoid injury, be cautious when opening/closing the training seat to avoid getting pinched.
- Failure to comply could result in death or serious injury.



Figure 1.41: MD #167502

MD #167504

Emergency exit

ATTENTION

- To exit the machine via the secondary door, follow the arrow on the running man sign.

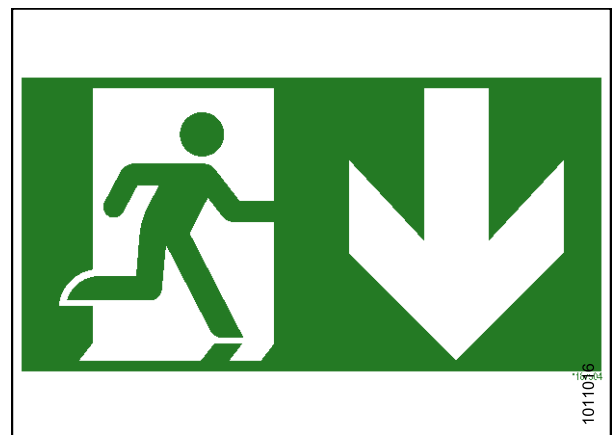


Figure 1.42: MD #167504

SAFETY

MD #174436

High pressure oil hazard

WARNING

- Do not go near leaks.
- High pressure oil easily punctures skin causing serious injury, gangrene, or death.
- If injured, seek emergency medical help. Immediate surgery is required to remove oil.
- Do not use finger or skin to check for leaks.
- Lower load or relieve hydraulic pressure before loosening fittings.



Figure 1.43: MD #174436

MD #190546

Slippery surface

WARNING

- Do not use this area as a step or platform.
- Failure to comply could result in serious injury or death.



Figure 1.44: MD #190546

2 Product Overview

2.1 Definitions

The following terms and acronyms may be used in this manual.

Term	Definition
A-Series header	MacDon A30-D and A40-D auger headers
API	American Petroleum Institute
ASTM	American Society of Testing and Materials
Bolt	A headed and externally threaded fastener that is designed to be paired with a nut
Cab-forward	Windrower operation with Operator and cab facing in direction of travel
CDM	Cab display module on a self-propelled windrower
Center-link	A hydraulic cylinder or manually adjustable turnbuckle type link between header and machine to which it is attached: It is used to change header angle
CGVW	Combined vehicle gross weight
D-Series header	MacDon D50, D60, and D65 rigid draper headers
DK	Double knife
DKD	Double-knife drive
DDD	Double-draper drive
DWA	Double Windrow Attachment
ECM	Engine control module
Engine-forward	Windrower operation with Operator and engine facing in direction of travel
Finger tight	Finger tight is a reference position where sealing surfaces or components are making contact with each other and fitting has been tightened to a point where fitting is no longer loose
FFFT	Flats from finger tight
GSL	Ground speed lever
GSS	Grass Seed Special
GVW	Gross vehicle weight
Hard joint	A joint made with the use of a fastener where joining materials are highly incompressible
Header	A machine that cuts and lays crop into a windrow and is attached to a self-propelled windrower
Hex key	A hex key or Allen key (also known by various other synonyms) is a tool of hexagonal cross-section used to drive bolts and screws that have a hexagonal socket in head (internal-wrenching hexagon drive)
HDS	Hydraulic deck shift
hp	Horsepower
ISC	Intermediate Speed Control

PRODUCT OVERVIEW

Term	Definition
JIC	Joint Industrial Council: A standards body that developed standard sizing and shape for original 37° flared fitting
Knife	A cutting device which uses a reciprocating cutter (also called a sickle)
MDS	Mechanical deck shift
n/a	Not applicable
Nut	An internally threaded fastener that is designed to be paired with a bolt
N-DETENT	The slot opposite the NEUTRAL position on operator's console
NPT	National Pipe Thread: A style of fitting used for low pressure port openings Threads on NPT fittings are uniquely tapered for an interference fit
ORB	O-ring boss: A style of fitting commonly used in port opening on manifolds, pumps, and motors
ORFS	O-ring face seal: A style of fitting commonly used for connecting hoses and tubes This style of fitting is also commonly called ORS, which stands for O-ring seal
rpm	Revolutions per minute
R-Series header	MacDon R80 and R85 rotary disc headers
RoHS (Reduction of Hazardous Substances)	A directive by the European Union to restrict use of certain hazardous substances (such as hexavalent chromium used in some yellow zinc platings)
SAE	Society of Automotive Engineers
Screw	A headed and externally threaded fastener that threads into preformed threads or forms its own thread in one of mating parts
SDD	Single-drapeer drive
Self-Propelled (SP) Windrower	Self-propelled machine consisting of a power unit with a header
SK	Single knife
SKD	Single-knife drive
Soft joint	A joint made with use of a fastener where joining materials are compressible or experience relaxation over a period of time
spm	Strokes per minute
Tension	Axial load placed on a bolt or screw, usually measured in Newtons (N) or pounds (lb.)
TFFT	Turns from finger tight
Torque	The product of a force X lever arm length, usually measured in Newton-meters (N·m) or foot-pounds (ft·lbf)
Torque angle	A tightening procedure where fitting is assembled to a precondition (finger tight) and then nut is turned further a number of degrees or a number of flats to achieve its final position
Torque-tension	The relationship between assembly torque applied to a piece of hardware and axial load it induces in bolt or screw
ULSD	Ultra low sulphur diesel
UCA	Upper cross auger

PRODUCT OVERVIEW

Term	Definition
Washer	A thin cylinder with a hole or slot located in the center that is to be used as a spacer, load distribution element, or a locking mechanism
Windrower	Power unit of a self-propelled header
WCM	Windrower control module

PRODUCT OVERVIEW

2.2 Specifications

ENGINE		
Type	Cummins QSB-4.5L CM850 4 Cylinder Turbo Diesel. B20 biodiesel approved.	
Displacement	4.5 L (275 cu. in.)	
Power	Rated	148 hp (110 kW) @ 2300 rpm
	Peak	156 hp (116 kW) @ 2000 rpm
ELECTRICAL SYSTEM		
Recommended Battery (2)	12 Volt, Maximum dimension: 13.25 x 7.37 x 9.44 in (334 x 188 x 232 mm). group rating 29H or 31A. heavy duty / off road / vibration resistant.	
Minimum CCA per battery (Cold Cranking Amps)	650	
Battery BCI group rating	29H or 31A	
Alternator	130 amp	
Egress lighting	Standard	
Starter	Wet type	
Working lights	11	
TRACTION DRIVE		
Type	Hydrostatic, 3 speed electric shift	
Speed	Field (Cab-Forward)	Low-range: 0–18 km/h (11 mph) Mid-range: 0–26 km/h (16 mph)
	Reverse (Cab-Forward)	9.6 km/h (6 mph)
	Transport (Engine-Forward)	High Range: 0–37 km/h (23 mph)
Transmission	Type	2 Piston pumps: 1 per drive wheel.
	Displacement	44 cc (2.65 cu. in.)
	Flow	167 L/min (40 US gpm)
	Pressure	37,921 kPa (5500 psi)
Final Drive	Type	Planetary gearbox
	Ratio	30.06 : 1
Wheel Motor Displacement	Low Range	68 cc (4.15 cu. in.)
	Mid Range	50 cc (3.01 cu. in.)
	High Range	32 cc (1.93 cu. in.)
SYSTEM CAPACITIES		
Fuel Tank	367 L (97 US Gallons)	
Hydraulic Reservoir	65 L (17.2 US Gallons)	
HEADER DRIVE (Refer to table 2.1 Hydraulic Pumps , page 32).		

PRODUCT OVERVIEW

HEADER LIFT/TILT		
	Type	Hydraulic double acting cylinders. tilt - optional hydraulic positioning, Optional hydraulic center-link
	Function	Lift / tilt / float
HEADER FLOAT		
	Primary Adjustment	Manual, external, drawbolt with springs (1 per side). Two inner booster springs (1 per side)
	Fine Adjustment	Hydraulic, in-cab switch
	Automatic	Hydraulic, 3 programmable settings for all headers (Deck shift compensation on draper headers)
CAB		
Type		Spring/shock suspension
Dimensions	Width	1600 mm (63 in.)
	Depth	1735 mm (68.3 in.) (at top of window)
	Height	1640 mm (64.6 in.)
	Volume	3540 L (125 cu. ft.)
Seat	Driver	Adjustable air-ride suspension, seat belt
	Training	Folding, Cab Mounted, Seat Belt
Windshield Wiper	Front	800 mm (31.5 in.) Blade
	Rear	560 mm (22 in.) Blade
Heater		7038 W (24,000 Btu/h)
Air Conditioning		8288 W (28,280 Btu/h)
Electrical Outlets		One live, two on ignition, one live/keyed
Mirrors		One inside (transport), two outside (field)
Radio		Two speakers and antenna factory installed. Radio is dealer-Installed
SYSTEM MONITORING		
Speeds		Ground (mph or km/h), Engine (rpm), Knife (spm), Disc (rpm), Reel (rpm or mph/km/h), Conveyor (Ref. No.)
Header		Height, angle, float, header drive load gauge
TIRE OPTIONS (Refer to 2.3 Drive Tires, page 34 for options).		
FRAME AND STRUCTURE		
Dimensions		Refer to 2.3 Drive Tires, page 34
Frame to Ground (Crop Clearance)		1160 mm (45.7 in.)
Weight	Base	4360 kg (9610 lbs) ¹
	Maximum GVW	9750 kg (21,500 lbs) ¹
	Maximum CGVW	10,480 kg (23,100 lbs) ¹

1. Weights do not include options.

PRODUCT OVERVIEW

HEADER COMPATIBILITY		
Auger Headers	A30-D, A40-D	All sizes
Draper Headers	D50, D60, and D65 ²	Up to 35 ft.
Draper Headers	D60 and D65 40 ft. ²	40 ft.
Rotary Disc	R80 and R85	13 ft. Only ³

NOTE:

Specifications and design are subject to change without notice or obligation to revise previously sold units.

Pump Locations:

- A – Piston pump (closest to engine) knife drive.
- B – Reel/conveyor pump (or M2 with disc).
- C – Oil from the inner gear pump is normally routed directly to the cooler bypass valve and combines with the return flow from the first gear pump. From there the oil is cooled and moves through the high pressure filter and then into the supercharge valve block. If a Double Windrow Attachment (DWA) is installed, oil is diverted to power the draper; the return flow proceeds to the supercharge valve block.
- D – The outboard gear pump (D) supplies oil to the multifunction control block. The returned oil combines with the return flow from the inboard gear pump (C) at the cooler bypass and maintains standby pressure to operate brake disengage (either low- or high-speed range) and the neutral interlock cylinder.
- E – Traction drive double piston pump. Engine end pump drives right-hand wheel; outboard pump drives left-hand wheel.

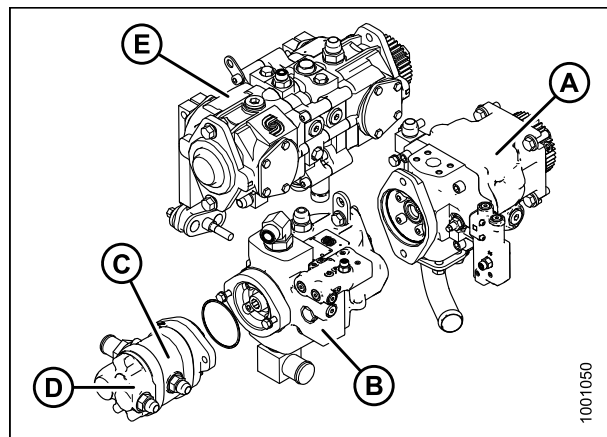


Figure 2.1: Pumps

Table 2.1 Hydraulic Pumps

Pump Type	Specifications	Controller Type	Function
Pump A - Load Sense Pressure Compensated Piston Pump	Variable Displacement: 0–45 cc (2.75 cu. in.) Flow = 0–102 L/min (27 gpm) at 27.56 MPa (4000 psi)	Electric over hydraulic Maximum flow rate determined by header ID	Knife drive or part of disc drive (option) M1 circuit
Pump B - Load Sense Pressure Compensated Piston Pump	Variable Displacement: 0–38 cc (2.32 cu. in.) Flow = 0–84 L/min (24 gpm) at 22.05 MPa (3200 psi)	Electric over hydraulic Maximum flow rate determined by header ID	Conveyor and reel drive or part of disc drive (option) M2 circuit

2. Depending on header options

3. Only 18.4 x 26 tires are compatible with the 13 ft. R80 and R85.

PRODUCT OVERVIEW

Pump Type	Specifications	Controller Type	Function
Pump C - Gear Pump	Displacement: 13.8 cc (0.84 cu. in.) Flow at Full Throttle 44 L/min (11.5 gpm) at 17.23 MPa (2500 psi)	Engine rpm	Supercharge flow and pressure for traction drive, brake release, Neutral lock, and DWA draper drive (if installed)
Pump D - Gear Pump	Displacement: 13.8 cc (0.84 cu. in.) Flow at Full Throttle 44 L/min (11.5 gpm) at 17.23 MPa (2500 psi)	Engine rpm	Supercharge flow and pressure for traction drive, brake release, and Neutral lock

2.3 Windrower Dimensions

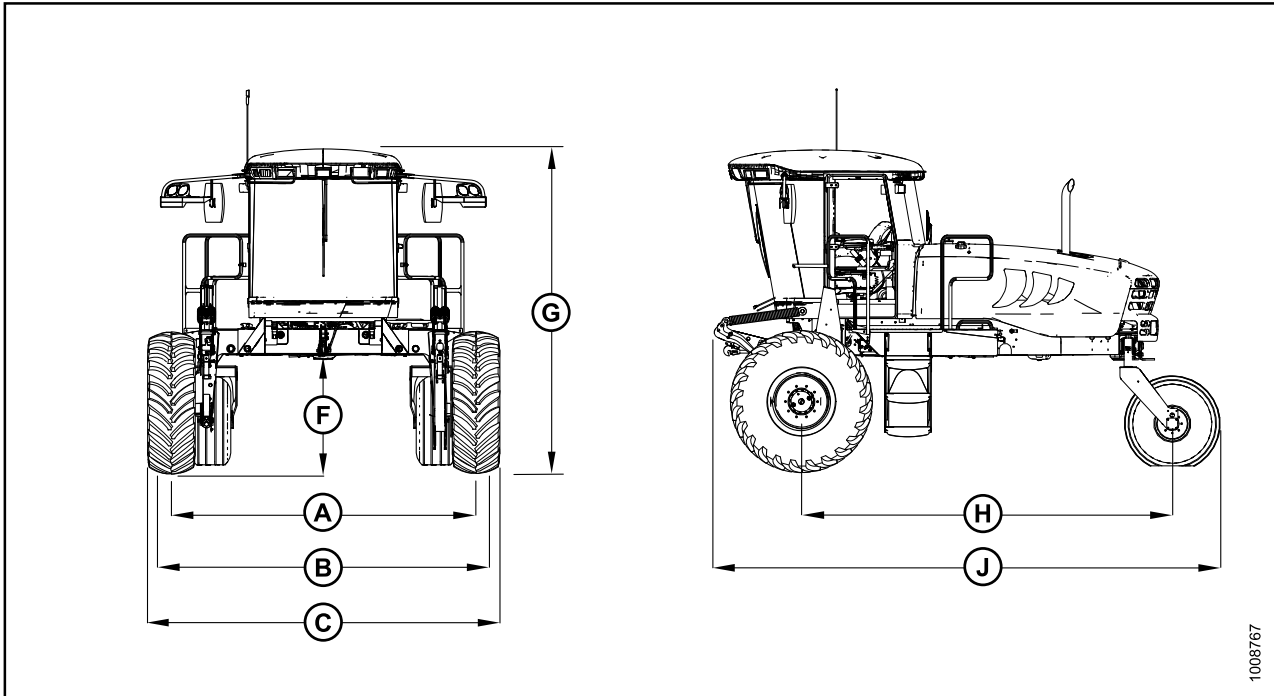


Figure 2.2: Windrower Dimensions – Cab-Forward

A - Drive Tire Tread
 F - 1160 mm (45-3/4 in.)
 J - 5280 mm (207-7/8 in.)

B - Drive Tire Hubs
 G - 3378 mm (133 in.)

C - Drive Tires
 H - 4022 mm (158-5/16 in.)

Table 2.2 Drive Tires

Tire Size	Wheel Position	Tread (A) mm (in.)	Hubs (B) mm (in.)	Tires (C) mm (in.)
18.4 x 26 bar and turf narrow track ⁴	Inner/outer (shipping)	3144 (123-3/4)	3571 (140-9/16)	3644 (143-7/16)
	Outer/outer	3324 (130-7/8)	3751 (147-11/16)	3824 (150-5/8)
	Inner/inner	2964 (116-11/16)	3391 (133-1/2)	3464 (136-3/8)
18.4 x 26 bar and turf wide track ⁴	Inner/outer (shipping)	3319 (130-11/16)	3571 (140-9/16)	3819 (150-3/8)
	Outer/outer	3499 (137-3/4)	3751 (147-11/16)	3999 (157-7/16)
	Inner/inner	3139 (123-9/16)	3391 (133-1/2)	3639 (143-1/4)
600/65R28 radial tire	Inner/outer (shipping)	3139 (123-9/16)	3571 (140-9/16)	3758 (147-15/16)
	Outer/outer	3319 (130-11/16)	3751 (147-11/16)	3938 (155-1/16)
	Inner/inner	2959 (116-1/2)	3391 (133-1/2)	3578 (140-7/8)

4. Only 18.4 x 26 tires are compatible with the 13-foot R80 and R85.

PRODUCT OVERVIEW

Tire Size	Wheel Position	Tread (A) mm (in.)	Hubs (B) mm (in.)	Tires (C) mm (in.)
23.1-26 turf tires	Inner/outer (shipping)	3203 (126-1/8)	3571 (140-9/16)	3793 (149-5/16)
	Outer/outer	3383 (133-3/16)	3751 (147-11/16)	3973 (156-7/16)
	Inner/inner	3023 (119)	3391 (133-1/2)	3613 (142-1/4)

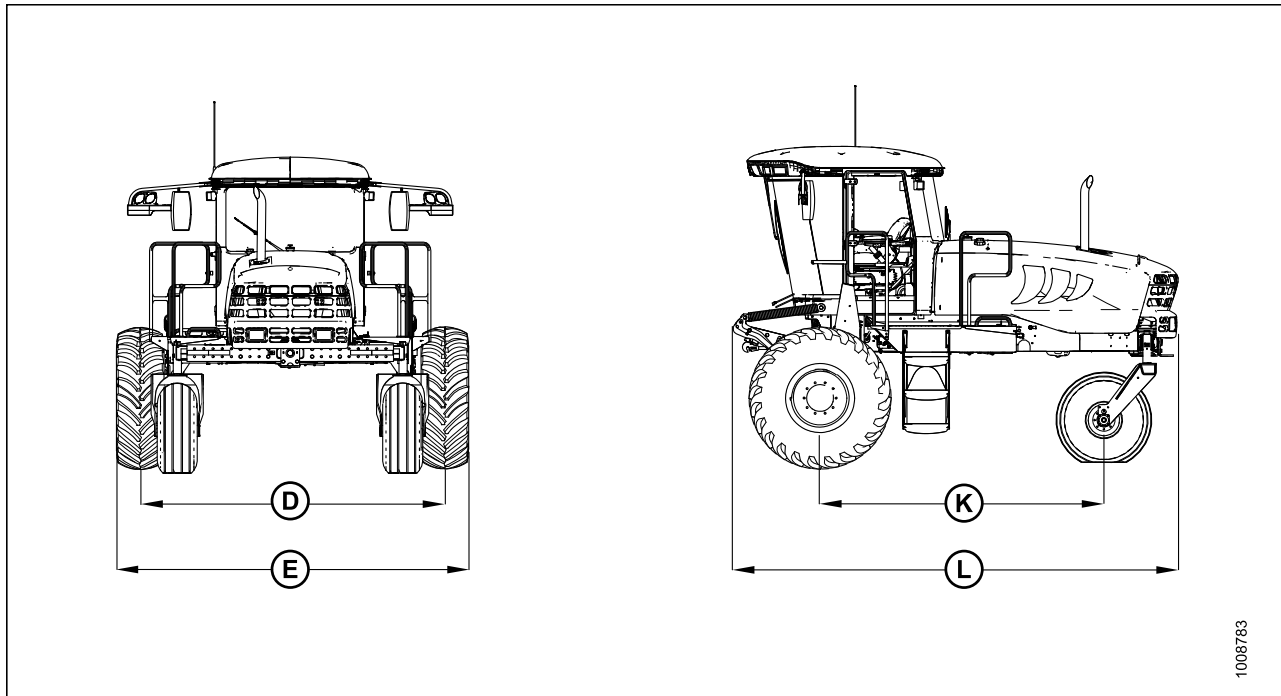


Figure 2.3: Windrower Dimensions – Engine-Forward

D - Caster Tire Tread

E - Caster Tire Casters

K - 3064 mm (120-9/16 in.)

L - 4747 mm (186-7/8 in.)

Table 2.3 Caster Tires

Tire Size	Wheel Position	Tread (D) mm (in.)	Castors (E) mm (in.)
7.5-16SL	Minimum	2448 (96-7/16)	3032 (118-15/16)
	Maximum	3448 (135-11/16)	4032 (158-3/4)
10-16 formed caster	Minimum	2448 (96-7/16)	3032 (118-15/16)
	Maximum	3448 (135-11/16)	4032 (158-3/4)
10-16 forked caster	Minimum	2448 (96-7/16)	3014 (118-11/16)
	Maximum	3448 (135-11/16)	4014 (158)
16.5 x 16.1	Minimum	2448 (96-7/16)	3014 (118-11/16)
	Maximum	3448 (135-11/16)	4014 (158)

2.4 Component Location

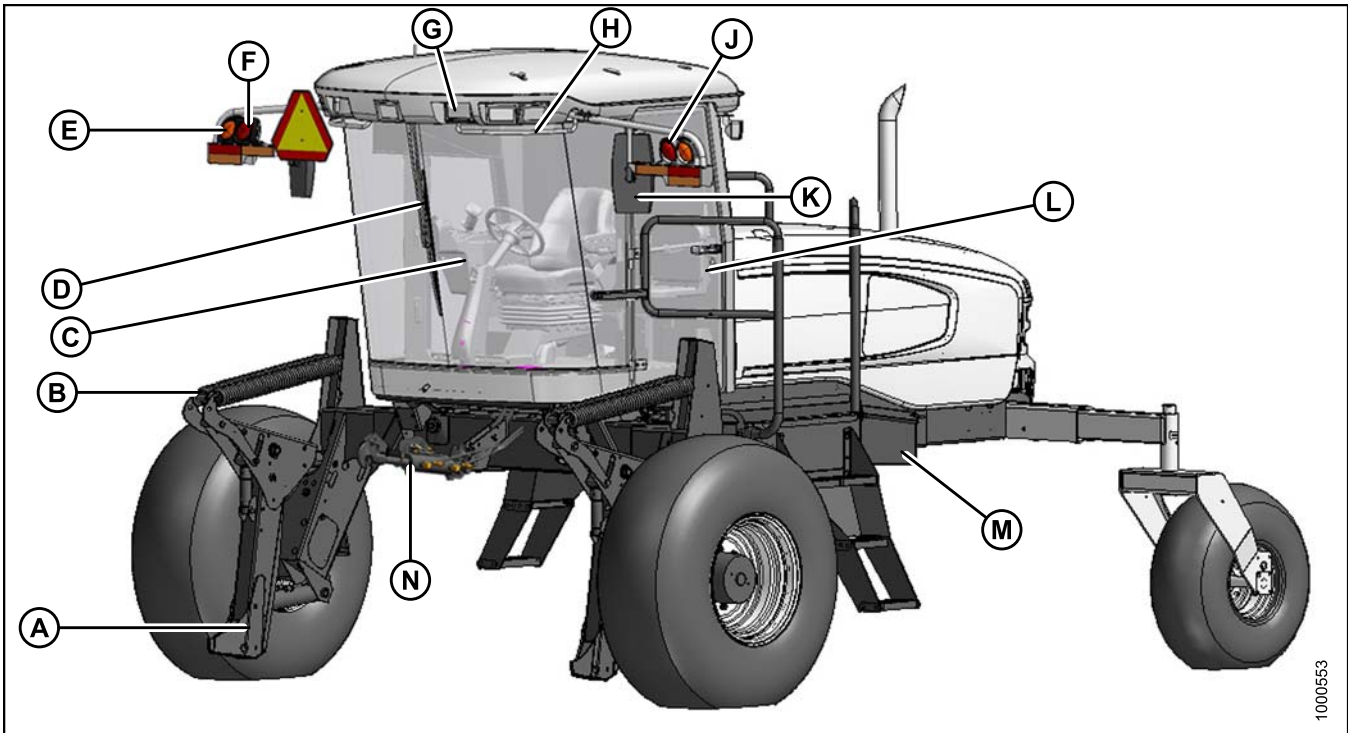


Figure 2.4: Front Cab-Forward View

A - Header Lift Leg
D - Windshield Wiper
G - Field/Road Lights
K - Mirror
N - Center-Link

B - Header Float Springs
E - Turn Signal/Hazard Lights
H - Handholds
L - Door

C - Operator's Station
F - Taillight Engine-Forward
J - Taillight Engine-Forward
M - Maintenance Platform

PRODUCT OVERVIEW

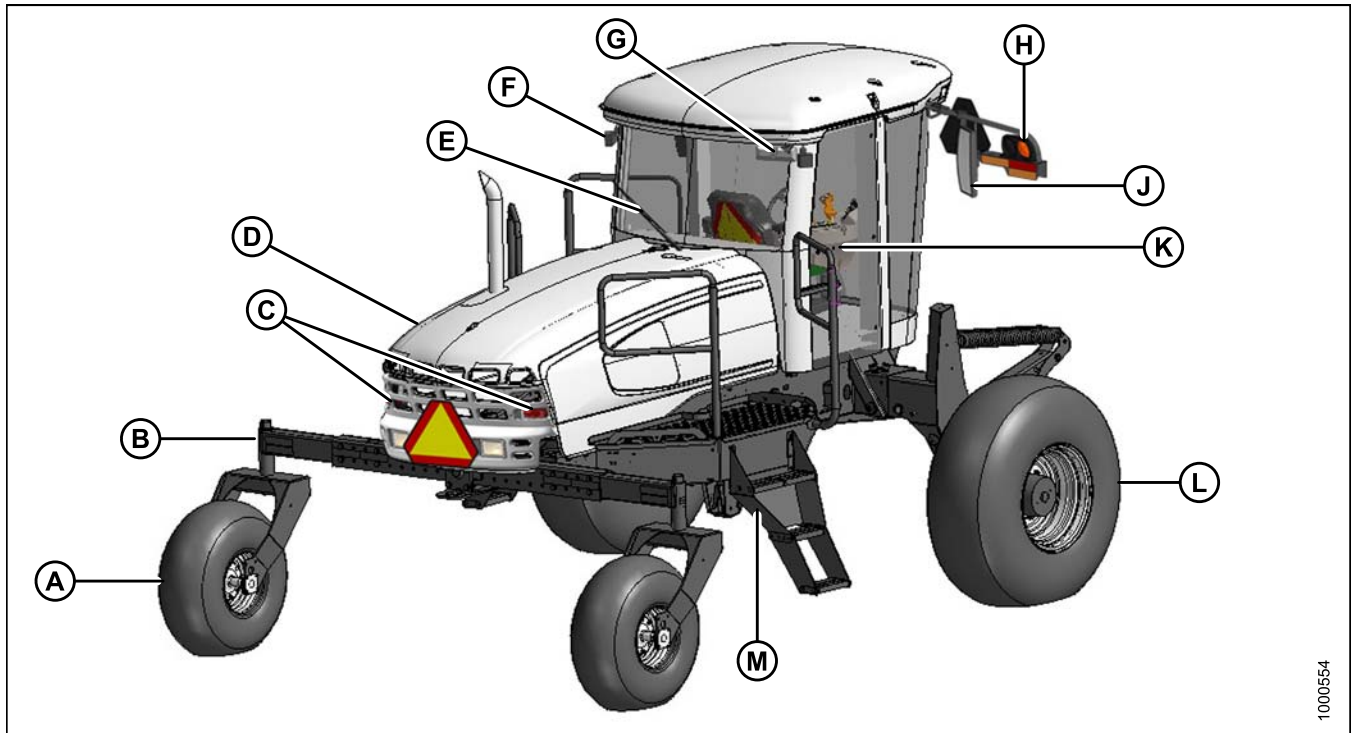


Figure 2.5: Rear Cab-Forward View

A - Caster Wheel
D - Engine Compartment Hood
G - Horn
K - Door

B - Walking Beam
E - Windshield Wiper
H - Turn Signal/Hazard Lights
L - Drive Wheel

C - Taillights - Cab-Forward (Option)
F - Field Lights
J - Mirror
M - Maintenance Platform

1000554

3 Operator's Station

The operator's station is designed for operating the windrower in cab-forward mode (working mode) or in engine-forward mode (transport mode). The operator's station—which includes the seat, console, and steering column—pivots 180° to provide access to controls and gauges regardless of the direction of travel.

3.1 Operator Console

The console contains controls to operate the windrower, as well as amenities for the Operator. The console position is adjustable to suit each Operator.

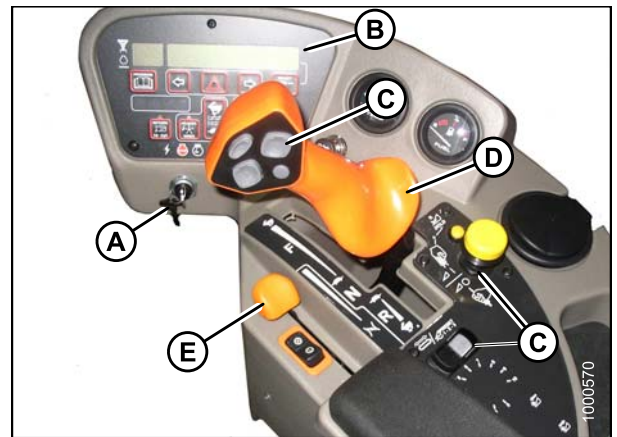


Figure 3.1: Operator Console

A - Ignition
B - Cab Display Module (CDM)
C - Header Controls
D - Ground Speed Lever (GSL)
E - Throttle

1. Adjusting fore-aft and height:
 - a. Pull lever (A) and slide console fore or aft to the desired position.
 - b. Release lever to lock console.

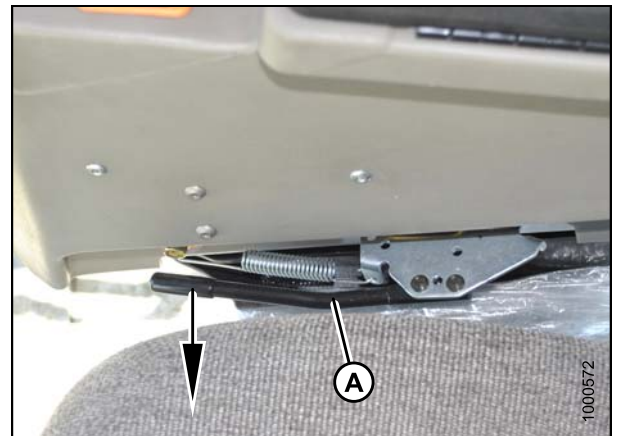


Figure 3.2: Console Fore-Aft

OPERATOR'S STATION

2. Adjusting only fore-aft:
 - a. Loosen nuts (A) under console.
 - b. Move console as required.
 - c. Tighten nuts (A).



Figure 3.3: Console Fore-Aft

3.2 Operator Presence System

The operator presence system is a safety feature designed to deactivate or alert selected systems when the Operator is not seated at the operator's station.

These systems include:

- Header drive
- Engine and transmission

3.2.1 Header Drive

- To engage the header drive, the Operator must be seated in the operator's seat.
- If the Operator leaves the seat, power to the header drive is maintained for five seconds, then the header shuts down automatically.
- To restart the header after an automatic shut down, move the HEADER DRIVE switch to the OFF position and then to the ON position.

3.2.2 Engine and Transmission

- If the HEADER DRIVE switch is engaged, the engine will not start.
- If the windrower is moving 8 km/h (5 mph) or slower and the Operator leaves the seat, the CDM will flash NO OPERATOR on the upper line and ENGINE SHUT DOWN 5...4...3...2...1...0 on the lower line accompanied by a steady tone. When the countdown reaches 0, the engine shuts down.
- If the windrower is moving 8 km/h (5 mph) or faster, and the Operator leaves the seat for more than five seconds, an alarm will sound and the lower display line will flash NO OPERATOR.
- If the operator's seat is in between cab-forward and engine-forward positions and the transmission is not locked in the NEUTRAL position, the engine shuts off. The lower display will flash LOCK SEAT BASE until the seat base is locked into position.

3.3 Operator's Seat Adjustments

The operator's seat has several adjustments. Refer to the following for the location and description of each adjustment.

3.3.1 Adjusting Fore-Aft Position

1. Pull lever (A) up to release.
2. Move seat forward or rearward.
3. Release lever (A).



Figure 3.4: Fore-Aft Position

3.3.2 Adjusting Seat Suspension and Height

Controls suspension stiffness and seat height.

INCREASE: Press upper switch (A).

DECREASE: Press lower switch (B).



Figure 3.5: Seat Suspension and Height

3.3.3 Adjusting Vertical Dampener

Controls suspension dampening.

INCREASE: Turn knob (A) counterclockwise.

DECREASE: Turn knob (A) clockwise.



Figure 3.6: Vertical Dampener

3.3.4 Adjusting the Armrest

Raise armrest (A) for easier access to seat.

Lower armrest (A) after seat belt is buckled.



Figure 3.7: Armrest

3.3.5 Adjusting Fore-Aft Isolator Lock

Locks seat fore-aft isolator.

LOCK: Push lever (A) down.

UNLOCK: Pull lever (A) up.



Figure 3.8: Fore-Aft Isolator Lock

3.3.6 Adjusting Seat Tilt

1. Pull lever (A) up to release.
2. Position seat back as desired.
3. Release lever (A).



Figure 3.9: Seat Tilt

3.3.7 Adjusting Armrest Angle

INCREASE: Rotate knob (A) clockwise.

DECREASE: Rotate knob (A) counterclockwise.

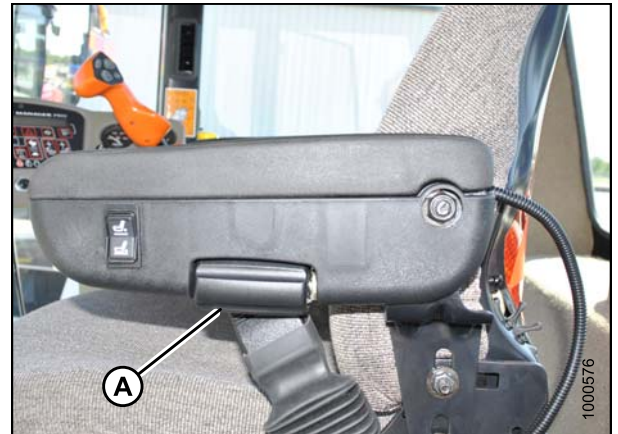


Figure 3.10: Armrest Angle

3.3.8 Adjusting Lumbar Support

Adjusts the stiffness of seat back.

INCREASE: Rotate knob (A) upward.

DECREASE: Rotate knob (A) downward.

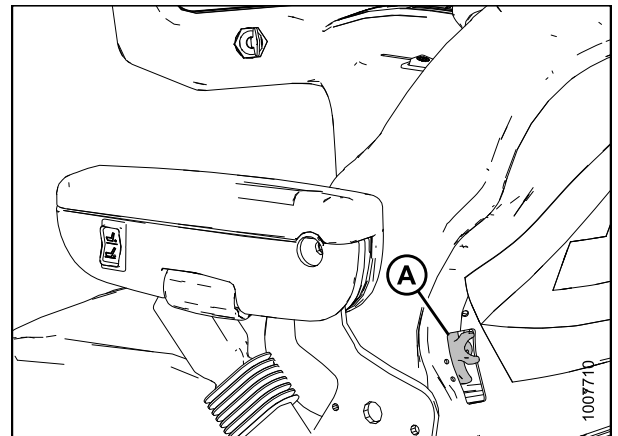


Figure 3.11: Lumbar Support

3.4 Training Seat

A wall-mounted fold-up training seat complete with seat belt is provided.

WARNING

- The training seat is provided for use by an experienced machine Operator while training a new Operator.
- The training seat is NOT intended as a passenger seat or for use by children. Use the seat belt whenever operating the machine or riding as a Trainer.
- Keep all other riders off the machine.

For storage, lift seat (B) and secure with latch (A).

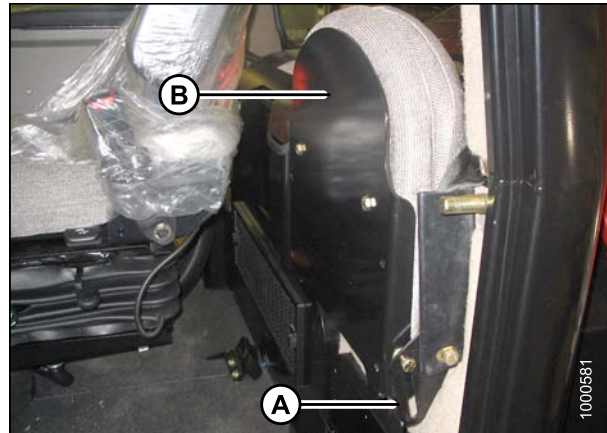


Figure 3.12: Training Seat in Storage Position

To lower seat, lift latch (A) and lower seat (B).



Figure 3.13: Training Seat

3.5 Using Seat Belts

The windrower is equipped with seat belts on the operator's and trainer's seats.

⚠ WARNING

The seat belts can help ensure your safety when properly used and maintained.

- Before starting the engine, fasten your seat belt, and ensure that the training seat occupant's seat belt is securely fastened.
- Never wear a seat belt loosely or with slack in the belt system. Never wear the belt in a twisted condition or pinched between the seat structural members.

To fasten seat belt:

1. Pull belt with metal eye (A) at right side completely across your body.
2. Push the metal eye (A) into the buckle (B) until it locks.
3. Adjust the position of the belt as low on your body as possible.

To release seat belt:

4. Push the red button (C) in the end of the buckle.
5. Separate the buckle (B) and metal eye (A).

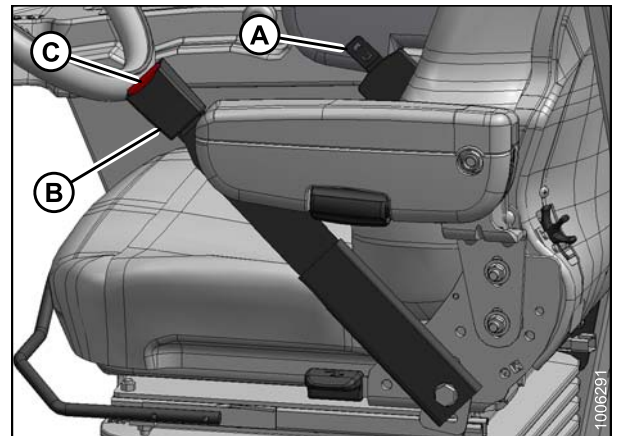


Figure 3.14: Seat Belt

3.6 Adjusting Steering Column

The steering column can be adjusted to suit each particular Operator and to make it easier to get in and out of the seat.

1. Hold onto steering wheel, lift handle (A), and move steering wheel up or down to desired position.
2. Release handle (A) to lock steering wheel position.

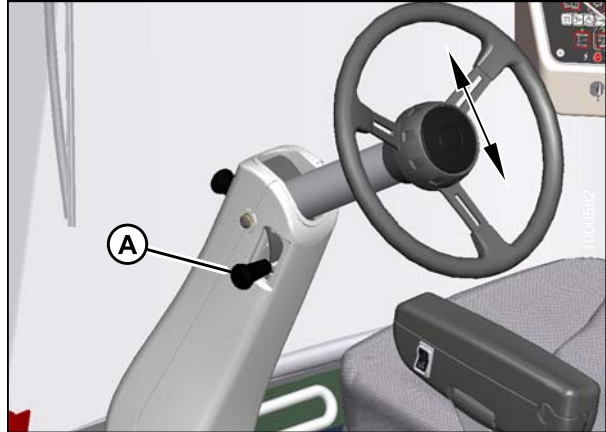


Figure 3.15: Steering Column

3.7 Lighting

The field, road, and beacon light switches are located on a panel in the cab headliner. The hazard light switch is located on the cab display module (CDM).

The position of the operator's station (cab-forward mode or engine-forward mode) automatically determines the lighting.

IMPORTANT:

Red and amber reflector tape is positioned so as to be visible in both engine-forward and cab-forward modes.

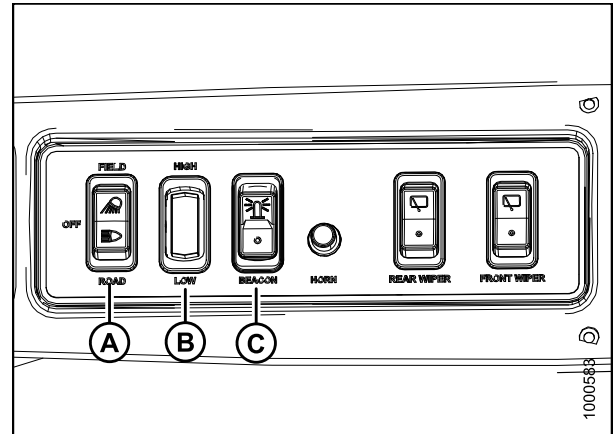


Figure 3.16: Headliner Console

A - Field or Road Lights B - Low or High Beams
C - Beacon (If Equipped)

3.7.1 Field Light: Cab-Forward

The following lights are ON when the light switch is in FIELD position with the windrower in cab-forward mode:

- Field lights in cab roof (front and rear)
- Swath lights in hood
- HID lights (if installed) on mirror supports

NOTE:

The field lights will not turn on if the auto-road light feature is activated (i.e., windrower is in engine- or cab-forward mode, out of park, high range switch position, and header off).

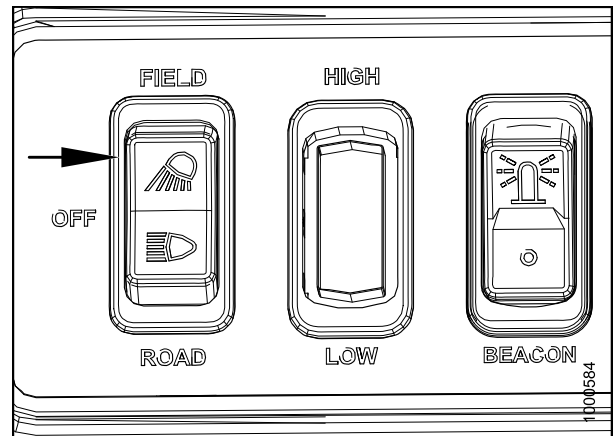


Figure 3.17: Field Light Switch

The two innermost lights in the field light group (A) at the front of the cab are adjustable. Refer to [Adjusting Field Lights, page 384](#).

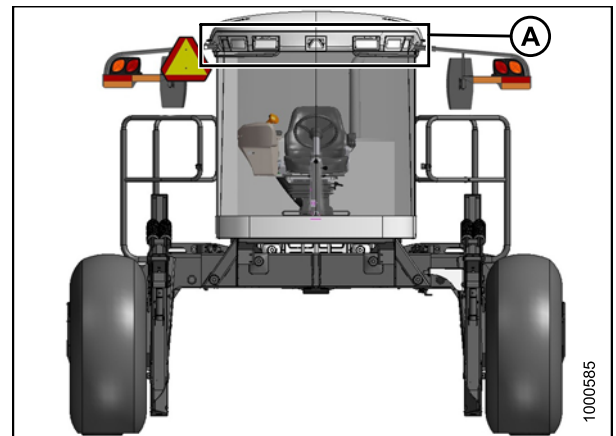


Figure 3.18: Cab-Forward: Front View

OPERATOR'S STATION

The two field lights (A) at the rear of the cab are adjustable. Refer to [Adjusting Rear Flood Lights, page 389](#).

NOTE:

When the engine is shut down, rear field lights (A) turn on for 60 seconds to illuminate the platform and stairs.

The two swath lights (B) in the hood are adjustable, but because they are used as road lights in engine-forward mode and adjusted accordingly, they should **NOT** be adjusted for field operation.

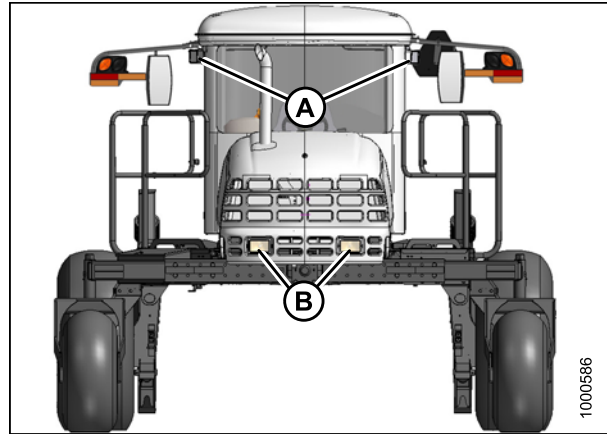


Figure 3.19: Cab-Forward: Rear View

3.7.2 Road Light: Engine-Forward

The following lights are ON when the light switch (A) is in ROAD position with the windrower in engine-forward mode:

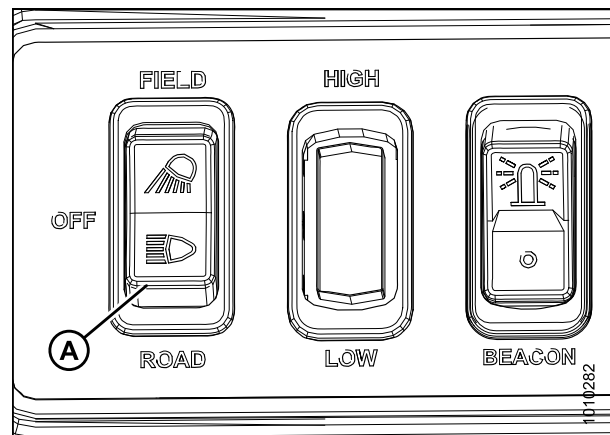


Figure 3.20: Road Light Switch

- Red taillights (A) on the mirror supports
- Amber turn signals and hazard lights (B) on mirror supports rear view

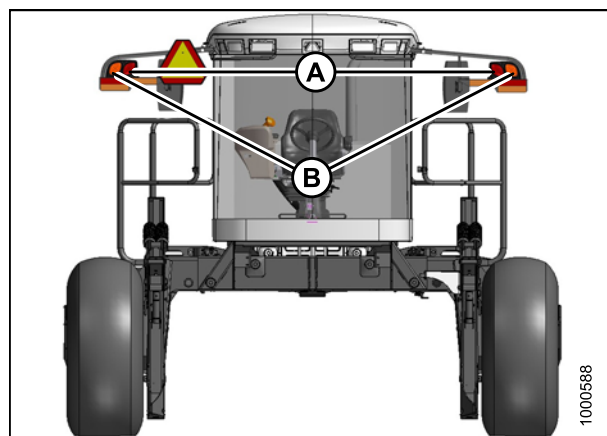


Figure 3.21: Engine-Forward: Rear View

OPERATOR'S STATION

- Amber turn signals and hazard lights (A) on mirror supports front view
- Headlights (B) in hood with low/high switch

The two headlights in the hood are adjustable. Refer to [Aligning Headlights, page 382](#).

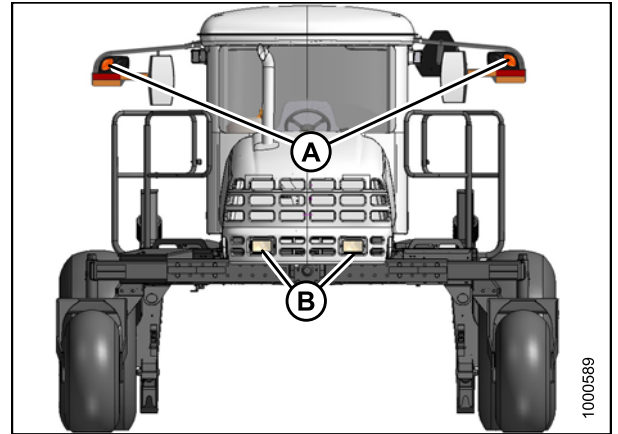


Figure 3.22: Engine-Forward: Front View

3.7.3 Road Light: Cab-Forward

If equipped, the following lights are functional with switch (A) in the ROAD position:

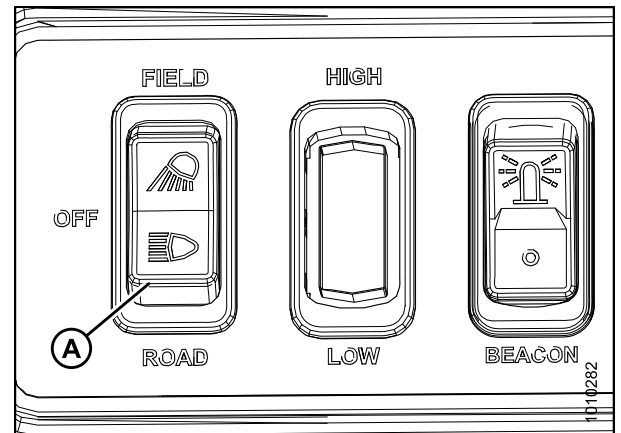


Figure 3.23: Road Light Switch

- Four lights (A) in cab roof
- Amber turn signals and hazard lights (B) on mirror supports visible from both front and rear

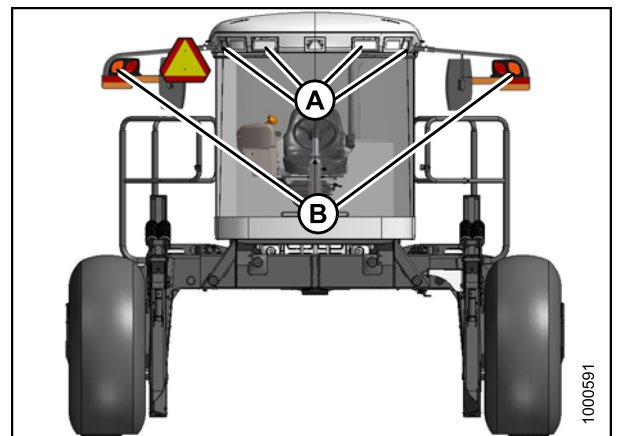


Figure 3.24: Cab-Forward: Front View

OPERATOR'S STATION

- Red lights (C) in hood (optional)

NOTE:

The hazard lights will be automatically activated when certain conditions are met. The windrower must be cab-forward, medium range, brake OFF, and header OFF.

IMPORTANT:

Optional red tail lighting and marking kit must be installed so that road travel in the cab-forward mode complies with regulations. Refer to [7.1.4 Lighting and Marking for Cab-Forward Road Travel, page 455](#) or see your MacDon Dealer.

NOTE:

If the red tail lighting kit is not installed, travelling in cab-forward mode and activating the turn indicator will trigger a stop lamp error (E134 or E135).

IMPORTANT:

If red tail lighting kit is installed and stop lamp errors still occur, contact your MacDon Dealer.

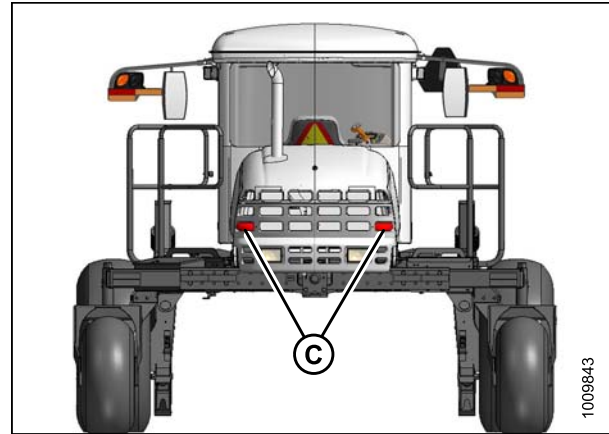


Figure 3.25: Cab-Forward: Rear View

3.7.4 Hazard Light

The hazard lights can be switched on or off manually by pressing the HAZARD switch (A) on the cab display module (CDM).

These lights will also turn on automatically when the auto-road light feature is activated (i.e., engine running, header off, and transmission in either mid or high range), and can only be turned off by engaging the header drive.

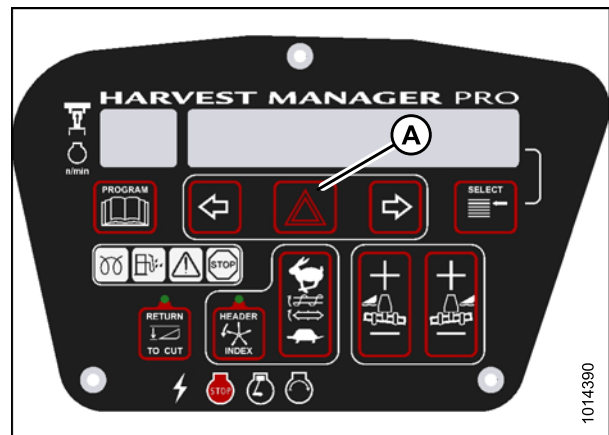


Figure 3.26: CDM

3.7.5 Beacon Light (Optional)

MD #B5582

The beacon lights (A) are functional when the ignition and the beacon switch (B) are ON.

The beacons **MUST** be used when driving on the road where required by law.

The beacons will also turn on automatically when the auto-road light feature is activated (i.e., engine running, header off, and transmission in either mid or high range), and can only be turned off by engaging the header drive.

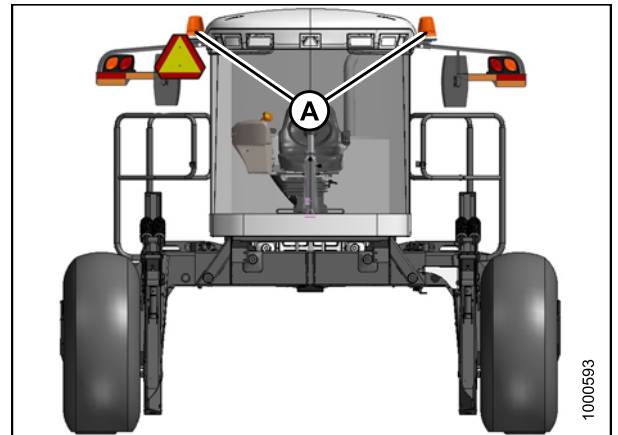


Figure 3.27: Cab-Forward: Front View

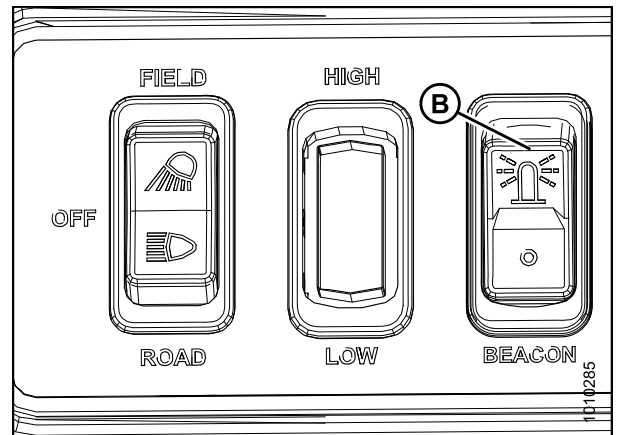


Figure 3.28: Beacon Light Switch

3.7.6 Auto Road Light

The beacon and hazard lights are included in the auto road light feature. The beacon and hazard lights will turn on when this feature is activated, and can only be turned off by engaging the header drive.

This feature will activate when:

- Windrower is in cab- or engine-forward mode
- Engine is running
- Header is disengaged
- Transmission is in either mid or high range

Moving the ground speed lever (GSL) out of neutral (brake off) will switch the white lights from field/work lights to road lights, if the switch is in the field/road lights position.

3.7.7 HID Auxiliary Lighting (Optional)

Two optional High Intensity Discharge (HID) lights (MD #B5596) provide additional lighting during field operation.

If installed, HID auxiliary lighting is located on the mirror supports (A) and operates in cab-forward mode only.



Figure 3.29: HID Auxiliary Lights (Optional)

Optional HID auxiliary lighting is activated with the light switch (B) in the FIELD position.

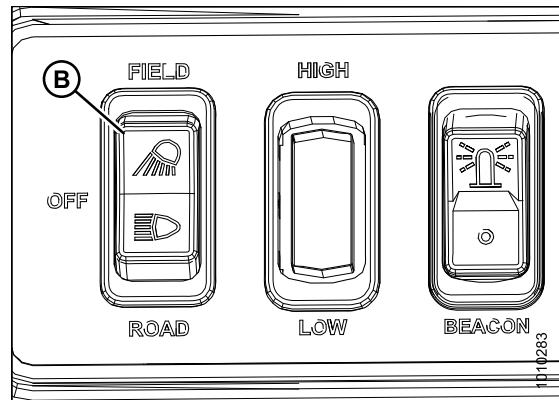


Figure 3.30: Field Light Switch

3.8 Windshield Wipers

The windshield wiper controls are located in the cab headliner. The illustration shows the controls in cab-forward mode.

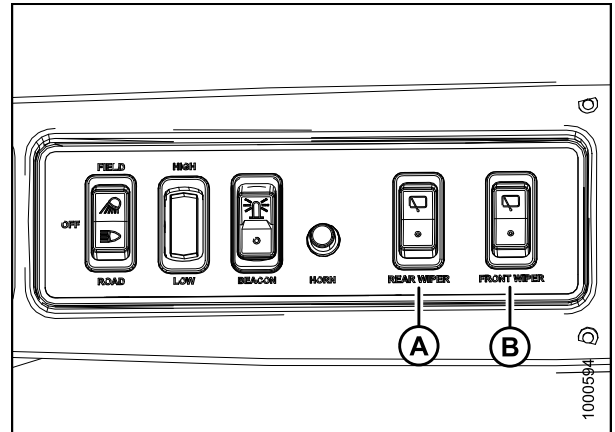


Figure 3.31: Wiper Controls

A - Rear Wiper

B - Front Wiper

3.9 Rear View Mirrors

Two outside-mounted, adjustable mirrors (A) provide a rear view when the windrower is in cab-forward mode.

A single interior-mounted mirror (B) provides a rear view in the engine-forward mode.

The mirror/light assembly (A) is designed to fold back if accidentally struck. A detent-type lock keeps it in place.

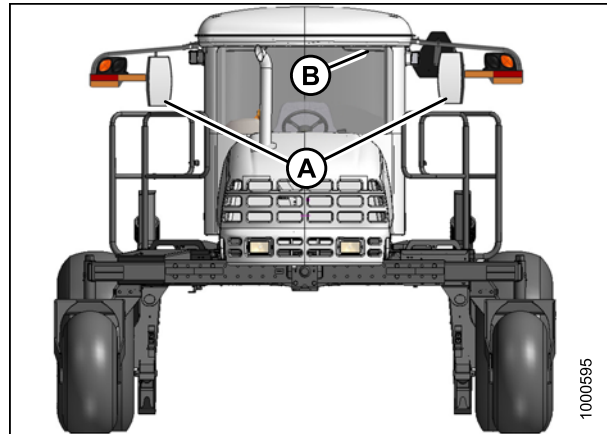


Figure 3.32: Mirrors

3.10 Cab Temperature

The cab environment is controlled by a climate control system that provides clean air-conditioned or heated air. The heater/evaporator/blower assembly is located under the cab floor and is accessible from beneath the windrower.

3.10.1 Heater Shut-Off

A shut-off valve (A) at the engine allows the cab heater to be isolated from the engine coolant.

The valve must be OPEN to provide heat to the cab but can be CLOSED for maximum cooling.

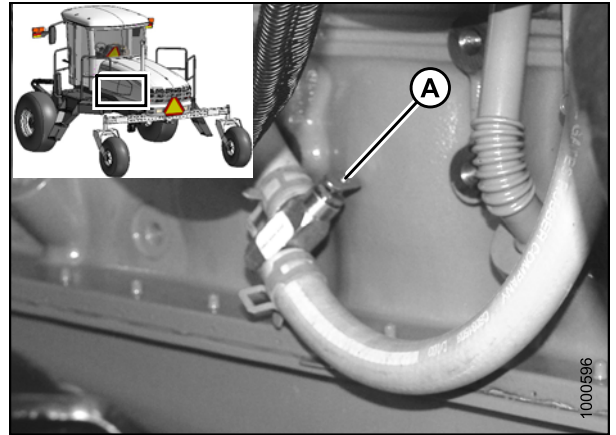


Figure 3.33: Heater Shut-Off Valve

3.10.2 Air Distribution

Cab air distribution is controlled through adjustable air vents (A) located in the cab posts. The vents provide Operator ventilation.

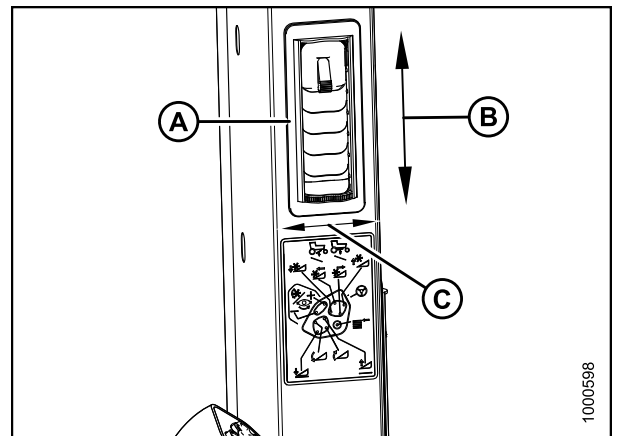


Figure 3.34: Adjustable Air Vents

A - Vent

B - Open/Close

C - Direction

OPERATOR'S STATION

3.10.3 Climate Controls

A – BLOWER Switch controls the blower speed

- OFF / LOW / MEDIUM / HIGH

B – Air Conditioning (A/C) Switch controls A/C system

- OFF: A/C does not operate
- ON: A/C operates with blower switch ON

C – Outside Air Switch controls the air source

- FRESH AIR: Starts booster fan and filtered outside air is drawn into cab
- RECIRCULATE: Stops booster fan and cab air is recirculated

D – TEMPERATURE Control Dial controls cab temperature

- Turning the dial clockwise increases temperature
- Turning the dial counterclockwise decreases temperature

IMPORTANT:

When starting the windrower after more than one week of storage, the refrigerant oil needs to be distributed through the A/C system. For instructions, refer to [Air Conditioning \(A/C\) Compressor Coolant Cycling, page 159](#).

Refrigerant Oil

Perform the following steps when starting the windrower after more than one week of storage to distribute the refrigerant oil throughout the A/C system:

1. Ensure heater shut-off valve at engine is OPEN. Refer to [3.10.1 Heater Shut-Off, page 57](#).
2. Turn blower switch to the first position, turn temperature control switch to MAXIMUM heating, and A/C control to OFF.
3. Start engine and operate at low idle until engine is warm.
4. Click A/C switch from OFF to ON for one second, then back to OFF for five to ten seconds. Repeat this step ten times.

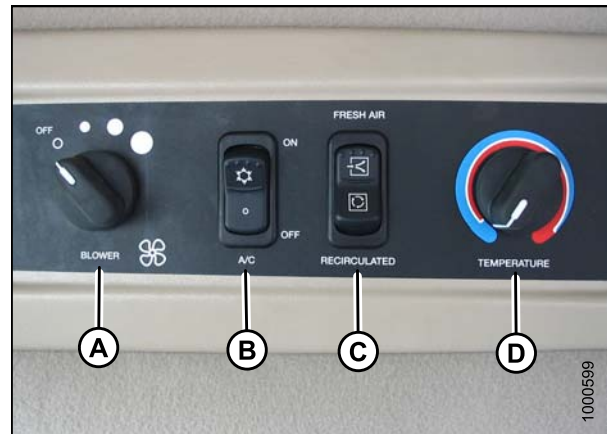


Figure 3.35: Climate Controls

3.11 Interior Lights

Two interior lights are installed in the cab headliner.

A low intensity LED light (A) is located directly overhead to provide ambient lighting if desired. It functions only when the key is in the RUN position. An ON/OFF switch is located on the light.

The other interior light (B) is located on the headliner switch panel and the push-ON, push-OFF button is located on the light. It functions at any time.

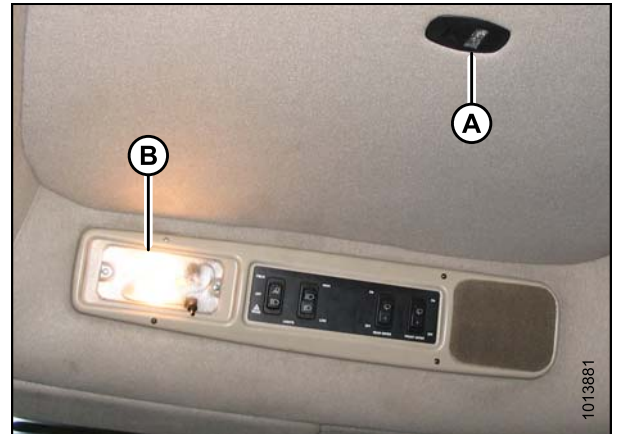


Figure 3.36: Interior Lights

3.12 Emergency Exit

The emergency exit window (indicated by the emergency exit decal [A]) is located beside the operator's station.

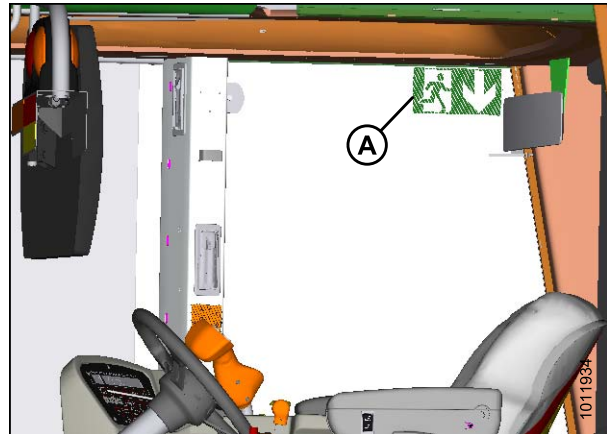


Figure 3.37: Emergency Exit Sign

To open the emergency exit window, follow these steps:

1. Release the window latch (A).
2. Remove the latch pin (B).
3. Push window open (C).

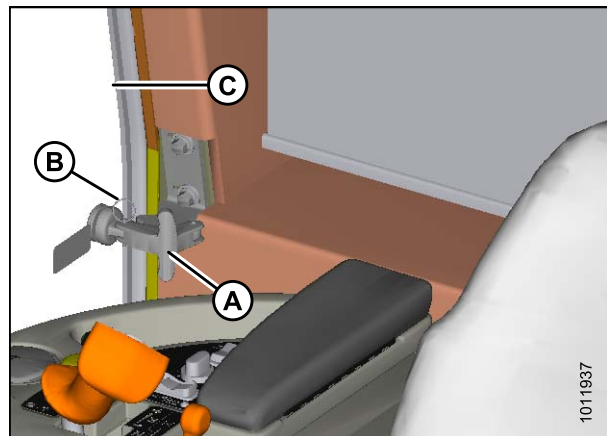


Figure 3.38: Emergency Exit Window

3.13 Operator Amenities

The operator's station includes the following amenities:

Operator's Console

- A - Auxiliary power outlet
- B - Utility tray (under armrest)
- C - Cigarette lighter
- D - Ashtray/cup holder
- E - Utility tray

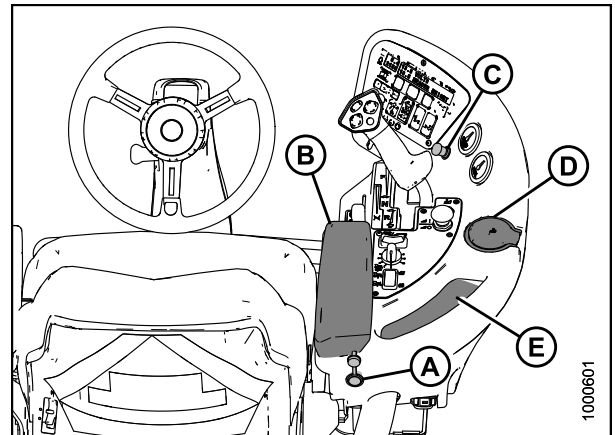


Figure 3.39: Console

Window Shades (Optional)

Retractable window shades (A) can be installed for the front and rear windows. Refer to [7.1.7 Windshield Shades, page 456](#) for ordering information.

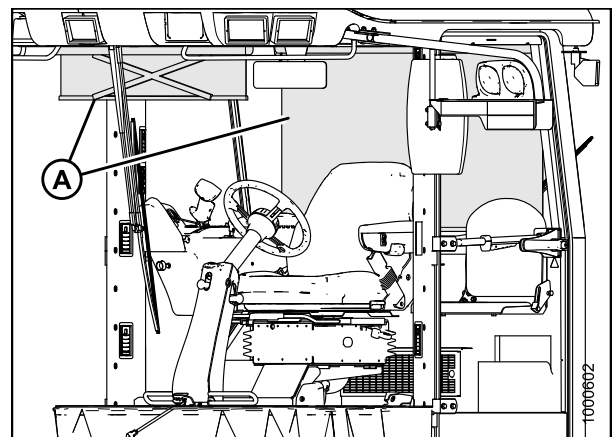


Figure 3.40: Window Shades

Auxiliary Outlets

Two auxiliary power outlets are located on either side of the wiper motor cover/storage tray behind the Operator (cab-forward mode).

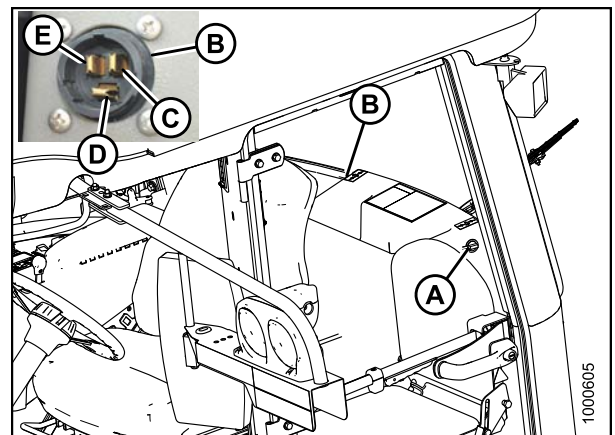


Figure 3.41: Auxiliary Power Outlets

- A - Auxiliary Power Outlet
- B - Auxiliary Power Outlet
- C - Battery Terminal
- D - Ground Terminal
- E - Switched Terminal

OPERATOR'S STATION

Manual Storage

A manual storage case (A) is located under the training seat.

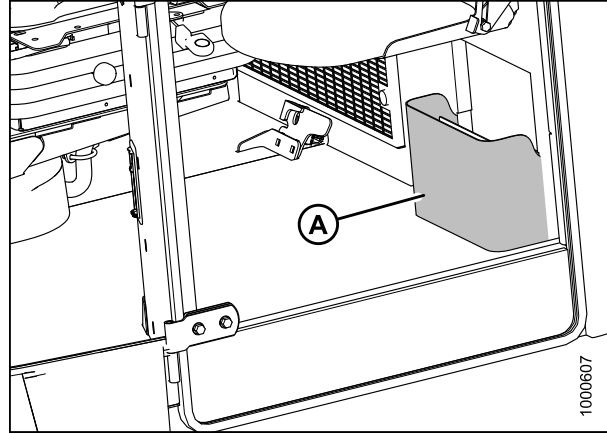


Figure 3.42: Operator's Manual Storage

Coat Hook

A coat hook (A) is located above the training seat, left of the Operator.

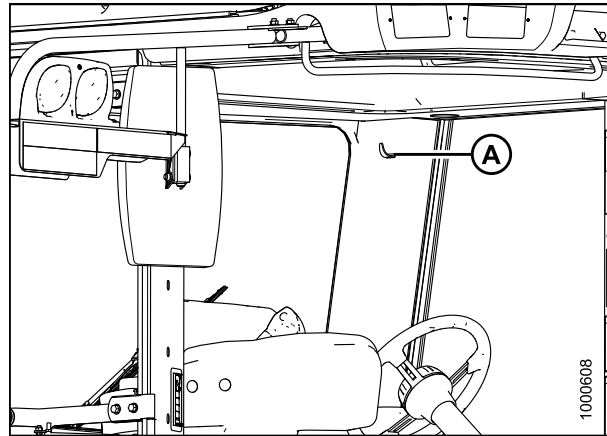


Figure 3.43: Coat Hook

3.14 Radio

A radio is available as optional equipment from your Dealer.

3.14.1 AM/FM Radio

A space (B) is provided in the cab headliner to accommodate the installation of an AM/FM radio that is available as optional equipment from your Dealer. In order to retain radio settings and preset memory with the battery disconnect turned off, select a radio with non-volatile settings memory.

Two pre-wired speakers (A) have been factory-installed in the headliner.

For radio installation procedures, refer to the M155 and M205 Self-Propelled Windrower Unloading and Assembly Instructions: North American Shipments or M-Series Self-Propelled Windrower Unloading and Assembly Instructions for Container Shipments.

Operating instructions are supplied with the radio.

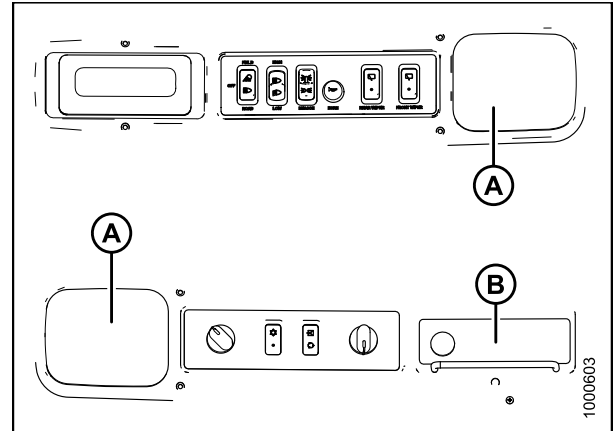


Figure 3.44: Speakers in Headliner

A - Speakers

B - Radio Mounting Location

3.14.2 Mounting the Antenna

An optional base for a magnetic roof-mounted antenna is available from your Dealer.

IMPORTANT:

Antenna base can only be installed on the left cab-forward and right rear cab roof bolts.

Order antenna mount (MD #160288 [B]) or refer to [3.47: Template for Antenna Mount, page 64](#) for part dimensions to make an improvised version. A knockout (C) for the antenna lead is provided on the cab post.

1. Remove existing bolt (A).
2. Install antenna mount (B) and secure with bolt (A).

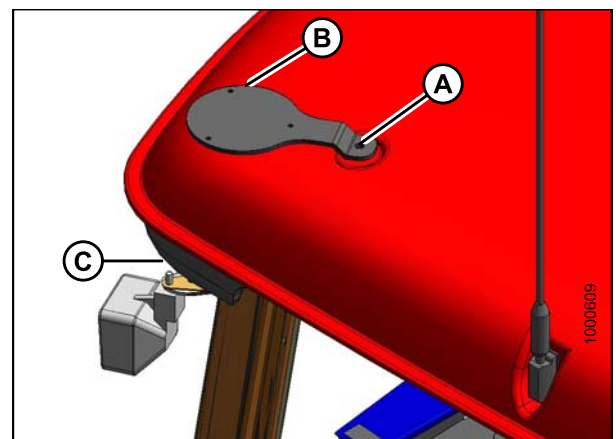


Figure 3.45: Antenna Mount

OPERATOR'S STATION

The knockout (A) is located on the exterior right cab-forward rear corner post of the cab, under the roof, between the horn and the light.

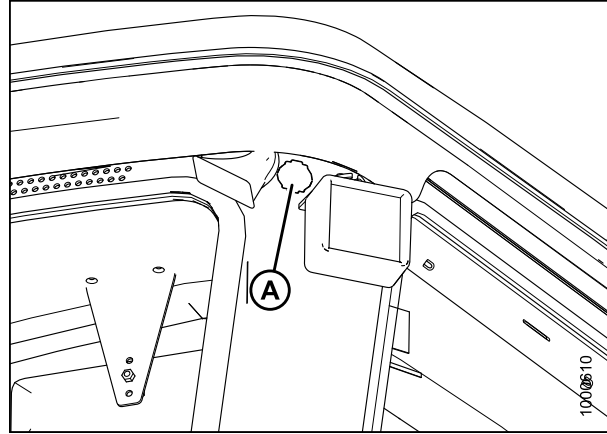


Figure 3.46: Knockout Location in Cab

To make your own mount, refer to dimensions template.
Use 11 GA. or 3.0 mm steel sheet.

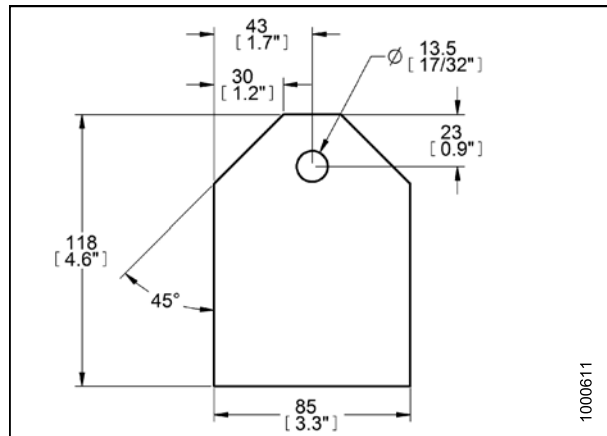


Figure 3.47: Template for Antenna Mount

3.15 Horn

The horn is activated by pushing button (A) located on the panel in the headliner.

Sound the horn three times prior to starting the engine.

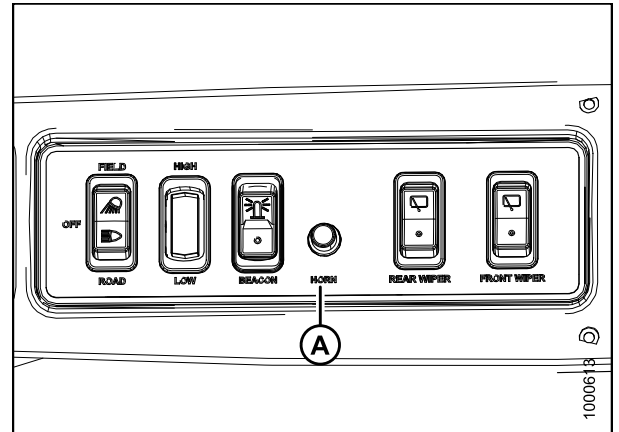


Figure 3.48: Horn Button Location

The horn (A) is located outside the cab on the rear right cab-forward corner of the cab, under the roof.

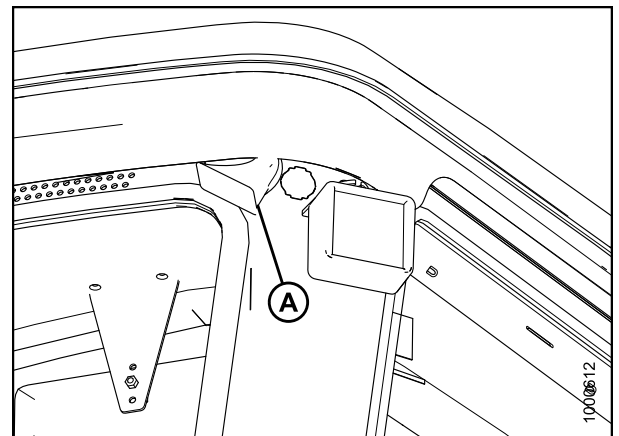


Figure 3.49: Horn Location

3.16 Engine Controls and Gauges

The following engine controls and gauges are conveniently located on the operator's console.

Ignition Switch (A)

- ACC (Accessory): Fully counterclockwise
- OFF: All electrical systems OFF
- RUN: Clockwise
- START: Fully clockwise to crank engine: Release and switch returns to RUN

NOTE:

Remove key when windrower is not in use; the key also locks doors.

Engine Coolant Temperature Gauge (B)

- Normal Running: 82°–104°C (180°–220°F)

NOTE:

For information about temperature warnings and alarms, refer to [Display Warnings and Alarms, page 86](#).

Fuel Gauge (C)

- E: Empty
- F: Full

Throttle (D) controls engine speed

- FULL: Push lever forward
- OPERATING: Refer to [Driving Forward in Cab-Forward Mode, page 167](#)
- CLOSED: Pull lever back



Figure 3.50: Engine Controls and Gauges

3.17 Windrower Controls

Console Controls:

A – TURN SIGNALS activate turn signals on windrower and header

- Push-ON/Push-OFF

B – GROUND SPEED LEVER (GSL) controls speed and direction of movement

- F: Forward
- N: NEUTRAL
- N-DETENT: Engages neutral interlock, and applies park brake when steering locked in center
- R: Reverse

C – HAZARD WARNING LIGHTS activate signals on windrower and header

- Push-ON/Push-OFF

D – GROUND SPEED RANGE SWITCH shifts transmission speed range

- High range: 0–37 km/h (23 mph)
ENGINE-FORWARD ONLY
- Mid range: 0–25.7 km/h (16 mph)
CAB-FORWARD ONLY
- Low range: 0–17.7 km/h (11 mph)

E – N-Detent

Autosteer Control:

A – AUTOSTEER ENGAGEMENT SWITCH engages/disengages the automated steering system (if compatible system is installed)

- ENGAGE: Click to engage
- DISENGAGE: Turn steering wheel or click to disengage



Figure 3.51: Console Controls

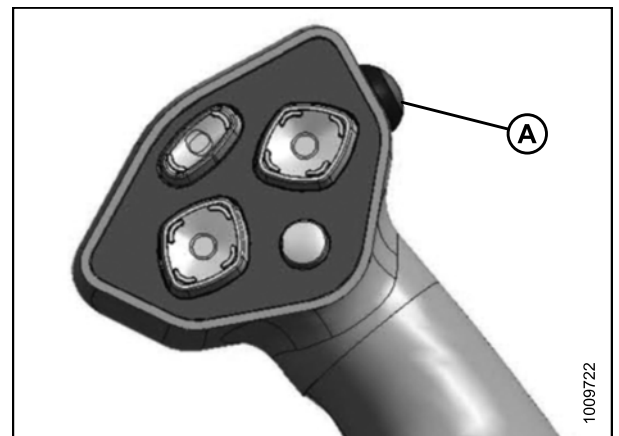


Figure 3.52: GSL

The autosteer engagement switch harness has two connectors and is located as follows:

OPERATOR'S STATION

GSL SW1 (A) is located in the cab, beneath the floor mat at the engine-end seat position switch.

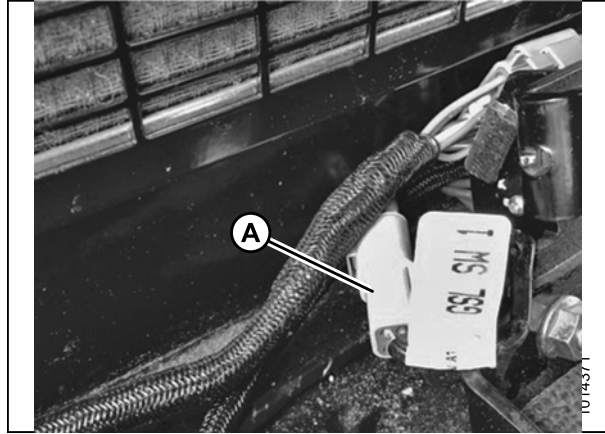


Figure 3.53: Autosteer Harness SW1

GSL SW2 (A) is located beneath the cab, between the fuel tank and evaporator box.

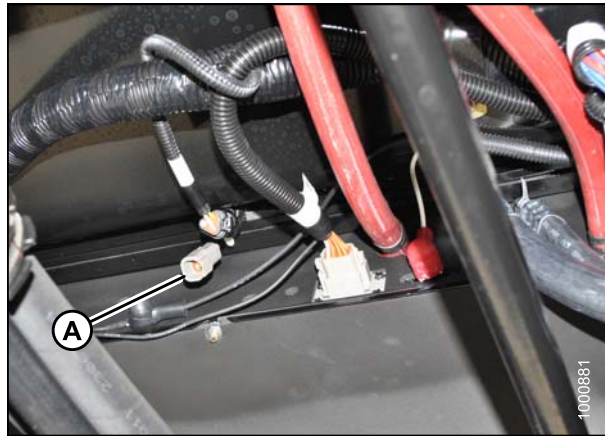


Figure 3.54: Autosteer Harness SW2

3.18 Header Controls

All header controls are conveniently located on the operator's console and on the ground speed lever (GSL) handle.

NOTE:

Some controls are optional equipment and may not be present in your unit. Some controls may be installed but nonfunctional for certain headers.

Refer to specific header sections in this manual for detailed operating procedures of all header controls.

3.18.1 Header Drive Switch

The HEADER DRIVE switch (A) engages and disengages the header drive.

To engage the header drive, pull up on the collar (B) and push down on the switch (A).

To disengage the header drive, push the switch down.

IMPORTANT:

Always move throttle lever back to IDLE before engaging header drive. Do **NOT** engage header with engine at full rpm.

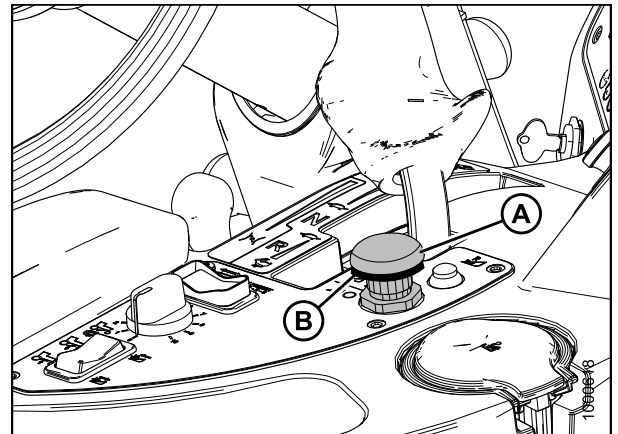


Figure 3.55: Header Drive Switch

3.18.2 Header Drive Reverse Button

NOTE:

The hydraulic reversing kit must be installed on auger headers and on draper headers with a conditioner.

- ENGAGE: Push and hold REVERSER button (B) and engage header with switch (A)
- DISENGAGE: Release REVERSER Button (B)

NOTE:

To engage forward operation, push switch (A) down and then up again.

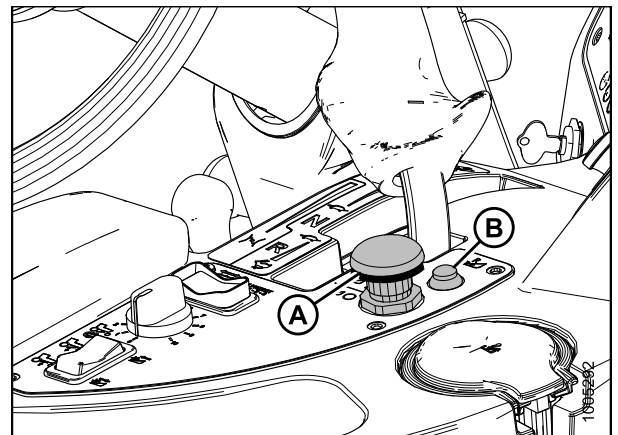


Figure 3.56: Header Drive Switches

OPERATOR'S STATION

3.18.3 Ground Speed Lever (GSL) Header Switches

The switches on the GSL (A) control the most common header functions.

NOTE:

A decal (B) identifying switch functions is located on the cab post above the operator's console.

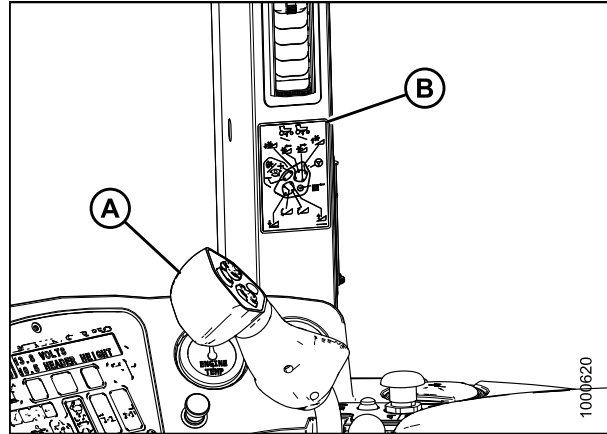


Figure 3.57: GSL

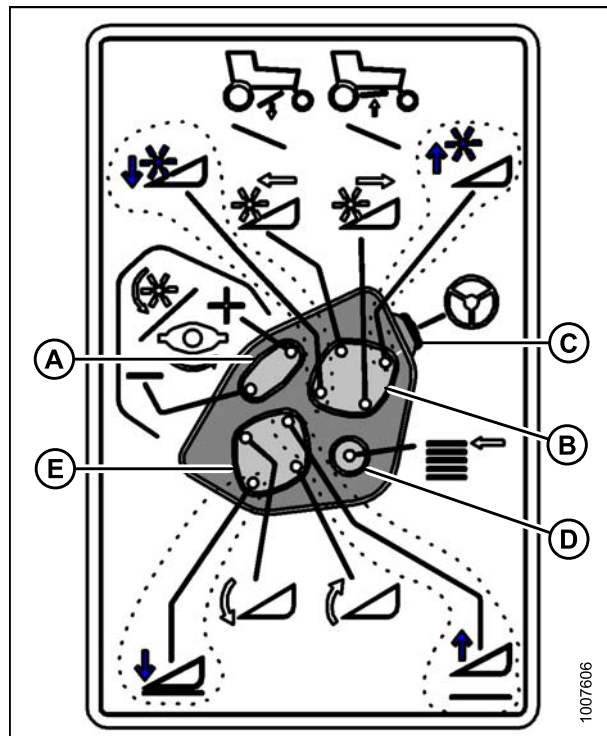


Figure 3.58: GSL Function Groups

- | | |
|--------------------------|----------------------|
| A - Reel Speed | B - Reel Position |
| C - Autosteer Engagement | D - Display Selector |
| E - Header Position | |

OPERATOR'S STATION

Display Selector Switch

Pressing the display selector switch (A) selects and displays the settings on the cab display module (CDM) top line read-out for each of the header controls.

Press switch (A) to scroll through settings.

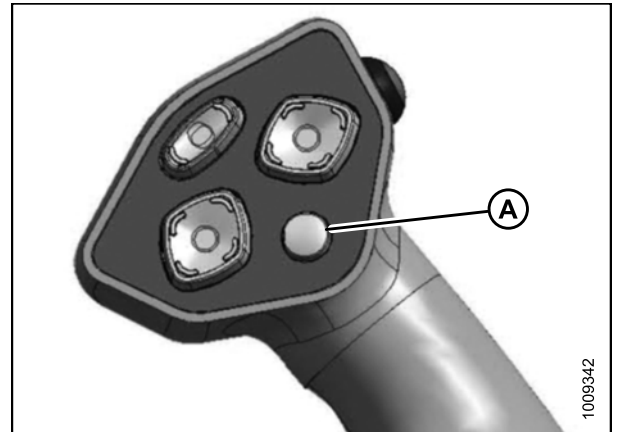


Figure 3.59: Ground Speed Lever

Header Position Switches

Use the header position switches on the ground speed lever (GSL) to adjust the position of the header relative to the ground.

- To lower the header, press switch (A)
- To raise the header, press switch (C)
- To tilt the header down, press switch (B)
- To tilt the header up, press switch (D)

Release switch at desired position.

NOTE:

Refer to the section in this manual that is specific to your header for detailed switch operating modes.

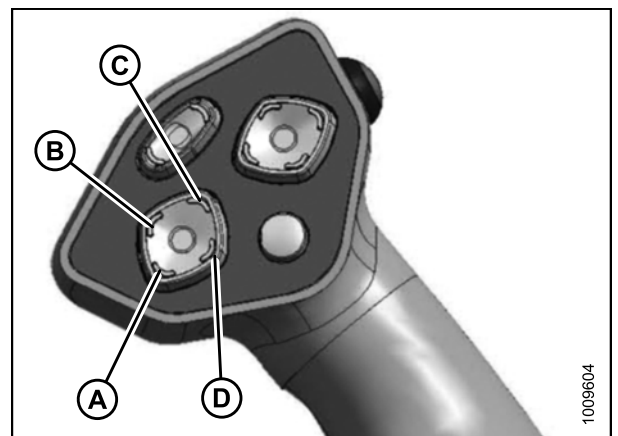


Figure 3.60: Ground Speed Lever

OPERATOR'S STATION

Reel and Disc Speed Switches

Press and hold switch (A) to increase the reel or disc speed. Press and hold switch (B) to decrease the reel or disc speed. Release switch at desired speed.

Auger Header

- A30 header: Not applicable
- A40 header: Auger speed is automatically maintained when reel speed is changed

IMPORTANT:

Reel speed on auger header **MUST NOT EXCEED** 85 rpm. Auger speed **MUST NOT EXCEED** 320 rpm.

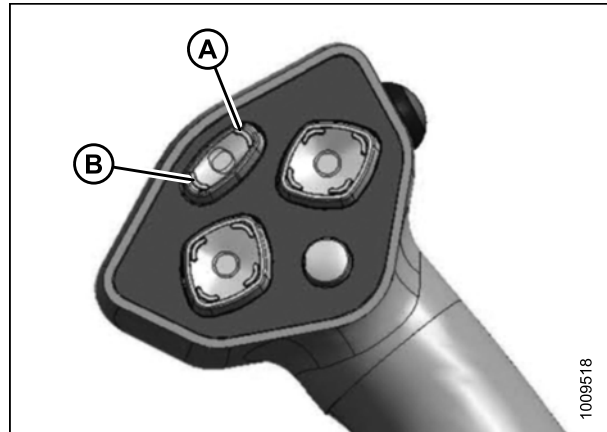


Figure 3.61: Ground Speed Lever

Draper Header

- Reel speed is limited in INDEX HEADER SPEED mode

Rotary Disc Header

- Conditioner speed automatically adjusts when DISC SPEED is changed

3.18.4 Console Header Switches

The operator's console contains switches for the following header functions:

Deck Shift / Float Preset Switch

Draper Header with Deck Shift Option

Controls deck shifting and float settings for double windrowing options with a draper header.

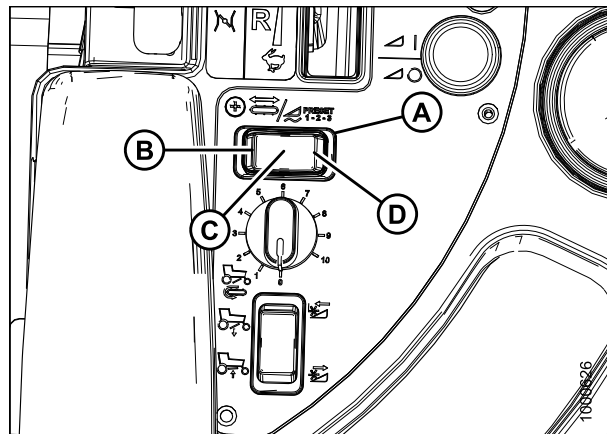


Figure 3.62: Header Switches

- | | |
|--------------------------------------|-------------------------|
| A - Deck Shift / Float Preset Switch | B - Left Side Delivery |
| C - Center Delivery | D - Right Side Delivery |

OPERATOR'S STATION

Draper Header with Fixed Decks / Auger Header / Rotary Header

Selects preprogrammed header float settings. Refer to [Float Options, page 198](#) to learn how to preset the float.

NOTE:

Refer to the section in this manual that is specific to your header for detailed switch operating modes.

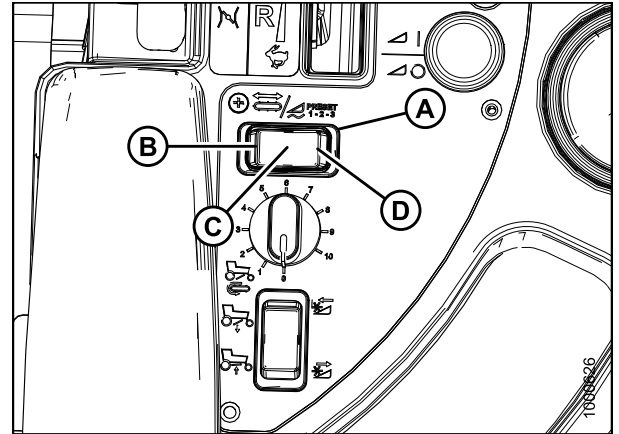


Figure 3.63: Header Switches

A - Deck Shift / Float Preset Switch
C - Float Preset 2

B - Float Preset 1
D - Float Preset 3

Double Windrow Attachment (DWA) / Swath Roller Switch (if installed)

The functions performed by the DWA/swath roller switch depend on how the windrower is equipped.

If the windrower is equipped with a double windrow attachment:

- The DWA deck is raised with switch (A) in position (C)
- The DWA deck is lowered with switch (A) in position (B)

The cab display module (CDM) must be programmed for this configuration. Refer to [Activating the Double Windrow Attachment \(DWA\), page 110](#).

Switch (A) may be used instead of the DWA switches on the ground speed lever (GSL).

The DWA draper speed is controlled with the rotary switch (D) next to the rocker switch on the operator's console.

For more information on the DWA attachment and controls, refer to [4.4.10 Double Windrowing, page 211](#).

If the windrower is equipped with a swath roller attachment:

- The roller is raised by pressing switch (A) to position (C)
- The roller is lowered by pressing switch (A) to position (B)

NOTE:

You may swap controls to the rocker switch or to the GSL handle using the programming in the CDM. Refer to [3.19.6 Cab Display Module \(CDM\) Programming, page 89](#).

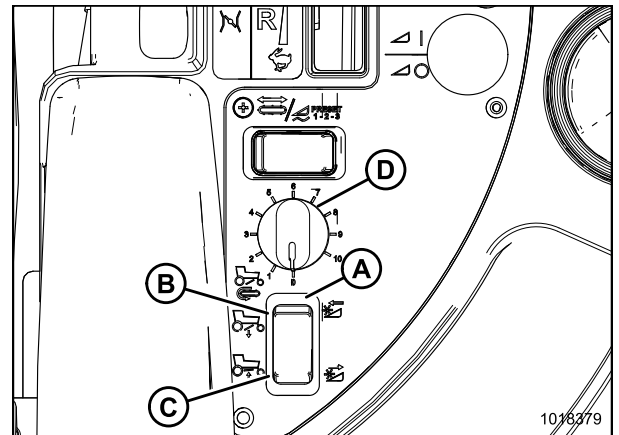


Figure 3.64: Console Switches

3.19 Cab Display Module (CDM)

3.19.1 Engine and Windrower Functions



Figure 3.65: Cab Display Module (CDM) Engine and Windrower Functions

- (A) ENGINE RPM
- (B) GROUND SPEED – mph or km/h
- (C) DISPLAY – Engine/windrower functions
- (D) HAZARD WARNING LIGHTS SWITCH – Activates hazard warning lights, cancels turn signal
- (E) SELECT SWITCH – Allows Operator to select display item on lower line; Push to SELECT
- (F) TURN SIGNAL SWITCHES – Activates turn signals on windrower and header Push-ON/Push-OFF
- (G) IGNITION SWITCH POSITIONS – Accessory / Stop / Run / Start
- (H) ENGINE WARNING LIGHTS – Engine Pre-Heat / Water In Fuel / CAUTION / Stop Engine

3.19.2 Header Functions



Figure 3.66: Cab Display Module (CDM)

- (A) DISPLAY – Header functions.
- (B) SELECT SWITCH – Allows Operator to select display item on lower line. Push to SELECT.
- (C) FLOAT SWITCH – Header Right Side: Changes header float. The system remembers setting with deck shift option if activated with float setting switch. Push + to Increase. Push – to Decrease.
- (D) FLOAT SWITCH – Header Left Side: Changes header float. The system remembers setting with deck shift option if activated with float setting switch. Push + to Increase. Push – to Decrease.
- (E) AUGER/DRAPER SPEED ADJUST: Changes auger/drapper speed INDEX with INDEX SWITCH ON. Changes auger/drapper SPEED with INDEX SWITCH OFF. Push upper switch to increase. Push lower switch to decrease.
- (F) HEADER INDEX SWITCH: Links reel and conveyor speed to ground speed. Push-ON/Push-OFF.

NOTE:

Illuminates in ON position. (Header must be engaged)

- (G) RETURN TO CUT HEIGHT SWITCH: Allows cutting height preset. Push-ON/Push-OFF.

NOTE:

Illuminates in ON position (Header must be engaged).

3.19.3 Operating Screens

The cab display module (CDM) and the windrower control module (WCM) provide information on several functions for the engine, header, and windrower. The information displayed in various operating modes is described in the following sections.



Figure 3.67: CDM Operating Screen

A - Display Selector for Upper Line
D - CDM Lower Line

B - Display
E - Display Selector for Lower Line

C - CDM Upper Line

Ignition ON, Engine Not Running

Display (Upper Line) (2–3 Seconds)	Description
HEADER DISENGAGED	Indicates HEADER DRIVE switch is OFF
IN PARK	Indicates ground speed lever (GSL) is in N-DETENT

Engine Running – At Initial Start Up

Display (upper line) (2–3 seconds)	Description
HEADER TYPE AND SIZE	Ignition start, engine running.
IN PARK	Indicates ground speed lever (GSL) in N-DETENT. On startup.

OPERATOR'S STATION

Engine-Forward, Engine Running

Display	Description
ROAD GEAR (upper line)	Ground speed range switch in high range
#####.# ENGINE HRS (upper or lower line)	Total engine operating time
#####.# UNIT HRS (upper or lower line)	Total windrower operating time
#####.# HEADER HRS (upper or lower line)	Total header operating time
#####.# TOTAL ACRES (upper or lower line) #####.# TOTAL HECT (if metric)	Total area cut by machine
##.# HEADER HEIGHT (upper or lower line)	Distance setting (00.0–10.0) between cutterbar and ground
##.# HEADER ANGLE (upper or lower line)	Angle setting (00.0–10.0) header relative to ground
### °C or F HYD OIL TEMP	Hydraulic oil temperature
##.# VOLTS (upper or lower line)	Engine electrical system operating voltage
SCROLL (lower line)	Displays above items after two to three seconds; press SELECT to cancel

Cab-Forward, Engine Running, Header Disengaged

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time
#####.# UNIT HRS	Total windrower operating time
#####.# HEADER HRS	Total header operating time
###.# SUB ACRES ###.# SUB HECTARES (if metric)	Area cut since last reset. To reset, display SUB ACRES on lower line, and hold down Program switch until display resets (five to seven seconds)
#####.# TOTAL ACRES #####.# TOTAL HECT (if metric)	Total area cut by machine
##.# HEADER HEIGHT	Distance setting (00.0–10.0) between cutterbar and ground
##.# HEADER ANGLE	Angle setting (00.0–10.0) header relative to ground
##.# L FLOAT R ##.#	Float setting (0.0–10.0)
### °C or F HYD OIL TEMP	Hydraulic oil temperature
##.# VOLTS	Engine electrical system operating voltage
SCROLL (lower line)	Displays above items after two to three seconds; press SELECT to cancel

OPERATOR'S STATION

Cab-Forward, Engine Running, Header Engaged, Auger Header Index Switch OFF

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time
#####.# UNIT HRS	Total windrower operating time
#####.# HEADER HRS	Total header operating time
##.# ACRES/HOUR ##.# HECTARES/HOUR (if Metric)	Actual cutting rate in acres (hectares)/hour
###.# SUB ACRES ###.# SUB HECTARES (if Metric)	Area cut since last reset; to reset, display SUB ACRES on lower line, and hold down PROGRAM switch until display resets (five to seven seconds)
##### TOTAL ACRES ##### TOTAL HECT (if Metric)	Total area cut by machine
###.# REEL RPM ###.# REEL SENSOR	Reel rotational speed Sensor disabled. RPM and SENSOR alternate at one second intervals
##.# AUGER SPEED	Auger rotational speed (4.7–9.9)
#### KNIFE SPEED #### KNIFE SENSOR	Knife speed in strokes per minute Sensor disabled. SPEED and SENSOR alternate at one second intervals
##.# HEADER HEIGHT ##.# HEADER SENSOR	Distance setting (00.0–10.0) between cutterbar and ground Sensor disabled. HEIGHT and SENSOR alternate at one second intervals.
##.# HEADER ANGLE ##.# HEADER SENSOR	Angle setting (00.0–10.0) header relative to ground Sensor disabled. ANGLE and SENSOR alternate at one second intervals
##.# L FLOAT R ##.# FLOAT SENS DISABLED	Left and right float setting (0.0–10.0) Sensor disabled
LOAD ■■■■ ####	Bar graph representing hydraulic operating pressure. Full scale is preprogrammed overload pressure (2500–5000 psi). If sensor disabled, LOAD does not display ⁵
### °C or F HYD OIL TEMP ### °C or F HYD TEMP	Hydraulic oil temperature Sensor disabled. TEMP and SENSOR alternate at one second intervals
##.# VOLTS	Engine electrical system operating voltage
SCROLL SUB-MENU (lower line only) #### KNIFE SPEED ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ ####	Displays sub-menu after two to three seconds. Press SELECT to cancel. Scroll through sub-menu display with CDM switch

5. The LOAD sensor to monitor knife/conditioner circuit pressure is optional. To monitor reel/auger circuit pressure, relocate sensor as per kit instruction MD #169031, which is available through your Dealer.

OPERATOR'S STATION

Cab-Forward, Engine Running, Header Engaged, Auger Header Index Switch ON

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time
#####.# UNIT HRS	Total windrower operating time
#####.# HEADER HRS	Total header operating time
##.# ACRES/HOUR ##.# HECTARES/HOUR (if metric)	Actual cutting rate in acres (hectares)/hour
###.# SUB ACRES ###.# SUB HECTARES (if metric)	Area cut since last reset; to reset, display SUB ACRES on lower line, and hold down PROGRAM switch until display resets five to seven seconds)
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Total area cut by machine
##.## ##.# REEL IND. ##.## REEL SENSOR	Reel peripheral speed along with ground speed in mph or km/h Sensor disabled. IND and SENSOR alternate at one second intervals
##.# AUGER SPEED ##.# AUGER SENSOR	Auger rotational speed (4.7–9.9) Sensor disabled. SPEED and SENSOR alternate at one second intervals
#### KNIFE SPEED #### KNIFE SENSOR	Knife speed In strokes per minute Sensor disabled. SPEED and SENSOR alternate at one second intervals
##.# HEADER HEIGHT ##.# HEADER SENSOR	Distance setting (00.0–10.0) between cutterbar and ground Sensor disabled. HEIGHT and SENSOR alternate at one second intervals
##.# HEADER ANGLE ##.# TILT SENSOR	Angle setting (00.0–10.0) header relative to ground. Sensor disabled. ANGLE and SENSOR alternate at one second intervals
##.# L FLOAT R ##.# FLOAT SENS DISABLED (if sensor disabled)	Left and right float setting (0.0–10.0) Sensor disabled
LOAD ■■■■ #####	Bar graph representing hydraulic operating pressure. Full scale is preprogrammed overload pressure (2500–5000 psi). If sensor disabled, LOAD does not display ⁶
### °C or F HYD OIL TEMP ### °C or F HYD TEMP	Hydraulic oil temperature Sensor disabled. TEMP and SENSOR alternate at one second intervals

6. The LOAD sensor to monitor knife/conditioner circuit pressure is optional. To monitor reel/auger circuit pressure, relocate sensor as per kit instruction MD #169031, which is available through your Dealer.

OPERATOR'S STATION

Display (Lower or Upper Line)	Description
##.# VOLTS	Engine electrical system operating voltage
SCROLL SUB-MENU (lower line only) #### KNIFE SPEED ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ ####	Displays sub-menu after two to three seconds. Press SELECT to cancel. Scroll through sub-menu display with CDM switch

Engine Running, Header Engaged, Auger Header

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time
#####.# UNIT HRS	Total windrower operating time
#####.# HEADER HRS	Total header operating time
##.# ACRES/HOUR ##.# HECTARES/HOUR (if metric)	Actual cutting rate in acres (hectares)/hour
###.# SUB ACRES ###.# SUB HECTARES (if Metric)	Area cut since last reset
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Total area cut by machine
##.# REEL RPM ##.# REEL SENSOR (flashing)	Reel rotational speed. Optional ⁷ Sensor disabled.
##.# AUGER SPEED	Auger rotational speed (4.7–9.9)
#### KNIFE SPEED #### KNIFE SENSOR (flashing)	Knife speed In strokes per minute. Optional ⁷ . Sensor disabled
##.# HEADER HEIGHT ##.# HEADER SENSOR (flashing)	Distance setting (00.0–10.0) between cutterbar and ground. Sensor disabled
##.# HEADER ANGLE ##.# ANGLE SENSOR	Angle setting (00.0–10.0) header relative to ground. Optional ⁷ . Sensor disabled
##.# VOLTS	Engine electrical system operating voltage
FUEL ■■■■ ■■■■	Level of fuel in tank
ENGINE TEMP ### °F ENGINE TEMP ### °C (if metric)	Engine coolant temperature
SCROLL SUB-MENU (lower line only) #### KNIFE SPEED ##.# AUGER SPEED ##.# REEL RPM ##.# HEADER HEIGHT	Displays sub-menu after 2–3 Seconds. Press SELECT to cancel. Scroll through sub-menu display with CDM switch. Knife speed is optional ⁷ Reel rpm is optional ⁷

7. Optional: available with expansion module installation – Whole Goods bundle MD #B4666.

OPERATOR'S STATION

Cab-Forward, Engine Running, Header Engaged, Draper Header, Index Switch OFF

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time
#####.# UNIT HRS	Total windrower operating time
#####.# HEADER HRS	Total header operating time
##.# ACRES/HOUR ##.# HECTARES/HOUR (if metric)	Actual cutting rate in acres (hectares)/hour
###.# SUB ACRES ###.# SUB HECTARES (if metric)	Area cut since last reset. To reset, display SUB ACRES on lower line, and hold down program switch until display resets (five to seven seconds)
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Total area cut by machine
###.# REEL MPH ###.# REEL KPH (if metric) ###.# REEL SENSOR (flashing)	Reel peripheral speed Sensor disabled. MPH or KPH and SENSOR alternate at one second intervals
##.# DRAPER SPEED	Draper speed (0.0–11.0)
#### KNIFE SPEED #### KNIFE SENSOR	Knife speed In strokes per minute Sensor disabled. SPEED and SENSOR alternate at one second intervals
##.# HEADER HEIGHT ##.# HEADER SENSOR	Distance setting (00.0–10.0) between cutterbar and ground Sensor disabled. HEIGHT and SENSOR alternate at one second intervals
##.# HEADER ANGLE ##.# HEADER SENSOR	Angle setting (00.0–10.0). Header relative to ground Sensor disabled. ANGLE and SENSOR alternate at one second intervals
##.# L FLOAT R ##.# FLOAT SENS DISABLED	Left and right float setting (0.0–10.0) Sensor disabled
### °C or F HYD OIL TEMP ### °C or F HYD SENSOR	Hydraulic oil temperature Sensor disabled. TEMP and SENSOR alternate at one second intervals
LOAD ■■■■ #####	Bar graph representing hydraulic operating pressure. Full scale is pre-programmed overload pressure (2500–5000 psi). If sensor disabled, LOAD does not display ⁸
##.# VOLTS	Engine electrical system operating voltage

8. The LOAD sensor to monitor knife/conditioner circuit pressure is optional. To monitor reel/auger circuit pressure, relocate sensor as per kit instruction MD #169031, which is available through your Dealer.

OPERATOR'S STATION

Display (Lower or Upper Line)	Description
SCROLL SUB-MENU (lower line only) #### KNIFE SPEED ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ #### ##.# REEL MPH ##.# DRAPER SPEED	Displays sub-menu after two to three seconds. Press SELECT to cancel. Scroll through sub-menu display with CDM switch
KNIFE SPD OVERLOAD	Knife or disc speed drops below programmed value

Cab-Forward, Engine Running, Header Engaged, Draper Header Index Switch ON

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time
#####.# UNIT HRS	Total windrower operating time
#####.# HEADER HRS	Total header operating time
##.# ACRES/HOUR ##.# HECTARES/HOUR (if metric)	Actual cutting rate in acres (hectares)/hour
###.# SUB ACRES ###.# SUB HECTARES (if metric)	Area cut since last reset. To reset, display SUB ACRES on lower line and hold down Program switch until display resets (five to seven seconds)
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Total area cut by machine
##.# ##.# REEL IND REEL.SENSOR	Reel peripheral speed along with ground speed in mph or km/h Sensor disabled. IND and SENSOR alternate at one second intervals
##.# ##.# DRAP INDX	Draper speed along with ground speed in mph or km/h
#### KNIFE SPEED #### KNIFE SENSOR	Knife speed in strokes per minute. Sensor disabled SPEED and SENSOR alternate at one second intervals
##.# HEADER HEIGHT ##.# HEADER SENSOR	Distance setting (00.0–10.0) between cutterbar and ground Sensor disabled. HEIGHT and SENSOR alternate at one second intervals
##.# HEADER ANGLE ##.# HEADER SENSOR	Angle setting (00.0–10.0) header relative to ground Sensor disabled. ANGLE and SENSOR alternate at one second intervals.
##.# L FLOAT R ##.# FLOAT SENS DISABLED	Left and right float setting (0.0–10.0) Sensor disabled
LOAD ■■■■ ####	Bar graph representing hydraulic operating pressure. Full scale is preprogrammed overload pressure (2500–5000 psi). If sensor disabled, LOAD does not display ⁹
##.# VOLTS	Engine electrical system operating voltage

9. The LOAD sensor to monitor knife/conditioner circuit pressure is optional. To monitor reel/auger circuit pressure, relocate sensor as per kit instruction MD #169031, which is available through your Dealer.

OPERATOR'S STATION

Display (Lower or Upper Line)	Description
SCROLL SUB-MENU (lower line only) #### KNIFE SPEED ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ ##.##.## REEL IND ##.#.##.## DRAP INDX	Displays sub-menu after two to three seconds. Press SELECT to cancel Scroll through sub-menu display with CDM switch
##.## REEL MIN RPM (lower line)	Reel speed drops below programmed set-point
MINIMUM (lower line)	Reel speed at zero ground speed

Cab-Forward, Engine Running, Header Engaged, Rotary Header Installed

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time
#####.# UNIT HRS	Total windrower operating time
#####.# HEADER HRS	Total header operating time
##.# ACRES/HOUR ##.# HECTARES/HOUR (if metric)	Actual cutting rate in acres (hectares)/hour
###.# SUB ACRES ###.# SUB HECTARES (if metric)	Area cut since last reset; to reset, display SUB ACRES on lower line, and hold down PROGRAM switch until display resets (five to seven seconds)
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Total area cut by machine
#### DISC RPM ##.## DISC SENSOR	Disc rotational speed Sensor disabled. RPM and SENSOR alternate at one second intervals
##.# HEADER HEIGHT ##.# HEIGHT SENSOR	Distance setting (00.0–10.0) between cutterbar and ground Sensor disabled. HEIGHT and SENSOR alternate at one second intervals
##.# HEADER ANGLE ##.# HEADER SENSOR	Angle setting (00.0–10.0) header relative to ground Sensor disabled. ANGLE and SENSOR alternate at one second intervals
##.# L FLOAT R ##.# FLOAT SENS DISABLED	Left and right float setting (0.0–10.0) Sensor disabled
LOAD ■■■■ ####	Bar graph representing hydraulic operating pressure. Full scale is preprogrammed overload pressure (2500–5000 psi). If sensor disabled, LOAD does not display ¹⁰
### °C or F HYD OIL TEMP ### °C or F HYD TEMP	Hydraulic oil temperature Sensor disabled. TEMP and SENSOR alternate at one second intervals

10. The LOAD sensor to monitor knife/conditioner circuit pressure is optional-installed. To monitor reel/auger circuit pressure, relocate sensor as per kit instruction MD #169031, which is available through your Dealer.

OPERATOR'S STATION

Display (Lower or Upper Line)	Description
##.# VOLTS	Engine electrical system operating voltage
SCROLL SUB-MENU (lower line only) #### DISC RPM ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ ####	Displays sub-menu after two to three seconds. Press SELECT to cancel. Scroll through sub-menu display with CDM switch

Miscellaneous Operational Information

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Upper Line)	Description
HEADER DISENGAGED	Header drive is disengaged
##.# FOOT DISK	AUGER or DRAPER will appear in place of DISK, depending on type of header attached
IN PARK	GSL in N-DETENT position
< LEFT TURN ■	Indicates left turn when left arrow is pressed on CDM (Engine-forward mode only ¹¹)
■ RIGHT TURN >	Indicates right turn when right arrow is pressed on CDM (Engine forward mode only ¹²)
■ HAZARD ■	Indicates hazard warning lights are on when hazard button is pressed on CDM
HEADER REVERSE	Header drive running in reverse
HEADER ENGAGED	Header drive engaged
ROAD GEAR	With HIGH RANGE selected on Console switch (Engine-forward only ¹²)

11. If road light kit is not installed, CDM will display E135 LEFT STOP LAMP as a malfunction in CAB-FORWARD mode.

12. If road light kit is not installed, CDM will display E134 RIGHT STOP LAMP as a malfunction in CAB-FORWARD mode.

3.19.4 Cab Display Module (CDM) Warning and Alarms

The CDM displays warnings and sounds alarms to notify of abnormal windrower status at startup when the ignition is turned ON, and at engine operating speeds above 500 rpm.

Engine Warning Lights



Figure 3.68: CDM Engine Warning Lights

A - Engine Preheat
D - Stop

B - Water in Fuel
E - Display

C - Caution

- ENGINE PRE-HEAT: Illuminates yellow. Wait to start engine.
- WATER IN FUEL: Illuminates yellow. Service recommended.
- CAUTION: Illuminates yellow. Prompt attention is required. Refer to display code.
- STOP: Illuminates red. Stop engine immediately. Refer to display code.
- DISPLAY: Displays malfunction code. Refer to [8.4 Engine Error Codes, page 480](#) or your Dealer.

OPERATOR'S STATION

Display Warnings and Alarms

The cab display module (CDM) warnings and alarms indicate abnormal windrower conditions.



Figure 3.69: CDM Display Warnings and Alarms

Display (A)	Flashing	Alarm Tone	Description
BRAKE OFF	X	Short beep with each flash	Engine running, GSL in N-DETENT, brake pressure switch or brake switch relay fault
BRAKE ON	X	Short beep with each flash	Ground speed lever (GSL) out of N-DETENT, but interlock switch remains closed to apply brake
BRAKE SW FAILURE	X	Short beep with each flash	Ignition ON/engine not running, brake switch and relay closed
CAB-FORWARD SW ON/ ENG-FORWARD SW ON	X	Messages flash alternately	Both seat switches activated
CENTER STEERING		Two beeps per second	GSL or interlock switches not closed with key ON/engine OFF
DISENGAGE HEADER RE-ENGAGE <1800 RPM>	X	None	R80/R85 - Engine rpm above 1800 rpm when engaging header
ENGINE AIR FILTER	X	Single loud tone for 10 seconds, Repeats every 30 minutes until condition is corrected	Engine air filter requires servicing

OPERATOR'S STATION

Display (A)	Flashing	Alarm Tone	Description
ENGINE TEMPERATURE	X	Ongoing intermittent moderate tone until temperature is below 102°C (215°F)	Engine temperature over 104°C (220°F)
HEADER DISENGAGED		None	Normal
DISENGAGE HEADER	X	None	Header switch is in the ON position when ignition switch is turned ON
HEADER OIL PRESS	X	Continuous loud tone until oil pressure is regained	Low header charge oil pressure causes header to shut down: header ON switch must be moved to OFF position and then to ON position to restart the header
HYDRAULIC FILTER	X	Single loud tone for 10 seconds, Repeats every 15 minutes until condition is corrected	Excessive pressure increase across hydraulic oil filter
### °C or F HYD OIL COLD	X	Tone sounds with each flash for 5 seconds and then stops for 1 minute: flashing continues if oil still cold after 1 minute, tone sounds again	Hydraulic oil temp <10°C (50°F)
### °C or F HYD OIL HOT	X	Tone with each flash for 5 seconds at 104°C (220°F) then tone stops for 1 minute while flashing continues: if oil still hot after 1 minute, tone sounds again. Flashing and steady tone at temperatures of 110°C (230°F) and higher	Hydraulic oil temp >104°C (220°F) but <110°C (230°F)
IN PARK	X	One short beep	GSL in N-DETENT, steering wheel centered, and brakes are engaged
KNIFE SPEED OVERLOAD	X	Short beep with each flash until condition is corrected	Machine overload: knife or disc speed drops below programmed value
LOCK SEAT BASE	X	None	Seat base not detected in cab or engine-forward position
LOW HYDRAULIC OIL	X	Continuous loud tone for 5 seconds, If condition is not rectified, single loud tone every 5 minutes	Low hydraulic oil level, header shuts down automatically if engaged: Header ON switch must be moved to OFF position and then to ON position to restart the header
NO HEADER		None	Header is not detected

OPERATOR'S STATION

Display (A)	Flashing	Alarm Tone	Description
NO OPERATOR		Continuous tone	Operator not detected in seat with header engaged or out of N-DETENT: engine shutdown after 5 seconds
NO OPERATOR ENGINE SHUT DOWN		Continuous tone	Engine shutdown when Operator not detected in seat with machine moving under 8 km/h (5 mph)
NOT IN PARK	X	Short beep with each flash	GSL or interlock switches not closed with key ON/engine OFF
PLACE GSL INTO N		Two beeps per second	GSL or interlock switches not closed with key ON/engine OFF
SLOW DOWN	X	Short beep with each flash	Ground speed is greater than or equal to 40 km/h (25 mph): Operator should pull back on the GSL to reduce ground speed
TRANS OIL PRESS	X	Continuous loud tone until oil pressure is regained	Low transmission charge oil pressure
### LOW VOLTS	X	Single loud tone for 10 seconds	Voltage below 11.5
### HIGH VOLTS	X	Single loud tone for 10 seconds	Voltage above 15.5

3.19.5 Programming Guidelines

Use the following guidelines when programming the cab display module (CDM):

- The monitoring system requires programming for each header.
- The **HEADER MUST BE ATTACHED TO THE WINDROWER** so the CDM recognizes the header type.
- The transmission must be in Neutral (GSL in N-DETENT) to program the system with the engine running.
- The ignition switch must be in the RUN position to program the system when the engine is not running.
- The system only needs to be programmed once for each header. Most functions are factory preset, but the Operator can make changes to suit windrowing conditions or modifications to the machine.
- The windrower input values are provided in this manual. Header function values are in the header operator's manual.
- The CDM must be in programming mode to view the program menus. Press PROGRAM and SELECT simultaneously on the CDM to enter programming mode. Exit programming mode at any time by pressing PROGRAM or by turning ignition to OFF.
- Refer to [3.19.6 Cab Display Module \(CDM\) Programming, page 89](#) for a detailed list of menu items.

NOTE:

Contact your MacDon Dealer for information about software updates to the electronic modules. Your Dealer will have the necessary interface tools and access to the latest software upgrades.

3.19.6 Cab Display Module (CDM) Programming



Figure 3.70: CDM

A - Side Display
D - Menu Item Scroll Forward

B - Main Display
E - Menu Item Scroll Backward

C - Select Switch
F - Program Switch

Side Display: Displays software revision status.

- Upper Line – C### (CDM)
- Lower Line – M### (WCM)

Main Display: Displays menu item and selection¹³.

- Upper Line – Menu Item
- Lower Line – Selection

Select Switch: Places monitor into Program Mode with PROGRAM switch. Press to accept menu item and advance to next item.

Menu Item Scroll Forward: Displays value under menu item.

- Push to scroll forward
- Hold down for fast scroll¹⁴

Menu Item Scroll Backward: Displays value under menu item.

- Push to scroll backward
- Hold down for fast scroll¹⁴

Program Switch: Places monitor into program mode. Press while pressing select switch.

13. The current selection is flashing.

14. Fast scroll applies only when changing KNIFE SPEED, OVERLOAD PRESSURE, and TIRE SIZE.

OPERATOR'S STATION

NOTE:

Contact your MacDon Dealer for information regarding software updates to the electronic modules. Your Dealer will have the necessary interface tools and access to the latest software upgrades.

NOTE:

The following menus are available when ignition key is set to RUN:

- WINDROWER SETUP
- CAB DISPLAY SETUP
- DIAGNOSTIC MODE

The CALIBRATE SENSORS menu is available only when engine is running.

3.19.7 Cab Display Options

The display and sound features of the cab display module (CDM) can be adjusted to suit each particular Operator.

NOTE:

The procedures listed in this section are current for cab display module (CDM) software version C500 and windrower control module (WCM) M221. The WCM is supplied preloaded with the latest released version of the operating software. Any subsequent updates will be made available via internet download from the MacDon Dealer Portal (<https://portal.macdon.com>).

NOTE:

Screens may appear differently if running newer or older versions of software, and not all features are available on every machine.

Setting the Cab Display Language

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

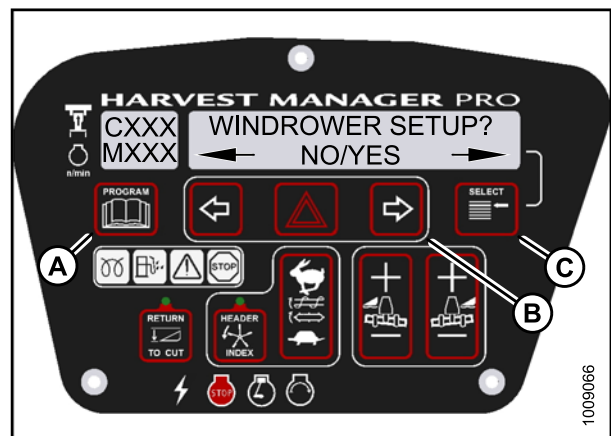


Figure 3.71: M155 CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (B) until CAB DISPLAY SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

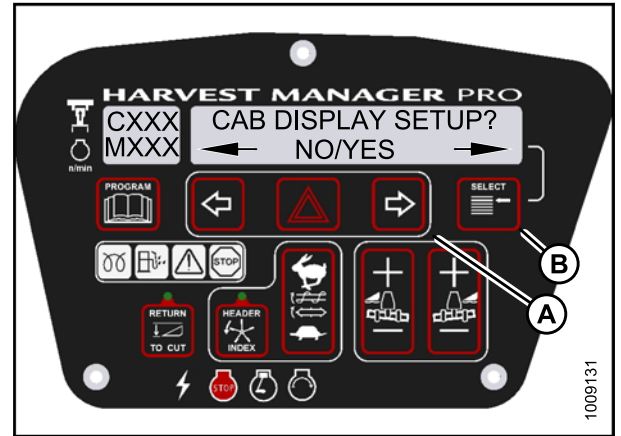


Figure 3.72: M155 Cab Display Setup

- Press right (C) arrow select YES. Press SELECT (D).
 - DISPLAY LANGUAGE? is displayed on the upper line.
 - Default language is displayed on the lower line.
- Press left (B) or right (C) arrow to select preferred language.

NOTE:

English, Russian, and Spanish language options are available on windrowers. Not all language options are available on all windrowers.

- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next CAB DISPLAY SETUP? action.

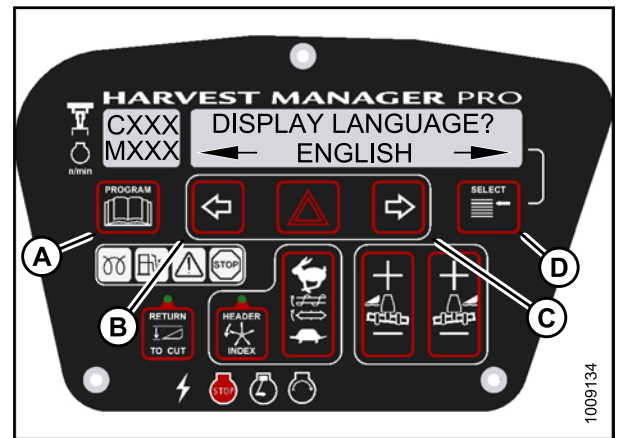


Figure 3.73: M155 Display Language

Changing the Windrower Display Units

- Turn ignition key to RUN, or start the engine.
- Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

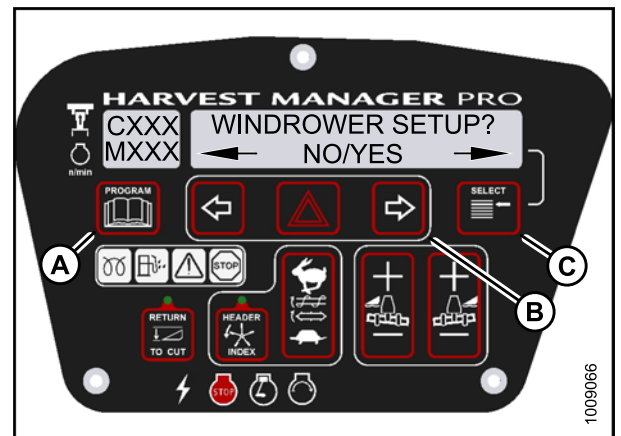


Figure 3.74: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until CAB DISPLAY SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).
 - DISPLAY LANGUAGE? is displayed on the upper line.

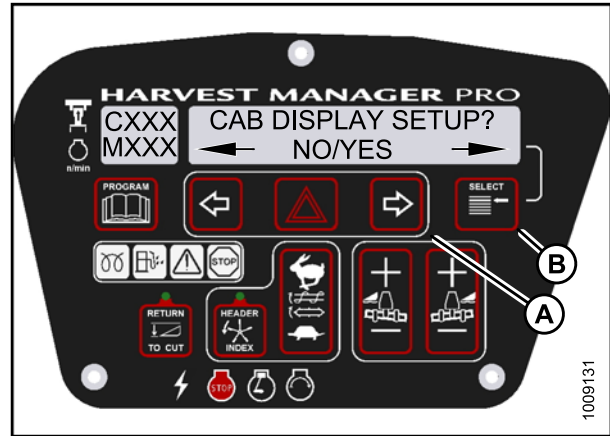


Figure 3.75: M155 Cab Display Setup

5. Press SELECT (D) until DISPLAY UNITS? is displayed on the upper line.
 - Default setting is displayed on the lower line.
6. Press left (B) or right (C) arrow to select either METRIC or IMPERIAL speed display.
7. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next CAB DISPLAY SETUP? action.

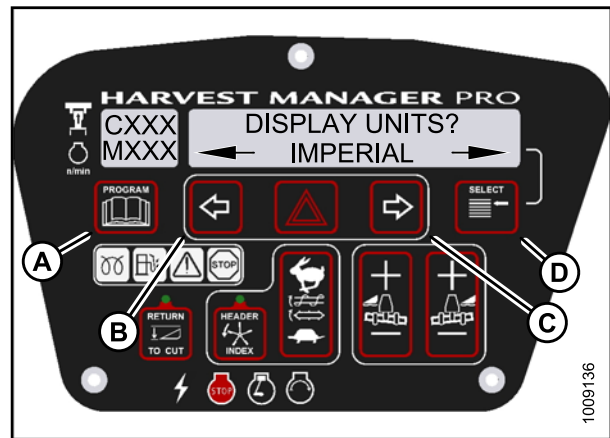


Figure 3.76: M155 Display Units

Adjusting the Cab Display Buzzer Volume

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

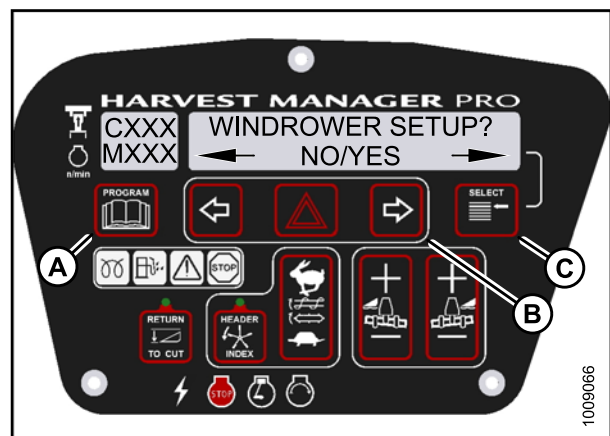


Figure 3.77: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until CAB DISPLAY SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).
 - DISPLAY LANGUAGE? is displayed on the upper line.

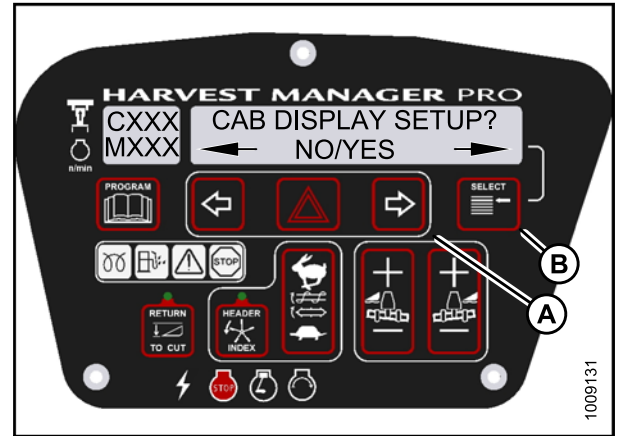


Figure 3.78: M155 Cab Display Setup

5. Press SELECT (D) until BUZZER VOLUME is displayed on the upper line.
 - Previous setting is displayed on the lower line.
6. Press left (B) or right (C) arrows to adjust buzzer volume.
7. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next CAB DISPLAY SETUP? action.

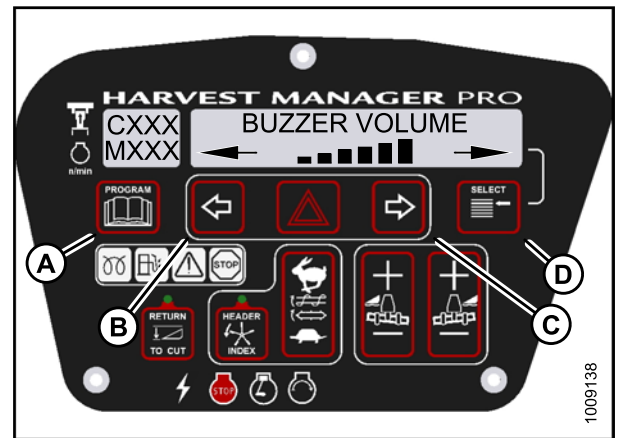


Figure 3.79: M155 Buzzer Volume

Adjusting the Cab Display Backlighting

The backlighting feature brightens the display screen helping you read the cab display module (CDM) in low light situations.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

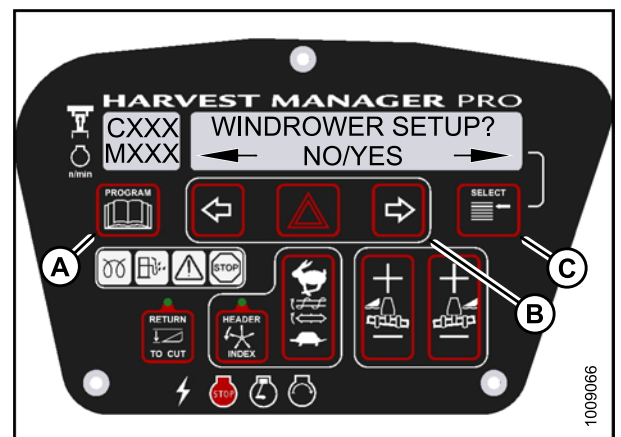


Figure 3.80: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until CAB DISPLAY SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).
 - DISPLAY LANGUAGE? is displayed on the upper line.

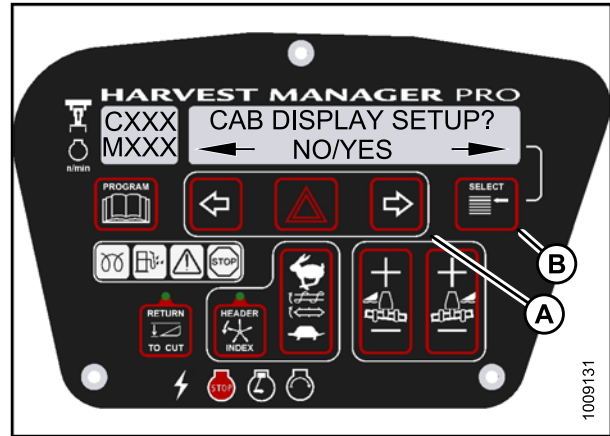


Figure 3.81: M155 Cab Display Setup

5. Press SELECT (D) until BACKLIGHTING is displayed on the upper line.
 - Default setting is displayed on the lower line.
6. Press left (B) or right (C) arrows to adjust display backlighting.
7. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next CAB DISPLAY SETUP? action.

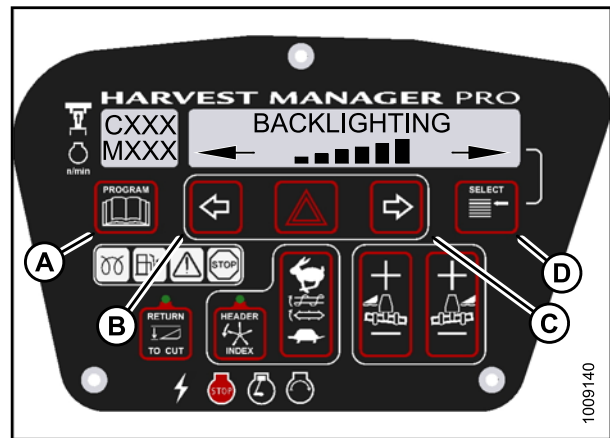


Figure 3.82: M155 Backlighting

Adjusting the Cab Display Contrast

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

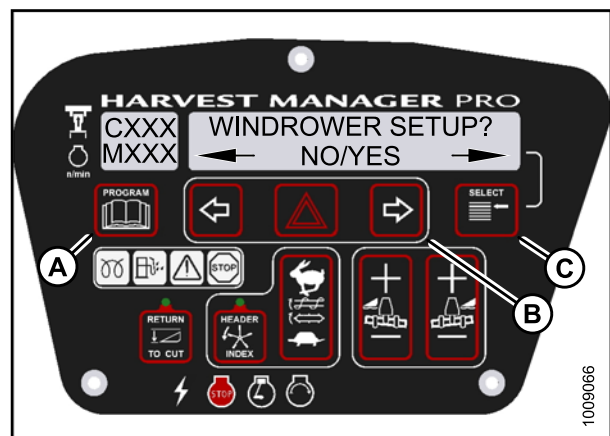


Figure 3.83: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until CAB DISPLAY SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).
 - DISPLAY LANGUAGE? is displayed on the upper line.

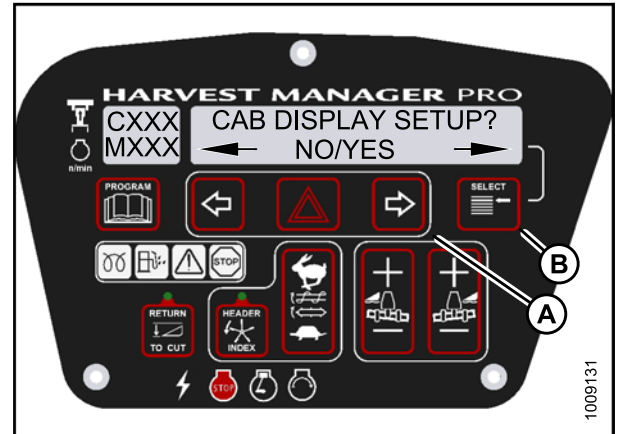


Figure 3.84: M155 Cab Display Setup

5. Press SELECT (D) until DISPLAY CONTRAST is displayed on the upper line.
 - Default setting is displayed on the lower line.
6. Press left (B) or right (C) arrows to adjust display contrast.
7. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next CAB DISPLAY SETUP? action.

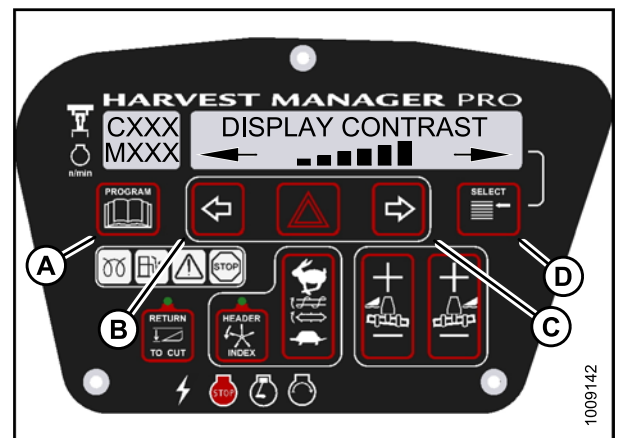


Figure 3.85: M155 Display Contrast

3.19.8 Calibrating the Header Sensors

Sensor calibration programs the windrower control module (WCM) with settings for the attached header.

Calibrating the Header Height Sensor

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- The engine **MUST** be running to perform this procedure.

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
3. Press SELECT (C) until CALIBRATE SENSORS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

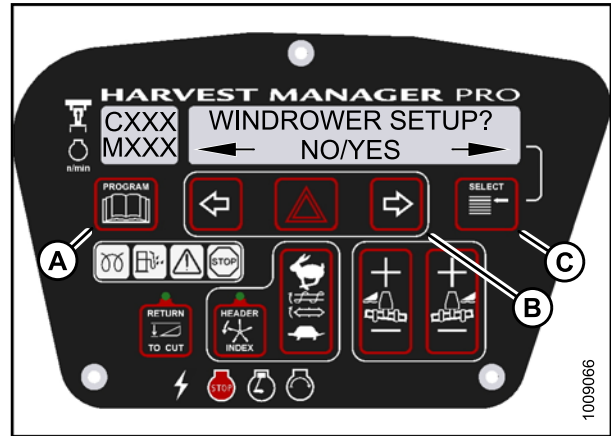


Figure 3.86: M155 CDM Programming Buttons

4. Press right (B) arrow to select Yes. Press SELECT (C).
 - TO CALIBRATE SELECT is displayed in upper line.
5. Press left (A) or right (B) arrow until HEADER HEIGHT is displayed on the lower line. Press SELECT (C).
 - CALIBRATING HEIGHT is displayed on the upper line.
 - RAISE HEADER HOLD is displayed on the lower line.



Figure 3.87: M155 Header Height Calibration

CAUTION

Check to be sure all bystanders have cleared the area.

6. Press and hold the HEADER UP (C) button on the ground speed lever (GSL).
 - CALIBRATING HEIGHT is displayed on the upper line.
 - RAISE HEADER HOLD is displayed on the lower line.

NOTE:

The word HOLD will flash during calibration. RAISE HEADER DONE will display on the lower line once calibration is complete.

7. Release the HEADER UP (C) button.
 - HEIGHT SENSOR CAL is displayed on the upper line.
 - PRESS LOWER HEADER is displayed on the lower line.

8. Press and hold HEADER DOWN (A) button on GSL.

NOTE:

The word HOLD will flash during calibration. HT SENSOR COMPLETE will display on the lower line once calibration is complete.

9. Release HEADER DOWN (A) button.
 - TO CALIBRATE SELECT is displayed on the upper line.
 - HEADER HEIGHT is displayed on the lower line.
10. Press right arrow to select next header sensor calibration or STOP & EXIT. Press SELECT. Refer to [Calibrating the Header Tilt Sensor, page 98](#) or [Calibrating the Header Float Sensors, page 100](#).
11. Press PROGRAM to exit Programming Mode.

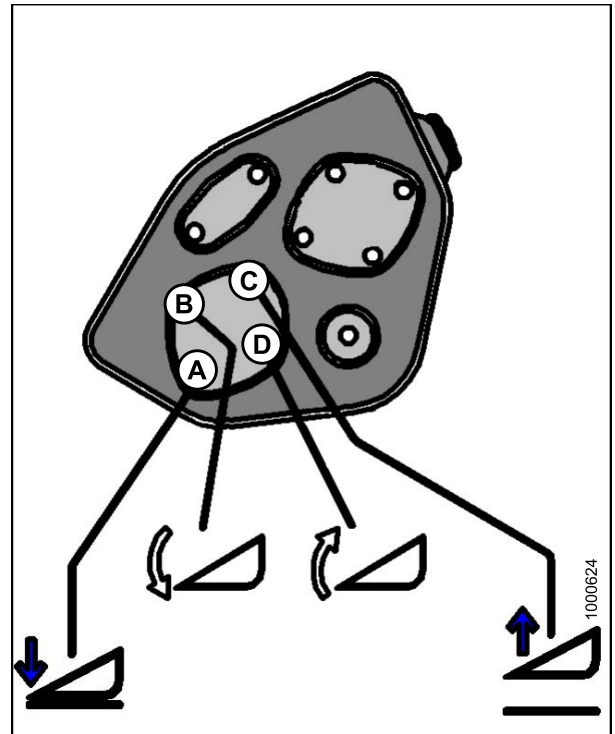


Figure 3.88: Header Height Controls on Ground Speed Lever

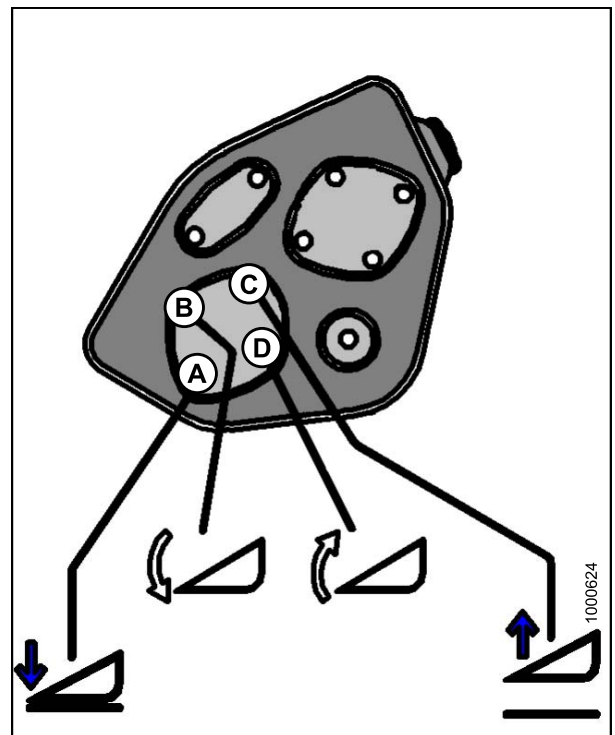


Figure 3.89: Header Height Controls on Ground Speed Lever

OPERATOR'S STATION

Calibrating the Header Tilt Sensor

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. Refer to [4.5 Attaching and Detaching Headers, page 213](#).
- This procedure requires installation of the optional Hydraulic Center-Link (MD #B4650) .
- The engine **MUST** be running to perform this procedure.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
3. Press SELECT (C) until CALIBRATE SENSORS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

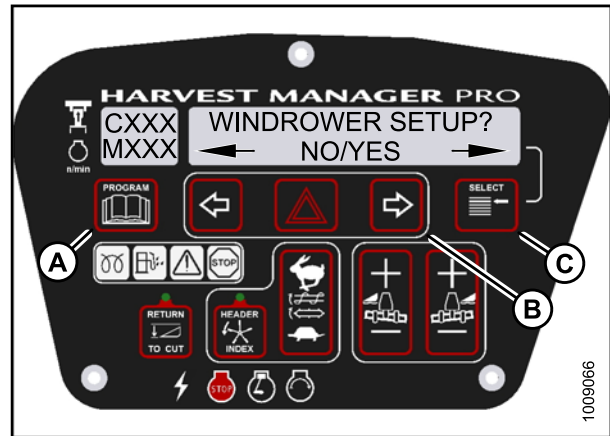


Figure 3.90: M155 CDM Programming Buttons

4. Press right (B) arrow to select YES. Press SELECT (C).
 - TO CALIBRATE SELECT is displayed in upper line.
5. Press left (A) or right (B) arrow until HEADER TILT is displayed on the lower line. Press SELECT (C).
 - HDR TILT SENSOR CAL is displayed on the upper line.
 - EXTEND TILT TO START is displayed on the lower line.



Figure 3.91: M155 Header Tilt

CAUTION

Check to be sure all bystanders have cleared the area.

6. Press and hold the HEADER TILT EXTEND (B) button on the ground speed lever (GSL).
 - CALIBRATING TILT is displayed on the upper line.
 - EXTEND TILT HOLD is displayed on the lower line.

NOTE:

The word HOLD will flash during calibration. HEADER TILT DONE will display on the lower line once calibration is complete.

7. Release the HEADER TILT EXTEND (B) button.
 - HEADER TILT SENSOR CAL is displayed on upper line.
 - PRESS RETRACT TILT is displayed on the lower line.

8. Press and hold HEADER TILT RETRACT (D) button on GSL.
 - CALIBRATING TILT is displayed on the upper line.
 - RETRACT TILT HOLD is displayed on the lower line.

NOTE:

The word HOLD will flash during calibration. HEADER TILT COMPLETE will display on the lower line once calibration is complete.

9. Release HEADER TILT RETRACT (D) button.
 - TO CALIBRATE SELECT is displayed on the upper line.
 - HEADER TILT is displayed on the lower line.
10. Press right arrow to select next header sensor calibration or STOP & EXIT. Press SELECT. Refer to [Calibrating the Header Height Sensor, page 95](#) or [Calibrating the Header Float Sensors, page 100](#).
11. Press PROGRAM to exit Programming Mode.

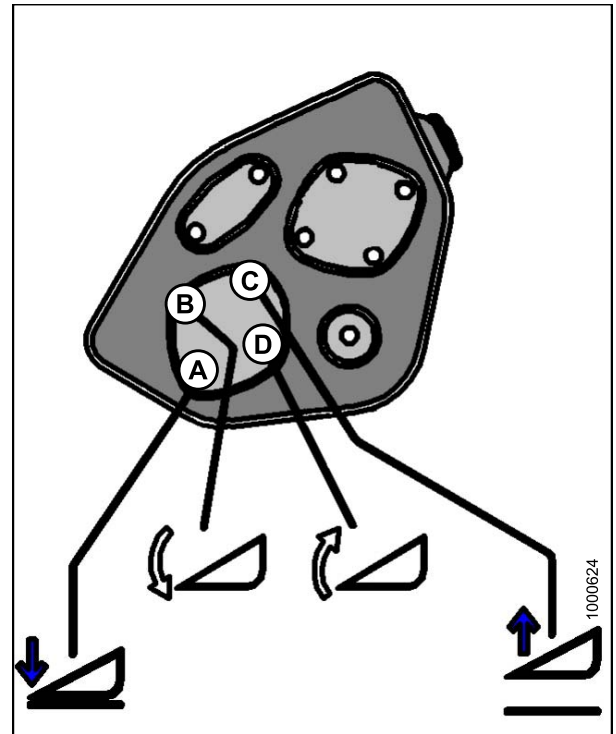


Figure 3.92: Header Tilt Controls on Ground Speed Lever

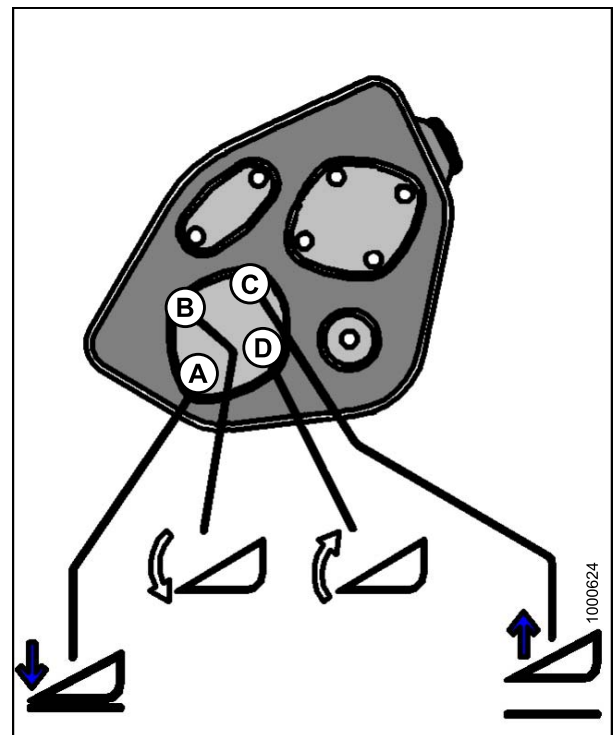


Figure 3.93: Header Tilt Controls on Ground Speed Lever

OPERATOR'S STATION

Calibrating the Header Float Sensors

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

- The Operator can use the left or right FLOAT buttons on the cab display module (CDM) to perform this procedure.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
3. Press SELECT (C) until CALIBRATE SENSORS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

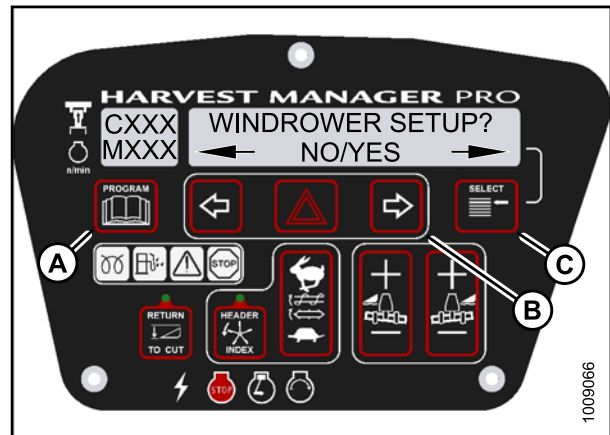


Figure 3.94: M155 CDM Programming Buttons

4. Press right (B) arrow to select Yes. Press SELECT (C).
 - TO CALIBRATE SELECT is displayed in upper line.
5. Press left (A) or right (B) arrow until HEADER FLOAT is displayed on the lower line. Press SELECT (C).
 - CALIBRATING FLOAT is displayed on the upper line.
 - PRESS FLOAT + TO START is displayed on the lower line.

CAUTION

Check to be sure all bystanders have cleared the area.

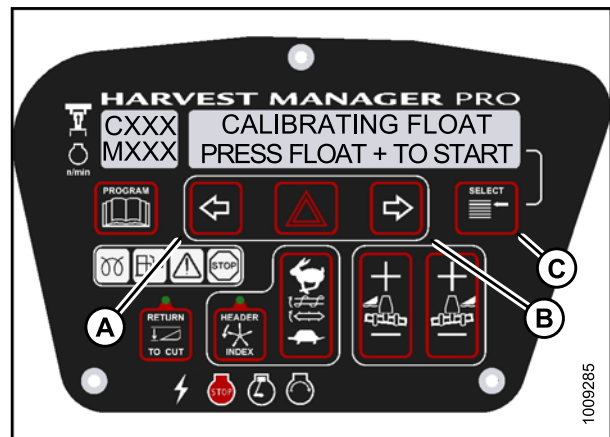


Figure 3.95: M155 Header Float

OPERATOR'S STATION

- Press and hold FLOAT + button (A) on the CDM.
 - CALIBRATING FLOAT is displayed on the upper line.
 - FLOAT (+) HOLD is displayed on the lower line.

NOTE:

The word HOLD will flash during calibration.
FLOAT (+) DONE will display on the lower line once calibration is complete.

- Release the FLOAT + button (A).
 - CALIBRATING FLOAT is displayed on the upper line.
 - FLOAT (-) HOLD is displayed on the lower line.

- Press and hold FLOAT - button (A) on CDM.
 - CALIBRATING FLOAT is displayed on the upper line.
 - FLOAT (-) HOLD is displayed on the lower line.

NOTE:

The word HOLD will flash during calibration.
HDR FLOAT COMPLETE will display on the lower line once calibration is complete.

- Release FLOAT - button (A).
 - TO CALIBRATE SELECT is displayed on the upper line.
 - HEADER FLOAT is displayed on the lower line.

- Press right arrow to select next header sensor calibration or STOP & EXIT. Press SELECT
Refer to [Calibrating the Header Height Sensor, page 95](#) or [Calibrating the Header Tilt Sensor, page 98](#).

- Press PROGRAM to exit Programming Mode.

3.19.9 Programming the Windrower

The windrower can be programmed to meet changing crop conditions, activate newly added options, indicate a change of header type, or increase your comfort level.

Activating the Hydraulic Center-Link

NOTE:

- This procedure requires installation of the optional Hydraulic Center-Link (MD #B4650).



Figure 3.96: M155 Positive Header Float



Figure 3.97: M155 Negative Header Float

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

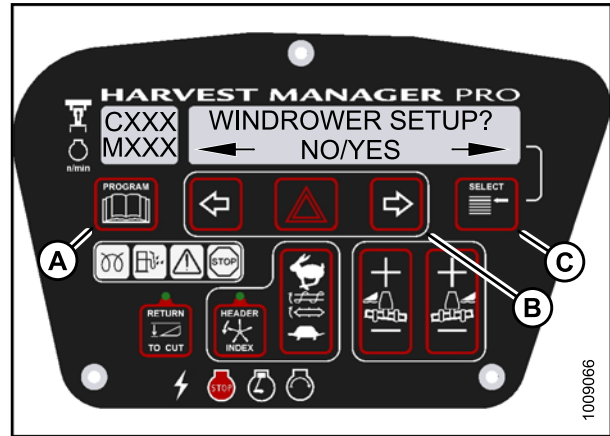


Figure 3.98: M155 CDM Programming Buttons

4. Press SELECT (C) until TILT CYL INSTALLED? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (B) arrow to select YES. Press SELECT (C).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (C) to proceed to next WINDROWER SETUP action.

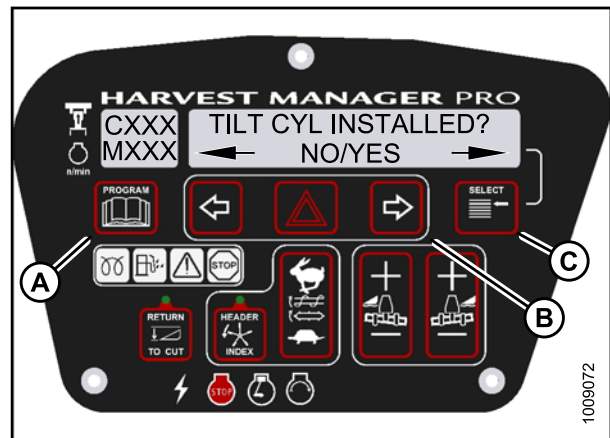


Figure 3.99: M155 Hydraulic Center-Link

Activating the Rotary Header Drive Hydraulics

NOTE:

This procedure requires installation of the optional Rotary Header Drive Hydraulics (MD #B5510). For more information, refer to [7.3.10 Rotary Header Drive Hydraulics \(13-Foot\)](#), page 459.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

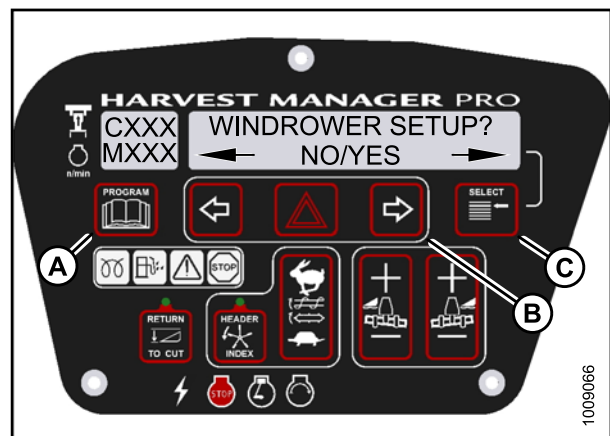


Figure 3.100: CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (C) until DISC BLK INSTALLED? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (B) arrow to select YES. Press SELECT (C).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (C) to proceed to next WINDROWER SETUP action.

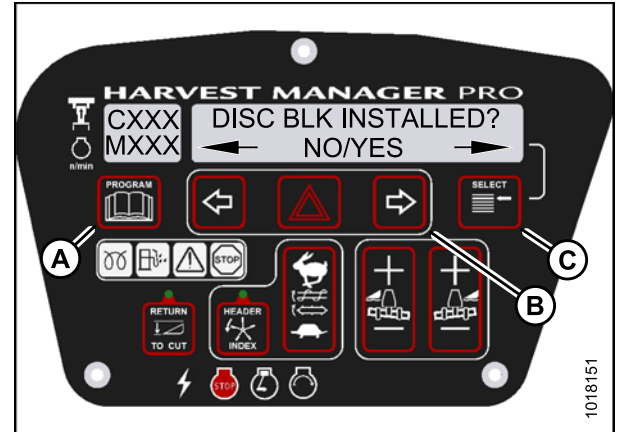


Figure 3.101: Rotary Disc Hydraulics

Setting the Header Knife Speed

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed.
 - The current knife speed is displayed on the lower line.

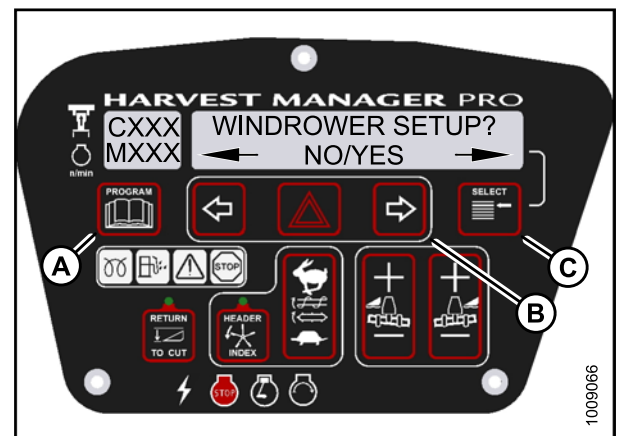


Figure 3.102: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press left (B) or right (C) arrows to select knife speed. Press SELECT (D).
5. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

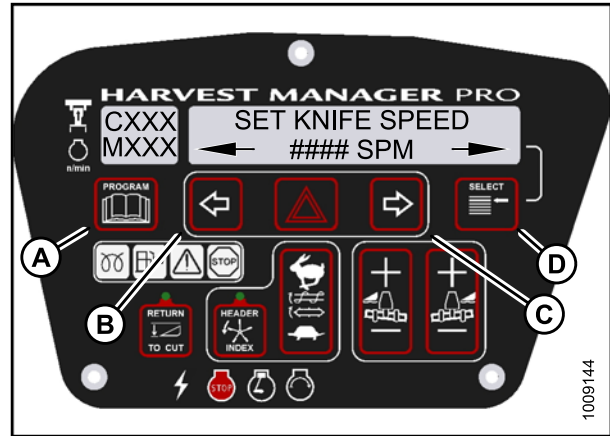


Figure 3.103: M155 Knife Speed

Setting the Knife Overload Speed

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- The recommended knife overload speed is 75% of knife speed.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed.

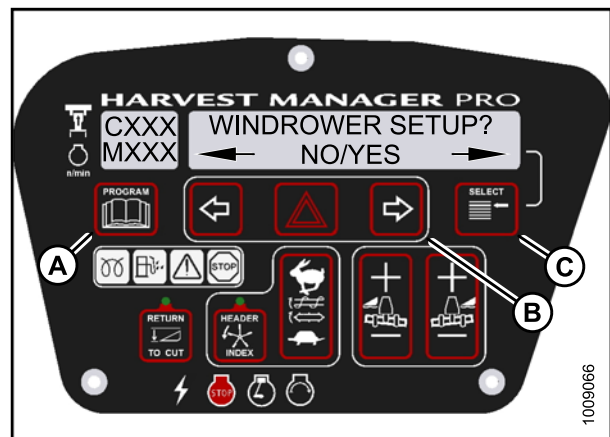


Figure 3.104: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (D) until KNIFE OVERLOAD SPD? is displayed on the upper line.

- Current overload speed is displayed on the lower line.

NOTE:

Default setting is -300 spm. Range is -500 to -100 spm.

5. Press left (B) or right (C) arrows to set knife overload speed. Press SELECT (D).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

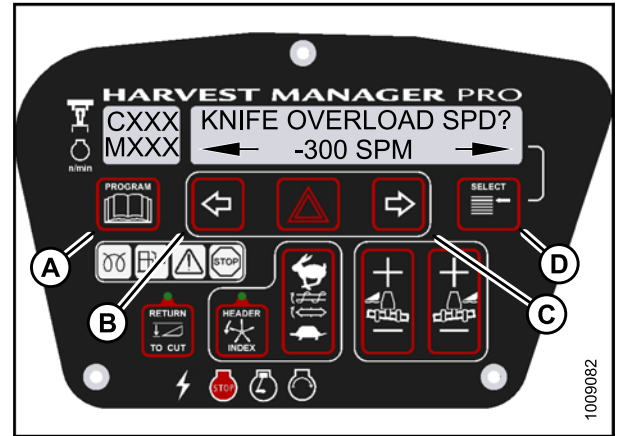


Figure 3.105: M155 Knife Overload Speed

Setting the Rotary Disc Overload Speed

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
 - The recommended disc overload speed is 75% of disc speed. For more information refer to the rotary disc header operator's manual to determine proper overload speed.
1. Turn ignition key to RUN, or start the engine.
 2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line. NO/YES is displayed on the lower line.
 3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed.

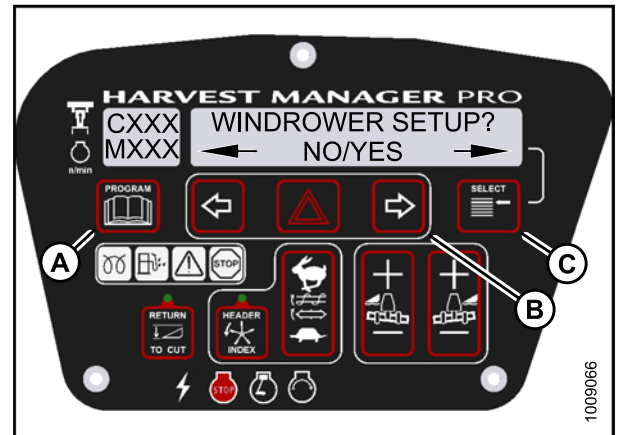


Figure 3.106: M155 CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (D) until DISK OVERLOAD SPD? is displayed on the upper line.

- The current overload speed is displayed on the lower line.

NOTE:

Default setting is -300 rpm. Range is -500 to -100 rpm.

- Press left (B) or right (C) arrows to set disc overload speed. Press SELECT (D).
- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.



Figure 3.107: M155 Disc Overload Speed

Setting the Hydraulic Overload Pressure

NOTE:

- This procedure requires installation of the optional pressure sensor (MD #B5574). For overload pressure values, refer to pressure sensor installation instructions (MD #169031).
- To enable sensor, refer to [Switching the Installed Header Sensors ON or OFF, page 131](#).

- Turn ignition key to RUN, or start the engine.
- Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
- Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed.

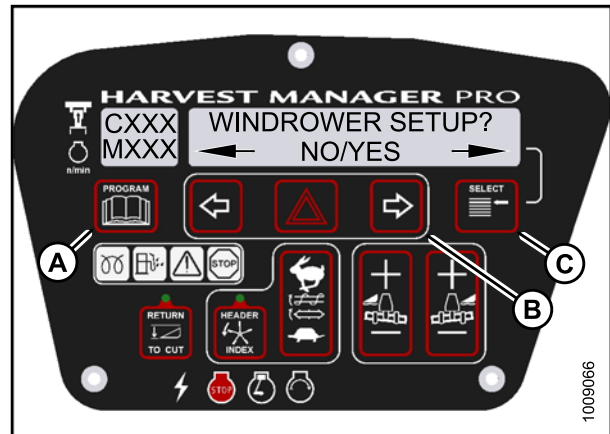


Figure 3.108: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (D) until OVERLOAD PRESSURE? is displayed on the upper line.

- The current overload pressure is displayed on lower line.

NOTE:

Pressure range is 17,237–34,474 kPa (2500–5000 psi).

5. Press left (B) or right (C) arrows to set hydraulic overload pressure. Press SELECT (D).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

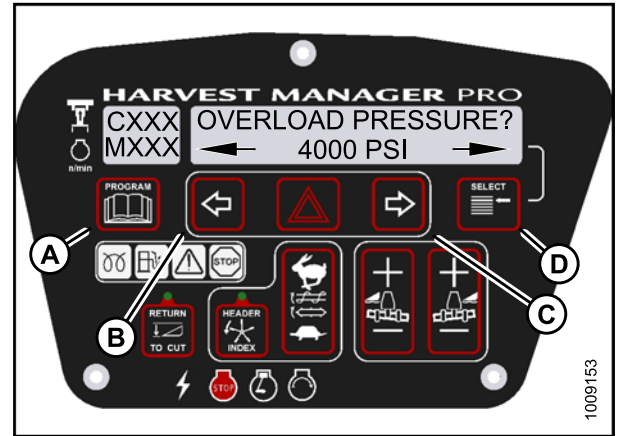


Figure 3.109: M155 Hydraulic Overload Pressure

Setting the Header Index Mode

Header Index feature is not applicable to rotary headers.

For more information on the Header Index feature, refer to [4.6.5 Reel Speed, page 286](#) and [4.6.6 Draper Speed, page 290](#).

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

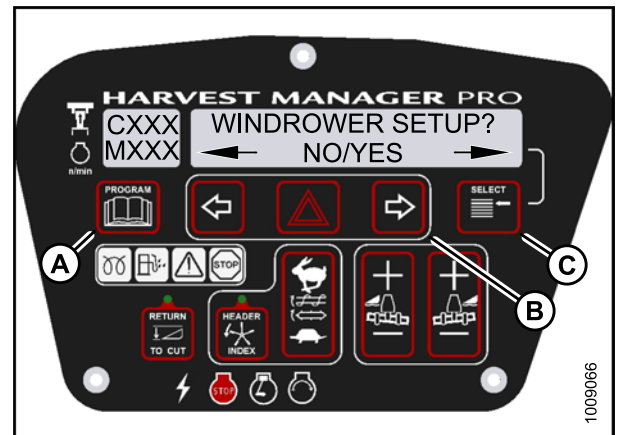


Figure 3.110: M155 CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (D) until HEADER INDEX MODE? is displayed on the upper line.
 - REEL & CONVEYOR or REEL ONLY is displayed on the lower line.
- Press left (B) or right (C) arrows to set header index mode. Press SELECT (D).
- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

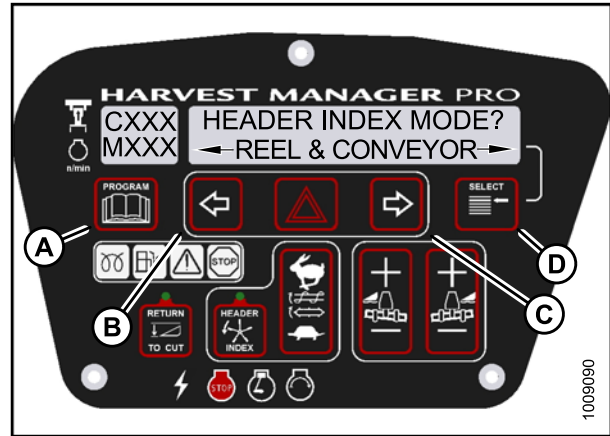


Figure 3.111: M155 Header Index Mode

Setting the Return to Cut Mode

For more information on the Return to Cut feature, refer to [4.4.7 Return to Cut](#), page 207.

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers](#), page 213.

- Turn ignition key to RUN, or start the engine.
- Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
- Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed.

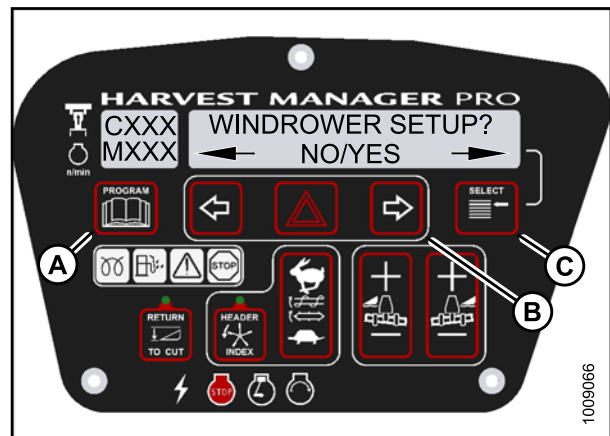


Figure 3.112: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (D) until RETURN TO CUT MODE? is displayed on the upper line.
 - HEIGHT & TILT or HEIGHT ONLY will be displayed on the lower line.
5. Press left (B) or right (C) arrows to select return to cut mode. Press SELECT (D).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

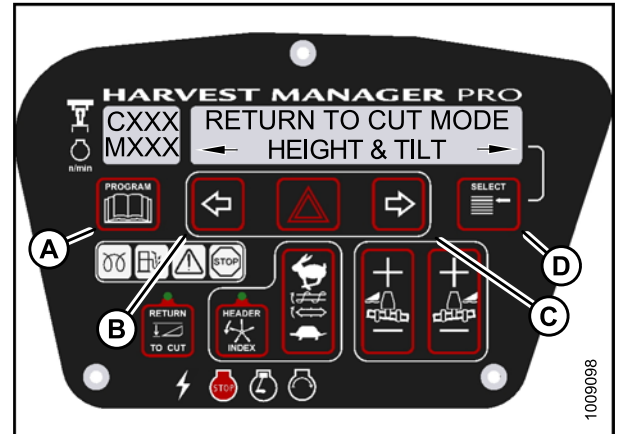


Figure 3.113: M155 Return to Cut Mode

Setting the Header Cut Width

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- Header cut width is less than actual header width to accurately measure number of acres cut.
- The headers sends an electrical signal to the windrower to produce a header ID; however, the cut width will always default to the smallest header size available for each header type. For example, A-Series Auger Headers come in 14-, 16-, and 18-foot sizes, but the cut width will automatically default to the smallest 14-foot size and will need to be changed to your specific header's size.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed.

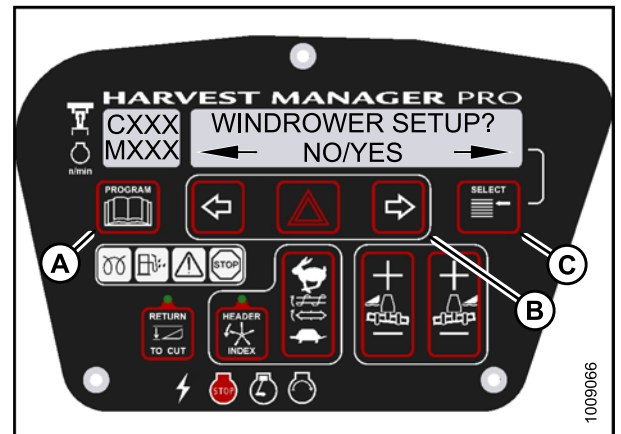


Figure 3.114: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (D) until HDR CUT WIDTH? #### is displayed on the upper line.
 - Previous cutting width is displayed on the lower line.
5. Press left (B) or right (C) arrows to change the headers cut width. Press SELECT (D).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

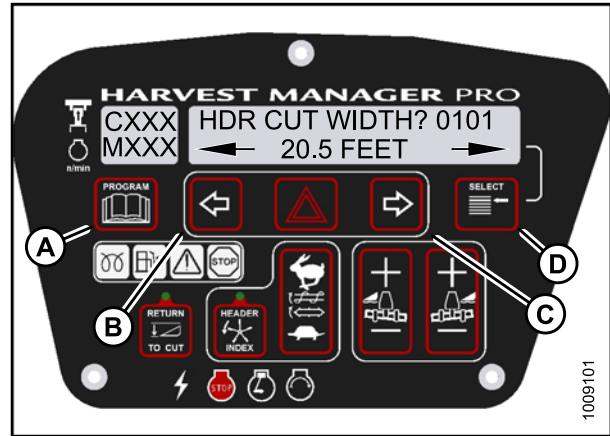


Figure 3.115: M155 Header Cut Width

Activating the Double Windrow Attachment (DWA)

NOTE:

- Follow this procedure if installing the DWA; however, refer to the DWA manual if you require additional installation instructions.
 - Follow this procedure if installing a drive manifold (MD #139508).
1. Turn ignition key to RUN, or start the engine.
 2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
 3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

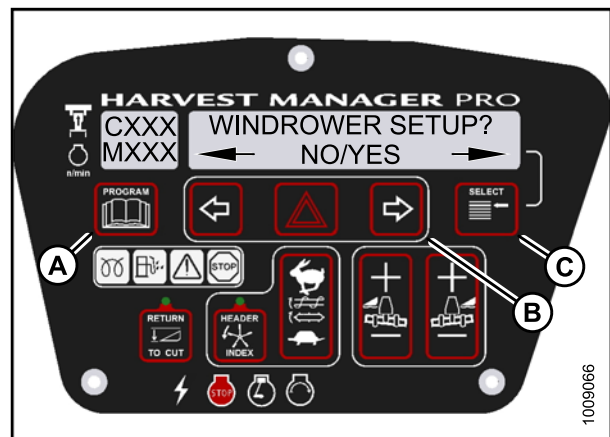


Figure 3.116: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (B) until DWA INSTALLED? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).



Figure 3.117: M155 DWA Controls

6. SWAP DWA CONTROLS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

NOTE:

This step swaps the DWA controls from the console switch to the ground speed lever (GSL) reel fore-aft buttons.

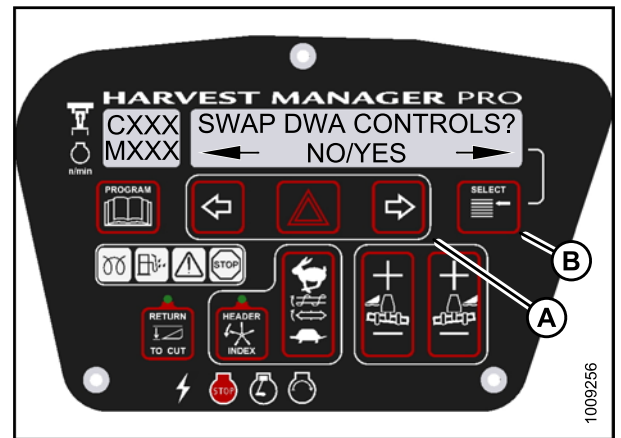


Figure 3.118: M155 DWA Controls

7. Press right (C) arrow to select YES. Press SELECT (D).
 - DWA AUTO UP/DOWN? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

NOTE:

If the Operator selects YES, the DWA Auto-Up function will be activated by the GSL Reel Fore-Aft button.

8. Press right (C) arrow to select YES. Press SELECT (D).
9. Press PROGRAM to exit Programming Mode or press SELECT to proceed to next WINDROWER SETUP action.

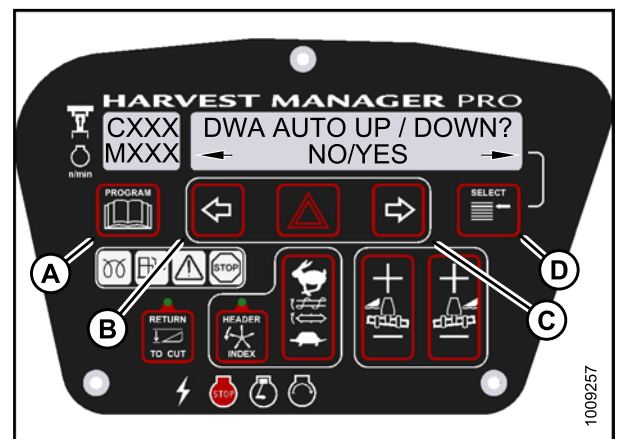


Figure 3.119: M155 DWA Auto Up/Down

OPERATOR'S STATION

Setting the Auto Raise Height

For more information on the Auto Raise Height feature, refer to [4.4.8 Auto Raise Height, page 209](#).

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

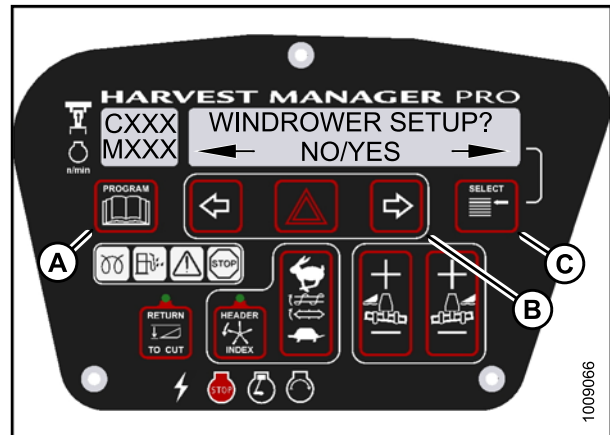


Figure 3.120: M155 CDM Programming Buttons

4. Press SELECT (D) until AUTO RAISE HEIGHT? is displayed on the upper line.
 - Last measurement is displayed on the lower line.

NOTE:

The auto raise height ranges from 4.0 (minimum) to 9.5 (maximum), in 0.5 increments. A setting of 10 disables the auto raise function.

5. Press left (B) arrow or right (C) arrow to change auto-raise height.
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

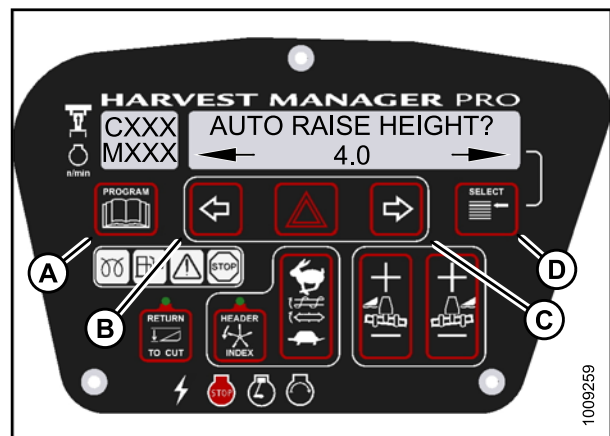


Figure 3.121: M155 Auto Raise Height

Activating the Hay Conditioner

NOTE:

- This procedure is for draper headers only.
- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

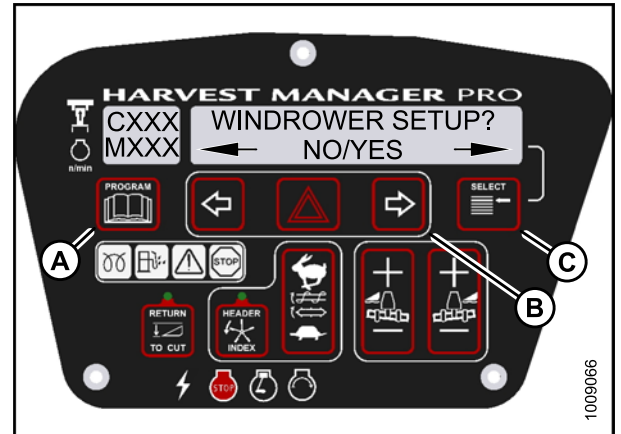


Figure 3.122: M155 CDM Programming Buttons Shown – M205 Similar

4. Press SELECT (C) until HAY CONDITIONER? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (B) arrow to select YES. Press SELECT (C).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (C) to proceed to next WINDROWER SETUP action.

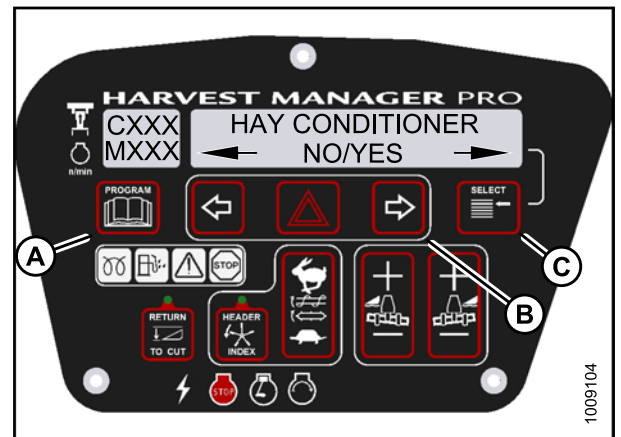


Figure 3.123: M155 Hay Conditioner Shown – M205 Similar

Displaying Reel Speed

NOTE:

- This procedure is for draper and auger headers. It does not apply to rotary disc headers.
- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on CDM to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

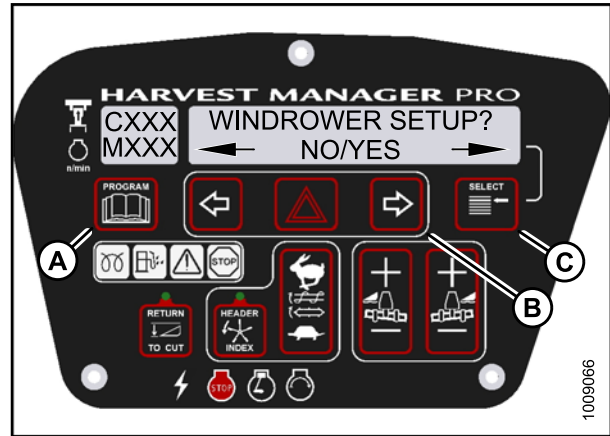


Figure 3.124: M155 CDM Programming Buttons

4. Press SELECT (D) until HEADER REEL SPEED? is displayed on the upper line.
 - RPM/MPH or RPM/KPH is displayed on the lower line.
5. Press left (B) or right (C) arrow to select either Imperial or Metric units. Press SELECT (D).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

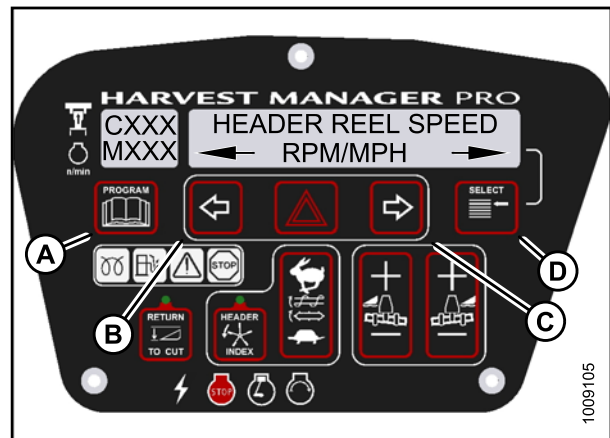


Figure 3.125: M155 Reel Speed Display

Setting the Windrower's Tire Size

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

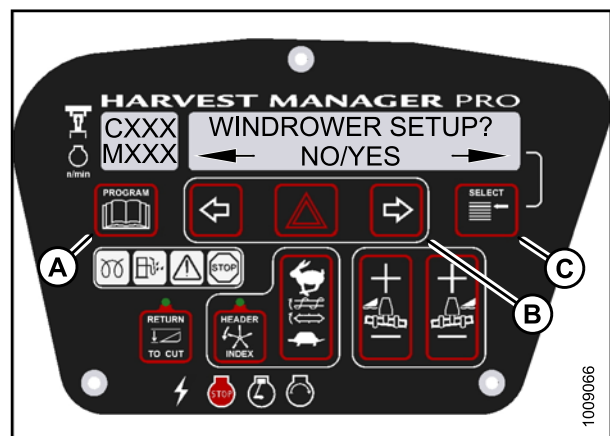


Figure 3.126: M155 CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (D) until SET TIRE SIZE? is displayed on the upper line.
 - Currently installed tire size is displayed on the lower line.

NOTE:

The following tire sizes are available:

- 18.4 x 26 TURF
- 18.4 x 26 BAR
- 23.1 x 26 TURF
- 600 – 65 R28

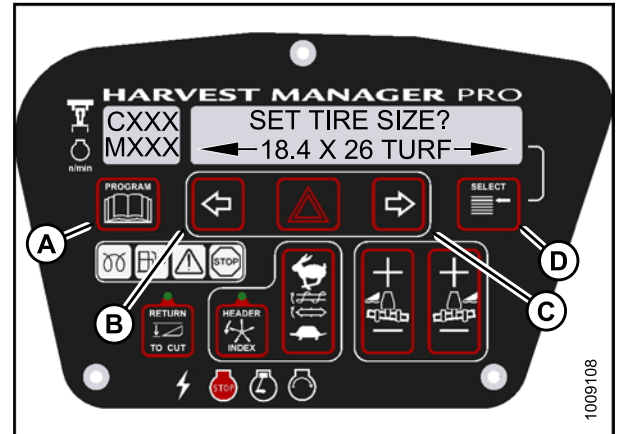


Figure 3.127: M155 Tire Size

- Press left (B) or right (C) arrow and select tire size. Press SELECT (D).
- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

Setting the Engine Intermediate Speed Control (ISC) RPM

NOTE:

The ISC sets the engine speed when the header is engaged. For more information, refer to [Engine Intermediate Speed Control \(ISC\), page 162](#). The engine **MUST** be running to perform this procedure.

- Turn ignition key to RUN, or start the engine.
- Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
- Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

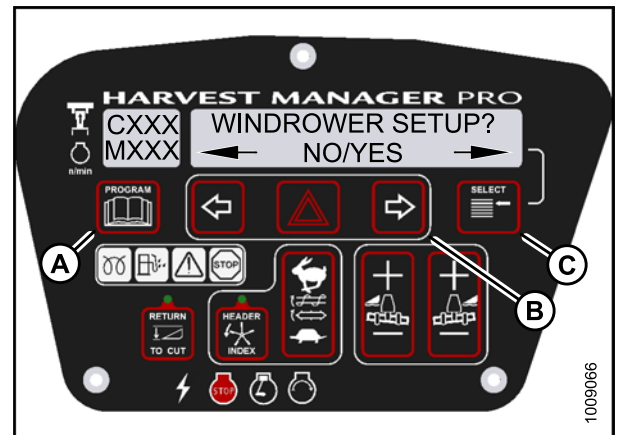


Figure 3.128: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (C) until SET ENGINE ISC RPM? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (B) arrow to select YES. Press SELECT (C).
 - PRESS HAZARD TO SET is displayed on the upper line.
 - ISC RPM ##### is displayed on the lower line.

Table 3.1 ISC Settings

ISC and RPM			
Off ¹⁵	1	2	3
High Idle ¹⁶	2200 ¹⁷	2000	1800

NOTE:

The previously selected ISC rpm will be flashing.

6. Press right (C) arrow to cycle between rpm options. Press HAZARD (B) to set.
7. Press Select (D).
 - EXIT ENGINE ISC? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
8. Press right (C) arrow to select YES. Press SELECT (D).
9. Press PROGRAM (A) to exit Programming Mode.

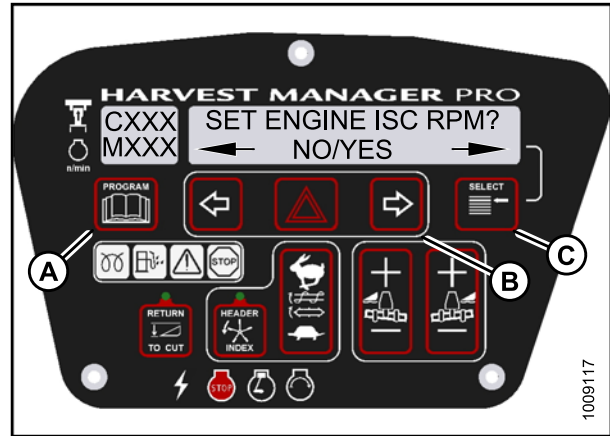


Figure 3.129: M155 Engine ISC RPM

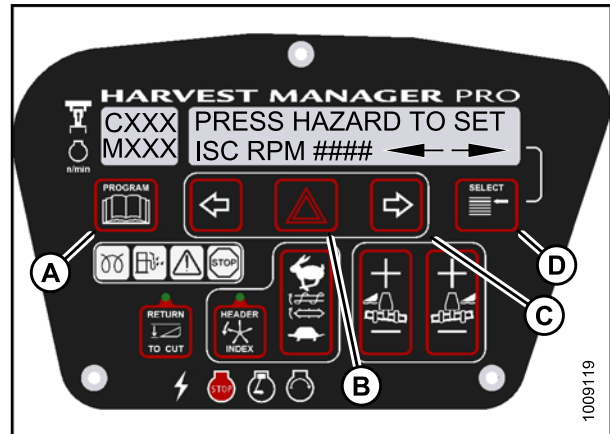


Figure 3.130: M155 ISC RPM

15. Off is always used when the header is not engaged.

16. Off does not appear on menu selection but is used when the header is not engaged.

17. Default Setting

OPERATOR'S STATION

Clearing Sub-Acres

1. With the key in the ON position, and the operator's station in cab-forward mode, press SELECT until the cab display module (CDM) displays sub-acres on the bottom line. Then press and hold the PROGRAM (A) button on the CDM until the sub-acres are cleared.



Figure 3.131: Cab Display Module (CDM)

3.19.10 Activating Cab Display Lockouts

You can lock some of the header functions controlled by the cab display module (CDM) to prevent accidental changes to header settings. You can use this feature to keep header settings constant when several different Operators use the windrower.

NOTE:

FUNCTION LOCKED flashes on CDM when locked header function switch is pressed.

Activating Knife Speed Control Lockout

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

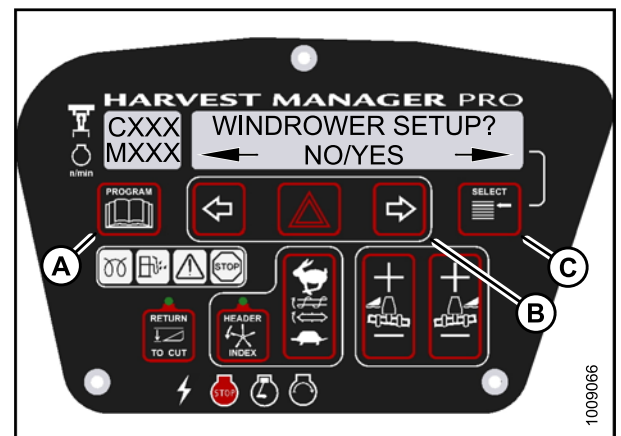


Figure 3.132: M155 CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
- Press right (A) arrow to select YES. Press SELECT (B).

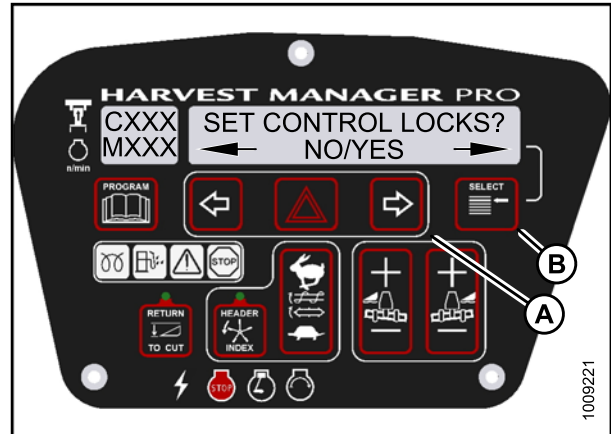


Figure 3.133: M155 Control Locks

- Press SELECT (D) until KNIFE SPEED is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
- Press left arrow (B) to enable KNIFE SPEED control switch, or press right arrow (C) to lock KNIFE SPEED control switch.
- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

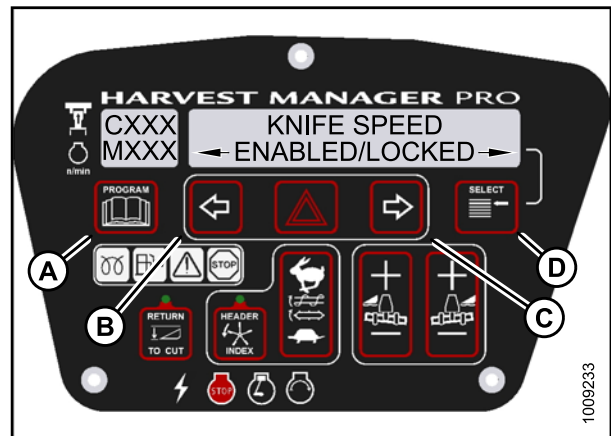


Figure 3.134: M155 Knife Speed Control Lock

Activating Rotary Disc Speed Control Lockout

NOTE:

- This procedure is for rotary disc headers only.
- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

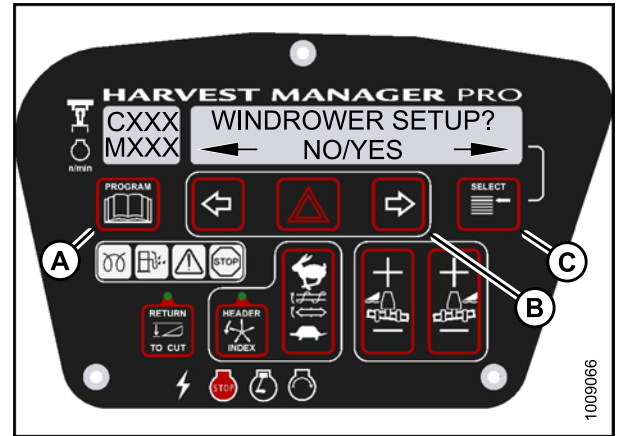


Figure 3.135: M155 CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

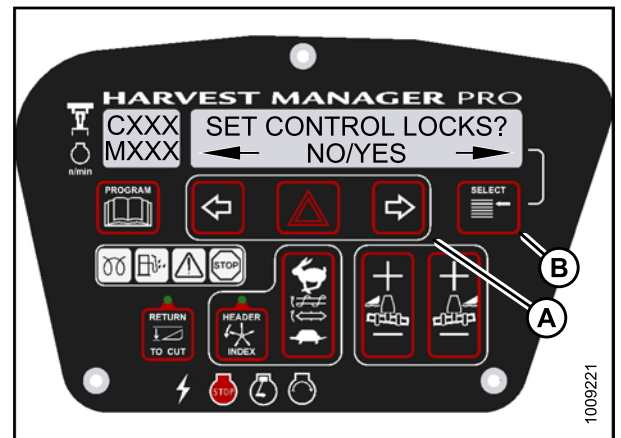


Figure 3.136: M155 Control Locks

6. Press SELECT (D) until DISK SPEED is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
7. Press left arrow (B) to enable DISK SPEED control switch, or press right arrow (C) to lock DISK SPEED control switch.
8. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

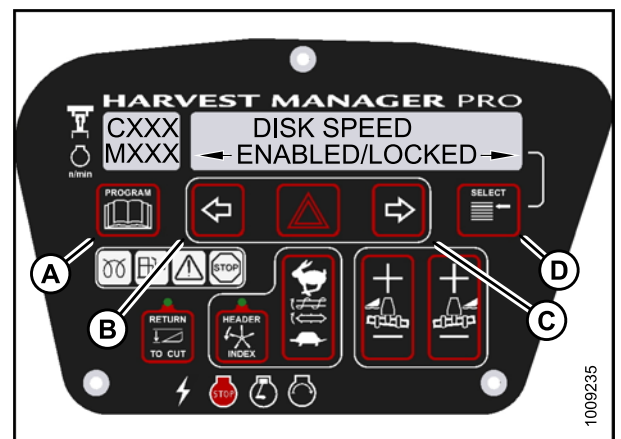


Figure 3.137: M155 Disc Speed Control Lock

OPERATOR'S STATION

Activating the Header Float Control Lockout

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

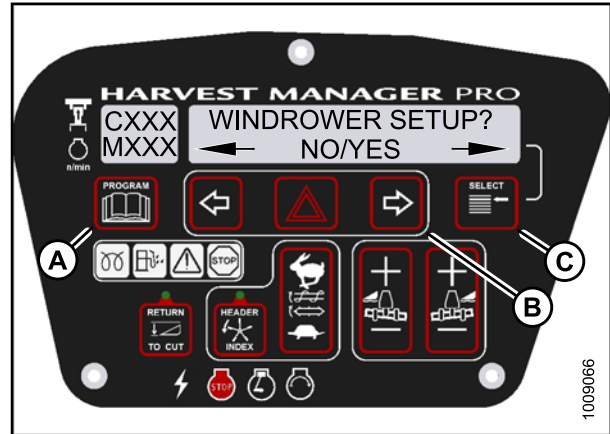


Figure 3.138: M155 CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

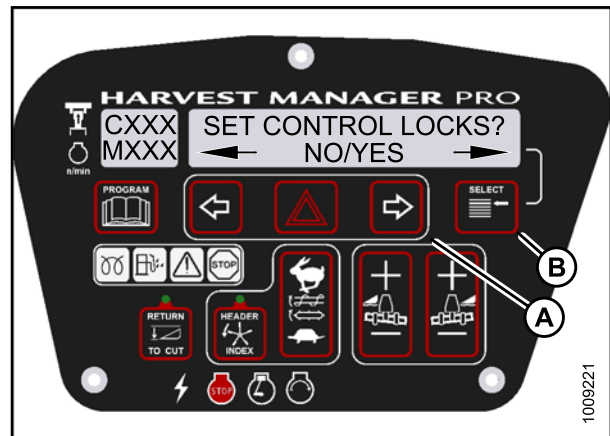


Figure 3.139: M155 Control Locks

6. Press SELECT (D) until HEADER FLOAT is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
7. Press left arrow (B) to enable HEADER FLOAT control switch, or press right arrow (C) to lock HEADER FLOAT control switch.
8. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

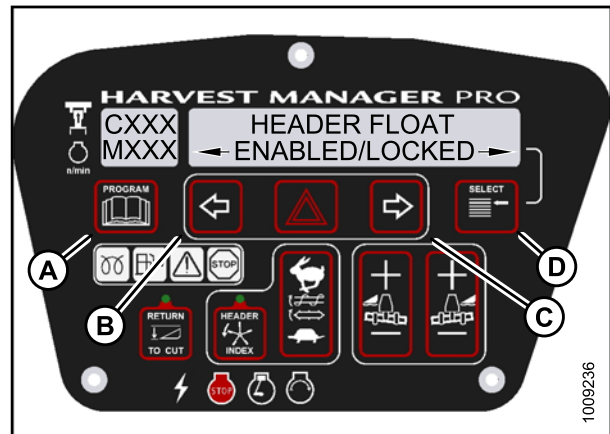


Figure 3.140: M155 Header Float Control Lock

OPERATOR'S STATION

Activating the Draper Speed Control Lockout

NOTE:

- This procedure is for draper headers only.
- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers](#), page 213.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

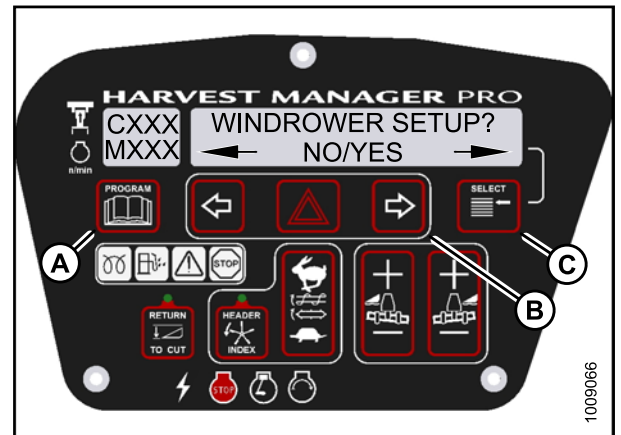


Figure 3.141: M155 CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

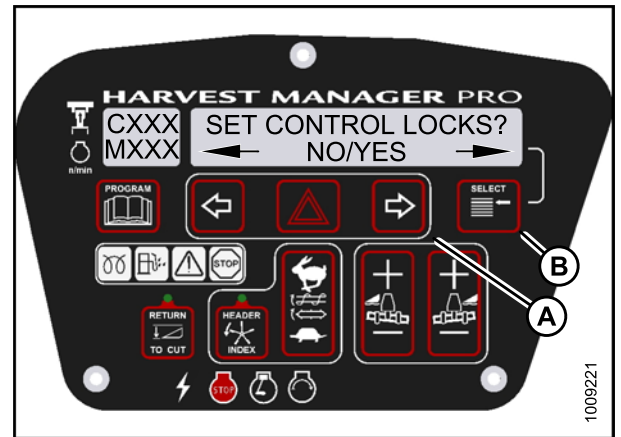


Figure 3.142: M155 Control Locks

OPERATOR'S STATION

6. Press SELECT (D) until DRAPER SPEED is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
7. Press left arrow (B) to enable DRAPER SPEED control switch, or press right arrow (C) to lock DRAPER SPEED control switch.
8. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

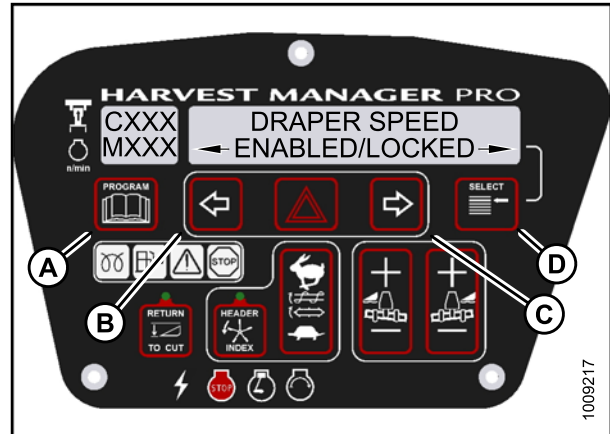


Figure 3.143: M155 Draper Control Lock

Activating the Auger Speed Control Lockout

NOTE:

- This procedure is for A40-D Headers only.
 - An auger header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
1. Turn ignition key to RUN, or start the engine.
 2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
 3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

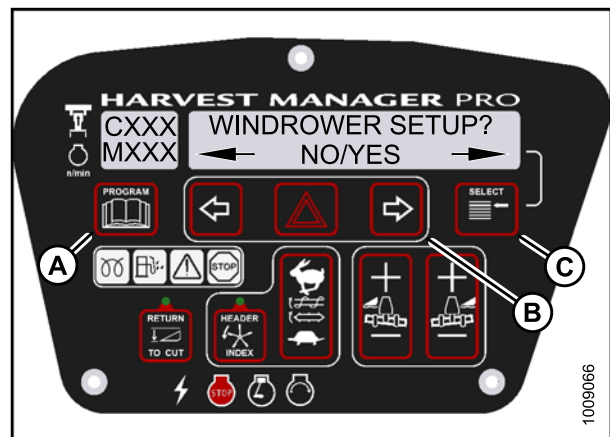


Figure 3.144: M155 CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
- Press right (A) arrow to select YES. Press SELECT (B).

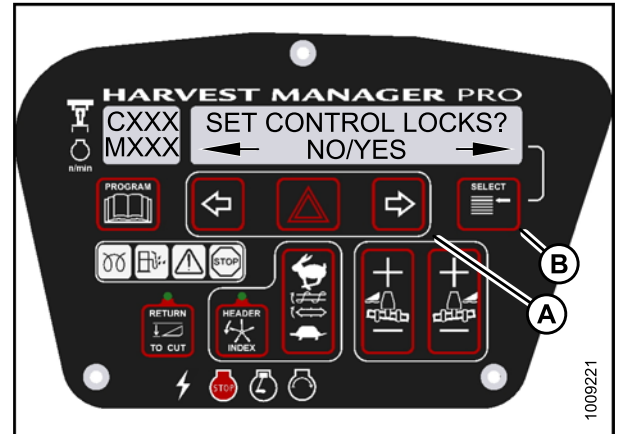


Figure 3.145: M155 Control Locks

- Press SELECT (D) until AUGER SPEED is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
- Press left (B) arrow to enable AUGER SPEED control switch.
Press right (C) arrow to lock AUGER SPEED control switch.
- Press PROGRAM (A) to exit Programming Mode, or press SELECT (D) to proceed to next WINDROWER SETUP action.

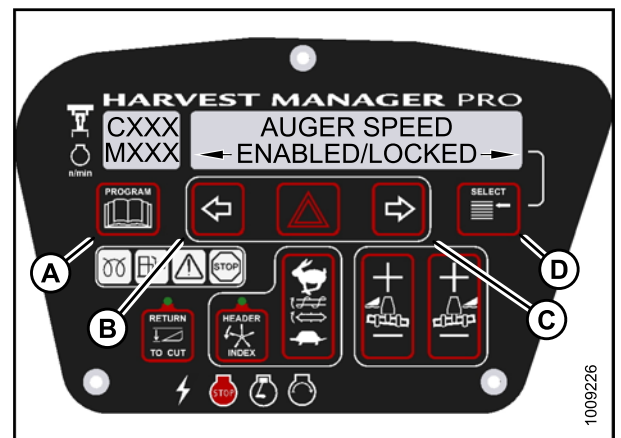


Figure 3.146: M155 Auger Control Lock

Activating the Reel Speed Control Lockout

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

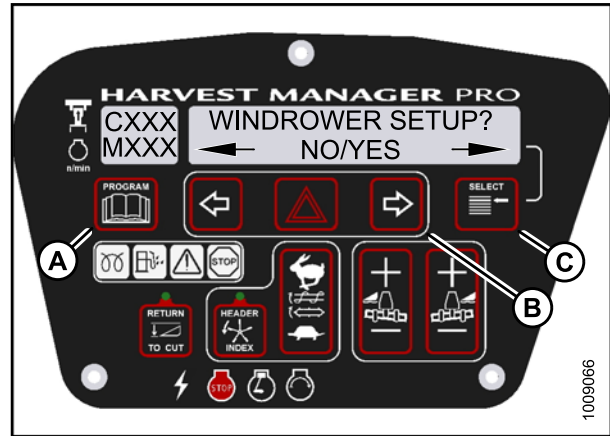


Figure 3.147: M155 CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

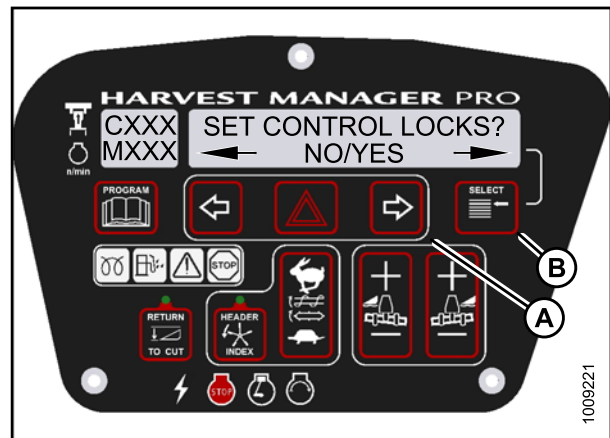


Figure 3.148: M155 Control Locks

6. Press SELECT (D) until REEL SPEED is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
7. Press left (B) arrow to enable REEL SPEED control switch. Press right (C) arrow to lock REEL SPEED control switch.
8. Press PROGRAM (A) to exit Programming Mode, or press SELECT (D) to proceed to next WINDROWER SETUP action.

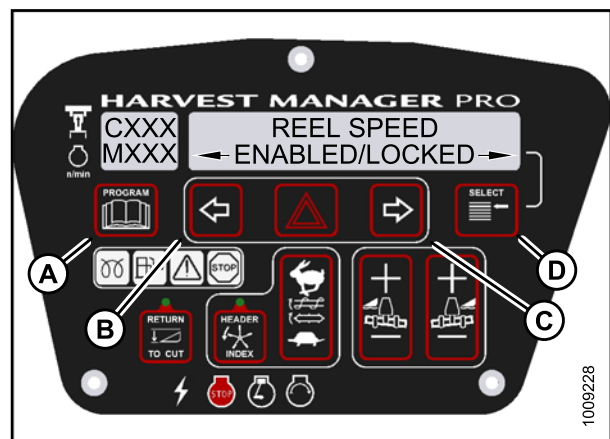


Figure 3.149: M155 Reel Speed Control Lock

OPERATOR'S STATION

Activating the Reel Fore-Aft Control Lockout

NOTE:

- This procedure is for draper headers only.
- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

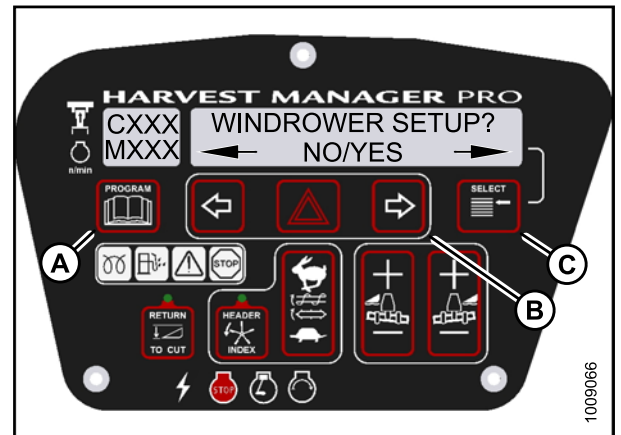


Figure 3.150: M155 CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

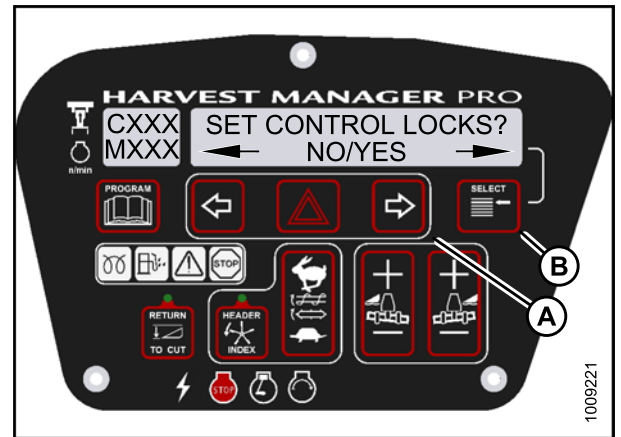


Figure 3.151: M155 Control Locks

OPERATOR'S STATION

6. Press SELECT (D) until REEL FORE/AFT is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
7. Press left (B) arrow to enable REEL FORE/AFT control switch.
Press right (C) arrow to lock REEL FORE/AFT control switch.
8. Press PROGRAM (A) to exit Programming Mode, or press SELECT (D) to proceed to next WINDROWER SETUP action.

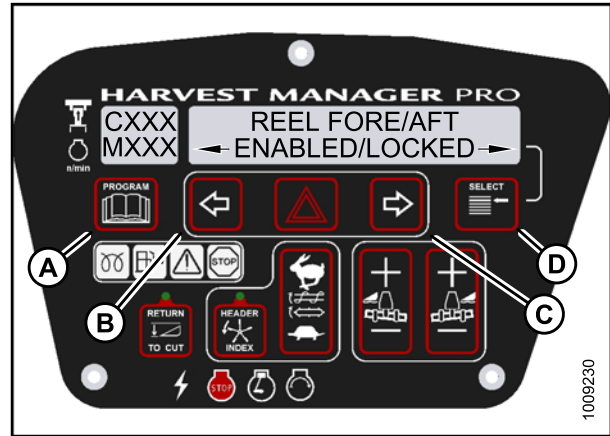


Figure 3.152: M155 Reel Fore-Aft Control Lock

Activating the Header Tilt Control Lockout

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
 - This procedure requires installation of the optional Hydraulic Center-Link (MD #B4650).
1. Turn ignition key to RUN, or start the engine.
 2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
 3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

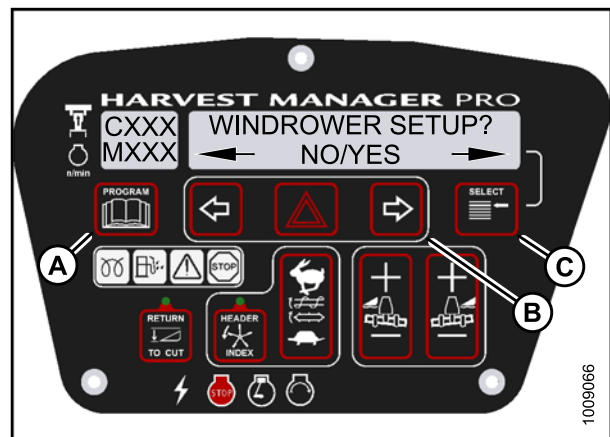


Figure 3.153: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

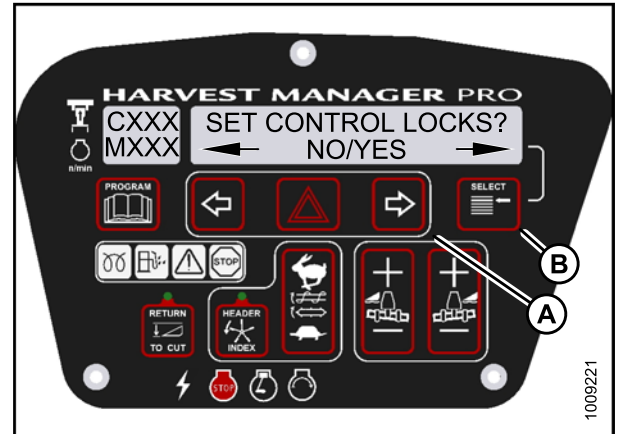


Figure 3.154: M155 Control Locks

6. Press SELECT (D) until HEADER TILT is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
7. Press left (B) arrow to enable HEADER TILT control switch.
Press right (C) arrow to lock HEADER TILT control switch.
8. Press PROGRAM (A) to exit Programming Mode, or press SELECT (D) to proceed to next WINDROWER SETUP action.

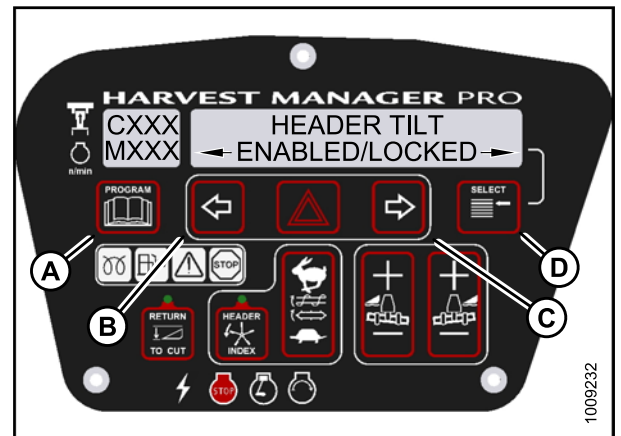


Figure 3.155: M155 Header Tilt Control Lock

3.19.11 Displaying Activated Cab Display Lockouts

Displaying the activated control locks allows you to quickly determine which controls are locked on the cab display module (CDM).

NOTE:

- Displaying header tilt control lock requires installation of the optional Hydraulic Center-Link (MD #B4650).

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

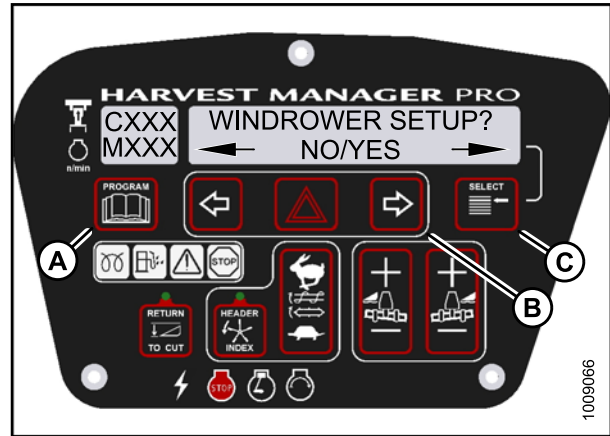


Figure 3.156: M155 CDM Programming Buttons

4. Press SELECT (B) until VIEW CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).
 - HEADER TILT is displayed on the upper line.
 - The control switch status is displayed on the lower line. The hours displayed indicate when a switch was enabled or locked.

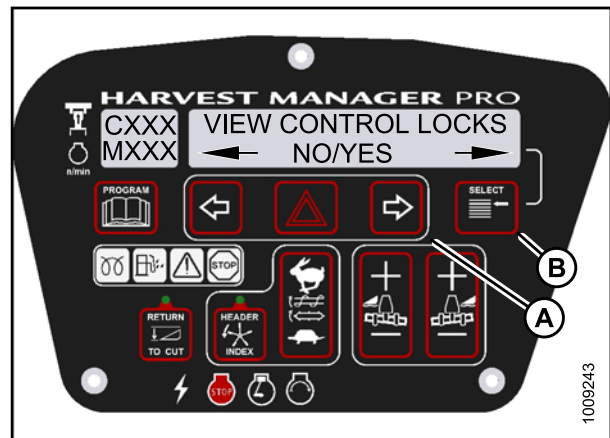


Figure 3.157: M155 Control Locks

OPERATOR'S STATION

- Press left (B) or right (C) arrow to cycle between control switch lock outs. The displayed control switches are as follows:
 - HEADER TILT
 - HEADER FLOAT
 - REEL FORE/AFT
 - DRAPER SPEED
 - AUGER SPEED
 - KNIFE SPEED
 - DISK SPEED
 - REEL SPEED

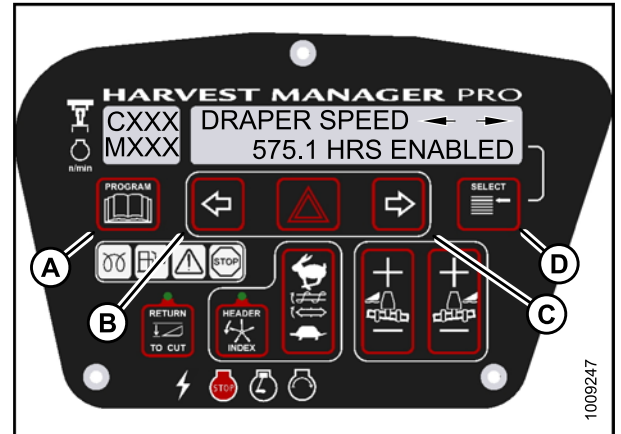


Figure 3.158: M155 Control Locks

NOTE:

Not all control locks apply to every header.

- Press SELECT.
 - EXIT VIEW LOCKOUTS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
- Press right to select YES.
- Press PROGRAM to exit Programming Mode or press SELECT to proceed to next WINDROWER SETUP action.

3.19.12 Troubleshooting Windrower Problems

Displaying the Windrower and Engine Error Codes

- Turn ignition key to RUN, or start the engine.
- Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode. Press SELECT (C).
 - WINDROWER SETUP? is displayed on the upper line.
- Press SELECT (C) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.

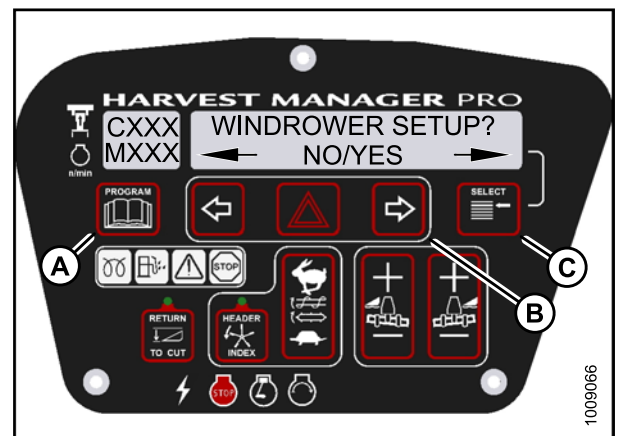


Figure 3.159: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press right (A) arrow to select Yes. Press SELECT (B).
5. VIEW ERROR CODES? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
- VIEW WINDRWR CODES? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

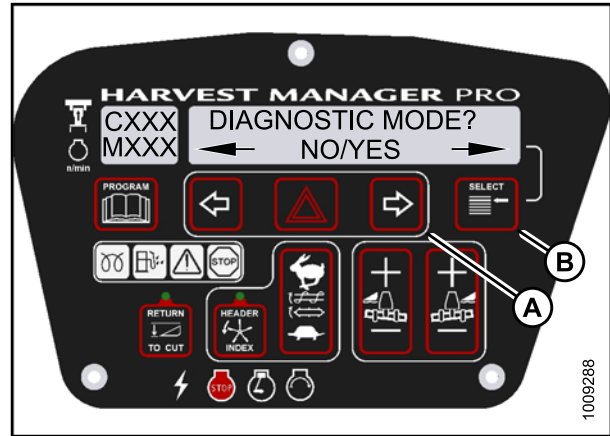


Figure 3.160: M155 Diagnostic Functions

7. Press right (C) arrow to select YES. Press SELECT (D).
- The most recent error code will be displayed.
- Refer to [8.5 Cab Display Module \(CDM\) Error Codes, page 493](#).
8. Press and left (B) or right (C) arrow to cycle through the last ten recorded windrower error codes until EXIT WINDROWER CODES is displayed.
9. Press right (C) arrow to select YES. Press SELECT (D).
- VIEW ENGINE CODES is displayed on the upper line.
 - NO/YES is displayed on the lower line.

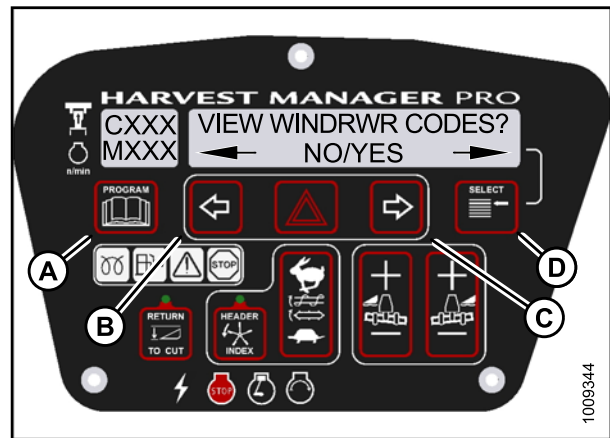


Figure 3.161: M155 Windrower Codes

10. Press right (C) arrow to select YES. Press SELECT (D).
11. Press left (B) or right (C) arrow to cycle through the last ten recorded engine error codes until EXIT ENGINE CODES is displayed.
 - Refer to [8.4 Engine Error Codes, page 480](#).
12. Press right (C) arrow to select YES. Press SELECT (D).
13. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next DIAGNOSTIC MODE.

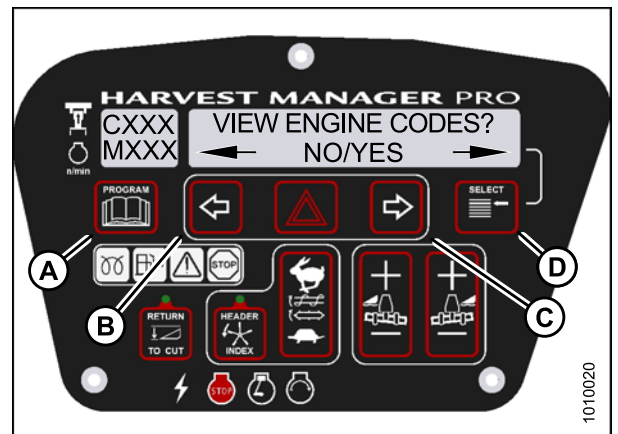


Figure 3.162: M155 Engine Codes

OPERATOR'S STATION

Switching the Installed Header Sensors ON or OFF

You can selectively enable or disable header sensors in the event of a malfunction or as part of a troubleshooting routine.

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- Disabled sensors flash the word SENSOR on CDM during regular operation.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press SELECT (C) until DIAGNOSTIC MODE? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
4. Press right (B) arrow to select YES. Press SELECT (C).
 - VIEW ERROR CODES? is displayed on the upper line.
5. Press SELECT (B) until ENTER SENSOR SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - KNIFE SPEED SENSOR is displayed on the upper line.
 - ENABLE/DISABLE is displayed on the lower line.

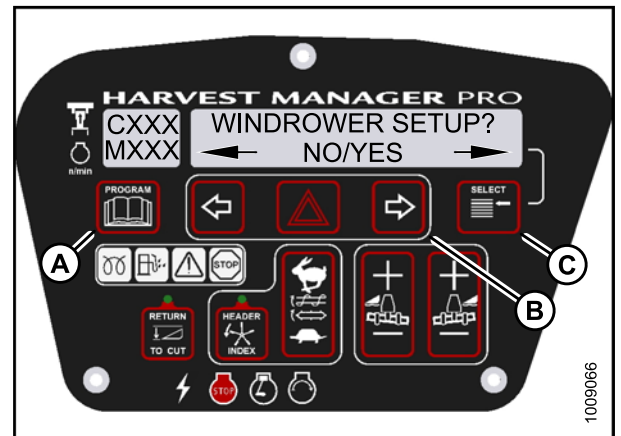


Figure 3.163: M155 CDM Programming Buttons

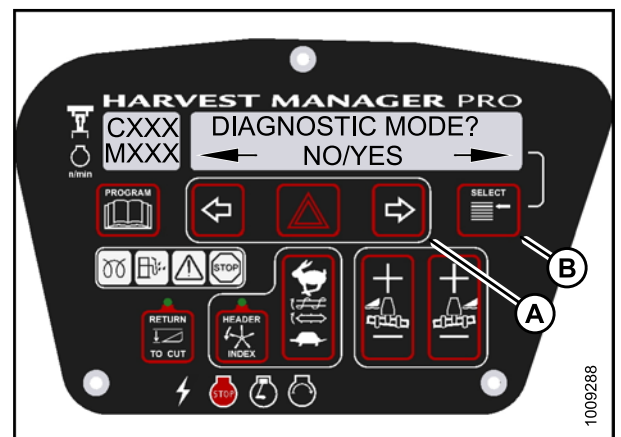


Figure 3.164: M155 Diagnostic Functions

OPERATOR'S STATION

- Press left (B) arrow to enable a sensor. Press right (C) arrow to disable sensor. Press SELECT (D) to confirm selection and move on to next sensor.

The following sensors are available:

- HEADER HT SENSOR
- HEADER TILT SENSOR
- KNIFE SPEED SENSOR
- REEL SPEED SENSOR
- HEADER FLOAT SENSOR
- OVERLOAD PRESSURE¹⁸
- HYD OIL TEMP SENSOR

When sensors have been modified, press SELECT (D) to display the EXIT SENSOR SETUP? selection.

- Press right arrow to select YES. Press SELECT.
- Press PROGRAM to exit Programming Mode or press SELECT to proceed to next DIAGNOSTIC MODE.

Displaying Header Sensor Input Signals

You can display individual sensor input signals in the event of a malfunction or as part of a troubleshooting routine.

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

- Turn ignition key to RUN, or start the engine.
- Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

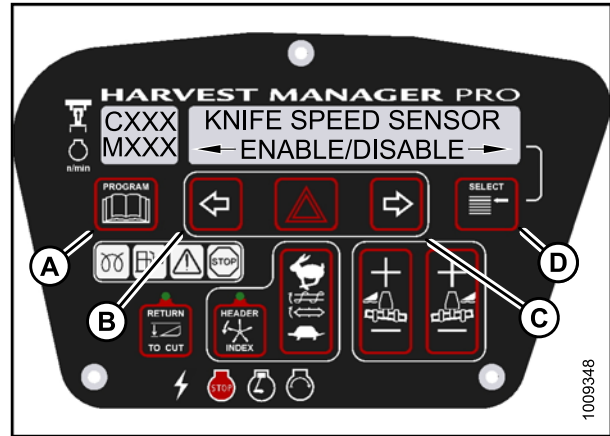


Figure 3.165: M155 Header Sensors

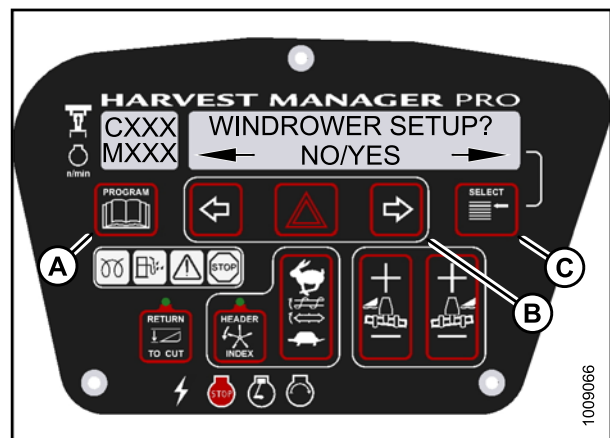


Figure 3.166: M155 CDM Programming Buttons

- Requires installation of optional pressure sensor (MD #B5574).

OPERATOR'S STATION

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).
 - VIEW ERROR CODES? is displayed on the upper line.
5. Press SELECT (B) until READ SENSOR SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

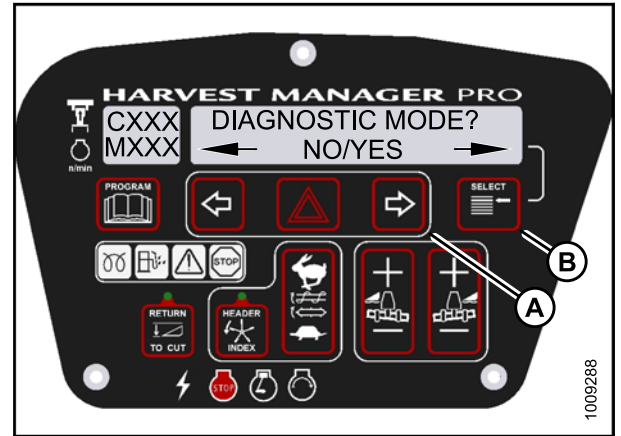


Figure 3.167: M155 Diagnostic Functions

6. Press right (C) arrow to select YES. Press SELECT (D).
 - SENSOR INPUT is displayed on the upper line.
 - HDR HEIGHT 1.23 V is displayed on the lower line.
7. Press left (B) or right (C) arrow to cycle between individual sensor readers.
8. Press SELECT (D) to skip to EXIT READ SENSORS? selection.

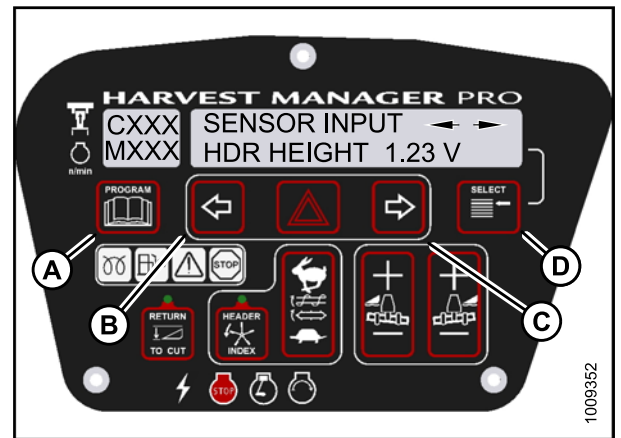


Figure 3.168: M155 Header Sensors

9. Press right arrow to select YES. Press SELECT.
10. Press PROGRAM to exit Programming Mode or press SELECT to proceed to next DIAGNOSTIC MODE.

Forcing a Header ID

The header must be attached to the windrower to troubleshoot certain issues. If damage has occurred to the header wiring or no header is available, you can force the windrower control module (WCM) to read a header ID. The WCM reverts to reading NO HEADER each time the engine ignition is cycled.

IMPORTANT:

Forcing a Header ID that is different from the attached header can damage the windrower and header. Doing so can lead to vibration, belt failures, and other over-speeding related problems.

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.

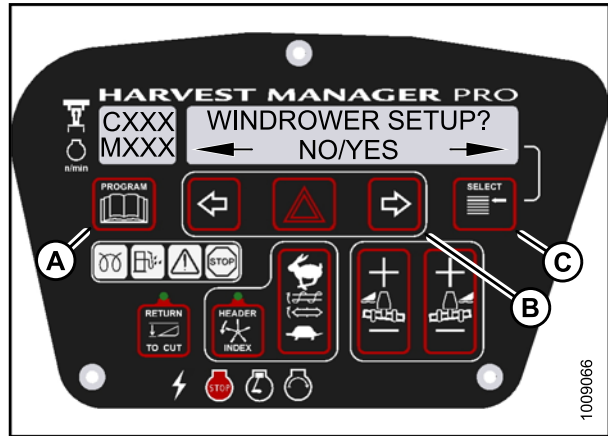


Figure 3.169: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).

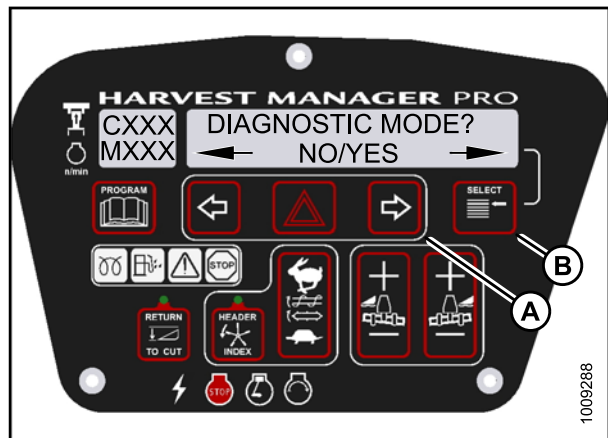


Figure 3.170: M155 Diagnostic Functions

5. Press SELECT (B) until FORCE HEADER TYPE? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - SELECT HEADER TYPE is displayed on the upper line.
 - DISK HEADER is displayed on the lower line.

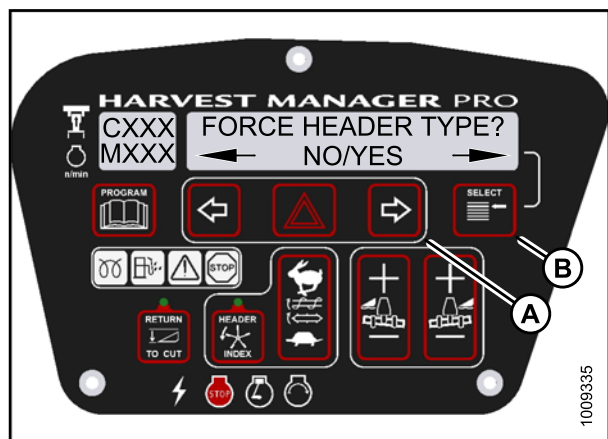


Figure 3.171: M155 Header Type

OPERATOR'S STATION

- Press left (A) or right (B) arrow to cycle through list of header types.
- When desired header type is displayed press SELECT (C).
 - EXIT FORCE HEADER? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
- Press right arrow (B) to select YES. Press SELECT (C). Proceed to next DIAGNOSTIC MODE or press PROGRAM to exit programming mode.



Figure 3.172: M155 Header Type

3.19.13 Troubleshooting Header Problems

You can test individual parts of the header as part of a troubleshooting routine.

Testing the Header Up/Down Activate Function Using the Cab Display Module (CDM)

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
 - The engine **MUST** be running to perform this procedure.
- Turn ignition key to RUN, or start the engine.
 - Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode. Press SELECT (C).
 - WINDROWER SETUP? is displayed on the upper line.

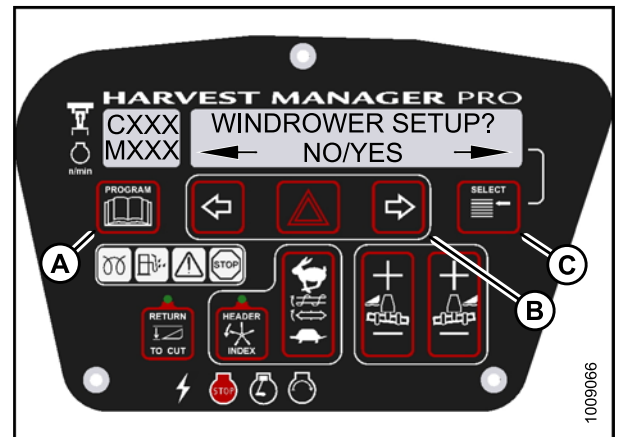


Figure 3.173: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).

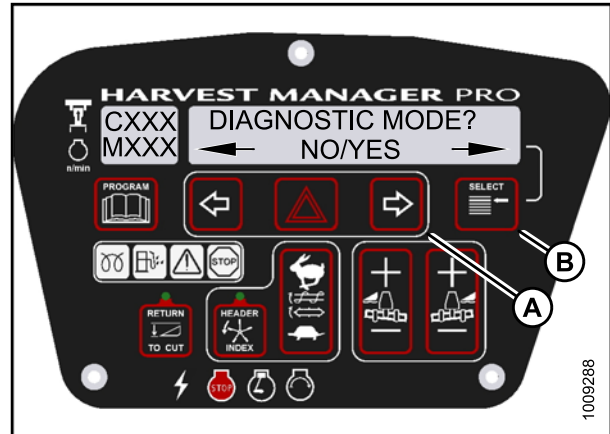


Figure 3.174: M155 Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).

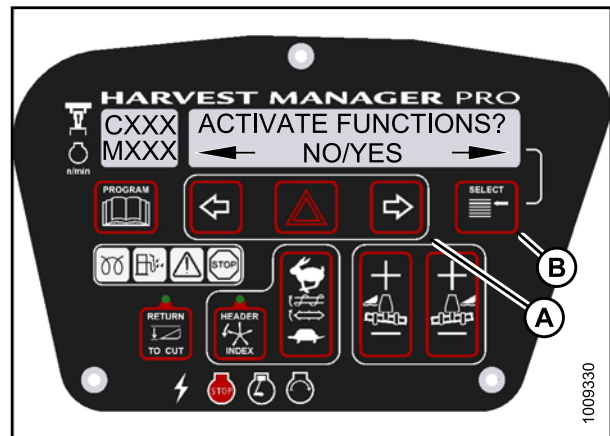


Figure 3.175: M155 Functions

CAUTION

Check to be sure all bystanders have cleared the area.

7. Press SELECT (D) until ACTIVATE HEADER HT is displayed on the upper line.
 - DOWN/UP is displayed on the lower line.
8. Press and hold left (B) arrow to lower header, or press and hold right (C) arrow to raise header. Verify header is functioning properly.
9. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next ACTIVATE FUNCTION.

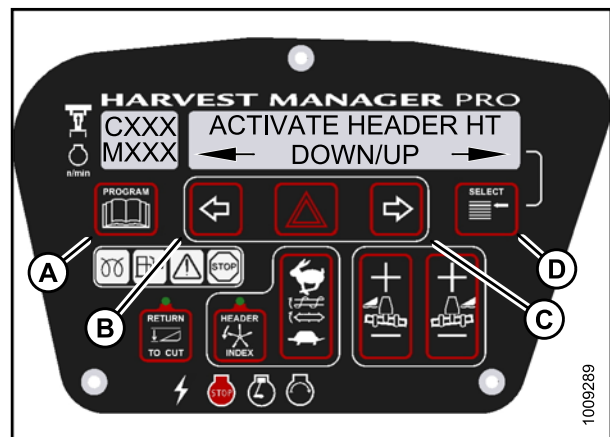


Figure 3.176: M155 Header Height

OPERATOR'S STATION

Testing the Reel Up/Down Activate Function Using the Cab Display Module (CDM)

NOTE:

- This procedure is for draper headers only.
- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers](#), page 213.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode. Press SELECT (C).
 - WINDROWER SETUP? is displayed on the upper line.

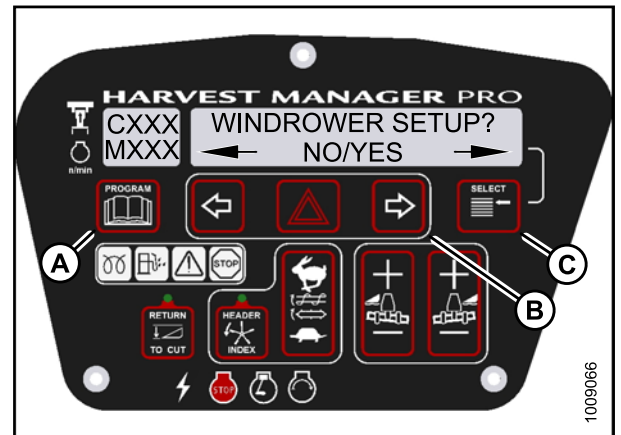


Figure 3.177: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).

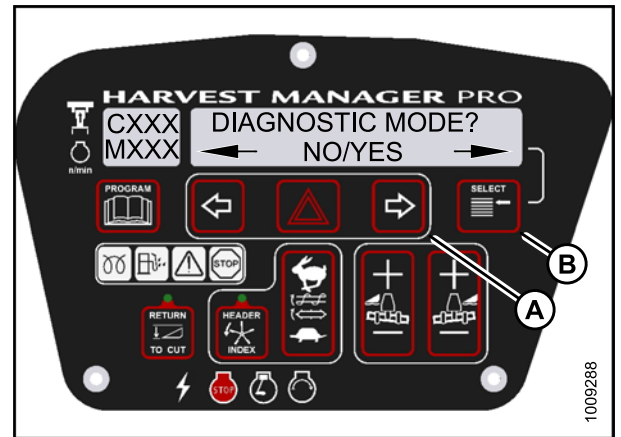


Figure 3.178: M155 Diagnostic Functions

OPERATOR'S STATION

5. Press SELECT (D) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (C) arrow to select YES. Press SELECT (D).

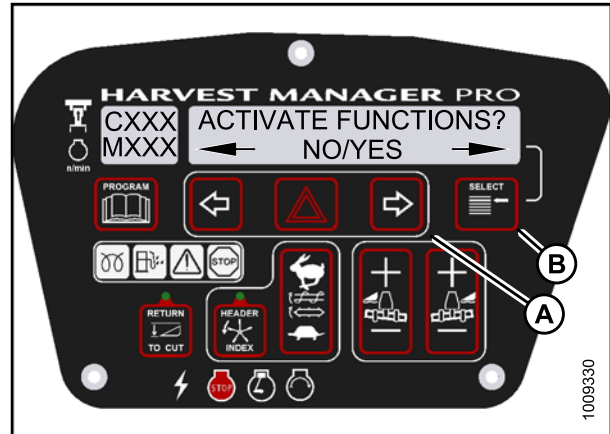


Figure 3.179: M155 Functions

CAUTION

Check to be sure all bystanders have cleared the area.

7. Press SELECT (D) until ACTIVATE REEL HT is displayed on the upper line.
 - DOWN/UP is displayed on the lower line.
8. Press and hold left (B) arrow to **lower** reel. Press and hold right (C) arrow to **raise** reel.
Verify reel is functioning properly.
9. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next ACTIVATE FUNCTION.

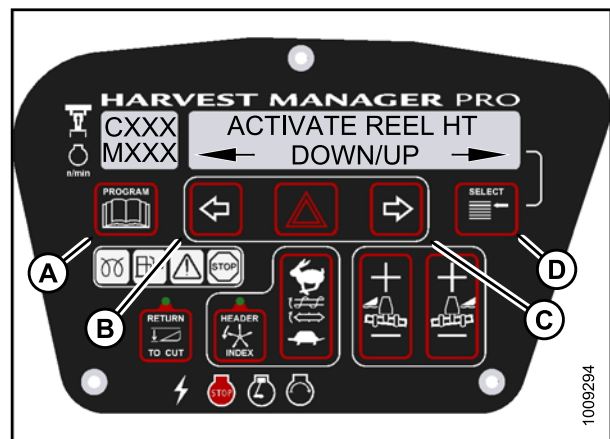


Figure 3.180: M155 Reel Height

Testing the Header Tilt Activate Function Using the Cab Display Module (CDM)

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- This procedure requires installation of the optional Hydraulic Center-Link (MD #B4650) .
- The engine **MUST** be running to perform this procedure.

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.

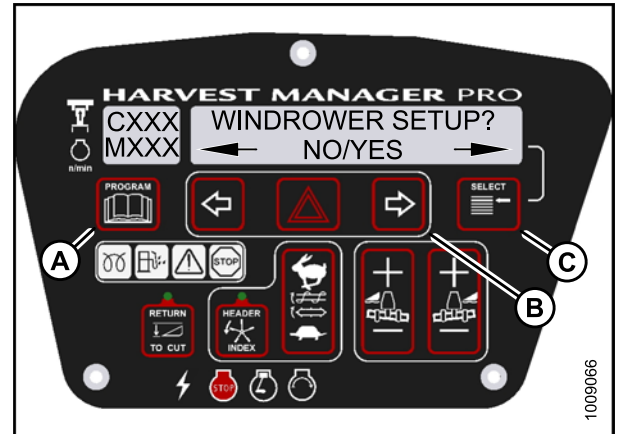


Figure 3.181: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).

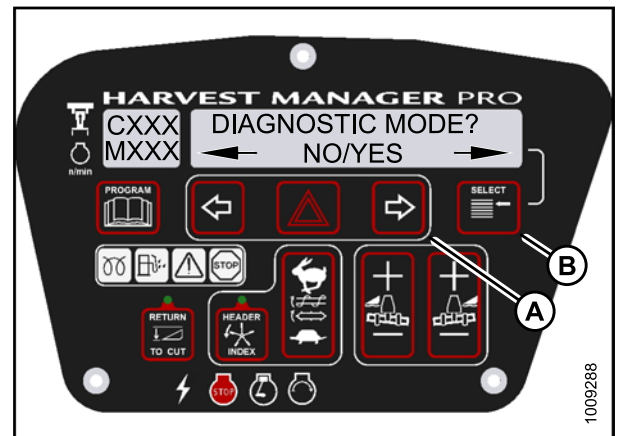


Figure 3.182: M155 Diagnostic Functions

5. Press SELECT (D) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (C) arrow to select YES. Press SELECT (D).

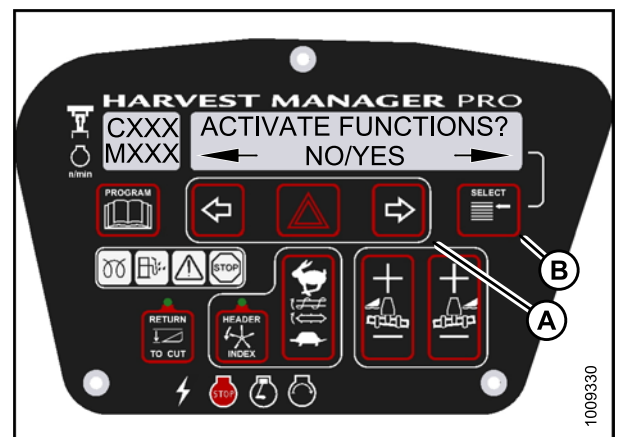


Figure 3.183: M155 Functions

OPERATOR'S STATION

CAUTION

Check to be sure all bystanders have cleared the area.

7. Press SELECT (D) until ACTIVATE HDR TILT is displayed on the upper line.
 - IN/OUT is displayed on the lower line.
8. Press and hold left (B) arrow to **decrease** header tilt. Press and hold right (C) arrow to **increase** header tilt. **Verify header is functioning properly.**
9. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next ACTIVATE FUNCTION.

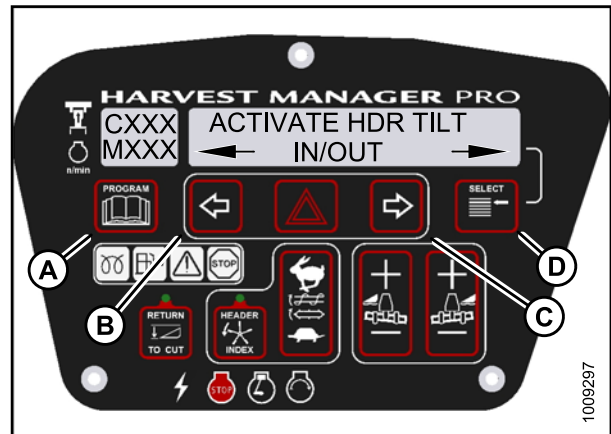


Figure 3.184: M155 Header Tilt Angle

Testing the Reel Fore-Aft Activate Function Using the Cab Display Module (CDM)

NOTE:

- The header **MUST** be attached to windrower to perform this procedure. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
 - The engine **MUST** be running to perform this procedure.
1. Turn ignition key to RUN, or start the engine.
 2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.

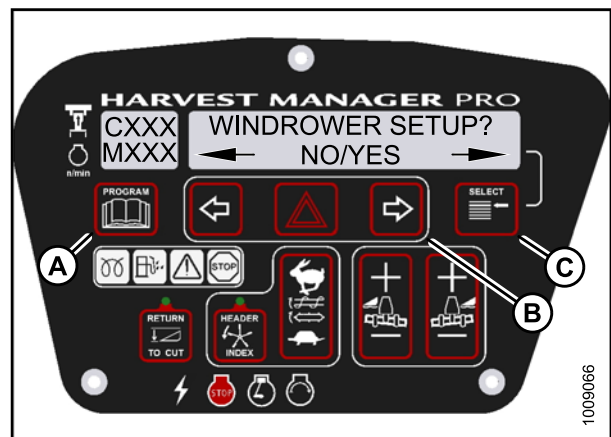


Figure 3.185: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).

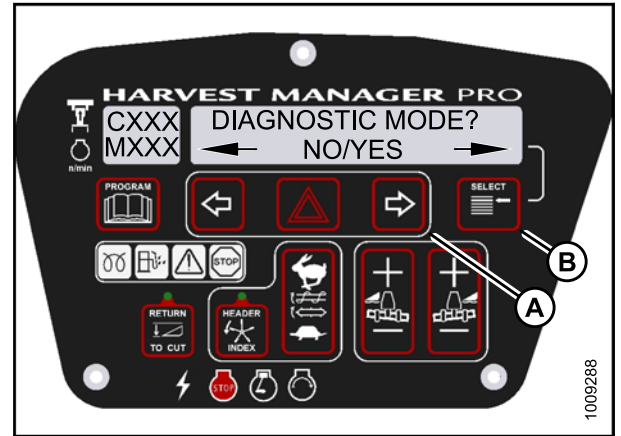


Figure 3.186: M155 Diagnostic Functions

5. Press SELECT (D) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (C) arrow to select YES. Press SELECT (D).

CAUTION

Check to be sure all bystanders have cleared the area.

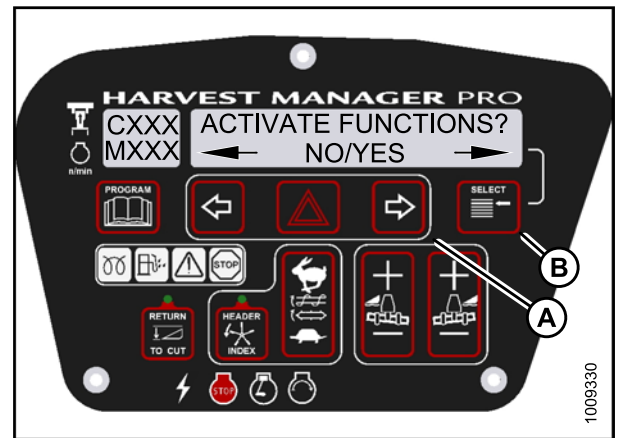


Figure 3.187: M155 Functions

7. Press SELECT (D) until ACTIVATE REEL F/A is displayed on the upper line.
 - FORE/AFT is displayed on the lower line.
8. Verify reel fore-aft is functioning properly.
 - a. Press and hold left (B) arrow to move reel **forward**. Press and hold right (C) arrow to move reel **backward**.
 - b. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next ACTIVATE FUNCTION.

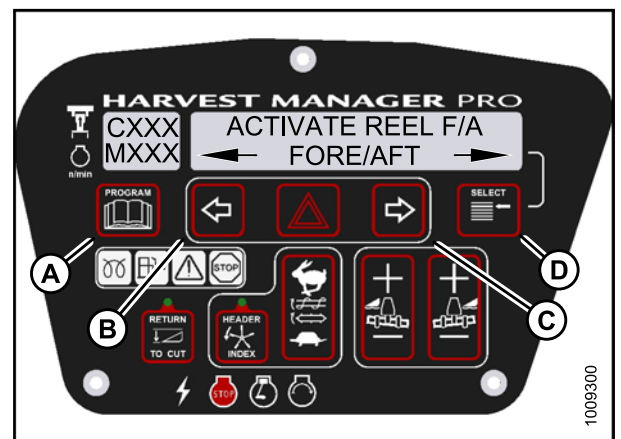


Figure 3.188: M155 Reel Fore-Aft

OPERATOR'S STATION

Activating the Hydraulic Purge Using the Cab Display Module (CDM)

The hydraulic purge removes air from the hydraulic pump system after it has been repaired or changed.

NOTE:

Engine **MUST** be running to perform this procedure.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.

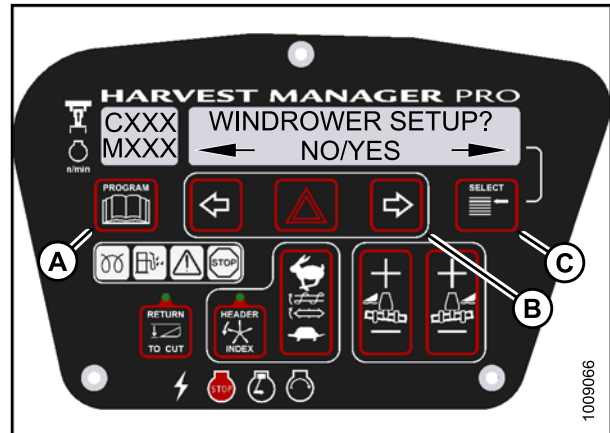


Figure 3.189: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).

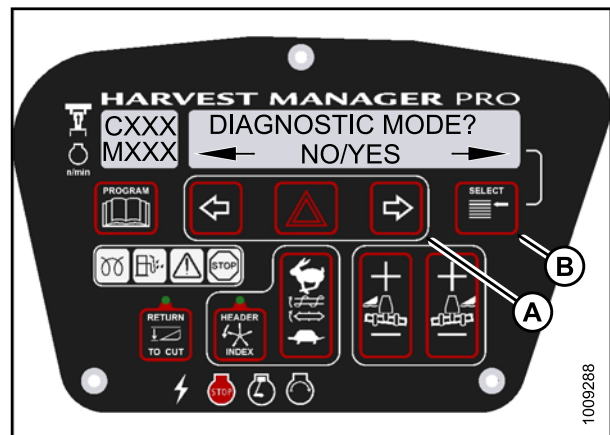


Figure 3.190: M155 Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT is displayed on the upper line.
 - DOWN/UP is displayed on the lower line.



Figure 3.191: M155 Functions

OPERATOR'S STATION

7. Press SELECT (B) until ACTIVATE HYD PURGE? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
8. Press right (A) arrow to select YES. Press SELECT (B).
 - TO ACTIVATE PURGE is displayed on the upper line.
 - PRESS AND HOLD is displayed on the lower line.

CAUTION

Check to be sure all bystanders have cleared the area.



Figure 3.192: M155 Hydraulic Purge

NOTE:

Holding the right arrow (A) activates a timed purge cycle. The CDM will jump to the exit menu if the arrow is released before the end of the timed cycle.

9. Press and hold right (A) arrow to activate purge cycle.
 - PURGE CYCLE STARTED will display on the upper line.
10. When PURGE CYCLE ENDED is displayed release right (A) arrow.
 - NO EXIT YES is displayed on the lower line.
11. Press right arrow to select YES. Press SELECT.
12. Press PROGRAM to exit Programming Mode or press SELECT to proceed to next ACTIVATE FUNCTION.



Figure 3.193: M155 Hydraulic Purge Cycle

Testing the Knife Drive Circuit Using the Cab Display Module (CDM)

IMPORTANT:

Do not over-speed a drive. Over-speeding can lead to vibration, belt failures, or other over-speeding related problems.

NOTE:

- The header **MUST** be attached to windrower to follow this procedure. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- The engine **MUST** be running to perform this procedure.

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode. Press SELECT (C).
 - WINDROWER SETUP? is displayed on the upper line.

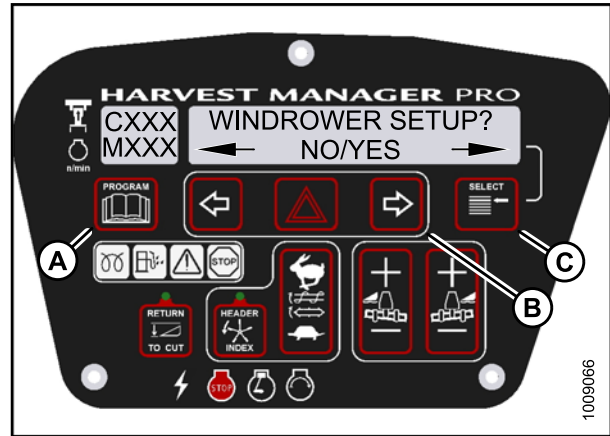


Figure 3.194: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).

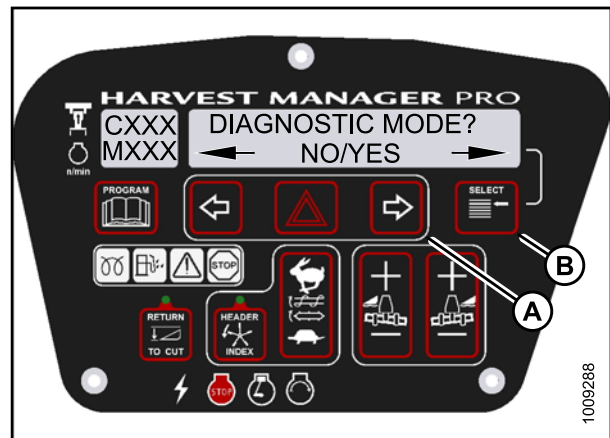


Figure 3.195: M155 Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT is displayed on the upper line.

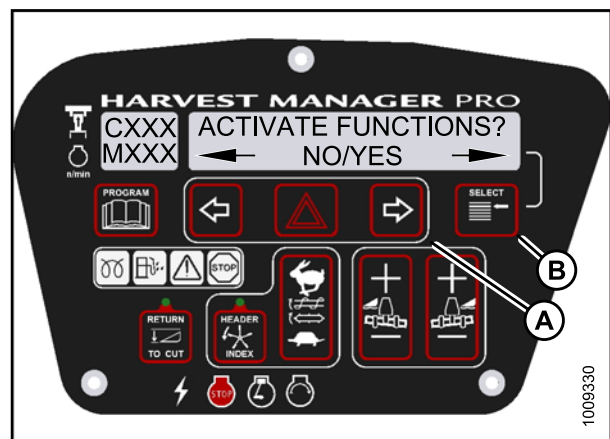


Figure 3.196: M155 Functions

OPERATOR'S STATION

CAUTION

Check to be sure all bystanders have cleared the area.

- Press SELECT (E) until KNIFE DRIVE SPD XXXX is displayed on the upper line.

IMPORTANT:

Do **NOT** over-speed the knife drive.

- Press and hold HAZARD (C) button.
 - Press left (B) arrow to **decrease** knife speed.
 - Press right (D) arrow to **increase** knife speed.

Verify the knife drive is functioning properly.

- Release the HAZARD (C) button. The knife will stop.
- Press PROGRAM (A) to exit Programming Mode or press SELECT (E) to proceed to next ACTIVATE FUNCTION.

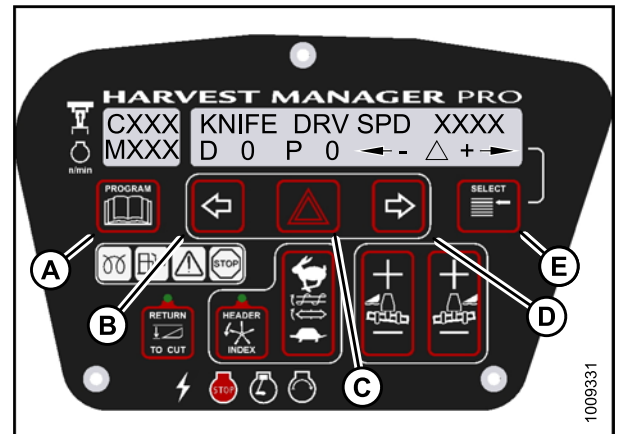


Figure 3.197: M155 Knife Drive

Testing the Draper Drive Circuit Activate Function Using the Cab Display Module (CDM)

IMPORTANT:

Do not over-speed a drive. Over-speeding can lead to vibration, belt failures, or other over-speeding related problems.

NOTE:

- A draper header **MUST** be attached to windrower to follow this procedure. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
 - The engine **MUST** be running to perform this procedure.
- Turn ignition key to RUN, or start the engine.
 - Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.

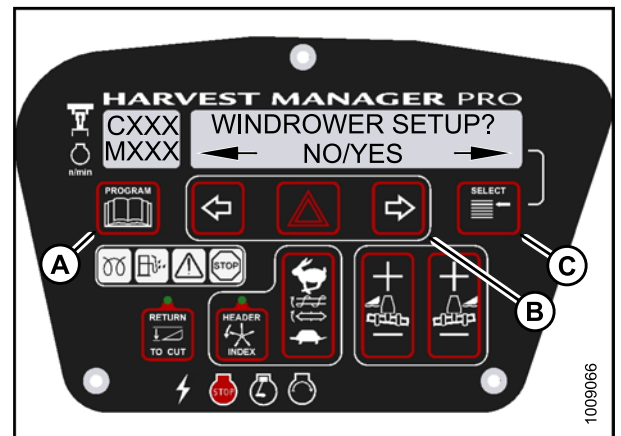


Figure 3.198: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).

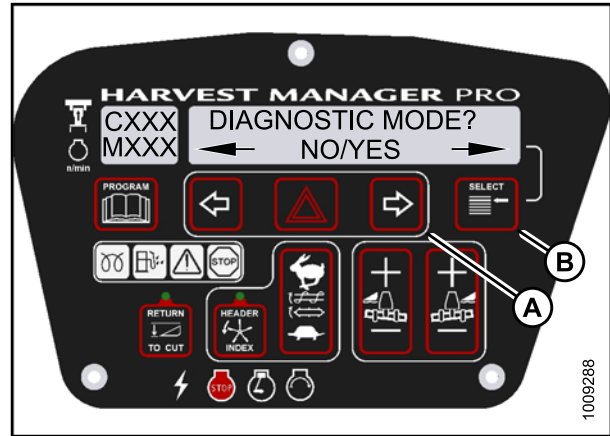


Figure 3.199: M155 Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT is displayed on the upper line.

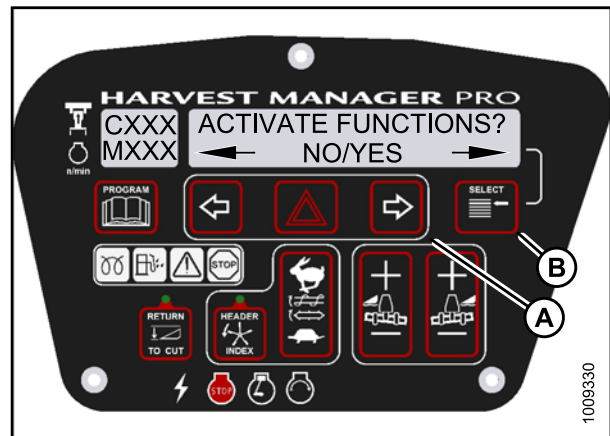


Figure 3.200: M155 Functions

CAUTION

Check to be sure all bystanders have cleared the area.

7. Press SELECT (B) until DRAPER DRV SPD XXXX is displayed on the upper line.

IMPORTANT:

Do **NOT** over-speed the drapers.

8. Press and hold HAZARD (C) button.
 - Press left (B) arrow to **decrease** draper speed.
 - Press right (D) arrow to **increase** draper speed.

Verify the draper drive is functioning properly.

9. Release the HAZARD (C) button. The drapers will stop.
10. Press PROGRAM (A) to exit Programming Mode or press SELECT (E) to proceed to next ACTIVATE FUNCTION.

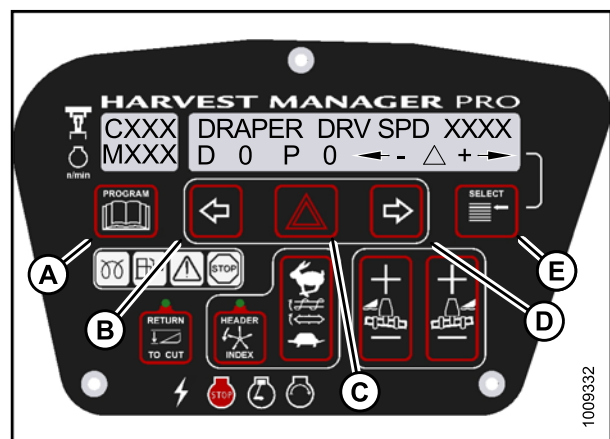


Figure 3.201: M155 Draper Drive

OPERATOR'S STATION

Testing the Reel Drive Circuit Activate Function Using the Cab Display Module (CDM)

IMPORTANT:

Do not over-speed a drive. Over-speeding can lead to vibration, belt failures, or other over-speeding related problems.

NOTE:

- The header **MUST** be attached to windrower to follow this procedure. For more information, refer to [4.5 Attaching and Detaching Headers](#), page 213.
 - This procedure does not apply to rotary disc headers.
 - The engine **MUST** be running to perform this procedure.
1. Turn ignition key to RUN, or start the engine.
 2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.

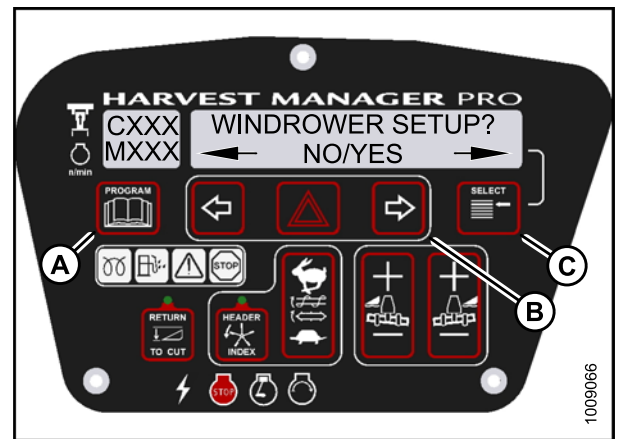


Figure 3.202: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).

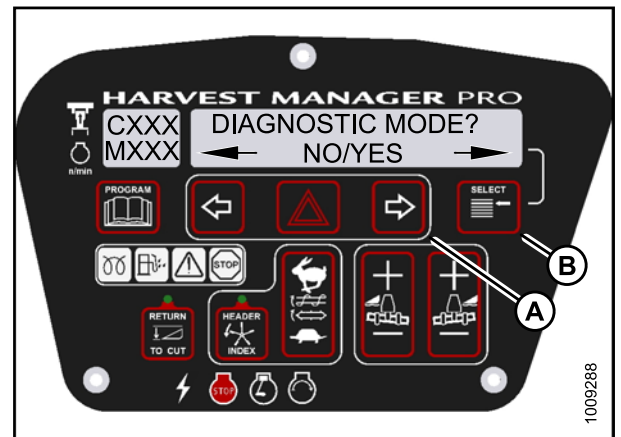


Figure 3.203: M155 Diagnostic Functions

OPERATOR'S STATION

5. Press SELECT (B) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT is displayed on the upper line.



Figure 3.204: M155 Functions

CAUTION

Check to be sure all bystanders have cleared the area.

7. Press SELECT (E) until REEL DRV SPD XXXX is displayed on the upper line.

IMPORTANT:

Do **NOT** over-speed the reel.

8. Press and hold HAZARD (C) button.
 - Press left (B) arrow to **decrease** reel speed.
 - Press right (D) arrow to **increase** reel speed.

Verify the reel drive is functioning properly.

9. Release the HAZARD (C) button. The reel will stop.
10. Press PROGRAM (A) to exit Programming Mode or press SELECT (E) to proceed to next ACTIVATE FUNCTION.

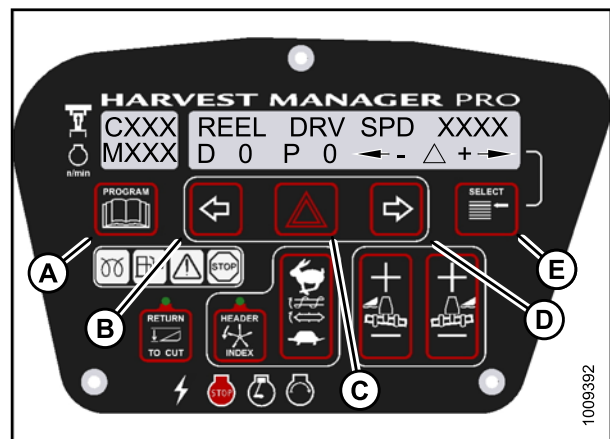


Figure 3.205: M155 Reel Drive

Testing the Rotary Disc Drive Circuit Activate Function Using the Cab Display Module (CDM)

IMPORTANT:

Do not over-speed a drive. Over-speeding can lead to vibration, belt failures, or other over-speeding related problems.

NOTE:

- A rotary disc header **MUST** be attached to windrower to follow this procedure.
- The engine **MUST** be running to perform this procedure.

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.

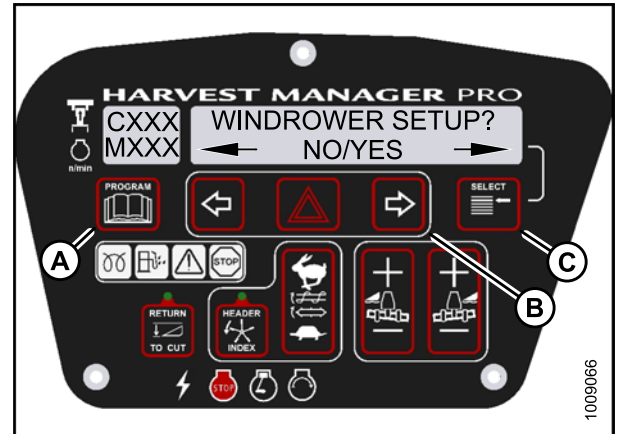


Figure 3.206: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).

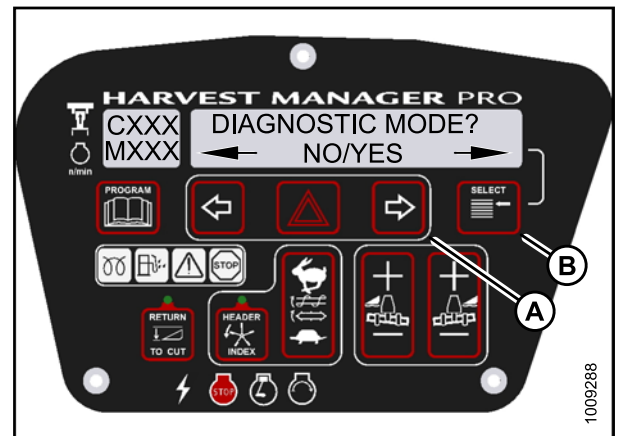


Figure 3.207: M155 Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT is displayed on the upper line.

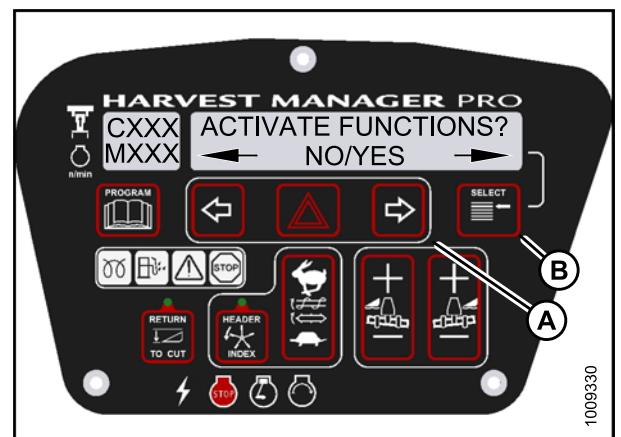


Figure 3.208: M155 Functions

OPERATOR'S STATION

CAUTION

Check to be sure all bystanders have cleared the area.

7. Press SELECT (E) until DISC DRV SPD XXXX is displayed on the upper line.

IMPORTANT:

Do **NOT** over-speed the disc drive.

8. Press and hold HAZARD (C) button.
 - Press left (B) arrow to **decrease** disc speed.
 - Press right (D) arrow to **increase** disc speed.

Verify the disc drive is functioning properly.

9. Release the HAZARD (C) button. The disc drive will stop.
10. Press PROGRAM to exit Programming Mode or press SELECT to proceed to next ACTIVATE FUNCTION.

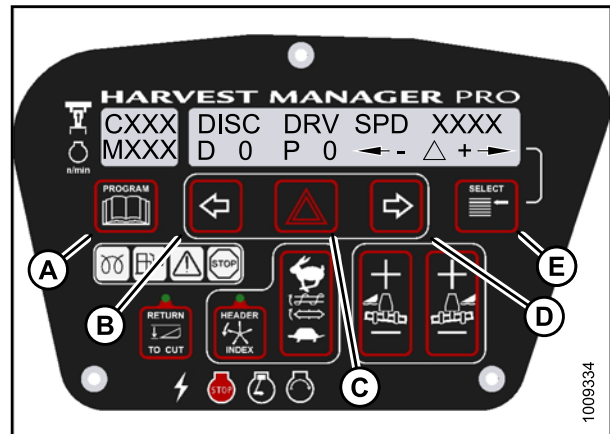


Figure 3.209: M155 Disc Drive

Testing the Double Windrow Attachment (DWA) Drive Activate Function Using the Cab Display Module (CDM)

IMPORTANT:

Do not over-speed a drive. Over-speeding can lead to vibration, belt failures, or other over-speeding related problems.

NOTE:

- DWA must be attached to windrower and activated under the WINDROWER SETUP menu. For more information, refer to [Activating the Double Windrow Attachment \(DWA\)](#), page 110.
 - Engine **MUST** be running to perform this procedure.
1. Turn ignition key to RUN, or start the engine.
 2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode. Press SELECT (C).
 - WINDROWER SETUP? is displayed on the upper line.

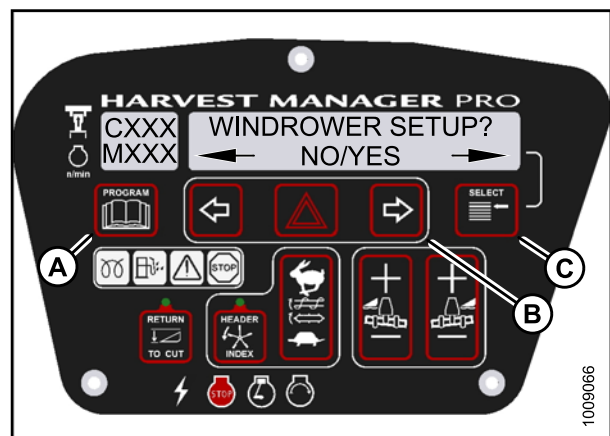


Figure 3.210: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).

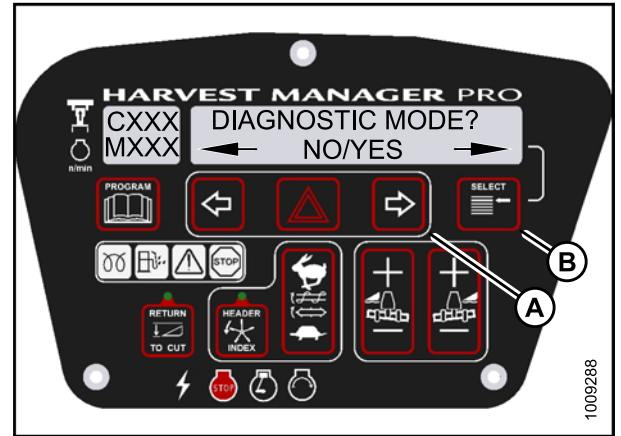


Figure 3.211: M155 Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT is displayed on the upper line.

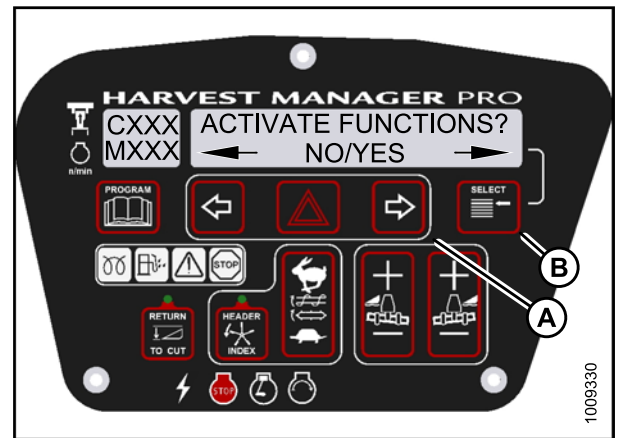


Figure 3.212: M155 Functions

7. Press SELECT (E) until ACTIVATE DWA DRV is displayed on the upper line.

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Do **NOT** over-speed the DWA drive.

8. Press and hold HAZARD (C) button.
 - Press left (B) arrow to decrease DWA drive speed.
 - Press right (D) arrow to increase DWA drive speed.

Verify the DWA drive is functioning properly.

9. Release the HAZARD (C) button. The DWA drive will stop.
10. Press PROGRAM (A) to exit Programming Mode or press SELECT (E) to proceed to next ACTIVATE FUNCTION.

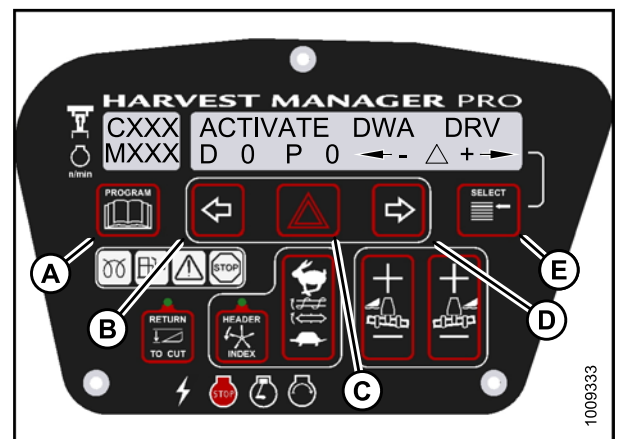


Figure 3.213: M155 DWA Drive

3.19.14 Engine Error Codes

The cab display module (CDM) displays error codes when there is a fault with one of the several sensors that monitor and control engine operation, to assist the Operator or Technician in locating a specific problem with engine operation. Refer to [8.4 Engine Error Codes, page 480](#).

3.19.15 Cab Display Module (CDM) and Windrower Control Module (WCM) Fault Codes

The CDM displays fault codes when there is a fault with one of the sensors that monitor and control windrower operation, to assist the Operator or Technician in locating a specific problem with the windrower. Refer to [8.5 Cab Display Module \(CDM\) Error Codes, page 493](#).

4 Operation

4.1 Owner/Operator Responsibilities



CAUTION

- It is your responsibility to read and understand this manual completely before operating the windrower. Contact your Dealer if an instruction is not clear to you.
- Follow all safety messages in the manual and on safety signs on the machine.
- Remember that YOU are the key to safety. Good safety practices protect you and the people around you.
- Before allowing anyone to operate the windrower, for however short a time or distance, make sure they have been instructed in its safe and proper use.
- Review the manual and all safety related items with all Operators every year.
- Be alert for other Operators not using recommended procedures or not following safety precautions. Correct these mistakes immediately, before an accident occurs.
- Do NOT modify the machine. Unauthorized modifications may impair the function and/or safety and affect machine life.
- The safety information given in this manual does NOT replace safety codes, insurance needs, or laws governing your area. Be sure your machine meets the standards set by these regulations.

4.2 Symbol Definitions

The following symbols are used to depict functions or reactions of the various instruments and controls. Learn the meaning of these symbols before operating the windrower.

4.2.1 Engine Functions

These are the symbols that are used on the console.

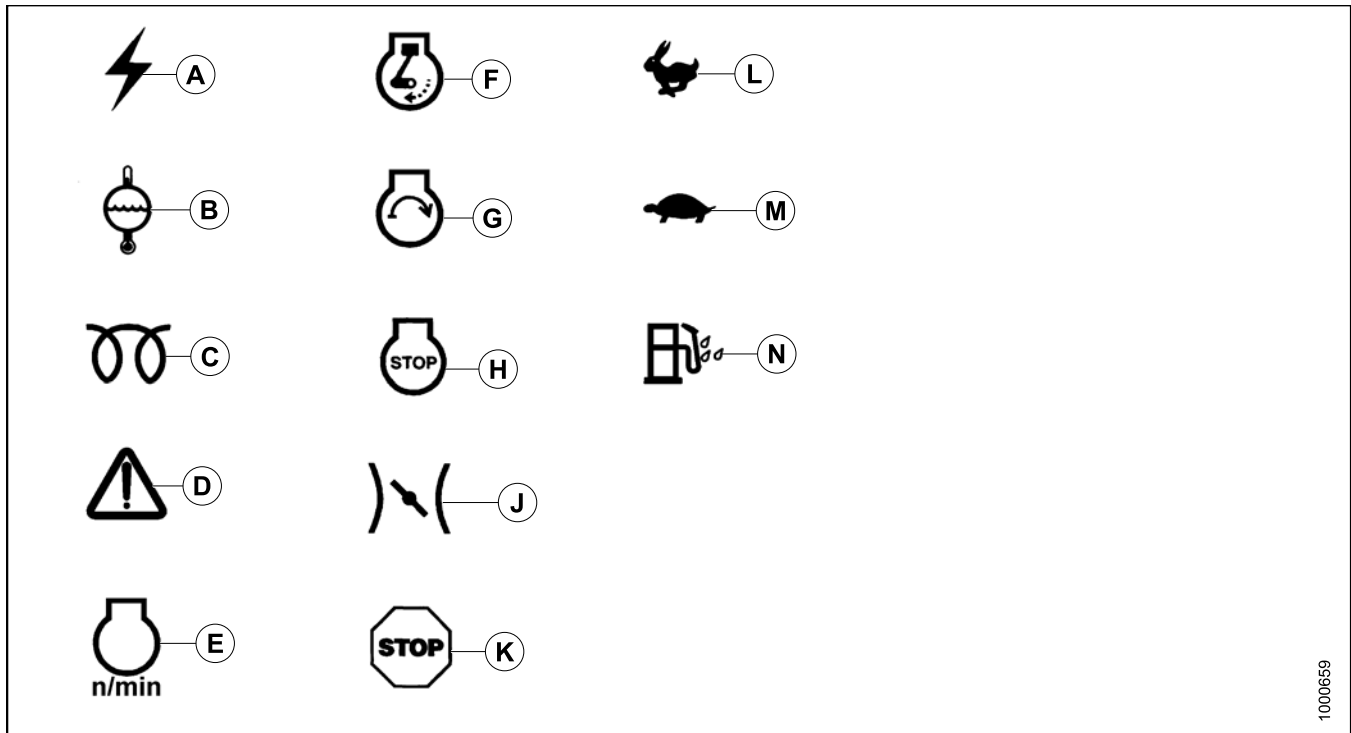


Figure 4.1: Engine Function Symbols

- | | | |
|------------------------------------|--------------------------------|-----------------------|
| A - Electrical Power – Accessories | B - Engine Coolant Temperature | C - Engine Glow Plugs |
| D - Engine Malfunction | E - Engine rpm | F - Engine Run |
| G - Engine Start | H - Engine Stop | J - Engine Throttle |
| K - Engine Urgent Stop | L - Fast | M - Slow |
| N - Water in Fuel | | |

4.2.2 Windrower Operating Symbols

These are the symbols used on the console for windrower operation.

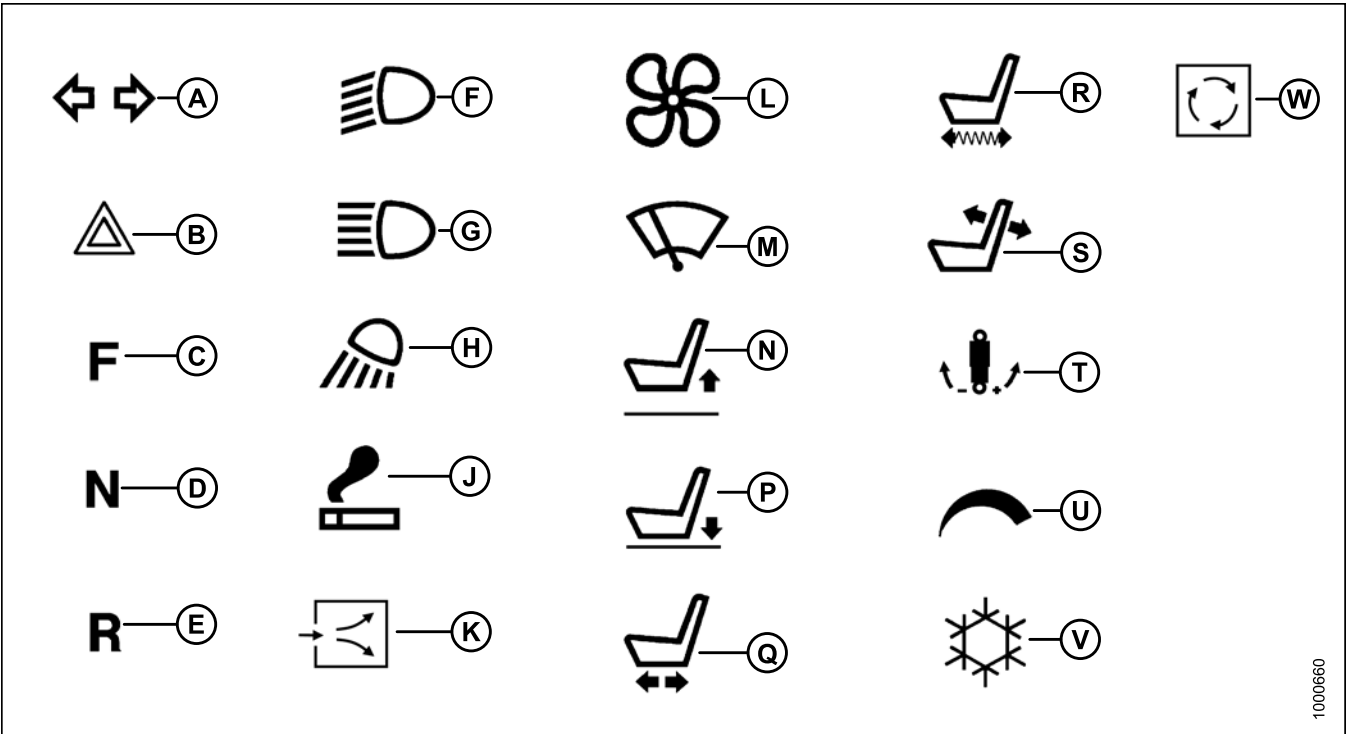


Figure 4.2: Windrower Operating Symbols

A - Turn Signals

D - Neutral

G - Headlights High Beam

K - Fresh Air

N - Seat Height Up

R - Seat Fore Aft Isolator

U - Cab Temperature Control

B - Hazard Warning Lights

E - Reverse

H - Work Light

L - Blower

P - Seat Height Down

S - Seat Back Fore and Aft

V - Air Conditioning

C - Forward

F - Headlights Low Beam

J - Lighter

M - Windshield Wiper

Q - Seat Fore and Aft

T - Seat Ride Damping

W - Recirculate

OPERATION

4.2.3 Header Functions

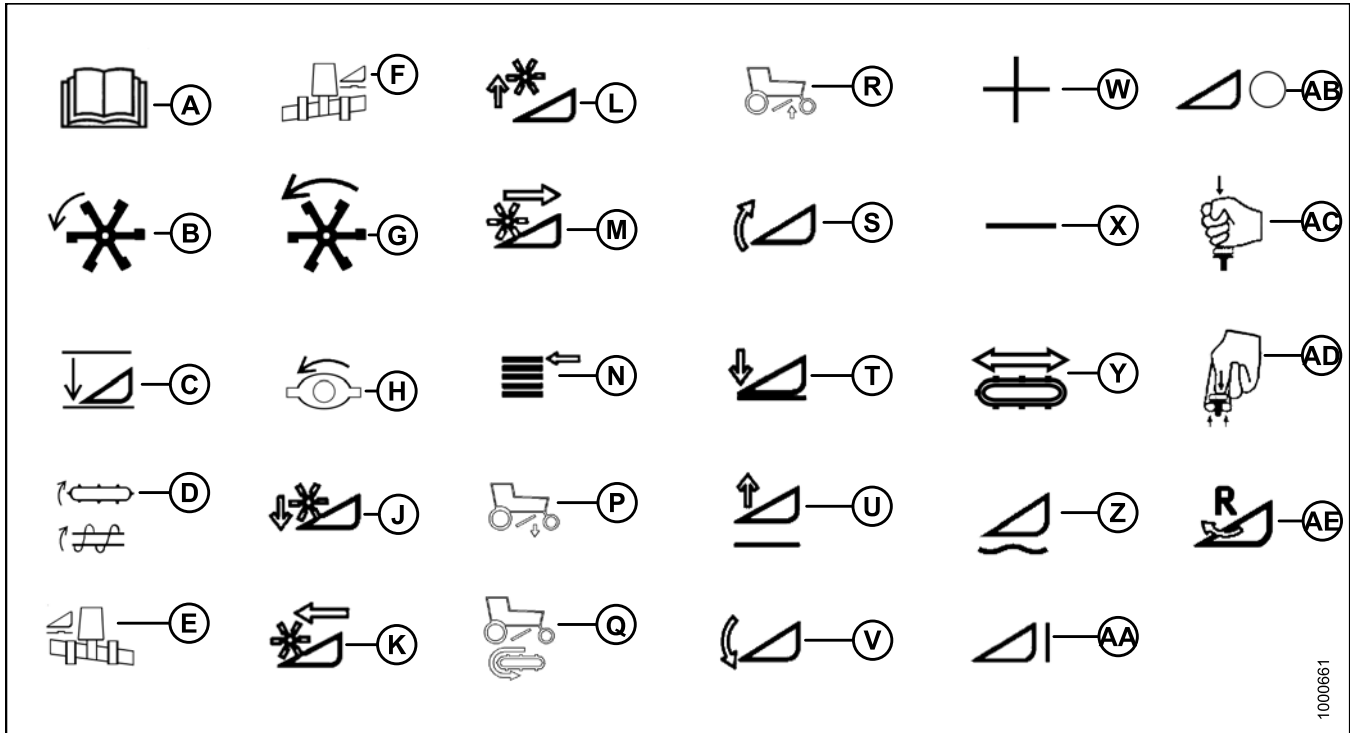


Figure 4.3: Header Function Symbols

- | | | |
|----------------------------|-----------------------|---------------------------------|
| A - Program | B - Header Index | C - Return to Cut |
| D - Conveyor/Auger Speed | E - Float Left | F - Float Right |
| G - Reel Speed | H - Disc Speed | J - Reel Down |
| K - Reel Forward | L - Reel Up | M - Reel Rearward |
| N - Display Select | P - DWA Down | Q - DWA Draper Speed |
| R - DWA Up | S - Header Tilt Up | T - Header Down |
| U - Header Up | V - Header Tilt Down | W - Increase |
| X - Decrease | Y - Deck Shift | Z - Float |
| AA - Header Engage | AB - Header Disengage | AC - Push Down Header Disengage |
| AD - Pull Up Header Engage | AE - Header Reverse | |

4.3 Operating the Windrower

4.3.1 Operational Safety

CAUTION

Follow these safety precautions:

- Wear close fitting clothing and protective shoes with slip resistant soles.
- Remove foreign objects from the machine and surrounding area.
- Carry with you any protective clothing and personal safety devices that **COULD** be necessary through the day. Don't take chances.
- You may need:
 - a hard hat
 - protective glasses or goggles
 - heavy gloves
 - respirator or filter mask
 - wet weather gear

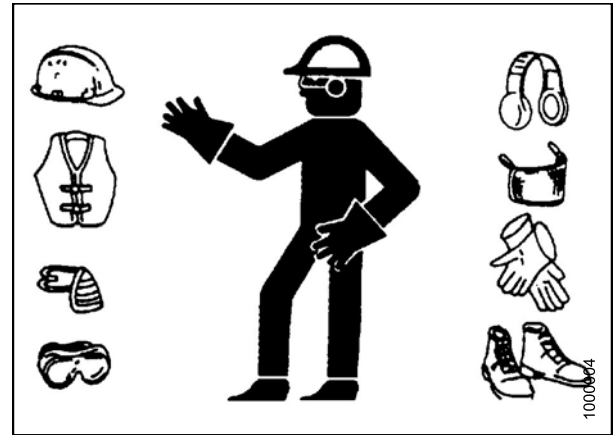


Figure 4.4: Safety Equipment

- Protect against noise. Wear a suitable hearing protective device such as ear muffs or ear plugs to protect against objectionable or uncomfortable loud noises.
- Follow all safety and operational instructions given in your operator's manuals. If you do not have a header manual, get one from your Dealer and read it thoroughly.
- Never attempt to start the engine or operate the machine except from the operator's seat
- Check the operation of all controls in a safe clear area before starting work.
- Check for excessive vibration and unusual noises. If there is any indication of trouble, shut down and inspect the machine. Follow proper shutdown procedure. Refer to [Shutting down the Engine, page 162](#).
- Operate only in daylight or good artificial light.



Figure 4.5: Safety Equipment

4.3.2 Break-In Period

The windrower is ready for normal operation. However, there are several items to check and watch out for during the first 150 hours.

IMPORTANT:

Until you become familiar with the sound and feel of your new windrower, be extra alert and attentive.

 **DANGER**

Before investigating an unusual sound or attempting to correct a problem, place ground speed lever (GSL) in N-DETENT, shut off engine, and remove key.

In addition to the following, check the items specified in [5.12.1 Maintenance Schedule/Record, page 431](#):

- Operate engine at moderate load and avoid extremely heavy or light loading for longer than five minutes.
- Avoid unnecessary idling. If engine will be idling longer than five minutes after reaching operating temperature, turn key OFF to stop engine.
- Check engine oil level frequently. Watch for any signs of leakage. If oil must be added, refer to [Checking Engine Oil Level, page 335](#).

NOTE:

During the break-in period, a higher than usual oil consumption should be considered normal.

NOTE:

If windrower must be driven in cold weather (below freezing), let engine idle for three minutes, and then operate at moderate speed until oil has warmed up.

- Watch coolant gauge in cab for temperature rising beyond normal operating range. Check that coolant level at reserve tank (mounted next to radiator) stays between HOT and COLD marks on tank. Refer to [5.8.6 Engine Cooling System, page 353](#). If over-heating problems occur, check for coolant leaks.

4.3.3 Preseason Checks / Annual Service

 **CAUTION**

- **Review the this operator's manual to refresh your memory on safety and operating recommendations.**
 - **Review all safety signs and other decals on the windrower and note hazard areas.**
 - **Be sure all shields and guards are properly installed and secured. Never alter or remove safety equipment.**
 - **Be sure you understand and have practiced safe use of all controls. Know the capacity and operating characteristics of the machine.**
 - **Store a properly stocked first aid kit and charged fire extinguisher on the windrower.**
1. Perform the following checks:
 - a. Drain off excess hydraulic oil added for storage. Refer to [5.10.3 Changing the Hydraulic Oil, page 407](#).
 - b. Remove plastic bags and/or tape from all sealed openings (air cleaner intake, exhaust pipe, fuel tank).
 - c. Charge battery and install. Be sure terminals are clean and cables are connected securely.

OPERATION

- d. Adjust tension on air conditioning (A/C) compressor belt. Refer to [Tensioning Air Conditioner \(A/C\) Compressor Belt, page 369](#).
 - e. Distribute A/C refrigerant by cycling A/C switch. Refer to [Air Conditioning \(A/C\) Compressor Coolant Cycling, page 159](#).
 - f. Check the entire A/C system for leakage at the beginning of each season.
2. Perform annual maintenance. Refer to [5.12 Maintenance Schedule, page 431](#).

Air Conditioning (A/C) Compressor Coolant Cycling

IMPORTANT:

Perform the following steps whenever the machine is first started after storage for more than one week:

1. Turn blower switch (A) to the first position, turn TEMPERATURE control switch (D) to maximum heating, and A/C control switch (B) to OFF.
2. Start engine, and operate at low idle until engine is warm.
3. Click A/C switch (B) from OFF to ON for one second, then back to OFF for 5–10 seconds. Repeat this step ten times.

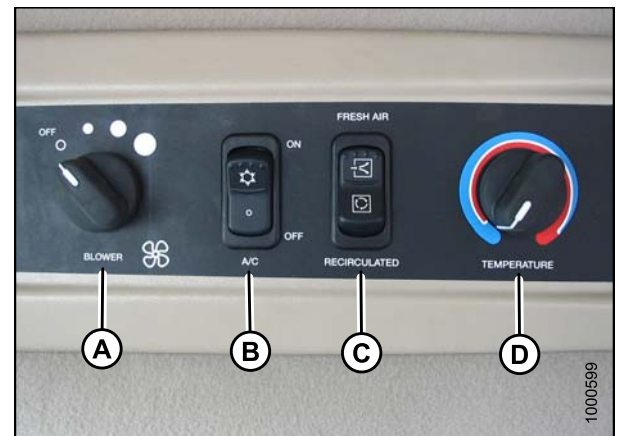


Figure 4.6: Climate Control

A - Blower Switch
B - Air Conditioning Switch
C - Outside Air Switch
D - Temperature Control

4.3.4 Daily Checks and Maintenance

Perform the following checks and recommended maintenance before operating the windrower every day:

1. Check the machine for leaks.

NOTE:

Use proper procedure when searching for pressurized fluid leaks. Refer to [Hoses and Lines, page 412](#).

2. Check for missing or broken parts.
3. Clean the windows and mirrors to ensure good visibility in all directions. Stand on the platform to access the rear window. Hold onto the handholds on the cab front corners and stand on the header anti-slip strips to wash the front window.
4. Clean all lights and reflective surfaces to maintain visibility to others.
5. Perform daily maintenance. Refer to [5.12 Maintenance Schedule, page 431](#).

4.3.5 Engine Operation

Starting the Engine

Carefully review the following topic before attempting to start the engine. It contains important information about Operator safety and the engine ignition system.

DANGER

- Avoid possible injury or death from a runaway machine.
- This machine has safety devices which allow the engine to start only when the ground speed lever is in N-DETENT, the steering wheel is locked in the NEUTRAL position, and the header drive switch is in the OFF position. Under no circumstances are these devices to be deliberately rewired or misadjusted so that the engine can be started with controls out of NEUTRAL.
- Do NOT start engine by shorting across starter or starter relay terminals. Machine will start with drive engaged and move if normal starting circuitry is bypassed.
- Start engine only from operator's seat with controls in NEUTRAL. NEVER start engine while standing on ground. Never try to start engine with someone under or near machine.
- Before starting engine, be sure there is plenty of ventilation to avoid asphyxiation.

WARNING

If starter engages with steering wheel unlocked, ground speed lever out of NEUTRAL, or header clutch engaged, DO NOT START ENGINE. Contact your Dealer.

IMPORTANT:

Do NOT tow machine to start engine. Damage to hydrostatic drives will result.

1. The battery main disconnect switch (A) is located on the right-hand frame rail, behind the maintenance platform, and can be accessed by moving the platform. Ensure switch is in the POWER ON position.

WARNING

Before starting engine, fasten your seat belt and ensure trainer's seat belt is used if seat is occupied. Seat belts improve safety if used and maintained properly.

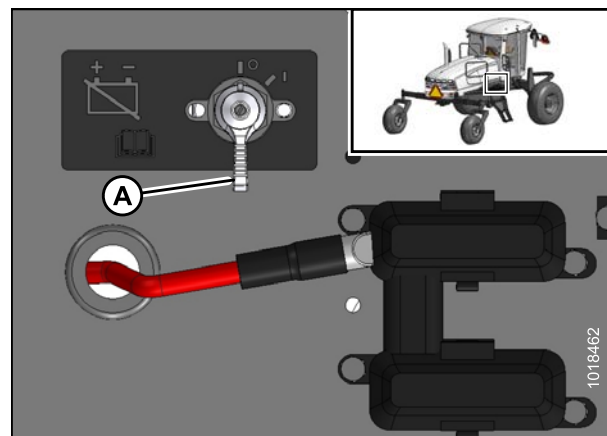


Figure 4.7: Battery Disconnect Switch

OPERATION

2. Ensure lock (A) at the base of the steering column is engaged at cab-forward or engine-forward position.
3. Move ground speed lever (GSL) (B) into N-DETENT.
4. Turn steering wheel until it locks. It may be possible to move the steering wheel slightly in the locked position.

IMPORTANT:

Do **NOT** attempt to force the wheel out of locked position as damage to the traction system may occur.

5. Fasten seat belt.
6. Push HEADER DRIVE switch (C) to ensure it is OFF.

CAUTION

Check to be sure all bystanders have cleared the area.

7. Set throttle (A) to START position—fully back.
8. Sound horn three times.
9. Turn ignition key (B) to RUN position. A single loud tone sounds, engine warning lights illuminate as a self-test, and cab display module (CDM) displays HEADER DISENGAGED and IN PARK.
10. Turn ignition key (B) to START position until engine starts, and then release key. CDM displays programmed header data for five seconds if attached, and then returns to previous display.

IMPORTANT:

The machine gauges and instruments provide important information about machine operation and condition. Familiarize yourself with the gauges and monitor them carefully during start-up operation. Refer to [3.16 Engine Controls and Gauges, page 66](#).

IMPORTANT:

- Do **NOT** operate starter for longer than 15 seconds at a time.
- If engine does not start, wait at least two minutes before trying again.
- After the third 15 second crank attempt, allow solenoid to cool for 10 minutes before further cranking attempts. If engine still does not start, refer to [Engine Troubleshooting](#).
- Do **NOT** operate engine above 1500 rpm until engine temperature gauge is above 40°C (100°F).

NOTE:

When the engine temperature is below 5°C (40°F), follow the procedure for a normal start. The engine will cycle through a period where it appears to labor until the engine warms up. The throttle is nonresponsive during this time as the engine is in WARM UP mode. This mode will last from 30 seconds to 3 minutes depending on the temperature. After the engine has stabilized and is idling normally, the throttle becomes active.



Figure 4.8: Operator Controls



Figure 4.9: Operator Console

OPERATION

Engine Warm-Up

Allow engine to run with throttle lever (A) at or near low idle position until temperature gauge (B) reaches approximately 40°C (100°F).

NOTE:

Scroll through cab display module (CDM) for engine temperature. Refer to [Engine Temperature, page 164](#).



Figure 4.10: Operator Console

Engine Intermediate Speed Control (ISC)

The engine operating speed can be programmed to enable the windrower to operate at reduced engine rpm (that is, 1800, 2000, or 2200 rpm) without significantly affecting the ground or header speeds. The default setting is 2200 rpm or the last selected rpm.

NOTE:

Previous M-Series windrower models included an OFF (full throttle) option which is **NOT** available on the M155.

Engine ISC is useful when operating loads are reduced such as in light crop conditions that do not require the maximum engine rpm. Reduced engine speed lowers fuel consumption, noise levels, and exhaust emissions in addition to reducing engine wear.

The programmed engine speed is activated when the header is engaged.

Programming instructions are provided in [3.19.6 Cab Display Module \(CDM\) Programming, page 89](#).

Shutting down the Engine

CAUTION

Park on a flat, level surface with the header on the ground and the ground speed lever in N-DETENT position with the steering wheel locked.

IMPORTANT:

Before stopping engine, run at low idle for approximately five minutes to cool hot engine parts (and allow turbocharger to slow down while engine oil pressure is available).

OPERATION

1. Lower header.
2. Place ground speed lever (GSL) (B) into N-DETENT.
3. Lock steering wheel.
4. Turn ignition key (A) counterclockwise to OFF position.



Figure 4.11: Operator Console

Filling the Fuel Tank

Fill the fuel tank daily, preferably at the end of the day's operation to help prevent condensation in the tank.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

WARNING

- To avoid personal injury or death from explosion or fire, do NOT smoke or allow flame or sparks near fuel tank when refueling.
- NEVER refuel the windrower when the engine is hot or running.

CAUTION

Do NOT allow tank to empty. Running out of fuel can cause air locks and/or contamination of the fuel system. Refer to [System Priming, page 352](#).

1. Stop windrower and remove key.
2. Stand on either platform to access the fuel tank filler pipe.
3. Clean the area around filler cap (A).
4. Turn cap handle (B) counterclockwise until loose and then remove cap.
5. Fill tank with approved fuel. Refer to [8.2.3 Lubricants, Fluids, and System Capacities, page 477](#).

IMPORTANT:

Do NOT fill tank completely—space is required for expansion. A filled tank could overflow if exposed to a rise in temperature, such as direct sunlight.

6. Replace fuel tank cap (A) and turn cap handle (B) clockwise until snug.

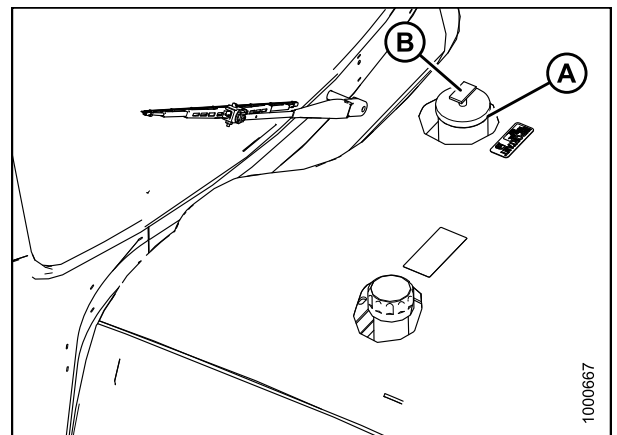


Figure 4.12: Fuel Filler Cap

OPERATION

Engine Temperature

The normal engine operating temperature range is 82–104°C (180–220°F). Engine temperature is indicated by gauge (B) on the operator's console.

If the temperature exceeds 104°C (220°F), an ongoing intermittent tone will be heard and the cab display module (CDM) will flash ENGINE TEMP. Stop the engine immediately and determine cause. The tone will stop and the CDM will return to normal when the temperature drops below 102°C (215°F).



Figure 4.13: Operator Console

Engine Oil Pressure

The nominal engine oil pressure is 69 kPa (10 psi) at low idle and 380 kPa (55.1 psi) at maximum rated speed.

If the oil pressure drops below the preset level of 52 kPa (7.5 psi), the cab display module (CDM) flashes an error code and error message.

If the STOP ENGINE light illuminates, stop the engine **IMMEDIATELY** and investigate.

If the yellow CAUTION light illuminates, you may continue operations and investigate later, but you are **STRONGLY** advised to monitor the situation carefully.

Cab Display Module (CDM) Voltage Display

The electrical system voltage is displayed on the cab display module (CDM) when selected with the SELECT button on the ground speed lever (GSL) handle or the SELECT switch on the CDM. The display indicates the condition of the battery and alternator.

Ignition	Engine	Reading	Indicated Condition
ON	Running	13.8–15.0	Normal
		> 16.0 ¹⁹	Regulator out of adjustment
		< 12.5 ¹⁹	Alternator not working or regulator out of adjustment
	Shut down	12.0	Battery normal

Engine Warning Lights

There are four engine warning lights that illuminate if abnormal conditions occur while the engine is running. The engine warning lights should **NOT** be illuminated under normal operating conditions. For more information, refer to [Engine Warning Lights, page 85](#).

19. Display flashes voltage reading with single loud tone. Repeats every 30 minutes until condition is fixed.

4.3.6 Driving the Windrower

Review the following list of dangers, warnings, and cautions before operating the windrower for the first time, or when training new operators.

DANGER

- NEVER move the ground speed lever or steering wheel until you are sure all bystanders have cleared the area.
- Make sure area is clear before making turns, as the ends of a header travel in a large arc.
- Check the operation of all controls in a safe, clear area before starting work.
- Understand the capacity and operating characteristics of your machine.
- Do NOT allow riders in or on the machine.
- Do NOT operate unless seated in the operator's position.
- Do NOT attempt to get on or off a moving windrower.
- AVOID sudden starts and stops.
- AVOID inclines, ditches, and fences.
- Do NOT rapidly accelerate or decelerate when turning.
- REDUCE your speed before turning, crossing slopes, or travelling over rough ground.
- Do NOT allow anyone to stand behind the machine while operating. Foreign objects may be forcibly ejected.

WARNING

The seat belts can help ensure your safety when properly used and maintained.

- Before starting the engine, fasten your seat belt, and ensure that the training seat occupant's seat belt is securely fastened.
- Never wear a seat belt loosely or with slack in the belt system. Never wear the belt in a twisted condition or pinched between the seat structural members.

WARNING

Avoid driving the machine with header removed. Removing header decreases the weight on drive wheels, reducing steering control. If you must drive the machine with header removed, or without a MacDon weight system

- Use transmission low speed range, do NOT exceed 1500 rpm engine speed, and avoid loose gravel and slopes.
- Never use windrower as a towing vehicle when header is removed, except as instructed in [Towing Header with Windrower, page 177](#). There is insufficient weight on the drive wheels to provide steering control.
- If control of machine is lost, immediately pull ground speed lever (GSL) to NEUTRAL.
- Be aware that cab structure will NOT withstand a roll-over. Because of windrower shape characteristics, a roll-over protected (ROPS) cab is not required.

 **WARNING**

When travelling on steep slopes:

- Lower header and reduce speed.
- Move GROUND SPEED RANGE switch to L – low range.
- If the ground speed is greater than or equal to 40 km/h (25 mph), the CDM will display a warning message (SLOW DOWN) with an audible alert. Move GSL closer to NEUTRAL to reduce speed.

 **CAUTION**

Hydrostatic Steering control is different from conventional steering mechanisms

- Hydrostatic steering is more sensitive than mechanical steering. Do NOT make abrupt changes in steering direction.
- Steering is opposite to normal when driving in reverse.
- With the engine running, moving the ground speed lever out of N-DETENT unlocks steering. Any movement of steering wheel will then cause the machine to move, even if the ground speed lever has not been moved forward or rearward from the NEUTRAL position.
- The brakes are only on when the ground speed lever (GSL) is in N-DETENT and the steering wheel is centered and locked.

Entering and Exiting the Windrower

 **CAUTION**

To prevent slipping and possible injury, ALWAYS face the windrower and use the hand rail when dismounting (or mounting). NEVER attempt to get on or off a moving windrower.

Before leaving the operator's seat for any reason:

- Park on level ground if possible.
- Be sure ground speed lever is in N-DETENT and steering wheel is locked in the straight-ahead position.
- Fully lower header and reel.
- Disengage header drives.
- To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key from ignition.
- Turn off lights unless required for inspection purposes.
- Release seat belt.
- Turn off wipers.
- Raise armrest and steering wheel for easier exit and re-entry.
- Lock the cab door when leaving the windrower unattended. (When the door is locked, it can still be opened from inside the cab.)

OPERATION

Swing-away platforms and stairs (A) are provided on both sides of the windrower to accommodate cab-forward and engine-forward access to the operator's station, as well as several maintenance tasks.

The left cab-forward side platform is shown in the rearward (cab-forward) position.

Two doors (B) are provided for cab entry and exit in either cab-forward mode or engine-forward mode. Enter the cab using the door opposite the operator's console.

NOTE:

When the engine is shut down, rear field lights turn on for 60 seconds to illuminate the platform and stairs.

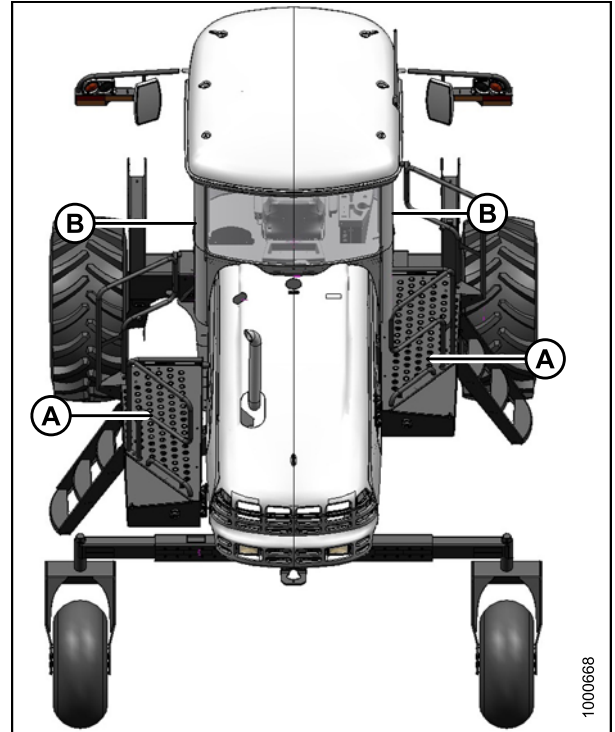


Figure 4.14: Platforms and Doors

Driving Forward in Cab-Forward Mode

CAUTION

Operate both steering wheel and ground speed lever slowly for familiarization. Avoid the common tendency of new Operators to oversteer.

WARNING

Do NOT drive windrower on road in cab-forward configuration, unless it is equipped with the proper lighting and markings for cab-forward road travel.

In cab-forward mode, the operator's station is facing away from the engine. If necessary, swivel operator's seat to cab-forward position as follows:

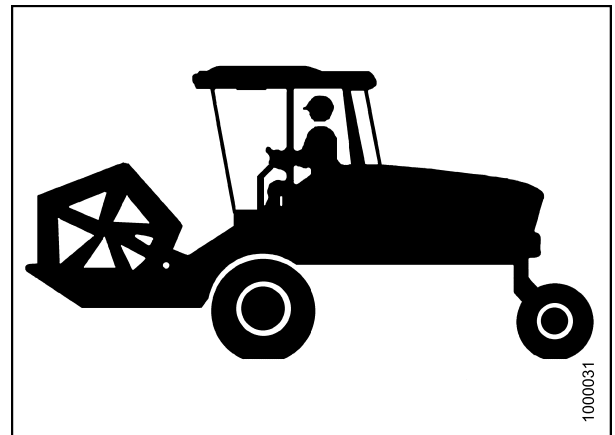


Figure 4.15: Cab-Forward Mode

OPERATION

1. Place ground speed lever (GSL) (A) in N-DETENT. Engine can be running.

IMPORTANT:

If GSL is NOT in N-DETENT, damage to the GSL cable may result when swivelling operator's station.

2. Pull up on knob (B) and hold to release latch (C) at base of steering column.
3. Turn steering wheel counterclockwise to pivot operator's station clockwise 180° until pin engages latch to secure operator's station in new position.
4. Ensure seat belt is fastened.
5. Start engine if not running. Refer to [Starting the Engine, page 160](#).
6. There are two cab-forward speed ranges. Set ground speed range switch (A) to either **H** (0–25.7 km/h [16 mph]), or **L** (0–17.7 km/h [11 mph]).
7. Slowly push throttle (B) to full forward (operating speed). The cab display module (CDM) should display 2320–2350 rpm at (C).

CAUTION

Check again to be sure all bystanders have cleared the area.

8. Move the GSL (E) out of N-DETENT and slowly forward to desired speed which will be displayed at (D).

NOTE:

The windrower can be equipped with an automatic steering system for use in the field. An automated steering system is available as an option and can be installed by a MacDon Dealer. The GSL has been pre-wired at the factory with a switch. Refer to [7.1.2 Automated Steering Systems, page 455](#).

Driving Reverse in Cab-Forward Mode

WARNING

Back up slowly. Steering is opposite to normal when reversing. Hold steering wheel at the bottom and turn wheel in direction you want the rear (cab-forward) of the machine to travel.



Figure 4.16: Operator Console

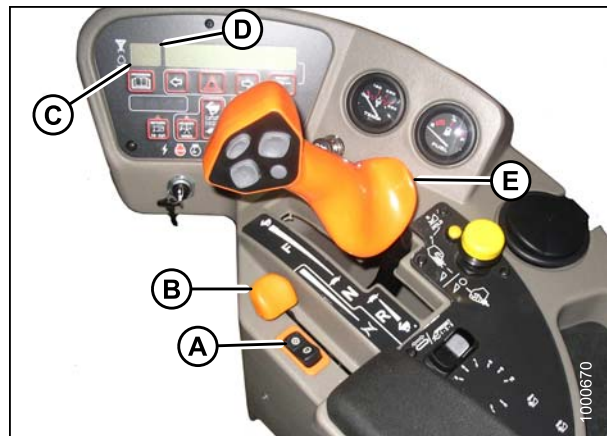


Figure 4.17: Operator Console

OPERATION

1. Move speed range switch (A) to L (low-range position).
2. Move throttle lever (B) to a mid-range position.

NOTE:

Steering will be less sensitive in low speed range; reduced engine speed.

CAUTION

Check again to be sure all bystanders have cleared the area.

3. Move the ground speed lever (GSL) rearward to desired speed.
4. Steer as shown.

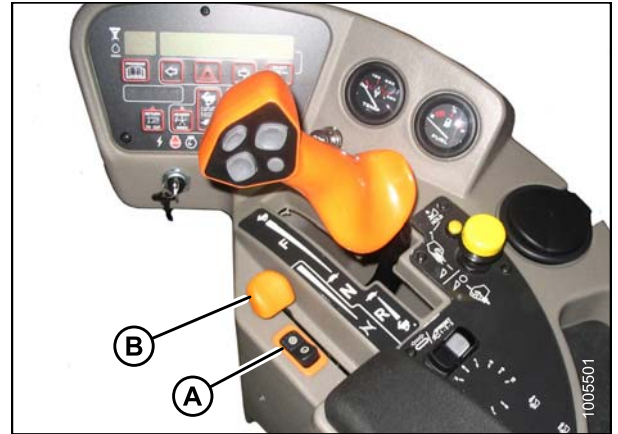


Figure 4.18: Operator's Console

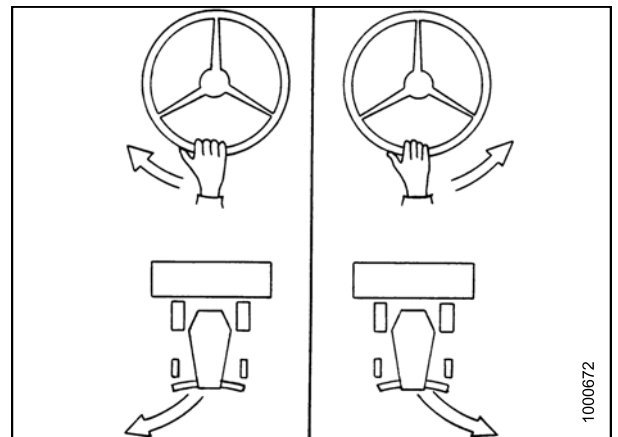


Figure 4.19: Cab-Forward Mode

Driving Forward in Engine-Forward Mode

In the engine-forward mode, the operator's station is facing toward the engine. If necessary, swivel operator's station to engine-forward position as follows:

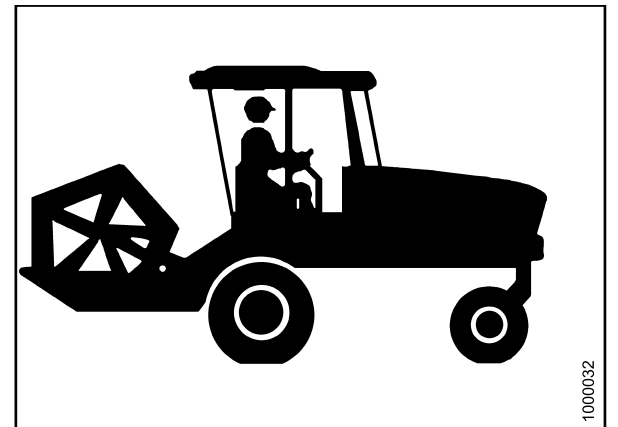


Figure 4.20: Engine-Forward – Seat Faces Engine

OPERATION

1. Place ground speed lever (GSL) (A) in N-DETENT and lock steering wheel. Engine can be running.

IMPORTANT:

If GSL is **NOT** in N-DETENT, damage to the GSL cable may result when swivelling operator's station.

2. Pull up on knob (B) and hold to release latch (C) at base of steering column.
3. Turn steering wheel clockwise to pivot operator's station counterclockwise 180° until pin engages latch to secure operator's station in new position.
4. Start engine if not running.



Figure 4.21: Engine-Forward – Seat Faces Engine

5. Set ground speed range switch (A) to **H** for road speed (0–37 km/h [23 mph]). Cab display module (CDM) will display ROAD GEAR at (F) and an alarm will briefly sound.
6. Slowly push throttle (B) to full forward (operating speed). CDM should display 2320–2350 rpm at (C).

CAUTION

Check to be sure all bystanders have cleared the area.

7. Slowly move the GSL (E) forward to desired speed which will be displayed at (D).

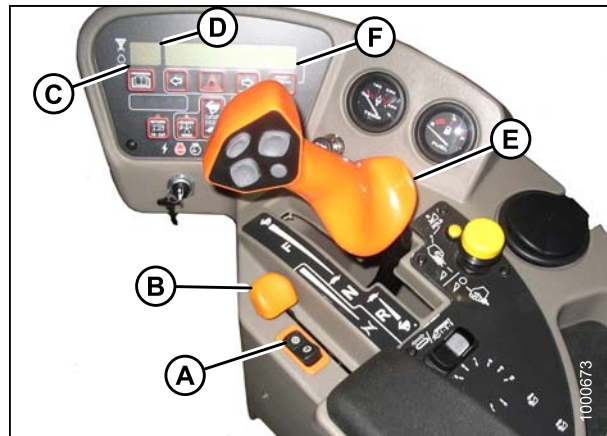


Figure 4.22: Operator Console

CAUTION

Operate both steering wheel and ground speed lever slowly while becoming familiar with the machine. Remember that steering is more sensitive when speed-range control is in high road speed position. Avoid the common tendency of new Operators to oversteer.

8. If more tractive (lugging) power is required (for example, when driving up a ramp, up a hill, or up out of a ditch):
 - a. Move the GSL (E) closer to NEUTRAL.
 - b. Switch speed-range control (B) to **L** (low range).
9. Once the lugging condition no longer exists:
 - a. Set GSL (E) to **NOT MORE THAN HALF** maximum forward speed.
 - b. Move speed-range control (B) to **H** (high-range). Steering is more sensitive in this speed range.

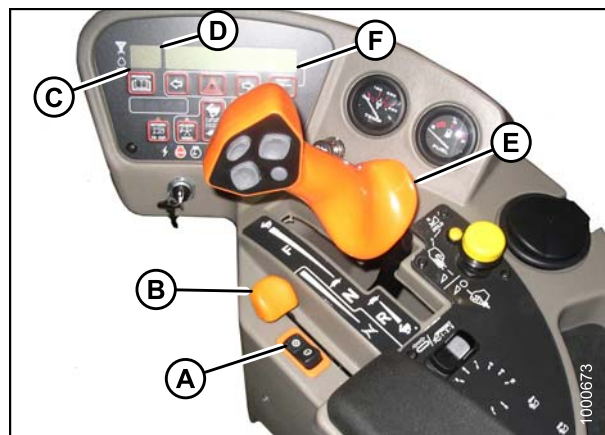


Figure 4.23: Operator Console

Driving in Reverse in Engine-Forward Mode

WARNING

Back up slowly. Steering is opposite to normal when reversing. Hold steering wheel at the bottom and turn wheel in direction you want the rear (cab-forward) of the machine to travel.

1. Move speed-range switch (A) to **L** (low-range position).
2. Move throttle lever (B) to a mid-range position.

NOTE:

Reversing in low speed range and at reduced engine speed is recommended since steering will be less sensitive than at higher speed settings.



Figure 4.24: Operator Console

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

3. Move the ground speed lever (GSL) (C) rearward to desired speed.
4. Steer as shown.

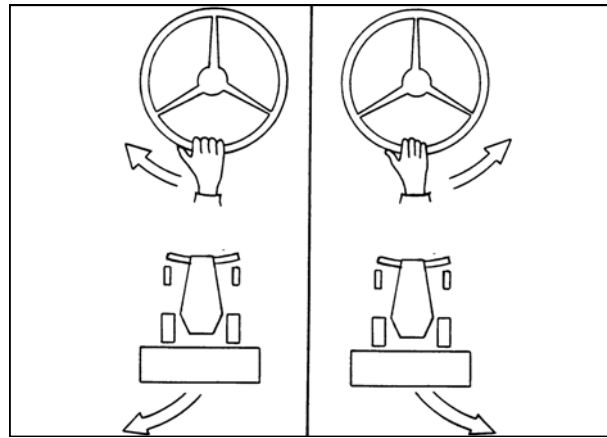


Figure 4.25: Steering the Windrower

Spin Turning

Hydrostatic steering provides significantly more maneuverability than mechanical steering.

CAUTION

Be sure area is clear before making turns. Although windrower pivots on the spot, the ends of the header travel faster and in a large arc.

1. Move the ground speed lever (GSL) (A) out of N-DETENT towards the seat and hold.
2. Slowly turn the steering wheel in the desired direction of turn. The windrower will pivot between the drive wheels.
3. To increase the turn radius, slowly move the GSL away from NEUTRAL. Remember that this will increase ground speed as well.
4. To stop the turn, slowly turn the steering wheel back to its centered position.



Figure 4.26: Operator Console

Stopping

WARNING

Do NOT move ground speed lever rapidly back to NEUTRAL. You may be thrown forward by sudden stop and wheels may skid reducing steering control. Always wear seat belt when operating windrower.

To stop the windrower:

OPERATION

1. **SLOWLY** return the ground speed lever (GSL) (A) to NEUTRAL and into N-DETENT.
2. Turn steering wheel until it locks.
3. Move throttle lever (B) to low idle position.

NOTE:

Avoid unnecessary idling. Stop engine if it will be idling for longer than five minutes.

NOTE:

Brakes are automatically engaged when steering wheel is locked in NEUTRAL position.

IMPORTANT:

Before stopping engine, run at low idle for approximately five minutes to cool hot engine parts (and allow turbocharger to slow down while engine oil pressure is available).

4. Turn ignition key counterclockwise to OFF position.



Figure 4.27: Operator Console

4.3.7 Adjusting Caster Tread Width

The rear casters can be adjusted to a narrow tread width to allow loading and shipping without having to remove them.

A narrow tread width also suits smaller headers by allowing more space to the uncut crop and provides more maneuverability around poles, irrigation inlets, or other obstacles.

A wider tread width is useful in heavy crops that produce large windrows so that runover is reduced.

! DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

! CAUTION

Park on a flat, level surface with the header on the ground and the ground speed lever in N-DETENT position with the steering wheel locked.

OPERATION

Adjust the caster tread width as follows:

1. Raise rear of windrower slightly so that most of the weight is off the casters, using a jack or other lifting device under the frame at (A).

NOTE:

Lifting device should have a lifting capacity of at least 2270 kg (5000 lb.).

2. Remove six bolts (B) (four on backside, two on underside) and washers from left and right side of walking beam.

3. Slide extensions inboard or outboard equal amounts and align holes at desired location.

NOTE:

Use the caster wheels to assist in moving the extensions by rotating the caster until the wheel is parallel to the walking beam.

IMPORTANT:

Caster wheels must be equidistant from center of windrower.

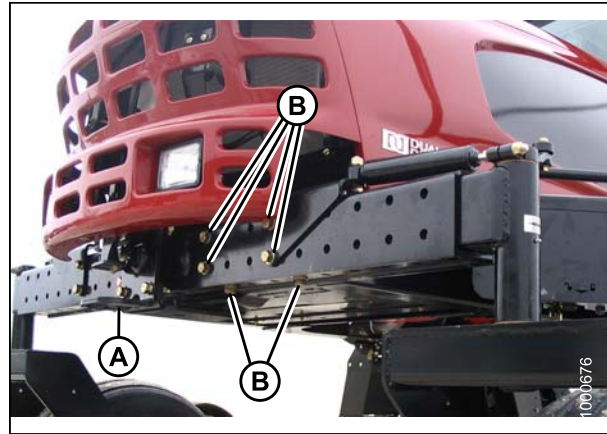


Figure 4.28: Caster Wheel Extensions



Figure 4.29: Caster Wheel Extensions

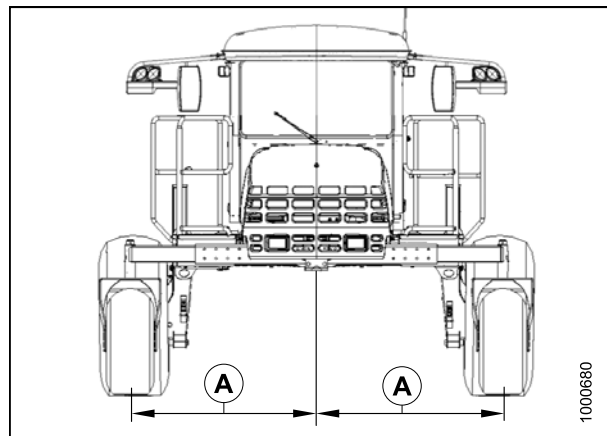


Figure 4.30: Adjustable Caster Wheels

OPERATION

4. Line up holes then install shorter bottom bolts (B).
5. Position bracket (A) and install back bolts (C).
6. Tighten bolts as follows:
 - a. Snug bottom bolts (B), then snug back bolts (C).
 - b. Tighten and torque back bolts (C) to 447 N·m (330 ft·lbf).
 - c. Tighten and torque bottom bolts (B) to 447 N·m (330 ft·lbf).
7. Lower windrower to ground.

IMPORTANT:

Torque bolts after first 5 and 10 hours of operation.

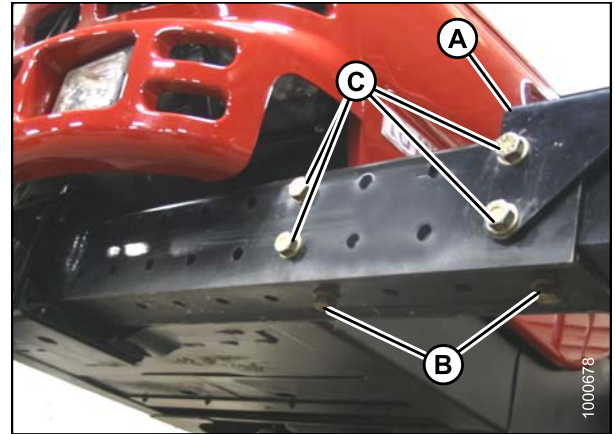


Figure 4.31: Caster Wheel Extensions

4.3.8 Transporting

Driving on the Road

The M155 Self-Propelled Windrower is designed to be driven on the road with the engine facing forward to provide better visibility for the Operator and improved stability for the machine. The windrower can also be driven on the road in cab-forward mode, but at a reduced speed and under restricted conditions.

! WARNING

Collision between windrower and other vehicles may result in injury or death.

! WARNING

When driving windrower on public roadways:

- Obey all highway traffic regulations in your area. Use pilot vehicles in front and rear of windrower if required by law.
- Use slow-moving vehicle emblem and flashing warning lights unless prohibited by law.
- If width of attached header impedes other vehicle traffic, remove header and install a MacDon approved weight box.

! WARNING

- Do NOT drive windrower on the road in the cab-forward mode, unless the optional lighting marking kit is installed, as lighting/reflector visibility will not be compliant with road regulations. Refer to [7.1.4 Lighting and Marking for Cab-Forward Road Travel, page 455](#).
- Do NOT drive windrower on a road or highway at night or in conditions that reduce visibility, such as fog or rain. The width of the windrower may not be apparent under these conditions.

! CAUTION

Operate both steering wheel and ground speed lever slowly while becoming familiar with the machine. Remember that steering is more sensitive when speed-range control is in high road speed position. Avoid the common tendency of new Operators to oversteer.

OPERATION

CAUTION

Check local laws for width regulations and lighting and marking requirements before transporting on roads.

Before driving windrower on a roadway:

1. Ensure HEADER DRIVE switch (A) is pushed to OFF position (down).
2. Clean flashing amber lamps, red tail and head lamps, and check that they work properly.
3. Clean all reflective surfaces and slow moving vehicle emblems.
4. Adjust interior rear view mirror and clean windows.



Figure 4.32: Header Drive Switch

5. Push LIGHT switch (A) to ROAD position to activate lamps. Always use these lamps on roads to provide warning to other vehicles. Refer to [3.7 Lighting, page 49](#).

NOTE:

The field lights will not turn on if the auto-road light feature is activated (i.e., windrower is in engine forward or cab-forward mode, out of park, high range switch position, and header off).

6. Use HIGH/LOW LIGHTS (B) as required when other vehicles are approaching.
7. Push BEACON switch (C) ON to activate beacons.
8. Press switch (A) on cab display module (CDM) to activate hazard lights.

IMPORTANT:

Switch ON the beacon and hazard lights when travelling on the road with the transmission in low range.

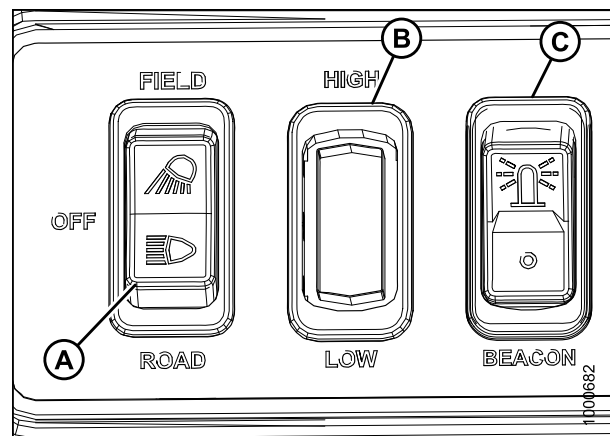


Figure 4.33: Light Switches



Figure 4.34: CDM

OPERATION

- Set ground speed range switch (A) for ROAD speed. CDM will display ROAD GEAR at (F) if windrower is in engine-forward mode.

NOTE:

Windrower can be moving, but speed must be less than 8 km/h (5 mph) for road gear to engage.

- Slowly push throttle (B) to full forward (operating speed). CDM should display 2320–2350 rpm (C).
- Slowly move the ground speed lever (GSL) (E) forward to desired speed which will be displayed at (F).
- To slow the windrower, pull the GSL (E) rearward to decrease the speed.
- Move the GSL (E) to N-DETENT.
- Lock steering wheel.
- Shut off engine by turning key counterclockwise to OFF position.
- If towing a header, refer to [Towing Header with Windrower, page 177](#).

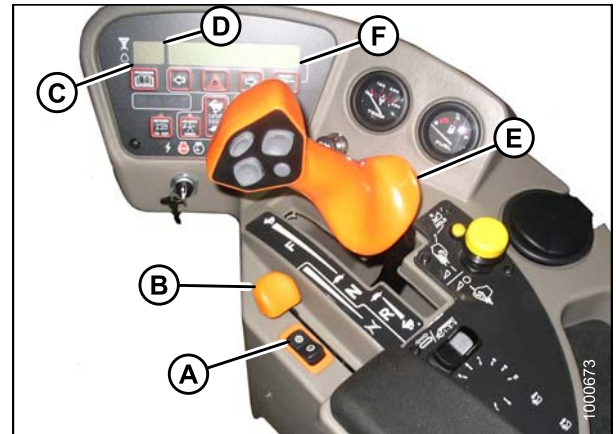


Figure 4.35: Operator Console

Towing Header with Windrower

The windrower can be used to tow a MacDon draper header that has the slow speed transport option installed. Ensure the optional weight box or an approved header transporter is installed on the windrower to transfer weight to the lift arms.

WARNING

- A windrower without a header or weight box must NOT be used to tow headers due to reduced traction and possible loss of control.
- For towed equipment without brakes, do NOT exceed 32 km/h (20 mph).



Figure 4.36: Towing a Header

OPERATION

CAUTION

- To tow a header with an M155 Self-Propelled Windrower, the header must be equipped with the appropriate equipment to comply with local regulations.
- Before towing, conduct a pretrip inspection to verify signal lighting and safety equipment is installed and functioning properly.
- Do NOT exceed the Combined Gross Vehicle Weight (CGVW) specified in table [4.1 Maximum Weight, page 178](#).
- To prevent damage and/or loss of control, ensure the machine and attached equipment are within the following weight limits:

Table 4.1 Maximum Weight

		kg	lb.
Maximum GVW (includes mounted implements)		9750	21,500
Maximum CGVW (includes towed and mounted implements)		10,480	23,100
Weight (A) on both drive wheels	Maximum	8500	18,750
	Minimum	4570	10,070
Maximum weight (B) on both caster tires		2750	6050

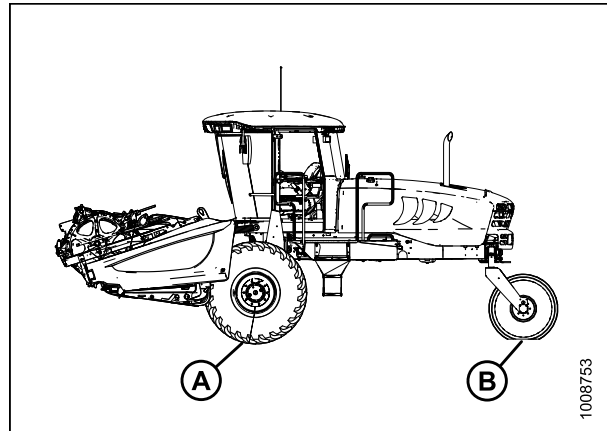


Figure 4.37: Maximum Weight

Converting from Field to Transport Mode

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

DANGER

To avoid bodily injury from fall of raised header, always engage safety props when working on or around raised header, and before going under header for any reason.

1. Set header on the ground (field position).
2. Disconnect the following hydraulic and electrical connections:
 - a. **Left Side** – Store hydraulic hoses and electrical cable into the storage position. Refer to header operator's manual.
 - b. **Right Side** – Release the multi-link and place into storage on windrower. Refer to header operator's manual.

OPERATION

- Retrieve temporary lift pin from storage location on weight box and install into rear hole (A) at the top of the lift arms. This provides additional lift height for transport wheel deployment.

CAUTION

Check to be sure all bystanders have cleared the area.

- Start engine and raise header to full height.
- Stop engine and engage safety props on lift cylinders.

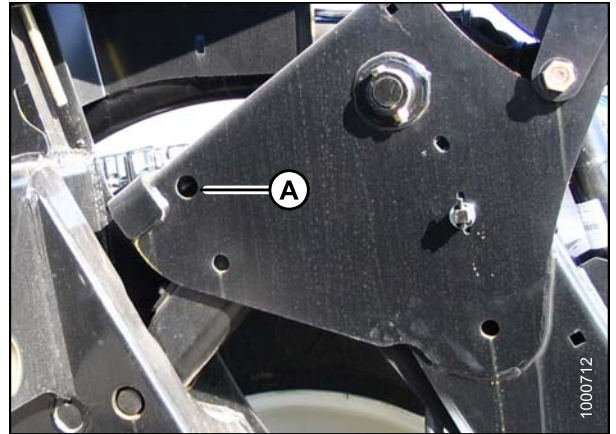


Figure 4.38: Lift Arms

- Deploy header slow speed transport system. Refer to header operator's manual.



Figure 4.39: Header in Transport Mode

- Remove float pin from engaged position (A) and insert in storage location (B). Secure with lynch pin.

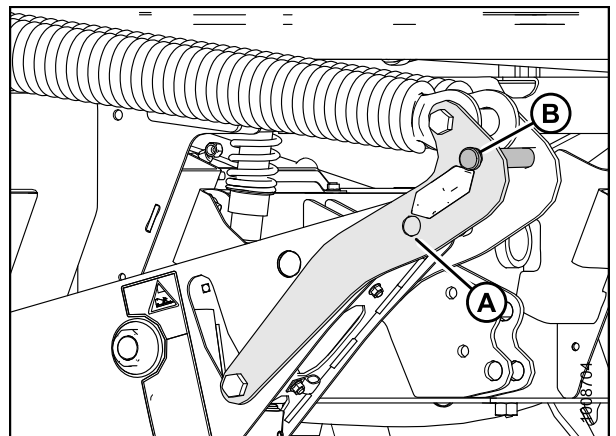


Figure 4.40: Lift Arms

OPERATION

- Remove pins (A) from lower end of lift linkages.

NOTE:

Pins (A) are also used to secure weight box to windrower linkage.

- Release the safety props on the header lift cylinders. Refer to [4.4.1 Engaging/Disengaging the Header Safety Props](#), page 193.
- Start engine and lower header down onto the transport wheels.

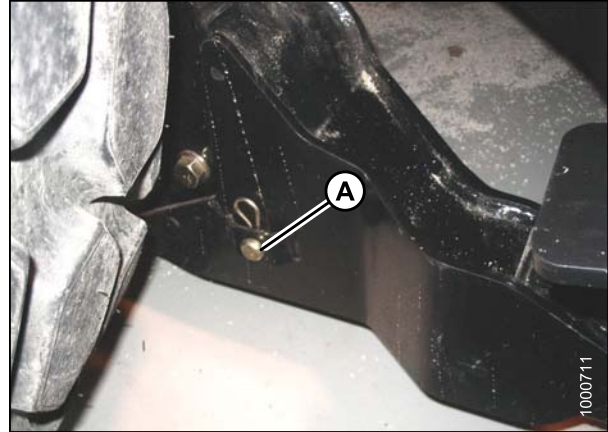


Figure 4.41: Lift Arms

- Use the HEADER TILT switches to release load on the center-link if necessary.
- Shut down engine and remove key from ignition.

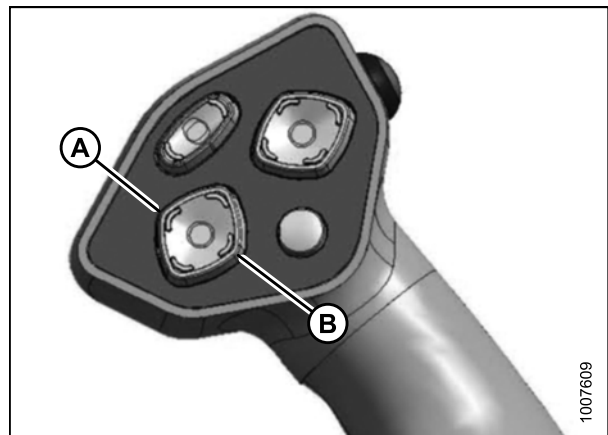


Figure 4.42: Ground Speed Lever (GSL)

A - Header Tilt Down

B - Header Tilt Up

Disconnect the center-link as follows:

- To unlock the center-link, pull up on latch (A) and position latch into notch (B) on top of hook.
- Lift center-link off header pin.

NOTE:

If center-link self-alignment kit is installed, start engine and raise center-link with the REEL UP switch on the ground speed lever (GSL).

- Slowly back windrower away from header, shut engine OFF, and remove key from ignition.

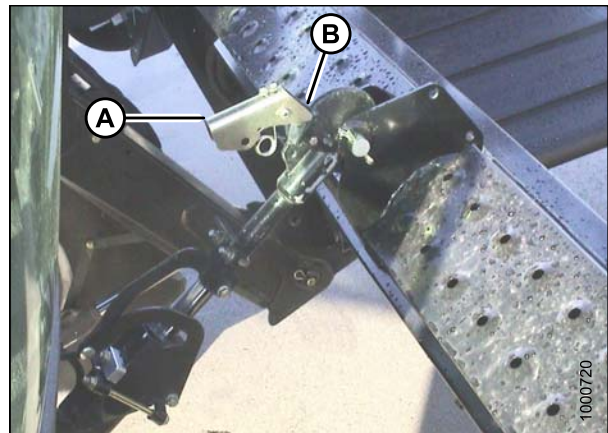


Figure 4.43: Hydraulic Link

OPERATION

16. If using a mechanical link, disconnect the center-link as follows:
 - a. Loosen nut (A) and rotate barrel (B) to relieve load on link.
 - b. Remove cotter pin (D) on pin (C), and remove pin to disconnect from windrower. Reinstall pin in header.

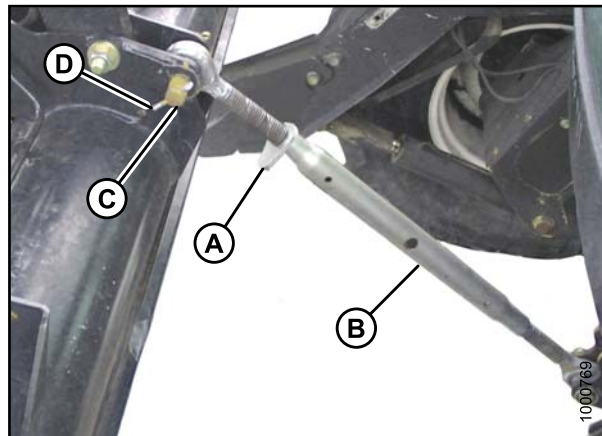


Figure 4.44: Mechanical Link

Converting from Transport Mode to Field Operation

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop engine and remove key from ignition.
2. Disconnect electrical harness at connector (B) from windrower and store harness (A) on weight box.

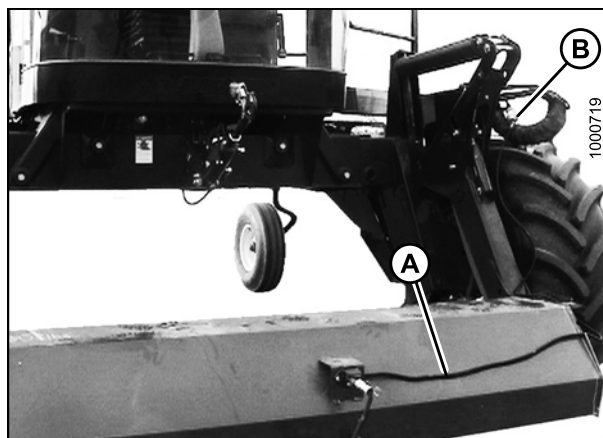


Figure 4.45: Electrical Harness

3. Disconnect wiring connector (A) at front wheel.



Figure 4.46: Header Transport Wheel

OPERATION

4. Remove clevis pin (D).
5. Push latch (C) and lift tow-bar (A) from hook. Release latch and replace clevis pin.
6. Unhook tow-bar from weight box.

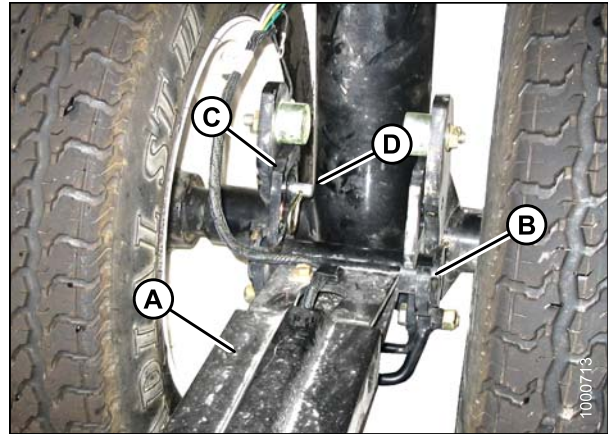


Figure 4.47: Header Transport Wheel

CAUTION

Check to be sure all bystanders have cleared the area.

7. Start engine and lower lift arms until rear of lift arms floats up and away from the lift arm mechanism.
8. Stop engine and remove key from ignition.
9. Remove temporary lift pins (A) from weight box and install pins (F) into holes at rear of lift arms.
10. Start engine and fully raise lift arms. Stop engine and remove key from ignition.
11. Engage lift cylinder safety props. Refer to [4.4.1 Engaging/Disengaging the Header Safety Props, page 193](#).
12. Move float pins from working hole location (A) to disengage the float and store pins at storage hole location (B).

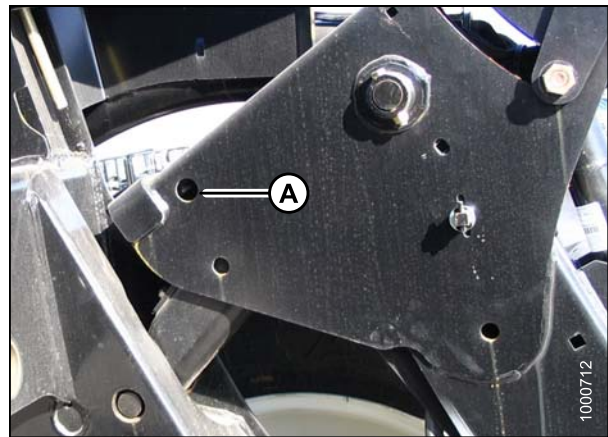


Figure 4.48: Lift Arms

IMPORTANT:

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to windrower, ensure that float engagement pin is installed in storage hole location and **NOT** installed in working hole location.

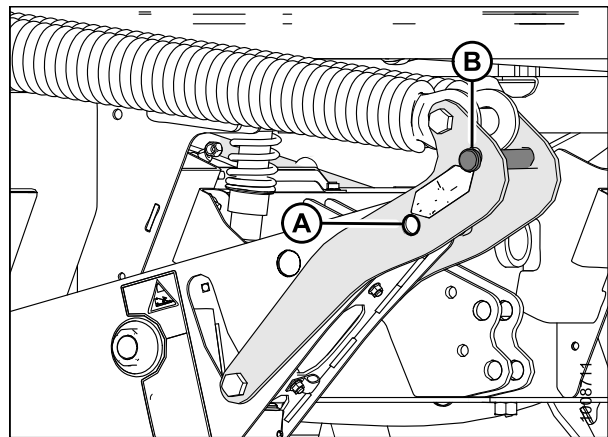


Figure 4.49: Float Pins

OPERATION

13. Remove pins (A) securing lift linkages to weight box, and retain pins for attaching header to windrower. Disengage lift cylinder safety props. Refer to [4.4.1 Engaging/Disengaging the Header Safety Props](#), page 193.

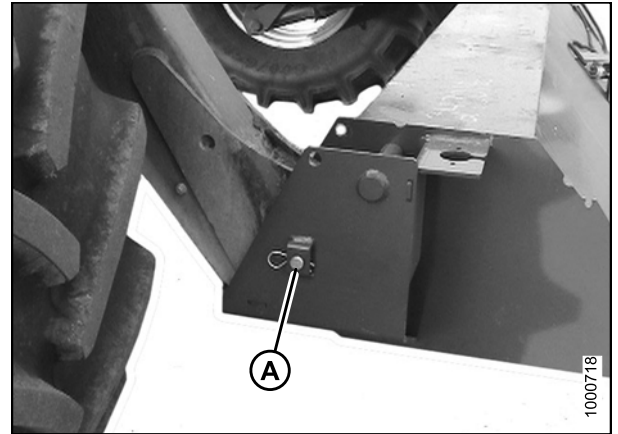


Figure 4.50: Weight Box

14. Start engine, lower weight box onto blocks, and back away.
15. Attach header to windrower. Refer to [4.5 Attaching and Detaching Headers](#), page 213.
16. Convert header into field position. Refer to header operator's manual for procedure.
17. Start engine and lower header to ground. Continue to retract lift cylinders so that member (A) lifts off of link (B)
18. Remove temporary lift pins (C) from lift arms and install pins into storage holes in weight box.
19. Before operating the machine, double-check that all pins are secure and that all safety equipment is installed and fully functional.
20. Proceed with operation of header.

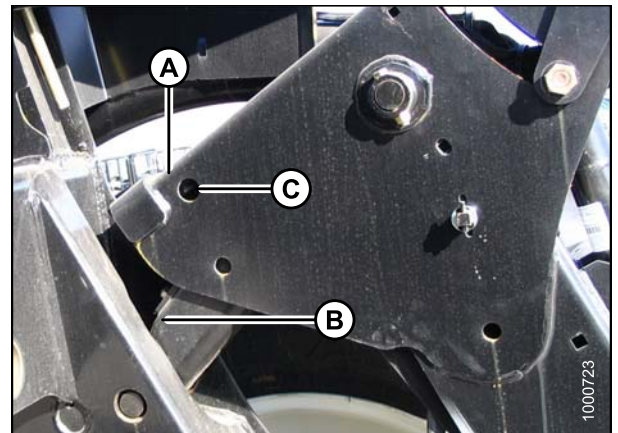


Figure 4.51: Lift Arms

OPERATION

Attaching Header Transport Hitch to Header

Attach header transport hitch to header as follows:

1. Position end (A) of the aft section onto front wheel hook (B).
2. Push down until latch (C) captures the end (A).
3. Secure latch (C) with clevis pin (D).

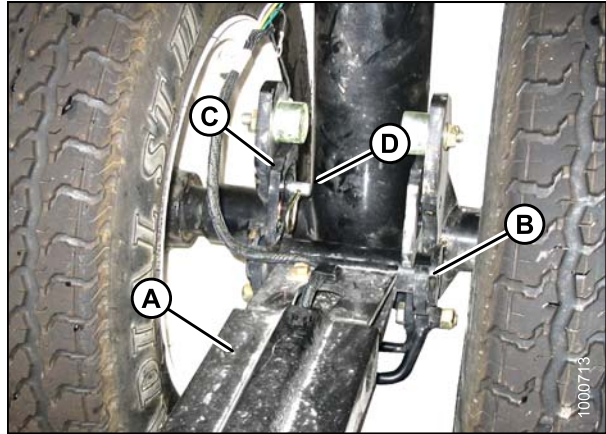


Figure 4.52: Transport Hitch

4. Remove the L-pin from end (A) of aft section (if installed).

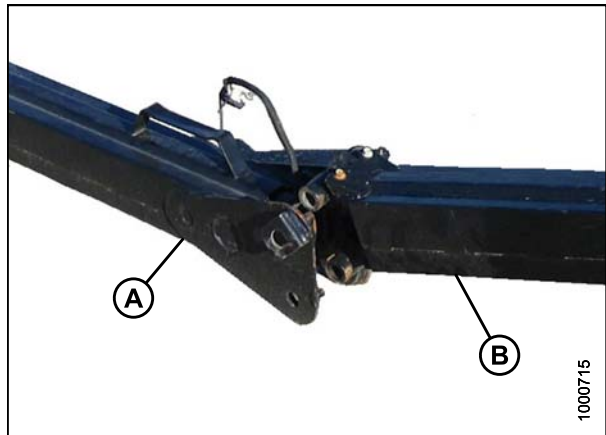


Figure 4.53: Transport Hitch

5. Position end (B) of the forward section into end (A) of the aft section and lower forward section into aft section.

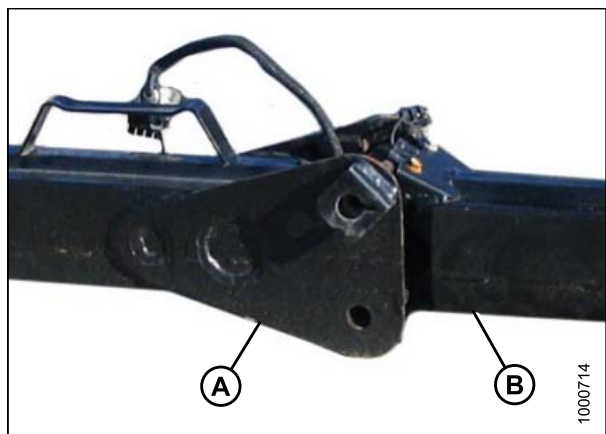


Figure 4.54: Transport Hitch

OPERATION

6. Fully insert L-pin (A) in upper hole and turn pin to lock it. Secure with ring pin (B).
7. Make electrical connection at the joint (C).

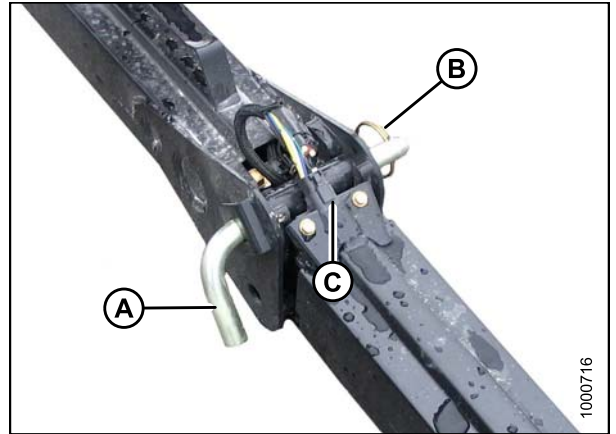


Figure 4.55: Transport Hitch

8. Make the electrical connection at the header wheel (A).



Figure 4.56: Header Transport Wheel

IMPORTANT:

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to windrower, ensure that float engagement pin is installed in storage location (B) and **NOT** installed at hole location (A).

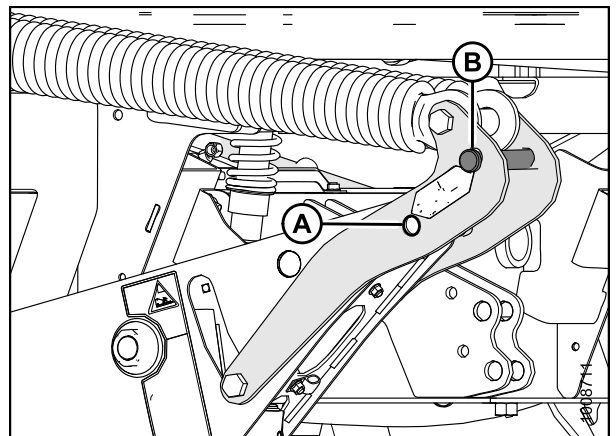


Figure 4.57: Lift Linkage

OPERATION

9. Drive windrower so that windrower lift arms are positioned into the weight box pockets.
10. Raise lift arms slightly, install locking pins (A) into pockets, and through windrower header lift linkages. Secure with hairpin.

NOTE:

Pins (A) were previously removed from the header lift linkage lower end.

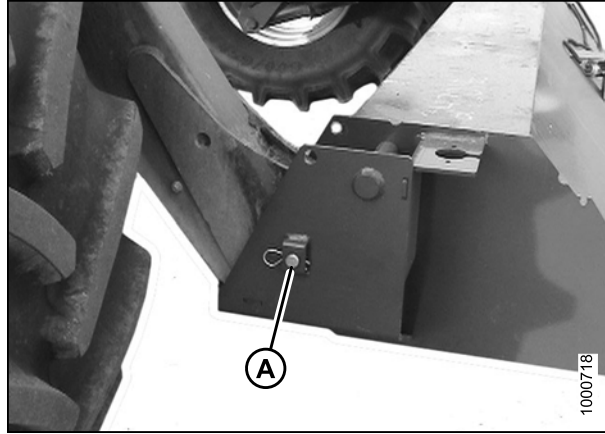


Figure 4.58: Windrower Lift Linkage

11. Route the weight box harness (A) to the electrical connector at the left side lift linkage and connect harness to connector on windrower (B).
12. Raise lift arms fully, shut engine OFF, and remove key from ignition.

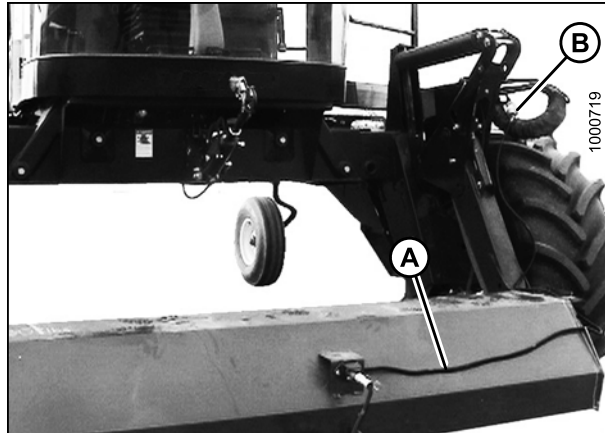


Figure 4.59: Weight Box

13. Move float pins from storage location (A) to engaged position (B).

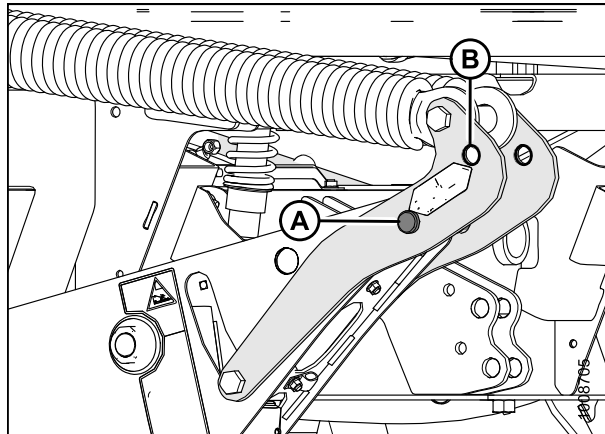


Figure 4.60: Lift Linkage

OPERATION

14. Start engine and press HEADER DOWN switch (A) on ground speed lever (GSL) to lower lift arms until the rear of the arms lift away from the linkage.

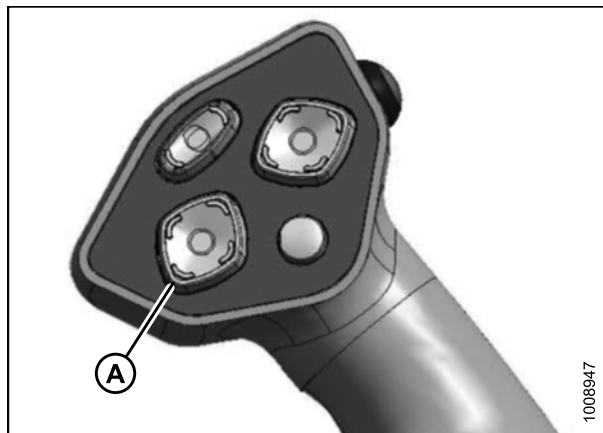


Figure 4.61: GSL

15. Attach slow speed transport hitch to the weight box tongue with drawbar pin. Secure using lynch pin (A). Attach safety chain (B).
16. Connect hitch harness (C) to electrical socket at front of weight box.

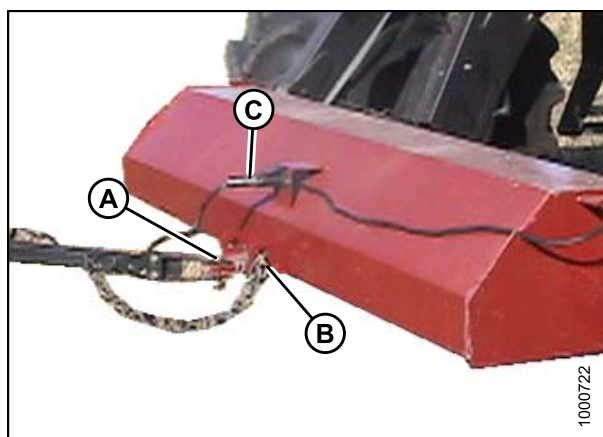


Figure 4.62: Weight Box

17. Remove the temporary lift pins (A) (should be loose in lift arm) and place into storage holes on weight box.

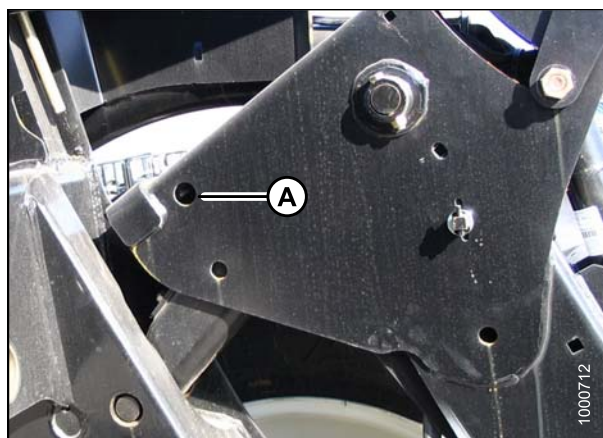


Figure 4.63: Lift Arms

Converting from Field to Transport Mode

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

OPERATION

DANGER

To avoid bodily injury from fall of raised header, always engage safety props when working on or around raised header, and before going under header for any reason.

1. Set header on the ground (field position).
2. Disconnect the following hydraulic and electrical connections:
 - a. **Left Side** – Store hydraulic hoses and electrical cable into the storage position. Refer to header operator's manual.
 - b. **Right Side** – Release the multi-link and place into storage on windrower. Refer to header operator's manual.
3. Retrieve temporary lift pin from storage location on weight box and install into rear hole (A) at the top of the lift arms. This provides additional lift height for transport wheel deployment.

CAUTION

Check to be sure all bystanders have cleared the area.

4. Start engine and raise header to full height.
5. Stop engine and engage safety props on lift cylinders.
6. Deploy header slow speed transport system. Refer to header operator's manual.

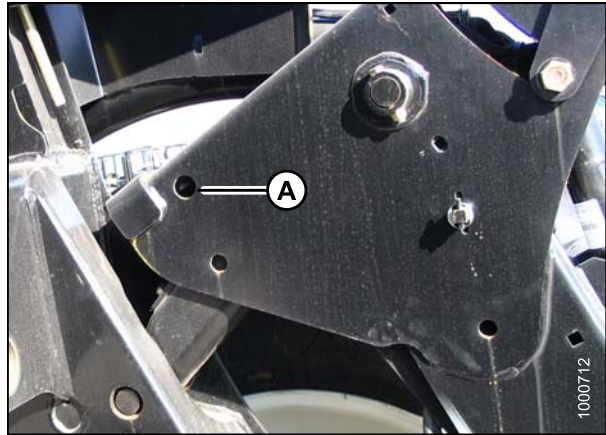


Figure 4.64: Lift Arms



Figure 4.65: Header in Transport Mode

OPERATION

7. Remove float pin from engaged position (A) and insert in storage location (B). Secure with lynch pin.

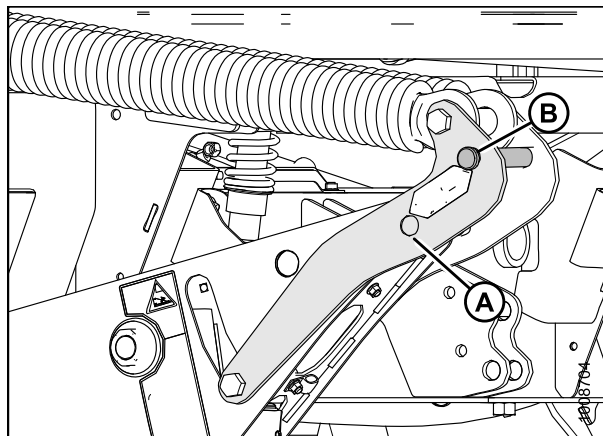


Figure 4.66: Lift Arms

8. Remove pins (A) from lower end of lift linkages.

NOTE:

Pins (A) are also used to secure weight box to windrower linkage.

9. Release the safety props on the header lift cylinders. Refer to [4.4.1 Engaging/Disengaging the Header Safety Props, page 193](#).
10. Start engine and lower header down onto the transport wheels.

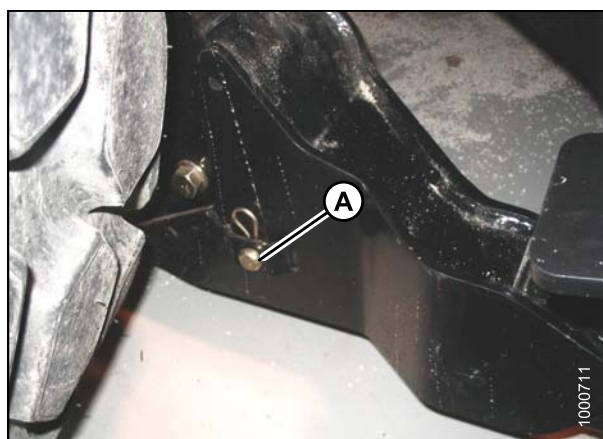


Figure 4.67: Lift Arms

11. Use the HEADER TILT switches to release load on the center-link if necessary.
12. Shut down engine and remove key from ignition.

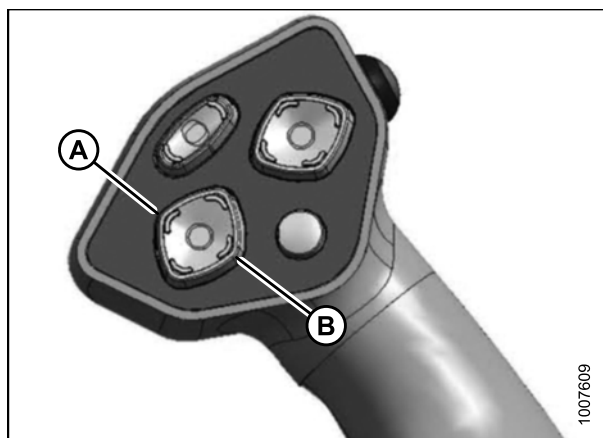


Figure 4.68: Ground Speed Lever (GSL)

A - Header Tilt Down

B - Header Tilt Up

OPERATION

Disconnect the center-link as follows:

13. To unlock the center-link, pull up on latch (A) and position latch into notch (B) on top of hook.
14. Lift center-link off header pin.

NOTE:

If center-link self-alignment kit is installed, start engine and raise center-link with the REEL UP switch on the ground speed lever (GSL).

15. Slowly back windrower away from header, shut engine OFF, and remove key from ignition.

16. If using a mechanical link, disconnect the center-link as follows:

- a. Loosen nut (A) and rotate barrel (B) to relieve load on link.
- b. Remove cotter pin (D) on pin (C), and remove pin to disconnect from windrower. Reinstall pin in header.

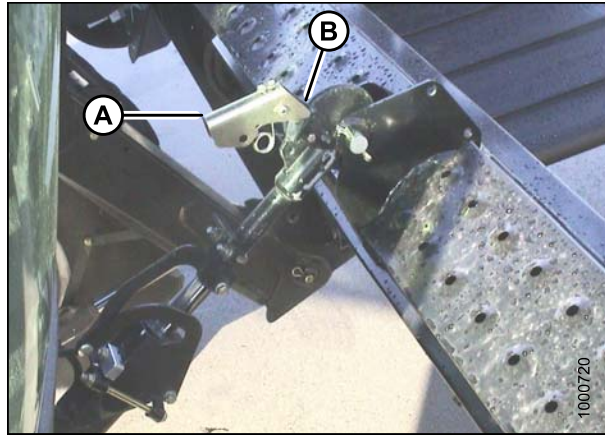


Figure 4.69: Hydraulic Link

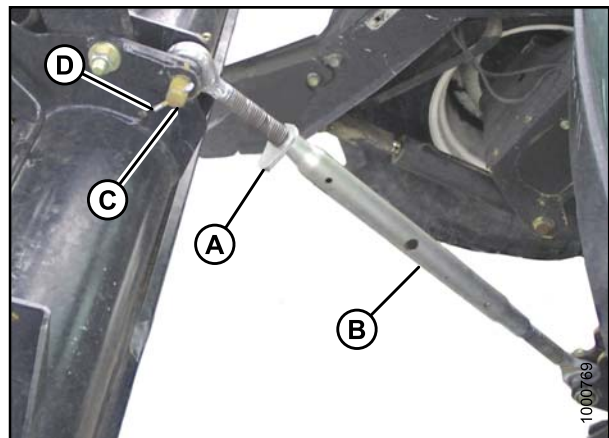


Figure 4.70: Mechanical Link

OPERATION

Towing the Windrower (Emergency)

Towing the windrower is NOT recommended. If the windrower gets stuck, or must be towed onto a truck or trailer, follow these steps:

IMPORTANT:

- Never attempt to start the windrower by towing it. Serious damage to the final drives may occur.
 - Failure to disengage final drives before towing will result in serious transmission damage.
 - Only tow the windrower for a short distance, on level ground, and at slow speed.
1. Before towing the vehicle, disengage the final drives. Refer to [Final Drives, page 191](#).

DANGER

Uncontrolled heavy equipment. With final drives disengaged (turned inward), brakes and steering do NOT work. After towing, place blocks under front and rear wheels to prevent uncontrolled movement.

2. Use attachment point (A) to tow if windrower gets stuck, or when pulling onto a truck or trailer for transport.
3. When towing is complete, place blocks under front and rear wheels to prevent uncontrolled movement and engage the final drives. Refer to [Final Drives, page 191](#).

Final Drives

Disengage and engage final drives as follows:

1. Remove the two bolts (A) at the center of drive wheel.
2. Remove cap (B) and flip over so that dished side faces in. The cap depresses a pin that disengages the gearbox.
3. Repeat for the other drive wheel.
4. After towing, reverse cover (B) to engage final drives. Be sure plunger at center of wheel pops out to engage drive.

NOTE:

Engaging the final drives may require rocking the wheels slightly.

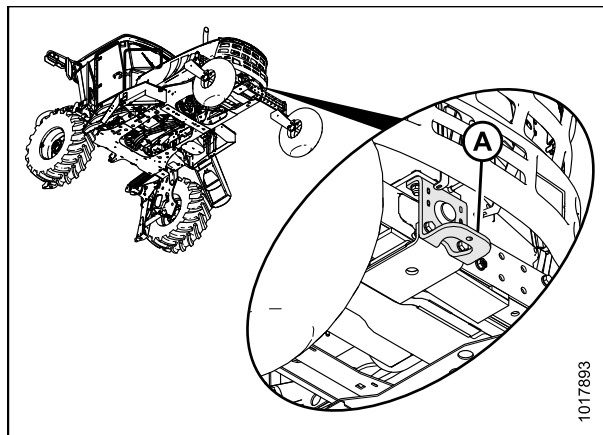


Figure 4.71: Emergency Towing

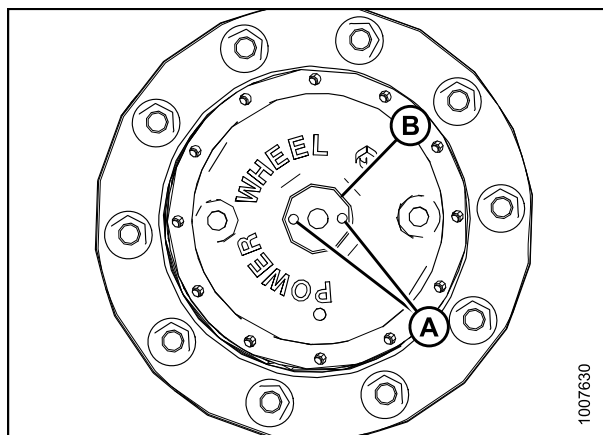


Figure 4.72: Final Drives

4.3.9 Storing the Windrower

At the end of each operating season, you need to store your windrower properly.

WARNING

Never use gasoline, naphtha, or any volatile material for cleaning purposes. These materials are toxic and can be flammable.

CAUTION

Never operate engine in a closed building. Proper ventilation is required to avoid exhaust gas hazards.

CAUTION

Remember when working around storage batteries that all of the exposed metal parts are live. Never lay a metal object across the terminals because a spark and short circuit will result.

1. Clean the windrower thoroughly.
2. Store windrower in a dry protected place.
3. Remove and store your batteries properly. Refer to [Removing Batteries, page 376](#).
4. Charge batteries, store in a cool, dry area in an upright position. Do NOT stack batteries on top of each other unless they are in cartons.
5. If stored outside, cover windrower with a waterproof tarpaulin or other protective material. This will protect the switches, instruments, tires, etc. from inclement weather.
6. If no cover is available, seal air cleaner intake and exhaust pipe with plastic bags and/or waterproof tape.
7. If possible, store the windrower on blocks to take weight off tires. If blocking up the machine is not possible, increase tire pressure by 25% for storage. Adjust to recommended operating pressure before next use.
8. Repaint all worn or chipped painted surfaces to prevent rust.
9. Lubricate the windrower thoroughly, leaving excess grease on fittings to keep moisture out of bearings. Apply grease to exposed threads and sliding surfaces of components.
10. Check for worn components and repair. Tighten loose hardware and replace any missing hardware. Refer to [8.1 Recommended Torques, page 463](#).
11. Check for broken components and order replacements from your Dealer. Attention to these items right away will save time and effort at beginning of next season.
12. Add approved rust inhibitor to the engine oil in accordance with the manufacturer's instructions. Run engine to operating temperature to mix inhibitor with oil, unless otherwise specified.
13. To prevent condensation, fill hydraulic oil reservoir to filler neck with approved hydraulic system oil. Refer to [5.10.1 Checking and Filling Hydraulic Oil, page 406](#).
14. Test engine coolant antifreeze concentration to ensure it is sufficient to protect engine against lowest expected temperature.

4.4 Operating with a Header

The M155 Self-Propelled Windrower is designed to operate with a MacDon A-Series Auger Header, R-Series Rotary Disc Header, or D-Series Rigid Draper Header with or without a Hay Conditioner.

This section describes the attachment and detachment procedures and operating instructions for these header types.

4.4.1 Engaging/Disengaging the Header Safety Props

Safety props are located on both header lift cylinders on the windrower.

DANGER

To avoid bodily injury from fall of raised header, always engage safety props when working on or around raised header, and before going under header for any reason.

Engage safety props as follows:

1. Start engine and press header up (A) switch to raise header to maximum height.
2. Rephase cylinders if one end of the header does not raise fully. If rephasing is required, proceed as follows:
 - a. Press and hold the header up (A) switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

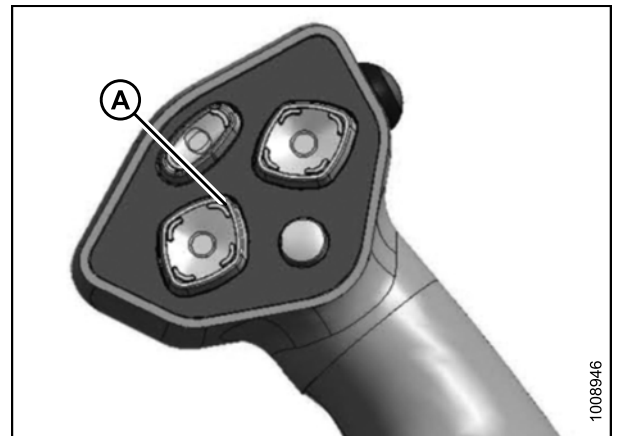


Figure 4.73: Ground Speed Lever (GSL)

OPERATION

3. Pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for opposite cylinder.

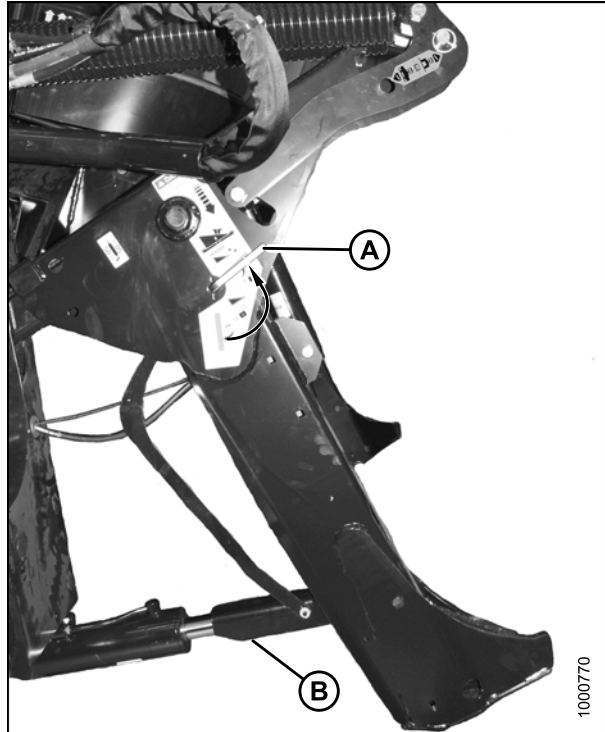


Figure 4.74: Safety Prop

Disengage safety props as follows:

1. Turn lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
2. Start engine, choose a level area, and lower header to the ground.
3. Stop the engine and remove the key.

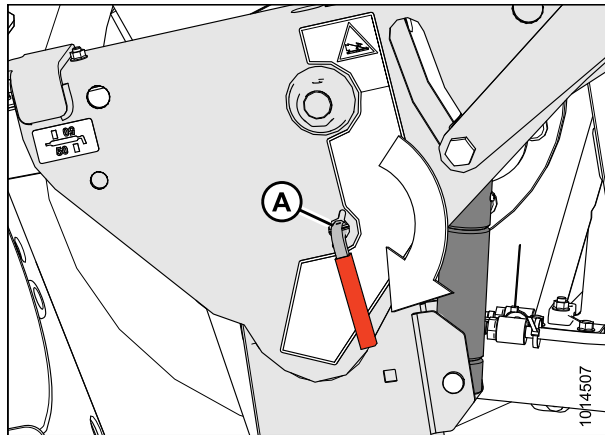


Figure 4.75: Safety Prop

4.4.2 Header Float

The header float feature allows the header to closely follow ground contours and respond quickly to sudden changes or obstacles. The float setting is ideal when the cutterbar is on the ground with minimal bouncing, scooping, or pushing soil.

IMPORTANT:

- Set header float as light as possible—without excessive bouncing—to avoid frequent breakage of knife components, scooping soil, or soil build-up at the cutterbar in wet conditions.
- Avoid excessive bouncing (resulting in a ragged cut) by operating at a slower ground speed when the float setting is light.
- Install header options (upper cross auger, skid shoes, transport kit, etc.) before setting header float. If the slow speed transport (SST) tow bar will be stored on header during operation, set float with tow bar in place.
- Adjust the float when adding or removing optional attachments that affect the weight of the header.

Float Operating Guidelines

When working with the cutterbar on the ground:

- Set center-link to mid-range position (5.0 on cab display module [CDM]). Refer to [4.4.5 Adjusting Header Angle, page 203](#).
- When operating at the flattest header angle, minimize scooping rocks by adjusting the header skid shoes downward to raise guards.
- To minimize pushing soil, adjust header height or adjust header angle.

When working with the cutterbar off the ground (draper header only):

- Set center-link to mid-range position (5.0 on CDM). Refer to [4.4.5 Adjusting Header Angle, page 203](#).
- Balance the amount of header weight carried by the float and stabilizer wheels. Refer to your draper header operator's manual.
- Use the CDM controls to automatically maintain cutting height. Refer to [4.4.6 Cutting Height, page 206](#).

Checking Float

M-Series windrowers are equipped with primary (coarse) and secondary (fine) float adjustment systems. The primary adjustment uses drawbolts to change the tension on the springs in the lift linkages. The secondary adjustment uses hydraulic cylinders to change the spring tension.

OPERATION



Figure 4.76: Cab Display Module (CDM) Float Adjustment

A - CDM Display
D - Header Tilt Down

B - Left Float Adjustment
E - Header Lower

C - Right Float Adjustment
F - Header Tilt Up

Check header float as follows:

! DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

! CAUTION

Check to be sure all bystanders have cleared the area.

1. Start the engine.
2. Using HEADER TILT switches (D and F), set center-link to mid-range position (5.0 on CDM [A]).

NOTE:

If equipped with the optional draper header reel drive (B5496), adjust reel fore-aft to your normal operating position.

3. Using HEADER DOWN switch (E), lower header fully with lift cylinders fully retracted.
4. Set left (B) and right (C) float fine adjustments on CDM to approximately 5.0 as follows:
 - a. Using FLOAT SELECTOR switch (B), push + to increase float or - to decrease float on left side of header. CDM display (A) will indicate selected float for left side, for example (5.0 L FLOAT R XX.X).
 - b. Repeat for right side float with switch (C). Display will indicate float for both sides, for example (5.0 L FLOAT R 5.0).
5. Shut down engine and remove key.

OPERATION

6. Grasp the end of the header and lift. The force to lift should be as noted in the following table and should be approximately the same at both ends.

Header	Force Required to Lift Header at the Ends with Lift Cylinder Fully Retracted
Auger	335–380 N (75–85 lbf)
Rotary disc	426–471 N (95–105 lbf)
Draper	335–380 N (75–85 lbf) with stabilizer/transport wheels raised (if equipped)

Adjusting Float Using Drawbolts

Coarse float adjustment is done using the drawbolts located on either side of the windrower.

If necessary, coarse adjust the float with the drawbolts as follows:

CAUTION

Check to be sure all bystanders have cleared the area.

1. Start engine.
2. Using HEADER UP (A) switch on ground speed lever (GSL), raise the header fully, shut down engine, and remove key.
3. Turn drawbolt (A) clockwise to increase float (makes header lighter) or counterclockwise to decrease float (makes header heavier).
4. Recheck the header float.

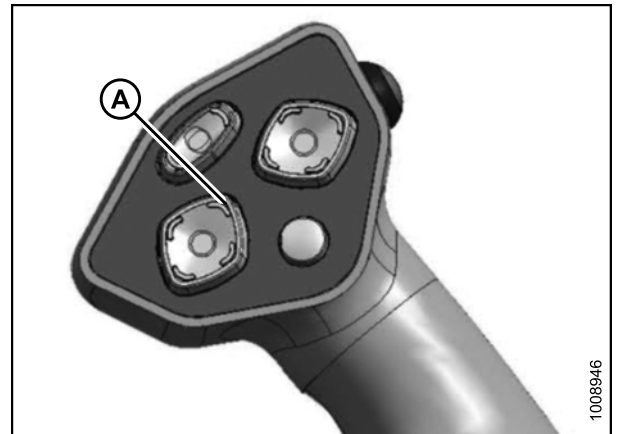


Figure 4.77: GSL

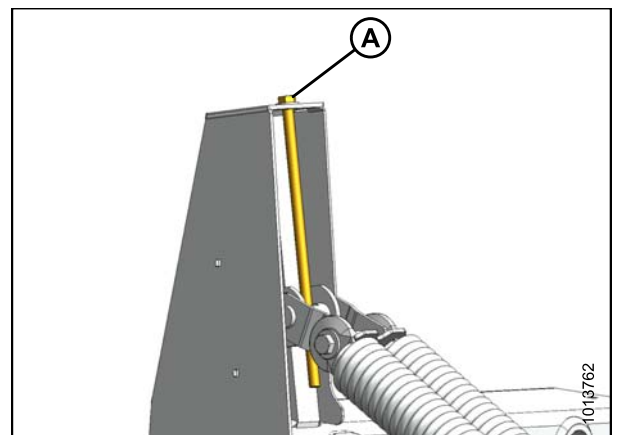


Figure 4.78: Header Float Adjustment

OPERATION

Float Options

For draper headers without the deck shift option, auger headers, and rotary headers, the float disc can be preprogrammed for three types of windrowing conditions.

Example:

- Position 1: Border
- Position 2: Normal
- Position 3: Rocky

Set float presets as follows:

1. Engage header.
2. Push FLOAT PRESET SWITCH (A) to Position 1 (B).

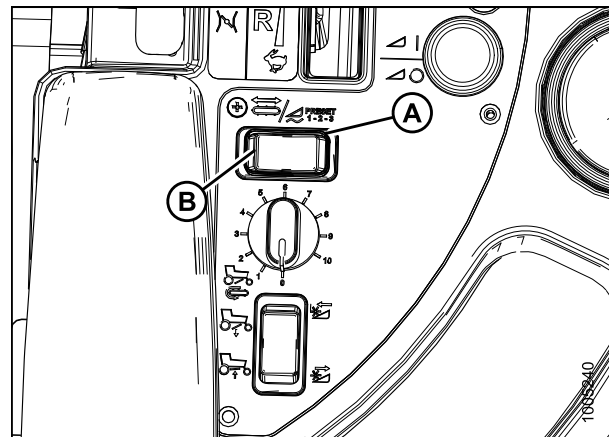


Figure 4.79: Float Preset Switch

3. Using HEADER TILT switches (D and F), set center-link to mid-range position (5.0 on CDM [A]).

NOTE:

If equipped with the optional draper header reel drive (B5496), adjust reel fore-aft to your normal operating position.

4. Using HEADER DOWN switch (E), lower header fully with lift cylinders fully retracted.
5. Set left (B) and right (C) float fine adjustments on CDM to approximately 5.0 as follows:
 - a. Using FLOAT SELECTOR switch (B), push + to increase float or – to decrease float on left side of header. CDM display (A) will indicate selected float for left side, for example (5.0 L FLOAT R XX.X).
 - b. Repeat for right side float with switch (C). Display will indicate float for both sides, for example (5.0 L FLOAT R 5.0).

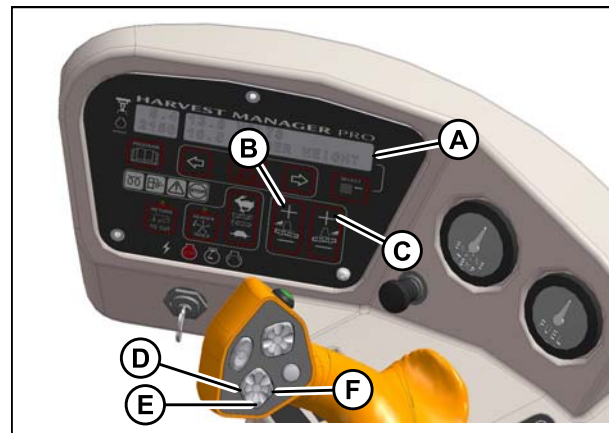


Figure 4.80: Operator Console

- | | |
|------------------------|-----------------------|
| A - CDM Display | B - Adjust Left Float |
| C - Adjust Right Float | D - Header Tilt Down |
| E - Lower Header | F - Header Tilt Up |

OPERATION

6. Select a second preset with the FLOAT PRESET 2 SWITCH (C).
7. Repeat Steps [1., page 198](#) and [2., page 198](#) to set the float.
8. Select a third preset with the FLOAT PRESET 3 SWITCH (D).
9. Repeat steps [1., page 198](#) and [2., page 198](#) to set the float.

NOTE:

For draper headers with the deck shift option, the float can be preprogrammed to compensate for weight distribution when the decks are shifted. Refer to [Setting Float Options with Deck Shift, page 295](#).

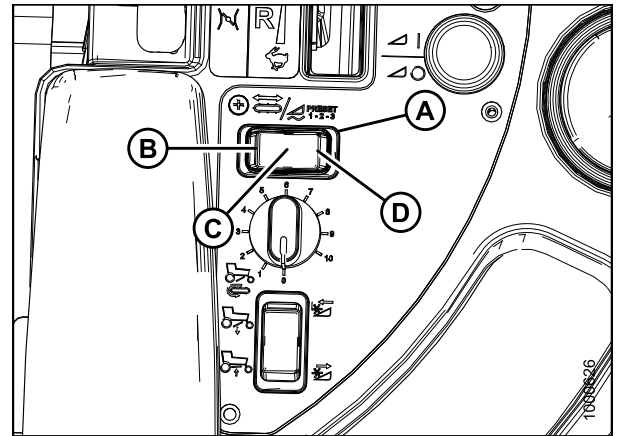


Figure 4.81: Float Preset Switch

4.4.3 Levelling the Header

The windrower linkages are factory-set to provide the proper level for the header and should not normally require adjustment.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

If the header is not level, check the windrower tire pressures before adjusting the levelling linkages.

NOTE:

The float springs are **NOT** used to level the header.

To level the header, follow these steps:

1. Place float pins in locked out location (A).

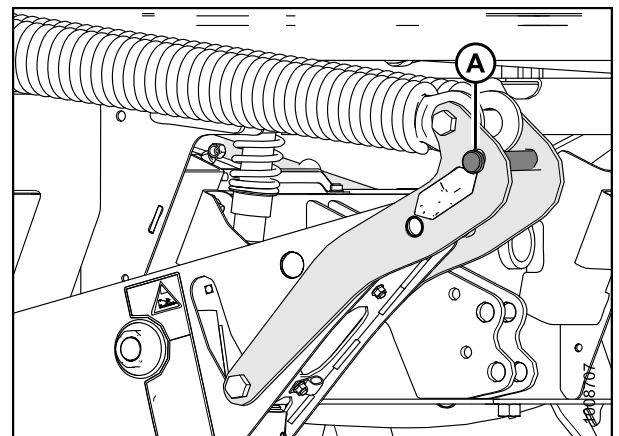


Figure 4.82: Float Pins – Disengaged

OPERATION

2. Park windrower on level ground.
3. Raise header fully with HEADER UP button (A) and hold momentarily to allow lift cylinders to rephase.

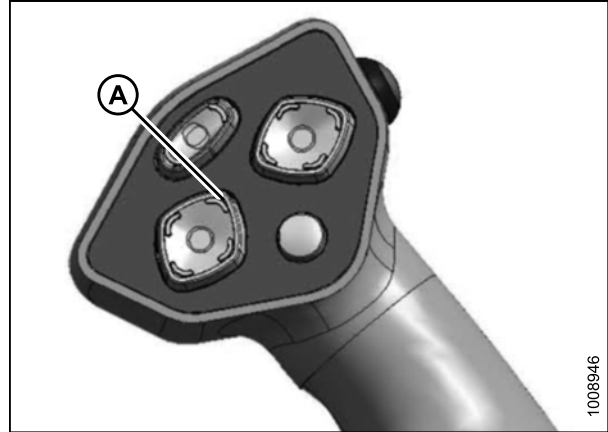


Figure 4.83: Ground Speed Lever (GSL)

4. Set header approximately 150 mm (6 in.) off ground and check that member (A) is against link (B). Stop engine and remove key from ignition.
5. Measure distance to ground at both ends of header and determine the end that is higher.
6. If adjustment is necessary, start engine and raise header fully. Turn off engine and remove key from ignition.

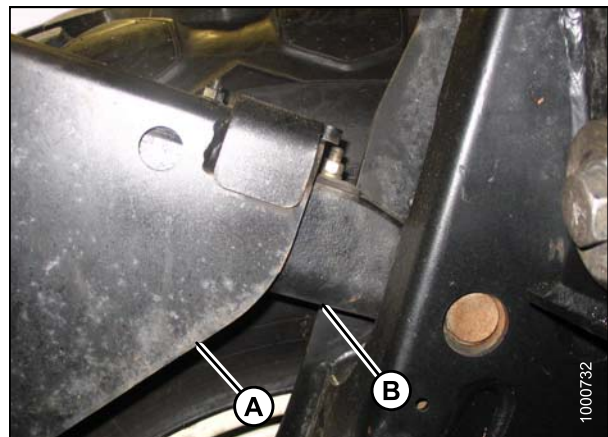


Figure 4.84: Lift Linkage

7. Move float pins to engaged position (A).

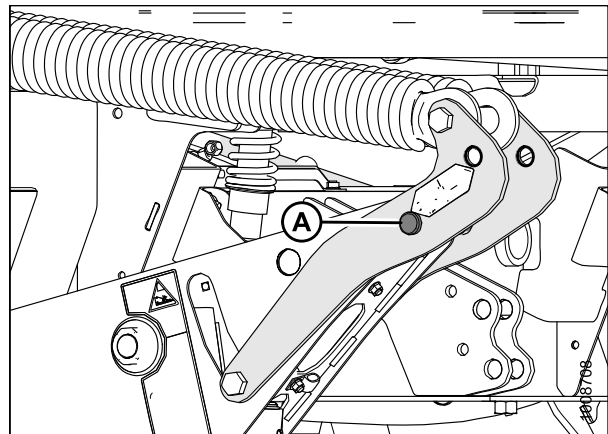


Figure 4.85: Float Pins – Engaged

OPERATION

8. Start engine and lower header onto ground until member (A) lifts off link (B) on both sides.
9. Stop engine and remove key.

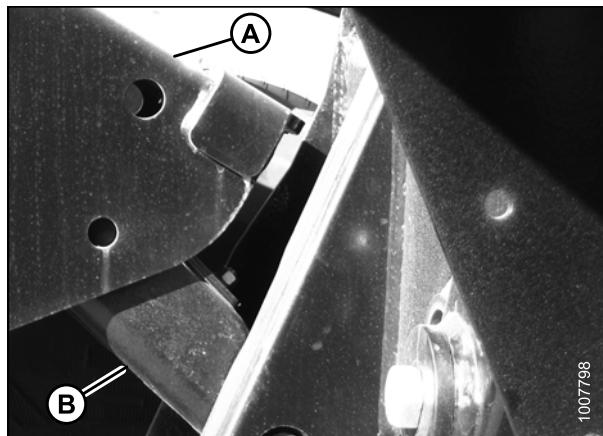


Figure 4.86: Lift Linkage

10. On high side, remove nut, washer, and bolt (A) that attaches shims (B) to link.
11. Remove one or both shims (B), and reinstall the hardware (A).
12. Start engine and raise header fully.
13. Stop engine and remove key from ignition.
14. Move float pins to disengaged position.
15. Start engine and set header approximately 150 mm (6 in.) off ground and check that member (A) is against link (B). Stop engine and remove key from ignition.
16. Measure distance to ground at both ends of header.
17. If additional levelling is required, repeat Steps 6., page 200 to 9., page 201 and install the removed shim on the opposite linkage.

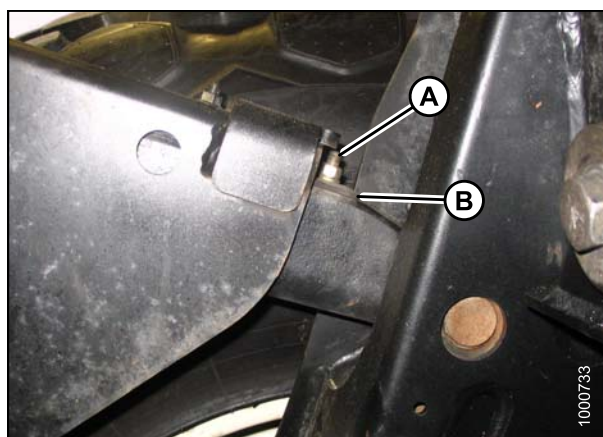


Figure 4.87: Lift Linkage

NOTE:

If required, additional shims are available from your Dealer.

18. Once header is level, return float pins to their engaged position (A).

NOTE:

Float does **NOT** require adjustment after levelling header.

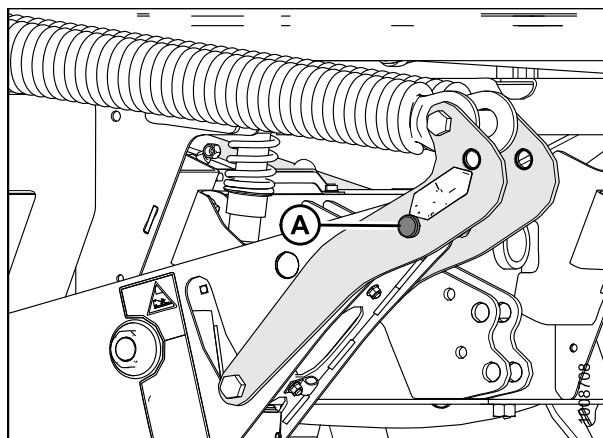


Figure 4.88: Float Pins – Engaged

OPERATION

4.4.4 Header Drive

All header controls are conveniently located on the operator's console and on the ground speed lever (GSL) handle.

NOTE:

Some controls are optional equipment and may not be present in your unit. Some controls may be installed, but will be nonfunctional for certain headers.

Engaging and Disengaging the Header

IMPORTANT:

Always move throttle lever back to idle before engaging header drive. Do **NOT** engage header with engine at full rpm.

CAUTION

Check to be sure all bystanders have cleared the area.

1. To Engage Header:

- a. Move throttle (A) to adjust engine speed to idle.
- b. Push the center down and pull up the HEADER DRIVE switch (B) to engage header drive. A slight delay between switch ON and operating speed is normal.

2. To Disengage Header:

- a. Push HEADER DRIVE switch (B) down to disengage header drive.



Figure 4.89: Operator Console

OPERATION

Reversing the Header

NOTE:

The optional hydraulic reversing kit must be installed.

IMPORTANT:

Hose plumbing to the reverser block is specific to the header type. To prevent damage to the reel on D-Series headers, refer to the reverser kit installation instruction MD# 169213 when switching from an auger header to a draper header on the same windrower.

- Reverses knife and conditioner on D-Series draper headers.
- Reverses reel, auger, knife and conditioner on A-Series auger headers.

Reverse the header as follows:

1. Push down and hold HEADER DRIVE REVERSE button (A) and pull up the HEADER DRIVE switch (B).
2. CDM will display HEADER REVERSE.
3. Release REVERSE button (A) to stop header.
4. Push down the HEADER DRIVE switch (B) to OFF, so that it can be restarted.

NOTE:

To engage header drive, push down, and pull up HEADER DRIVE knob.



Figure 4.90: Operator Console

4.4.5 Adjusting Header Angle

Header angle is defined as the angle between the ground and the drapers/cutterbar. It is adjustable to accommodate crop conditions and/or soil type.

Refer to the appropriate header operator's manual for the range of adjustment and recommended settings for your particular header.

The header angle can be hydraulically adjusted from the cab without shutting down the windrower when the windrower is equipped with the hydraulic center-link. A readout on the cab display module (CDM) allows you to establish settings for each crop condition.

IMPORTANT:

- Changing header angle will affect float slightly because it has the effect of making the header lighter or heavier.
- To prevent excessive guard breakage when conditions are not suited to heavier float (e.g., rocky or wet), do **NOT** use the TILT CONTROL. Instead, use the HEADER HEIGHT switch.

OPERATION



Figure 4.91: Operator Console

A - Program Button
D - Header Tilt Up

B - Display
E - Display Selector

C - Header Tilt Down

Hydraulic Link (Optional)

Adjust the header angle as follows:

- To decrease (flatten) header angle, operate HEADER TILT UP switch (D) on ground speed lever (GSL) handle so that cylinder retracts. The CDM display will show a reading on the lower line of decreasing value between 00.0 and 10.0.
- To increase (steepen) header angle, operate HEADER TILT DOWN switch (C) on GSL handle so the cylinder extends. The CDM display will show a reading on the lower line of increasing value between 00.0 and 10.0.

NOTE:

The HEADER TILT switch can be locked out to prevent inadvertent header angle changes when pressing the HEADER HEIGHT control switches. Refer to [Activating the Header Tilt Control Lockout, page 126](#).

OPERATION

Mechanical Link

Adjust header angle as follows:

1. Lower header to ground, shut down windrower, and remove key from ignition.
2. Loosen nut (A) on center-link.
 - To increase (steepen) angle, rotate barrel (B) to lengthen center-link.
 - To decrease (flatten) angle, rotate barrel (B) to shorten center-link.
3. Tighten plate nut (A) with a slight tap of a hammer.

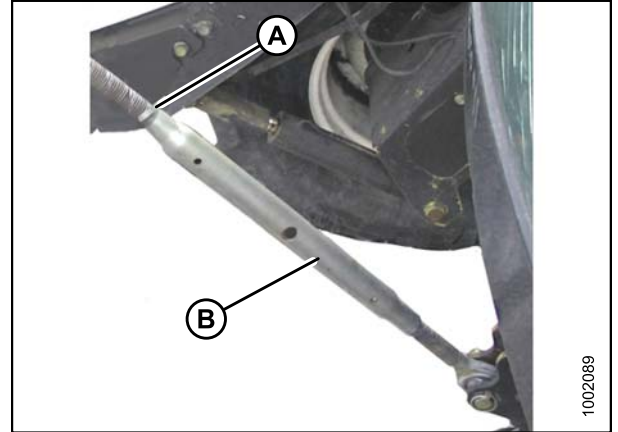


Figure 4.92: Mechanical Center-Link

Checking Self-Locking Center-Link Hook

Periodically check the operation of the hook locking mechanism and ensure that it is working properly as follows:

1. If header is attached to windrower, disconnect center-link hook from header by pulling up on handle (A) to release the locking device and then lifting the hook off the header pin.

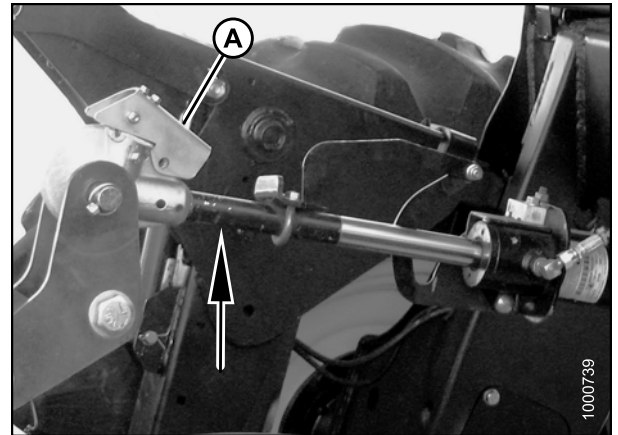


Figure 4.93: Center-Link

2. Lower the handle (A) into the **LOCK** position.
3. Push up on lock pin (B) only. Handle should catch on casting and pin should **NOT** lift.

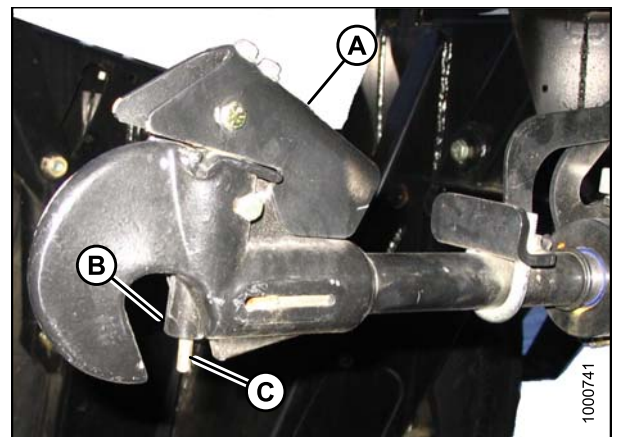


Figure 4.94: Center-Link Hook

A - Handle

B - Lock Pin

C - Actuator Rod

OPERATION

4. Push up on actuator rod and lock pin should lift with the handle.



Figure 4.95: Center-Link Hook

4.4.6 Cutting Height



Figure 4.96: Operator Console

Cutting height is adjusted by raising or lowering the header with the HEADER UP (B) or HEADER DOWN (C) switches on the ground speed lever (GSL).

The cab display module (CDM) indicates header height with a reading on the DISPLAY (A) lower line between 00.0 and 10.0, with 00.0 being on the ground.

Use DISPLAY SELECTOR switch (D) to display the current setting.

4.4.7 Return to Cut

The monitoring system will assist you in maintaining the desired cutting height with the RETURN TO CUT feature. This feature can be turned OFF or ON with a switch on the cab display module (CDM).

The return to cut (RTC) feature provides preset cutting height and tilt angle settings for the header.

If desired, the CDM can be programmed so that only the cutting height feature is active.

The AUTO RAISE HEIGHT feature allows you to raise the header to a preselected height while in the RETURN TO CUT mode. Refer to [Programming the Auto Raise Height Feature, page 209](#).

Refer to the following for RTC programming and operating procedures:

- [Programming the Return to Cut Feature, page 207](#)
- [Using the Return to Cut Feature, page 208](#)

Programming the Return to Cut Feature

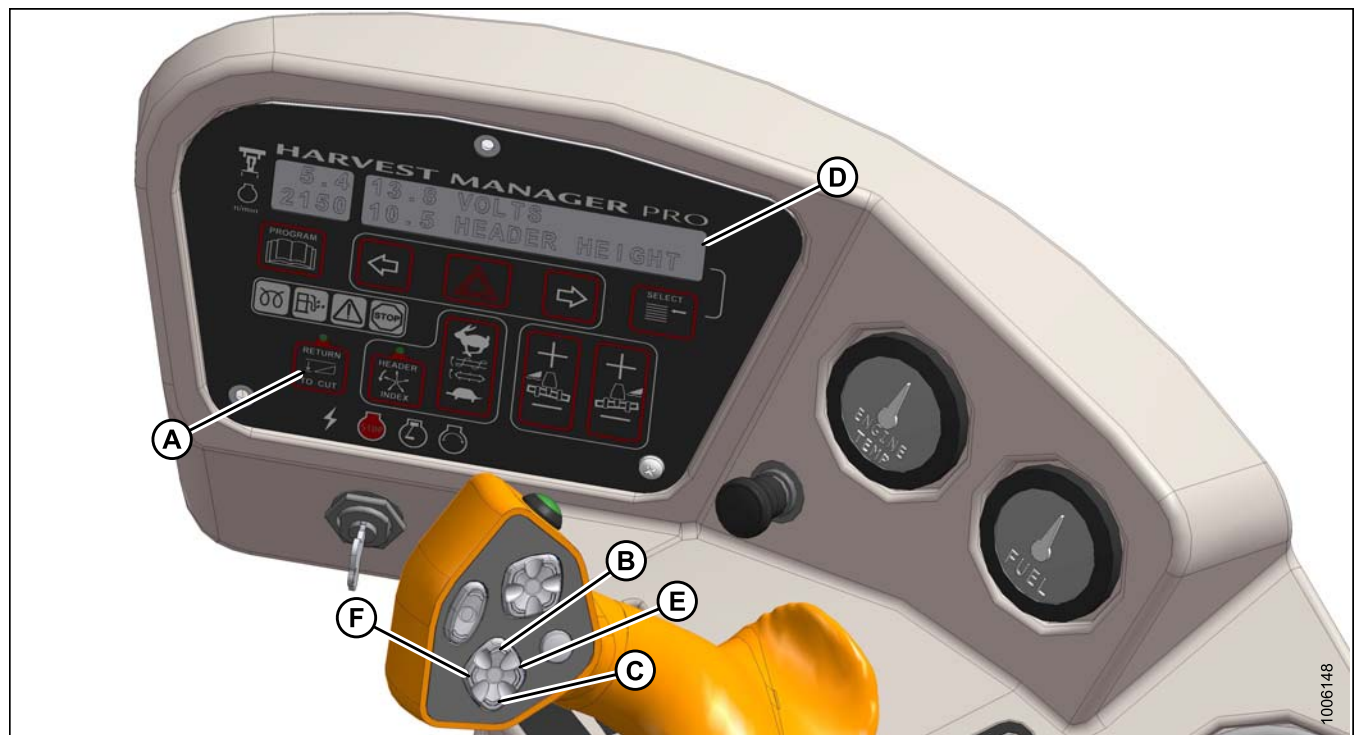


Figure 4.97: Operator Console

Program the return to cut (RTC) feature as follows:

CAUTION

Check to be sure all bystanders have cleared the area.

1. Start and windrower and engage the header.
2. Set RETURN TO CUT switch (A) to OFF (indicator light is OFF).
3. Adjust the header to the desired cutting height with the HEADER UP (B) or HEADER DOWN (C) switches on the ground speed lever (GSL). The cab display module (CDM) displays between **00.0** and **10.0** at (D).

OPERATION

- Adjust the header angle with the HEADER TILT UP (E) or HEADER TILT DOWN (F) switches on the GSL. The CDM displays between **00.0** and **10.0**. This step is not required when height only has been preselected.
- Press the RETURN TO CUT switch (A) on the CDM. The indicator light will illuminate and the settings are now programmed into the windrower control module (WCM).

Using the Return to Cut Feature

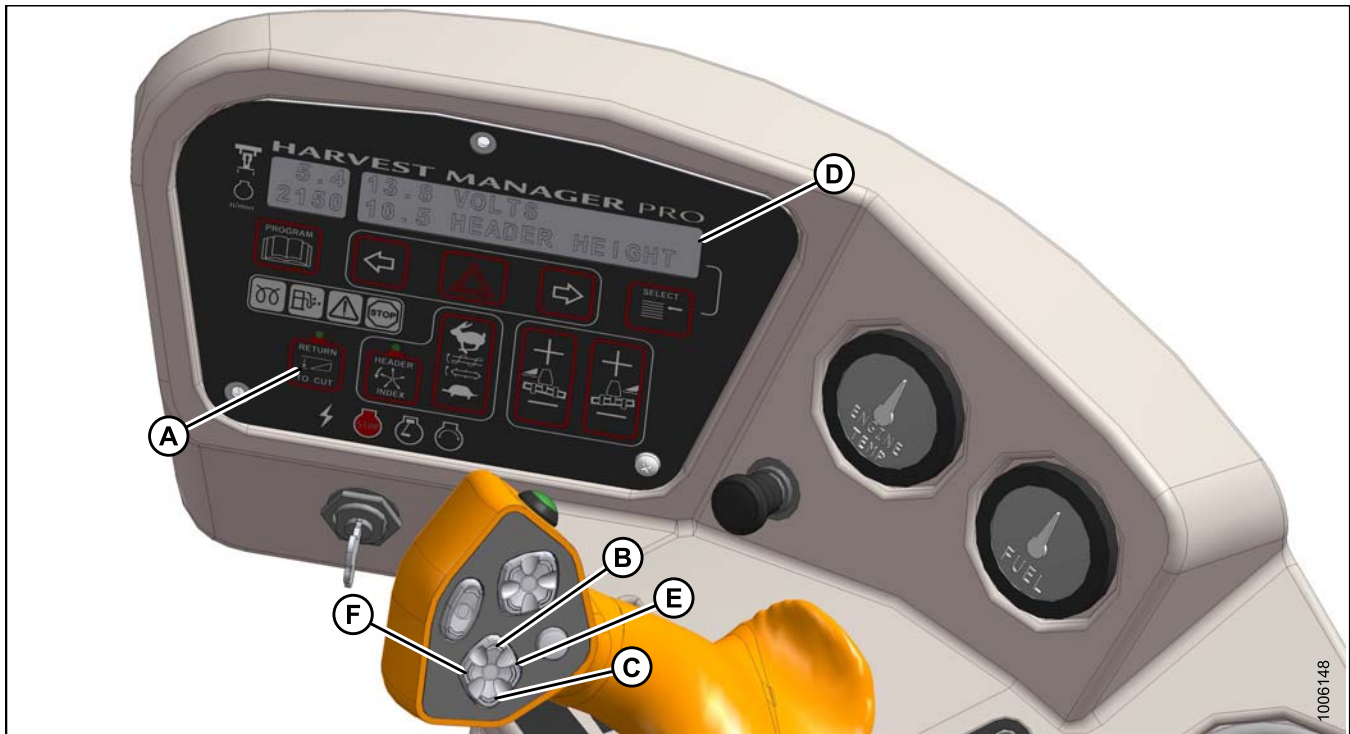


Figure 4.98: Operator Console

A - Return to Cut
D - Display

B - Header Up
E - Header Tilt Up

C - Header Down
F - Header Tilt Down

Use the return to cut feature as follows:

IMPORTANT:

Ensure the header is engaged and the RETURN TO CUT switch (A) is illuminated.

NOTE:

The header can be raised or lowered by **pressing and holding** the HEADER UP (B) or HEADER DOWN (C) switches on the ground speed lever (GSL).

- If header is above the preset cutting height, **momentarily press** HEADER DOWN switch (C) and the header will return to preset height.
- If the header is below the preset height, **press and hold** the HEADER UP (B) switch to raise the header. Release switch to stop header. Alarm will sound when header rises past the preset height.
- If the header angle changes, double-click (two clicks within 0.5 seconds) the HEADER TILT UP (E) or HEADER TILT DOWN switch (F) and the header will return to the preset angle.

OPERATION

NOTE:

If the header cannot return to the preset height or angle within 30 seconds, the return to cut feature will deactivate to prevent the hydraulic oil from overheating. Push the RETURN TO CUT switch (A) to reactivate.

4.4.8 Auto Raise Height

The header can be raised to a preset height by enabling the auto raise height feature in the cab display module (CDM).

Refer to the following topics:

- [Programming the Auto Raise Height Feature, page 209](#)
- [Using the Auto Raise Height Feature, page 210](#)

Programming the Auto Raise Height Feature

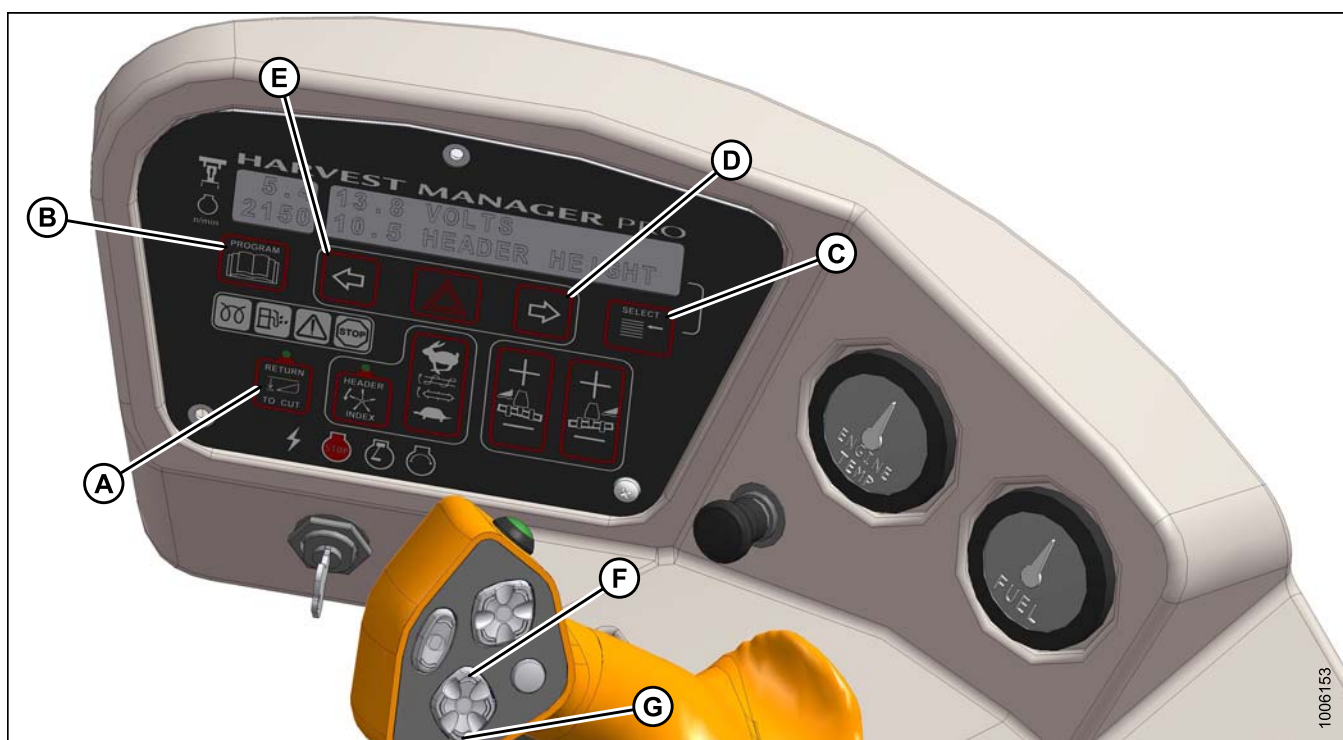


Figure 4.99: Operator Console

A - Return to Cut
E - Left Arrow

B - Program
F - Header Up

C - Select
G - Header Down

D - Right Arrow

Program the auto raise height feature as follows:

NOTE:

RETURN TO CUT switch (A) can be OFF or ON.

1. Turn ignition ON or run engine.
2. Press PROGRAM (B) and SELECT (C) on cab display module (CDM) to enter programming mode.
3. Press SELECT (C). WINDROWER SETUP? is displayed on upper line (B).

OPERATION

4. Press right arrow (D), then SELECT. SET KNIFE SPEED? is displayed.
5. Press SELECT (C) until AUTO RAISE HEIGHT is displayed.
6. Press left arrow (E) or right arrow (D) to change value on lower line. Working range is 4.0 to 9.5. At 10.0, the feature is disabled and OFF is displayed.
7. When finished entering desired values, press PROGRAM to exit programming mode.

Using the Auto Raise Height Feature

IMPORTANT:

The windrower must be running with the header engaged at the cutting height and the RETURN TO CUT switch (A) activated.

Use the auto raise height feature as follows:

1. To raise the header to the auto raise height set point, double-click (two clicks within 0.5 seconds) the HEADER UP switch (B) on the ground speed lever (GSL).

NOTE:

With AUTO RAISE HEIGHT turned ON, the ACRE counter will be disabled when header height greater than preset cutting height.

2. If desired, press HEADER UP switch while header is being raised to disable auto raise height and maintain current height.

NOTE:

With AUTO RAISE HEIGHT turned OFF, the ACRE counter will be disabled when header height value is greater than 9.5. OFF is displayed on the cab display module (CDM).

3. To return the header to the preset cutting height, momentarily press HEADER DOWN switch (C).

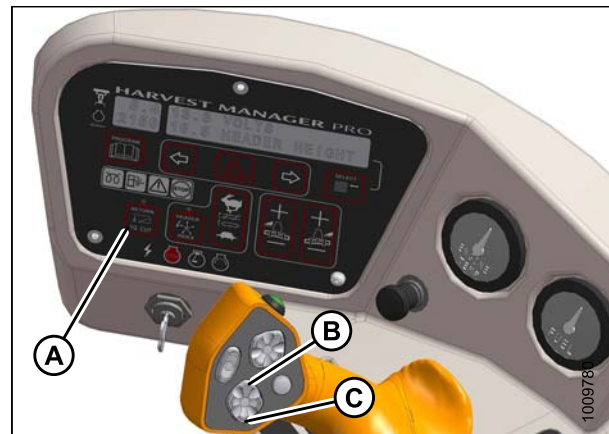


Figure 4.100: Operator's Station

4.4.9 Header Drop Rate

The header should lower gradually when the HEADER DOWN switch is pressed. From full height to ground should take 3–4 seconds.

If the drop rate requires adjustment, refer to [Adjusting Header Drop Rate, page 413](#).

4.4.10 Double Windrowing

The double windrow attachment (DWA) deposits two windrows of conditioned material close together to be picked up by a forage chopper.

The system is for use with the A-Series Auger Headers, R-Series Rotary Disc Headers, and D65 Draper Headers with HC10 Hay Conditioner.

The conditioned crop is deposited onto the side delivery system draper and delivered to the side of the windrower wheels when required.

Raising the side delivery system shuts off the draper and allows the crop to be deposited between the windrower wheels as it would be without the side delivery system.

Refer to MacDon M-Series Windrower Double Windrow Attachment Manual for complete operating and maintenance instructions. The manual is shipped with the DWA kit.



Figure 4.101: DWA

Double Windrow Attachment (DWA) Deck Position

The deck is raised and lowered with the DWA UP (A) and DWA DOWN (B) switches on the ground speed lever (GSL) or with the rocker switch on the operator's console, depending on how the windrower cab display module (CDM) is programmed during the installation of the double windrow attachment (DWA).

To swap controls from the console to the GSL, refer to [Activating the Double Windrow Attachment \(DWA\), page 110](#).

NOTE:

The same switch is used for raising and lowering a swath roller (if installed).

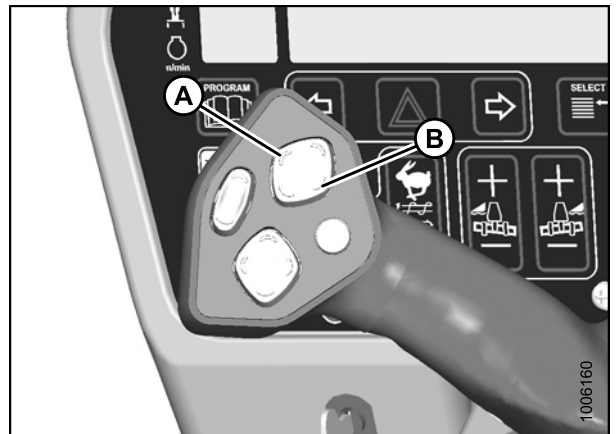


Figure 4.102: Ground Speed Lever (GSL)

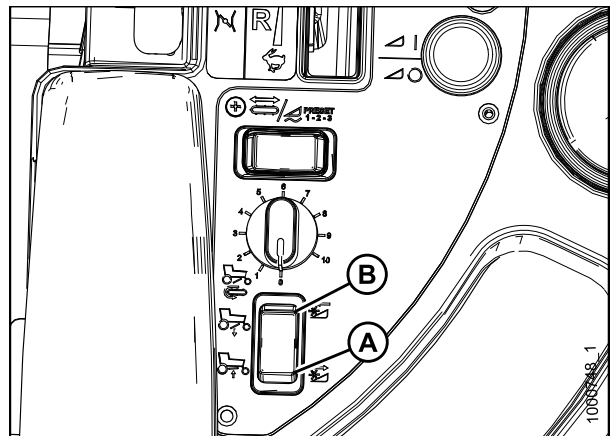


Figure 4.103: Operator's Console

OPERATION

Double Windrow Attachment (DWA) Draper Speed

The DWA draper speed is controlled with the rotary switch (A) next to the rocker switch on the operator's console.

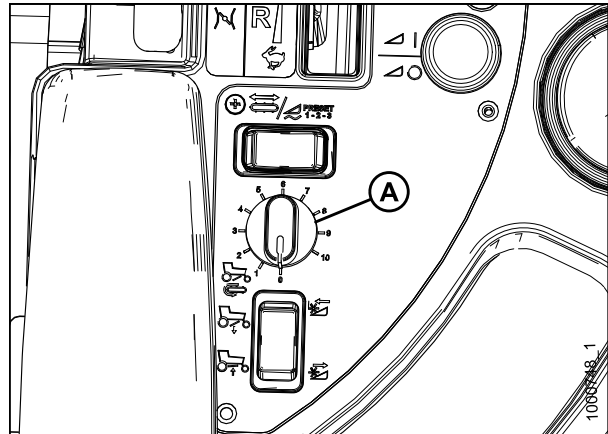


Figure 4.104: Operator's Console

4.4.11 Swath Roller Operation

The swath roller is raised and lowered with the DWA UP (A) and DWA DOWN (B) switches on the ground speed lever (GSL) or with the rocker switch on the operator's console. This depends on how the windrower cab display module (CDM) is programmed during the installation of the Swath Roller kit.

To swap controls from the console to the GSL, refer to [Activating the Double Windrow Attachment \(DWA\)](#), page 110.

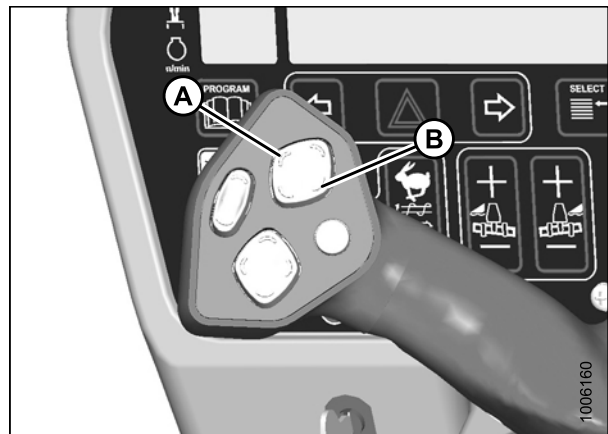


Figure 4.105: GSL

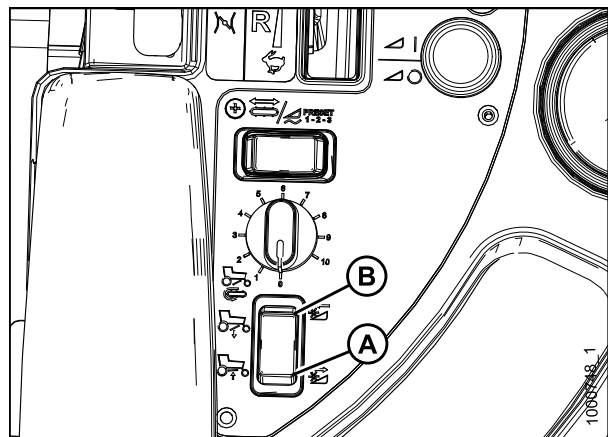


Figure 4.106: Rocker Switch

4.5 Attaching and Detaching Headers

4.5.1 Attaching Header Boots

Header boots are required to attach a D-Series draper header to the windrower. Attach header boots (supplied with header) to windrower lift linkage if not already installed.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

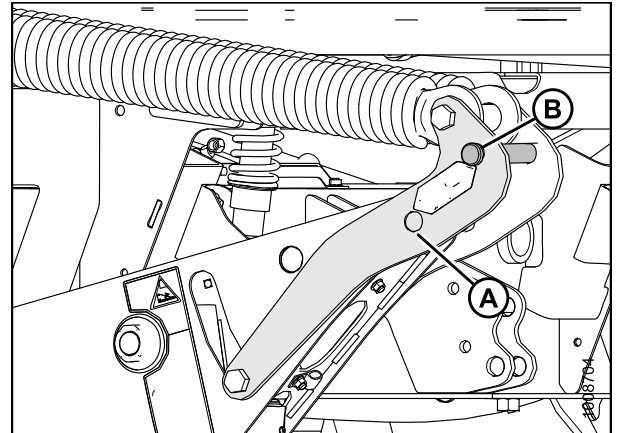


Figure 4.107: Header Float Linkage

1. Remove pin (B) from boot (A).

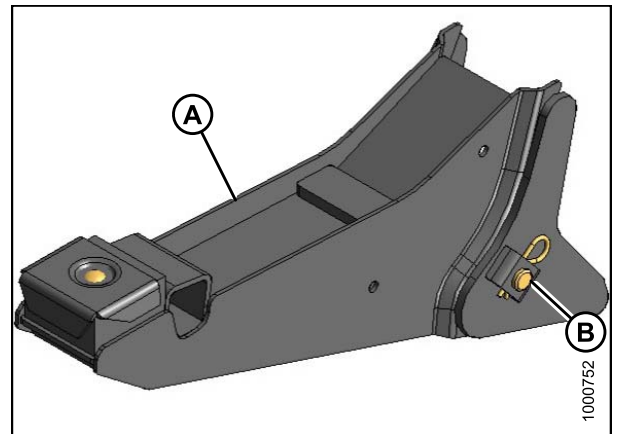


Figure 4.108: Header Boot

2. Position boot (B) onto lift linkage (A) and reinstall pin (C). Pin may be installed from either side of boot.
3. Secure pin (C) with hairpin (D).
4. Repeat for opposite side.

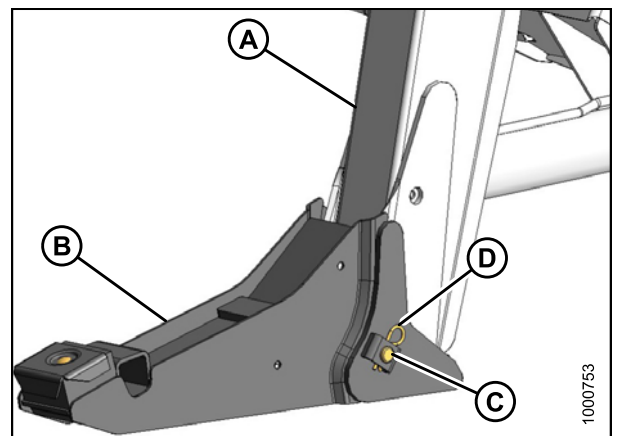


Figure 4.109: Header Boot

4.5.2 Attaching a D-Series Header

D50, D60, and D65 headers can be attached to an M155 or M205 Self-Propelled Windrower. For attachment procedures, refer to the section for your specific windrower model.

Refer to the following instructions based on the type of center-link installed on your windrower:

- [Attaching a D-Series Header: Hydraulic Center-Link with Optional Self-Alignment, page 214](#)
- [Attaching a D-Series Header: Hydraulic Center-Link without Self-Alignment, page 219](#)
- [Attaching a D-Series Header: Mechanical Center-Link, page 225](#)

Attaching a D-Series Header: Hydraulic Center-Link with Optional Self-Alignment

NOTE:

Draper header boots must be installed onto the windrower lift linkage before starting this procedure. Refer to [4.5.1 Attaching Header Boots, page 213](#).

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (A) from pins (B), and remove pins from both header legs.

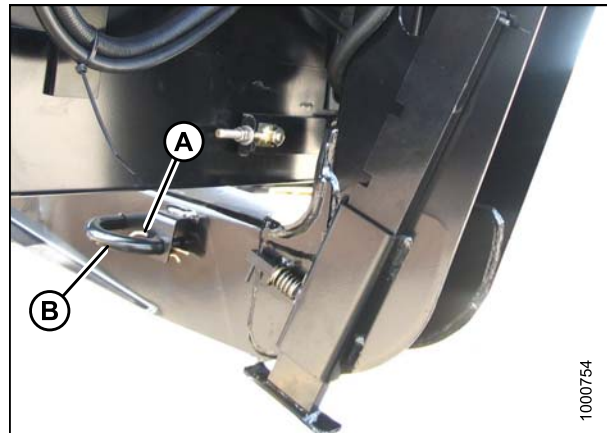


Figure 4.110: Header Leg

⚠ CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Before starting engine, remove protective cover from exhaust stack.

2. Start the engine and activate the HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

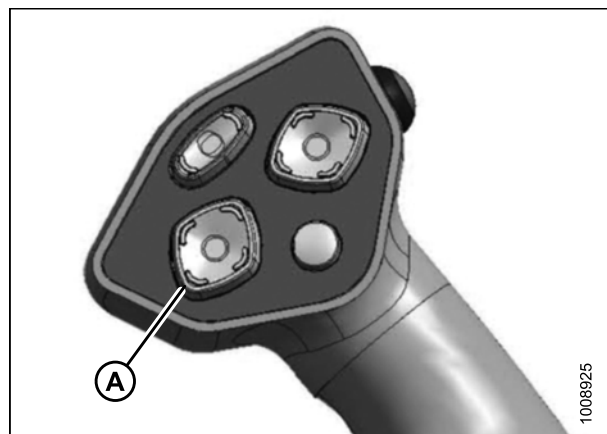


Figure 4.111: Ground Speed Lever

OPERATION

3. Activate the REEL UP switch (A) on the GSL to raise the center-link until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

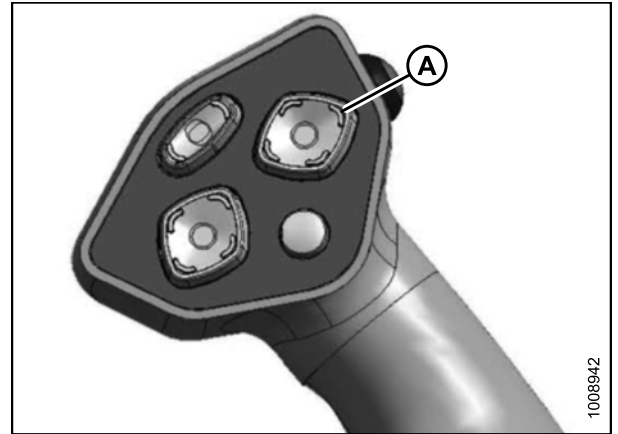


Figure 4.112: Ground Speed Lever

4. Drive the windrower slowly forward until the boots (A) enter the header legs (B). Continue driving slowly forward until lift linkages contact the support plates in the header legs and the header nudges forward.
5. Ensure the lift linkages are properly engaged in the header legs and are contacting the support plates.

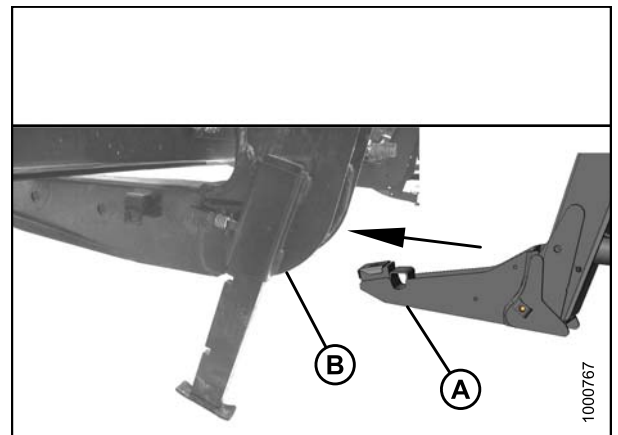


Figure 4.113: Header Leg and Boot

6. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - Reel up (A) to raise the center-link
 - Reel down (B) to lower the center-link
 - Header tilt up (C) to retract the center-link
 - Header tilt down (D) to extend the center-link

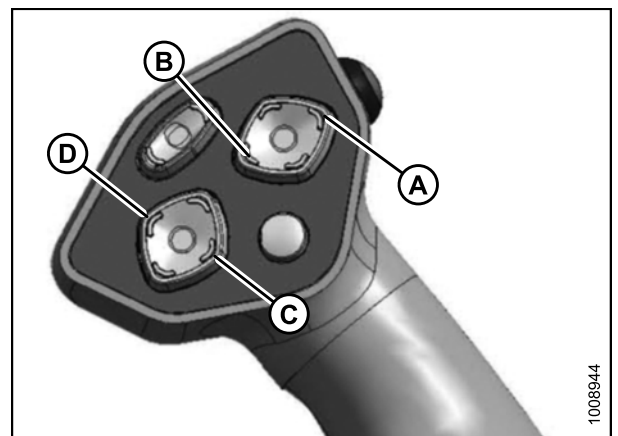


Figure 4.114: Ground Speed Lever

OPERATION

- Adjust position of the center-link cylinder (A) with the REEL UP, REEL DOWN, AND HEADER TILT switches on the GSL until the hook is above the header attachment pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

- Lower center-link (A) onto the header with the REEL DOWN switch on the GSL until it locks into position (hook release [B] is down).
- Check that center-link is locked onto header by pressing the REEL UP switch on the GSL.

CAUTION

Check to be sure all bystanders have cleared the area.

- Press the HEADER UP switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:

- Press and hold the HEADER UP switch until both cylinders stop moving.
- Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.

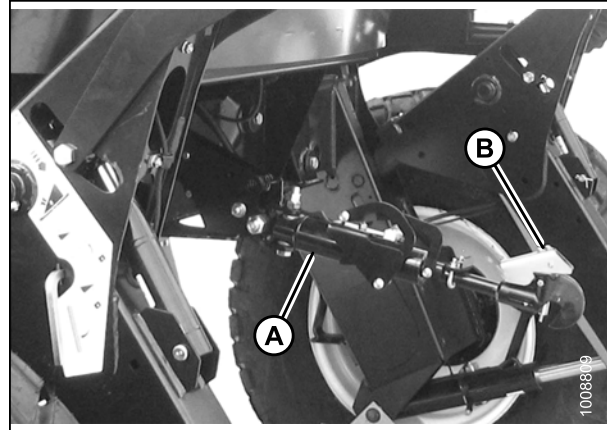


Figure 4.115: Hydraulic Center-Link



Figure 4.116: Ground Speed Lever

OPERATION

11. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

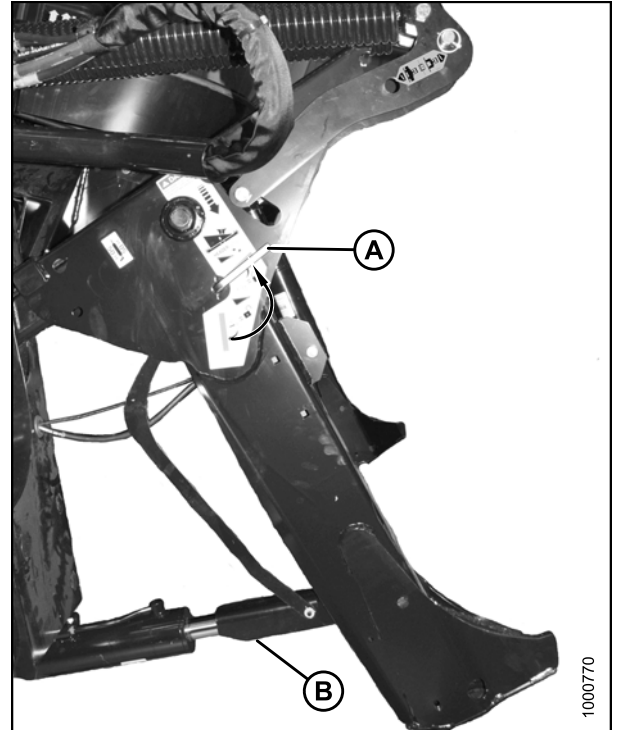


Figure 4.117: Safety Prop

12. Install pin (B) through the header leg (engaging U-bracket in lift linkage) on both sides and secure with hairpin (A).
13. Raise header stand (D) to storage position by pulling spring pin (C) and lifting stand into uppermost position. Release spring pin.

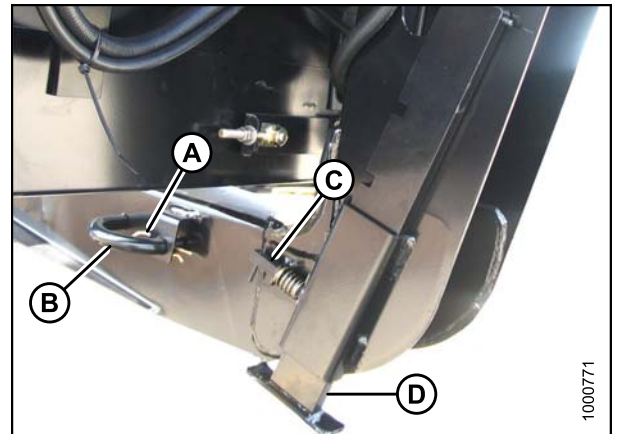


Figure 4.118: Header Leg

OPERATION

14. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

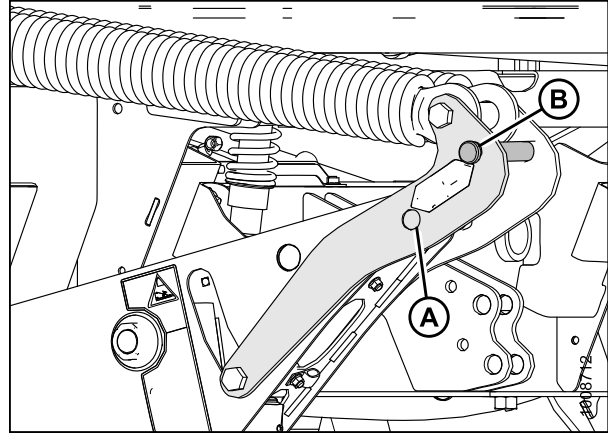


Figure 4.119: Header Float Linkage

15. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
16. Repeat for opposite safety prop.

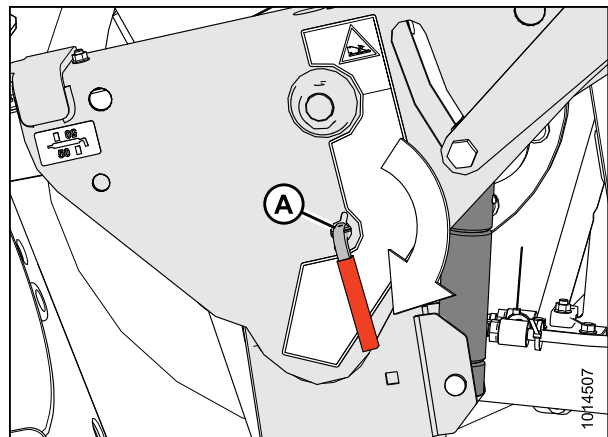


Figure 4.120: Safety Prop

CAUTION

Check to be sure all bystanders have cleared the area.

17. Start the engine and activate the HEADER DOWN switch (A) on the GSL to fully lower the header.
18. Stop engine and remove key from ignition.

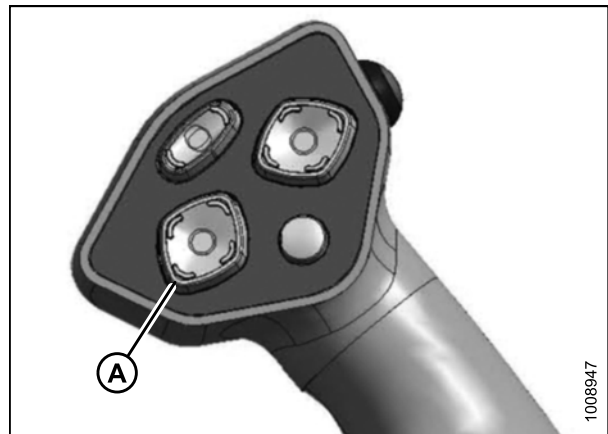


Figure 4.121: Ground Speed Lever

OPERATION

19. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the draper header operator's manual.

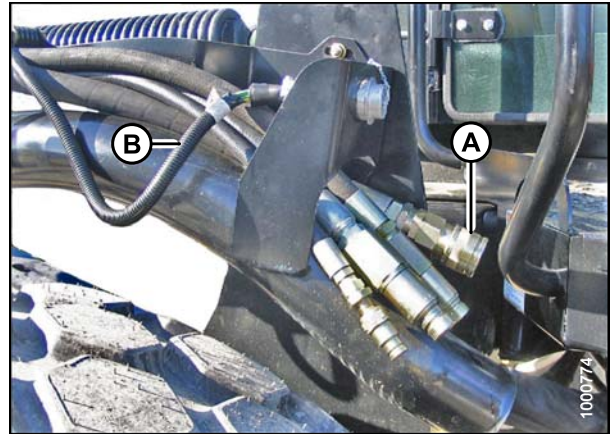


Figure 4.122: Header Drive Hoses and Harness

20. Connect reel hydraulics (A) at right cab-forward side of windrower. Refer to the draper header operator's manual.

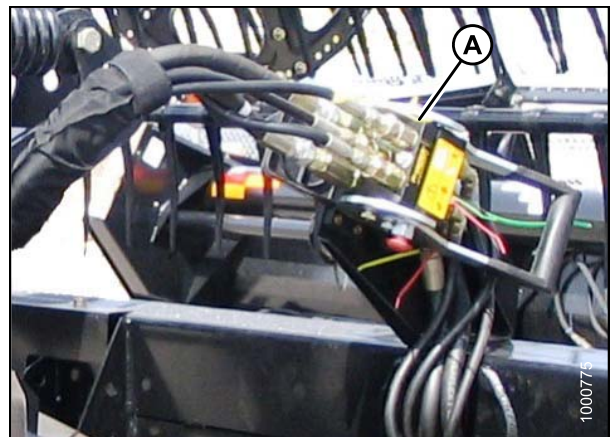


Figure 4.123: Reel Hydraulics

Attaching a D-Series Header: Hydraulic Center-Link without Self-Alignment

NOTE:

Draper header boots must be installed onto the windrower lift linkage before starting this procedure. Refer to [4.5.1 Attaching Header Boots, page 213](#).

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

OPERATION

1. Remove hairpin (A) from pins (B), and remove pins from both header legs.

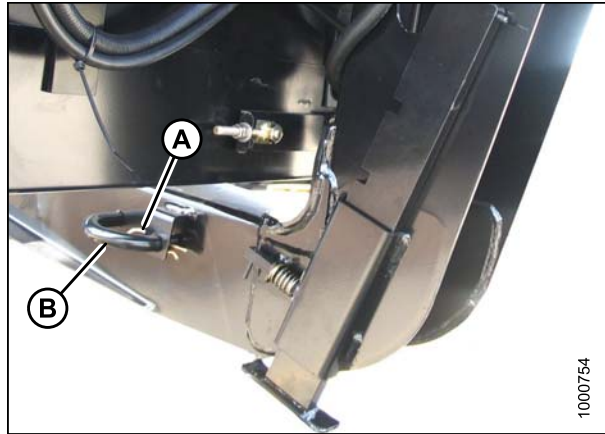


Figure 4.124: Header Leg

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Before starting engine, remove protective cover from exhaust stack.

2. Start the engine and activate the HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

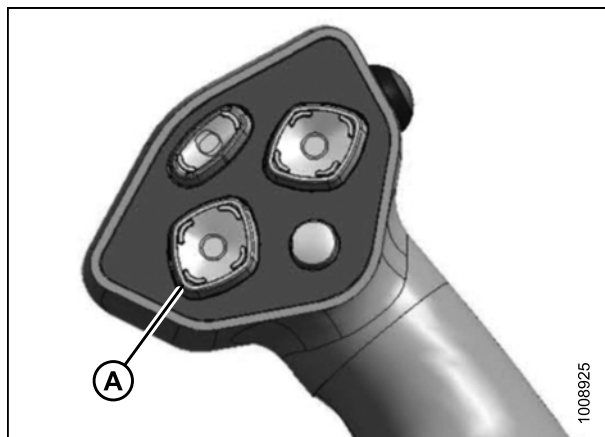


Figure 4.125: Ground Speed Lever

3. Relocate pin (A) in frame linkage as required to raise the center-link (B) until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

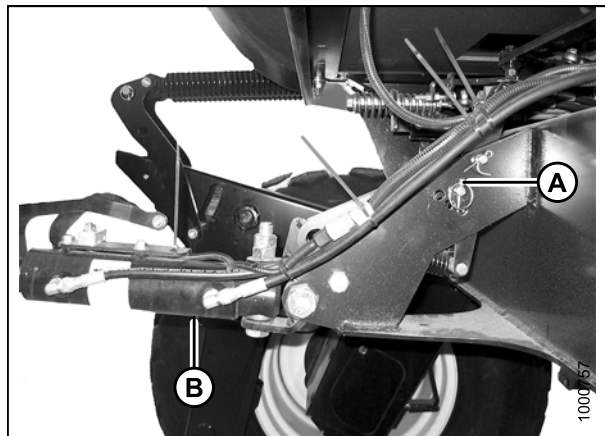


Figure 4.126: Hydraulic Center-Link without Self-Alignment Kit

OPERATION

4. Drive the windrower slowly forward until the boots (A) enter the header legs (B). Continue driving slowly forward until lift linkages contact the support plates in the header legs and the header nudges forward.
5. Ensure the lift linkages are properly engaged in the header legs and are contacting the support plates.

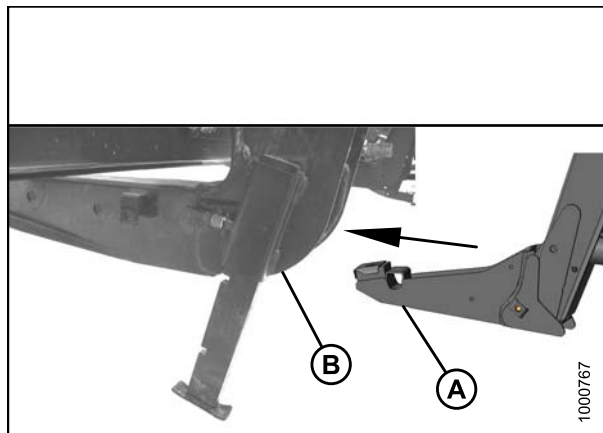


Figure 4.127: Header Leg and Boot

6. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - Header tilt up (A) to retract the center-link
 - Header tilt down (B) to extend the center-link
7. Stop engine and remove key from ignition.

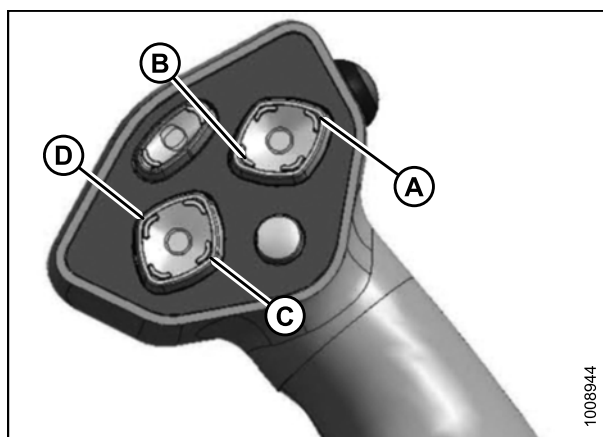


Figure 4.128: Ground Speed Lever

8. Push down on rod end of link cylinder (B) until hook engages and locks onto header pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

9. Check that center-link (A) is locked onto header by pulling upward on rod end (B) of cylinder.

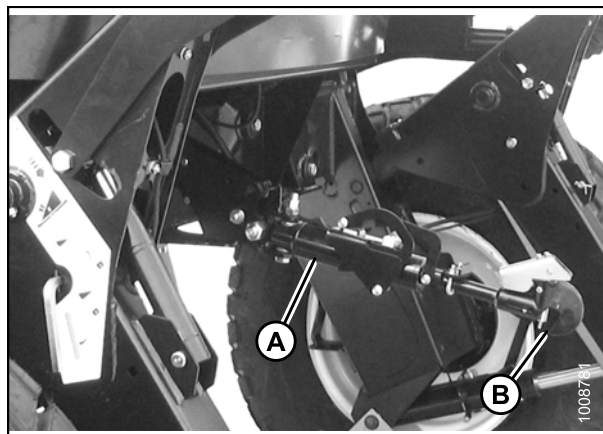


Figure 4.129: Hydraulic Center-Link

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

10. Start the engine.
11. Press the HEADER UP switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.

12. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

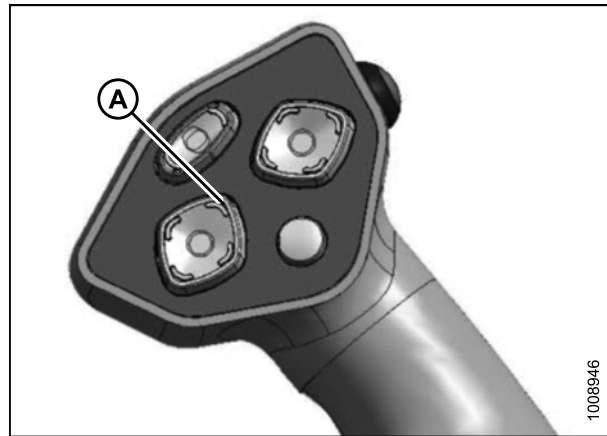


Figure 4.130: Ground Speed Lever

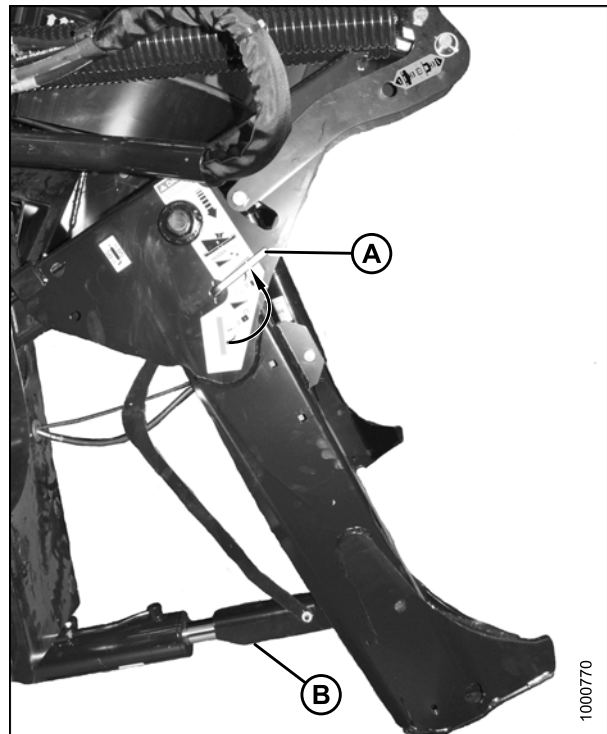


Figure 4.131: Safety Prop

OPERATION

13. Install pin (B) through the header leg (engaging U-bracket in lift linkage) on both sides and secure with hairpin (A).
14. Raise header stand (D) to storage position by pulling spring pin (C) and lifting stand into uppermost position. Release spring pin.

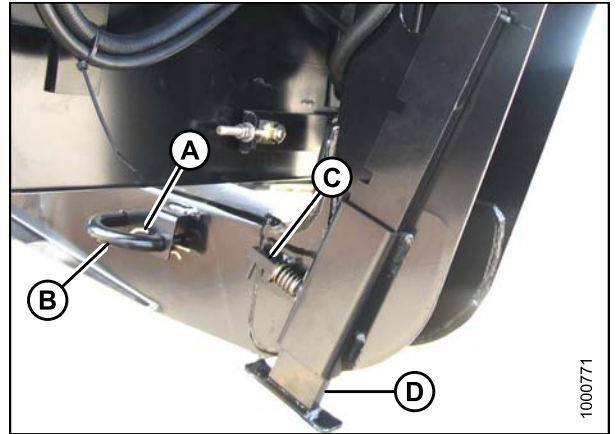


Figure 4.132: Header Leg

15. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

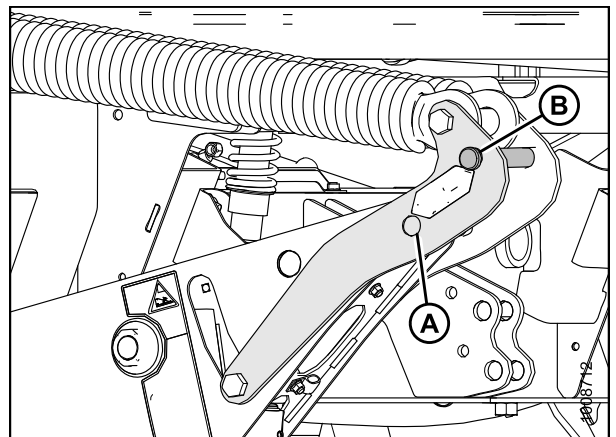


Figure 4.133: Header Float Linkage

16. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
17. Repeat for opposite safety prop.

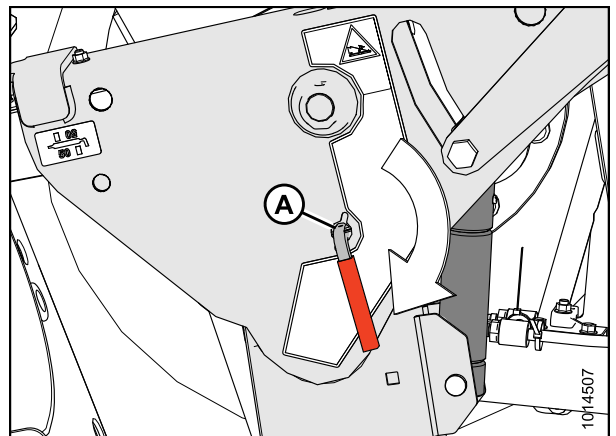


Figure 4.134: Safety Prop

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

18. Start the engine and activate the HEADER DOWN switch (A) on the GSL to fully lower the header.
19. Stop engine and remove key from ignition.

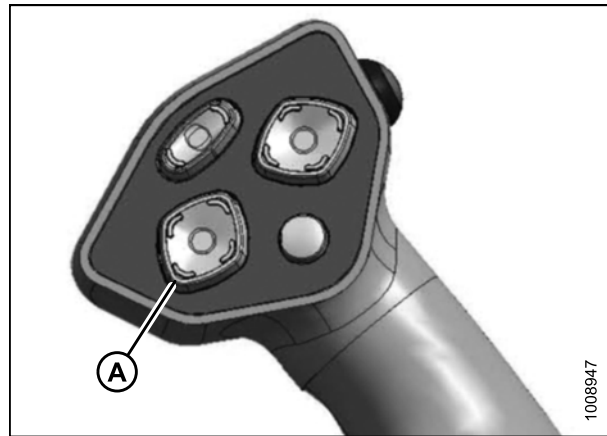


Figure 4.135: Ground Speed Lever

20. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the draper header operator's manual.

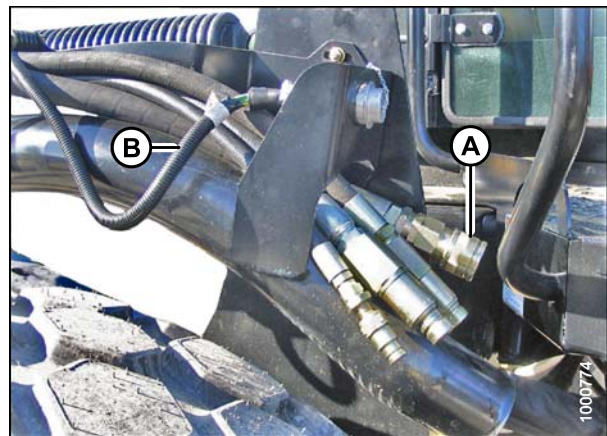


Figure 4.136: Header Drive Hoses and Harness

21. Connect reel hydraulics (A) at right cab-forward side of windrower. Refer to the draper header operator's manual.

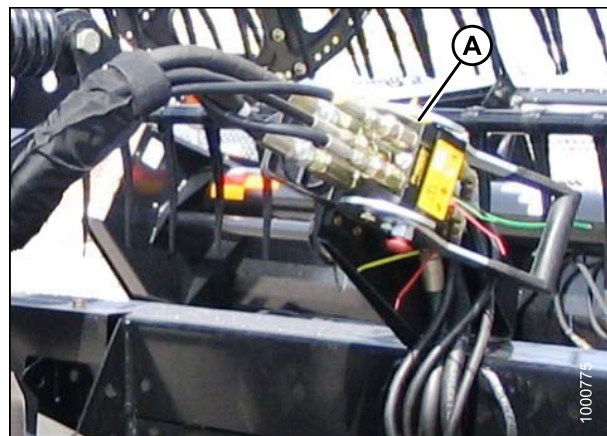


Figure 4.137: Reel Hydraulics

OPERATION

Attaching a D-Series Header: Mechanical Center-Link

NOTE:

Draper header boots must be installed onto the windrower lift linkage before starting this procedure. Refer to [4.5.1 Attaching Header Boots, page 213](#).

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (A) from pins (B), and remove pins from both header legs.

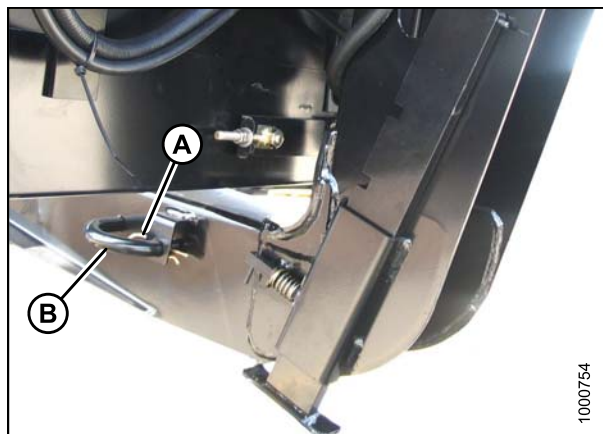


Figure 4.138: Header Leg

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Before starting engine, remove protective cover from exhaust stack.

2. Start the engine and activate the HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.



Figure 4.139: Ground Speed Lever

OPERATION

3. Drive the windrower slowly forward until the boots (A) enter the header legs (B). Continue driving slowly forward until lift linkages contact the support plates in the header legs and the header nudges forward.
4. Ensure the lift linkages are properly engaged in the header legs and are contacting the support plates.

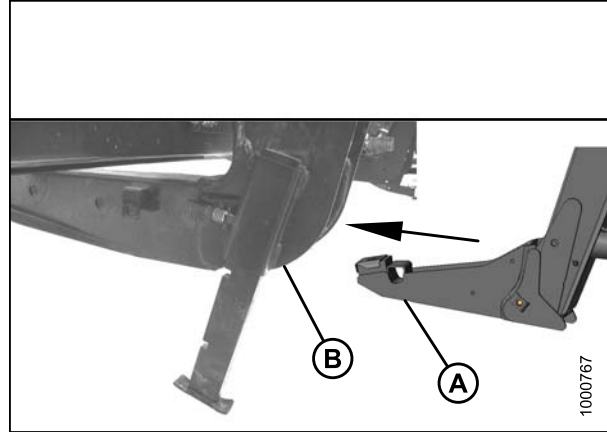


Figure 4.140: Header Leg and Boot

5. Stop engine and remove key from ignition.
6. Loosen nut (A) and rotate barrel (B) to adjust length until the link is aligned with the header bracket.
7. Install clevis pin (C) and secure with cotter pin (D).
8. Adjust length of link to achieve proper header angle by rotating barrel (B). Tighten nut (A) against barrel (a slight tap with a hammer is sufficient).

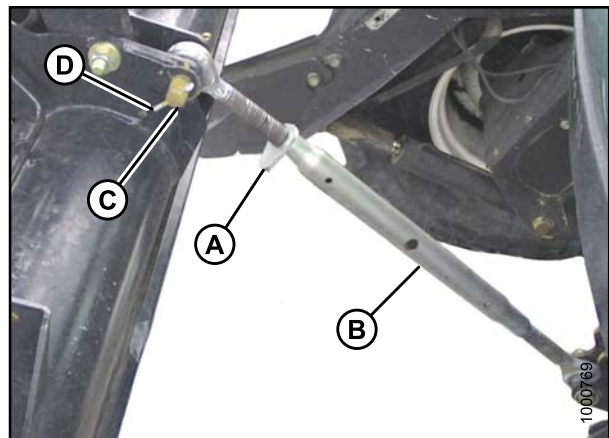


Figure 4.141: Mechanical Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

9. Start the engine.
10. Press the HEADER UP switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.



Figure 4.142: Ground Speed Lever

OPERATION

11. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

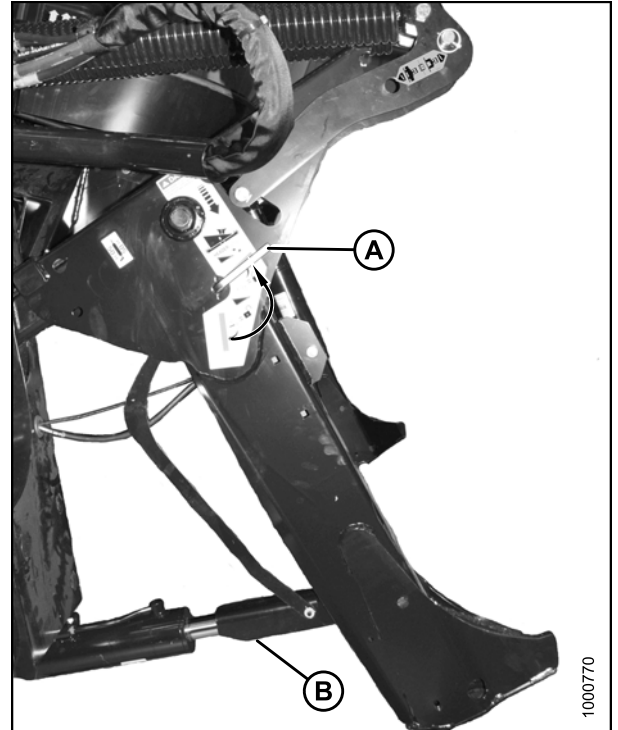


Figure 4.143: Safety Prop

12. Install pin (B) through the header leg (engaging U-bracket in lift linkage) on both sides and secure with hairpin (A).
13. Raise header stand (D) to storage position by pulling spring pin (C) and lifting stand into uppermost position. Release spring pin.

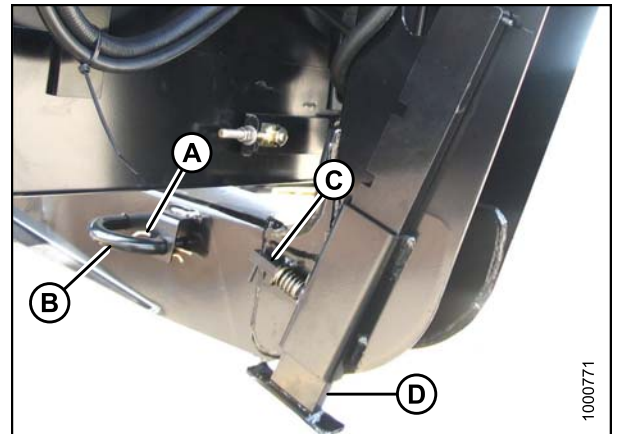


Figure 4.144: Header Leg

OPERATION

14. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

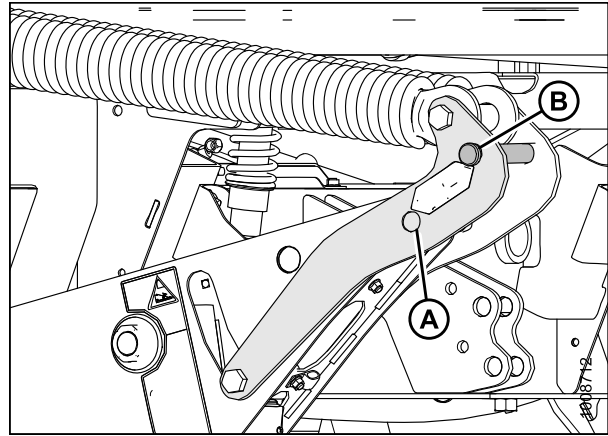


Figure 4.145: Header Float Linkage

15. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
16. Repeat for opposite safety prop.

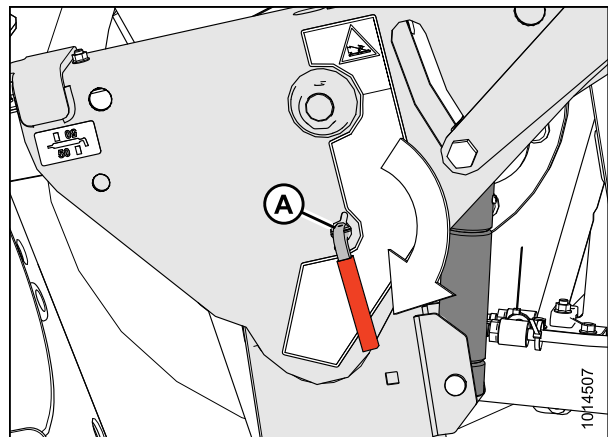


Figure 4.146: Safety Prop

CAUTION

Check to be sure all bystanders have cleared the area.

17. Start the engine and activate the HEADER DOWN switch (A) on the GSL to fully lower the header.
18. Stop engine and remove key from ignition.

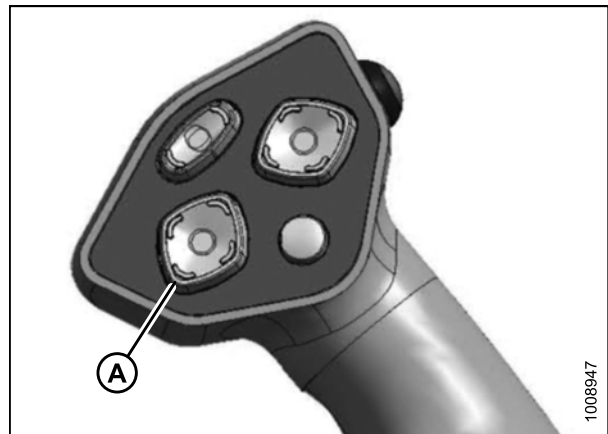


Figure 4.147: Ground Speed Lever

OPERATION

19. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the draper header operator's manual.

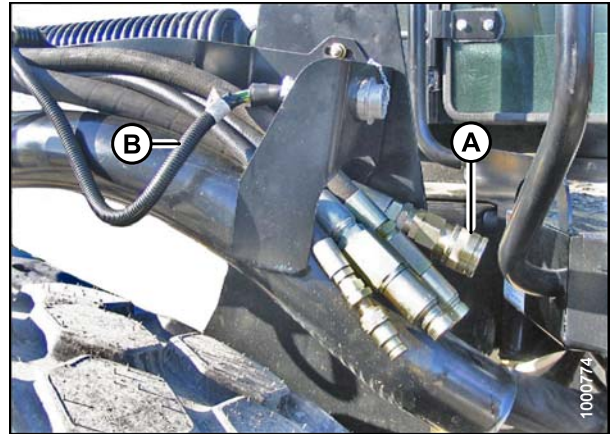


Figure 4.148: Header Drive Hoses and Harness

20. Connect reel hydraulics (A) at right cab-forward side of windrower. Refer to the draper header operator's manual.

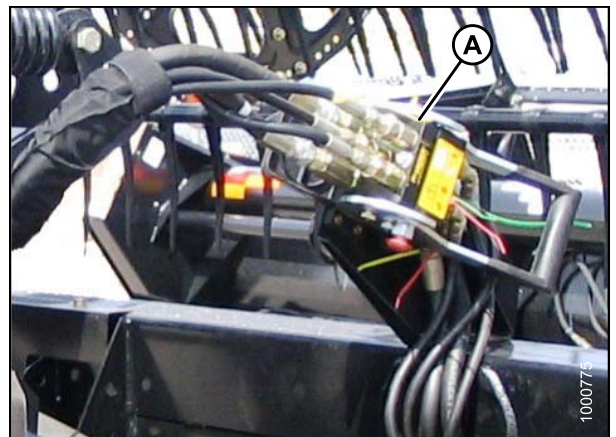


Figure 4.149: Reel Hydraulics

4.5.3 Detaching a D-Series Header

Refer to the procedure that is appropriate for the center-link installed on the windrower:

- [Detaching a D-Series Header: Hydraulic Center-Link, page 229](#)
- [Detaching a D-Series Header: Mechanical Center-Link, page 233](#)

Detaching a D-Series Header: Hydraulic Center-Link

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

OPERATION

1. Start engine and press header up (A) switch to raise header to maximum height.
2. Rephase cylinders if one end of the header does not raise fully. If rephasing is required, proceed as follows:
 - a. Press and hold the header up (A) switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.
3. Stop engine and remove key.

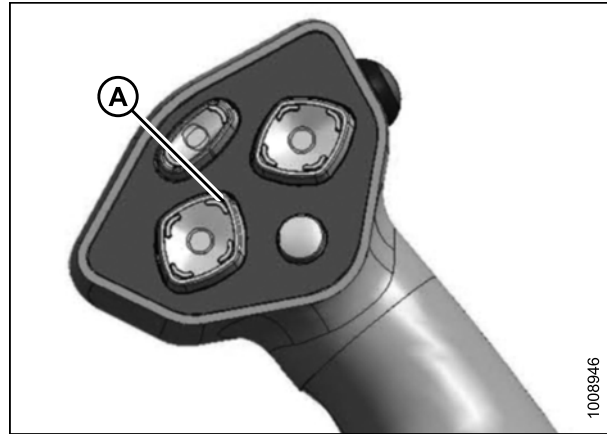


Figure 4.150: Ground Speed Lever

4. Pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for opposite cylinder.

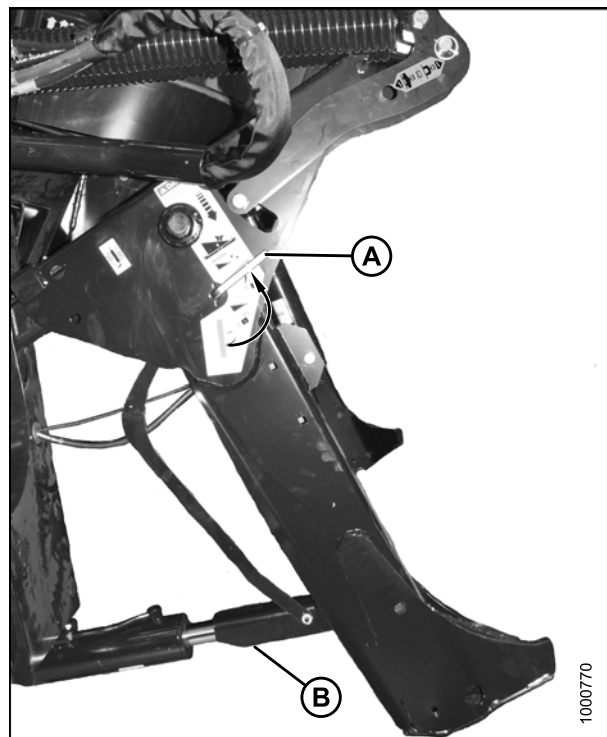


Figure 4.151: Safety Prop

OPERATION

5. Remove the pin (B) by removing the hairpin (A) from header leg on both sides.
6. Lower header stand (D) by pulling spring loaded pin (C). Release spring pin to lock stand.

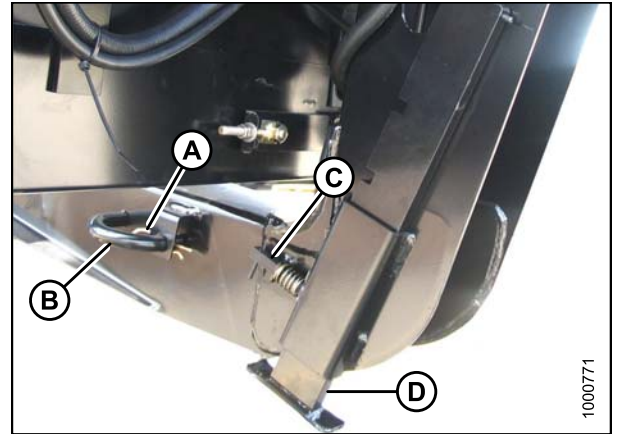


Figure 4.152: Header Stand

7. Remove clevis pin from location (A) to disengage float springs and insert in storage hole (B). Secure with lynch pin.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

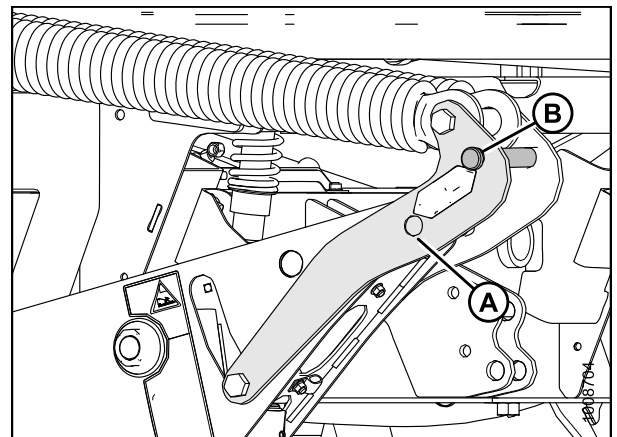


Figure 4.153: Header Float Linkage

8. Turn lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
9. Start engine, choose a level area, and lower header to the ground.
10. Stop the engine and remove the key.

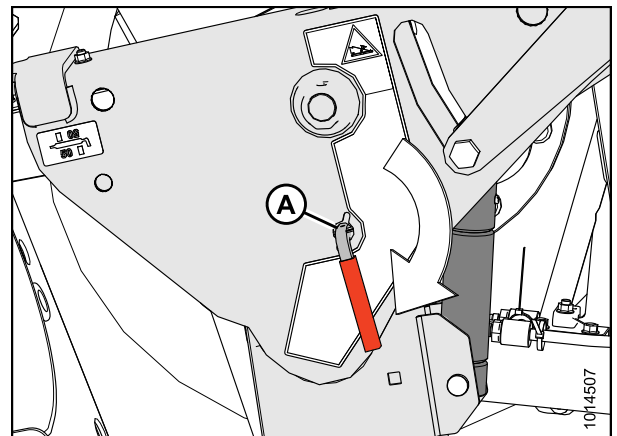


Figure 4.154: Safety Prop

OPERATION

11. Disconnect header drive hydraulics (A) and electrical harness (B) from header and store in support on windrower left cab-forward side. Refer to the draper header operator's manual for further information.

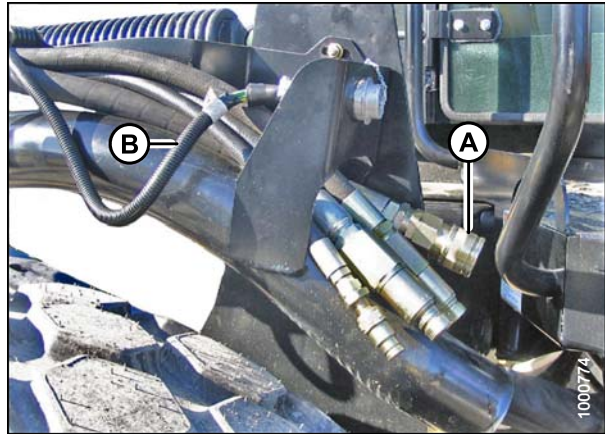


Figure 4.155: Header Drive Hydraulics

12. Disconnect reel hydraulics (A) from header and store on bracket at windrower left cab-forward side. Refer to the draper header operator's manual for further information.

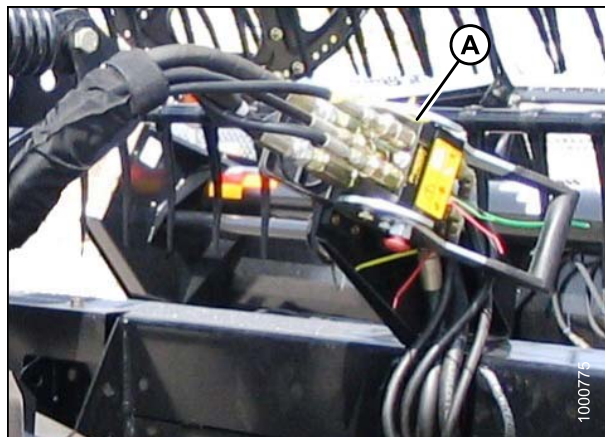


Figure 4.156: Reel Hydraulics

CAUTION

Check to be sure all bystanders have cleared the area.

13. Start engine and activate header tilt up (A) and header tilt down (B) cylinder switches on ground speed lever (GSL) to release load on center-link cylinder.

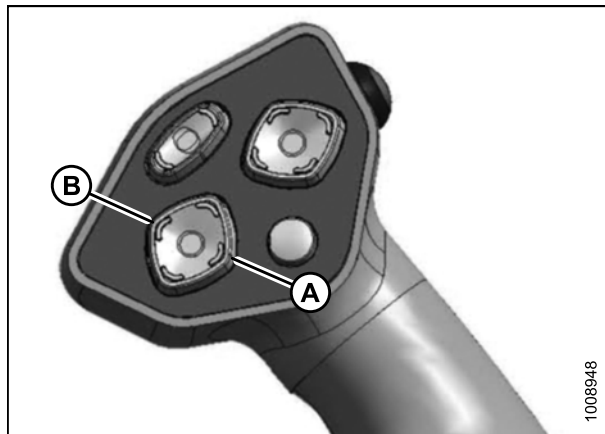


Figure 4.157: Ground Speed Lever

OPERATION

14. Disconnect center-link by lifting release (B) and lift hook (A) off header.

NOTE:

If optional center-link self-alignment kit is installed, lift release (B) and then operate the link lift cylinder with REEL UP switch on GSL to disengage the center-link from the header.

NOTE:

If hay conditioner is installed, watch clearances on both sides.

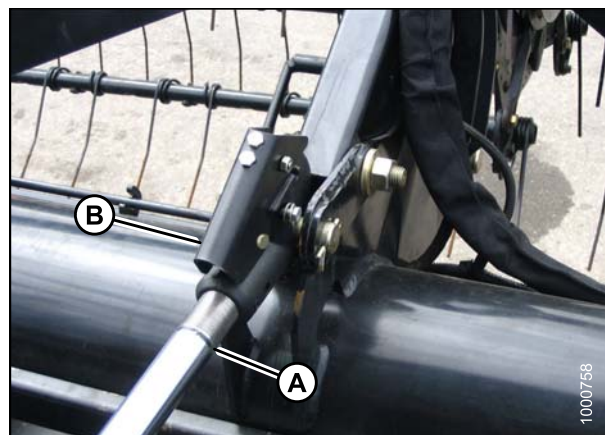


Figure 4.158: Hydraulic Center-Link

15. Reinstall pin (A) into header leg and secure with a hairpin (B).

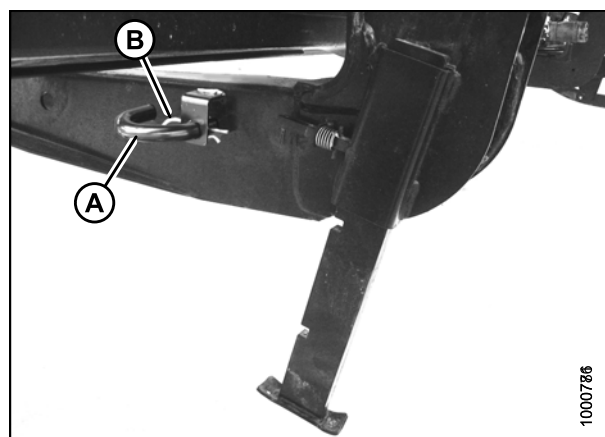


Figure 4.159: Header Stand

Detaching a D-Series Header: Mechanical Center-Link

To detach a D-Series header from an M-Series windrower equipped with mechanical center-link, follow these steps:

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Start engine and press HEADER UP (A) switch to raise header to maximum height.
2. If one end of the header does **NOT** raise completely, rephase the cylinders as follows:
 - a. Press and hold the HEADER UP (A) switch on the ground speed lever (GSL) until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are phased.
3. Stop engine and remove key.



Figure 4.160: Ground Speed Lever

OPERATION

4. To engage the safety props, pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for the opposite cylinder.

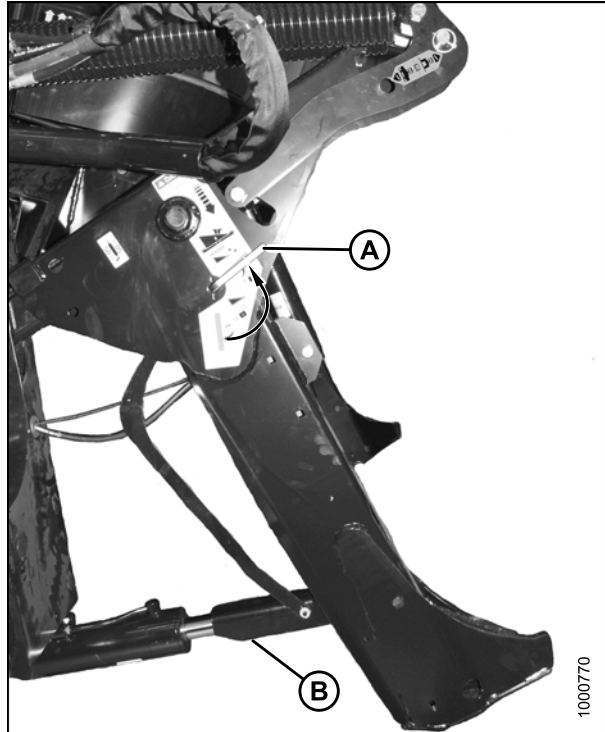


Figure 4.161: Safety Prop

5. Remove the clevis pin (B) by removing hairpin (A) from header leg on both sides.
6. Lower header stand (D) by pulling spring loaded pin (C). Release pin to lock stand.

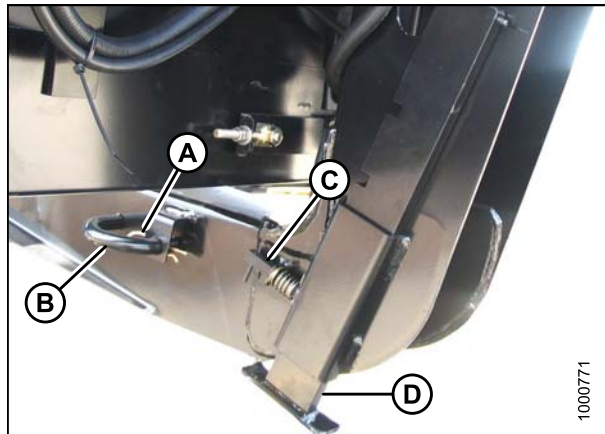


Figure 4.162: Header Stand

OPERATION

7. Remove the clevis pin from location (A) to disengage float springs and insert in storage hole (B). Secure with lynchpin.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

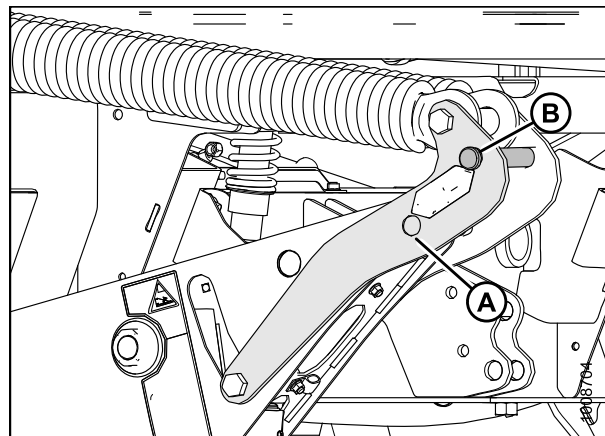


Figure 4.163: Header Float Linkage

8. Turn lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
9. Start engine, choose a level area, and lower header to the ground.
10. Stop the engine and remove the key.

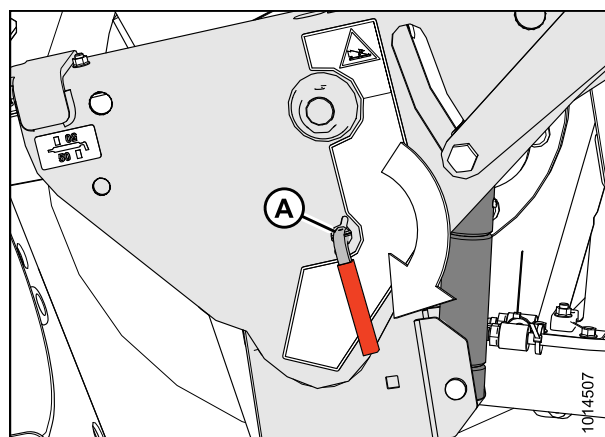


Figure 4.164: Safety Prop

11. Disconnect header drive hydraulics (A) and electrical harness (B) from header and store in support on windrower left cab-forward side. Refer to the draper header operator's manual for further information.

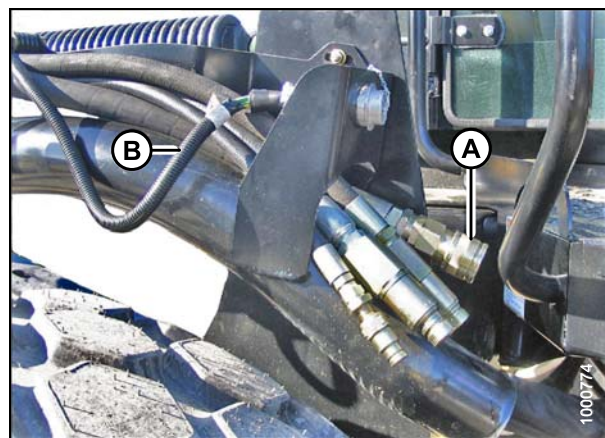


Figure 4.165: Header Drive Hydraulics

OPERATION

12. Disconnect reel hydraulics (A) from header and store on bracket at windrower left cab-forward side. Refer to the draper header operator's manual for further information.

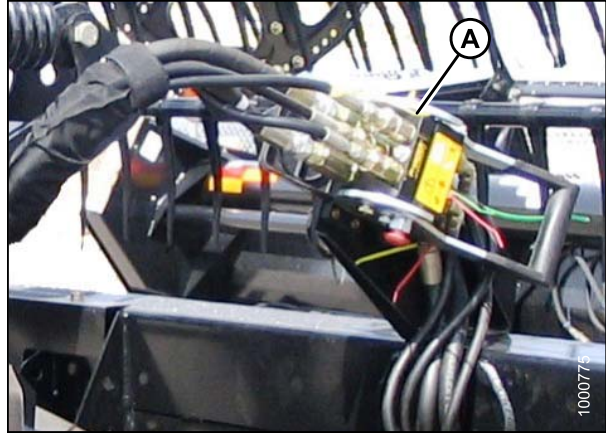


Figure 4.166: Reel Hydraulics

13. Loosen nut (A) and rotate barrel (B) to relieve load on link.
14. Remove cotter pin on clevis pin (D) and remove the pin (C) to disconnect from windrower. Reinstall clevis pin (C) in header.
15. Tighten nut (A) against barrel. A slight tap with a hammer is sufficient.

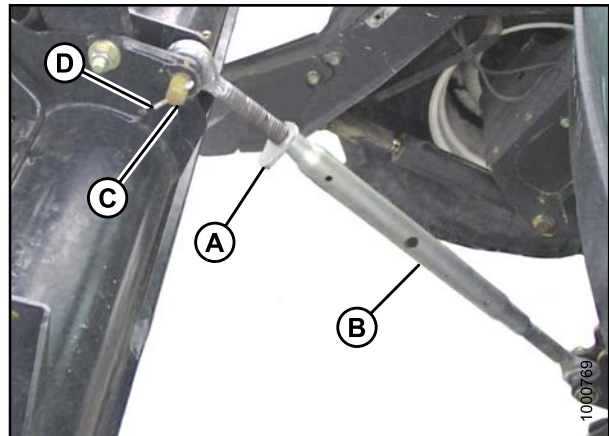


Figure 4.167: Mechanical Center-Link

16. Reinstall pin (A) into header leg and secure with a hairpin (B).

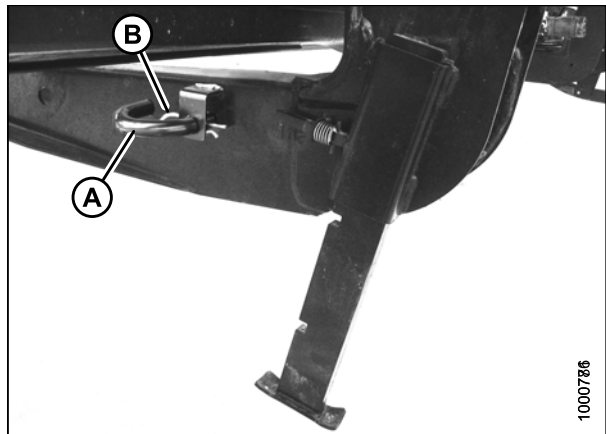


Figure 4.168: Header Leg

4.5.4 Attaching an A-Series Header

A30-D, A30-S, and A40-D headers can be attached to an M155 or M205 Self-Propelled Windrower. For attachment procedure, refer to the section for your specific windrower model.

Refer to the following instructions based on the type of center-link installed on your windrower:

- [*Attaching an A-Series Header: Hydraulic Center-Link with Optional Self-Alignment, page 238*](#)
- [*Attaching an A-Series Header: Hydraulic Center-Link without Self-Alignment, page 243*](#)
- [*Attaching an A-Series Header: Mechanical Center-Link, page 249*](#)

OPERATION

Attaching an A-Series Header: Hydraulic Center-Link with Optional Self-Alignment

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (A) from clevis pin (B) and remove clevis pin from the header boots (C) on both sides of the header.

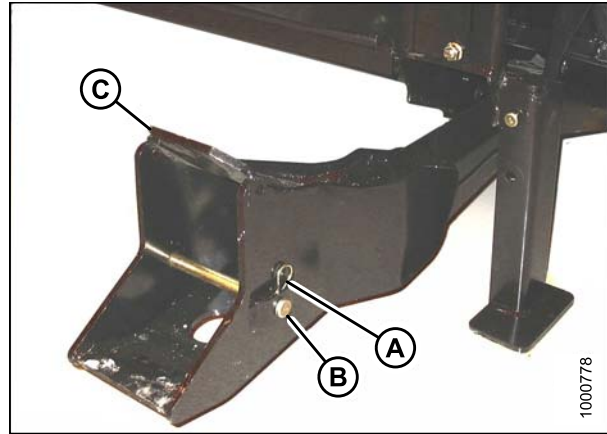


Figure 4.169: Header Boot

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

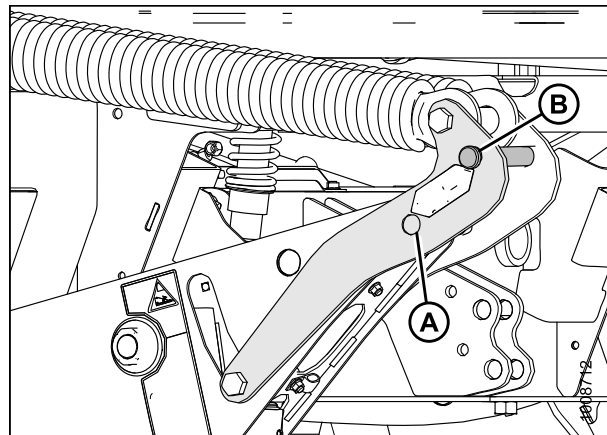


Figure 4.170: Header Float Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Before starting engine, remove protective cover from exhaust stack.

2. Start the engine and activate the HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

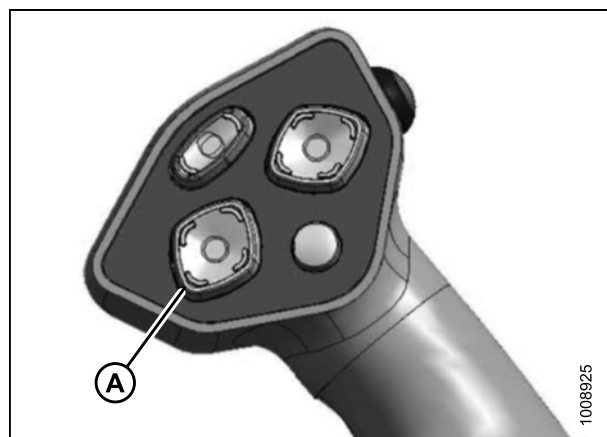


Figure 4.171: Ground Speed Lever

OPERATION

3. Activate the REEL UP switch (A) on the GSL to raise the center-link until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

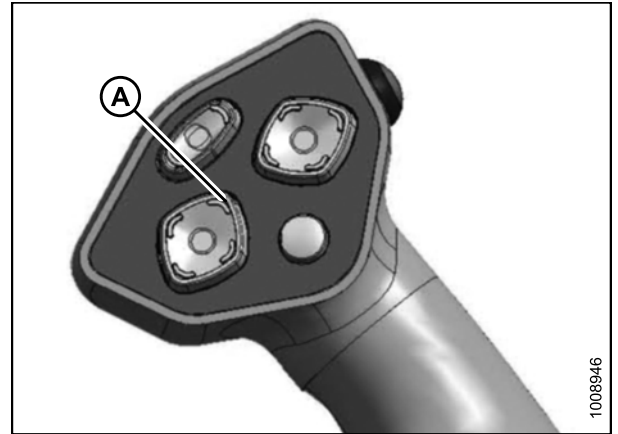


Figure 4.172: Ground Speed Lever

4. Drive the windrower slowly forward until the windrower feet (A) enter the header boots (B). Continue driving slowly forward until the feet engage the boots and the header nudges forward.

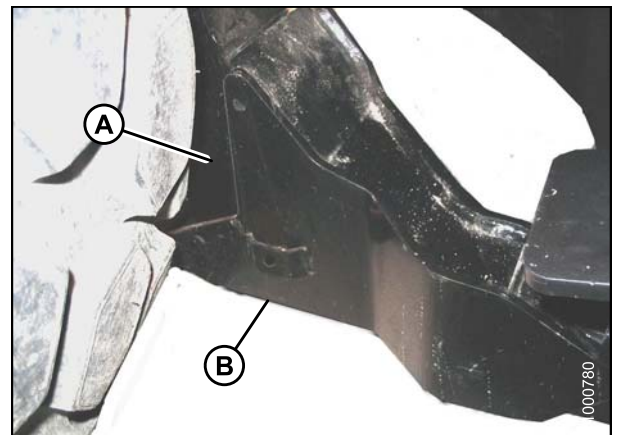


Figure 4.173: Header Boot

5. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - Reel up (A) to raise the center-link
 - Reel down (B) to lower the center-link
 - Header tilt up (C) to retract the center-link
 - Header tilt down (D) to extend the center-link

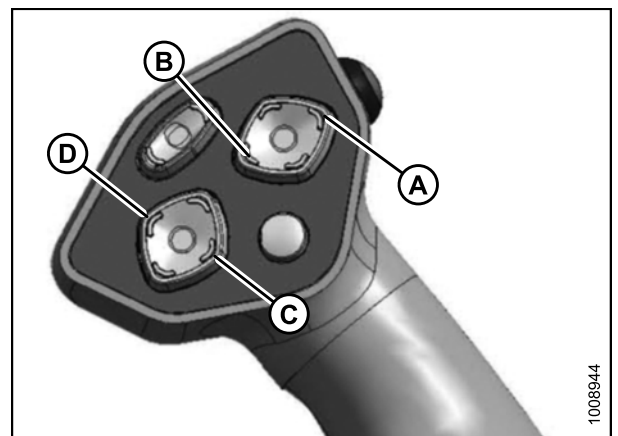


Figure 4.174: Ground Speed Lever

OPERATION

- Adjust position of the center-link cylinder (A) with the REEL UP and REEL DOWN switches on the GSL until the hook is positioned above the header attachment pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

- Lower center-link (A) onto the header with REEL DOWN switch until it locks into position (hook release [B] is down).
- Check that center-link is locked onto header by pressing the REEL UP switch on the GSL.

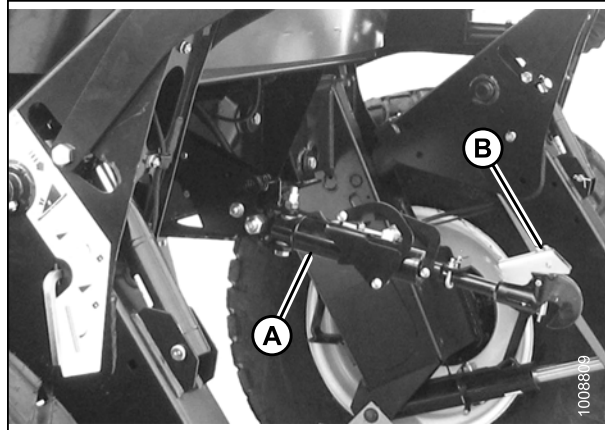


Figure 4.175: Hydraulic Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

- Press the HEADER UP switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:

- Press and hold the HEADER UP switch until both cylinders stop moving.
- Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.



Figure 4.176: Ground Speed Lever

OPERATION

10. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

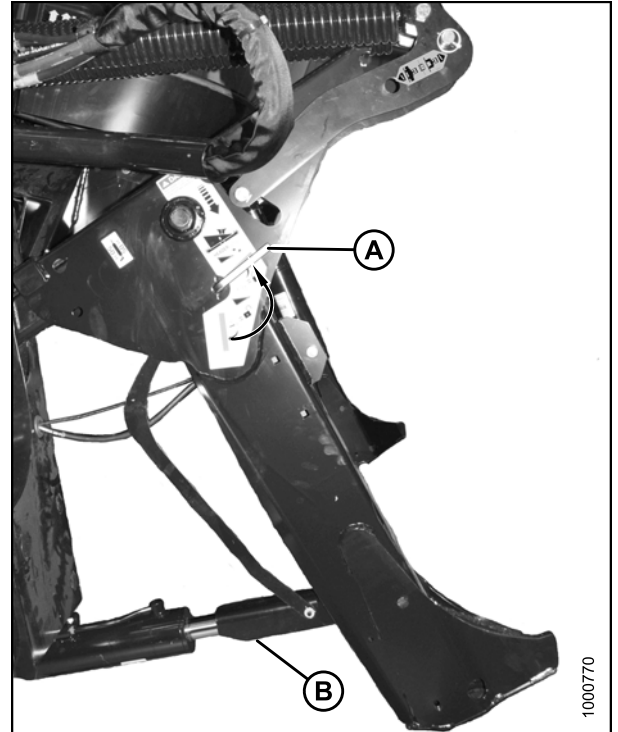


Figure 4.177: Safety Prop

11. Install clevis pin (A) through boot and foot and secure with hairpin. Repeat for opposite boot.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

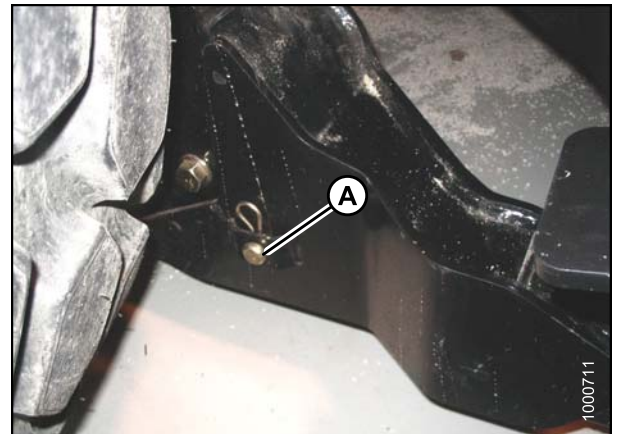


Figure 4.178: Header Boot

OPERATION

12. Remove lynch pin from clevis pin (A) in stand (B).
13. Hold stand (B) and remove pin (A).
14. Move stand (B) to storage position by inverting and relocating onto bracket as shown. Reinsert clevis pin (A) and secure with lynch pin.

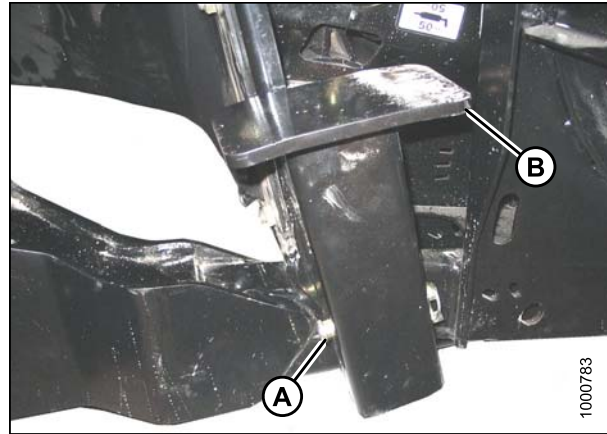


Figure 4.179: Header Stand

15. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

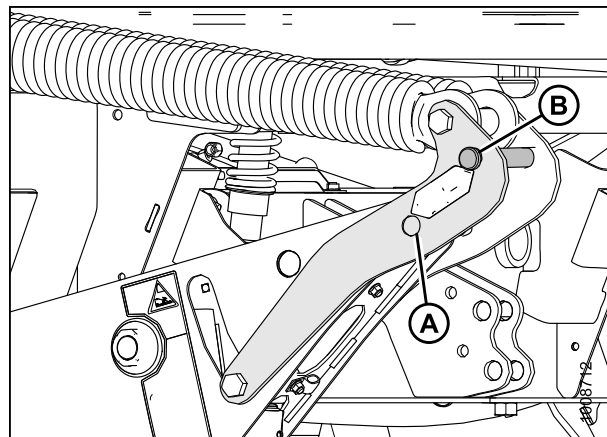


Figure 4.180: Header Float Linkage

16. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
17. Repeat for opposite safety prop.

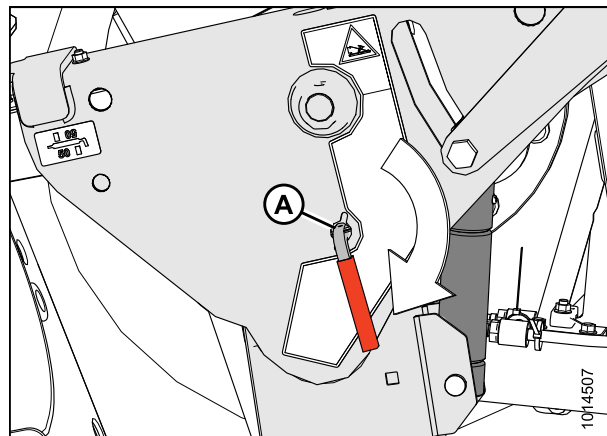


Figure 4.181: Safety Prop

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

18. Start the engine and activate the HEADER DOWN switch (A) on the GSL to fully lower the header.
19. Stop engine and remove key from ignition.

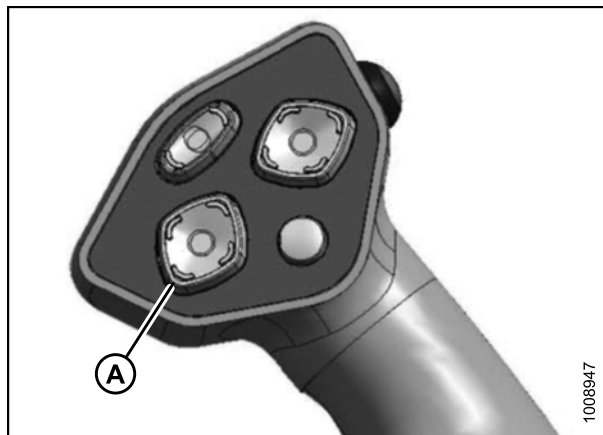


Figure 4.182: Ground Speed Lever

20. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the auger header operator's manual.

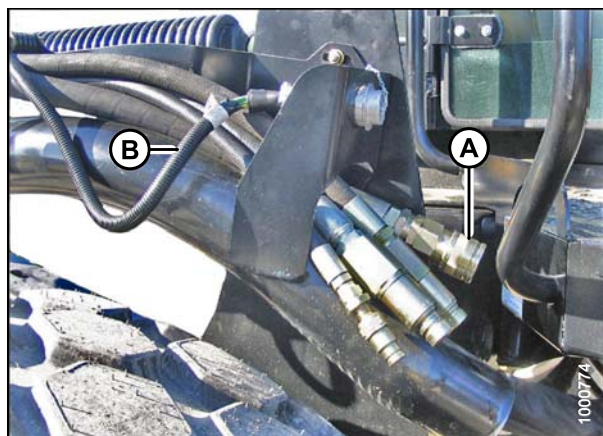


Figure 4.183: Header Drive Hoses and Harness

Attaching an A-Series Header: Hydraulic Center-Link without Self-Alignment

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (A) from clevis pin (B) and remove clevis pin from the header boots (C) on both sides of the header.

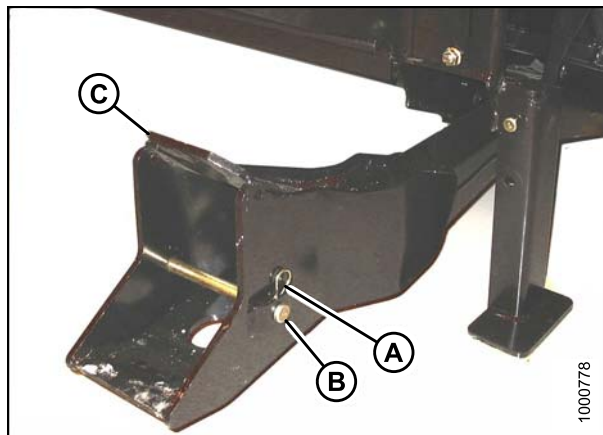


Figure 4.184: Header Boot

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

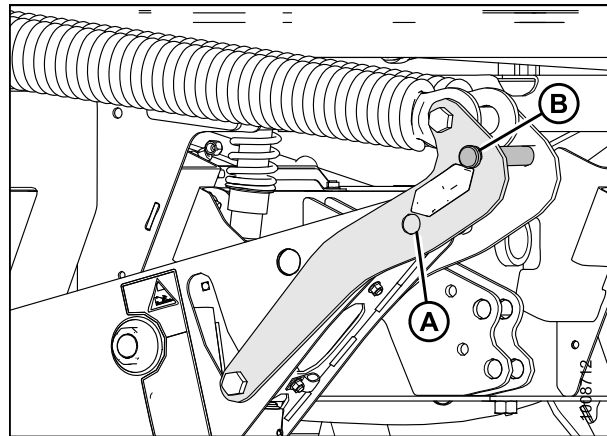


Figure 4.185: Header Float Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Before starting engine, remove protective cover from exhaust stack.

2. Start the engine and activate the HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

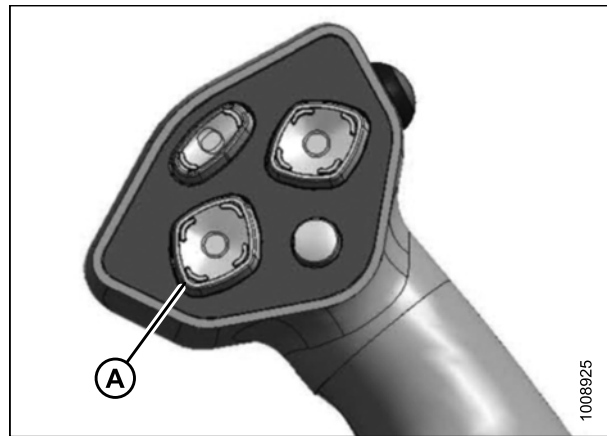


Figure 4.186: Ground Speed Lever

3. Relocate pin (A) in frame linkage as required to raise the center-link (B) until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

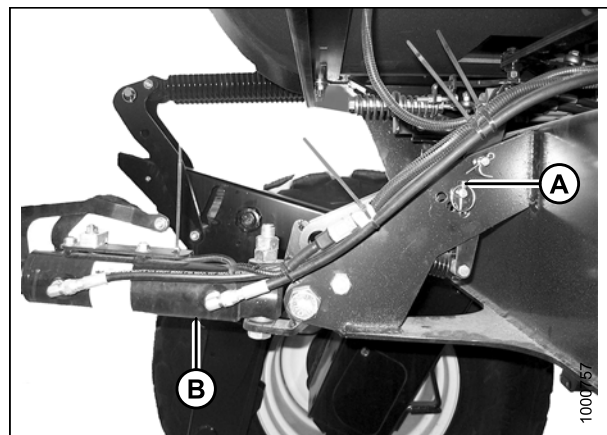


Figure 4.187: Hydraulic Center-Link without Self-Alignment Kit

OPERATION

4. Drive the windrower slowly forward until the windrower feet (A) enter the header boots (B). Continue driving slowly forward until the feet engage the boots and the header nudges forward.

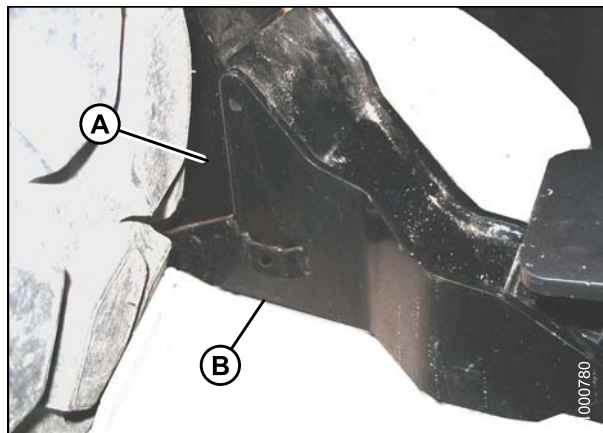


Figure 4.188: Header Boot

5. Use the following Ground Speed Lever functions to position the center-link hook above the header attachment pin:
 - Header tilt up (A) to retract center-link
 - Header tilt down (B) to extend center-link
6. Stop engine and remove key from ignition.

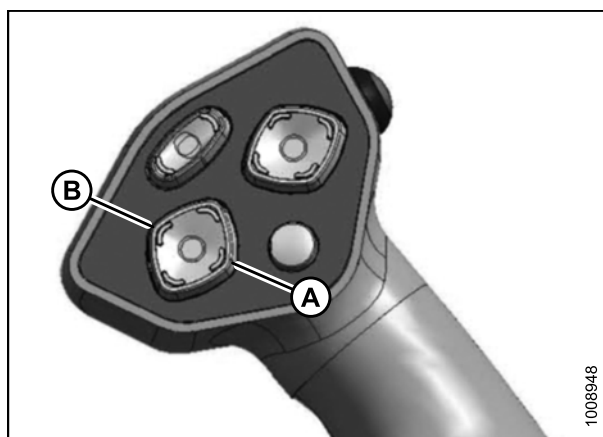


Figure 4.189: Ground Speed Lever

7. Push down on rod end of link cylinder (B) until hook engages and locks onto header pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

8. Check that center-link (A) is locked onto header by pulling upward on rod end (B) of cylinder.

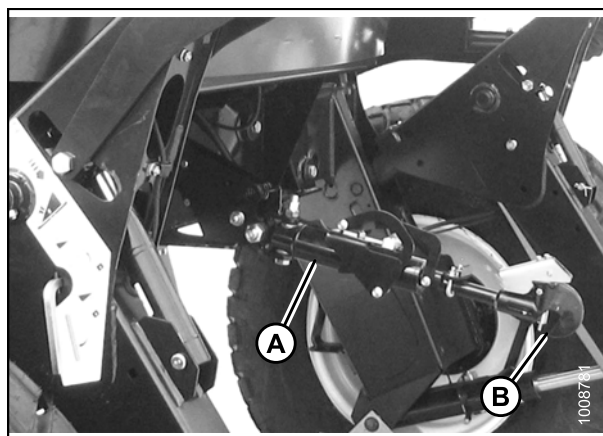


Figure 4.190: Hydraulic Center-Link

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

9. Start the engine.
10. Press the HEADER UP switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.

11. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

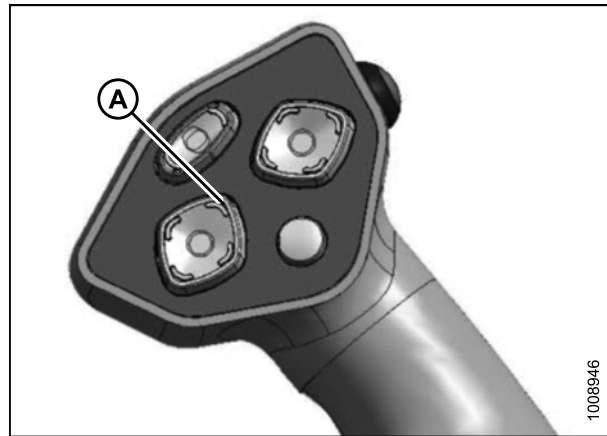


Figure 4.191: Ground Speed Lever

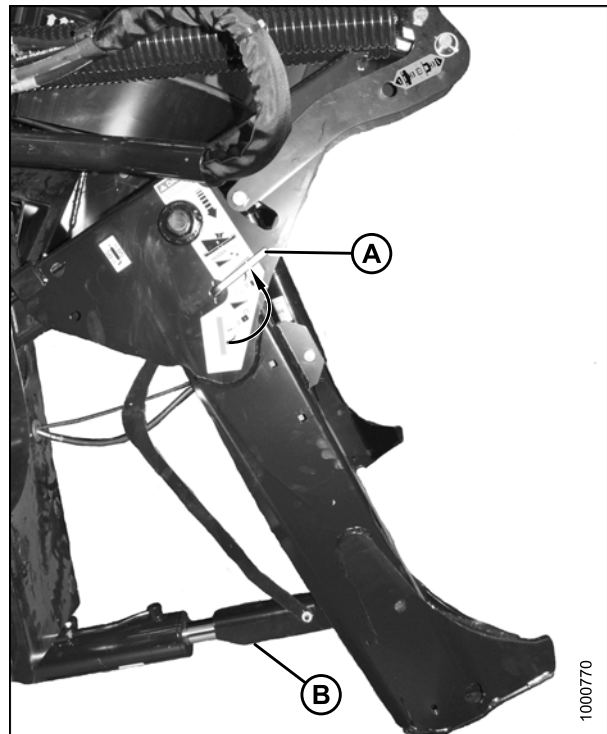


Figure 4.192: Safety Prop

OPERATION

12. Install clevis pin (A) through boot and foot and secure with hairpin. Repeat for opposite boot.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

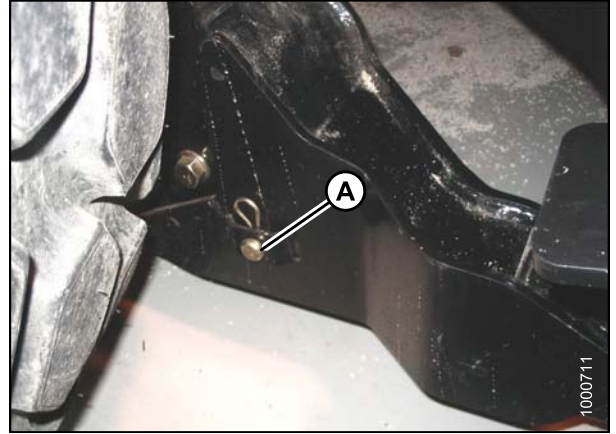


Figure 4.193: Header Boot

13. Remove lynch pin from clevis pin (A) in stand (B).
14. Hold stand (B) and remove pin (A).
15. Move stand (B) to storage position by inverting and relocating onto bracket as shown. Reinsert clevis pin (A) and secure with lynch pin.

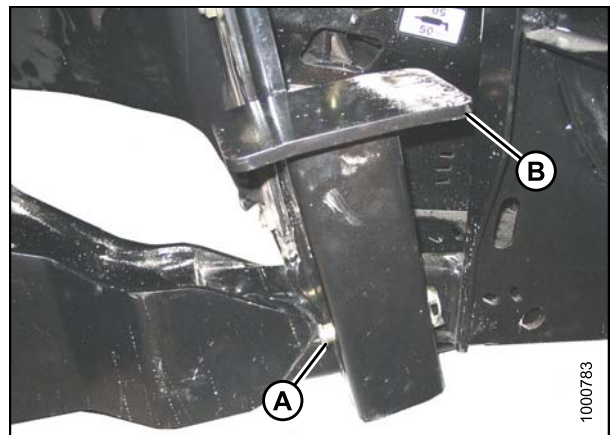


Figure 4.194: Header Stand

16. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

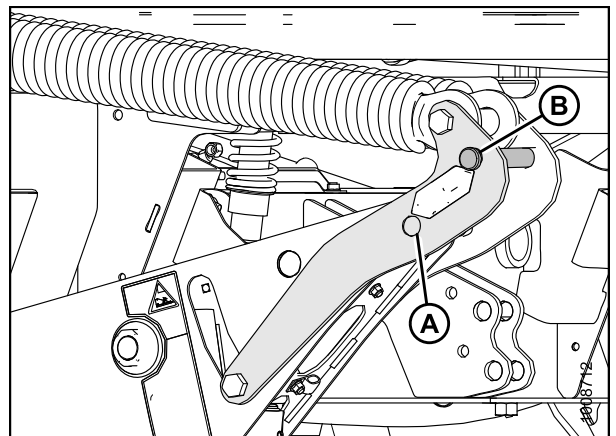


Figure 4.195: Header Float Linkage

OPERATION

17. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
18. Repeat for opposite safety prop.

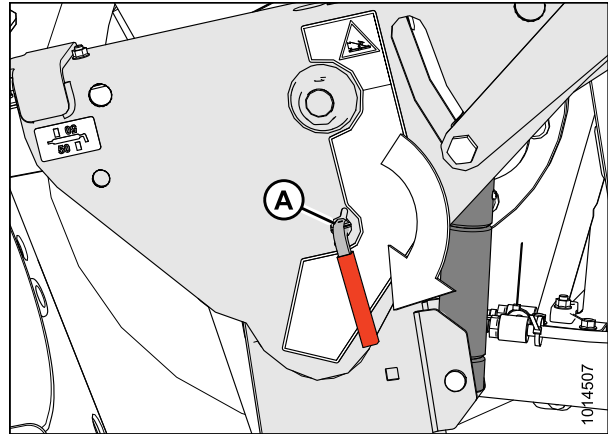


Figure 4.196: Safety Prop

CAUTION

Check to be sure all bystanders have cleared the area.

19. Start the engine and activate the HEADER DOWN switch (A) on the GSL to fully lower the header.
20. Stop engine and remove key from ignition.

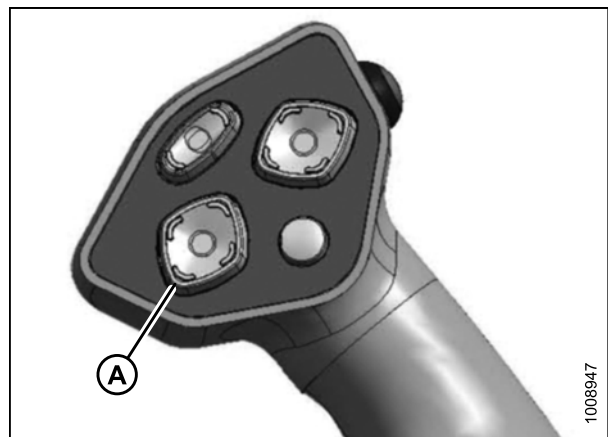


Figure 4.197: Ground Speed Lever

21. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the auger header operator's manual.

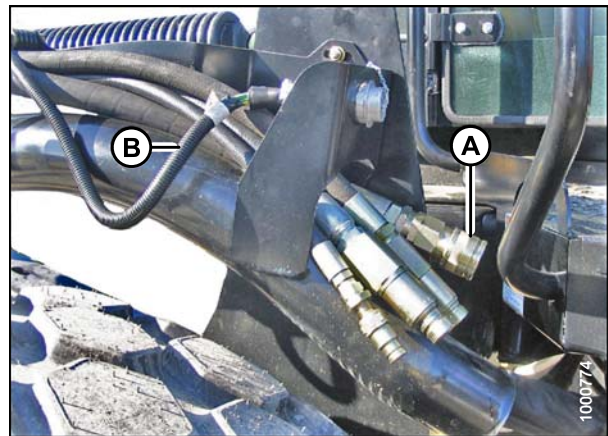


Figure 4.198: Header Drive Hoses and Harness

OPERATION

Attaching an A-Series Header: Mechanical Center-Link

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (A) from clevis pin (B) and remove clevis pin from the header boots (C) on both sides of the header.

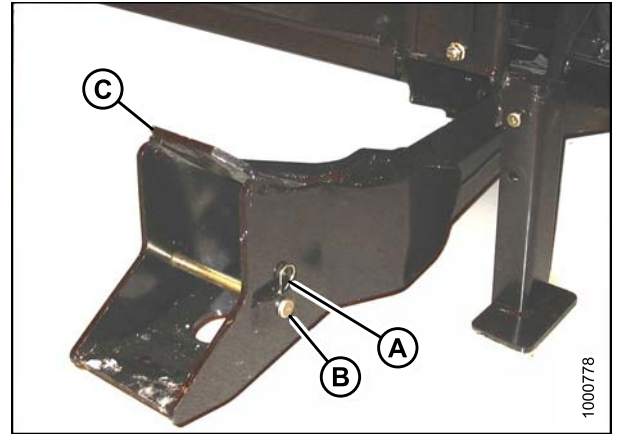


Figure 4.199: Header Boot

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

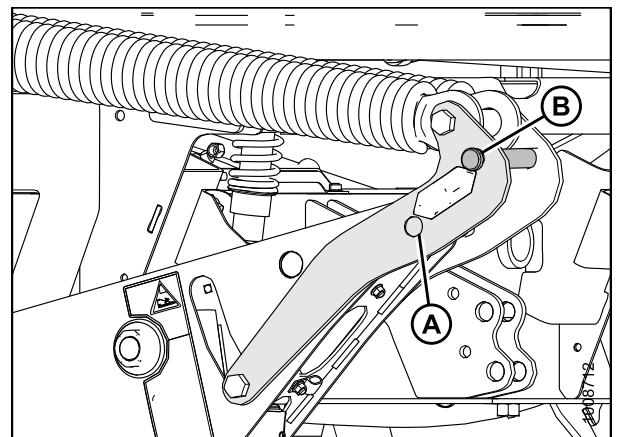


Figure 4.200: Header Float Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Before starting engine, remove protective cover from exhaust stack.

2. Start the engine and activate the HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

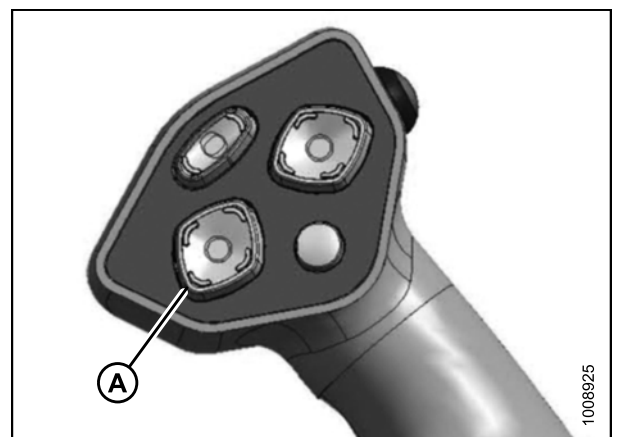


Figure 4.201: Ground Speed Lever

OPERATION

3. Drive the windrower slowly forward until the windrower feet (A) enter the header boots (B). Continue driving slowly forward until the feet engage the boots and the header nudges forward.

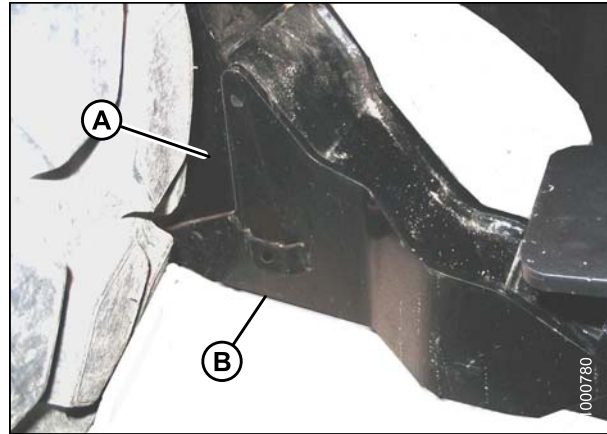


Figure 4.202: Header Boot

4. Stop engine and remove key from ignition.
5. Loosen nut (A) and rotate barrel (B) to adjust length until the link is aligned with the header bracket.
6. Install clevis pin (C) and secure with cotter pin (D).
7. Adjust length of link to achieve proper header angle by rotating barrel (B). Tighten nut (A) against barrel (a slight tap with a hammer is sufficient).

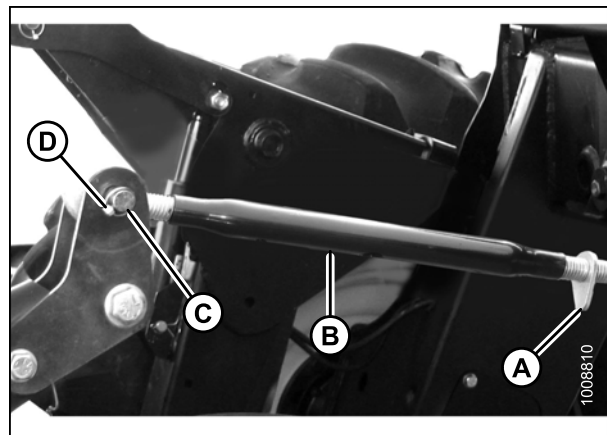


Figure 4.203: Mechanical Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

8. Start the engine.
9. Press the HEADER UP switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.



Figure 4.204: Ground Speed Lever

OPERATION

10. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

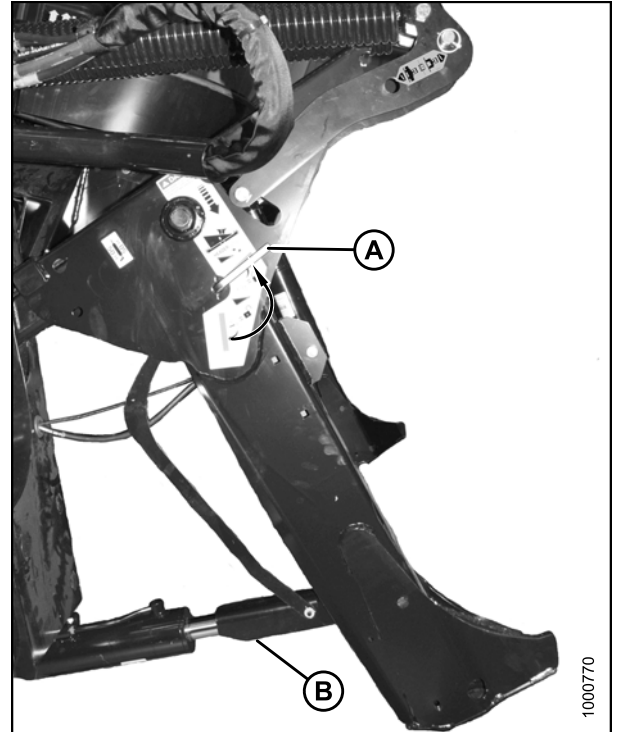


Figure 4.205: Safety Prop

11. Install clevis pin (A) through boot and foot and secure with hairpin. Repeat for opposite boot.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

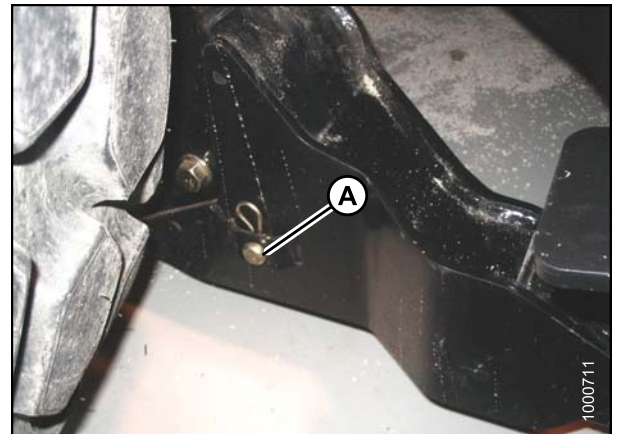


Figure 4.206: Header Boot

OPERATION

12. Remove lynch pin from clevis pin (A) in stand (B).
13. Hold stand (B) and remove pin (A).
14. Move stand (B) to storage position by inverting and relocating onto bracket as shown. Reinsert clevis pin (A) and secure with lynch pin.

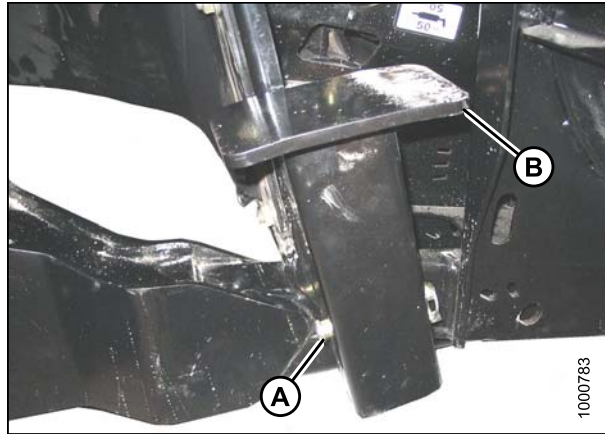


Figure 4.207: Header Stand

15. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

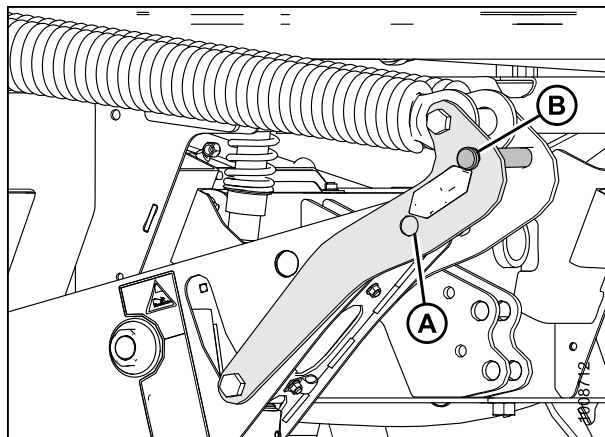


Figure 4.208: Header Float Linkage

16. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
17. Repeat for opposite safety prop.

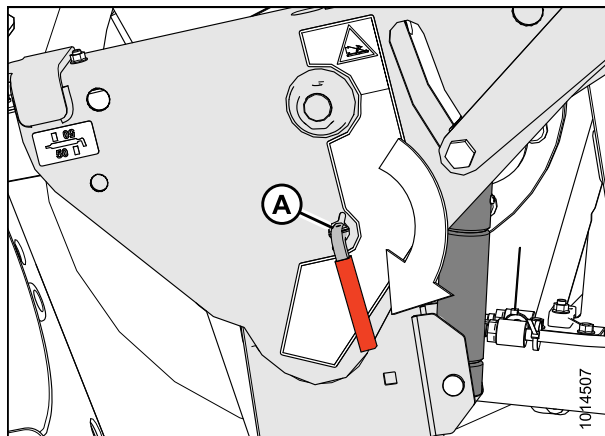


Figure 4.209: Safety Prop

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

18. Start the engine and activate the HEADER DOWN switch (A) on the GSL to fully lower the header.
19. Stop engine and remove key from ignition.

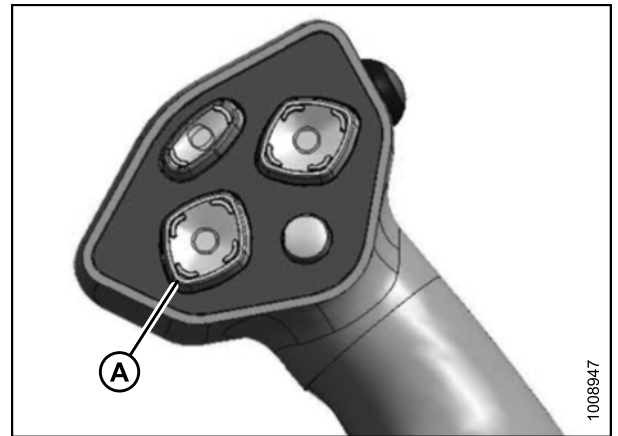


Figure 4.210: Ground Speed Lever

20. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the draper header operator's manual.

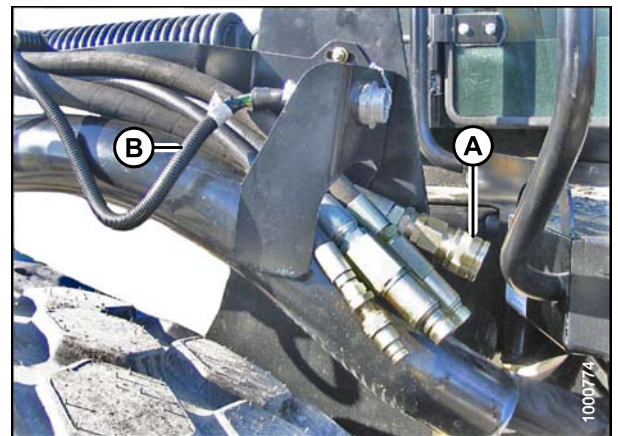


Figure 4.211: Header Drive Hoses and Harness

4.5.5 Detaching an A-Series Header

Refer to the procedure that is appropriate for the center-link installed on the windrower:

- [Detaching an A-Series Header: Hydraulic Center-Link, page 254](#)
- [Detaching an A-Series Header: Mechanical Center-Link, page 257](#)

OPERATION

Detaching an A-Series Header: Hydraulic Center-Link

⚠ WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to the machine.

1. Start engine and press header up button (A) on ground speed lever (GSL) to raise header to maximum height.
2. If one end of the header does **NOT** raise fully, rephase the cylinders as follows:
 - a. Press and hold the header up (A) switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.
3. Stop engine and remove key.

⚠ DANGER

To avoid bodily injury from fall of raised header, always engage safety props when working on or around raised header, and before going under header for any reason.

4. Pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for opposite cylinder.

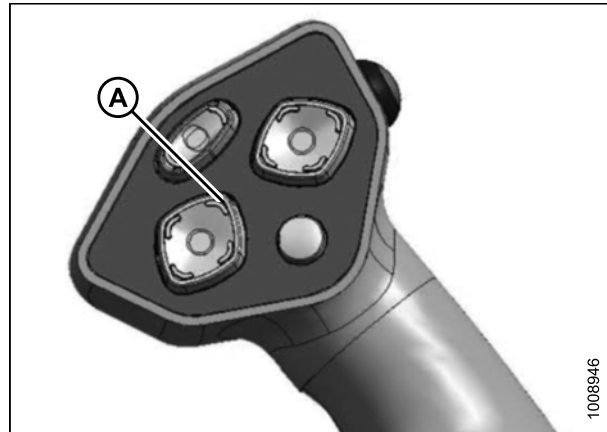


Figure 4.212: Ground Speed Lever

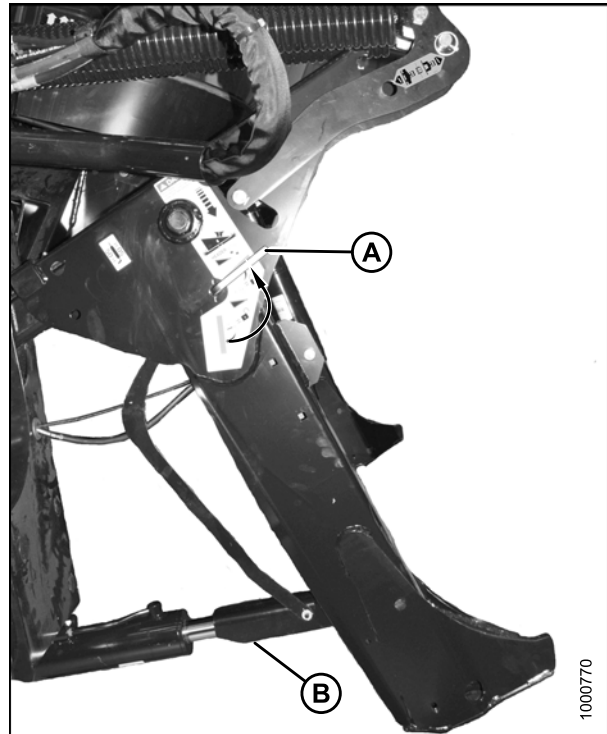


Figure 4.213: Safety Prop

OPERATION

5. Remove hairpin from the clevis pin (A) and remove clevis pin from header boots (B) on both sides.

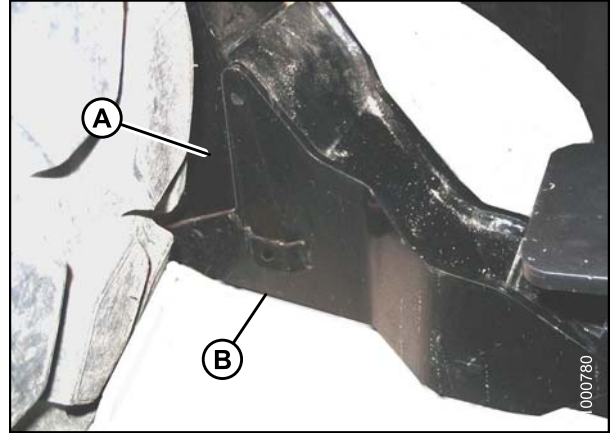


Figure 4.214: Header Boot

6. Lower stand (A) by pulling clevis pin (B), inverting stand, and relocating on bracket. Reinsert pin (B) and secure with hairpin.

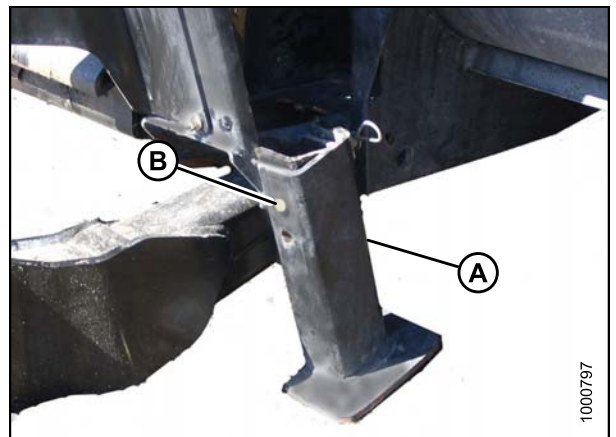


Figure 4.215: Header Stand

7. Remove clevis pin from linkage (A) to disengage float springs, and insert clevis pin into storage hole (B). Secure with lynch pin. Repeat for opposite linkage.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

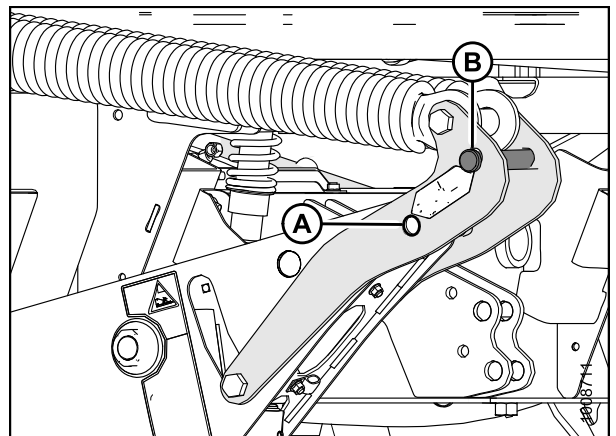


Figure 4.216: Header Float Linkage

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

8. Disengage safety props by turning lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
9. Start engine, choose a level area, and lower header to the ground.

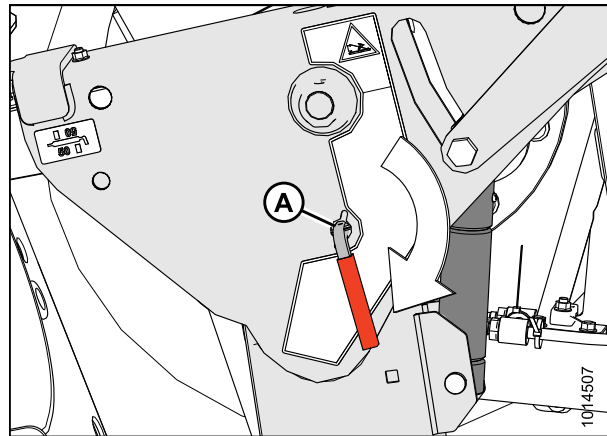


Figure 4.217: Safety Props

10. Activate header tilt up (A) and header tilt down (B) cylinder switches on GSL to release load on center-link cylinder.

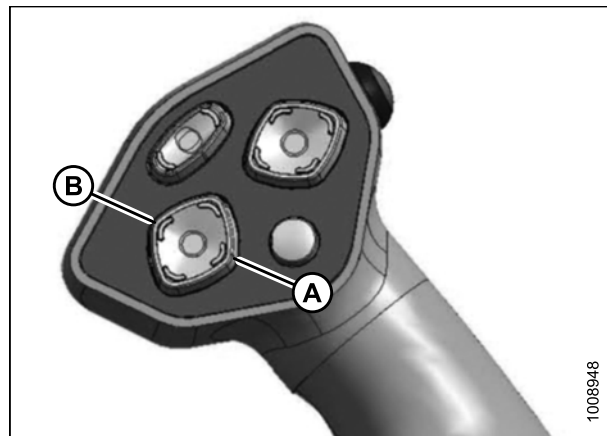


Figure 4.218: Ground Speed Lever

11. Stop engine and remove key from ignition.
12. Lift hook release (C) and lift hook (B) off header pin.

NOTE:

If optional center-link self-alignment kit is installed, lift release (C) and then operate the link lift cylinder with reel up switch on GSL to disengage the center-link from the header.

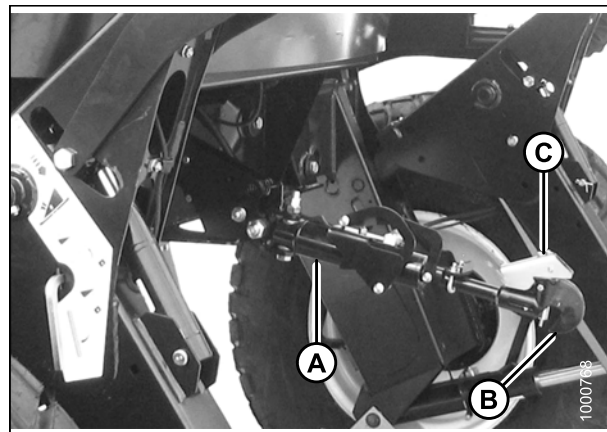


Figure 4.219: Hydraulic Center-Link

OPERATION

13. Disconnect header drive hydraulics (A) and electrical harness (B). Refer to the auger header operator's manual.
14. Back windrower slowly away from header.

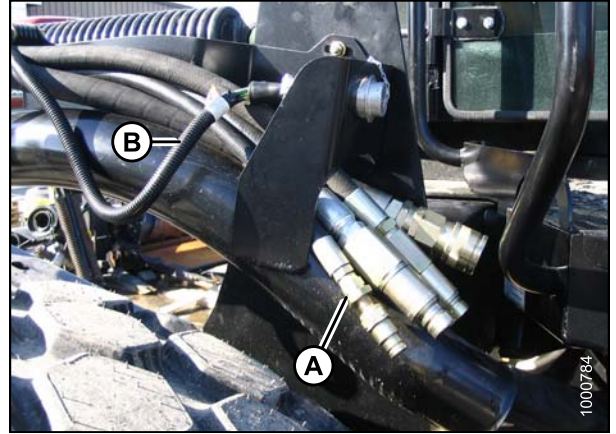


Figure 4.220: Header Drive Hydraulics

15. Reinstall clevis pin (B) into header boot (C) and secure with hairpin (A). Repeat for opposite side.

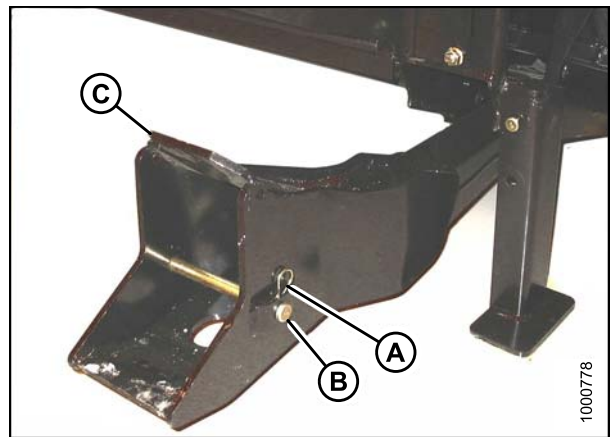


Figure 4.221: Header Boots

Detaching an A-Series Header: Mechanical Center-Link

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine, and remove key before making adjustments to machine.

1. Start engine and press header up button (A) on ground speed lever (GSL) to raise header to maximum height.
2. If one end of the header does **NOT** raise fully follow these steps to rephase the cylinders:
 - a. Press and hold the header up (A) switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are phased.
3. Stop engine and remove key.

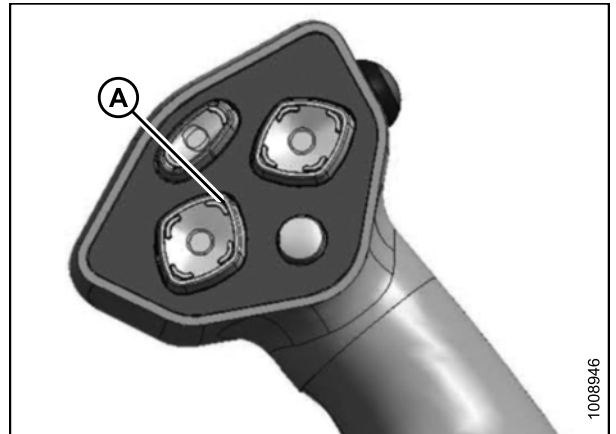


Figure 4.222: Ground Speed Lever

OPERATION

DANGER

To avoid bodily injury from fall of raised header, always engage safety props when working on or around raised header, and before going under header for any reason.

4. Pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for opposite cylinder.

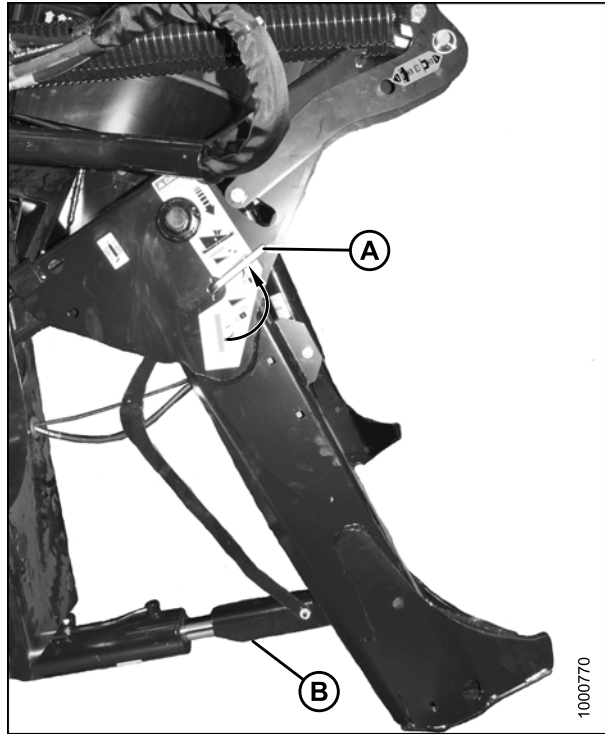


Figure 4.223: Safety Prop

5. Remove hairpin from clevis pin (A) and remove clevis pin from the left and right header boots (B).

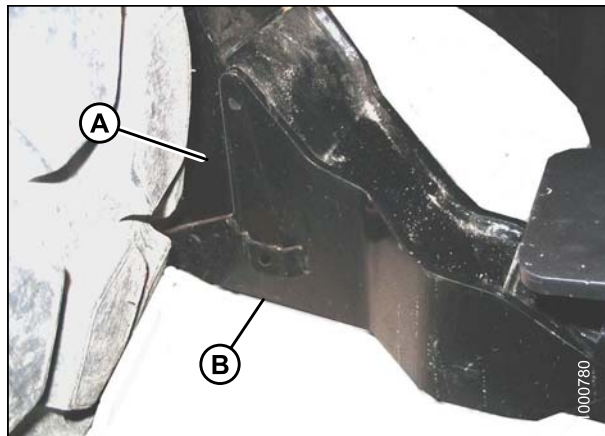


Figure 4.224: Header Boot

OPERATION

6. Lower the header stand (A) by pulling clevis pin (B), inverting stand, and relocating on bracket. Reinsert clevis pin (B) and secure with hairpin.

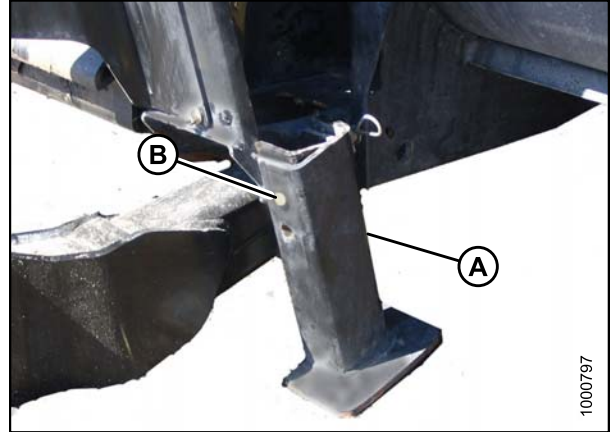


Figure 4.225: Header Stand

7. Remove clevis pin from linkage (A) to disengage float springs and insert in storage hole (B). Secure with lynch pin. Repeat for opposite linkage.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

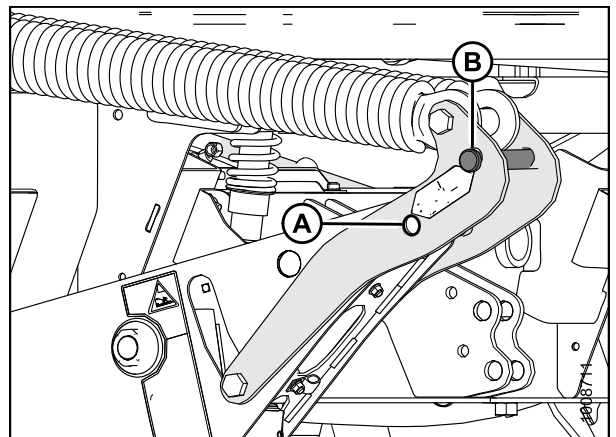


Figure 4.226: Header Float Linkage

8. Turn lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
9. Start engine, choose a level area, and lower header to the ground.
10. Stop the engine and remove the key.

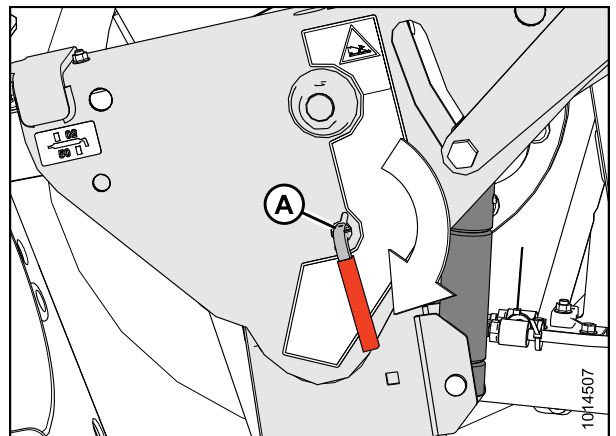


Figure 4.227: Safety Prop

OPERATION

11. Loosen nut (A) and rotate barrel (B) to relieve load on link.
12. Remove cotter pin (D) on clevis pin (C) and remove pin to disconnect from header.
13. Reinstall clevis pin in header.

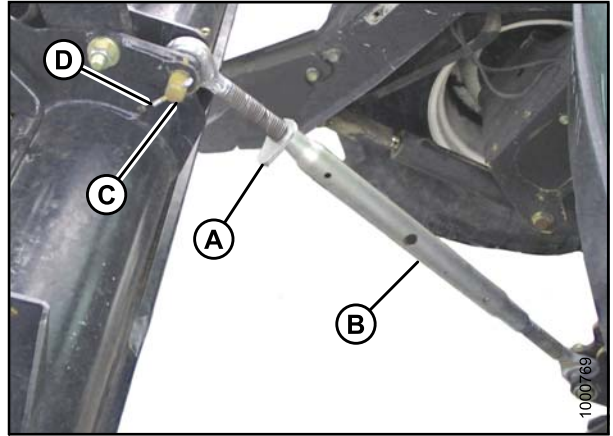


Figure 4.228: Mechanical Center-Link

14. Disconnect header drive hydraulics (A) and electrical harness (B). Refer to the auger header operator's manual.
15. Slowly back windrower away from header.

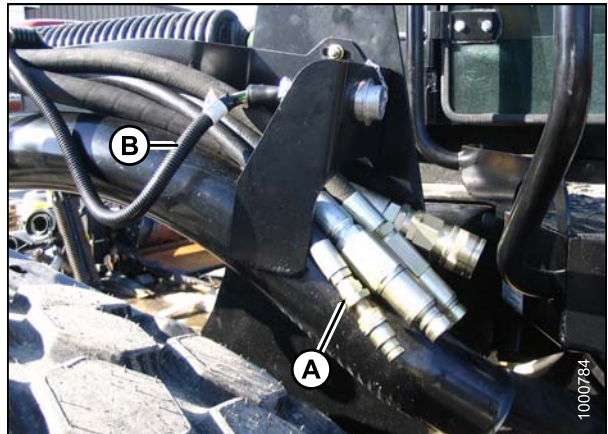


Figure 4.229: Header Drive Hydraulics

16. Reinstall clevis pin (B) and secure with hairpin (A) in header boot (C).
17. Repeat for the opposite side.

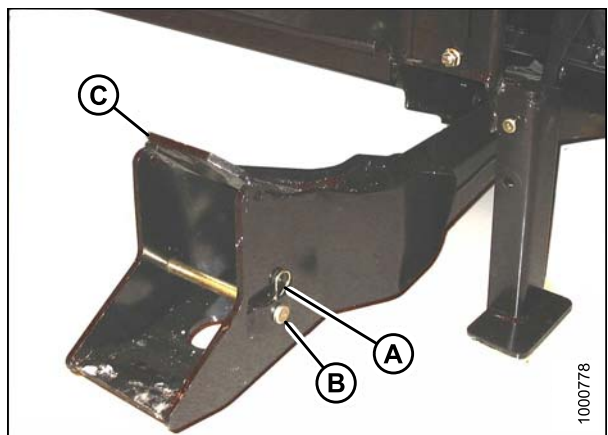


Figure 4.230: Header Boot

4.5.6 Attaching an R-Series Header

Only a 13-foot R-Series Rotary Disc Header (R80 and R85) can be attached to an M155 Self-Propelled Windrower.

NOTE:

The 18.4 x 26 drive tire (MD #B5447) is recommended on the M155 Self-Propelled Windrower when operated with a 13-foot R-Series Rotary Disc Header. These drive tires are reversible and should be mounted inset at 3792 mm (149.3 in.) to provide maximum clearance to uncut crop. Mounting these tires outset and mounting all other drive tire options will result in windrower tires slightly wider than the header width. This may cause some uncut crop to be trampled by tires in turns and corners during windrower operation, and may leave some uncut strips of crop in the windrower's next pass.

Refer to the following instructions based on the type of center-link installed on your windrower:

- [Attaching an R-Series Header: Hydraulic Center-Link with Optional Self-Alignment, page 261](#)
- [Attaching an R-Series Header: Hydraulic Center-Link without Self-Alignment, page 266](#)
- [Attaching an R-Series Header: Mechanical Center-Link, page 271](#)

Attaching an R-Series Header: Hydraulic Center-Link with Optional Self-Alignment

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (B) from clevis pin (A) and remove clevis pin from the header boots (C) on both sides of the header.

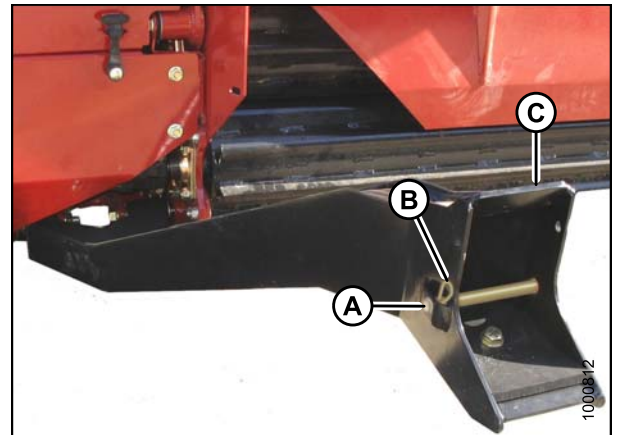


Figure 4.231: Header Boot

OPERATION

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

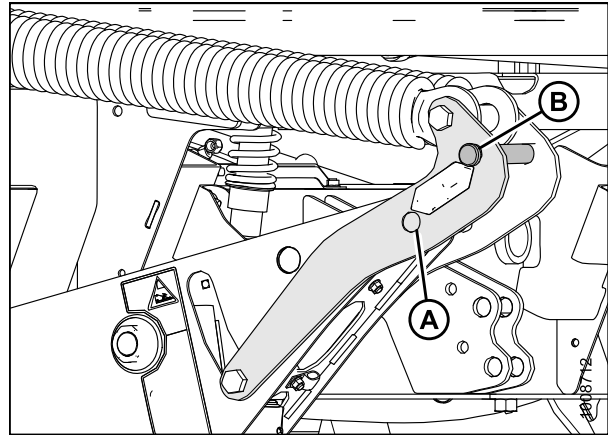


Figure 4.232: Header Float Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Before starting engine, remove protective cover from exhaust stack.

2. Start the engine and activate the HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

3. Activate the REEL UP switch (A) on the GSL to raise the center-link until the hook is above the attachment pin on the header.

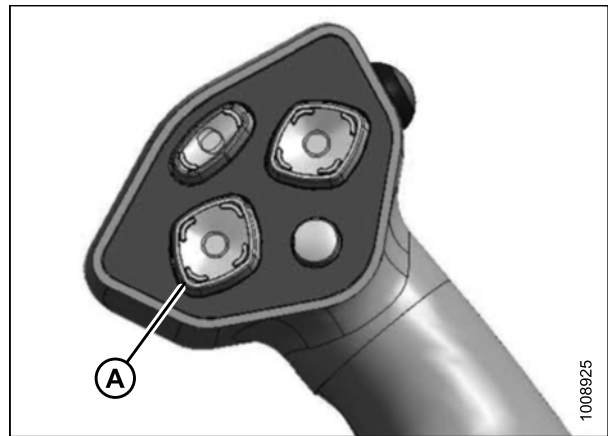


Figure 4.233: Ground Speed Lever

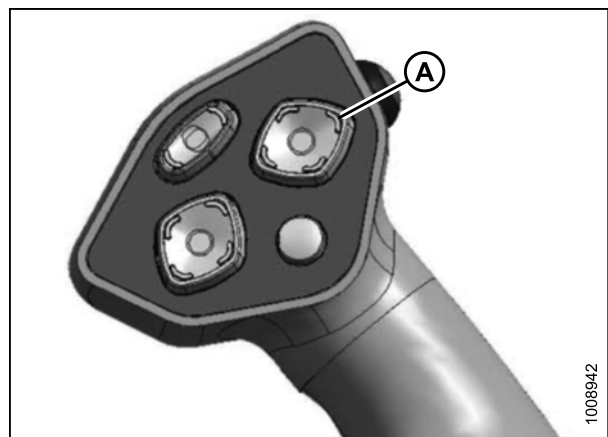


Figure 4.234: Ground Speed Lever

OPERATION

4. Drive the windrower slowly forward until the windrower feet (A) enter the header boots (B). Continue driving slowly forward until the feet engage the boots and the header nudges forward.

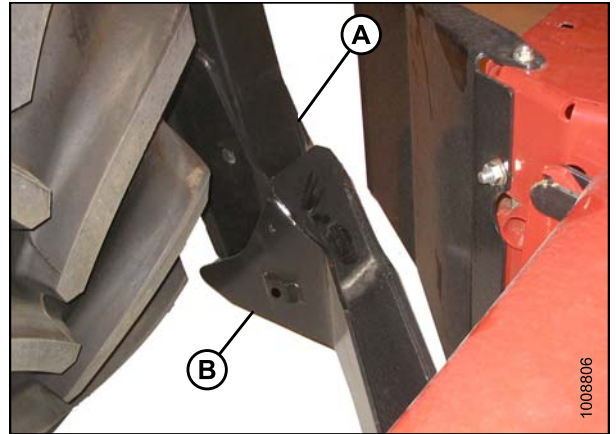


Figure 4.235: Header Boot

5. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - Reel up (A) to raise the center-link
 - Reel down (B) to lower the center-link
 - Header tilt up (C) to retract the center-link
 - Header tilt down (D) to extend the center-link

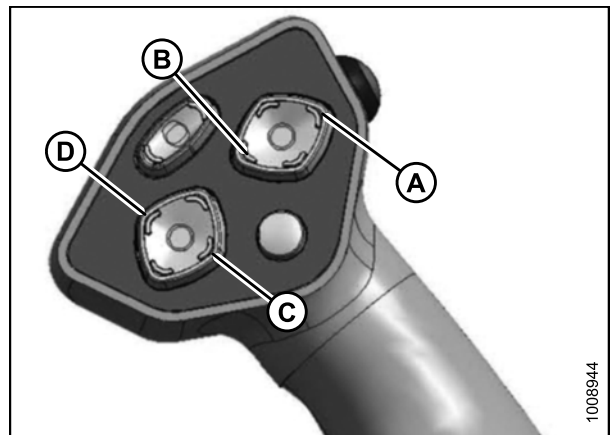


Figure 4.236: Ground Speed Lever

6. Adjust position of the center-link cylinder (A) with the REEL UP and REEL DOWN switches on the GSL until the hook is positioned above the header attachment pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

7. Lower center-link (A) onto the header with REEL DOWN switch until it locks into position (hook release [B] is down).
8. Check that center-link is locked onto header by pressing the REEL UP switch on the GSL.

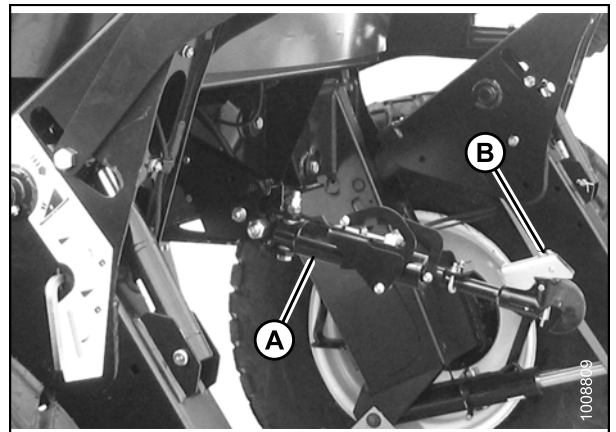


Figure 4.237: Hydraulic Center-Link

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

9. Press the HEADER UP switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.

10. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

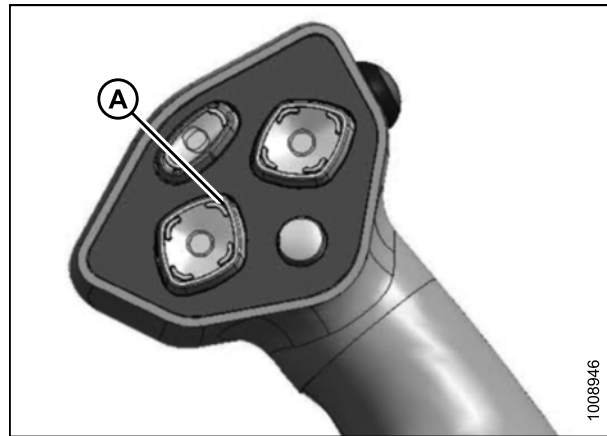


Figure 4.238: Ground Speed Lever

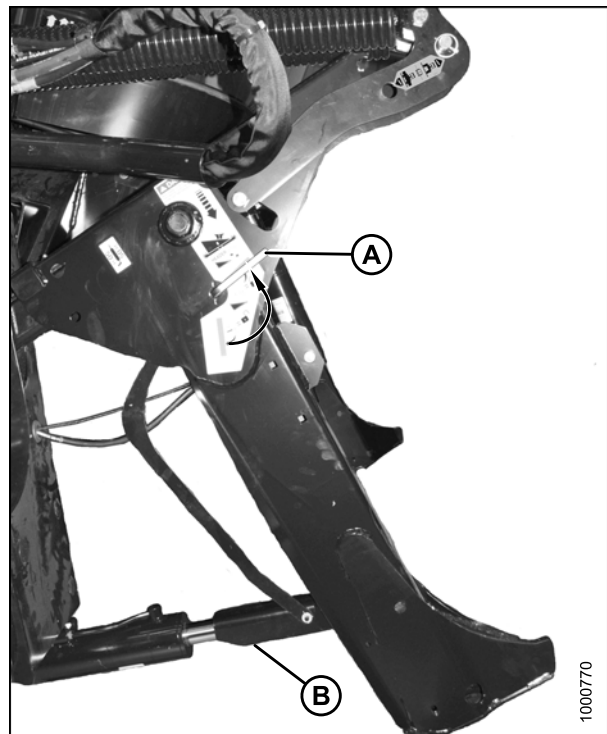


Figure 4.239: Safety Prop

OPERATION

11. Install clevis pin (A) through boot and foot, and secure with hairpin (B). Repeat for opposite side.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

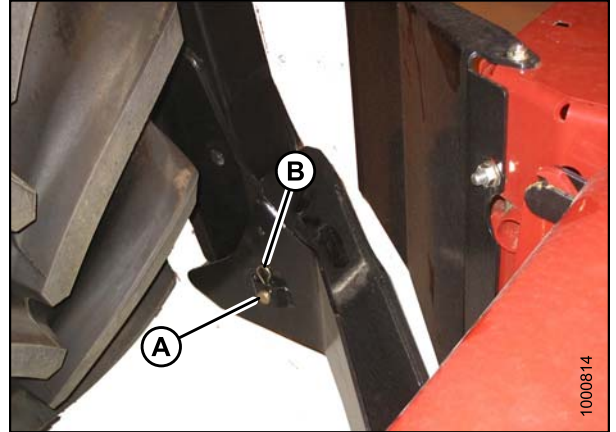


Figure 4.240: Header Boot

12. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

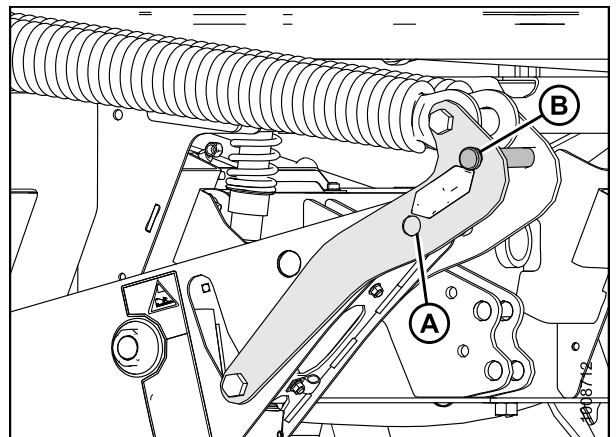


Figure 4.241: Header Float Linkage

13. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
14. Repeat for opposite safety prop.

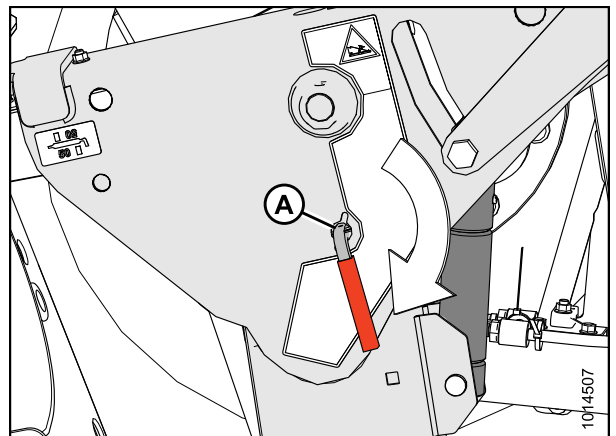


Figure 4.242: Safety Prop

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

15. Start the engine and activate the HEADER DOWN switch (A) on the GSL to fully lower the header.
16. Stop engine and remove key from ignition.

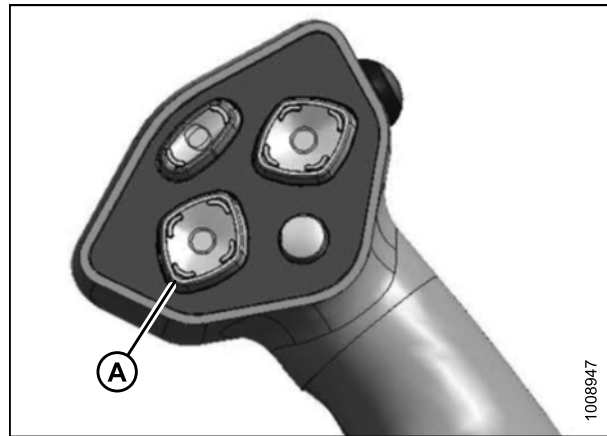


Figure 4.243: Ground Speed Lever

17. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the rotary disc header operator's manual.

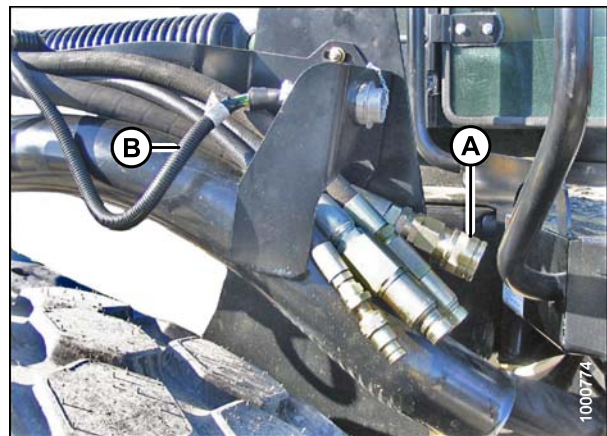


Figure 4.244: Header Drive Hoses and Harness

Attaching an R-Series Header: Hydraulic Center-Link without Self-Alignment

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (B) from clevis pin (A) and remove clevis pin from the header boots (C) on both sides of the header.

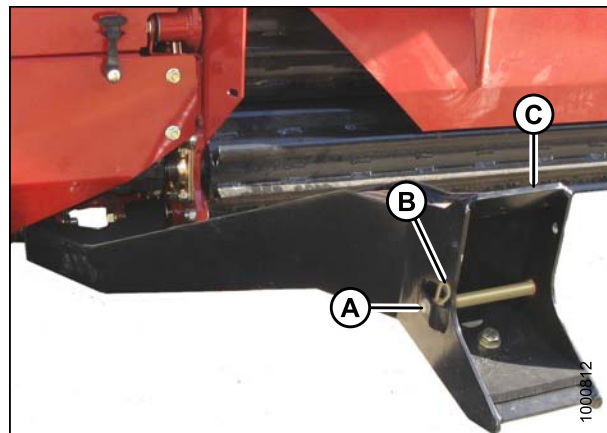


Figure 4.245: Header Boot

⚠ CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

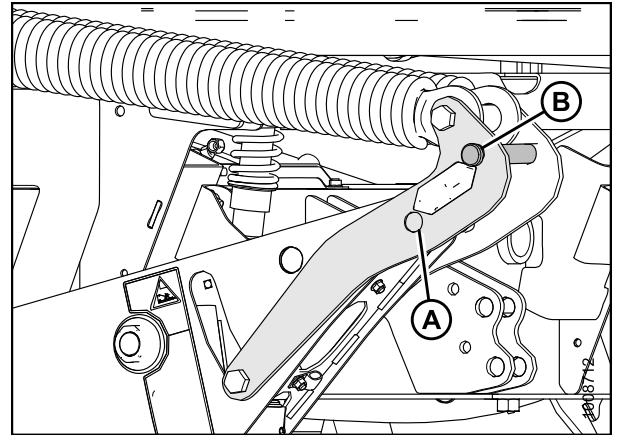


Figure 4.246: Header Float Linkage

⚠ CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Before starting engine, remove protective cover from exhaust stack.

2. Start the engine and activate the HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

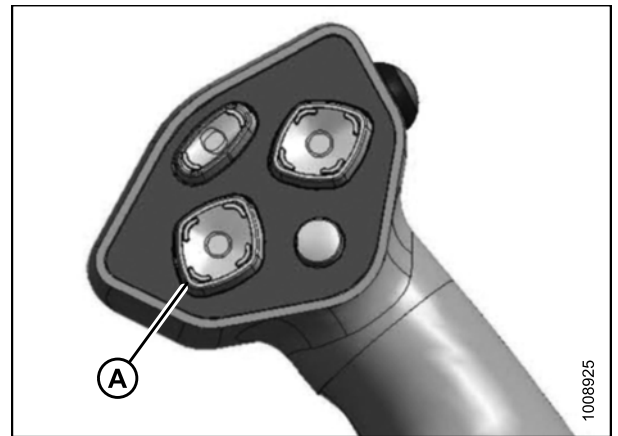


Figure 4.247: Ground Speed Lever

3. Relocate pin (A) in frame linkage as required to raise the center-link (B) until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

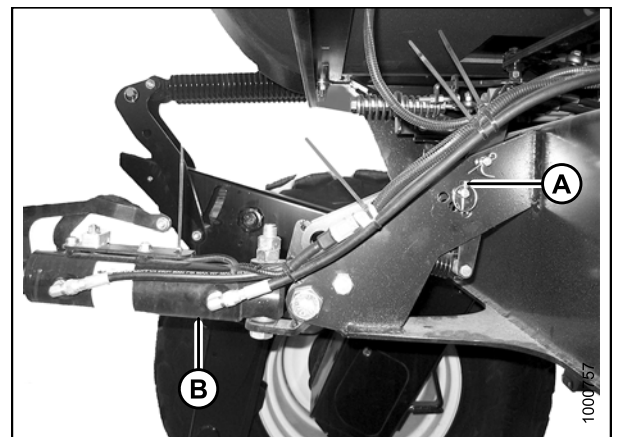


Figure 4.248: Hydraulic Center-Link without Self-Alignment Kit

OPERATION

4. Drive the windrower slowly forward until the windrower feet (A) enter the header boots (B). Continue driving slowly forward until the feet engage the boots and the header nudges forward.

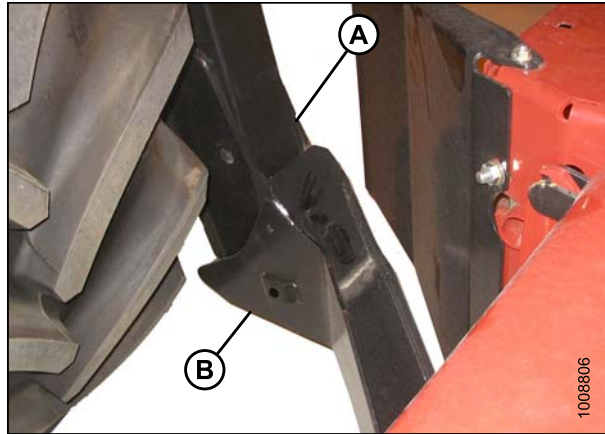


Figure 4.249: Header Boot

5. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - Header tilt up (A) to retract the center-link
 - Header tilt down (B) to extend the center-link
6. Stop engine and remove key from ignition.

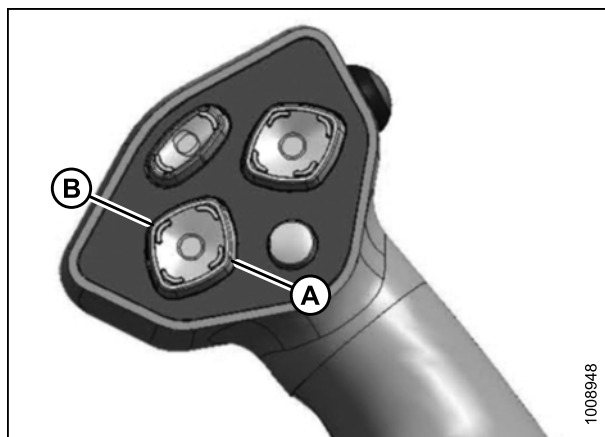


Figure 4.250: Ground Speed Lever

7. Push down on rod end of link cylinder (B) until hook engages and locks onto header pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

8. Check that center-link (A) is locked onto header by pulling upward on rod end (B) of cylinder.

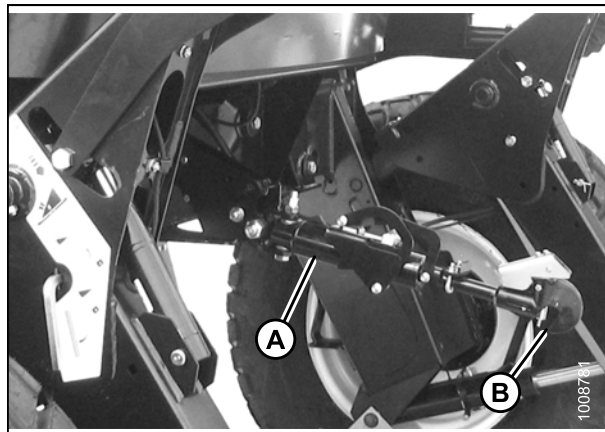


Figure 4.251: Hydraulic Center-Link

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

9. Start the engine.
10. Press the HEADER UP switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.

11. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

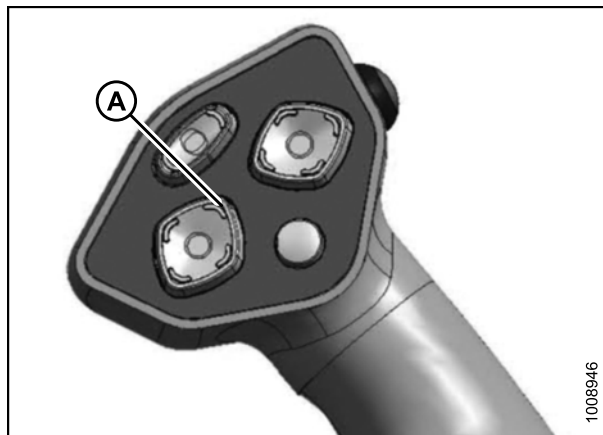


Figure 4.252: Ground Speed Lever

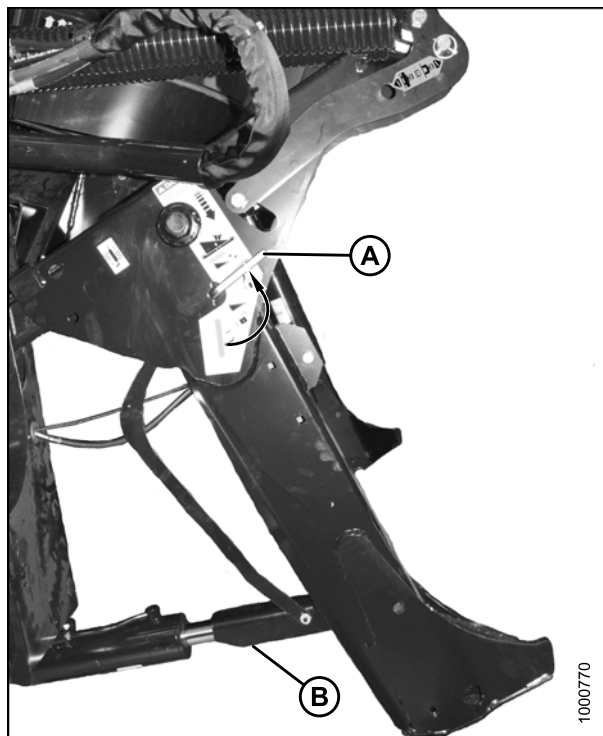


Figure 4.253: Safety Prop

OPERATION

12. Install clevis pin (A) through boot and foot, and secure with hairpin (B). Repeat for opposite side.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

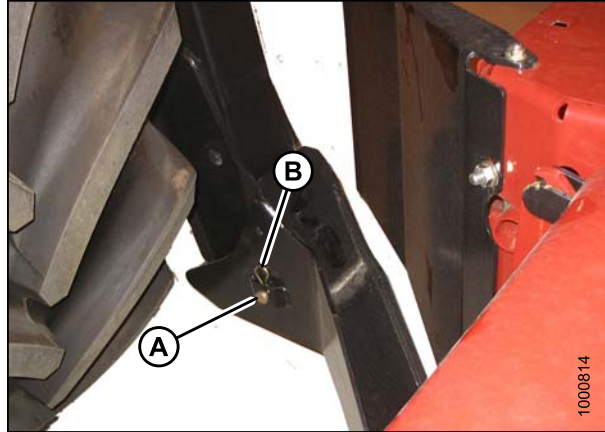


Figure 4.254: Header Boot

13. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

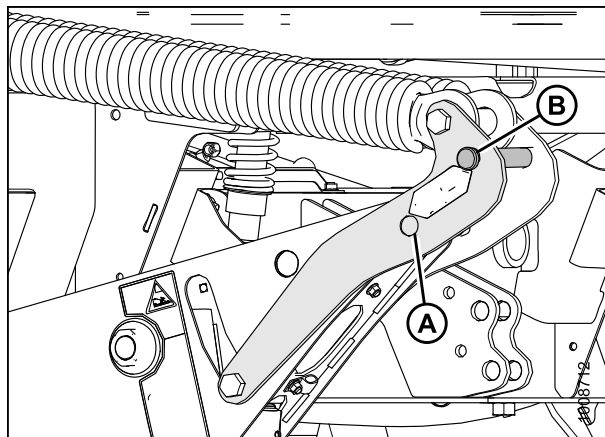


Figure 4.255: Header Float Linkage

14. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
15. Repeat for opposite safety prop.

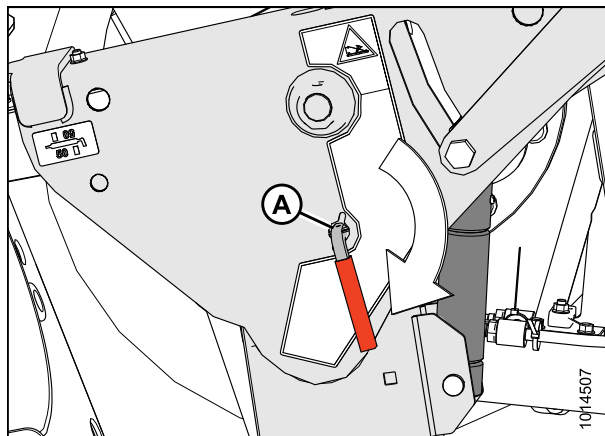


Figure 4.256: Safety Prop

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

16. Start the engine and activate the HEADER DOWN switch (A) on the GSL to fully lower the header.
17. Stop engine and remove key from ignition.

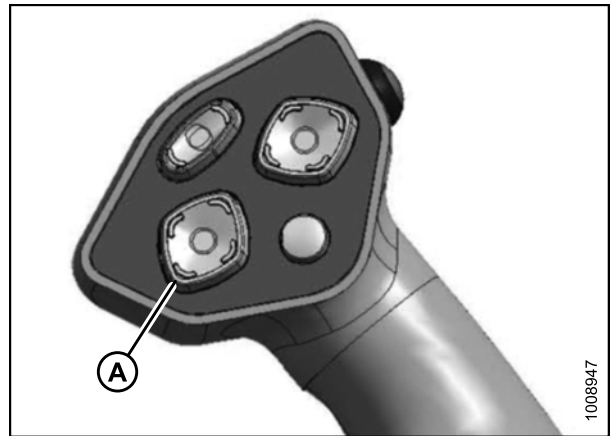


Figure 4.257: Ground Speed Lever

18. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the rotary disc header operator's manual.

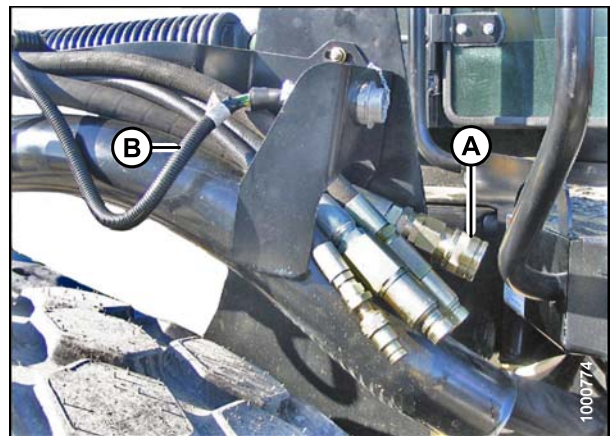


Figure 4.258: Header Drive Hoses and Harness

Attaching an R-Series Header: Mechanical Center-Link

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (B) from clevis pin (A) and remove clevis pin from the header boots (C) on both sides of the header.

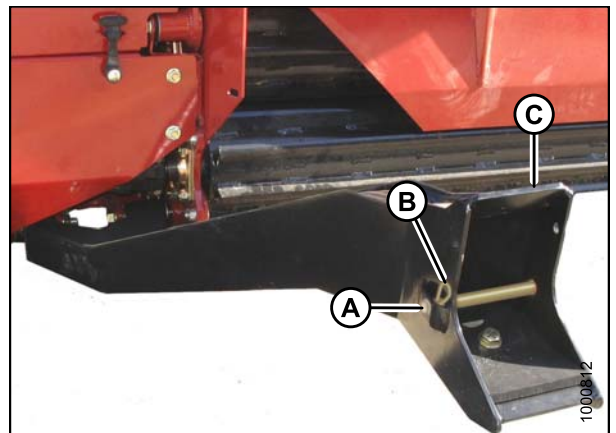


Figure 4.259: Header Boot

OPERATION

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

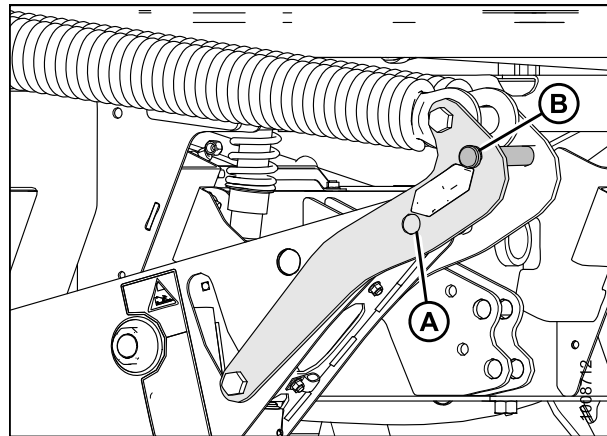


Figure 4.260: Header Float Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Before starting engine, remove protective cover from exhaust stack.

2. Start the engine and activate the HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.
3. Drive the windrower slowly forward until the windrower feet (A) enter the header boots (B). Continue driving slowly forward until the feet engage the boots and the header nudges forward.

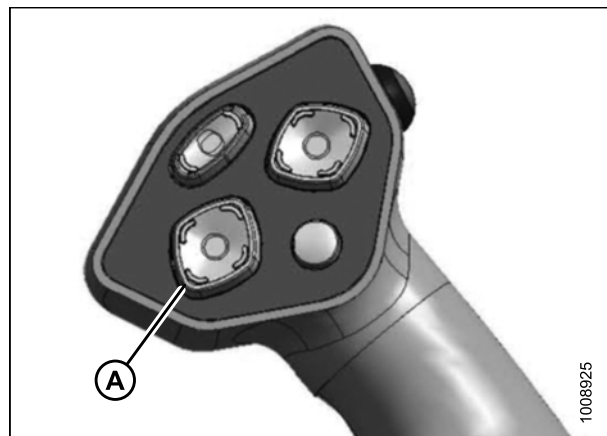


Figure 4.261: Ground Speed Lever

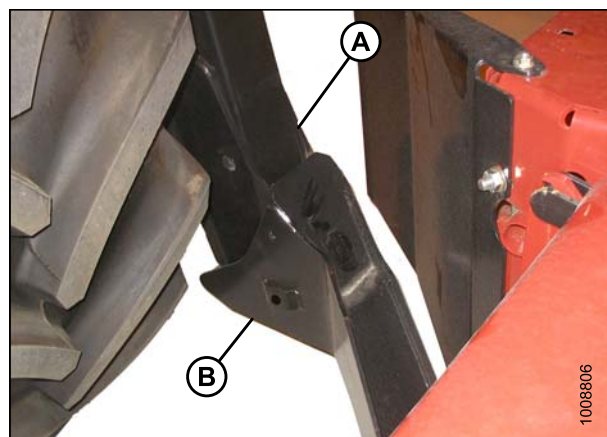


Figure 4.262: Header Boot

OPERATION

4. Stop engine and remove key from ignition.
5. Loosen nut (A) and rotate barrel (B) to adjust length until the link is aligned with the header bracket.
6. Install clevis pin (C) and secure with cotter pin (D).
7. Adjust length of link to achieve proper header angle by rotating barrel (B). Tighten nut (A) against barrel (a slight tap with a hammer is sufficient).

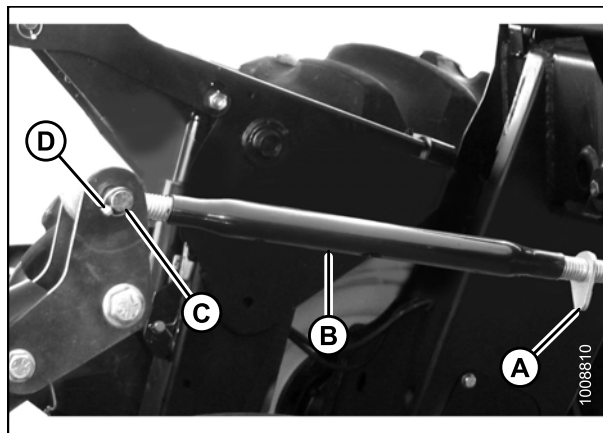


Figure 4.263: Mechanical Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

8. Start the engine.
9. Press the HEADER UP switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.

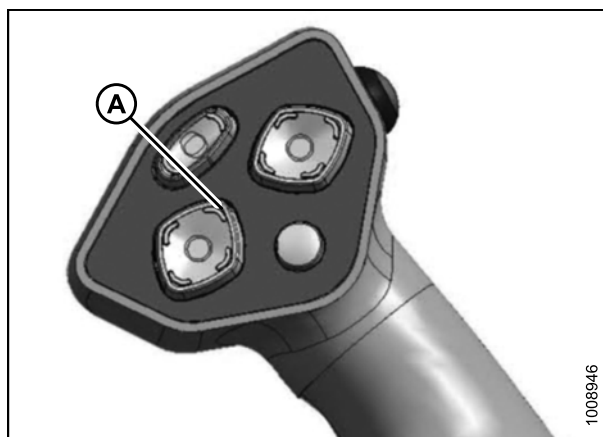


Figure 4.264: Ground Speed Lever

OPERATION

10. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

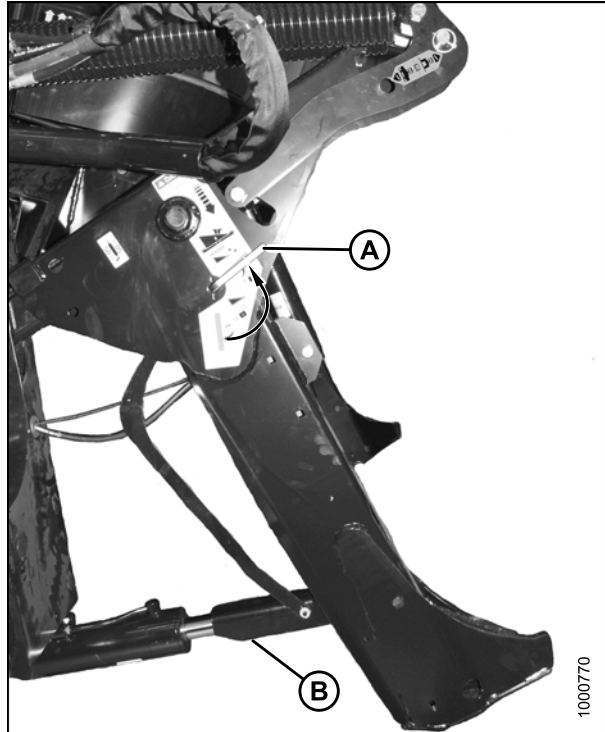


Figure 4.265: Safety Prop

11. Install clevis pin (A) through boot and foot, and secure with hairpin (B). Repeat for opposite side.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

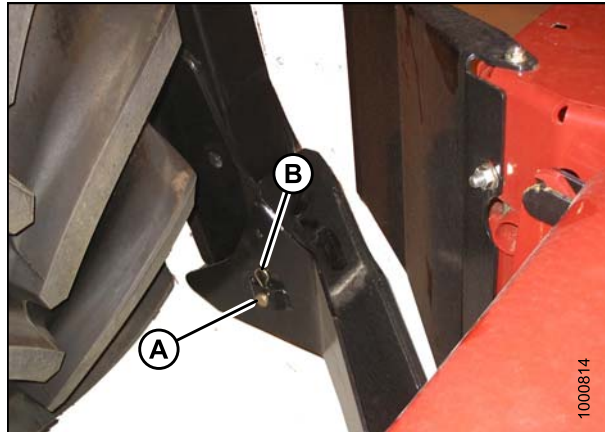


Figure 4.266: Header Boot

OPERATION

12. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

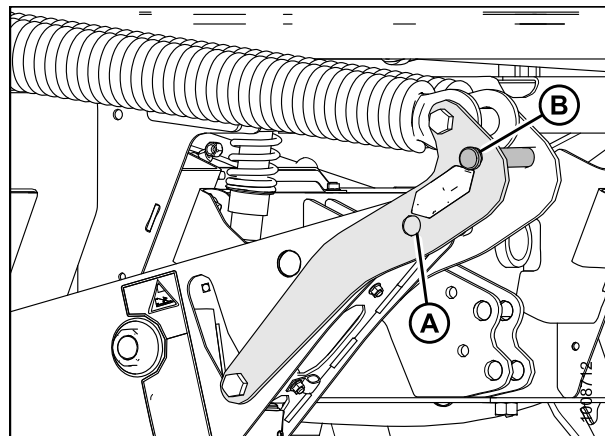


Figure 4.267: Header Float Linkage

13. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
14. Repeat for opposite safety prop.

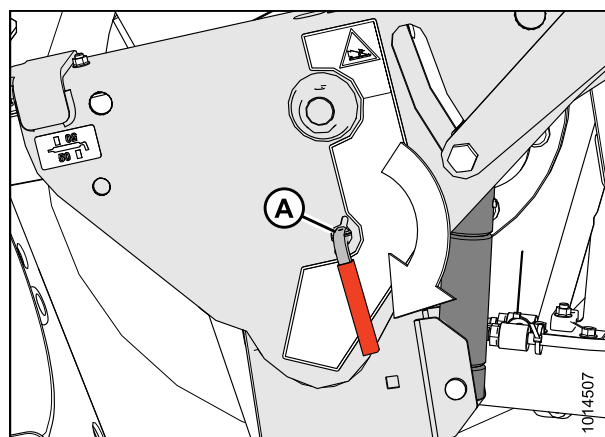


Figure 4.268: Safety Prop

CAUTION

Check to be sure all bystanders have cleared the area.

15. Start the engine and activate the HEADER DOWN switch (A) on the GSL to fully lower the header.
16. Stop engine and remove key from ignition.

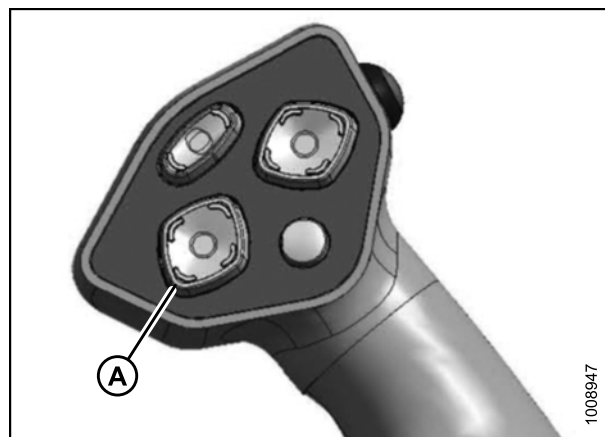


Figure 4.269: Ground Speed Lever

OPERATION

17. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the rotary disc header operator's manual.

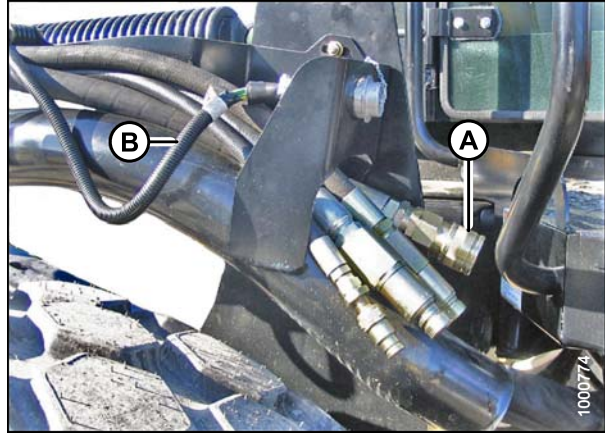


Figure 4.270: Header Drive Hoses and Harness

4.5.7 Detaching an R-Series Header

Refer to the procedure that is appropriate for the center-link installed on the windrower:

- [Detaching an R-Series Header: Hydraulic Center-Link, page 276](#)
- [Detaching an R-Series Header: Mechanical Center-Link, page 280](#)

Detaching an R-Series Header: Hydraulic Center-Link

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Start engine and press header up (A) switch to raise header to maximum height.
2. Rephase cylinders if one end of the header does not raise fully. If rephasing is required, proceed as follows:
 - a. Press and hold the header up (A) switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.



Figure 4.271: Ground Speed Lever (GSL)

OPERATION

3. Stop engine and remove key from ignition.
4. Pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for opposite cylinder.

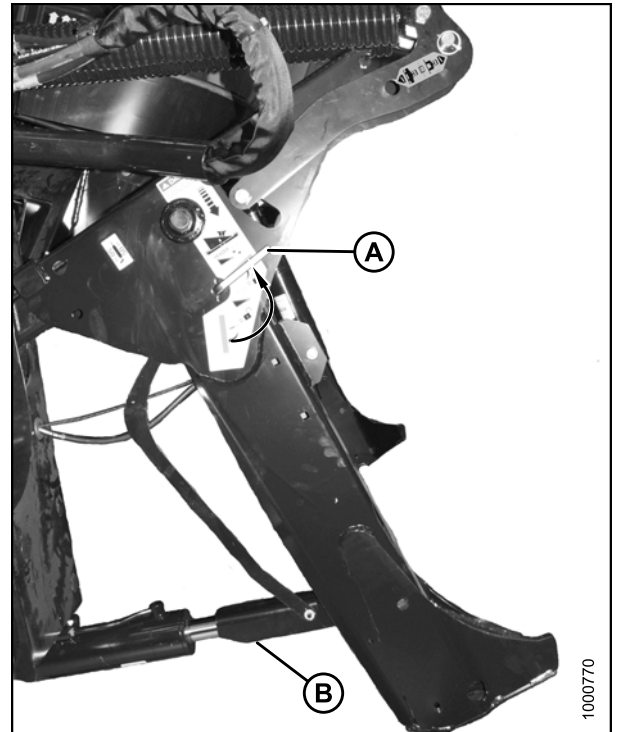


Figure 4.272: Safety Prop

5. Remove hairpin from clevis pin (A) and remove clevis pin from header boot (B) on both sides of header.

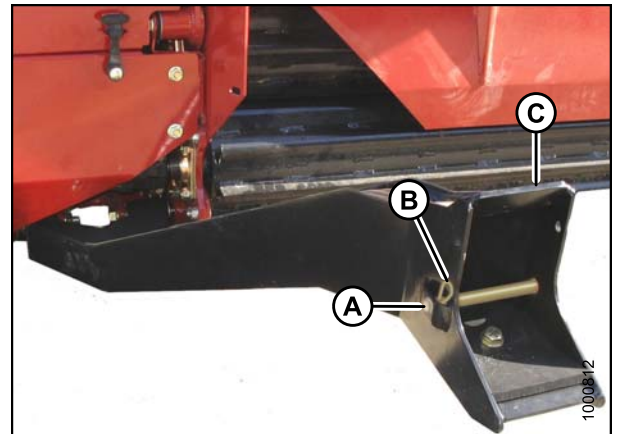


Figure 4.273: Header Boots

OPERATION

- Remove clevis pin from location (A) to disengage float springs and insert into storage hole (B). Secure with hairpin.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

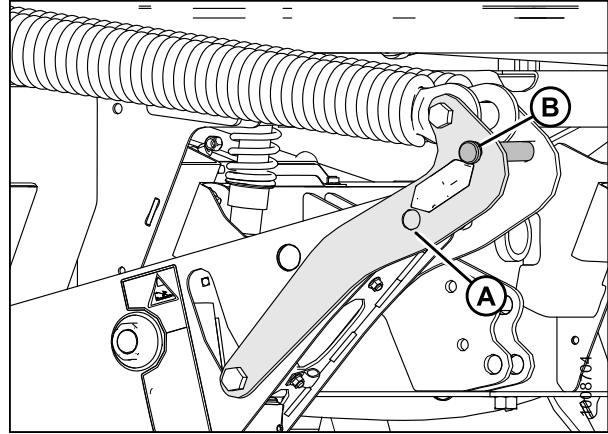


Figure 4.274: Header Float Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

- Disengage safety props by turning lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
- Start engine, choose a level area, and lower header to the ground.

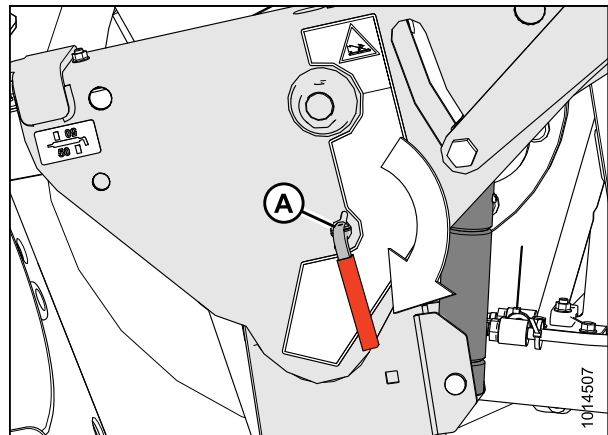


Figure 4.275: Safety Props

- Activate header tilt up (A) and header tilt down (B) cylinder switches on GSL to release load on center-link cylinder.

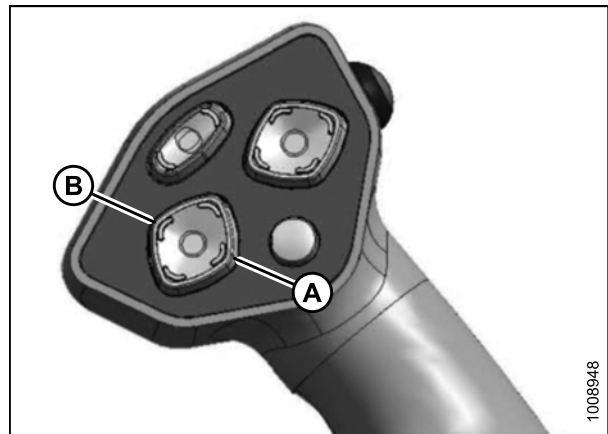


Figure 4.276: Ground Speed Lever

OPERATION

10. Stop engine and remove key from ignition.
11. Lift hook release (C) and lift hook (B) off header pin.

NOTE:

If optional center-link lift cylinder is installed, lift release (C) and then operate the link lift cylinder from the cab to disengage the center-link from the header.

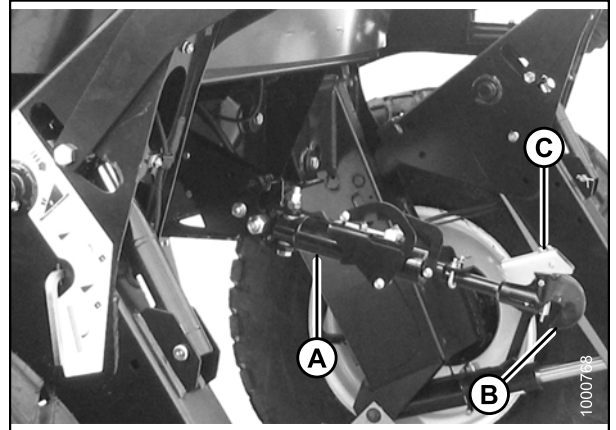


Figure 4.277: Hydraulic Center-Link

12. Disconnect header drive hydraulics (A) and electrical harness (B). Refer to the header operator's manual.
13. Back windrower slowly away from header.

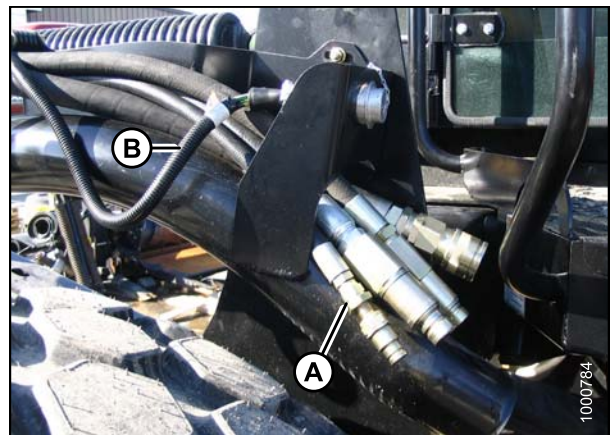


Figure 4.278: Header Drive Hydraulics

14. Reinstall clevis pin (A) through boot (C) and secure with hairpin (B). Repeat for opposite side.

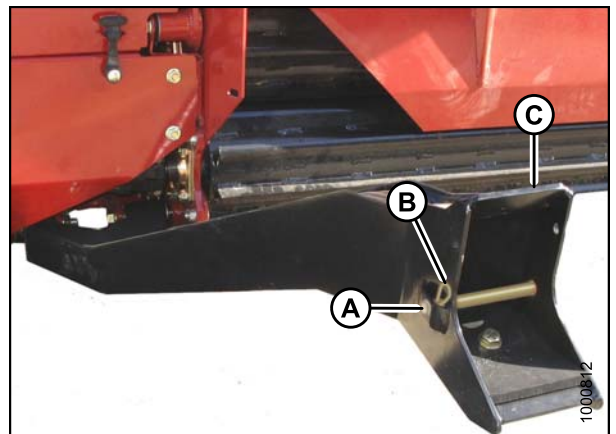


Figure 4.279: Header Boot

OPERATION

Detaching an R-Series Header: Mechanical Center-Link

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Start engine and press header up (A) switch to raise header to maximum height.
2. Rephase cylinders if one end of the header does not raise fully. If rephasing is required, proceed as follows:
 - a. Press and hold the header up (A) switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.
3. Stop engine and remove key from ignition.
4. Pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for opposite cylinder.



Figure 4.280: Ground Speed Lever (GSL)

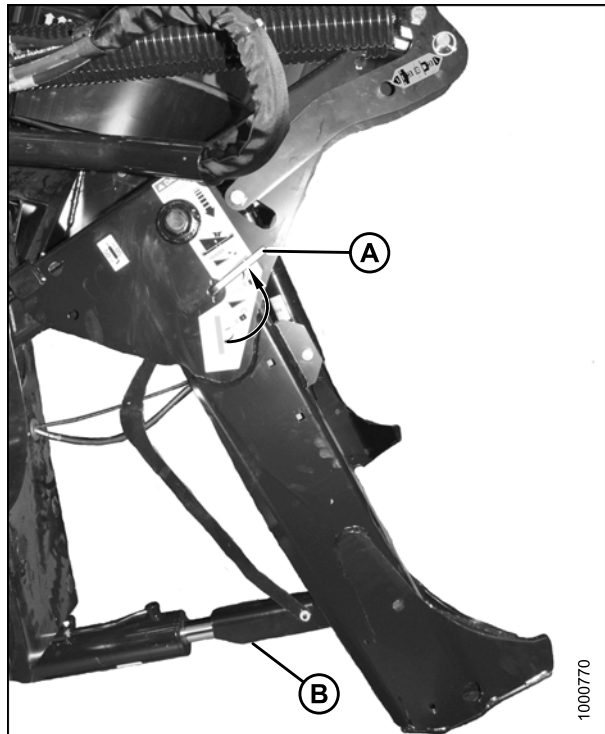


Figure 4.281: Safety Prop

OPERATION

5. Remove hairpin (B) from clevis pin (A) and remove pin from left and right header boots (C) on header.

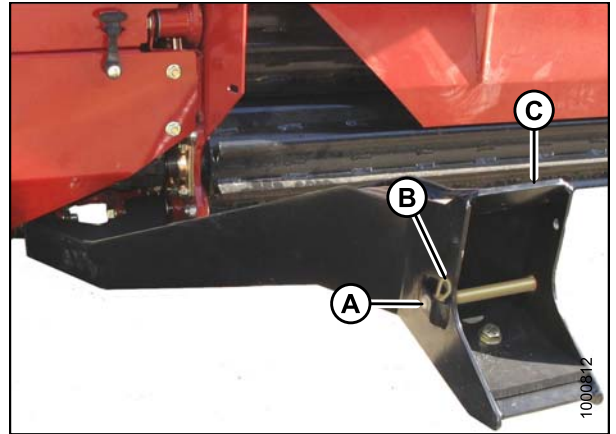


Figure 4.282: Header Boots

6. Remove clevis pin from location (A) to disengage float springs and insert in storage hole (B). Secure with hairpin.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

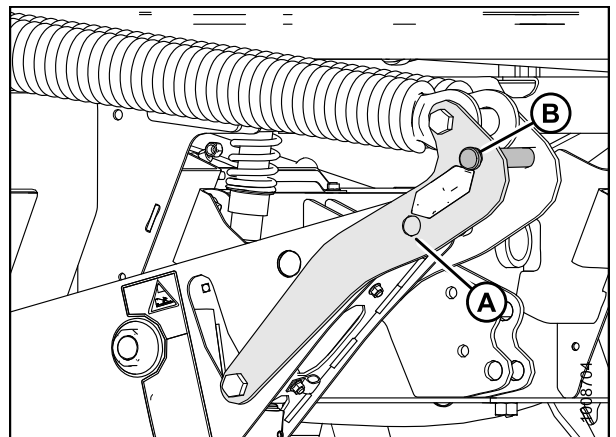


Figure 4.283: Header Float Linkage

7. Turn lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
8. Start engine, choose a level area, and lower header to the ground.
9. Stop the engine and remove the key.

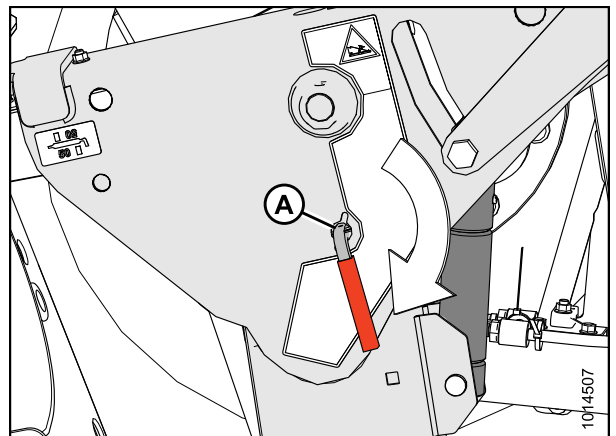


Figure 4.284: Safety Prop

OPERATION

- Loosen nut (B) and rotate barrel (A) to relieve load on link.

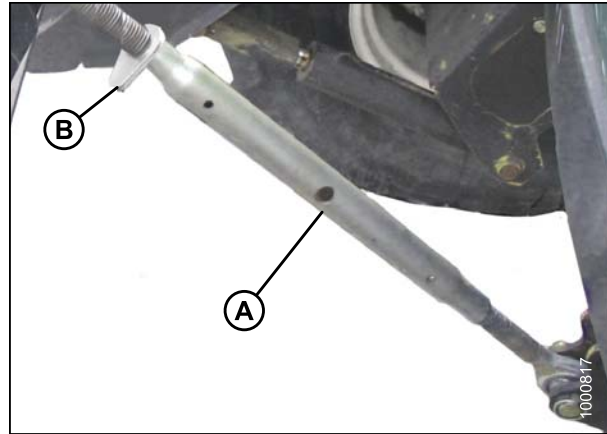


Figure 4.285: Mechanical Center-Link

- Remove cotter pin on clevis pin (B) and remove pin to disconnect from header. Reinstall clevis pin in header.
- Tighten nut against barrel (A). A slight tap with a hammer is sufficient.

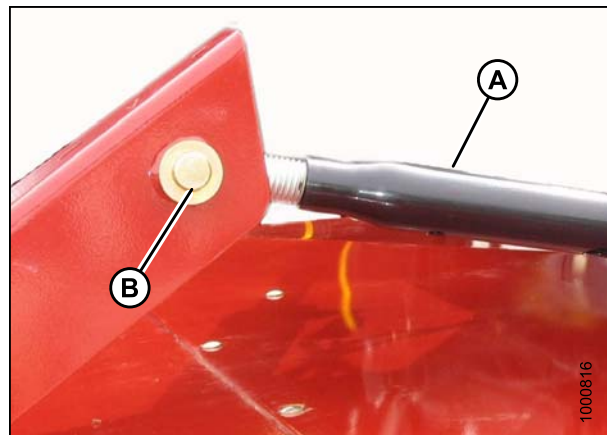


Figure 4.286: Mechanical Center-Link

- Disconnect header drive hydraulics (A) and electrical harness (B). Refer to the R-Series Header Operator's Manual.
- Start engine and slowly back windrower away from header.

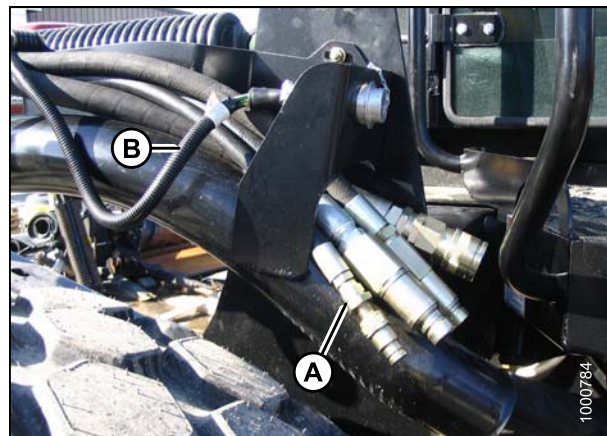


Figure 4.287: Header Drive Hydraulics

OPERATION

15. Stop engine and remove the key.
16. Reinstall the clevis pin (A) through each boot (C) and secure with hairpin (B). Do this to both sides.

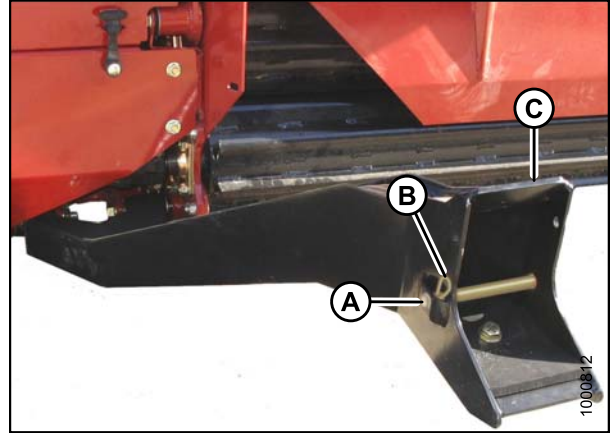


Figure 4.288: Header Boots

4.6 Operating with a D-Series Header

The M155Self-Propelled Windrower is factory-equipped to run a D-Series Draper Header.

If installing a HC10 Hay Conditioner, Reverser kit #B4656 is recommended. If necessary, obtain the recommended kit from your MacDon Dealer and install it in accordance with the instructions supplied with the kit.

Refer to the procedures below for the center-link installed on your windrower:

- [Attaching a D-Series Header: Hydraulic Center-Link with Optional Self-Alignment, page 214](#)
- [Attaching a D-Series Header: Hydraulic Center-Link without Self-Alignment, page 219](#)
- [Attaching a D-Series Header: Mechanical Center-Link, page 225](#)

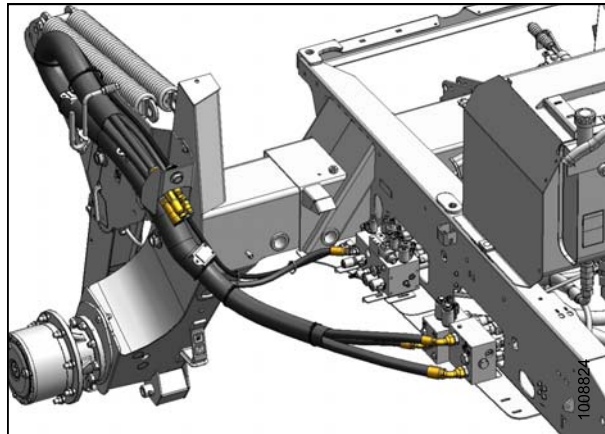


Figure 4.289: Draper Header Hydraulics

4.6.1 Configuring Hydraulics

The windrower must be fitted with a draper drive basic kit to operate D-Series draper headers.

Windrowers equipped with D-Series hydraulics have four header drive hoses on the left cab-forward side.

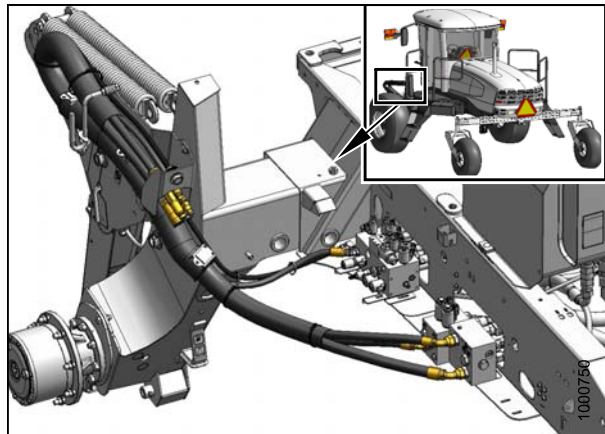


Figure 4.290: Draper Header Drive Hydraulics

OPERATION

There are also up to five reel drive hoses on the right cab-forward side.

If necessary, obtain the following kit from your MacDon Dealer.

- Base Kit MD #B5577 (Installation instruction is supplied with the kit.)

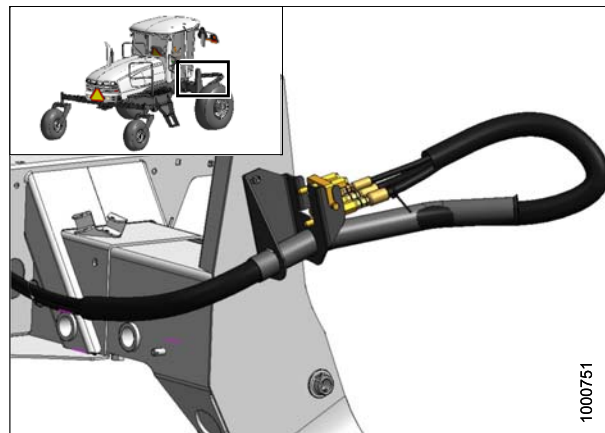


Figure 4.291: Draper Header Reel Hydraulics

4.6.2 Header Position

Refer to [4.4 Operating with a Header, page 193](#) for procedures for controlling header height, header tilt, and float.

4.6.3 Adjusting the Reel Fore-Aft Position

The reel fore-aft position can be hydraulically adjusted with the optional reel position system and is controlled with multi-function switches on the ground speed lever (GSL).

Press and hold the switch for the desired FORWARD (A) or AFT (B) movement of the reel.

NOTE:

The switches also control adjustments to the optional double windrow attachment (DWA) conveyor and can be activated when programming the cab display module (CDM).



Figure 4.292: Ground Speed Lever

4.6.4 Adjusting the Reel Height

Press and hold the switch for the desired movement of the reel REEL UP (A) or REEL DOWN (B).

IMPORTANT:

Under certain conditions, with reel raised to full height, the reel tines may contact the cab roof. Exercise care to avoid damage to the machine.

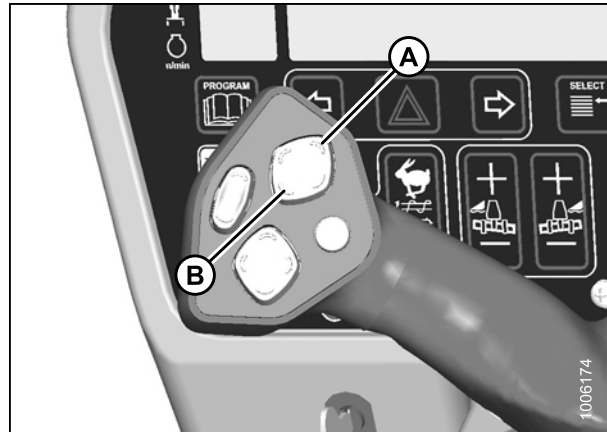


Figure 4.293: Ground Speed Lever (GSL)

4.6.5 Reel Speed

The reel speed is controlled with switches on the ground speed lever (GSL) in the cab. On draper headers, reel speed can be set relative to the ground speed of the windrower using the header index feature or can run independently. Refer to your header's operator manual for specific windrowing guidelines and recommended speeds.

Setting Reel to Ground Speed

Setting the speed of the reel relative to ground speed (using the header index function) allows you to run the engine at lower rpm while maintaining the desired ground and reel speed. Reducing engine speed saves fuel and reduces noise in the cab.

Setting the reel to ground speed requires setting the minimum reel speed and the reel index.



Figure 4.294: Operator Console

CAUTION

Check to be sure all bystanders have cleared the area.

1. Set the minimum reel speed as follows:

IMPORTANT:

Set the minimum reel speed while stationary with the ground speed lever (GSL) in the N-DETENT position.

- a. Engage header.
- b. Set HEADER INDEX switch (B) to **ON**.
- c. Press the DISPLAY SELECTOR button (E) on the GSL to display **##.## MIN REEL** at (A) or press the FAST (C) or SLOW (D) switch.

The displayed value (##.##) = rpm or mph or km/h²⁰

- d. Press FAST (C) or SLOW (D) until the desired minimum reel speed is achieved.

2. Set the reel index as follows:

IMPORTANT:

Reel index can only be adjusted while operating at a ground speed faster than minimum reel speed plus header index value.

- a. Set HEADER INDEX switch (B) to **ON**.

20. Depending on CDM programming.

OPERATION

- b. Press the DISPLAY SELECTOR button (E) on the GSL to display **##.## ##.# REEL IND**²¹ or press FAST (C) or SLOW (D) switch.
 - The displayed value (**##.##**) = reel speed (rpm or mph or km/h²⁰)
 - The displayed value (**##.##**) = reel index value
- c. Press FAST (C) or SLOW (D) until the desired reel index is achieved.

NOTE:

The reel will continue operating at the minimum reel speed setting when the ground speed drops below the set value. The cab display module (CDM) display (A) will flash **##.## MIN REEL** (RPM or MPH or KPH) prompting you to change the minimum set-point or increase your ground speed if the total of the ground speed, plus the index value is **LESS THAN** the minimum reel speed set-point.

Examples:

Windrower is operating at 13 km/h (8 mph) with header index ON and set at -1.0.

- Display shows **7.0 -1.0 REEL IND** where **7.0** (8.0-1.0) is the reel speed in mph and **-1.0** is the HEADER INDEX setting.

Windrower speed drops to 12 km/h (7.5 mph) at same header index setting.

- Display shows **6.5 -1.0 REEL IND** where **6.5** (7.5-1.0) is the reel speed in mph and **-1.0** is the HEADER INDEX setting.

Windrower is operating at 13 km/h (8 mph) with header index ON and set at 2.0.

- Display shows: **10.0 2.0 REEL IND** where **10.0** (8+2.0) is the reel speed in mph and **2.0** is the HEADER INDEX setting.

21. REEL IND will only be displayed when operating at a ground speed faster than minimum reel speed plus header index value.

OPERATION

Setting the Reel Only Speed



Figure 4.295: Operator Console

A - Display

D - Reel Slow

B - Header Index

E - Display Selector

C - Reel Fast

CAUTION

Check to be sure all bystanders have cleared the area.

Set the speed of the reel independently of ground speed as follows while operating the windrower:

NOTE:

This procedure is similar to changing the draper speed using the draper speed control switch while in motion. Refer to [Setting Draper Speed Independent of Ground Speed, page 292](#). These changes become the new set points.

1. Set HEADER INDEX (B) to **OFF**.
2. Press REEL FAST (C) or REEL SLOW (D) on the ground speed lever (GSL) until display (A) shows **###.### REEL MPH** with desired reel speed.

The displayed value (###.###) = reel speed (rpm or mph or km/h²)

22. Depending on cab display module (CDM) programming.

4.6.6 Draper Speed

Draper speed affects the orientation of stalks in the windrow. For more information, refer to your header operator's manual for guidelines.

The draper speed can be set to run independently, or relative to the ground speed of the windrower with the header index function.

Setting Draper to Ground Speed

Setting the speed of the draper relative to ground speed (using the header index function) allows you to run the engine at lower rpm while maintaining the desired ground and draper speed. Reducing engine speed saves fuel and reduces noise in the cab.

Setting draper to ground speed requires setting both the minimum draper speed and the draper index.

Refer to the following:

- [Setting Draper Minimum Speed, page 290](#)
- [Setting Draper Index, page 291](#)

Setting Draper Minimum Speed

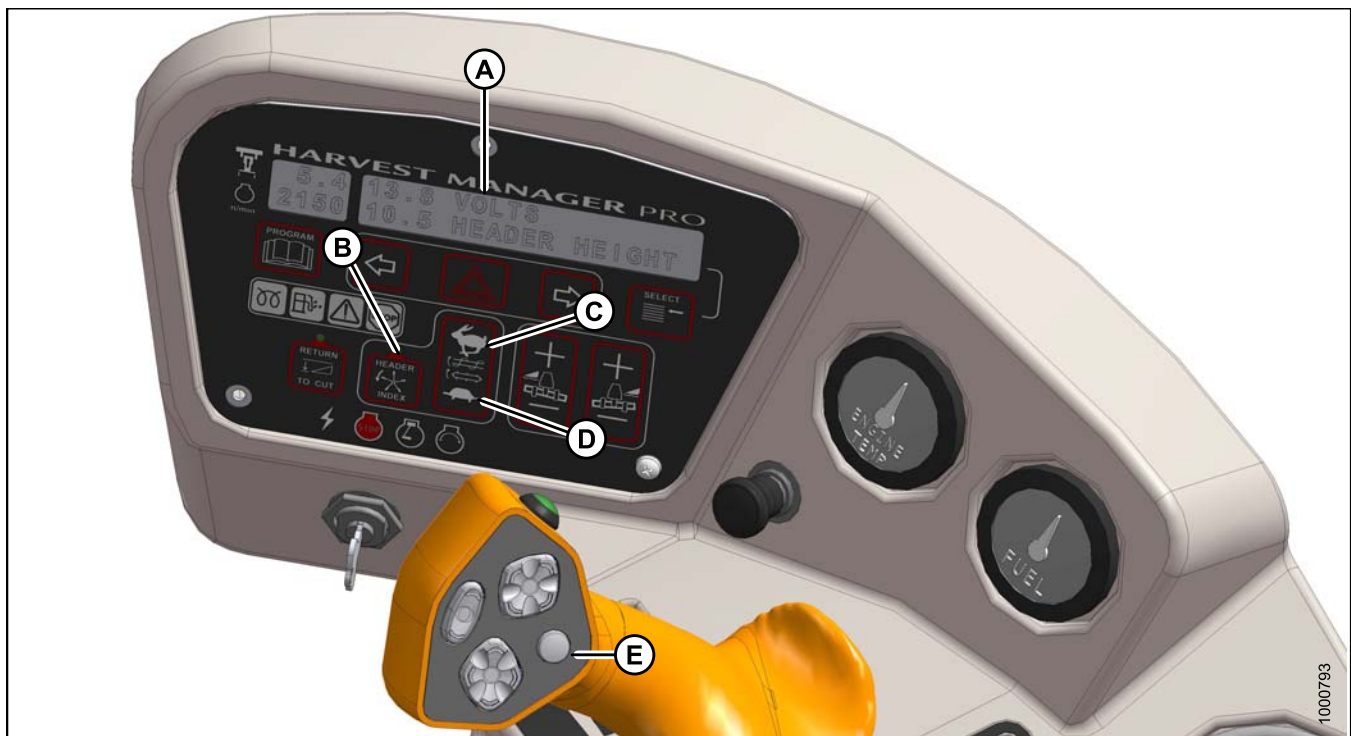


Figure 4.296: Operator Console

CAUTION

Check to be sure all bystanders have cleared the area.

Set draper minimum speed as follows:

OPERATION

IMPORTANT:

Set the minimum draper speed while stationary with the ground speed lever (GSL) in the N-DETENT position.

1. Engage header.
2. Set HEADER INDEX (B) switch to **ON**.
3. Press DISPLAY SELECTOR button (E) until display (A) shows **###.## DRAPER MIN.**
The displayed value (###.##) = draper speed (mph or km/h²³).
4. Use the FAST (C) and SLOW (D) buttons to set the desired minimum draper speed.

Setting Draper Index

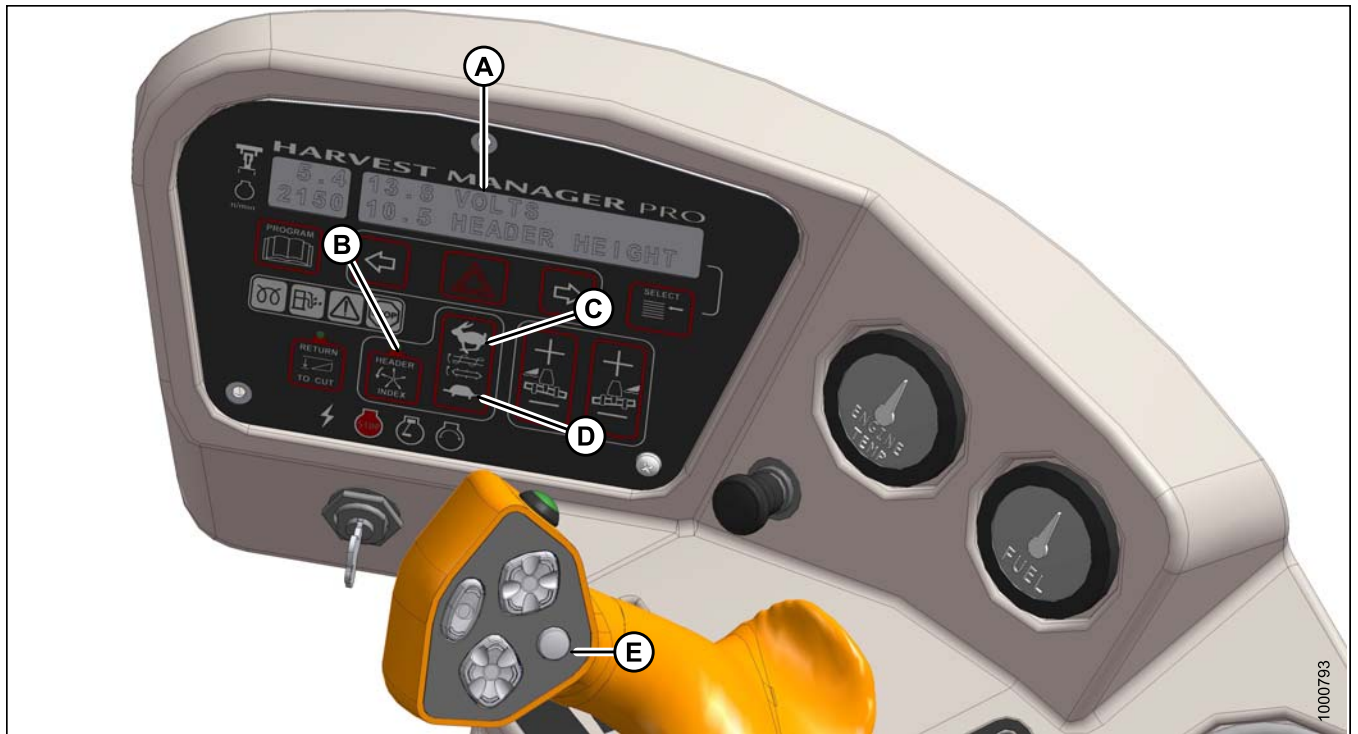


Figure 4.297: Operator Console

CAUTION

Check to be sure all bystanders have cleared the area.

Set draper index as follows:

IMPORTANT:

Draper Index can only be adjusted while operating at a ground speed faster than minimum draper speed plus header index value.

1. Engage header.
2. Set HEADER INDEX switch (B) to **ON**.

23. Depending on cab display module (CDM) programming.

OPERATION

3. Press DISPLAY SELECTOR (E) on the ground speed lever (GSL) to display **DRAPER INDX**²⁴ at (A) on the cab display module (CDM).
4. Press DRAPER FAST (C) or SLOW (D) on the CDM until display (A) shows **##.## ##.# DRAP IND** with the desired index value.
 - The displayed value (##.##) = draper speed (mph or km/h²⁵)
 - The displayed value (##.#) = the index value

Examples:

- Windrower is operating at 13 km/h (8 mph) with header index ON and set at 1.5.
Display shows: **9.5 1.5 DRAP INDX** where **9.5** (8 + 1.5) is the draper speed in mph and **1.5** is the header index setting.
- Windrower speed drops to 12 km/h (7.5 mph) at same header index setting.
Display shows: **9.0 1.5 DRAP INDX** where **9.0** (7.5 + 1.5) is the draper speed in mph and **1.5** is the header index setting.
- Windrower is operating at 13 km/h (8 mph) with header index ON and set at 0.9.
Display shows: **8.9 0.9 DRAP INDX** where **8.9** (8 + 0.9) is the draper speed in mph and **0.9** is the header index setting.

Setting Draper Speed Independent of Ground Speed

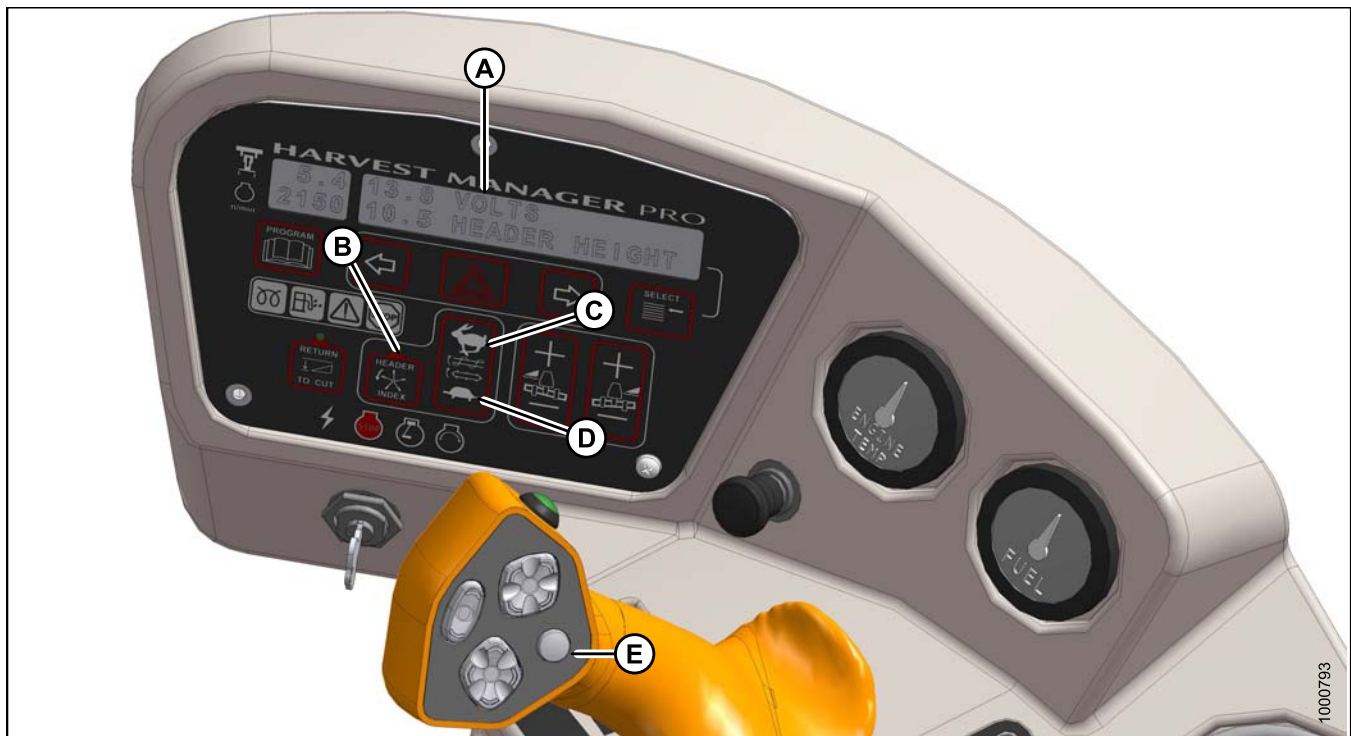


Figure 4.298: Operator Console

Set the speed of the draper independent of ground speed as follows:

24. DRAPER INDX will only be displayed when operating at a ground speed faster than minimum draper speed plus the header index value.
25. Depending on CDM programming.

OPERATION

NOTE:

This procedure can also be used to change the draper speed while in motion.

 **CAUTION**

Check to be sure all bystanders have cleared the area.

1. Engage header.
2. Set HEADER INDEX switch (B) to **OFF**.
3. Press DISPLAY SELECTOR button (E) to show **##.# DRAPER SPEED** on the cab display module (CDM) (A).
Displayed value (##.#) = draper speed (mph or km/h²⁶).
4. Press FAST (C) or SLOW (D) on the CDM until desired draper speed is displayed at (A).

4.6.7 Knife Speed

The ideal knife speed should achieve a clean cut. Crop types and conditions usually influence the knife and ground speeds.

Table 4.2 Knife Speed Table

Header Description		Knife Speed			
Type	Size (ft)	Minimum		Maximum	
		rpm ²⁷	spm ²⁸	rpm ²⁷	spm ²⁸
Draper with double knife	15	750	1500	950	1900
	20 and 25	700	1400	850	1700
	30	600	1200	800	1600
	35			700	1400
	40	550	1100	700	1400
Draper with single knife	20 and 25	600	1200	750	1500
	30			700	1400
	35	550	1100		
	40	525	1050	600	1200

When the header is first attached to the windrower, the windrower control module (WCM) receives a code from the header that determines the knife speed range and the minimum speed.

The desired speed can be programmed on the cab display module (CDM) and stored in the WCM memory so the knife will operate at the original set-point after the header is detached and reattached to the windrower.

If no header code is detected, the CDM displays NO HEADER and the knife speed reverts to the operator's selection from a range of 800–1000 strokes per minute.

Refer to the header operator's manual for the suggested knife speed for a variety of crops and conditions.

NOTE:

The knife speed cannot be programmed outside the range specified for each header.

26. Depending on CDM programming.
 27. Revolutions per minute is the speed of knife drive box pulley.
 28. Strokes per minute of knife (rpm x 2).

OPERATION

NOTE:

The knife speed can be adjusted without shutting down the machine; however, the windrower should be stopped before adjusting CDM settings.

To adjust the knife speed, refer to [Setting the Header Knife Speed, page 103](#).

4.6.8 Deck Shift Control

When connected to a draper header with the deck shift option, hydraulic deck shift control allows you to select the deck position and draper rotation of the header from the operator's station. Deck shift allows you to select crop delivery from the left side, center, or right side of the header.

Deck Shift

CAUTION

Check to be sure all bystanders have cleared the area.

Shift decks as follows:

1. Engage header by pushing down on the yellow HEADER DRIVE button (A) while pulling up on the black ring at the base of the switch (B).
2. Push the switch (A) to desired delivery position. Deck(s) will move and direction of drapers will change accordingly.
3. Operate windrower.

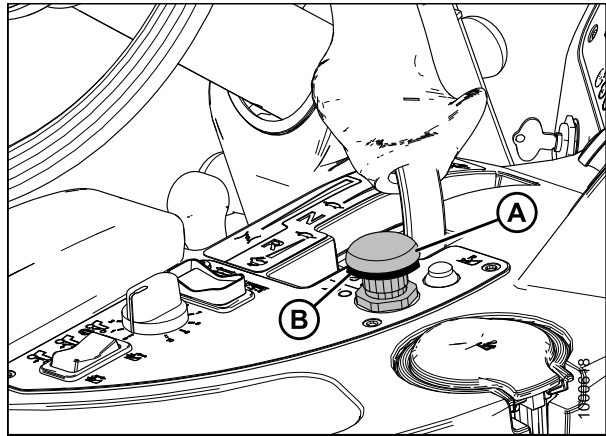


Figure 4.299: Header Drive Button

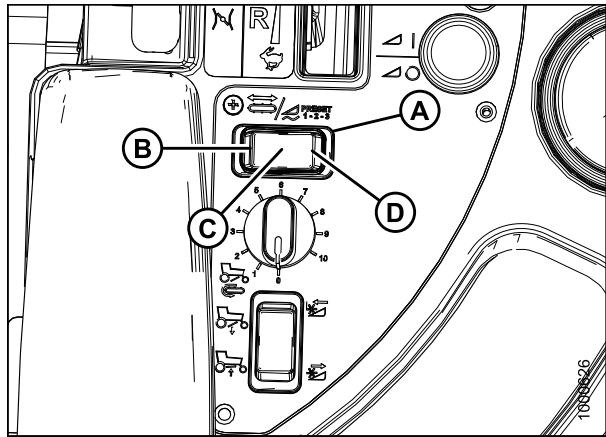


Figure 4.300: Deck Shift Switch

A - Deck Shift Switch
B - Left Side Delivery
C - Center Delivery
D - Right Side Delivery

OPERATION

Setting Float Options with Deck Shift

For draper headers equipped with the deck shift option, the header float can be set for each deck position. Float is maintained when the decks are shifted.

CAUTION

Check to be sure all bystanders have cleared the area.

Program the float as follows:

1. Engage header.
2. Using HEADER TILT SWITCHES (A) and (B) on the ground speed lever (GSL), set center-link to mid-range position (05.0 on Display [E]).

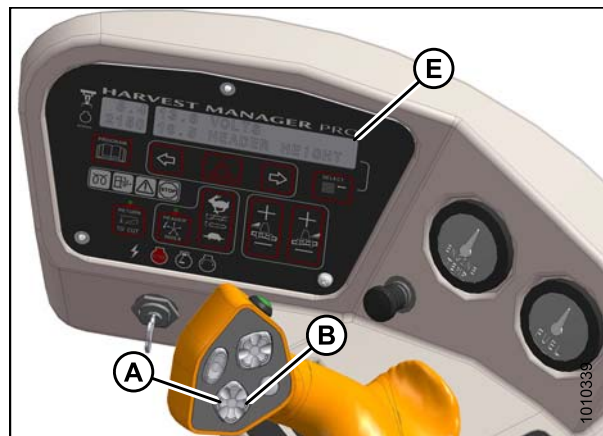


Figure 4.301: Operator Console

3. Select a deck position with DECK SHIFT switch (A) from one of the following delivery options:
 - B - Left side delivery
 - C - Center delivery
 - D - Right side delivery

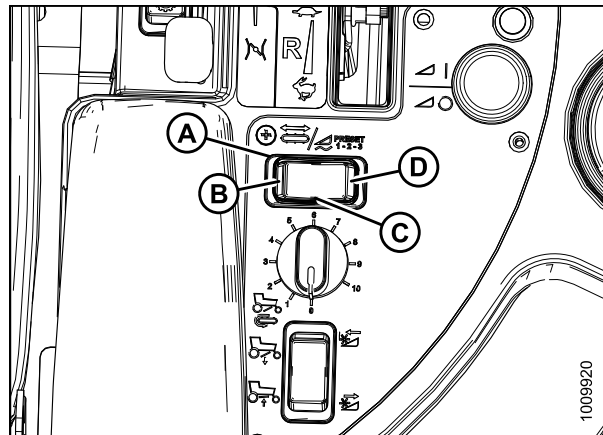


Figure 4.302: Deck Shift Switch

OPERATION

- Using HEADER DOWN switch (A) on the GSL, lower header fully with lift cylinders fully retracted.
- Using LEFT FLOAT SWITCH (B), push + to increase float or - to decrease float on left side of header. Display (D) will indicate selected float value for left side, for example (8.0 L FLOAT R ##.#).
- Repeat for right side float with RIGHT switch (C). Display (D) will indicate float value for both sides, for example (8.0 L FLOAT R 3.0).

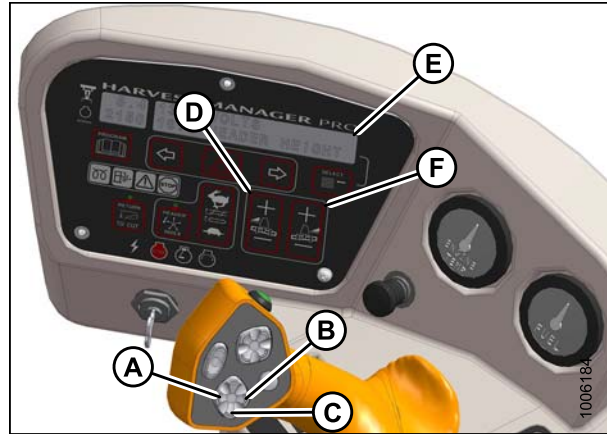


Figure 4.303: Operator Console

- Select a second deck position with the DECK SHIFT switch (A).
- Repeat step 5., page 296 and step 6., page 296 to set the float for the second deck position.
- Select a third deck position with the DECK SHIFT switch (A).
- Repeat step 5., page 296 and step 6., page 296 to set the float for the third deck position.

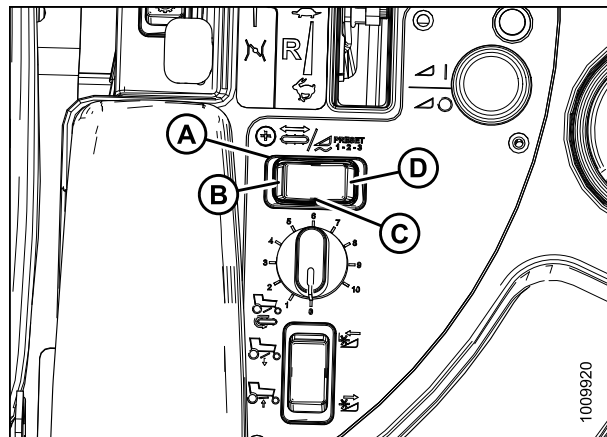


Figure 4.304: Deck Shift Switch

- | | |
|-----------------------|-------------------------|
| A - Deck Shift Switch | B - Left Side Delivery |
| C - Center Delivery | D - Right Side Delivery |

4.7 Operating with an A-Series Header

The M155 is factory-equipped to run an A-Series Auger Header.

4.7.1 Auger Speed

Auger Speed on A30-D Headers

On A30-D and A30-S Auger Headers, the auger speed is fixed to the knife speed. The auger speed is **NOT** monitored and cannot be displayed.

Setting the Auger Speed on A40-D Headers

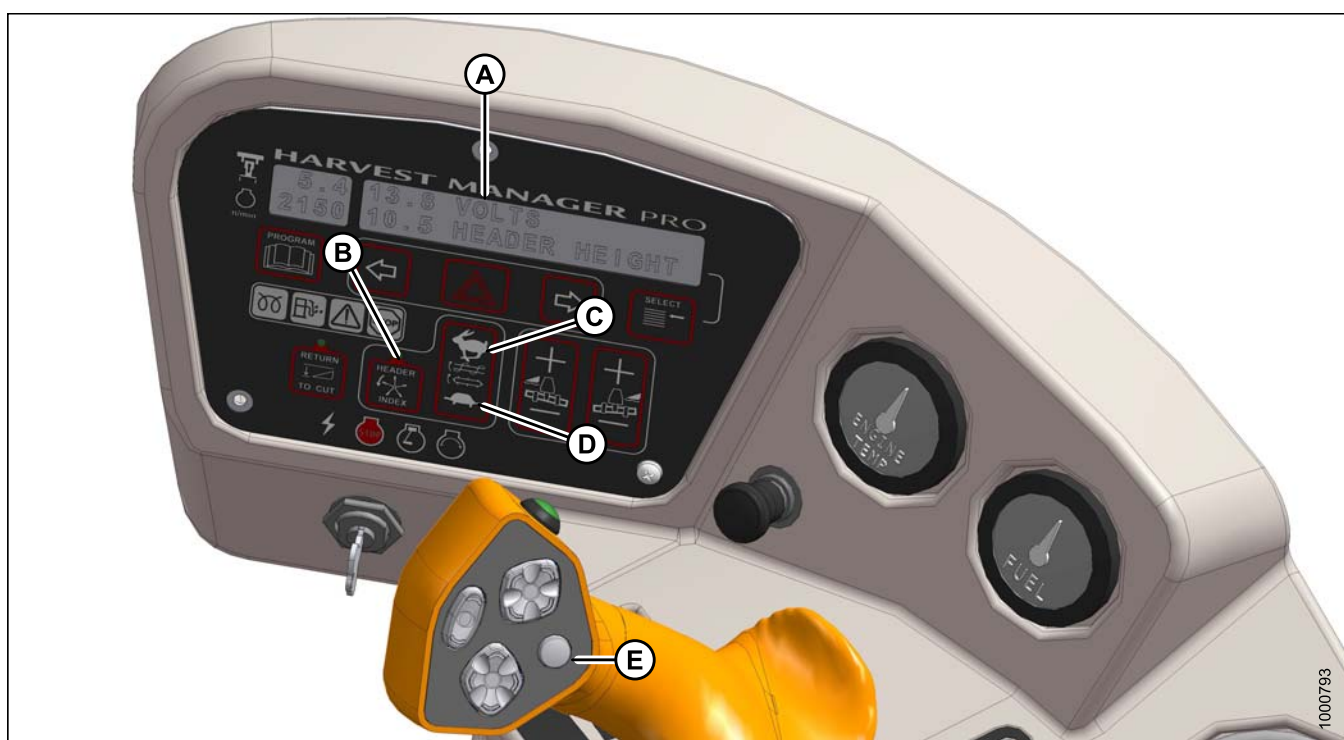


Figure 4.305: Operator Console

CAUTION

Check to be sure all bystanders have cleared the area.

To set the auger speed, follow these steps:

1. Engage header.
2. Set the HEADER INDEX switch (B) to **OFF**.
3. Set the REEL SPEED to the minimum setting [Reel and Disc Speed Switches, page 72](#).
4. Press DISPLAY SELECTOR switch (E) on the ground speed lever (GSL) or press FAST (C) or SLOW (D) on the cab display module (CDM) until **##.# AUGER SPEED** is displayed at (A).

The displayed value (##.#) = auger speed setting.

OPERATION

NOTE:

Changes to reel speed will affect the auger speed directly. However, when adjusting reel speed, the auger speed value displayed on the CDM will not change.

5. Press FAST (C) or SLOW (D) on the CDM until the desired auger speed is achieved.

4.7.2 Reel Speed

Refer to your header operator's manual for recommended reel speed settings for your particular crop.

Reel Speed on A30-D Headers

The reel is driven by the auger and both are dependent on the main header drive speed. The auger and reel speed can only be changed by installing a different size auger drive sprocket, or by varying the windrower engine rpm. A30-D headers do **NOT** have a reel speed sensor, therefore no reel/auger speed information is displayed on the cab display module.

Reel Speed on A40-D Headers

The A40-D Auger Header features a hydraulic direct drive reel with an operating speed range of 15–85 rpm. Reel speed is controlled by the cab display module (CDM) and the ground speed lever (GSL) in the operator's station.

The reel drive motor and the auger drive motor are connected in series but a separate line to the auger allows the reel speed to change independently from the auger speed. Switches on the GSL are used to adjust the reel speed which is displayed on the CDM display. The reel speed can be set by three methods:

- Reel Only (only reel speed changes)
- Reel On-the-Go (reel and auger speeds change)
- Reel to Ground (indexed)

NOTE:

Adjusting the reel speed will result in a change to auger speed unless the auger speed has been preset.

OPERATION

Adjusting Reel Only Speed

The A40-D reel drive is hydraulically driven. Adjusting reel speed also changes auger speed, unless the auger speed is initially set at a predetermined value. The following procedure sets the auger speed so that subsequent reel speed adjustments will only affect the reel.

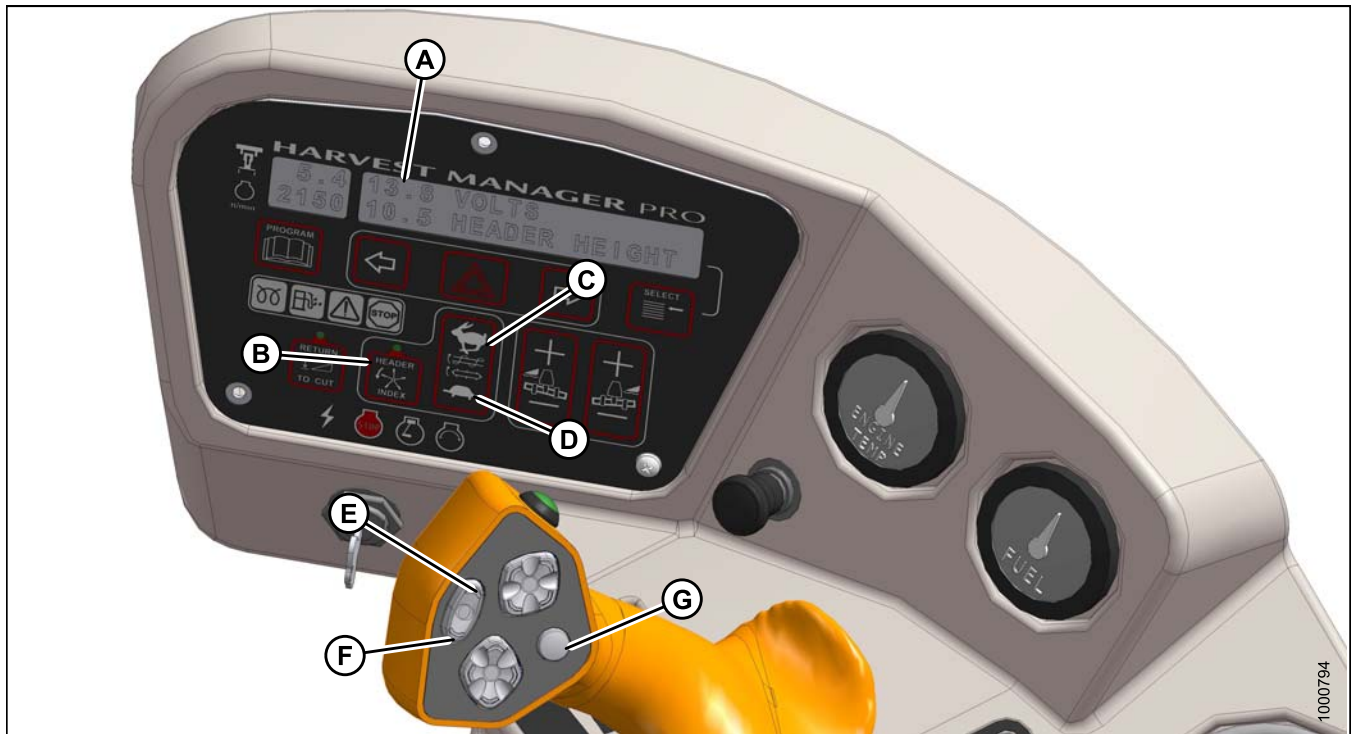


Figure 4.306: Operator Console

A - Display	B - Header Index	C - Auger Fast
D - Auger Slow	E - Fast	F - Slow
G - Display Selector		

IMPORTANT:

To prevent over-speeding the auger, initially set the speed of the reel and auger as follows: Subsequent adjustments to reel speed do **NOT** affect auger speed.

1. Engage header.
2. Set HEADER INDEX SWITCH (B) to **OFF**.
3. On ground speed lever (GSL) press REEL SLOW switch (F) until a beep is heard.
4. Display (A) shows **### REEL RPM**.
5. On cab display module (CDM) press AUGER SLOW (D) or FAST (C) switch to set desired auger speed.
6. Display (A) shows **### AUGER SPEED**.
7. On GSL press REEL SLOW (F) or FAST (E) switch to set desired reel speed.
8. Display (A) shows **### REEL RPM**.

NOTE:

The auger speed will **NOT** change if the reel speed is adjusted.

OPERATION

Adjusting Reel Speed: Windrower in Motion

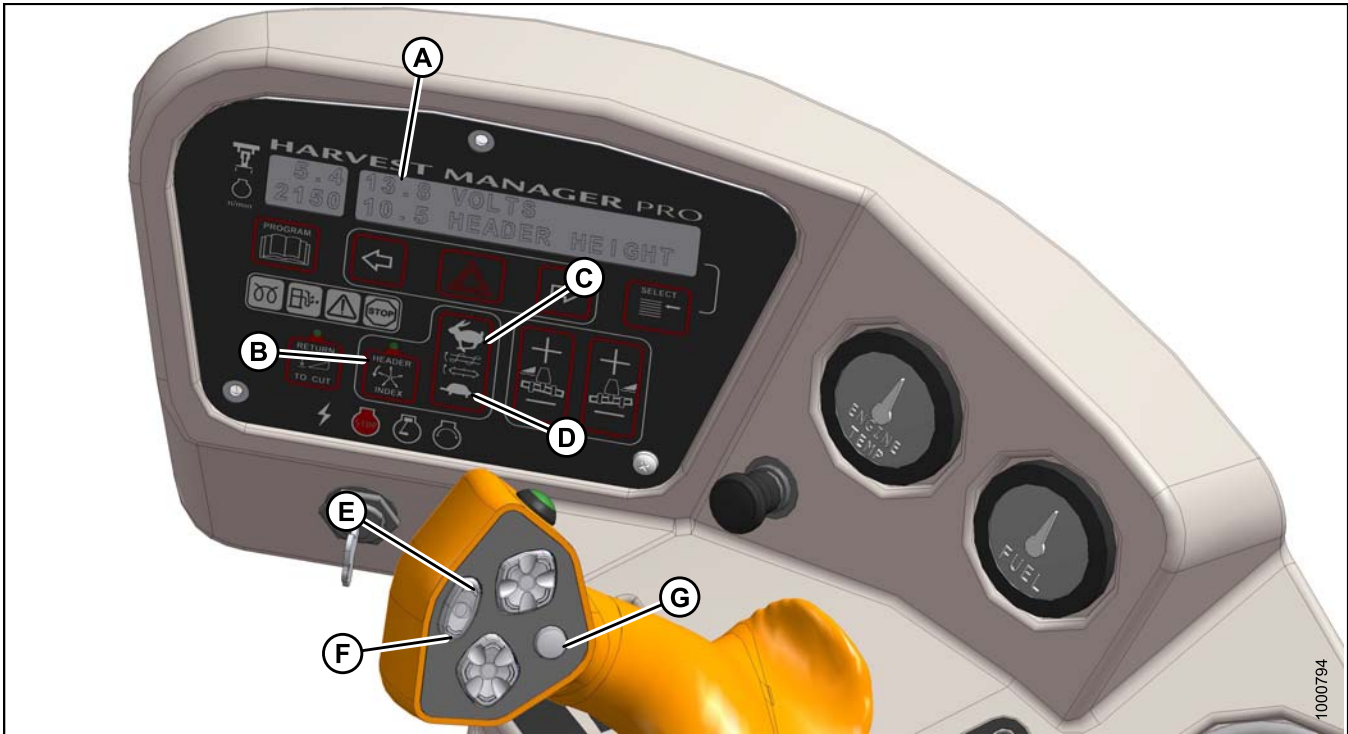


Figure 4.307: Operator Console

A - Display
E - Reel Fast

B - Header Index
F - Reel Slow

C - Auger Fast
G - Display Selector

D - Auger Slow

The reel speed adjustment range is from 15 to 85 rpm. Adjust the reel speed while the machine is in operation as follows:

1. Set HEADER INDEX switch (B) to **OFF**.
2. Press REEL SLOW (F) or REEL FAST (E) on the ground speed lever (GSL) until display (A) shows **###.## REEL RPM** with desired reel speed.

The displayed value (##.##) = reel speed (rpm or mph or km/h²⁹).

NOTE:

Adjusting reel speed will alter auger speed unless the auger speed has been preset.

Setting Reel to Ground Speed

Setting the speed of the reel relative to ground speed (using the header index function) automatically adjusts the reel speed with changes to ground speed. Benefits may include improved crop flow and reduced operator fatigue.

Setting the reel to ground speed requires setting the minimum reel speed and the reel index.

29. Depending on CDM programming.

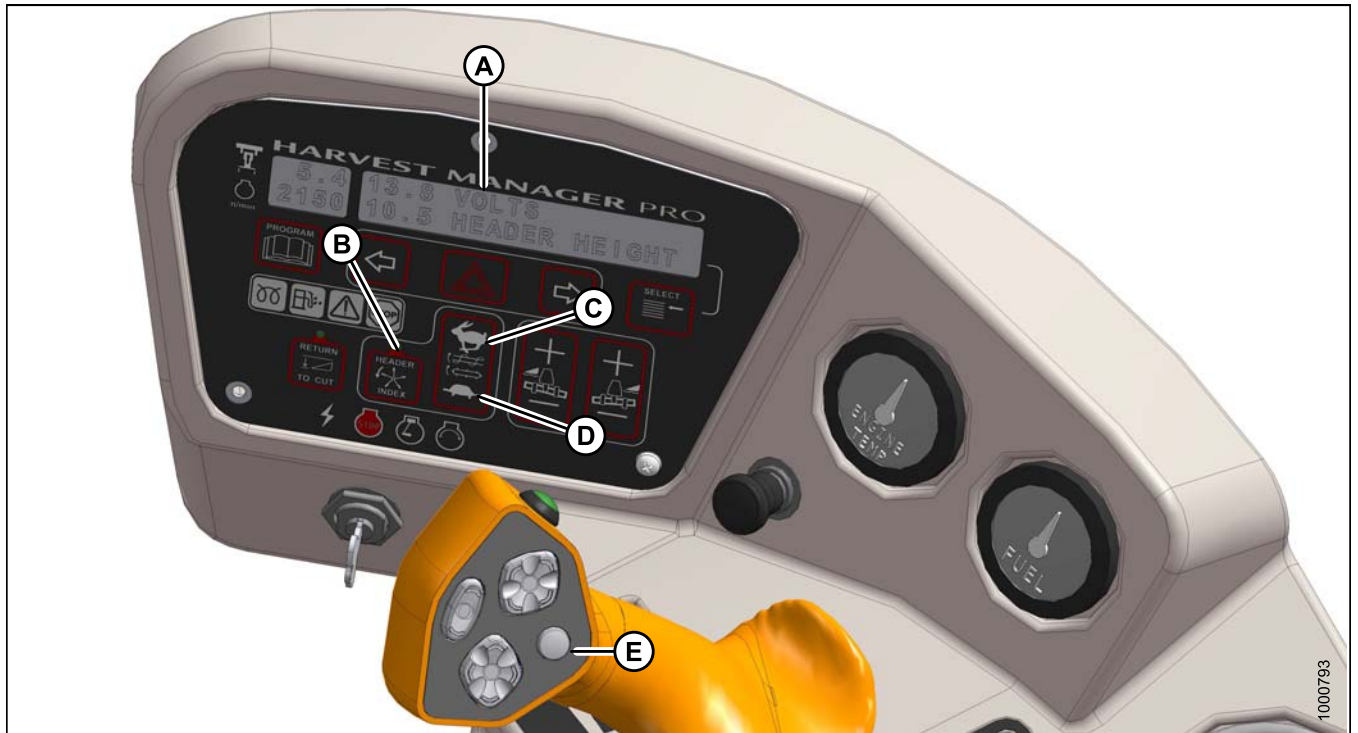


Figure 4.308: Operator Console

CAUTION

Check to be sure all bystanders have cleared the area.

1. Set the minimum reel speed as follows:

IMPORTANT:

Set the minimum reel speed while stationary with the ground speed lever (GSL) in the N-DETENT position.

- a. Engage header.
- b. Set HEADER INDEX switch (B) to **ON**.
- c. Press the DISPLAY SELECTOR button (E) on the GSL to display **###.## MIN REEL** at (A) or press the FAST (C) or SLOW (D) switch.

The displayed value (###.##) = reel speed (rpm or mph or km/h³⁰).

- d. Press FAST (C) or SLOW (D) until the desired minimum reel speed is achieved.

2. Set the reel index as follows:

IMPORTANT:

Reel index can only be adjusted while operating at a ground speed faster than minimum reel speed plus header index value.

30. Depending on CDM programming.

OPERATION

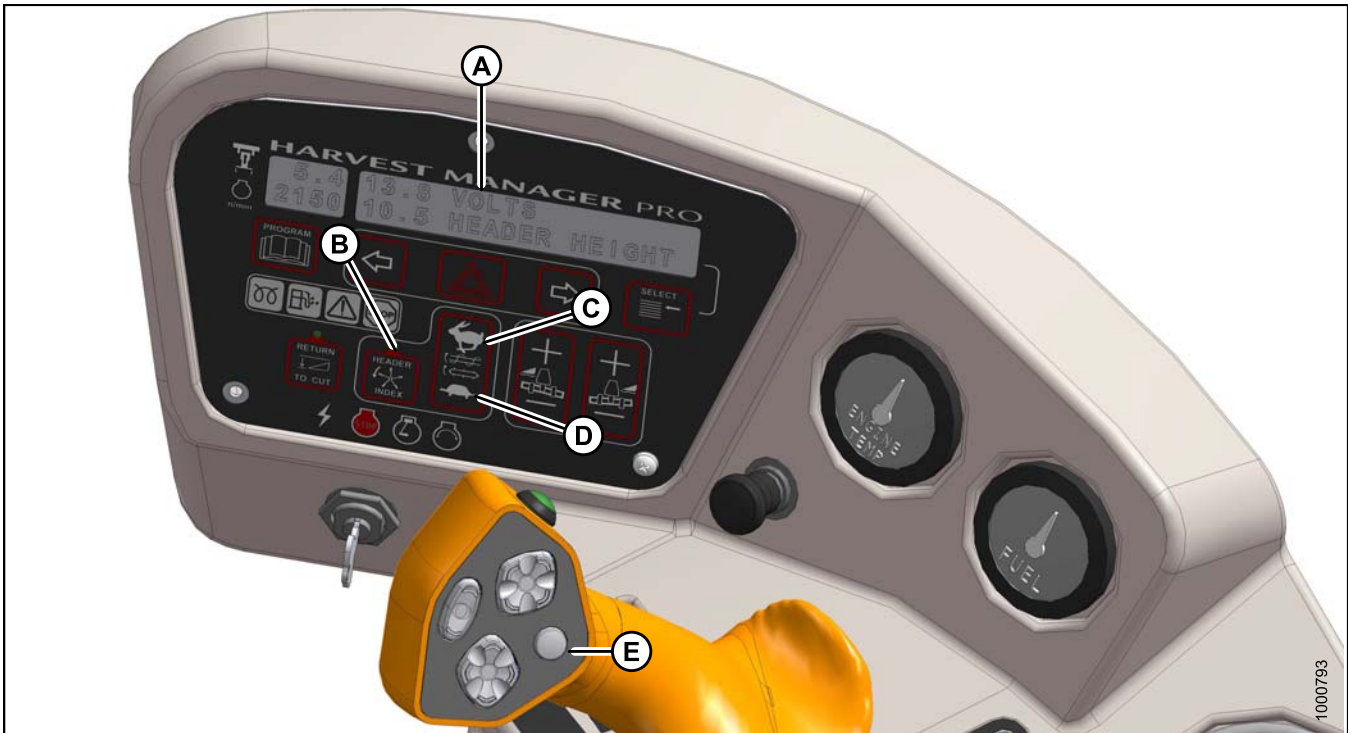


Figure 4.309: Operator Console

- Set the HEADER INDEX switch (B) to **ON**.
- Press the DISPLAY SELECTOR button (E) on the GSL to display **###.## ##.# REEL IND**³¹ or press the FAST (C) or SLOW (D) switch.
 - The displayed value (**###.##**) = reel speed (mph or km/h or rpm³⁰)
 - The displayed value (**##.#**) = reel index value
- Press FAST (C) or SLOW (D) until the desired reel index value is achieved.

NOTE:

The reel will continue operating at the minimum reel speed setting when ground speed drops below the set value. The cab display module (CDM) display (A) will flash **###.## MIN REEL (RPM or MPH or KPH)**³⁰ prompting you to change the minimum set-point or increase ground speed if the total of ground speed, plus the index value is **LESS THAN** the minimum reel speed set-point.

Examples:

- Windrower is operating at 8 mph with HEADER INDEX ON, and set at -1.0.
Display shows: **7.0 -1.0 REEL IND** where **7.0** (8.0-1.0) is the reel speed in mph and **-1.0** is the header index setting.
- Windrower speed drops to 7.5 mph at same HEADER INDEX setting.
Display shows: **6.5 -1.0 REEL IND** where **6.5** (7.5-1.0) is the reel speed in mph and **-1.0** is the header index setting.
- Windrower is operating at 8 mph with HEADER INDEX ON, and set at 2.0.
Display shows: **10.0 2.0 REEL IND** where **10.0** (8+2.0) is the reel speed in mph and **2.0** is the header index setting.

31. REEL IND will only be displayed when operating at a ground speed faster than minimum reel speed plus header index value.

4.7.3 Knife Speed

The ideal cutting speed should achieve a clean cut. Crop types and conditions usually influence the knife and ground speeds.

When the header is first attached to the windrower, the windrower control module (WCM) receives a code from the header that determines the knife speed range and the minimum speed. The desired speed can be programmed on the cab display module (CDM) and stored in the WCM memory so the knife will operate at the original set-point after the header is detached and reattached to the windrower. If no header code is detected, the CDM displays NO HEADER and the knife speed reverts to the operator's selection from a range of 800–1000 strokes per minute. Refer to the header operator's manual for the suggested knife speed for a variety of crops and conditions.

NOTE:

The knife speed cannot be programmed outside the range specified for each header.

NOTE:

The knife speed can be adjusted without shutting down the machine; however, the windrower should be stopped before adjusting CDM settings.

To adjust the knife speed, refer to [Setting the Header Knife Speed, page 103](#).

4.8 Operating with an R-Series Header

The R85 13-foot header and the R80 13- and 16-foot headers are shipped without the motor and hoses installed. The installation of a separate motor and hose bundle is necessary.

If required, obtain kit MD #B5510 from your MacDon Dealer, and install it in accordance with the instructions supplied with the kit.

A Disc Drive kit (MD #B4657) is also required in order for the windrower to operate the header.

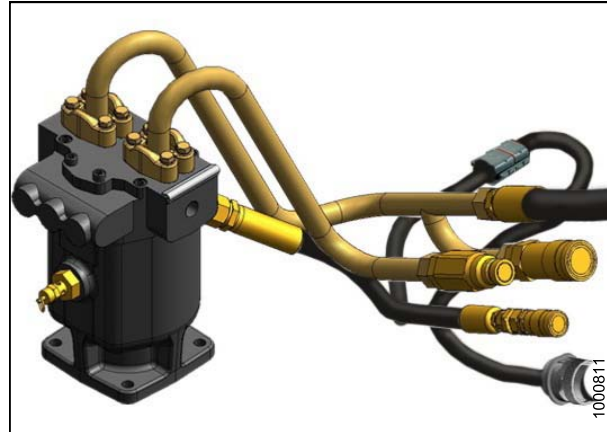


Figure 4.310: Kit MD #B5510

4.8.1 Disc Speed

The ideal disc speed should achieve a clean cut. Crop types and conditions affect disc and ground speeds. Refer to the header operator's manual for the suggested disc speed for a variety of crops and conditions.

Setting Disc Speed



Figure 4.311: Operator Console

A - Display
D - Slow

B - Header Index
E - Display Selector

C - Fast

 **CAUTION**

Check to be sure all bystanders have cleared the area.

Follow these steps to set the disc speed:

1. Engage header.
2. Set HEADER INDEX switch (B) to **OFF**.
3. Press FAST (C) or SLOW (D) on ground speed lever (GSL) until display (A) shows **#### DISC RPM** with desired disc speed.

Displayed value (####) = disc speed (rpm).

5 Maintenance and Servicing

The following section will guide you through some of the windrower's basic maintenance and service requirements. More detailed maintenance, service, and parts information is available from your MacDon Dealer.

5.1 Preparation for Servicing

WARNING

To avoid personal injury, before servicing adapter/header or opening drive covers:

- Fully lower the header. If necessary to service in the raised position, always engage lift safety props.
- Disengage drives.
- Stop engine, and remove key.
- Wait for all moving parts to stop.

5.2 Engine Compartment Hood

The engine compartment hood has two open positions. The lowest is for general maintenance such as checking and adding fluid, servicing the cooling box, etc. The highest position provides full access to the engine compartment.

5.2.1 Opening Hood (Lower Position)

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Locate latch (A) behind grill and lift to release hood.
3. Raise hood until strap (B), which should be looped under hooks (C) and (D), stops at approximately a 40° angle.
4. Remove strap from hook (C) and allow hood to rise slightly further.

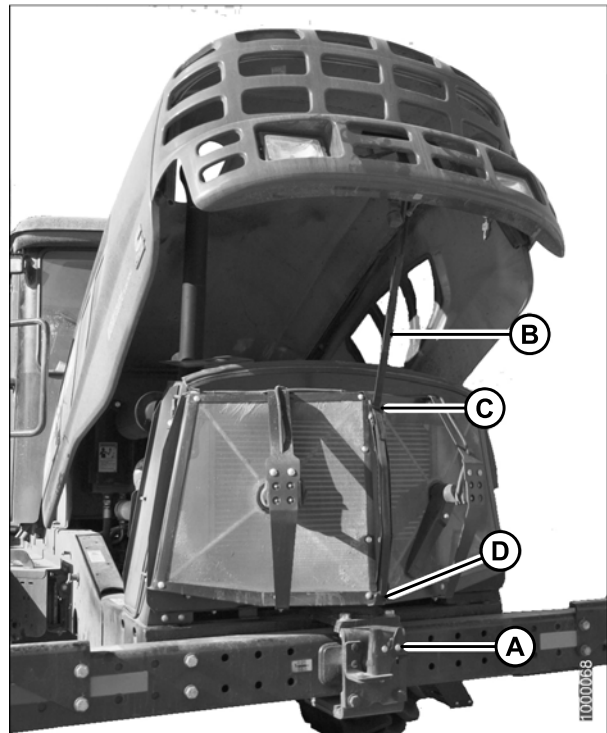


Figure 5.1: Hood Open (Lower Position)

5.2.2 Closing Hood (Lower Position)

1. Grasp the strap at (B) and loop under upper hook (C).

IMPORTANT:

Failure to hook strap may result in it becoming entangled with the screen cleaners or the latch.

2. Pull down on strap (B), grasp the hood when within reach, and lower until hood engages latch (A).

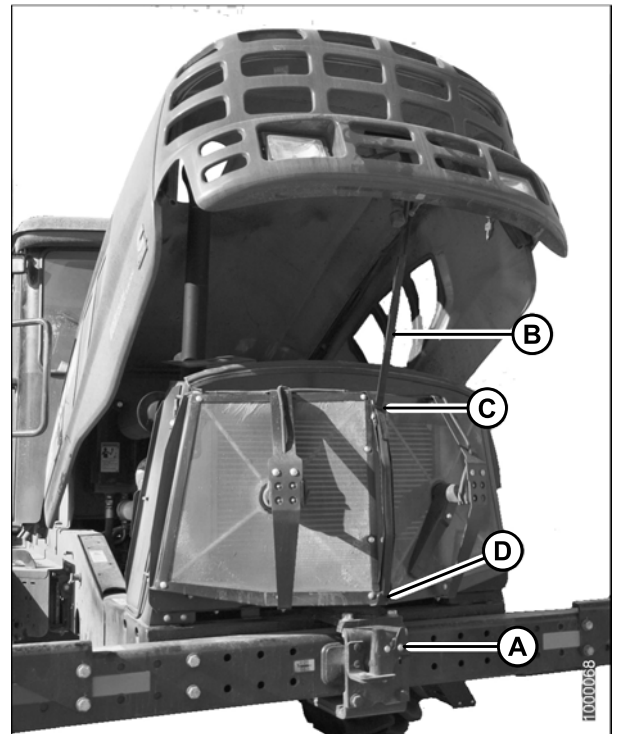


Figure 5.2: Hood Open (Lower Position)

5.2.3 Opening Hood (Highest Position)

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.

MAINTENANCE AND SERVICING

2. Locate latch (A) behind grill and lift to release hood.
3. Raise hood until strap (B), which should be looped under hooks (C) and (D), stops at approximately a 40° angle.
4. Remove strap from hook (C) and allow hood to rise slightly farther.
5. Remove strap from hook (D) and allow hood to rise fully to approximately 65°.

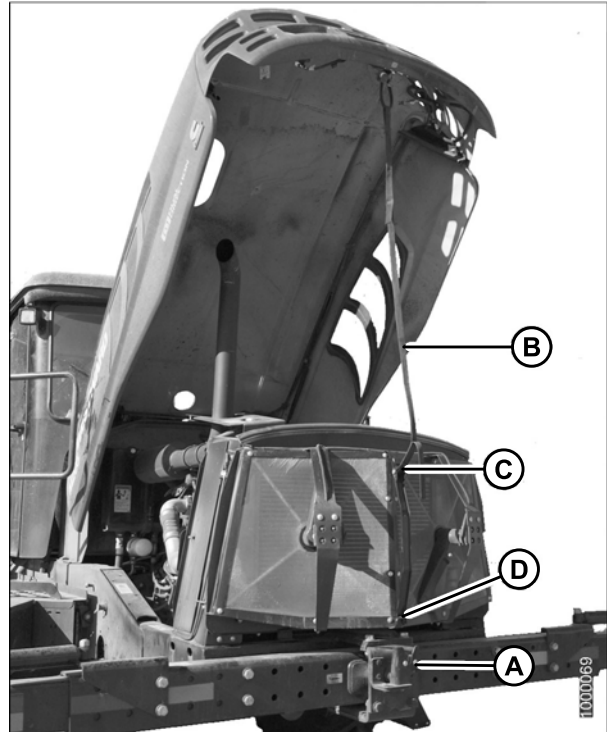


Figure 5.3: Hood Open (Highest Position)

5.2.4 Closing Hood (Highest Position)

1. Pull down on strap (B) and loop under lower hook (D).
2. Grasp the strap and loop under upper hook (C).

IMPORTANT:

Failure to hook strap may result in it becoming entangled with the screen cleaners or the latch.

3. Pull down on strap, grasp the hood when within reach, and lower until hood engages latch (A).

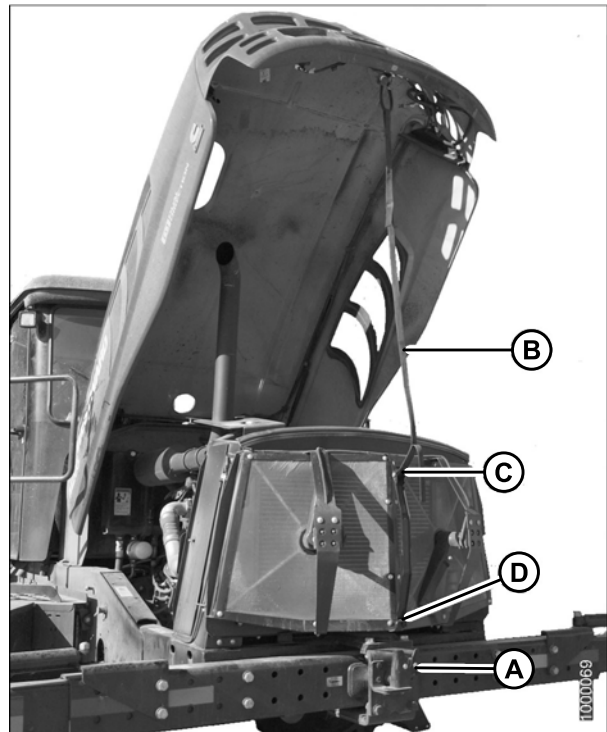


Figure 5.4: Hood Open (Highest Position)

5.3 Maintenance Platforms

Swing-away platforms and stairs are provided on both sides of the windrower for access to the operator's station and engine bay. The platforms can be swung away from the windrower to allow access to the hydraulics plumbing or battery.

The maintenance platforms have three positions:

- Closed position
- Open standard position
- Open major servicing position

5.3.1 Opening Platforms (Standard Position)

CAUTION

Do NOT stand on an unlocked platform. It is unstable and may cause you to fall.

NOTE:

This procedure describes how to open the cab-forward left platform (A). The same procedure is used for the right platform (B).

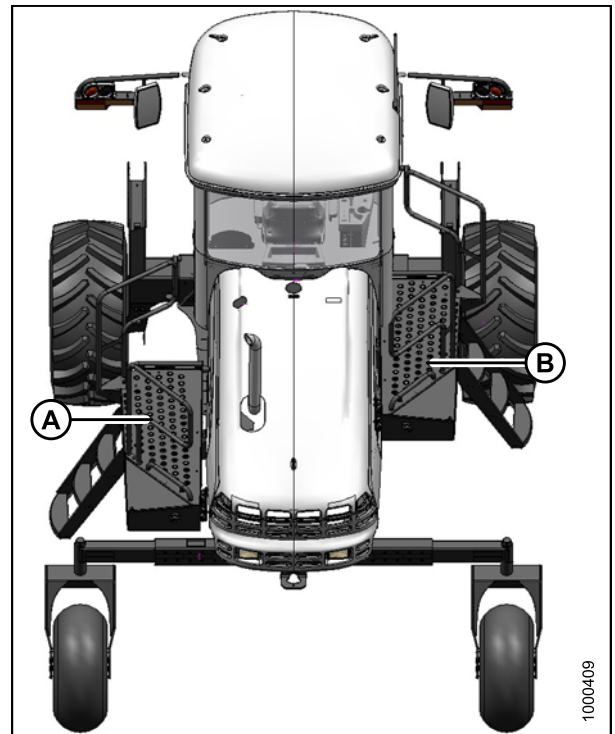


Figure 5.5: Platforms

MAINTENANCE AND SERVICING

1. Push latch (A) and pull platform (B) toward walking beam until it stops and latch engages in open position.

NOTE:

Ensure the platform is latched before using.

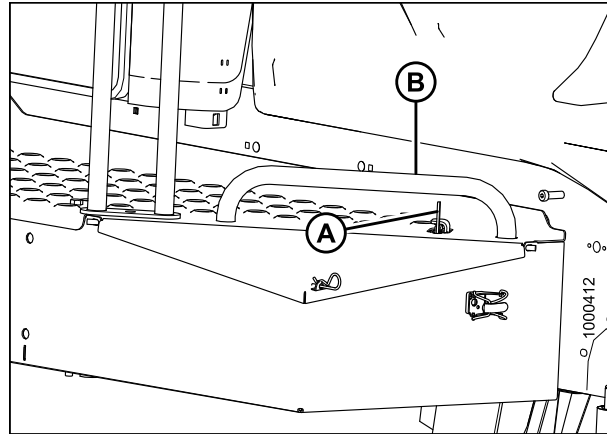


Figure 5.6: Platform Latch

5.3.2 Closing Platforms (Standard Position)

CAUTION

Do NOT stand on an unlocked platform. It is unstable and may cause you to fall.

NOTE:

This procedure describes how to open the cab-forward left platform (A). The same procedure is used for the right platform (B).

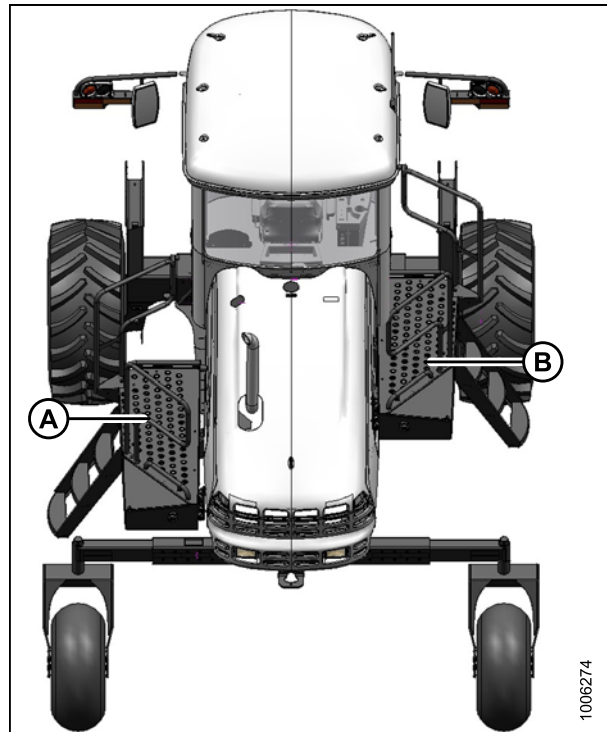


Figure 5.7: Platforms

MAINTENANCE AND SERVICING

1. If platform is latched in the open position, push latch (A) to unlock it.
2. Grasp handle (B) on platform and push forward until it stops and latch (A) engages.

NOTE:

Ensure the platform is latched properly before using.

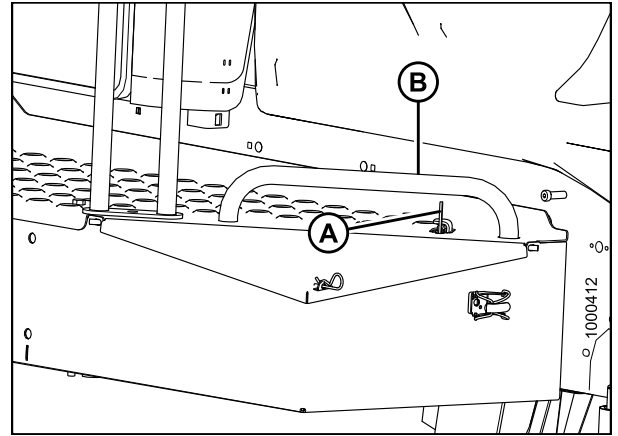


Figure 5.8: Platform Latch

5.3.3 Opening Platforms (Major Service Position)

To improve access to the hydraulics plumbing or battery, the platforms can be swung away from the windrower.

⚠ CAUTION

Do NOT stand on an unlocked platform. It is unstable and may cause you to fall.

NOTE:

This procedure is used for both platforms. Left-hand side is shown.

1. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 308.

IMPORTANT:

Failure to open hood will result in damage to the hood when the platform is moved.

MAINTENANCE AND SERVICING

NOTE:

This procedure describes how to open the cab-forward left platform (A); use the same procedure for the right platform (B).

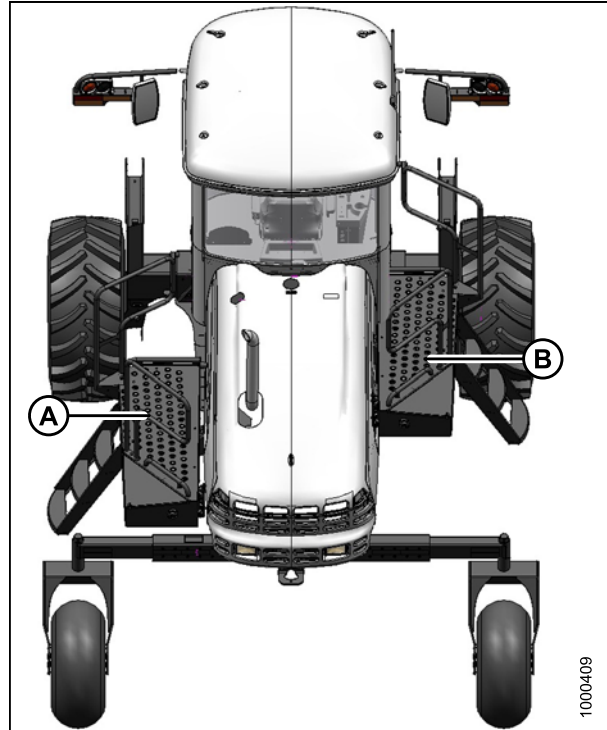


Figure 5.9: Platforms

2. Unlock latch (A) and move platform (B) toward open position. Do **NOT** lock in full aft position.

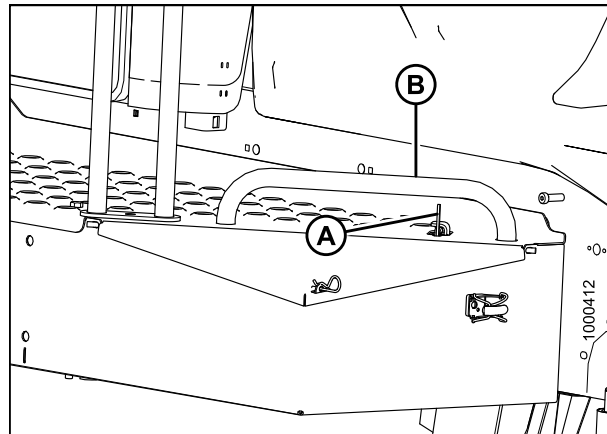


Figure 5.10: Platform Latch

MAINTENANCE AND SERVICING

3. Remove the nut and bolt that secure link (A) to the frame. Swing link (A) out of the way.
4. Pull the front (cab-forward) end of platform away from frame while moving it towards the walking beam. The aft corner of platform (B) should project slightly into the engine bay when the opening is optimum.

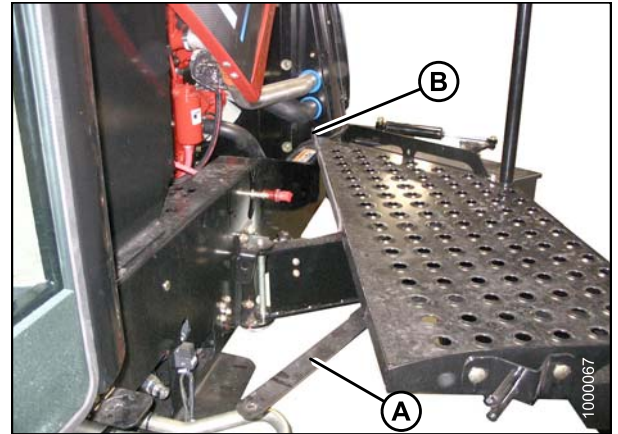


Figure 5.11: Platform

5.3.4 Closing Platforms (Major Service Position)

CAUTION

Do NOT stand on an unlocked platform. It is unstable and may cause you to fall.

NOTE:

This procedure is used for both platforms. Left-hand side is shown.

1. Swing link (A) all the way forward.
2. Push the front (cab-forward) end of platform towards the frame while moving the platform forward (cab-forward).
3. Position link (A) on bracket and install bolt and nut. Tighten enough so that link can still swivel on bracket.
4. Move platform (B) forward (cab-forward) until it stops and latch (A) engages.
5. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 309.

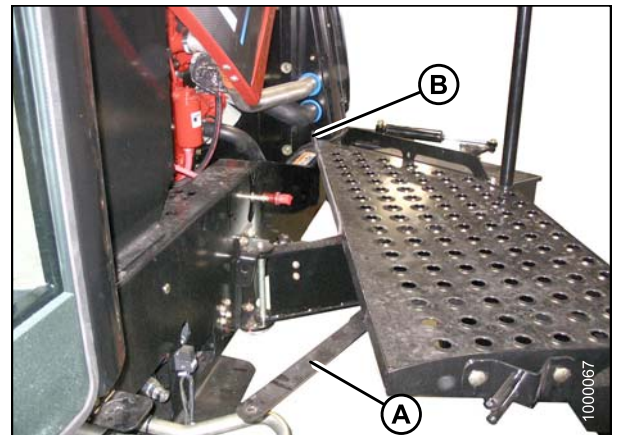


Figure 5.12: Platform

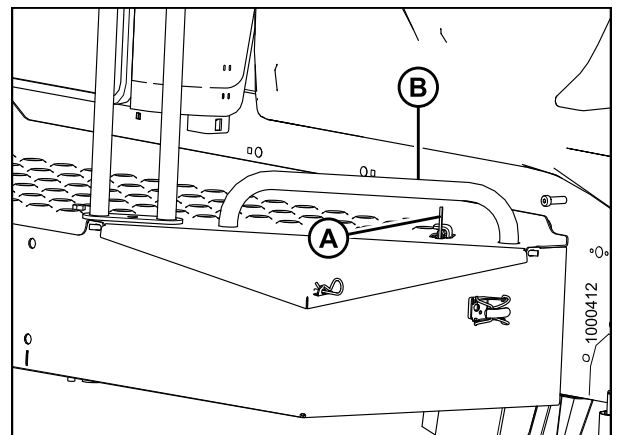


Figure 5.13: Platform Latch

5.4 Windrower Lubrication

WARNING

To avoid personal injury, before servicing windrower or opening drive covers, follow procedures in the SAFETY section.

The greasing points are marked on the machine by decals showing a grease gun and grease interval in hours of operation.

Log hours of operation and use the Maintenance Checklist provided to keep a record of scheduled maintenance. Refer to [5.12.1 Maintenance Schedule/Record, page 431](#).

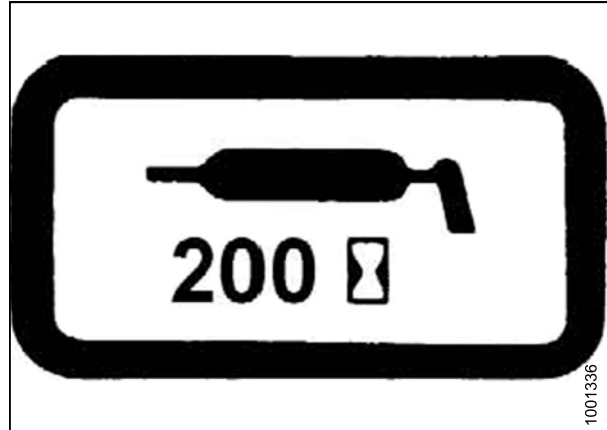


Figure 5.14: Lubrication Interval Decal

5.4.1 Lubricating the Windrower

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. To avoid injecting dirt and grit, wipe grease fitting with a clean cloth before greasing.
2. Inject grease through fitting with grease gun until grease overflows fitting, except where noted. Refer to [8.2.3 Lubricants, Fluids, and System Capacities, page 477](#).
3. Leave excess grease on fitting to keep out dirt.
4. Replace any loose or broken fittings immediately.
5. If fitting will **NOT** take grease, remove and clean thoroughly. Also clean lubricant passageway. Replace fitting if necessary.

5.4.2 Lubrication Points

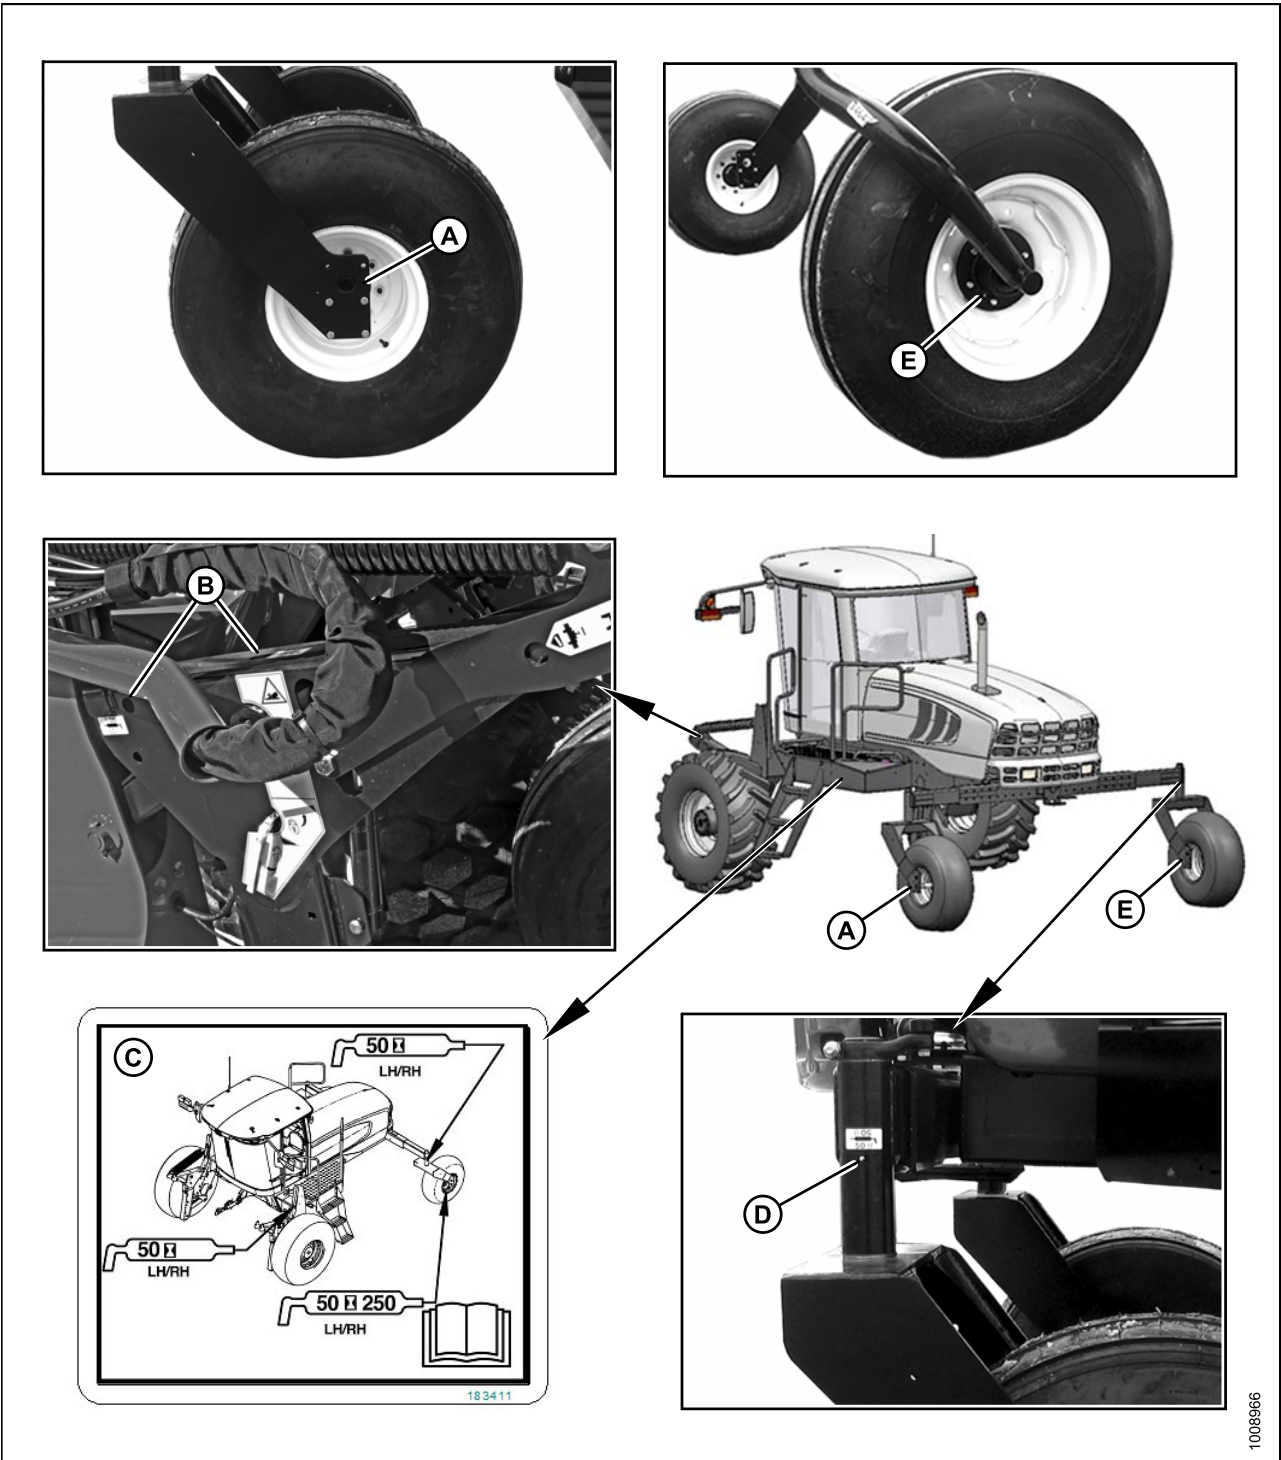


Figure 5.15: Lubrication Points

- A - Forked Caster Wheel Bearing (Two Places) (Outer – Both Wheels)
- B - Top-Link (2 Places) (Both Sides)
- C - Lubrication Decal (MD #183411)
- D - Caster Pivot (Both Sides)
- E - Forked/Formed Caster Wheel Bearing (Two Places) (Inner – Both Wheels) (50 Hrs/250 Hrs)

5.5 Operator's Station

5.5.1 Seat Belts

Seat belts are an important component of the windrower's operator safety system. The following checks and service points will ensure that seat belts are functioning properly.

- Keep sharp edges and items that can cause damage away from the belts.
- Check belts, buckles, retractors, tethers, slack take-up system, and mounting bolts for damage.
- Check that bolts are tight on the seat bracket or mounting.
- Replace all parts that have damage or wear.
- Replace belts that have cuts that can weaken the belt.
- Keep seat belts clean and dry. Clean only with a soap solution and warm water. Do **NOT** use bleach or dye on the belts, as this may weaken the material.

5.5.2 Safety Systems

Perform the following checks on the operator's presence and engine lock-out systems every year or every 500 hours—whichever occurs first.

Checking Operator Presence System

CAUTION

Check to be sure all bystanders have cleared the area.

1. With the windrower engine running, place the ground speed lever (GSL) in NEUTRAL and turn the steering wheel until it locks.
2. With everyone clear of the machine, engage header drive. Refer to [3.18.1 Header Drive Switch, page 69](#).
3. With header drive running, stand up out of the seat. In approximately 5 seconds, the header should shut off. If **NOT**, the Operator Presence System requires adjustment. See your MacDon Dealer.
4. To restart the header, move the HEADER DRIVE switch to OFF position and back to the ON position again.
5. With the engine running, position the GSL in NEUTRAL and in N-DETENT. Refer to [3.17 Windrower Controls, page 67](#).
6. Swivel the operator's station, but do **NOT** lock into position.
7. Move GSL out of N-DETENT. The engine should shut down and the display will flash LOCK SEAT BASE → CENTER STEERING WHEEL → NOT IN NEUTRAL.
8. Swivel and lock the operator's station and the display should return to normal. If the engine does **NOT** shut down, the seat position switches require adjustment. See your MacDon Dealer.
9. With the windrower moving at less than 8 km/h (5 mph), stand up out of the seat. The cab display module (CDM) will flash NO OPERATOR on the upper line and ENGINE SHUT DOWN 5...4...3...2...1...0 on the lower line accompanied by a steady tone. At 0, the engine shuts down. If the engine does **NOT** shut down, the Operator Presence System requires adjustment. See your MacDon Dealer.
10. With the windrower moving at more than 8 km/h (5 mph), stand up out of the seat. The CDM should beep once and display NO OPERATOR on the lower line. If **NOT**, the Operator Presence System requires adjustment. See your MacDon Dealer.

Checking Engine Interlock

CAUTION

Check to be sure all bystanders have cleared the area.

1. With the engine shut down and the header drive switch engaged, try to start the engine. If the engine turns over, the system requires adjustment. See your MacDon Dealer.
2. With the engine shut down, steering wheel **NOT** centered, and the ground speed lever (GSL) in NEUTRAL, but **NOT** in N-DETENT, try to start the engine. The cab display module (CDM) will flash NOT IN NEUTRAL on the display upper line and CENTER STEERING WHEEL on the lower line, accompanied by a short beep with each flash and the engine should **NOT** turn over. If the engine turns over, the system requires adjustment. See your MacDon Dealer.

A properly functioning system should operate as follows:

- The starter should engage **ONLY** when the GSL is in N-DETENT, steering wheel locked in the CENTER position and the header drive switch is in the OFF position.
- The brake should engage and the machine should **NOT** move after engine start-up, under the above conditions.
- The steering wheel should **NOT** lock with the engine running and the GSL out of the N-DETENT.
- The machine should **NOT** move with the engine running and with the steering wheel still centered, when the GSL is pulled straight out of N-DETENT (**NOT** in forward or reverse).

5.5.3 Ground Speed Lever (GSL) Adjustments

Adjusting Ground Speed Lever (GSL) Lateral Movement

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

The ground speed lever (GSL) should easily move into the N-DETENT by itself.

Adjust the lateral pivot resistance as follows:

1. Remove the five screws (A) securing control panel (B) to console, remove panel, and store in the tray.

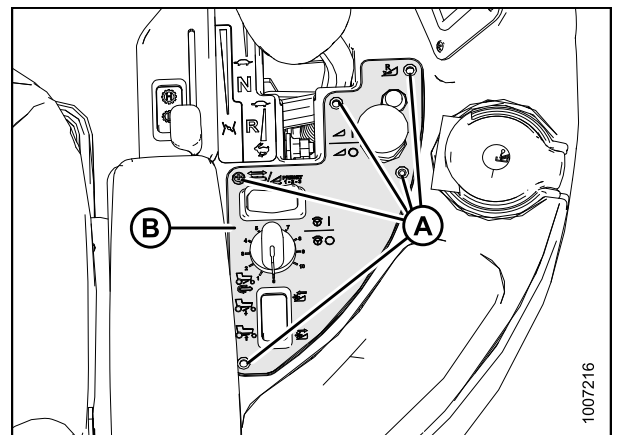


Figure 5.16: Control Panel

MAINTENANCE AND SERVICING

2. Back off the jam nut (A) and turn nut (B) to either tighten or loosen the pivot. The nut should be tightened to snug and then backed off 1/2 turn.
3. Tighten jam nut (A).
4. Check movement of GSL.

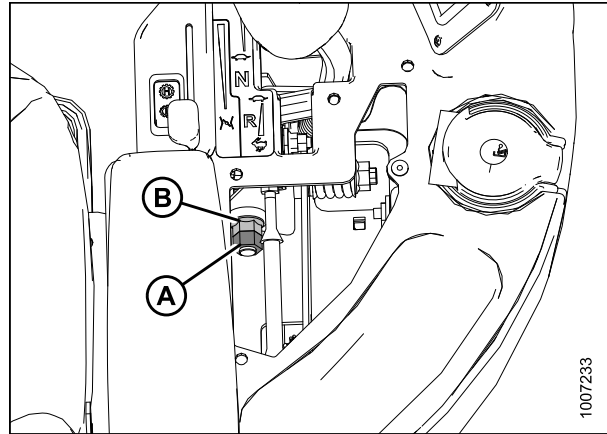


Figure 5.17: Control Panel Removed

5. Reinstall the control panel (B) with the five screws (A).

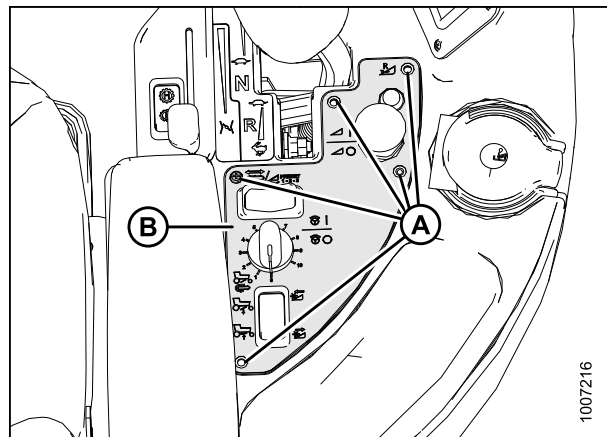


Figure 5.18: Control Panel

Adjusting Ground Speed Lever (GSL) Fore-Aft Movement

The GSL should remain as positioned by the Operator yet be movable without excessive force.

Adjust as follows:

1. Pull handle (A) toward the operator's seat and move the console fully forward to ease accessibility from the underside of the console.

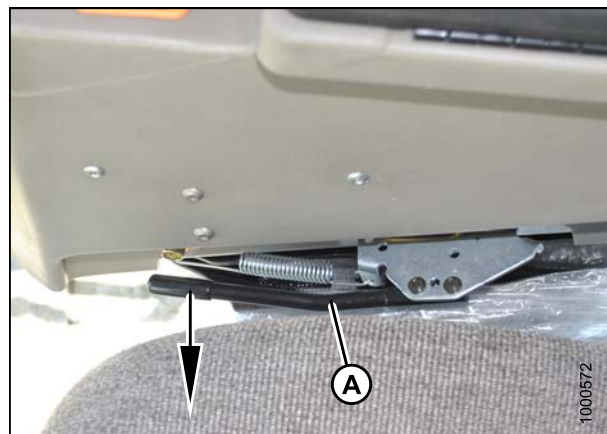


Figure 5.19: Seat Adjustment Handle

MAINTENANCE AND SERVICING

2. Set spring dimension (B) to 32 mm (1-1/4 in.).
3. To increase the pivot resistance, turn the nut (A) clockwise to compress the spring.
4. To decrease the resistance, turn the nut (A) counterclockwise to release the spring tension.

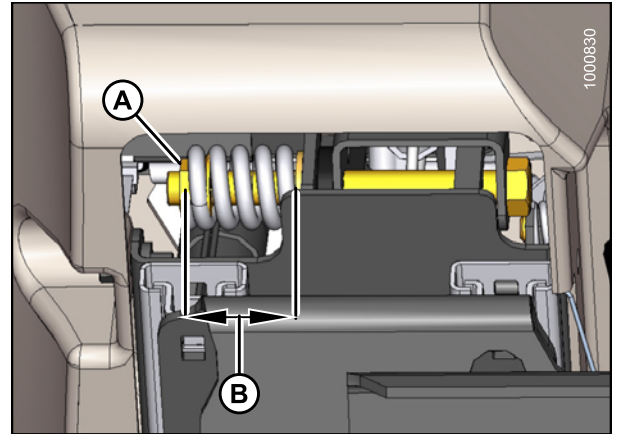


Figure 5.20: GSL Adjustment Spring

5.5.4 Steering Adjustments

Checking Steering Link Pivots

The following checks should be performed every year:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Place ground speed lever (GSL) (A) in N-DETENT, shut down engine, and remove key.



Figure 5.21: Operator Console

MAINTENANCE AND SERVICING

2. Check steering rod bolts (A) for looseness and ball joints (B) for any perceptible movement.

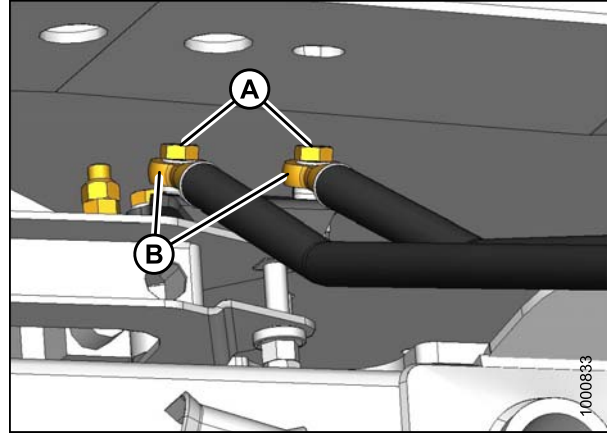


Figure 5.22: Steering Rods

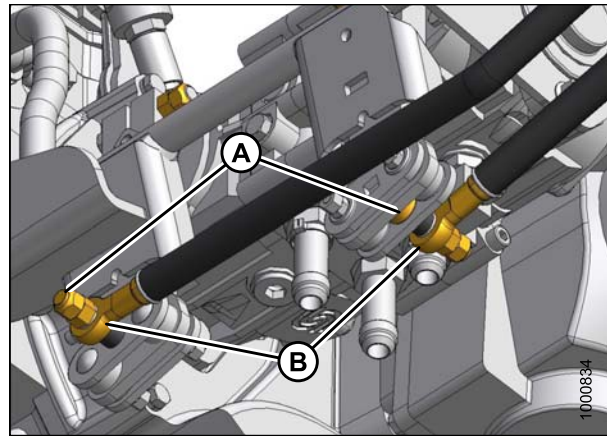


Figure 5.23: Steering Rods (Pump End)

3. Check steering link bolts (A) for looseness and ball joints (B) for any perceptible movement.

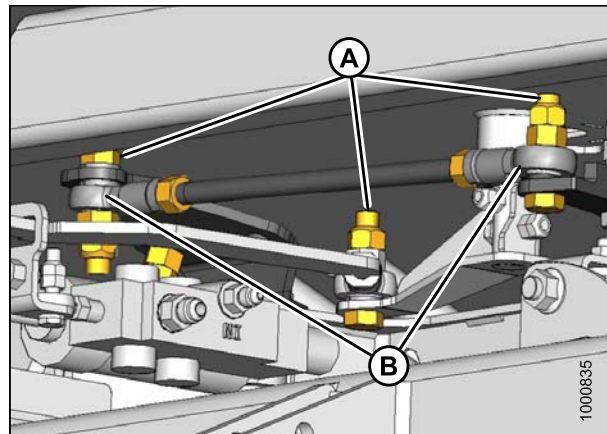


Figure 5.24: Steering Link

MAINTENANCE AND SERVICING

4. If bolts are loose:
 - a. Back off jam nut (A).
 - b. Tighten inside nut (B) to 95–108 N·m (70–80 ft·lbf).
 - c. Hold inside nut (B) and tighten jam nut (A) to 81–95 N·m (60–70 ft·lbf).

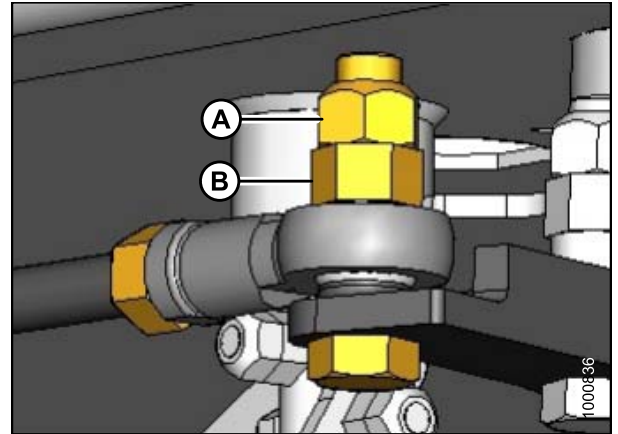


Figure 5.25: Steering Link

5. To replace loose steering link ball joints or steering rod ball joints, contact your MacDon Dealer.
6. After replacing parts or making adjustments, perform checks for Neutral Interlock and steering lock. Refer to [5.5.2 Safety Systems, page 318](#).

Checking and Adjusting Steering Chain Tension

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Check steering for binding or excessive play which may be the result of the steering chain being too tight or too loose. If the steering chain does **NOT** require adjustment, skip the following steps.
2. If the chain tension requires adjustment, swivel the operator's station to position steering column close to the door.
3. At the base of the steering column, check dimension (C) at spring. It should be 16 mm (5/8 in.). Adjust dimension as follows:
 - a. Loosen nut (A) and turn nut (B) to achieve 16 mm (5/8 in.) dimension (C).
 - b. Tighten nut (A) against nut (B) to secure position.
 - c. Check that steering chain is taut and steering shaft is free to rotate.

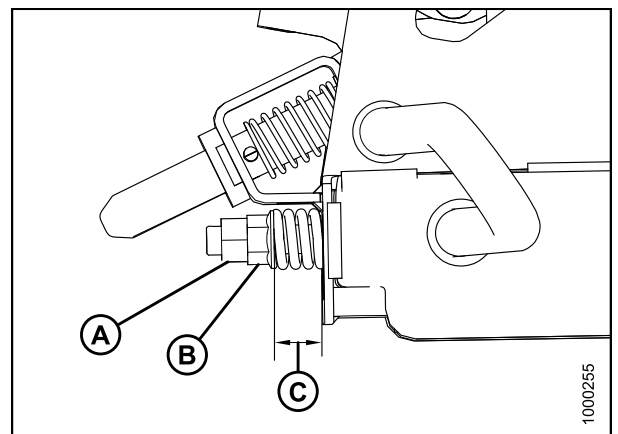


Figure 5.26: Steering Tension Adjuster

5.5.5 Park Brake

The brake is applied when the neutral interlock is fully engaged. To engage the interlock and the brake, the ground speed lever (GSL) must be in the N-DETENT position and the steering wheel centered. The parking brake symbol (refer to [Header Performance Tracker Symbols](#)) is displayed on the harvest performance tracker (HPT). To release the brake, start engine take GSL out of N-DETENT position.

5.6 Cab Suspension Limit Straps

The cab suspension limit straps are located next to the front suspension on both sides of the cab. These straps protect cab suspension components by preventing the cab shocks from fully extending. The straps do not require regular maintenance, but they should be inspected every 100 hours.

1. Inspect the material on straps (A) for fraying or tearing.
2. If material is torn or frayed, contact your MacDon Dealer for replacement straps.

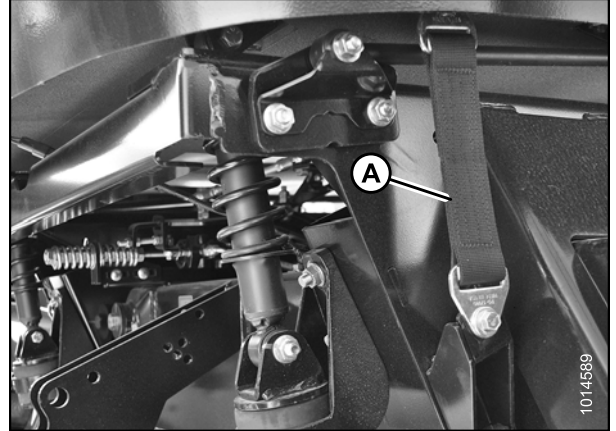


Figure 5.27: Cab Suspension

5.7 Heating, Ventilating, and Air Conditioning (HVAC) System

5.7.1 Fresh Air Intake Filter

The fresh air filter is located outside the right rear of the cab and should be serviced every 50 hours under normal conditions and more frequently in severe conditions.

Removing Fresh Air Filter

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Open the right cab-forward platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.
2. Rotate latch (A) and slide filter tray (B) out of the housing.

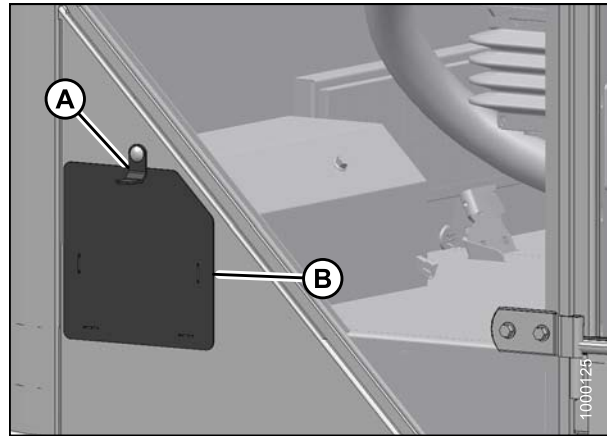


Figure 5.28: Filter Tray

3. Remove filter (A) from tray (B).

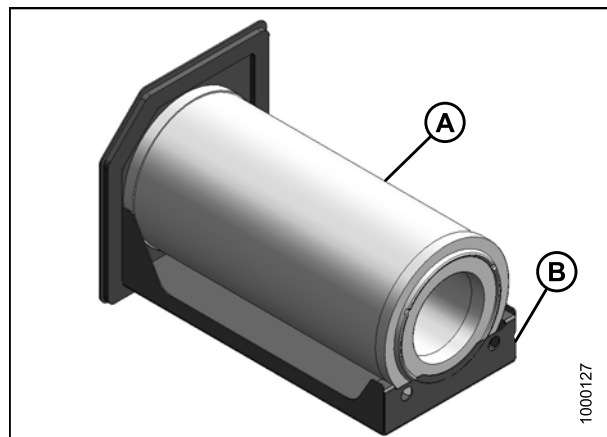


Figure 5.29: Fresh Air Filter

Inspecting and Cleaning Fresh Air Filter Element

1. Tap the sides of the filter element gently to loosen dirt. Do **NOT** tap element against a hard surface.
2. Using a dry element cleaner gun, clean element with compressed air.

MAINTENANCE AND SERVICING

IMPORTANT:

Air pressure must **NOT** exceed 414 kPa (60 psi). Do **NOT** direct air against outside of element, as dirt might be forced through to inside.

3. Hold the air nozzle next to the filter element's inner surface and move up and down pleats.
4. Repeat previous steps to remove additional dirt as required.
5. Hold a bright light inside the element and check carefully for holes. Discard any element that shows the slightest hole.
6. Check outer screen for dents. Vibration would quickly wear a hole in the filter.
7. Check filter gasket for cracks, tears, or other signs of damage. If gasket is damaged or missing, replace element.

Installing Fresh Air Filter

Refer to [8.2.4 Filter Part Numbers, page 478](#) for part number.

1. Clean tray (B) and interior of filter housing.
2. Place filter (A) onto tray (B).

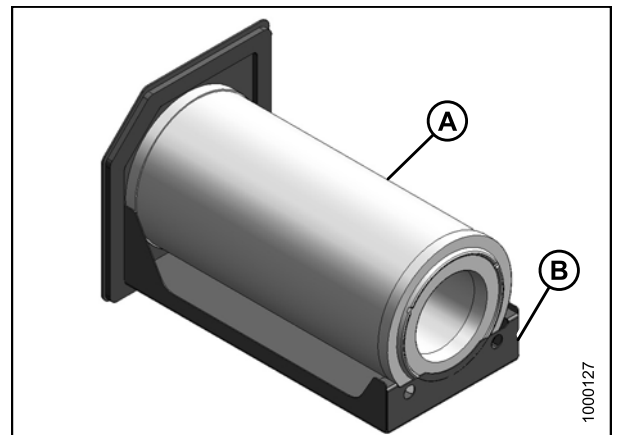


Figure 5.30: Fresh Air Filter

3. Slide filter tray (B) into housing.

NOTE:

If necessary, move the Global Positioning System (GPS) wiring harnesses to the left (engine) side of the housing before inserting the filter tray.

4. Close and latch housing door (A).

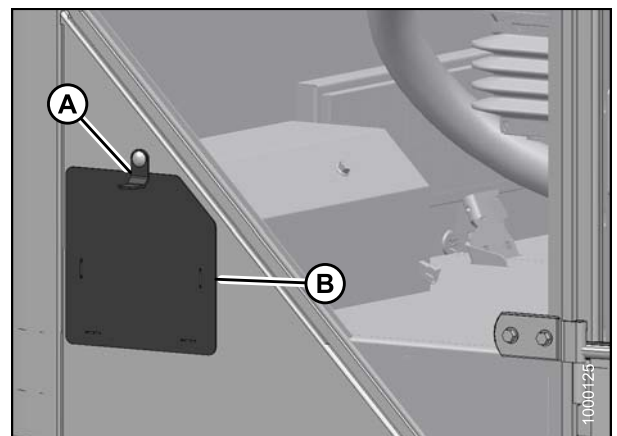


Figure 5.31: Cab Fresh Air Filter Access

5.7.2 Return Air Cleaner/Filter

The return air cleaner/filter is located behind the operator's seat on the cab wall and should be serviced every 100 hours.

Servicing the Return Air Cleaner/Filter

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

If replacing the return air filter, refer to [8.2.4 Filter Part Numbers, page 478](#) for the part number.

1. Unscrew the two knobs (A) attaching cover and filter to cab wall, and remove the cover and filter assembly (B).

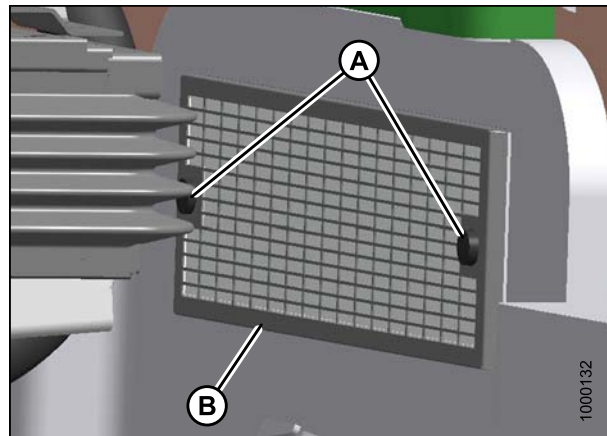


Figure 5.32: Return Air Filter

2. Separate the filter (B) from the cover (A).
3. Clean or replace the filter. If cleaning filter, refer to [Cleaning Return Air Cleaner/Filter, page 329](#).
4. Assemble the cleaner (B) and cover (A), and position on cab wall over opening.

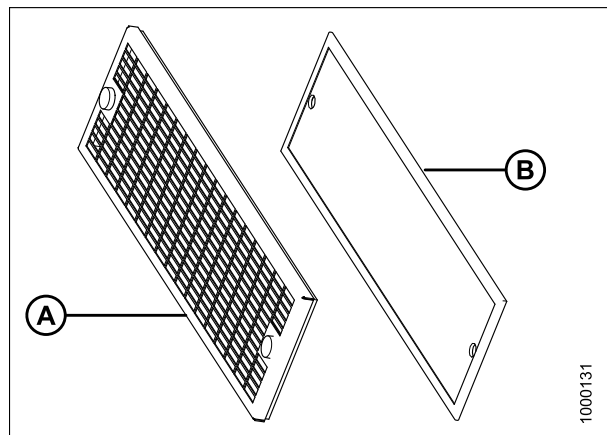


Figure 5.33: Return Air Filter

MAINTENANCE AND SERVICING

- Secure filter assembly (B) to cab wall with knobs (A).

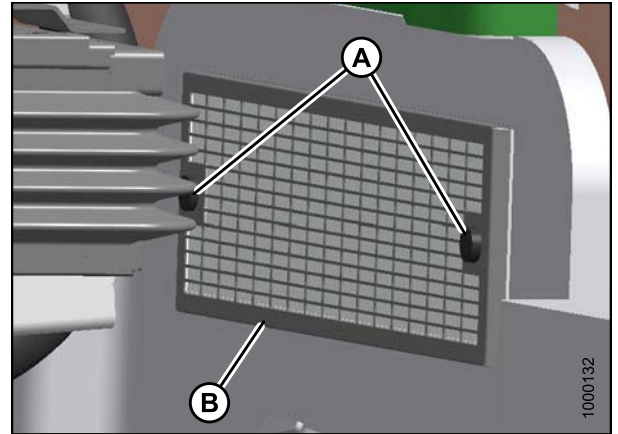


Figure 5.34: Return Air Filter

Cleaning Return Air Cleaner/Filter

Clean the electrostatic filter as follows:

- Mix a solution of warm water and detergent in a suitable container so that the filter (B) can soak for a few minutes.
- Agitate to flush out the dirt.
- Rinse with clean water, and then dry with compressed air.
- Inspect filter for damage, separation, and holes. Replace if damaged.

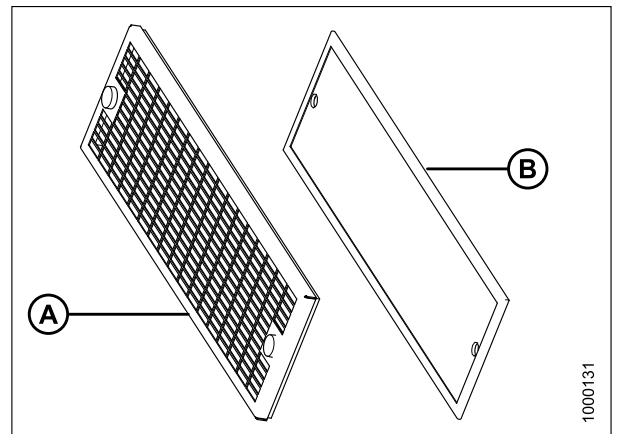


Figure 5.35: Return Air Filter

5.7.3 Air Conditioning Condenser

The air conditioning condenser should be cleaned daily with compressed air. More frequent cleaning may be necessary in severe conditions.

Cleaning the condenser can be done at the same time as the radiator, oil cooler, and charge air cooler. Refer to [Maintaining Engine Cooling Box, page 359](#).

5.7.4 Air Conditioning (A/C) Evaporator Core

The A/C evaporator should be checked annually for cleanliness. If the A/C system produces insufficient cooling, a possible cause is clogged evaporator fins. Fins will clog up from the side, opposite the blowers. The evaporator is located inside the heating air conditioning unit under the cab.

Removing Air Conditioning (A/C) Cover

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Loosen the clamps (A) on the two drain hoses and pull the hoses off the A/C drain tubes.
3. Remove the eight screws (A) that attach the cover (B) and remove the cover.

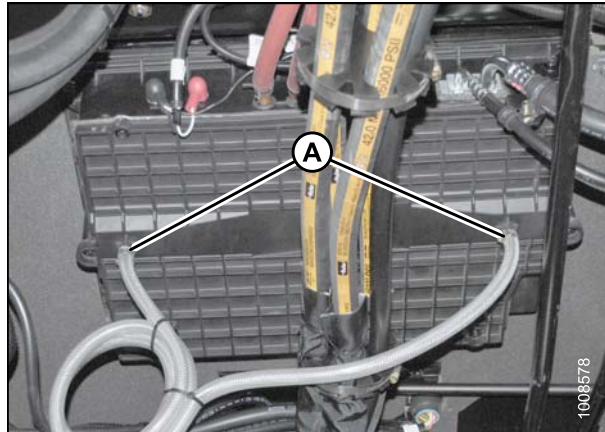


Figure 5.36: HVAC System: 2015 and Forward

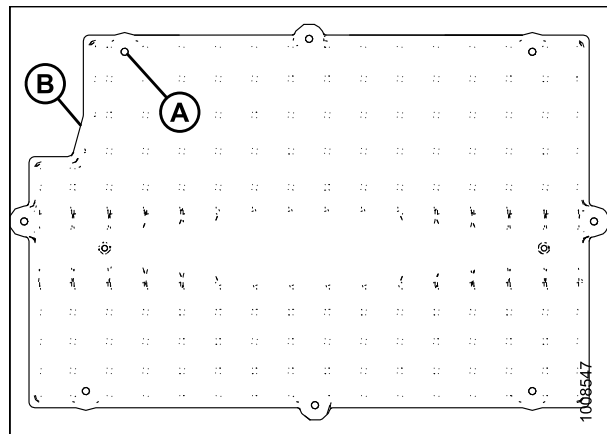


Figure 5.37: A/C Cover

Cleaning Air Conditioning (A/C) Evaporator Core

⚠ WARNING

To avoid cuts from evaporator fins, do NOT use bare hands to brush away clogs.

1. Use a vacuum cleaner or compressed air to remove dirt from inside the unit.
2. Blow compressed air through the evaporator fins from the blower side (A) first as shown. Direct the air straight into the evaporator to prevent fin damage. A nozzle extension makes this procedure easier.
3. Repeat the previous step from the side (B) opposite the blowers.

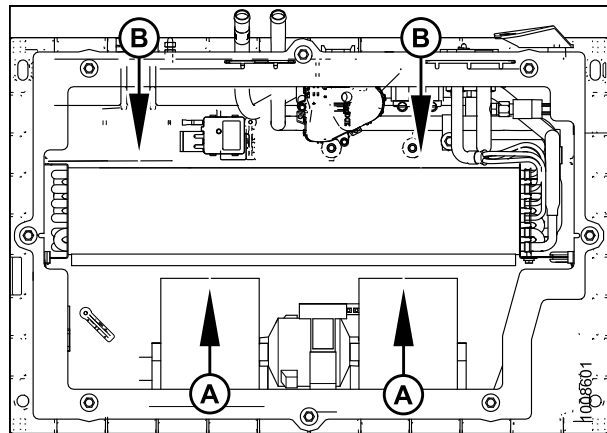


Figure 5.38: Evaporator Core

MAINTENANCE AND SERVICING

4. If you cannot feel the compressed air blowing through the evaporator core, proceed as follows:
 - a. Protect the blower motor (A) from water.
 - b. Soak the evaporator core (B) with warm water using a low pressure hose. Let soak for several minutes.
 - c. Blow compressed air through the core from the blower side (C).
 - d. Repeat the soaking procedure until air blows through the evaporator freely.

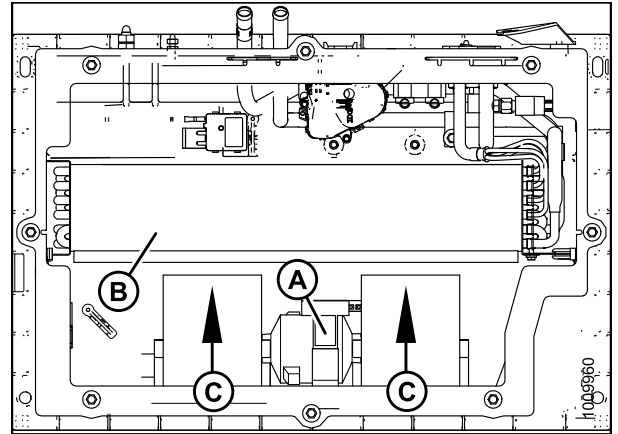


Figure 5.39: Evaporator Core

Installing Air Conditioning (A/C) Cover

1. Straighten any bent fins.
2. Position cover (B) and attach with eight screws (A).

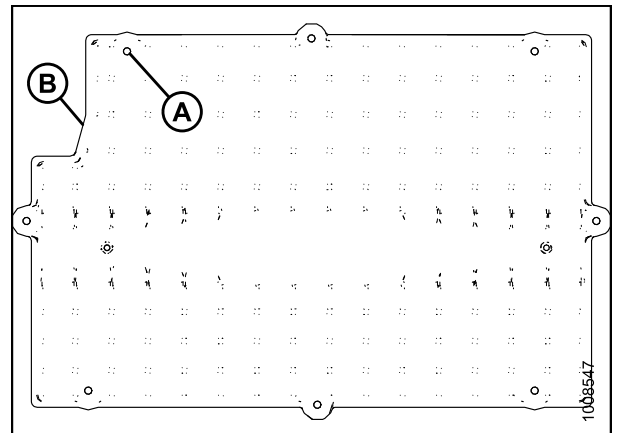


Figure 5.40: A/C Cover

3. Reattach drain hoses to drain tubes and secure with hose clamps (A).

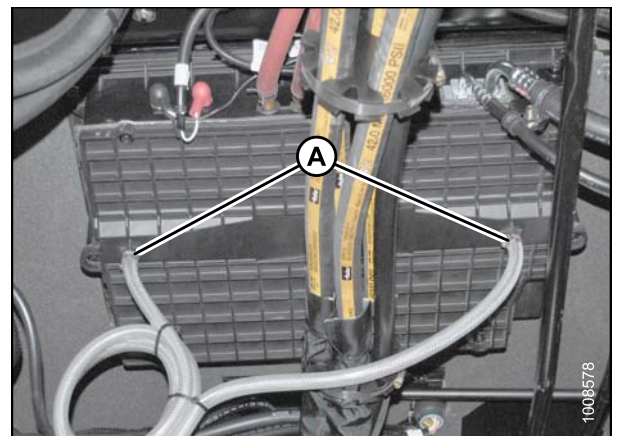


Figure 5.41: A/C Cover

5.7.5 Air Conditioning (A/C) Compressor

The compressor is protected from excessively low suction and high discharge pressures by two switches that shut down the compressor to prevent damage to the system. These switches do not require regular servicing or maintenance. Contact your MacDon Dealer if you suspect a problem with the switches.

The low pressure switch

The low pressure switch is normally closed when there is sufficient refrigerant in the system and the pressure is above 234 kPa (34 psi). The system remains pressurized at about 414–483 kPa (60–70 psi) with the compressor off. When the A/C system is turned on, the compressor starts because the system pressure is above 234 kPa (34 psi). As the system gets colder, the suction pressure (low side) drops. At 24–86 kPa (3.5–12.5 psi) (for 2014 and prior: 14–55 kPa [2–8 psi]), the switch opens and shuts down the compressor. When the pressure rises above 172 kPa (25 psi), the switch closes and the compressor restarts. The low pressure switch is located at the outlet of the evaporator (under cab in the A/C box).

The high pressure switch

The high pressure switch is normally closed when there is sufficient refrigerant in the system. The system remains pressurized at about 414–483 kPa (60–70 psi) with the compressor off. If the pressure exceeds 2482–2620 kPa (360–380 psi) during operation, the valve opens. It will close when pressure falls below 1517–1931 kPa (220–280 psi). The high pressure switch is located on the receiver drier (right cab-forward frame rail, behind the fuse panel).

If the compressor cycles rapidly due to rapid pressure changes, the cab display module (CDM) displays a warning CHECK A/C SYSTEM. Contact your Dealer.

Servicing the Air Conditioning Compressor

Refer to [Replacing Air Conditioner \(A/C\) Compressor Belt, page 369](#) for belt replacement procedure.

See your MacDon Dealer for all other servicing procedures.

5.8 Engine

CAUTION

- NEVER operate engine in a closed building. Proper ventilation is required to avoid exhaust gas hazards.
- Keep the engine clean. Straw and chaff on a hot engine are a fire hazard.
- NEVER use gasoline, naphtha, or any other volatile material for cleaning purposes. These materials are toxic and/or flammable.

5.8.1 General Engine Inspection

Engine inspection should be performed by your MacDon Dealer.

Refer to your engine manual for further information. (Owner's Manual QSB 4.5 and QSB 6.7 Engine Cummins #4021531 are supplied with your machine).

5.8.2 Turning the Engine Manually

To manually turn the engine with the flywheel, an access hole is provided on the left cab-forward side for a barring tool that is available from Cummins.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop engine and remove ignition key.
2. Open the hood to the lowest position. Refer to [5.2.1 Opening Hood \(Lower Position\), page 308](#).
3. Open left cab-forward side platform. Refer to [5.3.1 Opening Platforms \(Standard Position\), page 311](#).

MAINTENANCE AND SERVICING

4. Remove positive (red) cables (A) from battery posts first, then remove negative (black) cables (B) from both battery posts.

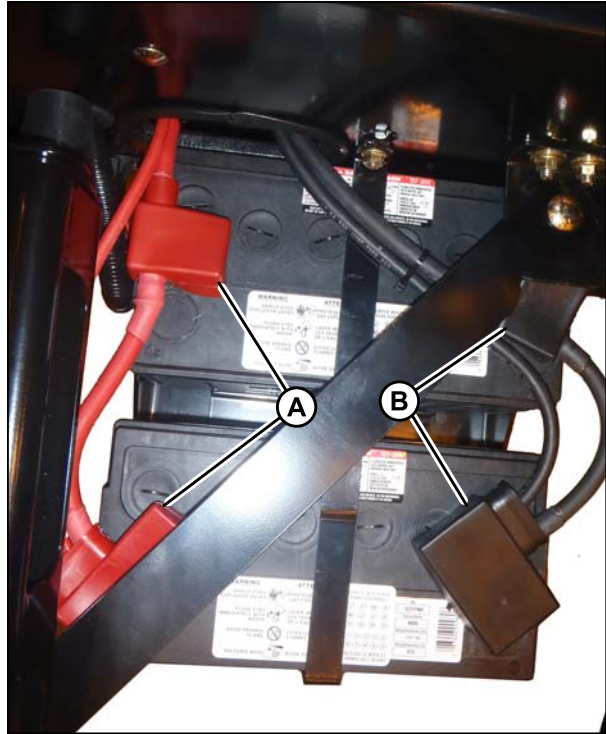


Figure 5.42: Battery Terminal Location

IMPORTANT:

Clean the area around the plastic cap to ensure nothing falls into gearbox oil reservoir.

5. Clean the area around the plastic cap on access hole (A). Remove the cap.
6. Insert the barring tool (B) into the flywheel housing until it engages the ring gear.
7. Attach a 1/2 in. square drive ratchet or breaker bar and turn.
8. Remove barring tool (B) and clean oil from around access hole.
9. Clean plastic cap and reinstall in access hole (A) with silicone sealant.

IMPORTANT:

BATTERY IS NEGATIVE GROUNDED. Always connect starter cable to the positive (+) terminal of battery and battery ground cable to negative (-) terminal of battery. Reversed polarity in battery or alternator may result in permanent damage to electrical system.

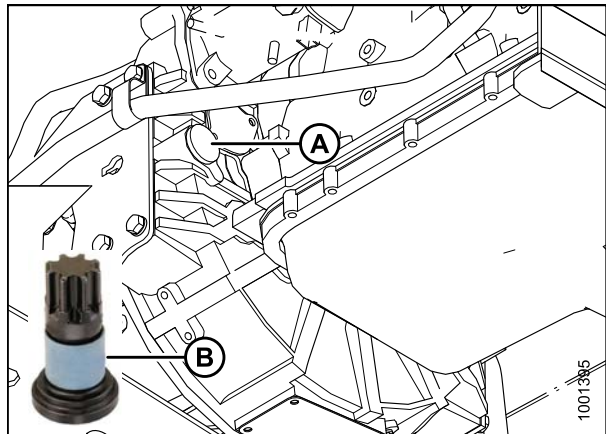


Figure 5.43: Access Hole Location for Barring Tool

MAINTENANCE AND SERVICING

10. Attach negative (black) cables (B) to negative posts on batteries, and tighten clamps. Then attach positive (red) cables (A) to positive post on batteries and tighten clamps.
11. Position plastic covers onto clamps.
12. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 309.
13. Close platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 312.

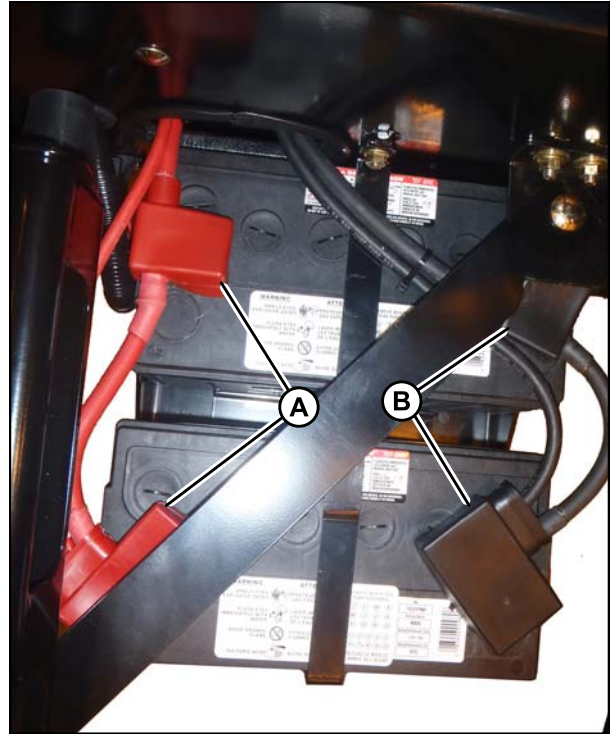


Figure 5.44: Battery Terminal Location

5.8.3 Engine Oil

Checking Engine Oil Level

Check engine oil level daily (every 10 hours) and watch for any signs of leakage.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

NOTE:

During the break-in period, a higher than usual oil consumption should be considered normal.

1. Open the hood to the lowest position. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 308.
2. Operate the engine at low idle and check for leaks at the filter and drain plug.
3. Stop the engine and remove the key. Wait about five minutes.

MAINTENANCE AND SERVICING

4. Remove the dipstick (A) by turning it counterclockwise to unlock.
5. Wipe the dipstick clean and reinsert it into the engine.
6. Remove the dipstick again and check the oil level.

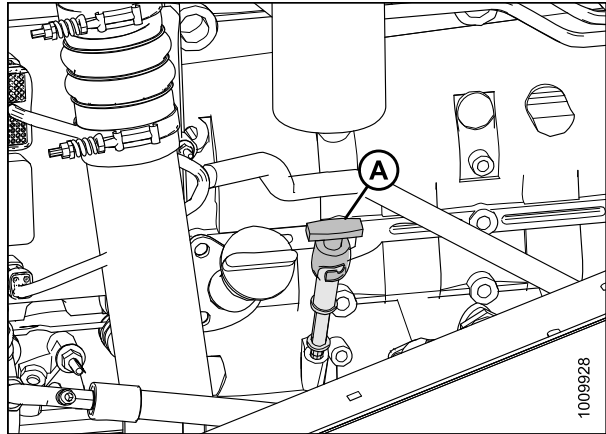


Figure 5.45: Engine Oil Level

7. Oil level should be maintained between LOW and HIGH. If level is below LOW mark, 1.9 liters (2 US quarts) will raise the level from LOW to HIGH.

NOTE:

If you need to add oil, refer to [Adding Engine Oil, page 337](#).

8. Replace dipstick and turn it clockwise to lock.
9. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\), page 309](#).

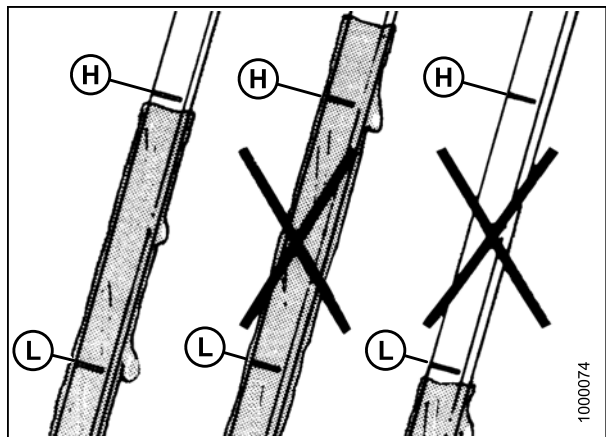


Figure 5.46: Engine Oil Level

Changing Engine Oil

Refer to the following procedures:

- [Checking Engine Oil Level, page 335](#)
- [Draining Engine Oil, page 336](#)
- [Replacing Engine Oil Filter, page 337](#)
- [Adding Engine Oil, page 337](#)

Draining Engine Oil

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

The engine should be warm prior to changing the oil.

1. Stop the engine and remove the key.
2. Place a drain pan with a capacity of about 24 liters (6 US gallons) under the engine oil drain.

MAINTENANCE AND SERVICING

3. Remove oil drain plug (A) and allow the oil to completely finish draining.
4. Replace drain plug (A).
5. Check the condition of the used oil. If either of the following is evident, have your Dealer correct the problem before starting the engine:
 - Thin black oil indicates fuel dilution
 - Milky discoloration indicates coolant dilution
6. Properly dispose of used oil.

IMPORTANT:

Do NOT run engine without oil in the crankcase. Refer to [Adding Engine Oil, page 337](#).

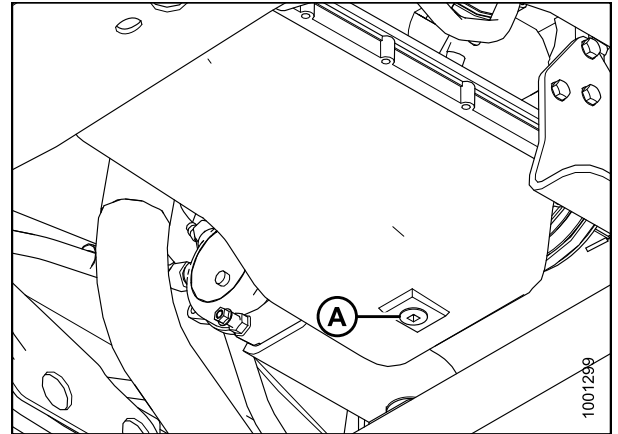


Figure 5.47: Engine Oil Drain Plug

Replacing Engine Oil Filter

NOTE:

Replace oil filter each time engine oil is changed.

1. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\), page 308](#).
2. Clean around the filter head (A).
3. Remove filter (B).
4. Clean gasket mating surface.
5. Apply a thin film of clean oil to the gasket on the new filter. Refer to [8.2.4 Filter Part Numbers, page 478](#) for recommended oil filter to use.
6. Screw the new filter onto the filter mount until the gasket contacts the filter head.
7. Tighten the filter an additional 1/2 to 3/4 turn by hand.

IMPORTANT:

Do NOT use a filter wrench to install the oil filter. Overtightening can damage the gasket and filter.

8. Properly dispose of used oil filter.

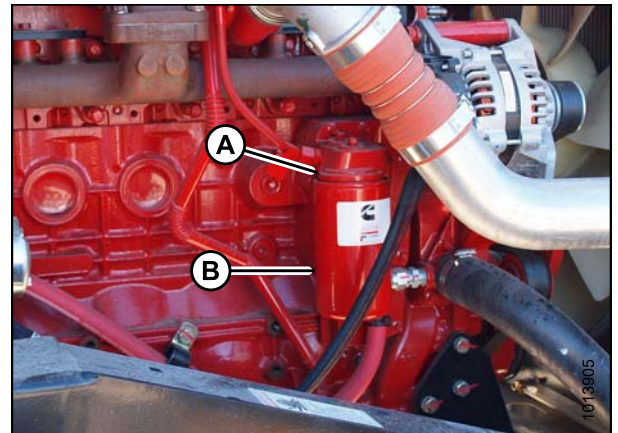


Figure 5.48: Engine Oil Filter

Adding Engine Oil

DANGER

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Stop the engine and remove the key. Wait about five minutes.
2. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\), page 308](#).

MAINTENANCE AND SERVICING

3. Remove filler cap (A) by turning it counterclockwise.
4. Carefully pour in the new oil. Use a funnel to avoid spillage. Refer to [8.2.3 Lubricants, Fluids, and System Capacities](#), page 477 for oil specifications.

CAUTION

Do **NOT** fill above the **HIGH** mark.

5. Replace oil filler cap (A) and turn it clockwise until snug.
6. Check the oil level. Refer to [Checking Engine Oil Level](#), page 335.
7. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 309.

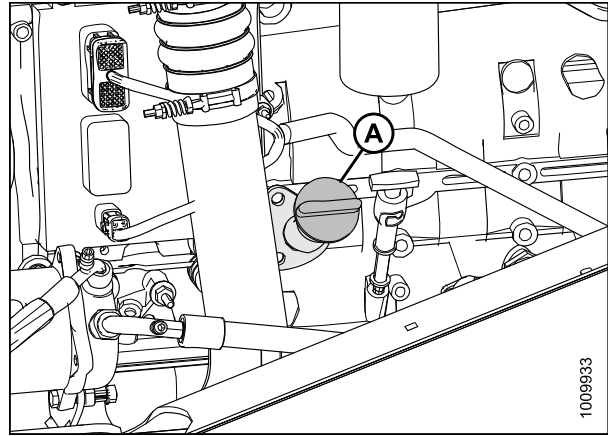


Figure 5.49: Oil Filler Cap

5.8.4 Air Intake System

IMPORTANT:

Do **NOT** run engine with air cleaner disconnected or disassembled.

Engine intake air is drawn through a duct (A) from the cooling box that precleans the air and then through a dual element filter (B).

The air cleaner canister is equipped with an aspirator (C) that removes dust continuously from the air cleaner housing.

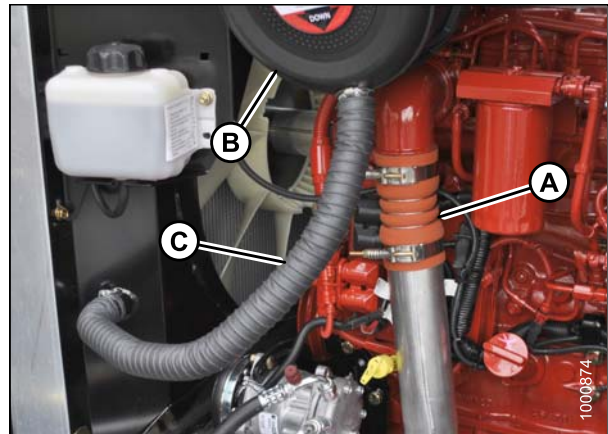


Figure 5.50: Air Intake System

MAINTENANCE AND SERVICING

The air cleaner is also equipped with a restriction switch (A) that activates a warning display and tone on the cab display module (CDM) when the filter system requires servicing.

After servicing the filter, the restriction switch must be reset by pushing the button at the end of the switch.

IMPORTANT:

- Do **NOT** run engine with air cleaner disconnected or disassembled.
- Over-servicing the filter element increases the risk of dirt being ingested by the engine and severely damaging the engine.
- Filter servicing should only be performed when the CDM indicates ENGINE AIR FILTER or at the specified interval. Refer to [5.12.1 Maintenance Schedule/Record, page 431](#).

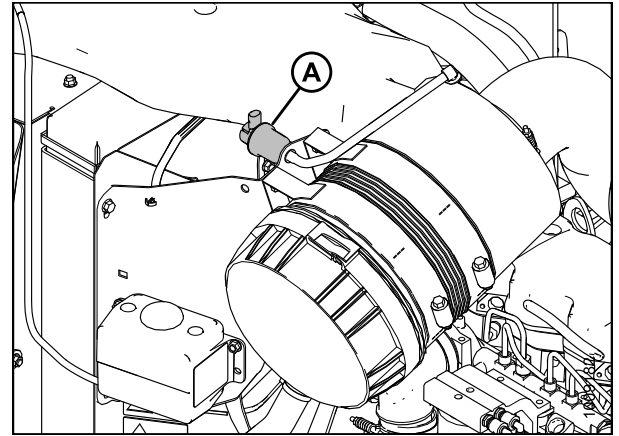


Figure 5.51: Air Restriction Indicator

Air Filter Restriction Indicator

During engine operation, the indicator shows the vacuum in inches of H₂O and kPa. As dirt accumulates in the filter, the restriction increases.

When the indicator gauge reaches the CHANGE FILTER mark (A), 2.5 inches of H₂O (6.20 kPa), a warning tone will sound and the cab display module (CDM) will indicate the filter requires servicing.

IMPORTANT:

Over-servicing the filter element increases the risk of dirt being ingested by the engine, causing severe damage.

Service air filter **ONLY IF** indicator reaches the CHANGE FILTER mark (A) or 2.5 inches H₂O (6.20 kPa).

IMPORTANT:

After servicing filters, press the RESET button on the end of the indicator (B).

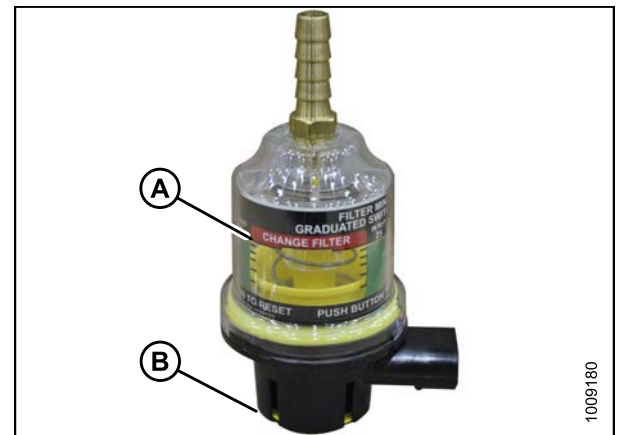


Figure 5.52: Air Filter Restriction Indicator

Removing Primary Air Filter

1. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 308.
2. Open the maintenance platform on right cab-forward side. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.
3. Slightly lift catch (A) at side of end cap (B) and rotate end cap counterclockwise until it stops.

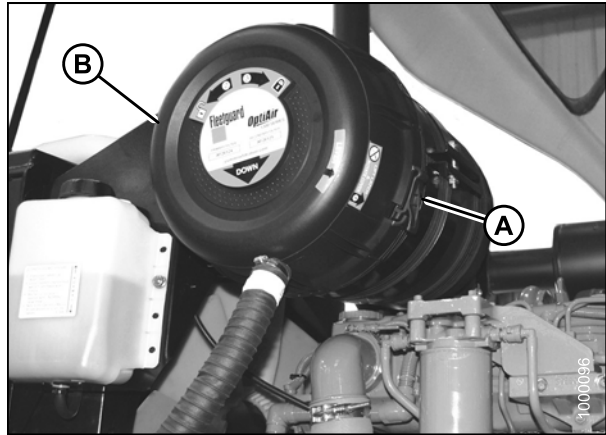


Figure 5.53: Engine Air Cleaner

4. Make sure arrow (A) lines up with UNLOCK symbol on end cap.
5. Pull off the end cap.

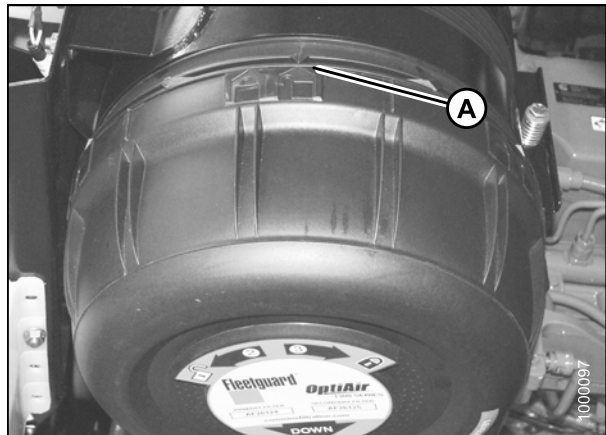


Figure 5.54: Engine Air Cleaner

6. Check the aspirator duct opening (A) for obstructions or damage. Clean if necessary.

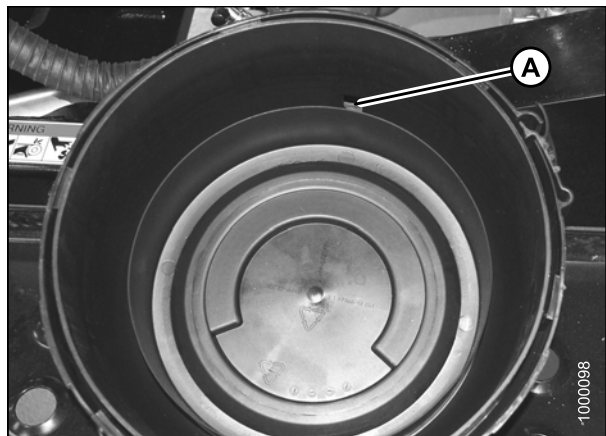


Figure 5.55: Engine Air Cleaner Housing

MAINTENANCE AND SERVICING

- Pull out the primary filter element (A).

IMPORTANT:

Be extremely careful with the dirty element until it is completely out of the housing. If you accidentally bump the element while it is still inside the filter housing, dirt and dust may contaminate the clean side of the housing.

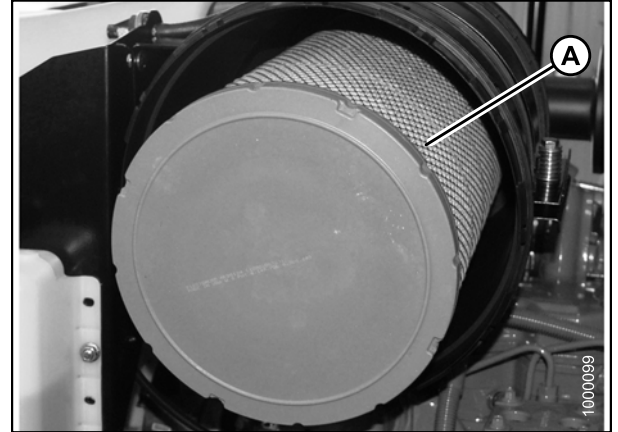


Figure 5.56: Engine Air Cleaner Primary Filter Element

- Replace the secondary air filter (A) every year or after every third primary filter change (even if it appears clean).
- If the secondary air filter is dirty, inspect the primary filter and the filter canister as follows to determine the reason for contamination:
 - Examine the filter canister for cracks and replace, if necessary.
 - Ensure filter sealing surfaces are soft, flexible, and sealing properly. Hard seals may allow debris through to the secondary filter.
 - Ensure canister retaining latches are secure.

IMPORTANT:

- Do **NOT** remove the secondary filter element unless it needs replacing.
 - Do **NOT** attempt to clean the secondary element (A). It is replace only.
- Clean the inside of the canister housing and end cap carefully. Dirt left in the air cleaner housing may be harmful to your engine.
 - Remove hardened dirt ridges wherever filter gaskets contact the cleaner housing.
 - Clean the gasket sealing surfaces of the housing. An improper gasket seal is one of the most common causes of engine contamination.
 - Wipe every surface clean with a clean, water-dampened cloth.
 - Check the housing visually to make sure it is clean before putting in a new filter element.
 - Check for uneven dirt patterns on old element. It is a valuable clue to potential dust leakage or gasket sealing problems. A pattern on the element clean side is a sign that the old element was **NOT** firmly sealed or that a dust leak exists.
 - Press on the fresh gasket to see if it springs back.

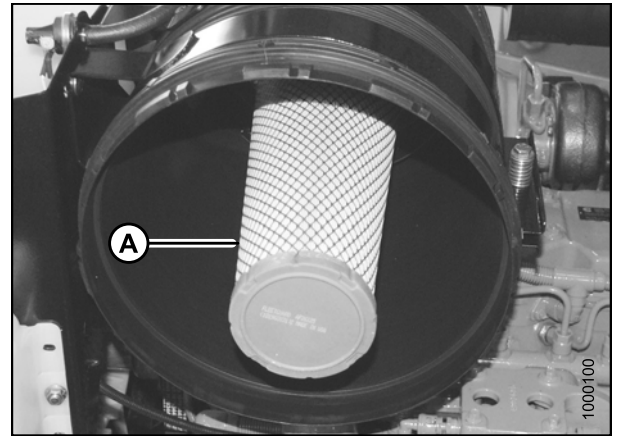


Figure 5.57: Engine Air Cleaner Secondary Filter Element

MAINTENANCE AND SERVICING

- Check the gasket for correct sizing. On a radial seal element, the gasket surface is the inside diameter of the open end cap.
- Make sure the gasket is seating evenly. If the gasket is not forming a perfect seal, you will **NOT** have protection.
- Ensure the sealing surface in the housing is clean, and the filter element is the correct model number. It may be too short for the housing.
- Identify and rectify the cause of any leaks before replacing the filter element.

12. If required, also change the secondary filter. Refer to [Removing and Installing Secondary Air Filter, page 344](#).

Installing Primary Air Filter

NOTE:

If replacing air filter, refer to [8.2.4 Filter Part Numbers, page 478](#).

1. Insert new primary filter element (A) into canister over secondary element, and push into place, ensuring that element is firmly seated in canister.
2. Align arrow (A) to UNLOCK position on end cap, and push end cap fully onto housing.
3. Rotate end cap clockwise until catch (A) engages housing to prevent end cap from turning.

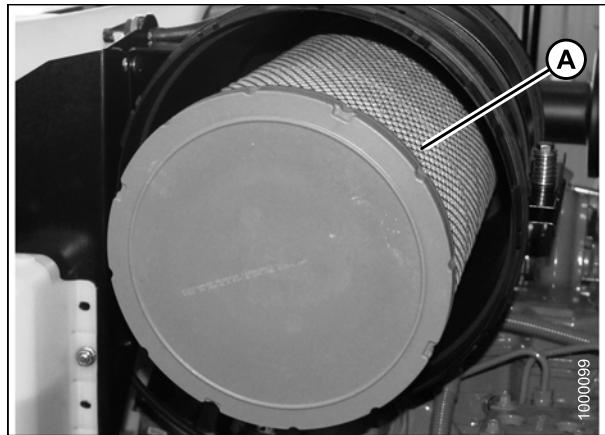


Figure 5.58: Primary Filter Element

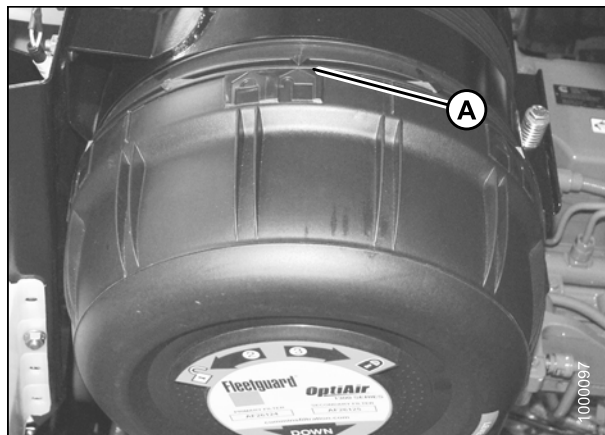


Figure 5.59: Engine Air Cleaner

MAINTENANCE AND SERVICING

4. Position end cap (B) onto filter housing with aspirator pointing approximately down.
5. Secure end cap onto filter housing by closing latch (A).

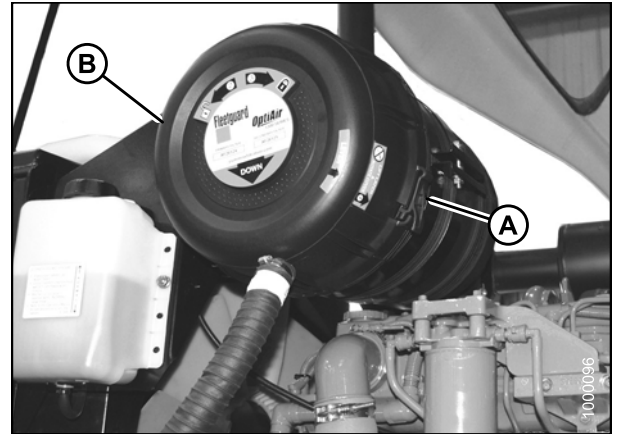


Figure 5.60: Engine Air Cleaner

6. After servicing the filter, reset the restriction switch (A) by pushing the button on the end.
7. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 309.
8. Close the maintenance platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.

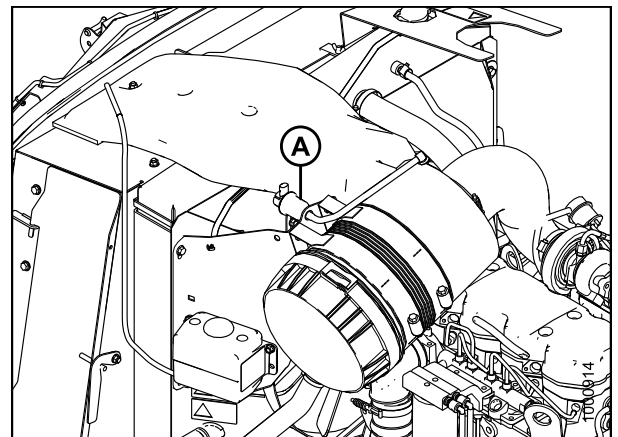


Figure 5.61: Engine Air Cleaner

Cleaning Engine Air Filter Primary Element

IMPORTANT:

The secondary (inner) element should NEVER be cleaned, only replaced.

IMPORTANT:

Air filter element cleaning is NOT recommended due to the possible degradation of the element material.

If cleaning is performed, there are several risks involved and the following procedures should be followed. If any of the following conditions are found, the filter element MUST be replaced.

1. Hold a bright light inside element, and check carefully for holes.
2. Check outer screen for dents. Vibration would quickly wear a hole in the filter.
3. Check filter gasket for cracks, tears, or other signs of damage.
4. Check element for oil or soot contamination.
5. Check the secondary element for cleanliness. If there is visible dirt on the secondary element, replace both primary and secondary elements. Do **NOT** clean.

MAINTENANCE AND SERVICING

IMPORTANT:

The air cleaner's primary (outer) filter element should be replaced after three cleanings or at the specified interval. The secondary (inner) element should be replaced every third time the primary element is changed. Refer to [5.12 Maintenance Schedule, page 431](#) for the required interval.

6. If secondary element passes inspection, clean primary element as follows:
 - a. Use compressed air **NOT** exceeding 400 kPa (60 psi), and a dry element cleaner gun.
 - b. Hold nozzle next to inner surface only, and move up and down on pleats.
 - c. After three cleaning's (or at the specified interval), replace the primary element.
7. Repeat inspection before installing.

Removing and Installing Secondary Air Filter

Replace the secondary air filter (A) every year or after every third primary filter change, even if it appears clean.

If the secondary air filter is dirty, inspect the primary filter and the filter canister to determine the reason for contamination.

- Examine the filter canister for cracks and replace if necessary.
- Ensure filter sealing surfaces are soft, flexible, and sealing properly. Hard seals may allow debris through to the secondary filter.
- Ensure canister retaining latches are secure.

NOTE:

- Do **NOT** remove the secondary filter element unless it needs replacing.
- Do **NOT** attempt to clean the secondary element (A). Replace only.

1. Remove the primary filter. Refer to [Removing Primary Air Filter, page 340](#).

IMPORTANT:

When replacing secondary filter, reinsert new filter as soon as possible to prevent dirt from entering engine intake.

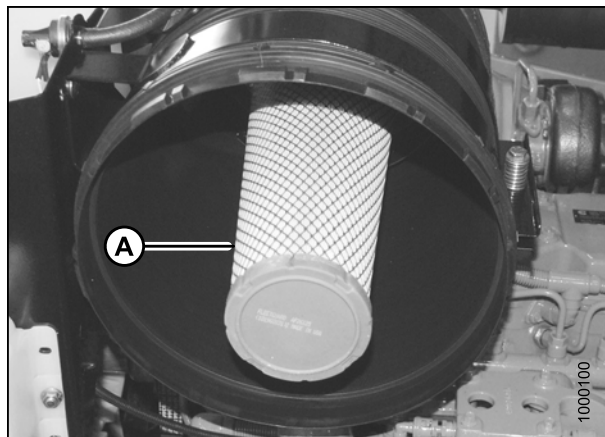


Figure 5.62: Secondary Filter Element

MAINTENANCE AND SERVICING

2. Remove the secondary element (A) from canister.

NOTE:

If replacing filter, refer to [8.2.4 Filter Part Numbers, page 478](#).

3. Insert new secondary filter element (A) into canister, seal first, and push until seal is seated inside canister.
4. Reinstall the primary filter. Refer to [Installing Primary Air Filter, page 342](#).

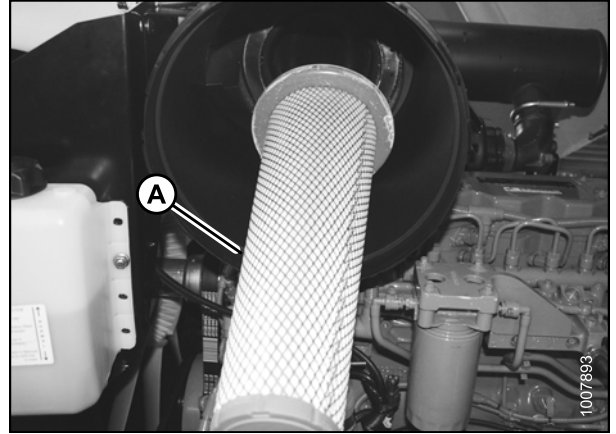


Figure 5.63: Engine Air Cleaner

5.8.5 Fuel System

Replacing Fuel Tank Vent Filter

The fuel tank is vented by a hose that is connected to the filler tube. The hose is connected to a filter that should be changed every year.

For fuel tank vent filter replacement part number, refer to [8.2.4 Filter Part Numbers, page 478](#).

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

⚠ WARNING

To avoid personal injury or death from explosion or fire, do NOT smoke or allow flame or sparks near windrower when servicing.

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\), page 309](#).
3. Open the right cab-forward side maintenance platform. Refer to [5.3.1 Opening Platforms \(Standard Position\), page 311](#).

MAINTENANCE AND SERVICING

4. Locate filter (A) on vent line against hydraulic oil reservoir.
5. Release hose tension clamps (B) and slide away from filter. Pull hoses off filter.
6. Position new filter through hole in frame and attach top hose onto filter. The IN marking on the filter should face down.

NOTE:

If filter has an arrow instead of an IN marking, arrow should point up.

7. Attach lower hose to filter and secure both hoses with tension clamps (B).
8. Close hood. Refer to [5.2.4 Closing Hood \(Highest Position\)](#), page 310.
9. Close the maintenance platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 312.

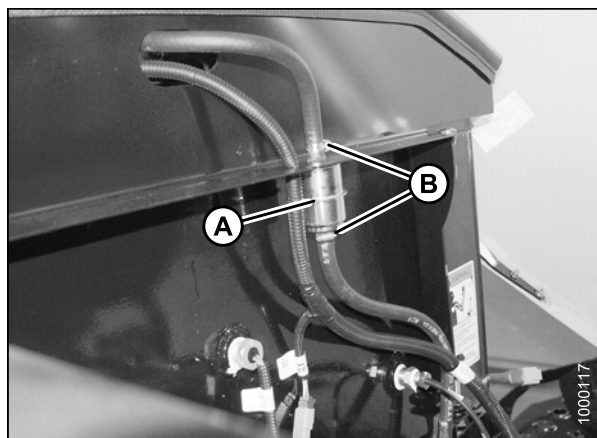


Figure 5.64: Fuel Tank Vent

Maintaining Fuel Filters

The windrower fuel system is equipped with primary (A) and secondary (B) screw-on cartridge type filters. The primary filter (A) is equipped with a separator that separates sediment and water from the fuel.

Refer to the following procedures:

- [Removing Primary Fuel Filter](#), page 346
- [Installing Primary Fuel Filter](#), page 347
- [Removing Secondary Fuel Filter](#), page 348
- [Installing Secondary Fuel Filter](#), page 348

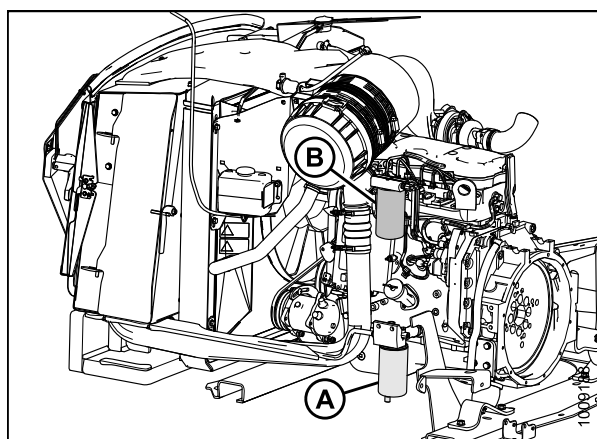


Figure 5.65: Fuel System Filters

Removing Primary Fuel Filter

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 309.

MAINTENANCE AND SERVICING

3. On the bottom of the fuel tank, locate the fuel supply valve (A) and move it to the closed position.

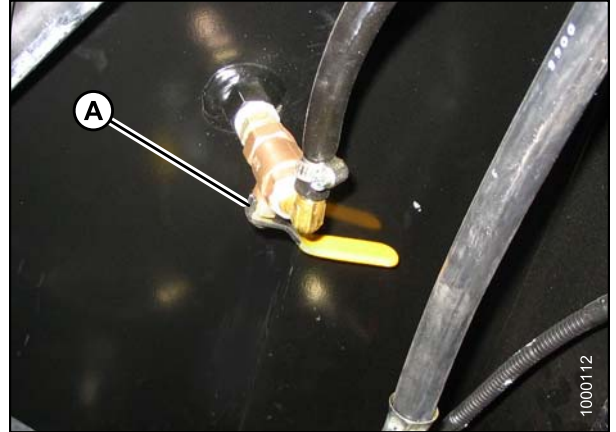


Figure 5.66: Fuel Shut-Off Valve

4. Locate the primary fuel filter (A) on the right cab-forward side of the windrower.

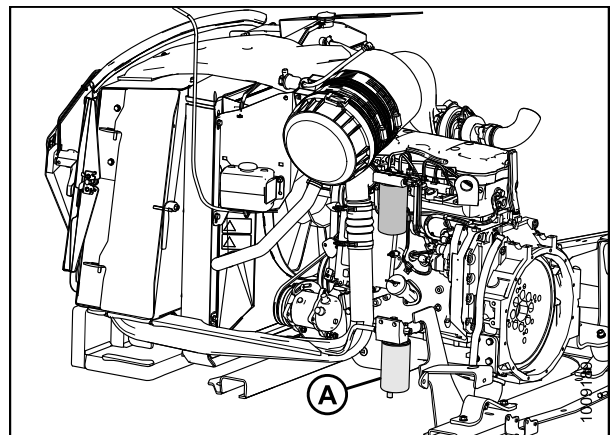


Figure 5.67: Primary Fuel Filter Location

5. Clean around the primary filter (A) head.
6. Disconnect the water in fuel (WIF) sensor (B) from bottom of filter.
7. Turn valve (C) by hand counterclockwise and drain filter into a container.
8. Remove filter (A) with a filter wrench.
9. Clean gasket mating surface.

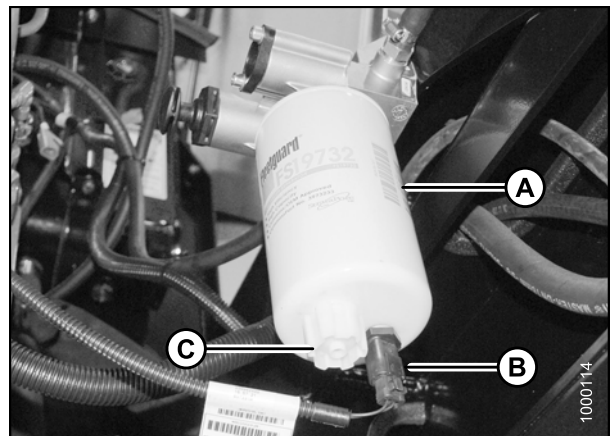


Figure 5.68: Primary Fuel Filter

Installing Primary Fuel Filter

For primary fuel filter replacement part number, refer to [8.2.4 Filter Part Numbers, page 478](#).

IMPORTANT:

Do **NOT** prefill filter with fuel. Prefilling can contaminate the fuel system.

MAINTENANCE AND SERVICING

1. Lubricate the fuel filter O-ring with clean oil.
2. Screw the new filter (A) onto the filter mount until the gasket contacts the filter head.
3. Tighten the filter an additional 3/4 turn by hand. Use a 25.4 mm (1 in.) wrench and torque it to 38 N·m (28 ft·lbf).
4. Tighten the filter an additional 1/2 to 3/4 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install the filter. Overtightening can damage the gasket and filter.

5. Reconnect water in fuel (WIF) sensor (B).

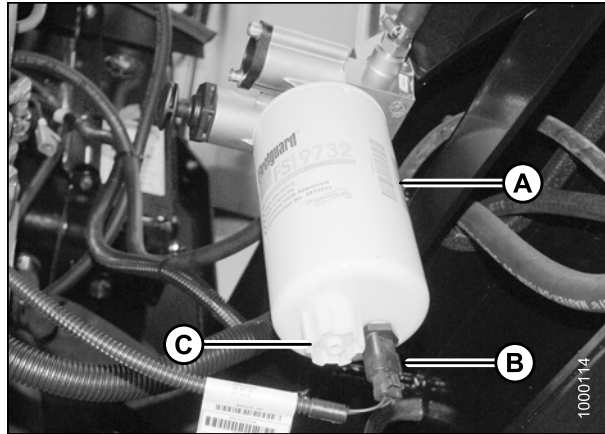


Figure 5.69: Primary Fuel Filter

Removing Secondary Fuel Filter

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 309.
3. Clean around the secondary filter head (A).
4. Place a container under the filter to catch spilled fluid.
5. Remove filter (B) with a filter wrench.
6. Clean gasket mating surface.

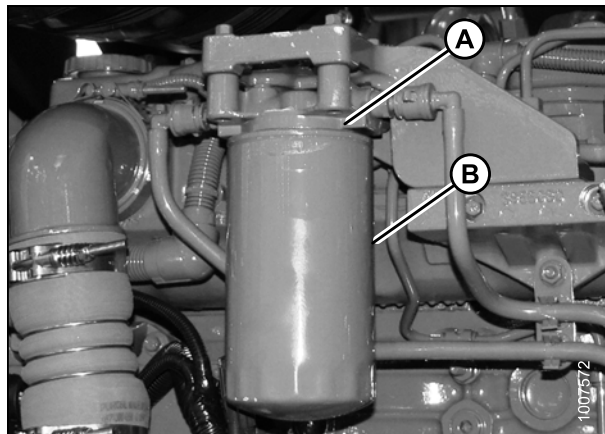


Figure 5.70: Secondary Fuel Filter

Installing Secondary Fuel Filter

For secondary fuel filter replacement part number, refer to [8.2.4 Filter Part Numbers](#), page 478.

MAINTENANCE AND SERVICING

1. Screw the new secondary filter (A) onto the filter mount until the gasket contacts the filter head.
2. Tighten the filter an additional 1/2 to 3/4 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install the filter. Overtightening can damage the gasket and filter.

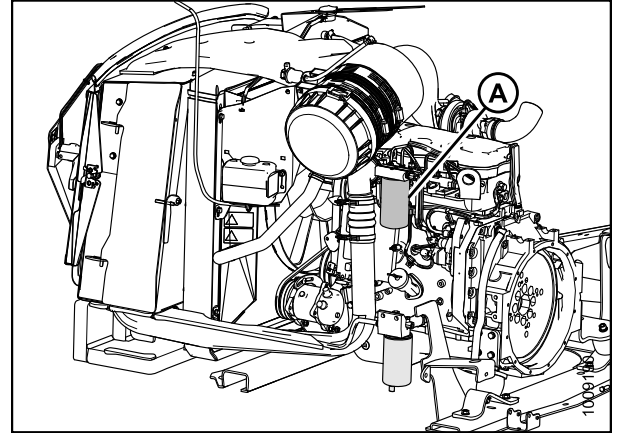


Figure 5.71: Secondary Fuel Filter

3. Open fuel valve (A) under fuel tank.
4. Prime the fuel system. Refer to [Priming Fuel System, page 352](#).

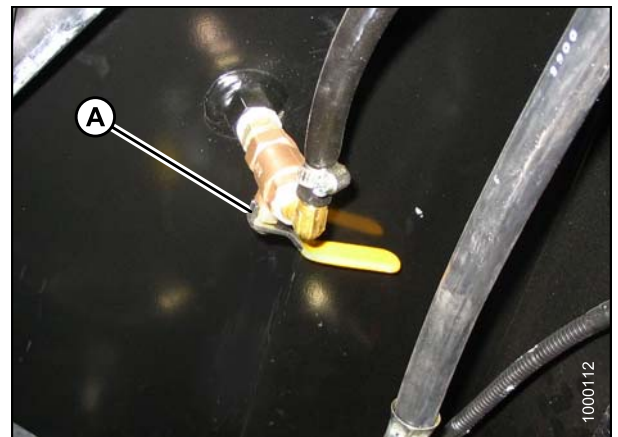


Figure 5.72: Fuel Shut-Off Valve

Draining Fuel Tank

Draining the fuel tank is necessary to remove old or contaminated fuel.

WARNING

- To avoid personal injury or death from explosion or fire, do **NOT** smoke or allow flame or sparks near fuel tank when refueling.
- **NEVER** refuel the windrower when the engine is hot or running.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\), page 308](#).

MAINTENANCE AND SERVICING

3. Close fuel supply valve (A). Located on the bottom of the fuel tank.

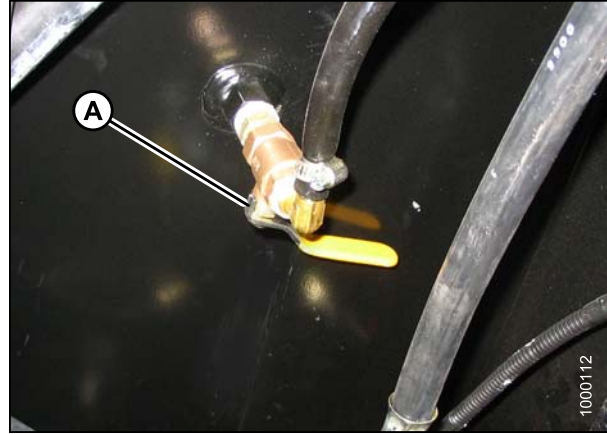


Figure 5.73: Bottom of Fuel Tank

4. Place a 20 liter (5 US gallon) drain pan under the fuel supply hose (A) at primary filter.
5. Loosen clamp (B) and pull fuel supply hose (A) off fitting.

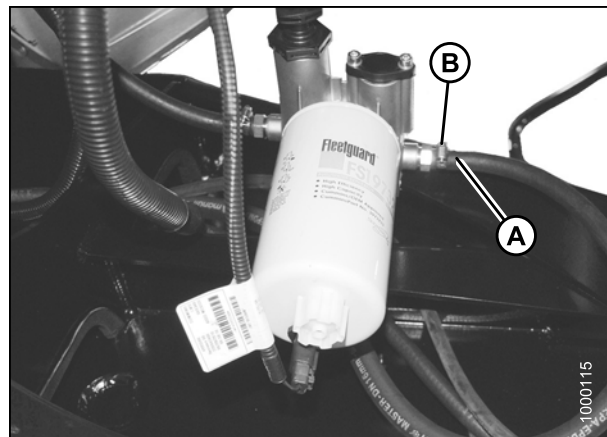


Figure 5.74: Fuel System

6. Route hose to drain pan and open valve (A) to drain tank.

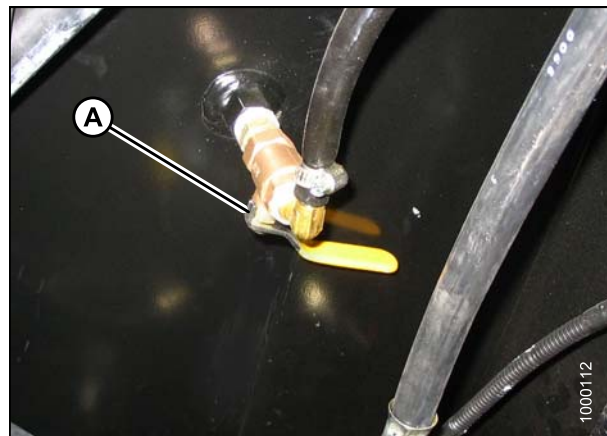


Figure 5.75: Bottom of Fuel Tank

MAINTENANCE AND SERVICING

7. Add some clean fuel to tank to flush out any remaining contaminants.
8. Reattach fuel supply hose (A) to fitting. Install clamp (B) and tighten.

NOTE:

Do **NOT** refill the fuel tank if performing additional maintenance on fuel system. Refill it once work is completed. Refer to [Filling the Fuel Tank](#), page 163.

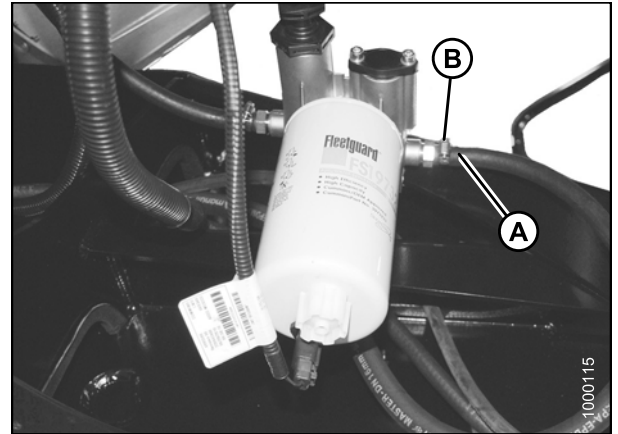


Figure 5.76: Fuel System

Fuel/Water Separator

A fuel/water separator is incorporated into the primary fuel filter. The separator is equipped with a drain and a sensor that triggers a warning on the cab display module (CDM) if water is detected in the fuel. Drain the water and sediment from the separator daily or at any time the CDM Water In Fuel (WIF) light illuminates.

To remove water from the fuel system, refer to [Removing Water from Fuel System](#), page 351.

Removing Water from Fuel System

Drain the water and sediment from the separator daily, or at any time the cab display module (CDM) water in fuel (WIF) light illuminates.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 308.
3. Place a container under the filter (A) to catch spilled fluid.
4. Turn drain valve (B) by hand 1-1/2 to 2 turns counterclockwise until draining occurs.
5. Drain the filter sump of water and sediment until clear fuel is visible.
6. Turn the valve clockwise to close the drain.
7. Dispose of fluid safely.
8. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 309.

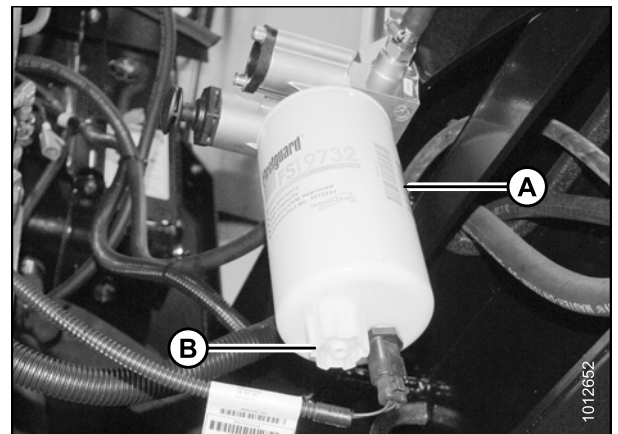


Figure 5.77: Primary Fuel Filter

System Priming

Controlled venting of air is provided at the injection pump through the fuel drain manifold. Small amounts of air, introduced by changing filters or injection pump supply line, will be vented automatically if the fuel filters are changed in accordance with instructions.

IMPORTANT:

Bleeding the fuel system is **NOT** recommended or required. Manual priming will be required if

- Fuel filter is replaced
- Injection pump is replaced
- High-pressure fuel lines are replaced
- Engine is run until fuel tank is empty

Priming Fuel System

To prime the fuel system, follow these steps:

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

⚠ WARNING

The fuel pump high-pressure fuel lines and fuel rail contain extremely high pressure fuel. Never loosen any fittings. Personal injury and property damage can result.

1. Stop the engine and remove the key.
2. Open the hood to lowest position. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 308.
3. Turn the priming knob (A) counterclockwise to unlock the plunger on the primary filter head.
4. Pump approximately 120 times to pressurize the fuel system.
5. Lock the plunger by turning knob (A) clockwise until snug.
6. Try starting engine. If engine does **NOT** start, repeat priming.
7. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 309.



Figure 5.78: Primary Fuel Filter

5.8.6 Engine Cooling System

The engine cooling system is designed to maintain the engine operating temperature within the recommended operating range.

NOTE:

Antifreeze is essential in any climate. It broadens the operating temperature range by lowering the coolant freezing point and by raising its boiling point. Antifreeze also contains rust inhibitors and other additives to prolong engine life.

IMPORTANT:

If antifreeze strength is not adequate, do **NOT** drain cooling system to protect against freezing. System may not drain completely and damage from freezing could still result.

Refer to [8.2 Recommended Fuel, Fluids, and Lubricants, page 476](#) for detailed information.

Inspecting Radiator Cap

The radiator cap must fit tightly and the cap gasket must be in good condition to maintain the 97–124 kPa (14–18 psi) pressure in the cooling system. Check the condition of the cap every year when checking the engine coolant strength.

CAUTION

To avoid personal injury from hot coolant, do **NOT** turn radiator cap until engine cools.

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\), page 309](#).
3. Open the platform. Refer to [5.3.1 Opening Platforms \(Standard Position\), page 311](#).
4. Turn the cap (A) counterclockwise to the first notch to relieve pressure before removing cap completely.
5. Turn the cap (A) again and remove.
6. Check the gasket for cracks or deterioration and replace the cap if necessary.
7. Check that the spring in the cap moves freely.
8. Replace the cap if spring is stuck.
9. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\), page 312](#).
10. Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\), page 310](#).

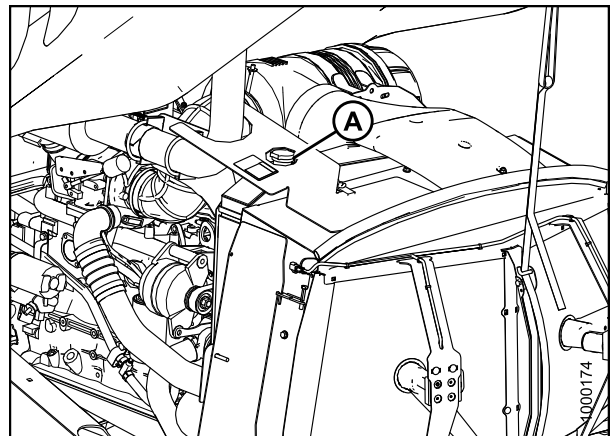


Figure 5.79: Engine Cooling System

Checking Engine Coolant Strength

Check the anti-freeze in the radiator with a tester every year, preferably before off-season storage.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

CAUTION

To avoid personal injury from hot coolant, do NOT turn radiator cap until engine cools.

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 309.
3. Open the platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.
4. Remove the radiator cap (A).

IMPORTANT:

Turn the cap (A) counterclockwise to the first notch to relieve pressure before removing cap completely.

5. Check the coolant in the radiator using an antifreeze tester. Tester should indicate protection to temperatures of -34°C (-30°F).
6. Inspect the radiator cap before reinstalling. Refer to [Inspecting Radiator Cap](#), page 353.
7. Replace radiator cap (A).
8. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 312.
9. Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\)](#), page 310.

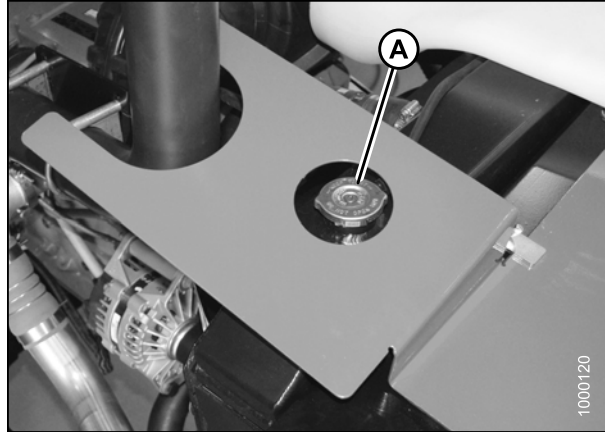


Figure 5.80: Engine Cooling System

Checking Coolant Level

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

Check coolant level in the coolant recovery tank (A) daily.

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 309.
3. Open the platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.

NOTE:

To view coolant capacities, refer to [8.2 Recommended Fuel, Fluids, and Lubricants](#), page 476.

4. Ensure the coolant recovery tank (A) is one-half full. To add coolant, refer to [Adding Coolant](#), page 358.
5. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 312.
6. Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\)](#), page 310.

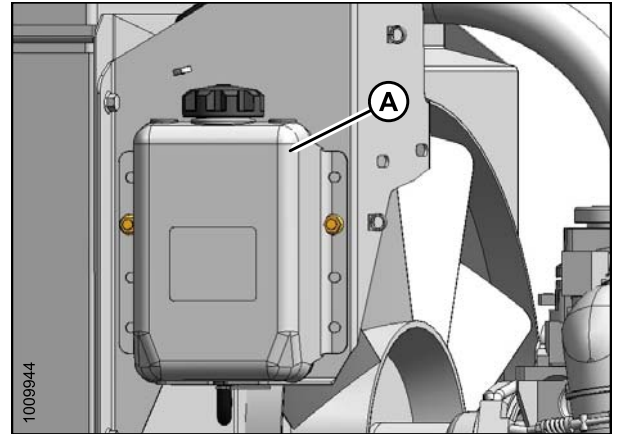


Figure 5.81: Engine Coolant Tank

Changing Coolant

Coolant should be drained and the system flushed and filled with new coolant every **2000 hours or 2 years**.

Refer to the following procedures:

- [Draining Coolant](#), page 355
- [Adding Coolant](#), page 358

Draining Coolant

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

CAUTION

To avoid personal injury from hot coolant, do **NOT** turn radiator cap until engine cools.

1. Stop the engine and remove the key. Let the engine cool.
2. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 309.
3. Open the platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.

MAINTENANCE AND SERVICING

- Turn the radiator cap (A) to the first notch to relieve pressure before removing cap completely.

IMPORTANT:

Place a drain pan (about 30 liters [8 US gallons]) under the engine and radiator, and use a deflector or hose to prevent coolant running onto frame.

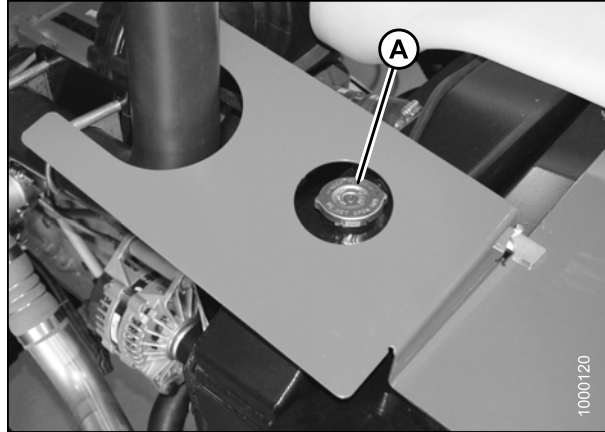


Figure 5.82: Radiator Cap

- Remove the radiator cap and open radiator drain valve (A), located at the bottom of the engine side of the radiator lower tank. (Frame has been removed from illustration for clarity.)

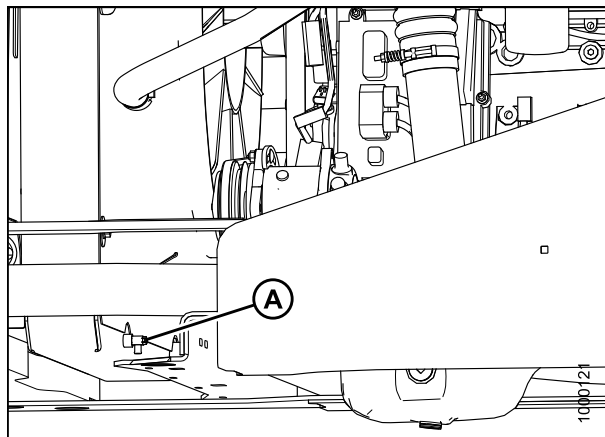


Figure 5.83: Radiator Drain Valve

- Close the heater shutoff valve (A) and disconnect hose on heater side of valve.
- Open valve to drain the block.
- When system is drained, reattach hose on valve (A).

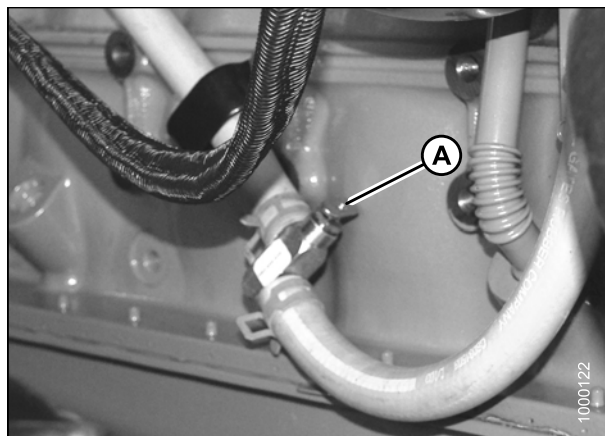


Figure 5.84: Heater Shutoff Valve

MAINTENANCE AND SERVICING

9. Close radiator drain valve (A) at the bottom of the engine side of the radiator lower tank. (Frame has been removed from illustration for clarity.)
10. Fill system with clean water through the radiator and replace radiator cap.

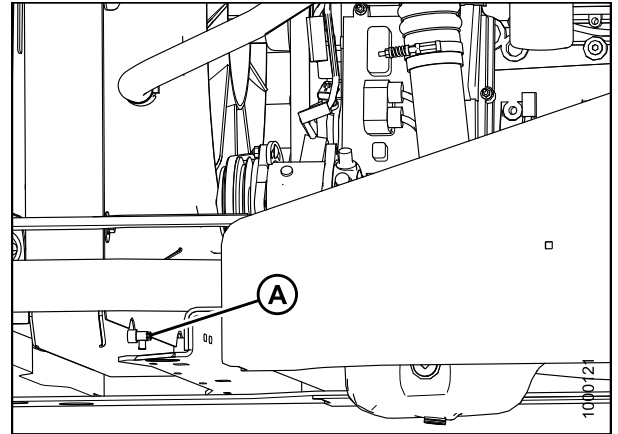


Figure 5.85: Radiator Drain Valve

11. Open heater shutoff valve (A).
12. Start engine and turn temperature control knob to HIGH. Run engine until normal operating temperature is reached.
13. Stop the engine and drain water out before rust or sediment settles. Repeat coolant removal procedure.
14. Close drain valves and fill system with a solution of clean water and a heavy duty radiator cleaner. Follow instructions provided with cleaner.
15. After using the cleaner solution, flush system with clean water again. Inspect radiator, hoses, and fittings for leaks.
16. Close drain valves and fill system. Refer to [Adding Coolant, page 358](#).
17. Replace the cap (A) on coolant recovery tank (B).
18. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\), page 312](#).
19. Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\), page 310](#).

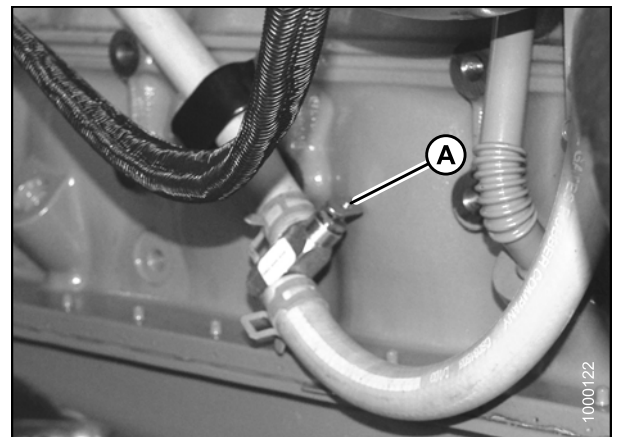


Figure 5.86: Heater Shutoff Valve

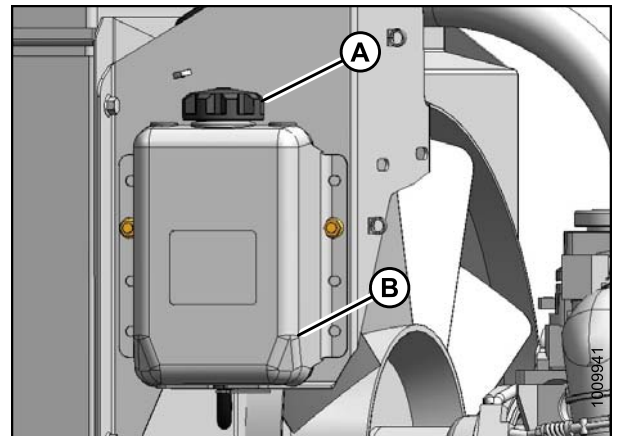


Figure 5.87: Coolant Recovery Tank

Adding Coolant

Check the coolant level in the coolant recovery tank daily. Add coolant if the tank is less than one-half full.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

⚠ CAUTION

To avoid personal injury from hot coolant, do NOT turn radiator cap until engine cools.

NOTE:

Do **NOT** add coolant directly into the radiator except when changing coolant.

To add coolant to the coolant recovery tank, follow these steps:

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 309.
3. Open the platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.
4. Remove the cap (A) from coolant recovery tank (B).

NOTE:

For coolant specifications, refer to [8.2.3 Lubricants, Fluids, and System Capacities](#), page 477.

5. Add coolant at a rate not exceeding three gallons per minute until the recovery tank is one-half full.

⚠ CAUTION

Before starting the machine, check to be sure all bystanders have cleared the area.

6. Start engine and run at high idle for approximately 20 minutes or until the engine temperature reaches 85°C (185°F).
7. Check the coolant level again and add until the recovery tank is one-half full.
8. Replace the cap (A).
9. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 312.
10. Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\)](#), page 310.

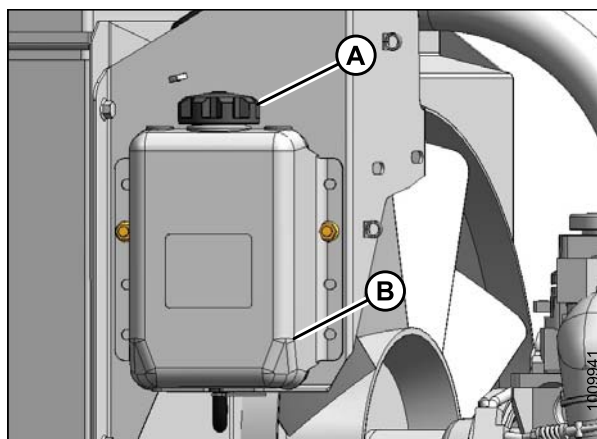


Figure 5.88: Coolant Recovery Tank

Maintaining Engine Cooling Box

The engine cooling box components should be cleaned daily—more frequently in severe dust conditions. Refer to the following list of procedures before attempting to service the engine cooling box components:

- [Opening Cooler Box Screen, page 359](#)
- [Charge Air Cooling, page 360](#)
- [Cleaning Screens and Coolers, page 360](#)
- [Cleaning Cooler Box Components, page 361](#)
- [Adjusting Screen Cleaner Rotor to Screen Clearance, page 363](#)
- [Closing Cooler Box Screen, page 364](#)

Opening Cooler Box Screen

1. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\), page 309](#).
2. Push latch (A) and open screen assembly access door (B). Secure with rod stored inside screen door.

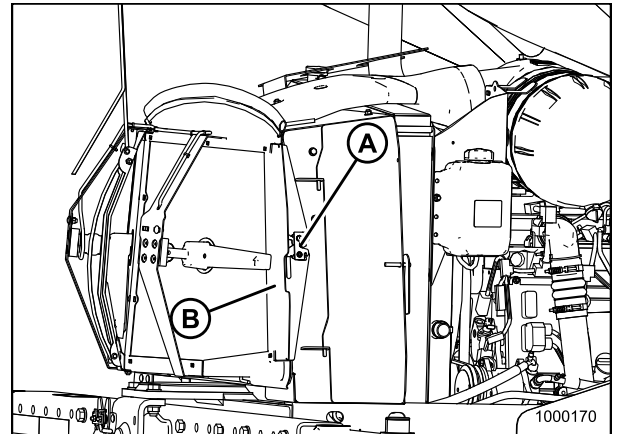


Figure 5.89: Engine Cooling System

MAINTENANCE AND SERVICING

Charge Air Cooling

Charge air is routed through a cooler that is located in the cooling box (C), prior to entering the engine intake. The cooler should be cleaned daily with compressed air. Refer to [Cleaning Screens and Coolers, page 360](#) and [Cleaning Cooler Box Components, page 361](#).

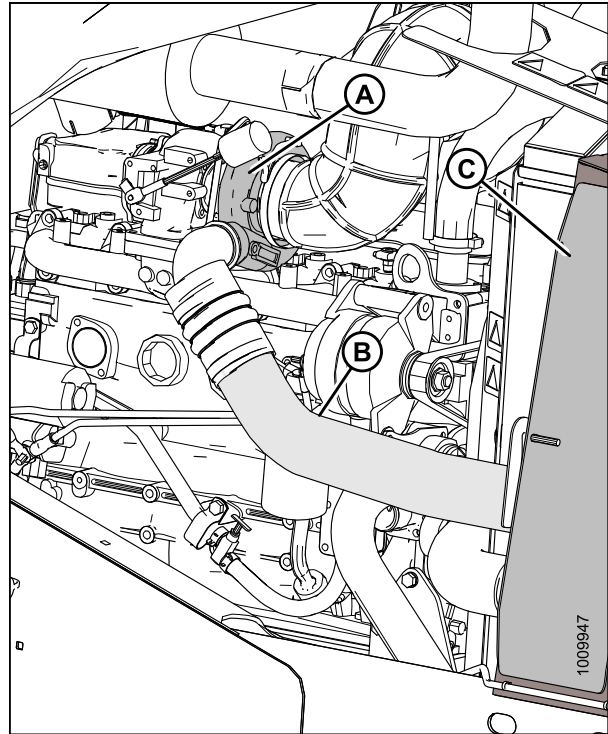


Figure 5.90: Engine Air Intake System

Cleaning Screens and Coolers

When the engine is running, two electrically driven rotors and suction from the engine's cooling fan sweep and vacuum debris away from the cooling box screen. If the screen is not being cleaned, the rotors or ducts may be plugged. Follow these steps to clear plugged rotors:

1. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\), page 309](#).
2. Remove nuts (B).
3. Pivot screen cleaner assembly (C) away from screen.
4. Blow out debris from cleaner ducts (A) with compressed air.
5. If ducts are plugged, open the cooler box screen. Refer to [Opening Cooler Box Screen, page 359](#).

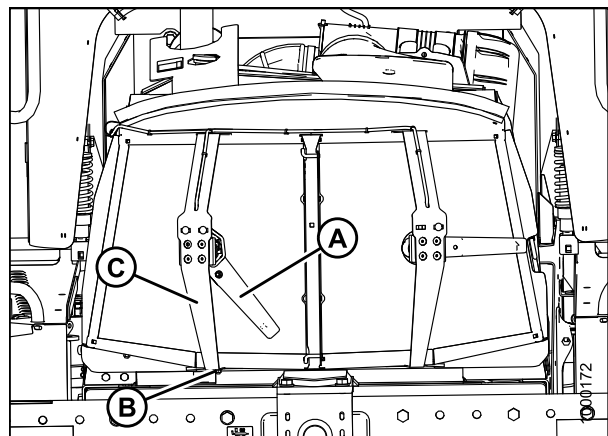


Figure 5.91: Screen Cleaner Assembly

MAINTENANCE AND SERVICING

6. Blow debris out of ducts (A) with compressed air.
7. Clean screen with compressed air.

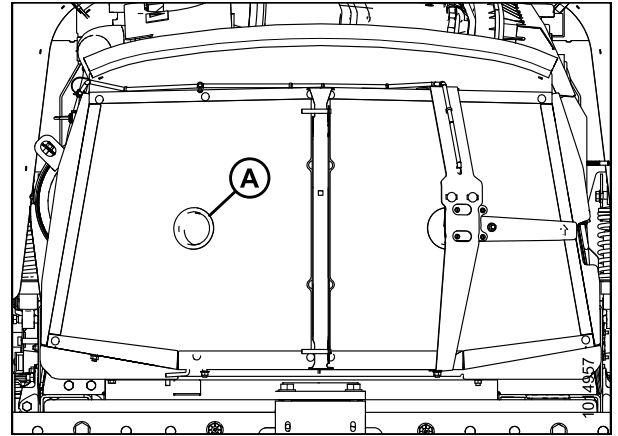


Figure 5.92: Cooler Box Screen

8. Move the screen cleaner assembly (C) back into position and secure with bolts and nuts (B).
9. Check duct (A) clearance to screen. Refer to [Adjusting Screen Cleaner Rotor to Screen Clearance](#), page 363.
10. Close the cooler box screen. Refer to [Closing Cooler Box Screen](#), page 364.
11. Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\)](#), page 310.

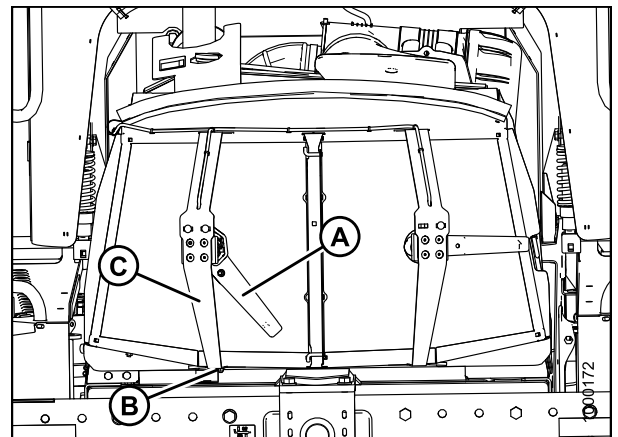


Figure 5.93: Screen Cleaner Assembly

Cleaning Cooler Box Components

The radiator and oil cooler should be cleaned daily with compressed air. More frequent cleaning may be necessary in severe conditions. The charge air cooler and air conditioning (A/C) condenser may also be cleaned at the same time.

To clean these components, proceed as follows:

1. Open cooler box screen. Refer to [Opening Cooler Box Screen](#), page 359.

MAINTENANCE AND SERVICING

2. Lift latch (A) and open the right-hand access door (B).

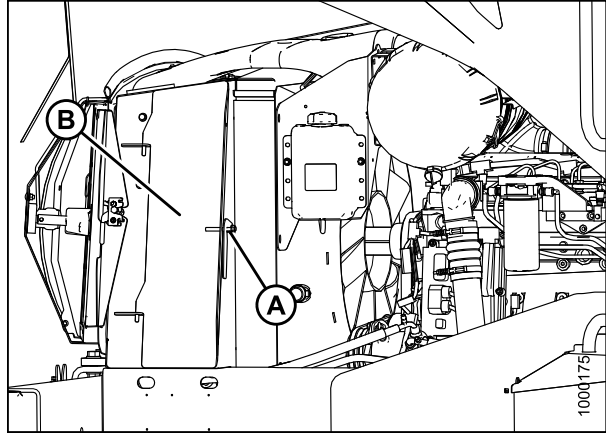


Figure 5.94: RH Cooler Access Door

3. Slide out the oil cooler/air conditioning (A/C) condenser assembly (A).

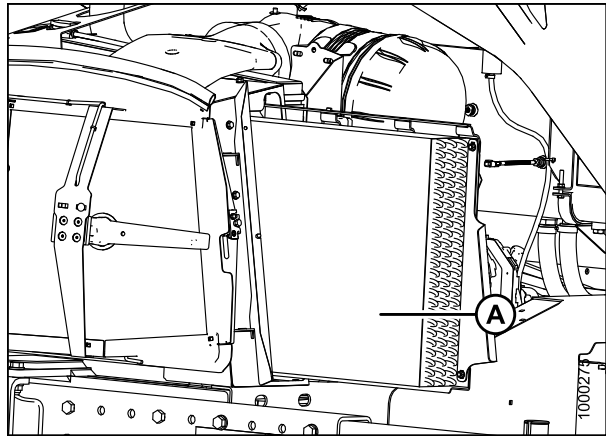


Figure 5.95: A/C Condenser Assembly

4. Lift latch (A) and open the left-hand access door (B).

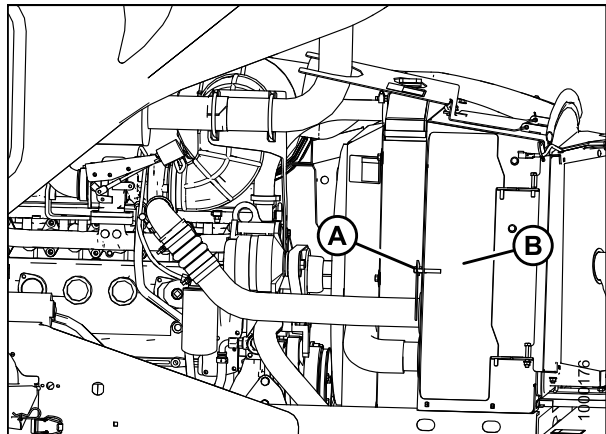


Figure 5.96: LH Cooler Access Door

MAINTENANCE AND SERVICING

5. Remove wing nut (A) and open access door (B) at top of cooling box.

NOTE:

Fins on coolers can be very easily bent which may interfere with its function. Exercise caution when cleaning.

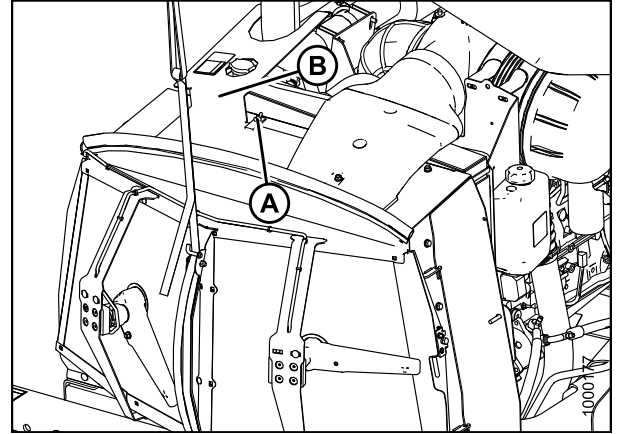


Figure 5.97: Cooling Box Access Door

6. Clean radiator (A) through access hole in cooling box with compressed air.
7. Clean oil cooler/air conditioning condenser (B), charge air cooler (C), cooling box (D), and fuel cooler (E) with compressed air.
8. Inspect all lines and coolers for evidence of leaks and damage.
9. Slide oil cooler/air conditioning condenser (B) back into cooling box (D).
10. Close side access door and lock with lever.
11. Close access door on top of the cooling box and secure with wing nut.
12. Close cooler box screen. Refer to [Closing Cooler Box Screen, page 364](#).

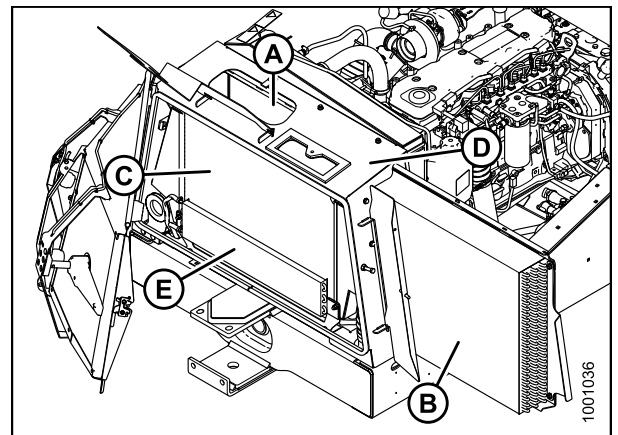


Figure 5.98: Engine Cooling System

Adjusting Screen Cleaner Rotor to Screen Clearance

Check clearance between trailing edge of screen cleaner rotor (A) and screen. It should be 1–8 mm (0.039–0.314 in.) at all locations when rotating.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine and remove the key.
2. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\), page 308](#).

MAINTENANCE AND SERVICING

NOTE:

Screen cleaner rotors rotate counterclockwise and may touch screen as long as they continue to rotate.

- Loosen nut (B) on motor support (C).
- Move support in or out until duct is 2–6 mm (0.079–0.236 in.) from screen near the center.
- Tighten nut (B).
- Loosen the two motor mount bolts (D).
- Move motor/duct assembly (E) to obtain 1–8 mm (0.039–0.314 in.) gap to screen at full rotation of the rotor.
- Tighten nuts (D) on motor mount.
- Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 309.

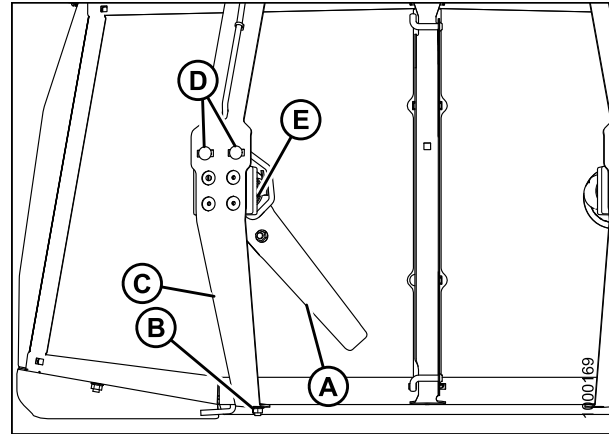


Figure 5.99: Screen Cleaner

Closing Cooler Box Screen

- Unhook the support rod and store it in the screen door. Close screen access door (B) and engage latch (A).
- Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\)](#), page 310.

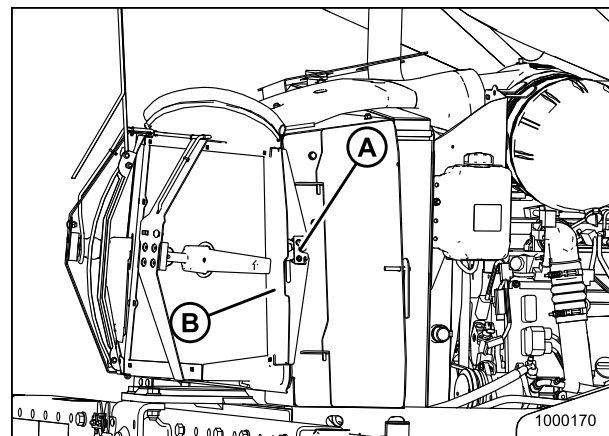


Figure 5.100: Engine Cooling System

5.8.7 Gearbox

Checking Lubricant Level and Adding Lubricant

CAUTION

Park on a flat, level surface with the header on the ground and the ground speed lever in N-DETENT position with the steering wheel locked.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

Check the lubricant level every 50 hours as follows:

1. Park the windrower on level ground, shut down engine, and remove key.
2. Remove check plug (A). The lubricant should be visible through the hole or slightly running out.

NOTE:

To view lubricant specifications, refer to [8.2.3 Lubricants, Fluids, and System Capacities, page 477](#).

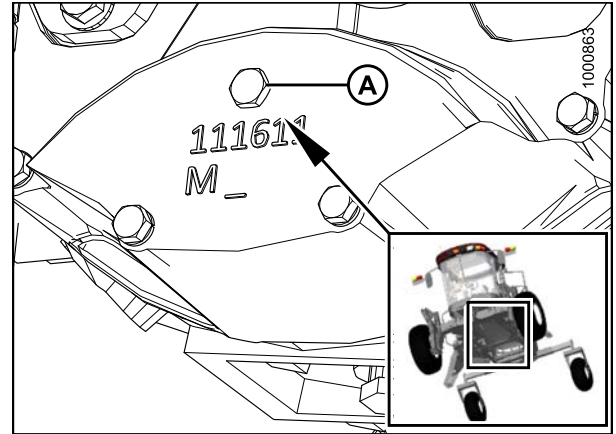


Figure 5.101: Gearbox Lubricant Check Plug

3. Add lubricant as follows:
 - a. Remove breather cap (A) and add lubricant until it runs out the check port. If refilling, add approximately 2.1 liters (2.2 US quarts).
 - b. Replace check plug and breather cap and tighten.
 - c. Operate the engine at low idle and check for leaks at the check plug and drain plug.

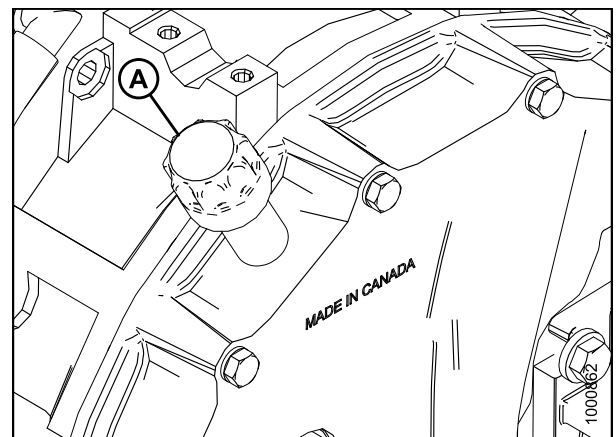


Figure 5.102: Gearbox Breather Cap

Changing Lubricant

Change gearbox lubricant after the first 50 hours, and then every 500 hours as follows:

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

The engine should be warm when changing the oil.

1. Stop engine and remove key.
2. Place a 4 liter (1 US gallon) drain pan under the gearbox.

MAINTENANCE AND SERVICING

3. Remove drain plug (B) and allow oil to completely finish draining.
4. Install drain plug (B) and remove check plug (A).

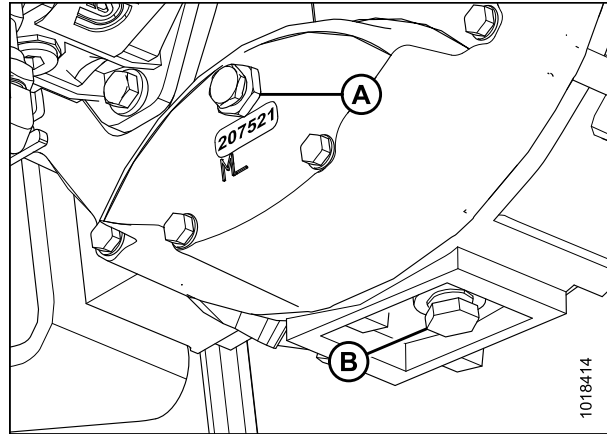


Figure 5.103: Gearbox Lubricant Drain Plug

5. Add lubricant as follows:
 - a. Remove breather cap (A) and add lubricant until it runs out the check port. If refilling, add approximately 2.1 liters (2.2 US quarts).
 - b. Replace check plug and breather cap and tighten.
 - c. Operate the engine at low idle and check for leaks at the check plug and drain plug.

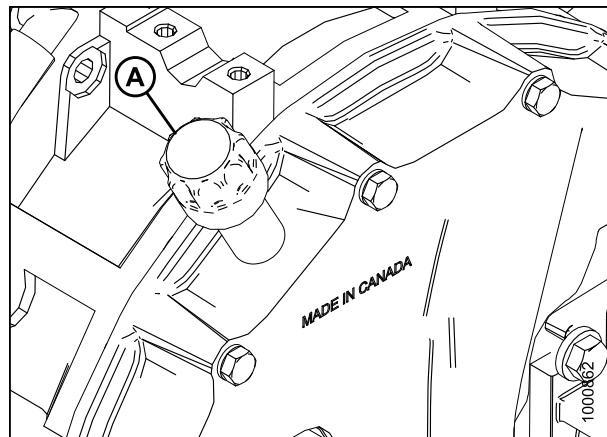


Figure 5.104: Gearbox Breather Cap

5.8.8 Exhaust System

CAUTION

Engine exhaust stack may be hot. To avoid burns, do NOT touch exhaust canister when engine is running. Allow sufficient cooling time after shut-down.

MAINTENANCE AND SERVICING

The exhaust system requires no regular maintenance, but it should be inspected periodically as follows:

1. Open the hood to its highest position. For instructions, refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 309.
2. Inspect the area around clamps (A) for breakage, cracks, and rust-through. In addition to excess noise, a leaky exhaust system may allow exhaust gases to escape to the cab.
3. Check tubing for dents or crushed areas. Dents or crushed portions of any tubing create exhaust flow restriction and increase back pressure significantly. Even relatively small dents will cause decreased fuel economy and increased turbo wear. If dents are relatively large, increased bearing and cylinder wear will occur due to increased exhaust temperature.
4. Make sure the exhaust system is secured to eliminate vibration. The brackets (B) should fit securely to the muffler (C) and to the engine.

IMPORTANT:

Do **NOT** change muffler type, piping sizes, or exhaust configuration. See your Dealer for proper replacement parts.

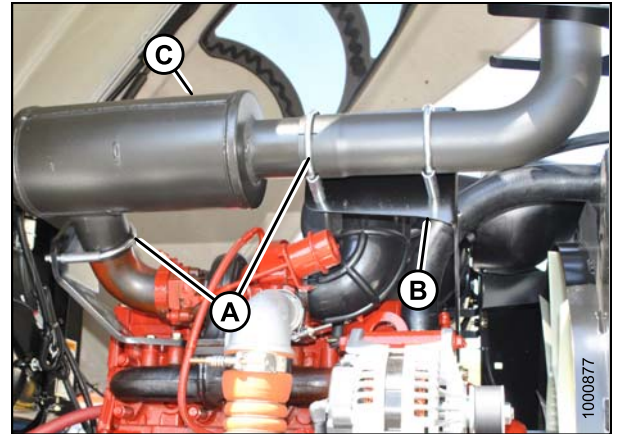


Figure 5.105: Exhaust System

5.8.9 Belts

Tensioning Alternator/Fan Belt

The alternator, water pump, and fan belt are automatically tightened. Manual adjustment is **NOT** required.

Replacing Fan Belt

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine and remove the key.
2. Open the left cab-forward platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.
3. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 308.

MAINTENANCE AND SERVICING

4. Loosen compressor mounting hardware (B) and push compressor towards engine to release tension.
5. Remove belt (A) from compressor.

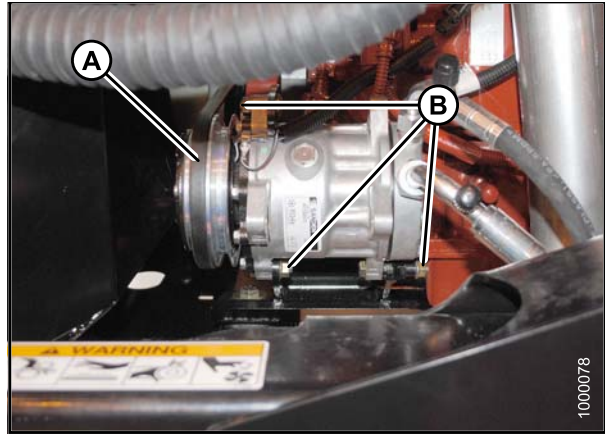


Figure 5.106: A/C Compressor

6. Insert the drive end of a 1/2 in. drive ratchet wrench into the belt tensioner (B).
7. Rotate tensioner counterclockwise until fan belt (A) can be slipped off pulley (C). Release tensioner and remove wrench.
8. Remove belt in order 1–2–3 as shown. Route fan belt around fan and remove belt.
9. Install new belt (A) around fan and onto pulleys in order 3–2–1.
10. Insert the drive end of a 1/2 in. drive ratchet wrench into the belt tensioner (B).
11. Rotate tensioner counterclockwise until belt (A) can be slipped onto pulley (C). Release tensioner and remove wrench.
12. Check that belt is properly seated in all pulley grooves.
13. Reinstall compressor belt (A).
14. Pry compressor away from engine so that a force of 35–55 N (8–12 lbf) deflects the belt (A) 5 mm (3/16 in.) at mid-span.
15. Tighten compressor mounting hardware (B).
16. Recheck tension and adjust as required.
17. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 309.
18. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 312.

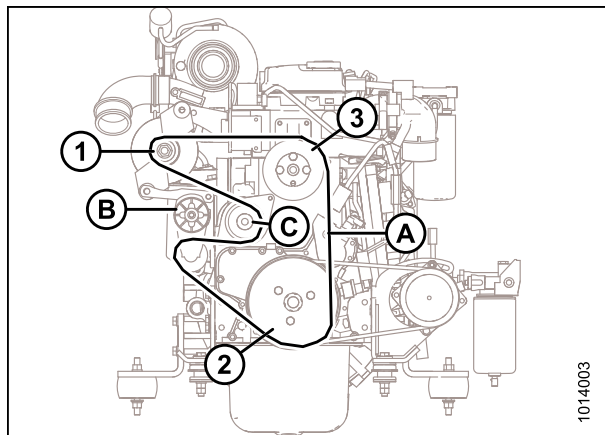


Figure 5.107: Engine Belts

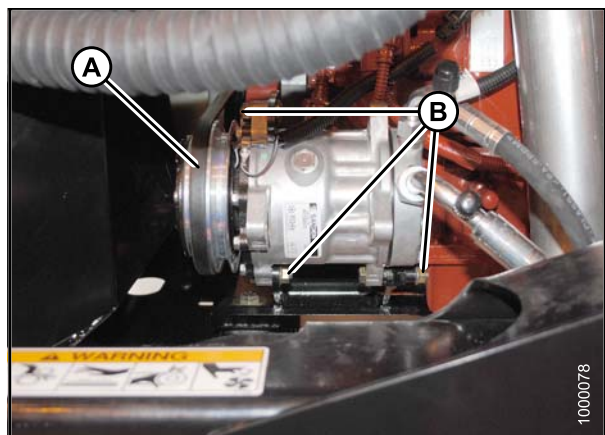


Figure 5.108: A/C Compressor

Tensioning Air Conditioner (A/C) Compressor Belt

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine and remove the key.
2. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 308.
3. Loosen compressor mounting hardware (B).
4. Pry compressor away from engine so that a force of 35–55 N (8–12 lbf) deflects the belt (A) 5 mm (3/16 in.) at mid-span.
5. Tighten compressor mounting hardware (B).
6. Recheck tension and adjust as required.
7. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 309.

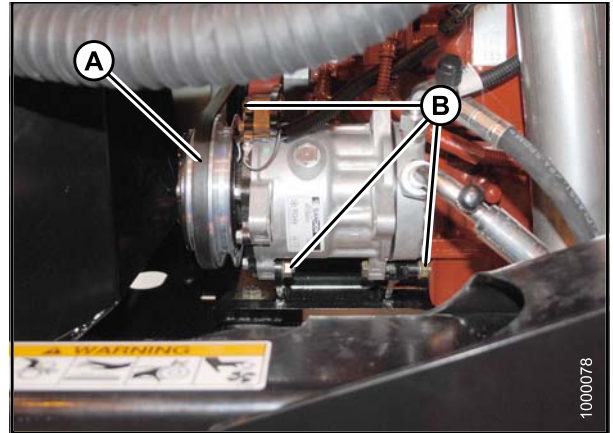


Figure 5.109: A/C Compressor

Replacing Air Conditioner (A/C) Compressor Belt

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine and remove the key.
2. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 308.
3. Loosen compressor mounting hardware (B) and push compressor towards engine to release tension.
4. Remove belt (A) from compressor.
5. Install new compressor belt (A).
6. Pry compressor away from engine so that a force of 35–55 N (8–12 lbf) deflects the belt (A) 5 mm (3/16 in.) at mid-span.
7. Tighten compressor mounting hardware (B).
8. Recheck tension and adjust as required.
9. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 309.

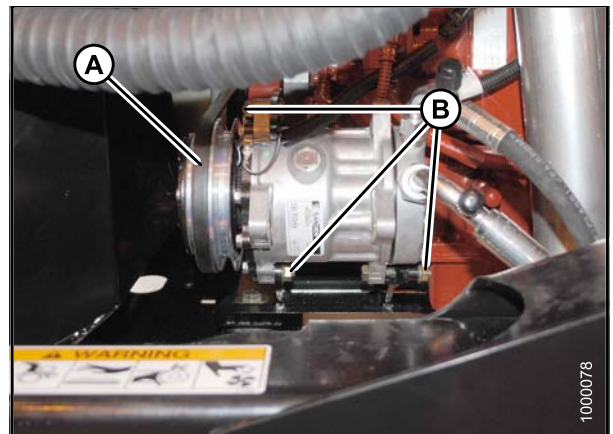


Figure 5.110: A/C Compressor

5.8.10 Engine Speed

The maximum and idle engine speeds are factory set.

Refer to [2.2 Specifications, page 30](#) for detailed information. If specified speeds cannot be maintained, see your MacDon Dealer.

Refer to [Engine Intermediate Speed Control \(ISC\), page 162](#) for additional information about engine speed.

Throttle Adjustment

The engine speed is controlled by a throttle lever connected to an electronic sensor inside the console.

The throttle lever in the cab should move the throttle sensor the full range between slow speed stop and full rpm stop without contacting the console at either position.

If the throttle lever is contacting the console and interferes with specified engine speeds, the sensor position may need adjustment. See your MacDon Dealer.

5.9 Electrical System

5.9.1 Preventing Electrical System Damage

To prevent electrical system damage, take the following precautions:

- Carefully observe polarity when attaching booster battery.
- Do **NOT** short across battery or alternator terminals, or allow battery positive (+) cable or alternator wire to become grounded.
- Be sure alternator connections are correct before cables are connected to battery.
- When welding on any part of the machine, disconnect battery cables and alternator wire. Refer to [1.8 Welding Precaution, page 9](#).
- Always disconnect battery ground cable when working with the alternator or regulator.
- Never attempt to polarize alternator or regulator.
- If wires are disconnected from the alternator, refer to [Figure 5.111: Alternator, page 371](#) to ensure proper connections.
- Never ground the alternator field terminal or field.
- Never connect or disconnect alternator or regulator wires with battery connected or alternator operating.
- Always disconnect cables from the battery when using a charger to charge battery in windrower.
- Ensure all cables are securely connected before operating engine.

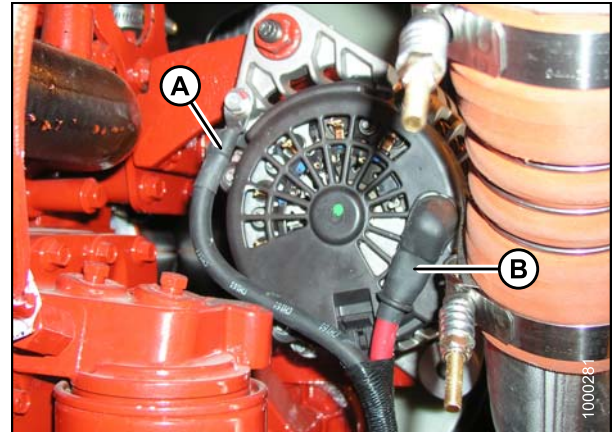


Figure 5.111: Alternator

A - Negative Terminal

B - Positive Terminal

5.9.2 Battery

Maintaining Batteries

⚠ CAUTION

Do NOT attempt to service battery unless you have the proper equipment and experience to perform the job. Have it done by a qualified Dealer.

- Check battery charge once a year, or more often if operating in cold weather. Hydrometer readings should be 1.260 to 1.300. Readings below 1.250 indicate charging is required. Refer to [Charging the Batteries, page 373](#). Add electrolyte if necessary. Refer to [Adding Electrolyte to the Battery, page 375](#).
- Keep batteries clean by wiping with a damp cloth.
- Keep all connections clean and tight; remove any corrosion and wash terminals with a solution of baking soda and water. A light coating of grease on terminals (after cables are attached) will reduce corrosion.

MAINTENANCE AND SERVICING

- To prolong battery life, store batteries in a cool, dry area, in an upright position, fully charged at -7° to +26°C (+20° to +80°F).
- Do NOT stack batteries on top of each other unless they are in cartons
- Test wet batteries every 4–6 months and recharge if necessary

Battery Main Disconnect Switch

A battery main disconnect switch (A) is located on the right cab-forward side frame rail, just behind the batteries, and can be easily accessed by moving the maintenance platform.

Ensure the switch is in the POWER OFF position when servicing electrical components, or to prevent loss of battery charge when the windrower will not be used for periods longer than one week.

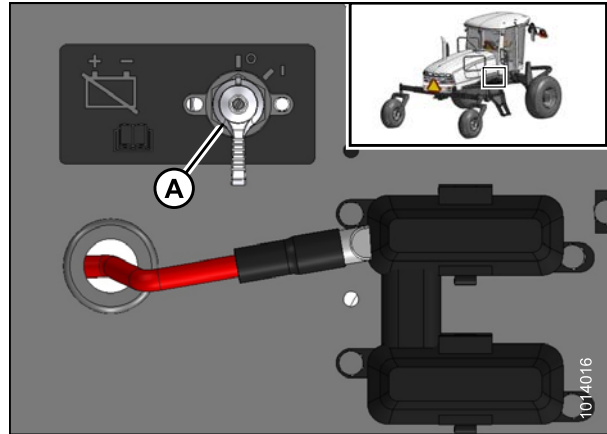


Figure 5.112: Battery Main Disconnect Switch

Charging the Batteries

CAUTION

- Ventilate the area where batteries are being charged.
- Do NOT charge a frozen battery. Warm to 16°C (60°F) before charging.
- Do NOT connect or disconnect live circuits. To prevent sparks, turn off charger and connect positive cable first. PROTECT YOUR EYES.
- If charging battery in windrower, disconnect POSITIVE battery cable before connecting charger cable, then connect ground cable last, away from battery.
- Stop or cut back charging rate if battery feels hot, or is venting electrolyte. Battery temperature must NOT exceed 52°C (125°F).
- The maximum charge rate in amperes should be NO MORE than 1/3 of the battery's reserve capacity minute rating. If the terminal voltage exceeds 16.0 volts while charging, reduce the charge rate.
- Continue charging and reduce the rate as needed until a two hour period results in no increase in voltage or decrease in current.

WARNING

- Gel and AGM (Absorbed Glass Mat) batteries require a voltage-limited charger. Charging a Gel or AGM battery on a typical shop charger—even one time—may greatly shorten its life.
- If the electrolyte is accessible, verify that plates are covered before beginning to charge. At the end of charge, add distilled water as needed to bring levels to the proper height. If water is added, charge for an additional 30 minutes to mix. If electrolyte levels are low, but battery is not accessible, remove battery from service.

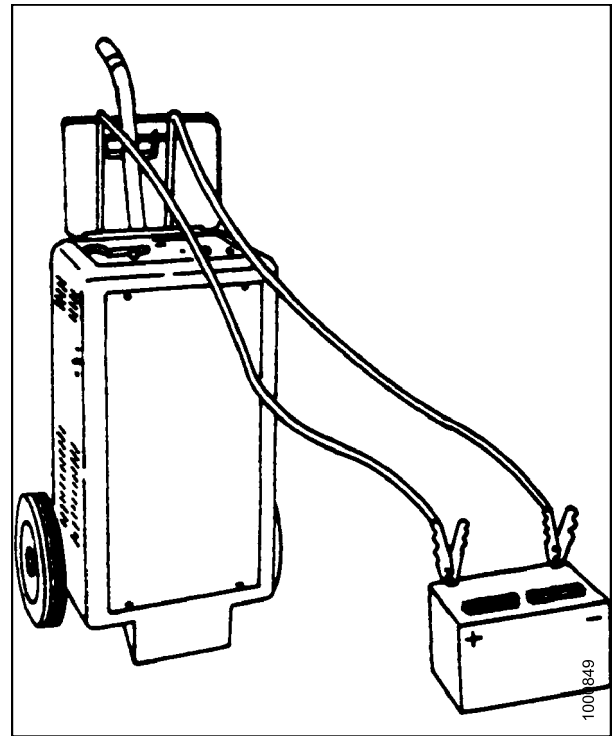


Figure 5.113: Charging Battery

Table 5.1 Voltage Chart

Voltage	State of Charge (%)	Approximate Battery Charging Time ³² to Full Charge at 27°C/80°F. (Minutes)			
		Maximum Rate at (Amps)			
Standard Battery					
12 Volts		50	30	20	10
12.6	100	— FULL CHARGE —			
12.4	75	20	35	48	90
12.2	50	45	75	95	180
12.0	25	65	115	145	280
11.8	0	85	150	195	370

32. Charging time depends upon battery capacity, condition, age, temperature, and efficiency of charger.

CAUTION

Follow all instructions and precautions furnished by the battery charger manufacturer, including the following:

- Charge at recommended rates and times.
- Turn off charger prior to hook up to avoid dangerous sparks. Wear proper eye protection.
- Reduce charge rate if the terminal voltage is higher than 16.0 volts while charging. The maximum charge rate in amperes should NOT exceed 1/3 of the battery's reserve capacity minute rating.
- Continue charging if there is no change in voltage or current for a period of two-hour and reduce the rate as needed.
- If the battery case gets hot during charging or spews large amount of gasses, temporarily stop charging.

IMPORTANT:

NEVER overcharge batteries. Excessive charging will shorten battery life.

To charge battery, follow these steps:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Move platform on right cab-forward side of machine to open position to allow access to the batteries. Refer to [5.3.1 Opening Platforms \(Standard Position\), page 311](#).
3. Remove red plastic cover (A) from positive cable clamps.
4. Remove black plastic cover (B) from negative terminals.
5. If charging battery in windrower, disconnect **positive** battery cable (A), then connect charger cable to positive post. Connect charger ground cable to the engine block last, away from battery.
6. Charge batteries in accordance with charger manufacturer's instructions.
7. Close platform. Refer to [5.3.2 Closing Platforms \(Standard Position\), page 312](#).

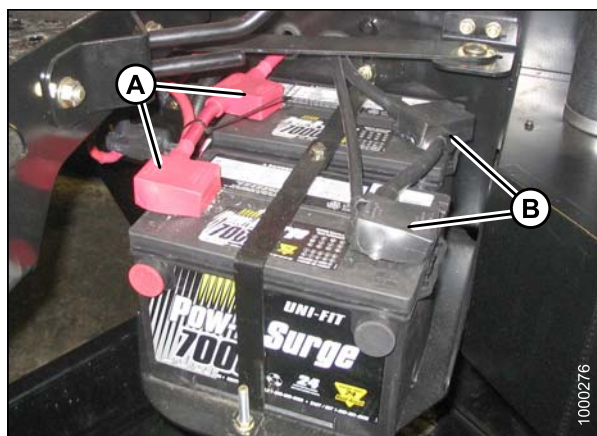


Figure 5.114: Battery Terminal Location

A - Positive Terminals

B - Negative Terminals

Boosting the Batteries

A 12 volt battery can be connected in parallel (+ to +) with the windrower battery. Use heavy-duty battery cables.

⚠ CAUTION

- Gas given off by batteries is explosive. Keep sparks and flames away from batteries.
- Make last connection and first disconnection at the point furthest away from the batteries.
- Wear protective eye-wear when using a booster battery.
- Be sure everyone is clear of machine when starting engine. Start engine from operator's station only.

1. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 308.

2. Remove red rubber cover from boost post (A) on windrower frame.

3. Attach one end of battery cable to positive (+) terminal of booster battery, and other end to positive boost post (A) on windrower frame.

4. Attach second cable to negative (-) terminal of booster battery, and then to ground post (B) on windrower frame.

5. Turn ignition switch in cab as with normal start up.

6. After engine starts, disconnect cable from windrower ground first, and then disconnect the other cables.

7. Replace rubber cover on boost post (A).

8. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 309.

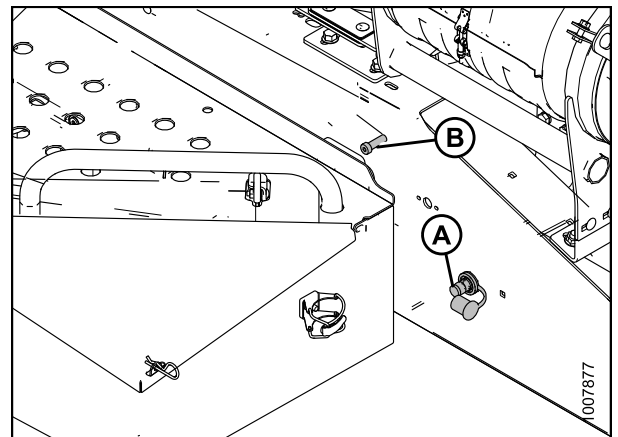


Figure 5.115: Battery Boost Posts

Adding Electrolyte to the Battery

Before servicing batteries, consult the battery manufacturer's instructions for proper procedures and safety precautions.

⚠ WARNING

- Keep all smoking materials, sparks, and flames away from electrolyte container and battery. Gas given off by electrolyte is explosive.
- Battery electrolyte causes severe burns. Avoid contact with skin, eyes, or clothing. Wear protective eyewear and heavy gloves.



Figure 5.116: Battery Safety

⚠ WARNING

- If electrolyte is spilled or splashed on clothing or on the body, neutralize it immediately with a solution of baking soda and water, then rinse with clean water.
- Electrolyte splashed into the eyes is extremely dangerous. Should this occur, force the eye open, and flood with cool, clean water for five minutes. Call a Doctor immediately.

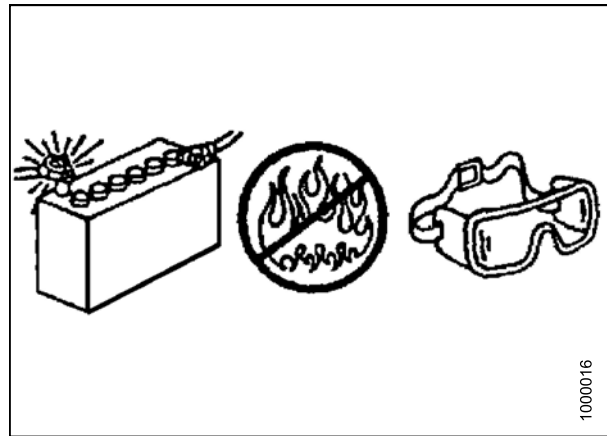


Figure 5.117: Battery Safety

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. If the batteries are installed in the windrower, stop the engine and remove the key.
2. Open the platform on the right side of the cab. Refer to [5.3.1 Opening Platforms \(Standard Position\), page 311](#).
3. Add electrolyte in accordance with the battery manufacturer's instructions.
4. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\), page 312](#).

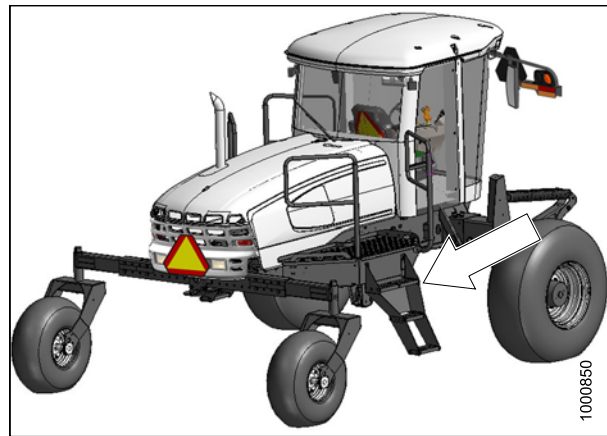


Figure 5.118: Platform Location

Removing Batteries

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

⚠ CAUTION

Do not attempt to service battery unless you have the proper equipment and experience to perform the job. Have it done by a qualified Dealer.

1. Stop the engine and remove the key.
2. Open the right cab-forward platform to expose the batteries. Refer to [5.3.1 Opening Platforms \(Standard Position\), page 311](#).

MAINTENANCE AND SERVICING

3. Ensure the battery main disconnect switch (A) is turned to the POWER OFF position (the battery main disconnect switch is located on the right-hand frame rail beside the batteries).

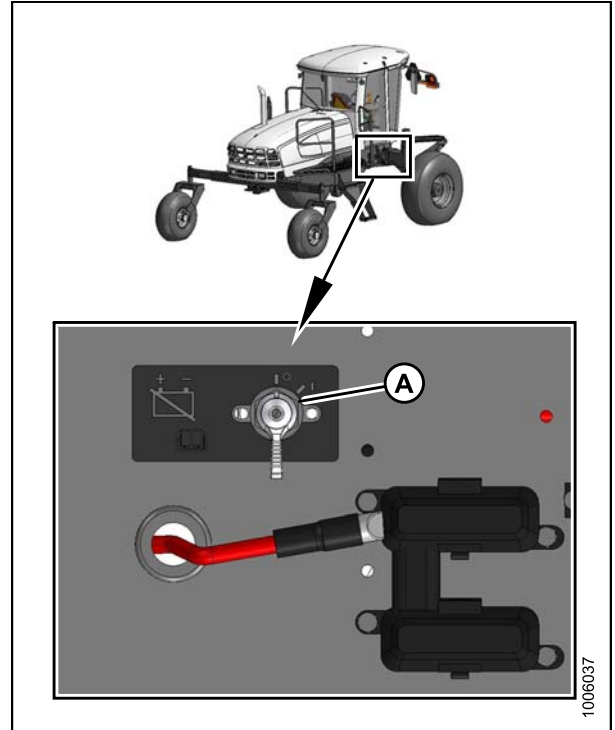


Figure 5.119: Battery Main Disconnect Switch

4. Remove the bolt (A) that secures the platform arm to the platform. Swing arm (B) out of the way.
5. Remove the black plastic cover from the negative cable clamps (D). Loosen clamps and remove cable from batteries.
6. Remove the red plastic cover from positive cable clamps (C). Loosen the clamps and remove cable from batteries.
7. Remove bolts (E) securing strap (F) to frame, and remove strap.
8. Lift batteries off holder (G).

NOTE:

Dual battery support can be removed from frame by simply lifting support, and pulling it away from frame.

IMPORTANT:

- Store batteries in a cool, dry area in an upright position
- Do NOT stack batteries on top of each other unless they are in cartons
- Test wet batteries every 4–6 months and recharge if necessary

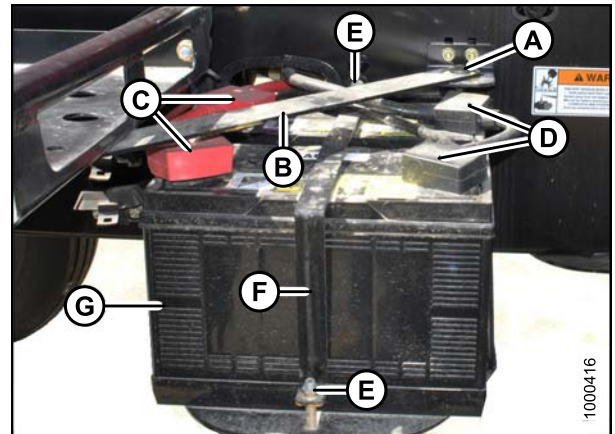


Figure 5.120: Battery

Installing Batteries

Replacement batteries must meet the specifications shown in the following table:

Table 5.2 Battery Specification

Rating	Group	CCA (min)	Volt	Maximum Dimension
Heavy duty, off-road, vibration resistant	BCI 29H or 31A	650	12	334 x 188 x 232 mm (13.25 x 7.37 x 9.44 in.)

1. Ensure the battery main disconnect switch (A) is turned to the POWER OFF position (the battery main disconnect switch is located on the right-hand frame rail beside the batteries).
2. Open the right cab-forward platform to expose the batteries. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.
3. Remove cable ties securing battery cables to battery clamp.

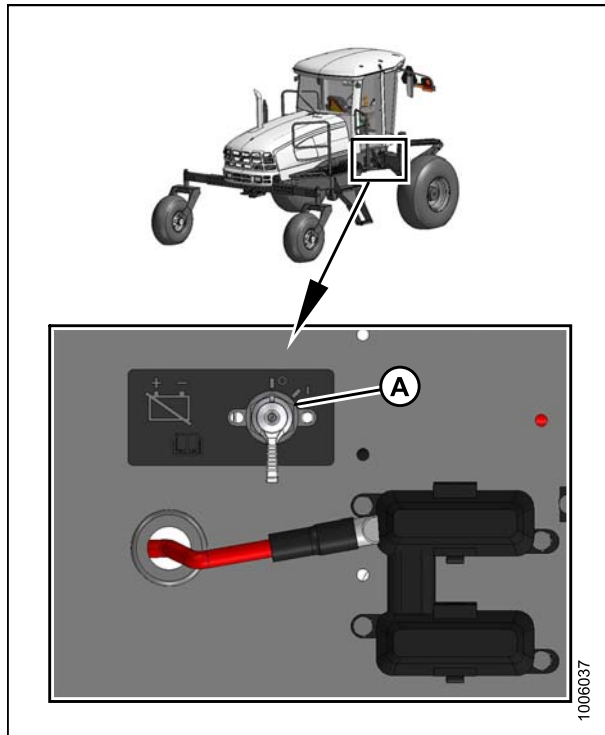


Figure 5.121: Battery Main Disconnect Switch

4. Position new batteries (G) on dual battery support.

NOTE:

Ensure that batteries are positioned so that the positive posts (C) face aft.

5. Install strap (F) with bolts (E).
6. Rotate bar (B) into position and secure with bolt (A).
7. Connect battery cables. Refer to [Connecting Batteries](#), page 379.
8. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 312.

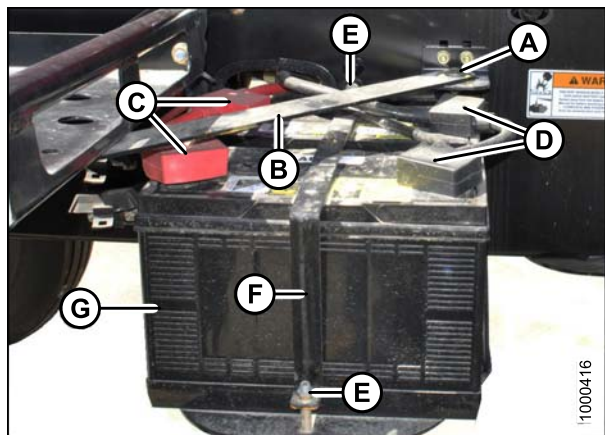


Figure 5.122: Battery

Connecting Batteries

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop engine and remove the key.
2. Open the right-hand (cab-forward) maintenance platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.
3. Ensure the battery main disconnect switch (A) is turned to the POWER OFF position (the battery main disconnect switch is located on the right-hand frame rail beside the batteries).
4. Remove the cable ties securing the battery cables to the battery clamps.

IMPORTANT:

Batteries are negative grounded. Always connect red starter cables to the positive (+) terminals of the batteries and black ground cables to the negative (-) terminals of the batteries. Reversed polarity in the batteries or alternator may result in permanent damage to the electrical system.

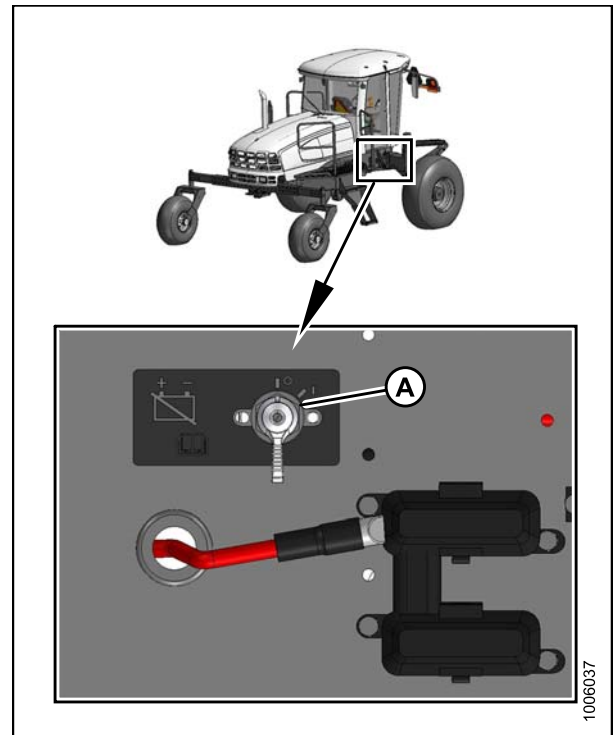


Figure 5.123: Battery Main Disconnect Switch

5. Remove the plastic caps from the battery posts.
6. Attach the red positive (+) cable terminals to the positive posts (A) on the batteries and tighten clamps. Reposition plastic covers onto clamps.
7. Attach the black negative (-) cable terminals to the negative posts (B) on the batteries and tighten clamps. Reposition plastic covers onto clamps.
8. Turn the battery switch to the POWER ON position.
9. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 312.

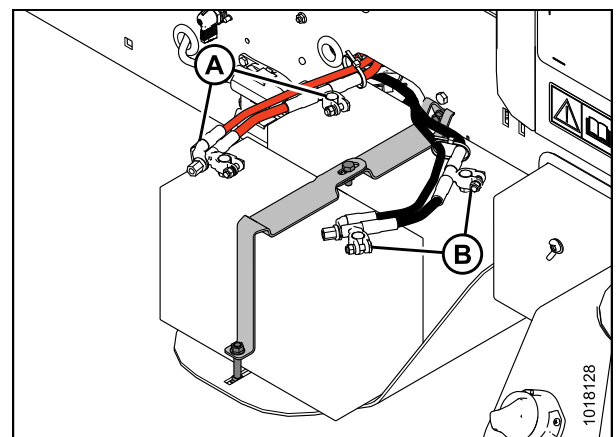


Figure 5.124: Batteries

5.9.3 Headlights: Engine-Forward

Replacing Headlight Bulb

1. Remove two screws (A) and remove headlight assembly from hood.



Figure 5.125: Headlight

2. Pull wiring harness connector off the headlight assembly and remove rubber insulator boot (A).

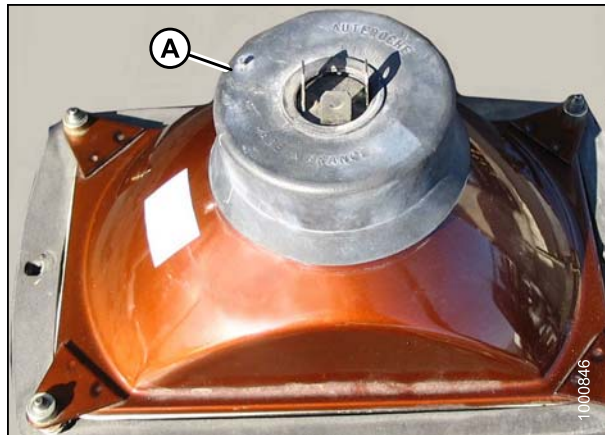


Figure 5.126: Headlight Assembly

3. Pinch the wire retainer (A) and lift away from hooks.
4. Remove bulb (B) from body.

IMPORTANT:

Do **NOT** touch the glass of the halogen bulb as the oils or other chemicals from your skin will cause the bulb to fail prematurely.

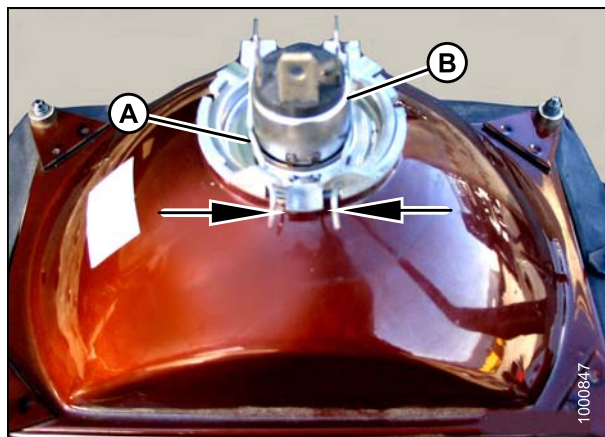


Figure 5.127: Headlight Assembly

MAINTENANCE AND SERVICING

5. Align lugs (B) on new bulb with slots (C) in body and push into place.
6. Secure bulb with wire retainer (A).

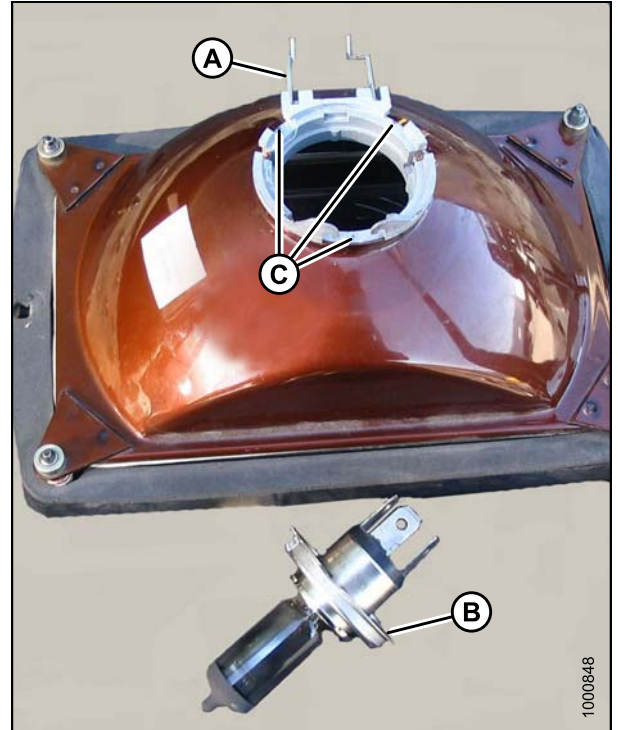


Figure 5.128: Headlight Assembly

7. Replace rubber insulator boot (A).
8. Push connector onto light bulb.

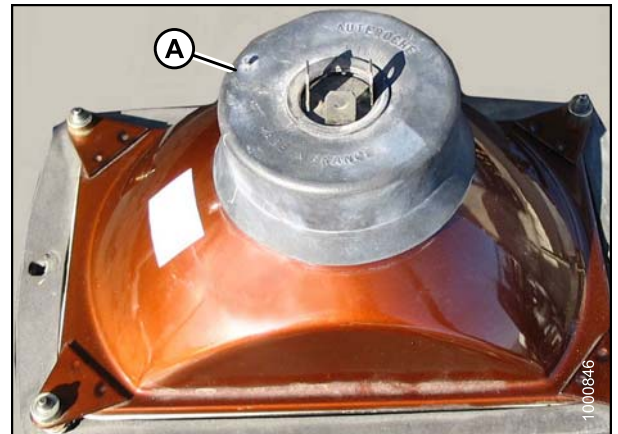


Figure 5.129: Headlight Assembly

MAINTENANCE AND SERVICING

9. Position headlight into light receptacle, ensuring top is up, and secure with screws (A). To align the headlights, refer to *Aligning Headlights, page 382*.



Figure 5.130: Headlight

Aligning Headlights

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

Header should be attached and raised to maintain proper windrower stance.

1. Position windrower on level ground in front of a vertical surface in accordance with the illustration.
2. Shut down engine and remove key.

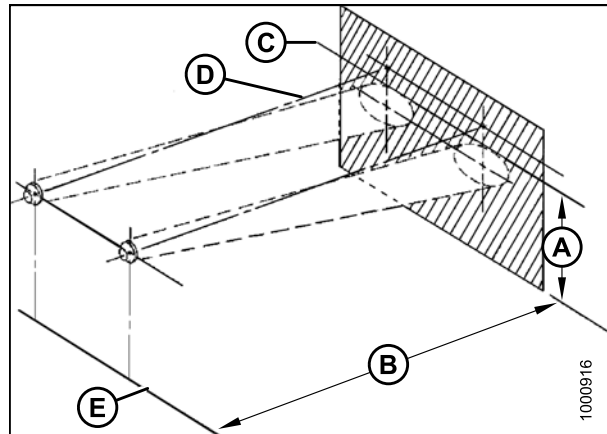


Figure 5.131: Headlight Beam Positioning

- A - 1263 mm (49-3/4 in.) Maximum
- B - 7.5 m (25 ft)
- C - Top Edge of Beam
- D - Beam Centered on Direction of Travel Line
- E - Ground

MAINTENANCE AND SERVICING

- Turn on ROAD (A) lights and switch to low beam (B).

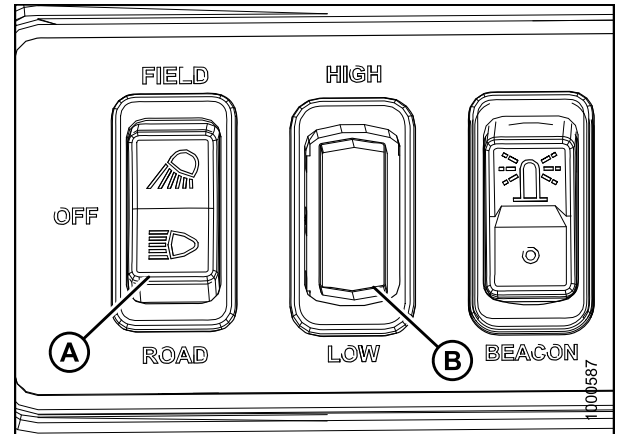


Figure 5.132: Road Light Switch

- Align the headlights to the following specifications by turning adjusting screws (A).
 - Adjustments are for low beam.
 - Light beams laterally centered on the direction of travel line from the headlights (that is, **NOT** skewed left or right).



Figure 5.133: Headlights

- Upper limit of the beam **NOT** higher than 1263 mm (49-3/4 in.) above ground at a distance of 7.5 m (25 ft.) from the headlight.

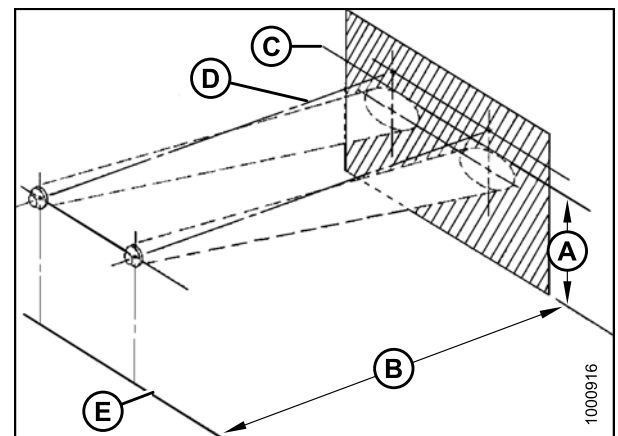


Figure 5.134: Headlight Beam Positioning

- A - 1263 mm (49-3/4 in.) Maximum
- B - 7.5 m (25 ft)
- C - Top Edge of Beam
- D - Beam Centered on Direction of Travel Line
- E - Ground

5.9.4 Field Lights: Cab-Forward

Adjusting Field Lights

The field lights are best adjusted with the machine in the field (or equivalent) to suit Operator preference.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Hold onto handholds (A) on the cab front corners, and stand on header anti-slip strips.

2. Adjust lights with screws (A).

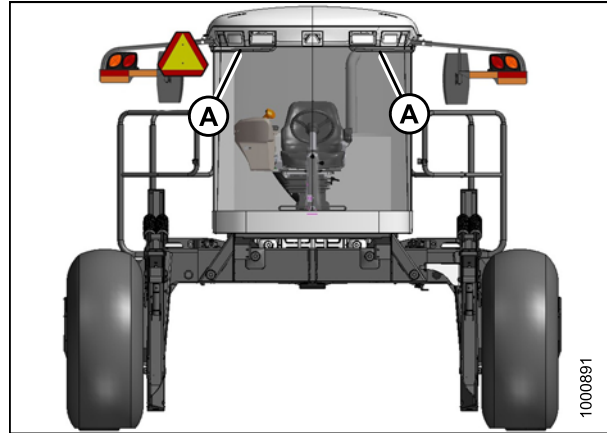


Figure 5.135: Windrower Cab Forward

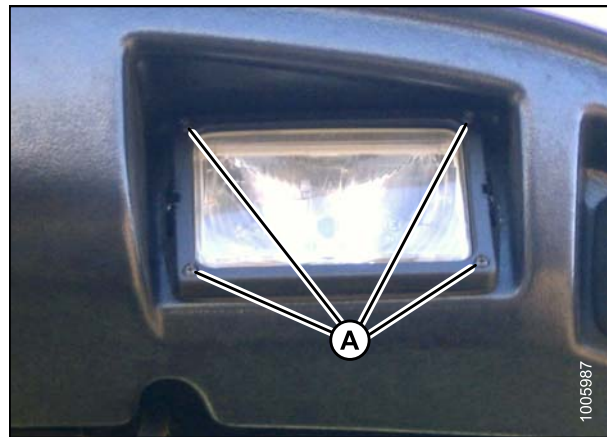


Figure 5.136: Field Lights

Replacing Field Light Bulb

1. Remove two screws (A), and remove light assembly.
2. Replace bulb as described in [Replacing Field Light Bulb, page 384](#).

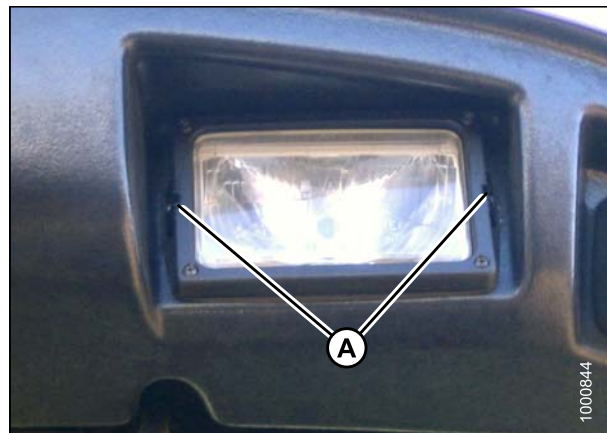


Figure 5.137: Field Lights

5.9.5 Flood Lights: Forward

Adjusting Forward Flood Lights

The forward flood lights are **NOT** adjustable.

Replacing Bulb in Cab-Forward Flood Light

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Replace bulbs as follows:

1. Shut down engine and remove key. Turn lights OFF.
2. Hold onto the handholds (A) on the cab front corners and stand on the header anti-slip strips when removing the forward field lights.
3. Remove two screws (B) and remove light bezel (C).
4. Remove light from receptacle.

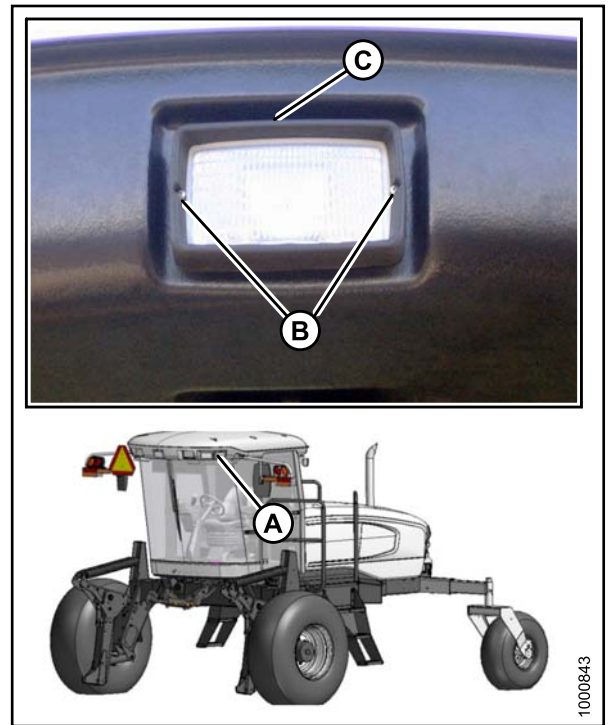


Figure 5.138: Forward Floodlights

MAINTENANCE AND SERVICING

5. Pinch the wire retainer (A) and lift away from hooks.
6. Remove bulb (B) from body and pull wire from connector (C).

IMPORTANT:

Do **NOT** touch the glass of the halogen bulb as the oils or other chemicals from your skin will cause the bulb to fail prematurely.

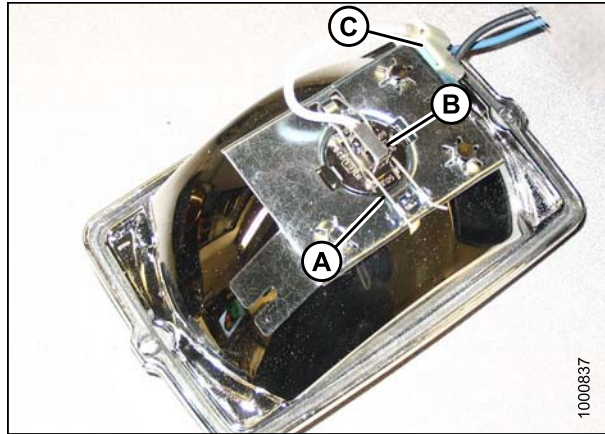


Figure 5.139: Floodlight Assembly

7. Match slots on new bulb (B) with lugs (D) in optical unit and insert bulb into unit.
8. Secure bulb with wire retainer (A).
9. Push wire into connector (C).

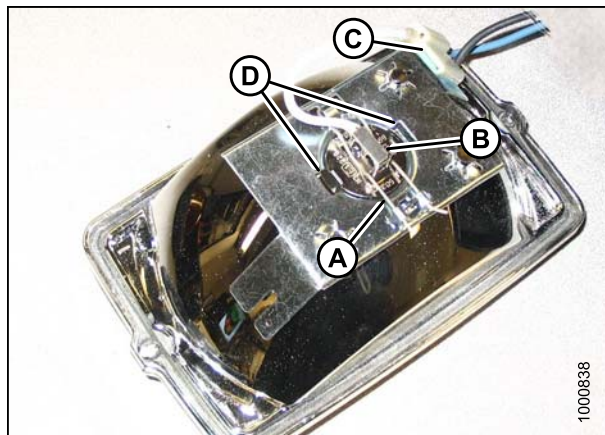


Figure 5.140: Floodlight Assembly

10. Position light into light receptacle, ensuring top is up and secure with bezel (C) and screws (B).

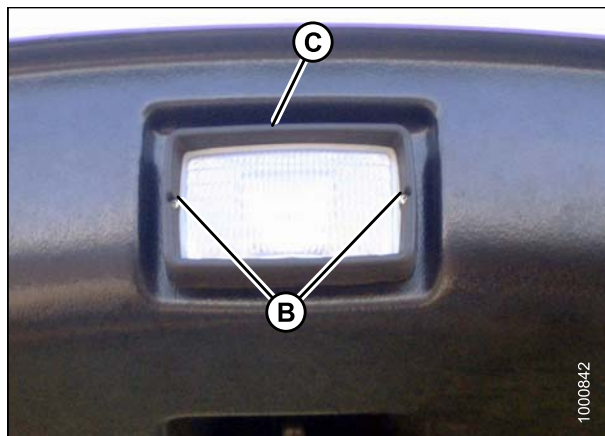


Figure 5.141: Forward Floodlight

5.9.6 High-Intensity Discharge (HID) Auxiliary Lighting (Optional – MD #B5596)

Two optional HID lights provide additional lighting during field operation. They operate only in cab-forward mode.

MAINTENANCE AND SERVICING

Adjusting High-Intensity Discharge (HID) Auxiliary Lights (if Installed)

If installed, HID auxiliary lights are best adjusted with the machine in the field (or equivalent) to suit Operator preference.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down engine and remove key. Turn lights ON.
2. Loosen bolt (A) and nut (C) (located inside light/mirror support).
3. Position light (B) to desired position.
4. Tighten bolt and nut.

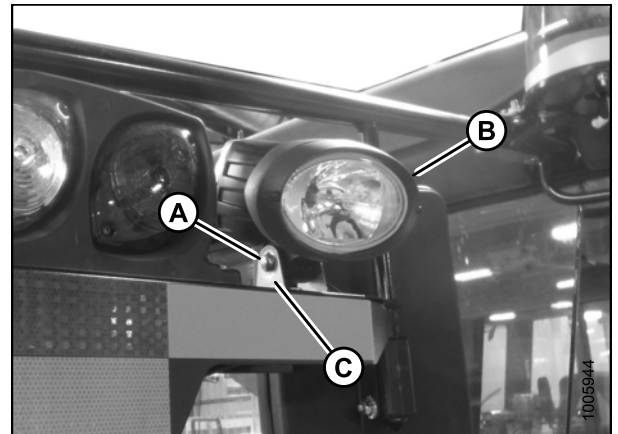


Figure 5.142: HID Auxiliary Lights

Replacing High-Intensity Discharge (HID) Auxiliary Lights (if Installed)

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

To remove and replace the lamp only, follow these steps:

1. Shut down engine and remove key. Turn lights OFF.

NOTE:

Hold onto the handholds (A) on the cab front corners and stand on the header anti-slip strips, or stand on the maintenance platform when accessing the HID auxiliary lights.

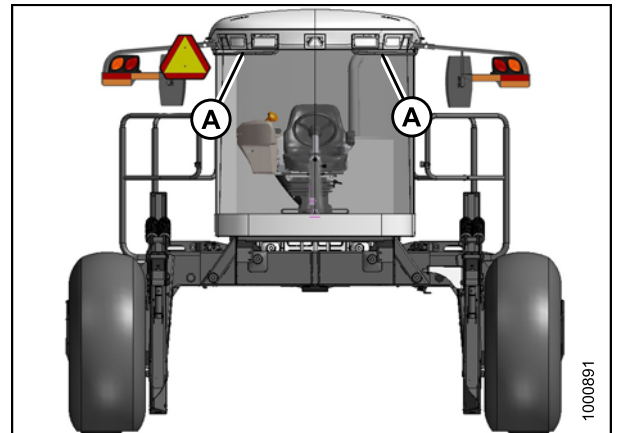


Figure 5.143: Cab-Forward Lights

MAINTENANCE AND SERVICING

2. Remove the nut, spring washer, and bolt (A) that secure the lamp (B) to lamp bracket (C).
3. Remove lamp (B).
4. Position the new lamp (B) in lamp bracket (C) and secure with bolt (A), spring washer, and nut.
5. Adjust lamp (B) to desired position and tighten bolt (A).

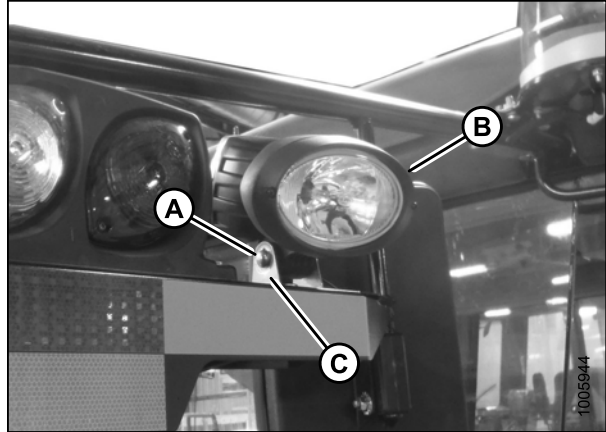


Figure 5.144: HID Auxiliary Lights

To remove and replace the HID lamp assembly, follow these steps:

1. Disconnect lamp connector (A) from electrical harness (B).

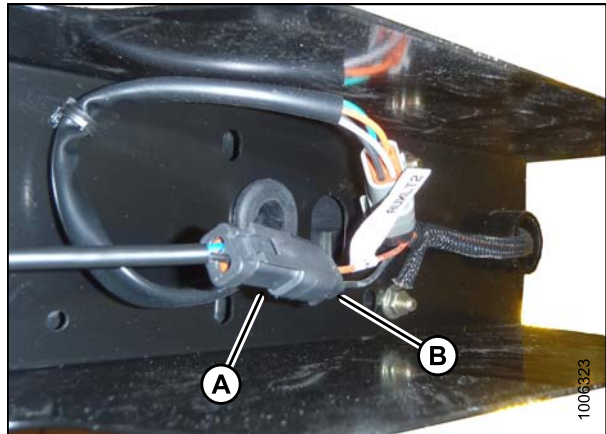


Figure 5.145: HID Auxiliary Light Harness

2. Remove grommet (A) from light support (B).
3. Remove nut (C) and spring washer from inside light support (B).
4. Remove the lamp assembly.

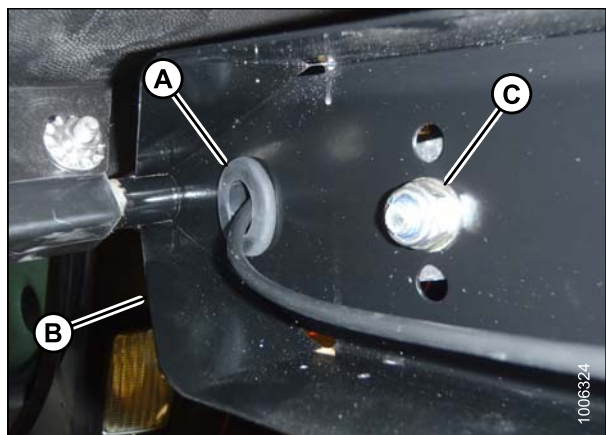


Figure 5.146: HID Light Assembly

MAINTENANCE AND SERVICING

5. Locate light in center hole in light support (B) and secure with hardware (C) provided with light assembly.
6. Adjust light assembly to desired position and tighten nut (C).
7. Route lamp harness through grommet (A) and slot in light support (B).
8. Reinstall grommet (A) in light support (B).

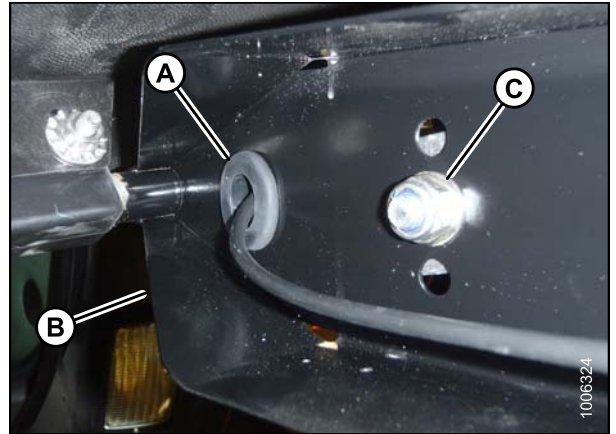


Figure 5.147: HID Light Assembly

9. Connect lamp plug (A) to main harness connector (B).

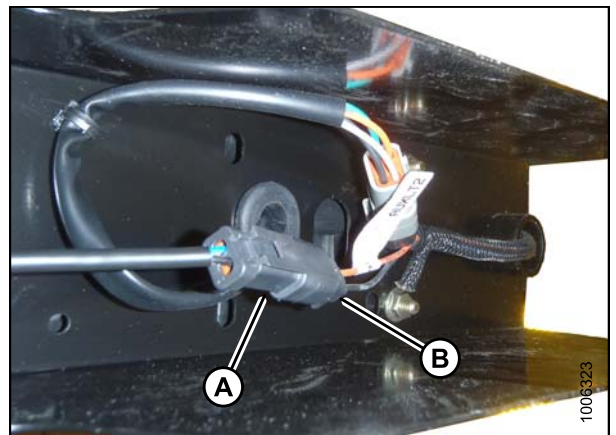


Figure 5.148: HID Auxiliary Light Harness

5.9.7 Flood Lights: Rear

Adjusting Rear Flood Lights

The rear flood lights are best adjusted with the machine in the field (or equivalent) to suit Operator preference.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

1. Shut down engine and remove key. Turn lights ON.
2. Loosen bolts (A) and (B).
3. Position light to desired position.
4. Tighten bolts (A) and (B).

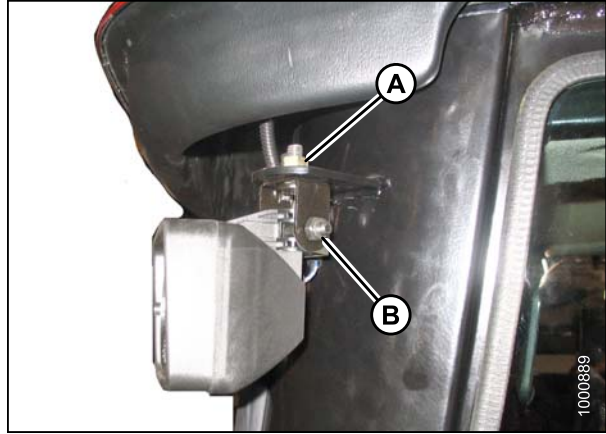


Figure 5.149: Rear Flood Light

Replacing Bulb in Rear Flood Light

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down engine and remove key. Turn lights OFF.
2. Remove two screws (A) and remove light bezel (B).
3. Remove light from receptacle.

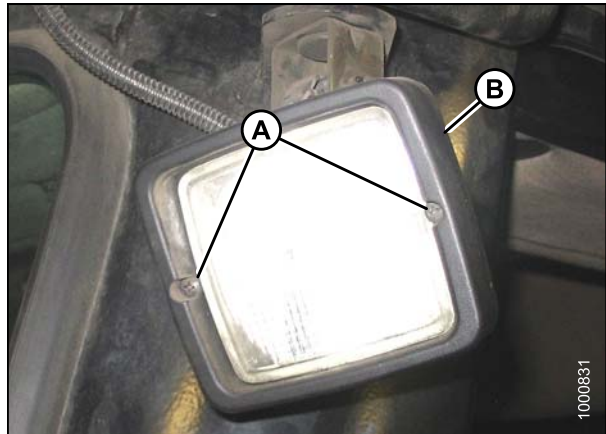


Figure 5.150: Rear Flood Light

IMPORTANT:

Do **NOT** touch the glass of the halogen bulb as the oils or other chemicals from your skin will cause the bulb to fail prematurely.

MAINTENANCE AND SERVICING

4. Pinch the wire retainer (A) and lift away from hooks.
5. Remove bulb (B) from body and pull wire from connector (D).
6. Match slots on new bulb (B) with lugs (C) in optical unit and insert bulb into unit.
7. Secure bulb with wire retainer (A).
8. Push wire into connector (D).

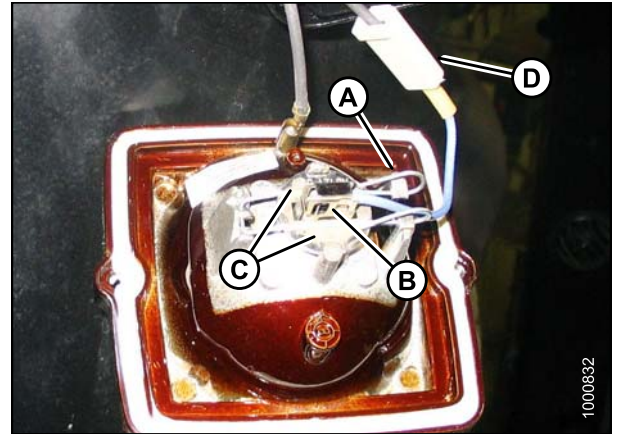


Figure 5.151: Rear Flood Light Assembly

9. Position light into light receptacle, ensuring top is up.
10. Secure with bezel (B) and screws (A).

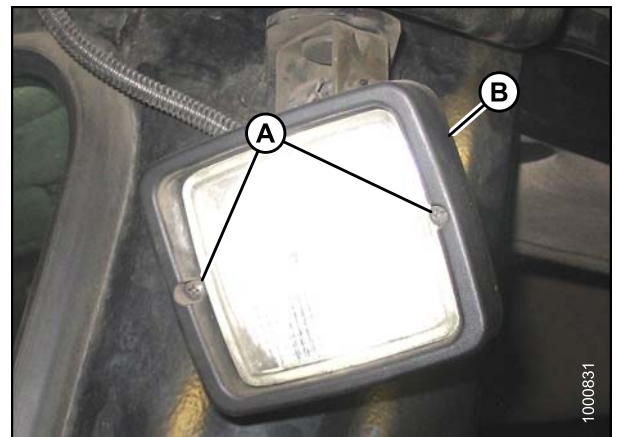


Figure 5.152: Rear Flood Light

5.9.8 Replacing Bulbs in Red and Amber Lights

To replace bulbs in red and amber lights, follow these steps:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

1. Shut down engine and remove key. Turn lights OFF.

NOTE:

Hold onto the handholds (A) on the cab front corners and stand on the header anti-slip strips, or stand on the maintenance platform when accessing the red and amber lights.

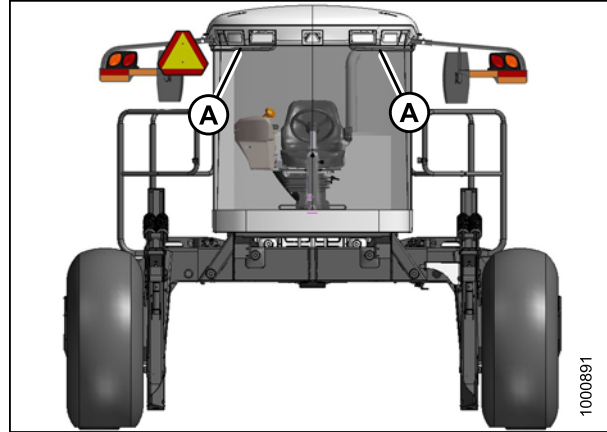


Figure 5.153: Windrower Cab Forward

2. Remove two screws (A) from lens and remove lens.
3. Push and twist light bulb to remove from socket.
4. Install new bulb in socket ensuring that bulb base is properly engaged in socket.
 - Use Bulb Trade #1157 for red taillights
 - Use Bulb Trade #1156 for amber lights
5. Reinstall lens with screws (B).

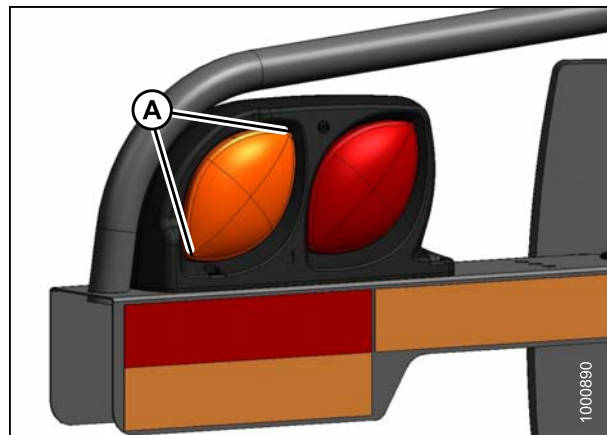


Figure 5.154: Red and Amber Lights

5.9.9 Replacing Red Taillights

Red taillights are included with the Lighting and Marking for Cab-Forward Road Travel Kit (MD #B5412). To replace the red taillights, follow these steps:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

1. Shut down engine and remove key. Turn lights OFF.
2. In the grill of the hood, remove two screws (A) from light (B), and remove light.
3. Remove connector from light.
4. Connect wiring harness to new light (B) and install light with screws (A).

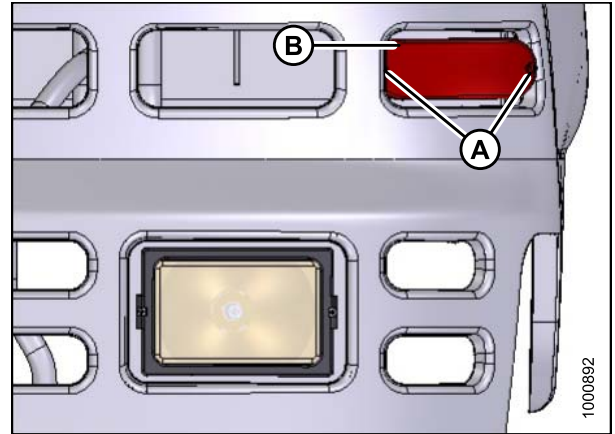


Figure 5.155: Red Taillights

5.9.10 Replacing the Bulbs in Beacon Lights (if installed)

Beacon warning lights are available as an optional Dealer-installed attachment (MD #B5582).

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

To replace the halogen bulb inside the beacon warning lights, follow these steps:

1. Shut down engine and remove key. Turn beacons OFF.

NOTE:

Hold onto the handholds (B) on the cab front corners and stand on the header anti-slip strips, or stand on the maintenance platform when accessing the beacons (A).

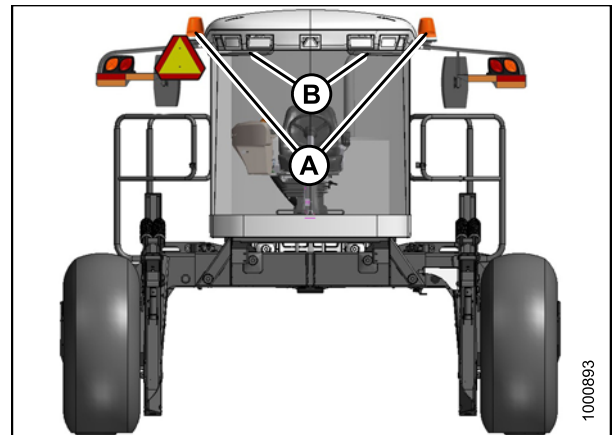


Figure 5.156: Warning Beacons

MAINTENANCE AND SERVICING

2. Turn lens (A) counterclockwise to unlock lens from base and remove lens.

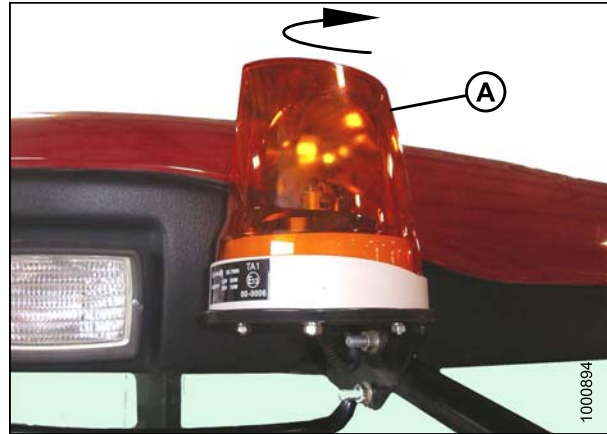


Figure 5.157: Warning Beacon

3. Pinch retainer (A) and remove it from lamp socket.
4. Pull lamp out of socket.



Figure 5.158: Beacon Lamp Assembly

MAINTENANCE AND SERVICING

5. Disconnect harness from lamp.

IMPORTANT:

Do **NOT** touch the glass (A) of the halogen bulb as the oils or other chemicals from your skin will cause the bulb to fail prematurely.



Figure 5.159: Beacon Lamp Assembly

6. Connect harness to new lamp, place lamp in socket, and line up the flat side on lamp with recess in socket.



Figure 5.160: Beacon Lamp Assembly

MAINTENANCE AND SERVICING

- Place retainer (A) over lamp and pinch tabs to secure retainer to socket.



Figure 5.161: Beacon Lamp Assembly

- Line up the three lugs (one is longer) in the base with slots in lens, and seat the lens against the rubber seal.



Figure 5.162: Beacon Lamp Assembly

MAINTENANCE AND SERVICING

9. Turn the lens clockwise to lock it in place.

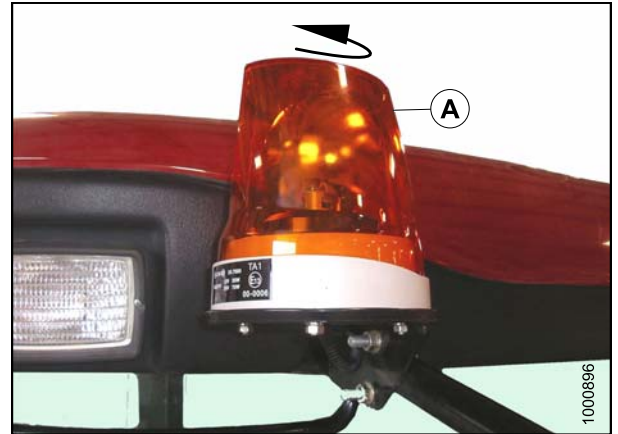


Figure 5.163: Warning Beacon

5.9.11 Replacing a Console Gauge Light

To replace a light inside one of the console gauges, follow these steps:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down engine and remove key. Turn lights OFF.
2. Remove the appropriate gauge access hole decal (A) behind the operator's console.

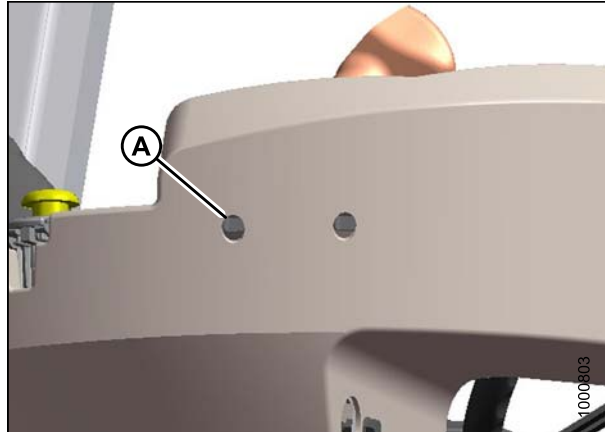


Figure 5.164: Operator Console

3. Remove nut (B) securing mounting bracket (C) to gauge inside the console.
4. Pull gauge out from console. It is **NOT** necessary to disconnect the wiring harness from the back of gauge.
5. Twist bulb holder (D) counterclockwise until loose and pull bulb holder from back of gauge.
6. Insert new bulb into gauge and turn clockwise until it locks.
7. Push gauge into console.
8. Locate bracket (C) onto back of gauge and secure with nut (B). Tighten nut.
9. Replace gauge access-hole decal.

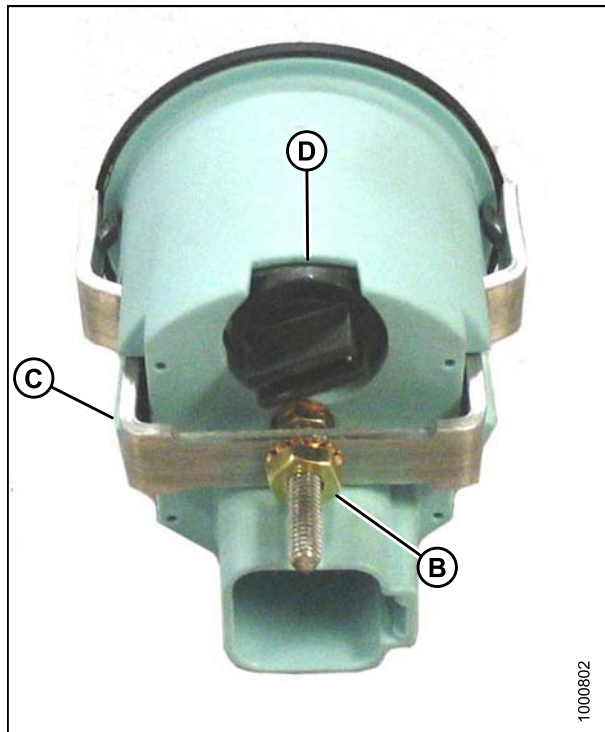


Figure 5.165: Back of Console Gauge

5.9.12 Replacing the Cabin Dome Light

To replace a cabin dome light in the headliner switch panel, follow these steps:

1. Remove two screws (A) from the dome light assembly and remove the assembly.
2. Disconnect the old dome light assembly from the wiring harness.
3. Connect the new dome light (MD #183413) to the wiring harness.
4. Install the new dome light with two screws (A).

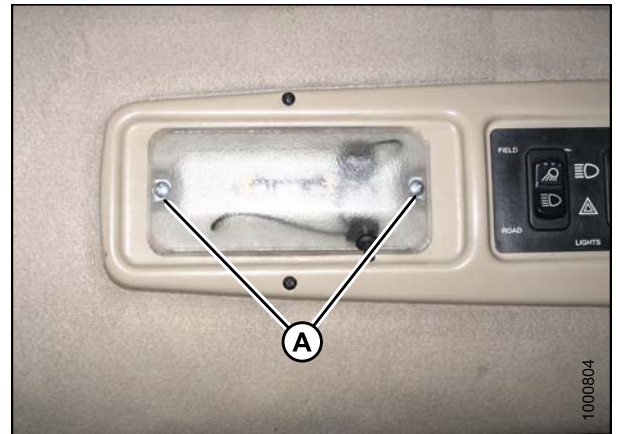


Figure 5.166: Cabin Dome Light

5.9.13 Replacing the Ambient Light Fixture

To replace the ambient light fixture, follow these steps:

1. Locate the ambient light fixture (A) in the roof liner.

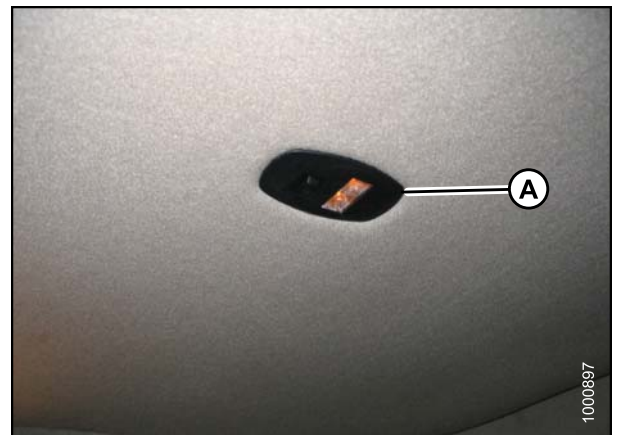


Figure 5.167: Ambient Light Fixture

2. Push against tabs (A) with a screwdriver and pull ambient light fixture out of cab roof.
3. Remove wires from connectors (B).
4. Connect wires to new light fixture.
5. Push into place in cab roof until tabs hold fixture in place.

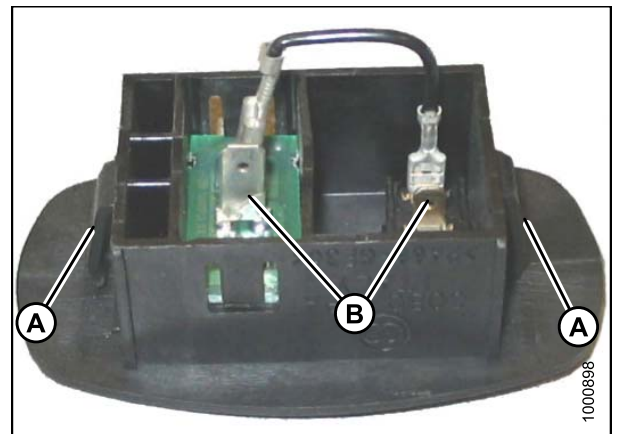


Figure 5.168: Ambient Light Fixture

5.9.14 Turn Signal Indicators

If the turn signal indicators on the operator console do not function, contact your MacDon Dealer.

5.9.15 Circuit Breakers and Fuses

The circuit breakers and fuses are located inside a fuse box mounted on the right (cab-forward) side of the frame under the platform.

Accessing Circuit Breakers and Fuses

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Access the breakers and fuses as follows:

1. Stop engine and remove key.
2. Move right (cab-forward) side platform rearward. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.
3. Remove wing nut (A) and remove fuse box cover (B).
4. A cover may be installed over the circuit breaker. Remove it to access the breaker.

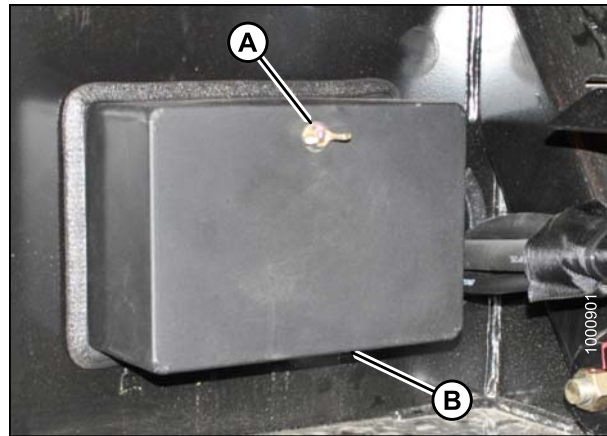


Figure 5.169: Fuse Box

Checking and Replacing Fuses

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Open the right (cab-forward) side platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.

MAINTENANCE AND SERVICING

3. Refer to the decal on inside of cover for identification of fuses and circuit breakers.
4. To check fuse, pull fuse out of receptacle and visually examine.
5. To replace fuse, insert new fuse into receptacle.

IMPORTANT:

Replacement fuses should match rating on decal shown on [Fuse Box Decal, page 402](#).

6. Reinstall cover and secure with wing nut.

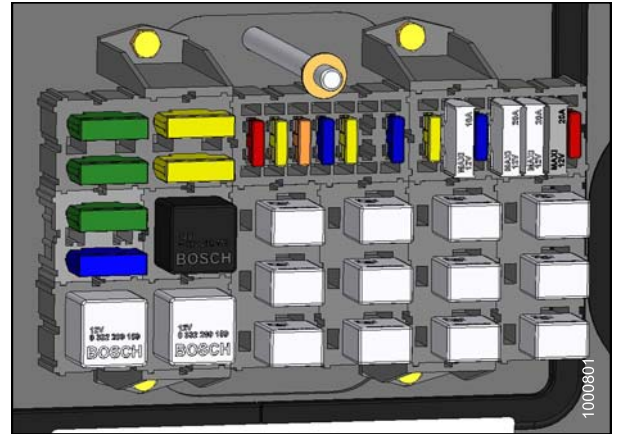


Figure 5.170: Fuses

Replacing Circuit Breakers and Relays

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Replace breakers and relays as follows:

1. Stop engine and remove key.
2. Move right cab-forward side platform rearward (cab-forward).
3. To replace circuit breaker (A), pull breaker out of receptacle and install new circuit breaker.
4. To replace relay (B), pull relay out of receptacle and install new relay.
5. Reinstall cover and secure with wing nut.

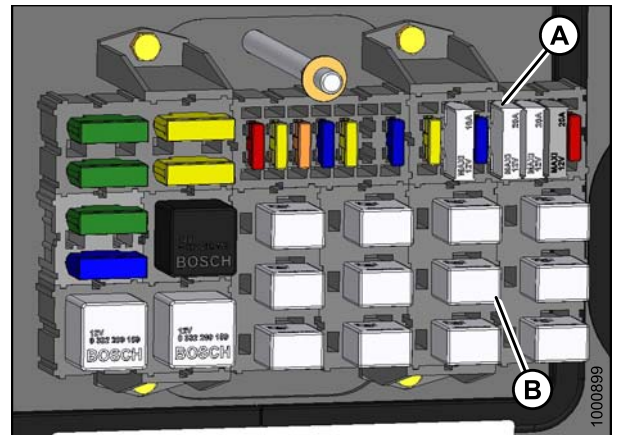


Figure 5.171: Relays and Breakers

MAINTENANCE AND SERVICING

Fuse Box Decal

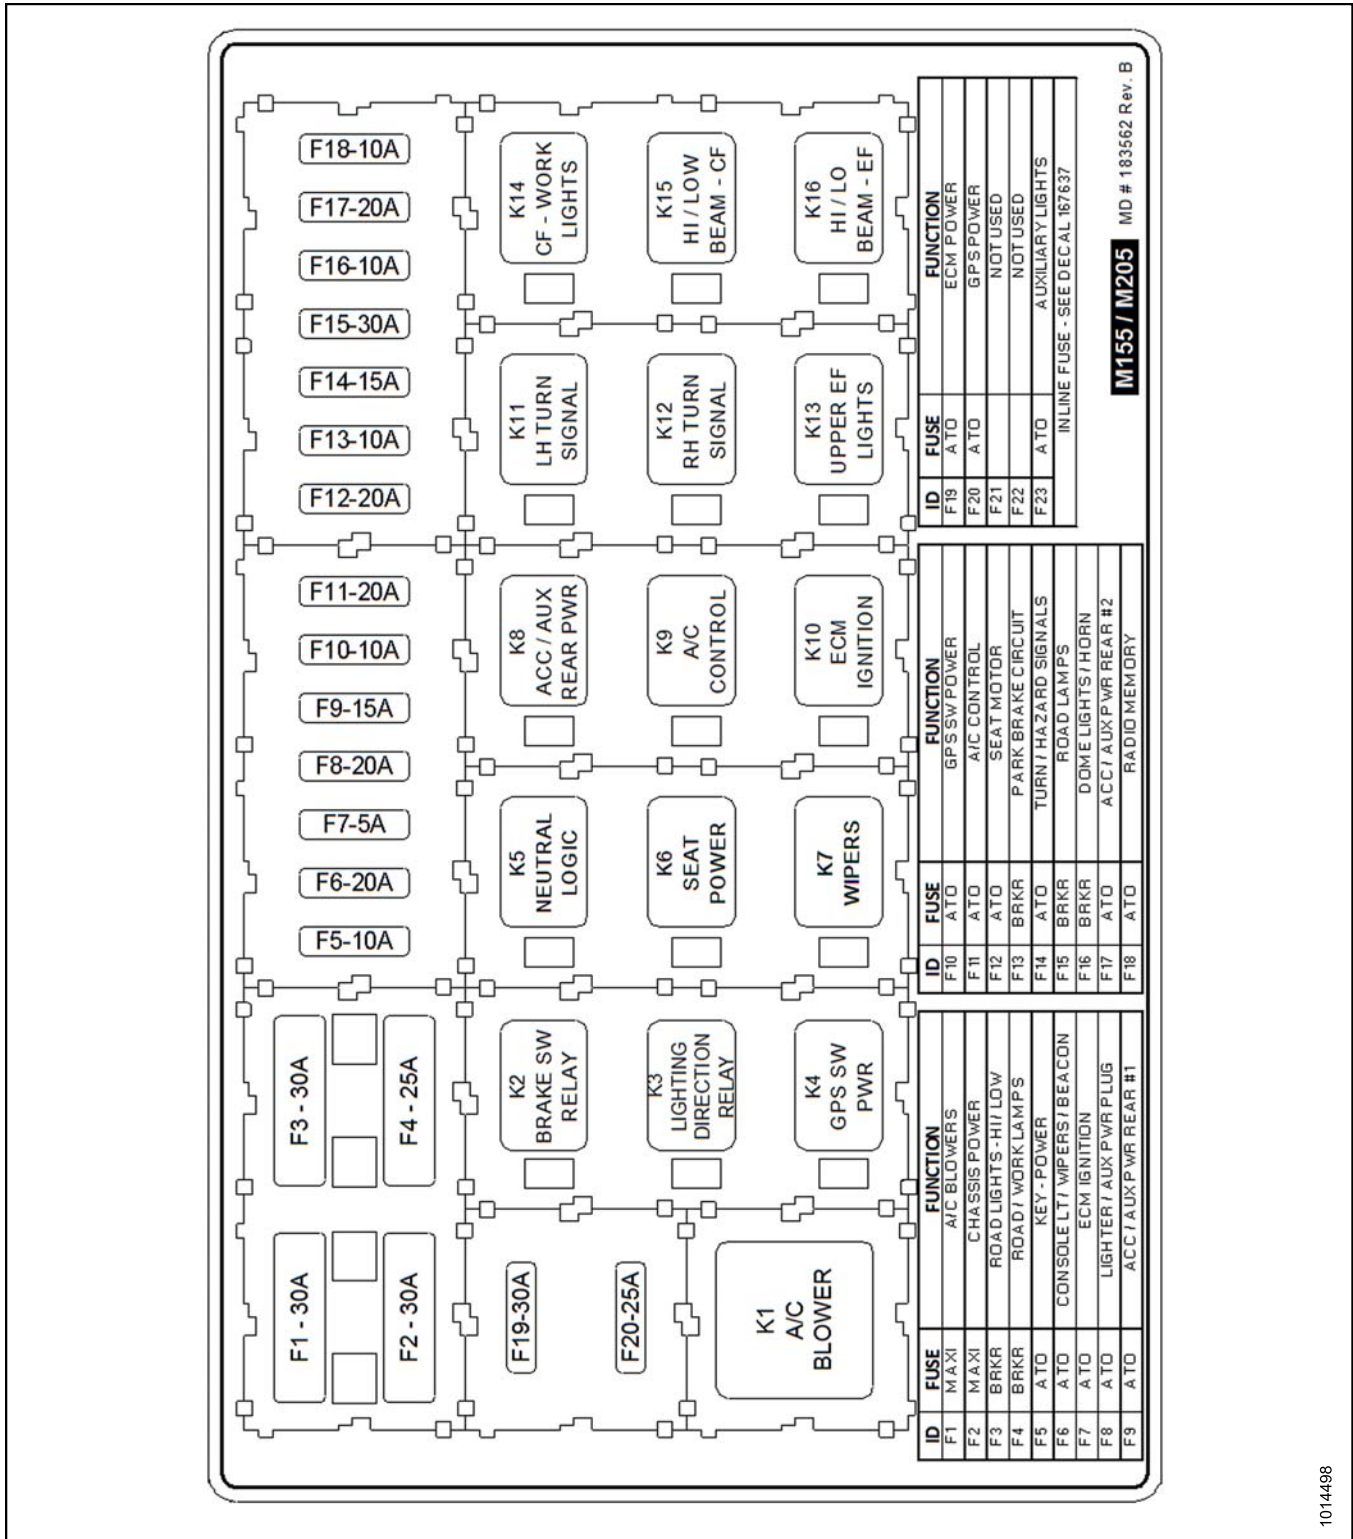


Figure 5.172: Fuse Decal

1014498

MAINTENANCE AND SERVICING

Inspecting and Replacing 125A Main Fuses

The 125A main fuse holders are located on the frame under the right cab-forward side platform beside the battery.

Access the 125A main fuses as follows:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop engine and remove key.
2. Move right (cab-forward) side platform rearward.
3. To check condition of fuse, pull tab (A) and open cover (B).

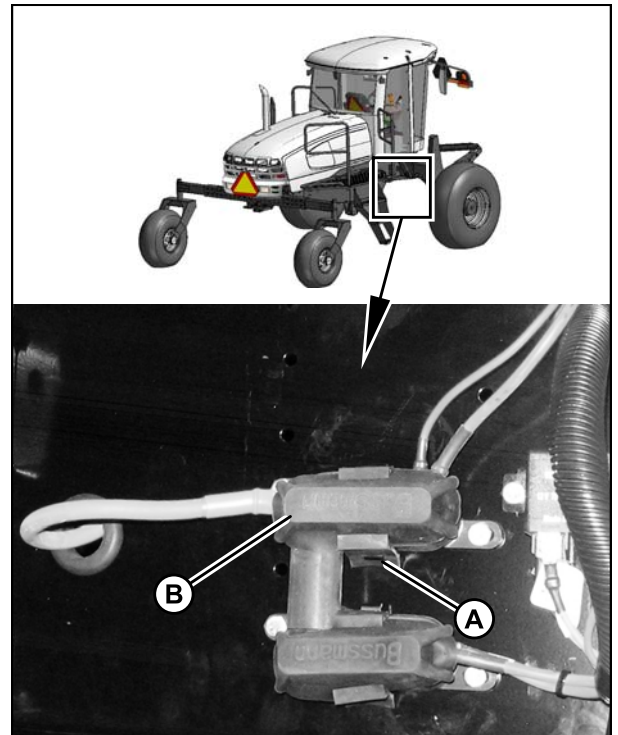


Figure 5.173: 125A Main Fuses

4. Visually examine fuse (B) for indications of melting.
5. To remove fuse (B), remove two nuts (C) and pull fuse free from holder (existing wiring may need to be pulled off the stud first).
6. Install new fuse on studs and any existing wiring that was removed.
7. Secure with nuts (C).



Figure 5.174: 125A Main Fuse

MAINTENANCE AND SERVICING

8. Close cover (B) and secure with tab (A).
9. Return platform to operating position. Ensure lock engages.

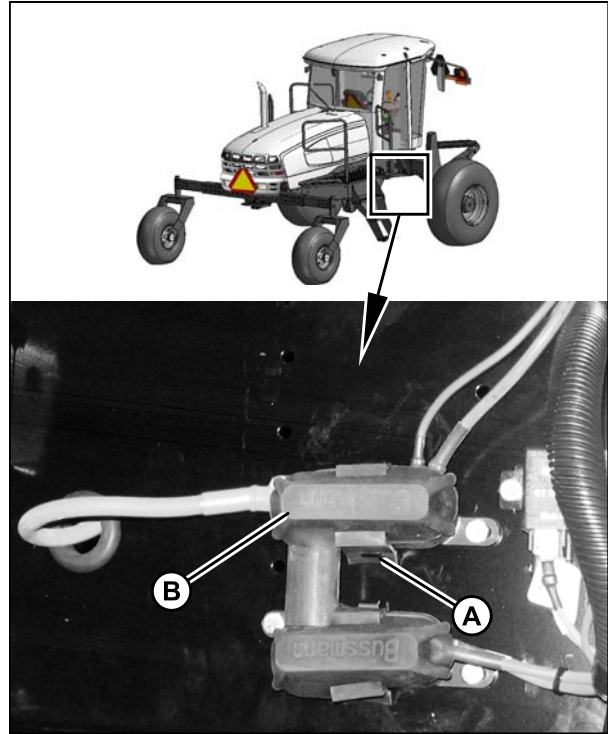


Figure 5.175: 125A Main Fuses

5.10 Hydraulic System

The M155 windrower hydraulic system provides oil pressure for the header lift, the windrower drive, and header drive systems.

WARNING

- Avoid high pressure fluids. Escaping fluid can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic lines.
- Tighten all connections before applying pressure. Keep hands and body away from pin-holes and nozzles which eject fluids under high pressure.



Figure 5.176: Hydraulic Pressure Hazard

WARNING

- Use a piece of cardboard or paper to search for leaks.
- If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a Doctor familiar with this type of injury or gangrene may result.

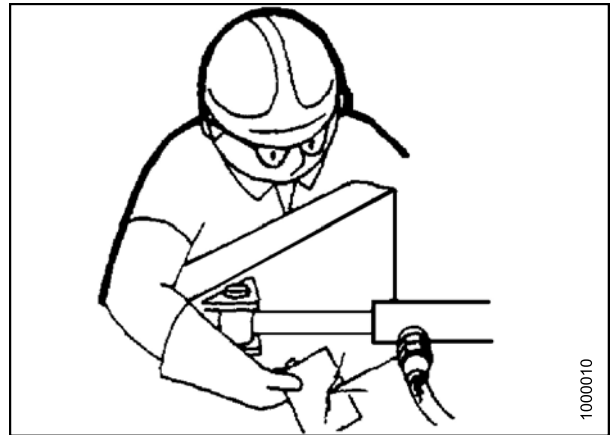


Figure 5.177: Checking Hydraulic Leaks

IMPORTANT:

Foreign material such as dirt, dust, and water is the major cause of trouble in the hydraulic system.

If hydraulic system components must be disconnected for service, protect the ends of hoses, tubing, and ports of components from contamination with clean, lint-free towels, or clean plastic bags.

Before installing any replacement hose, flush the inside with unused diesel fuel or unused commercial petroleum cleaning solvent for ten seconds minimum. Do **NOT** use water, water soluble cleaners, or compressed air.

The hydraulic system components are built to very close tolerances and have been adjusted at the factory. Do **NOT** attempt to service these components except to maintain proper oil level, change oil and filters, and to adjust relief pressures as described in this manual.

See your MacDon Dealer for all other service.

5.10.1 Checking and Filling Hydraulic Oil

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Park windrower on level ground and lower header and reel so that lift cylinders are fully retracted.
2. Stop the engine and remove the key.
3. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 308.

NOTE:

A sight glass (A) is provided under the hood on the right side of the tank. It indicates oil level and signs of contamination. No oil in the sight glass indicates oil level is below the add mark on the dipstick.

4. Stand on left (cab-forward side) platform to access the filler pipe.
5. Clean cap (A) and surrounding area.
6. Turn filler cap (A) counterclockwise to unlock cap and remove dipstick.

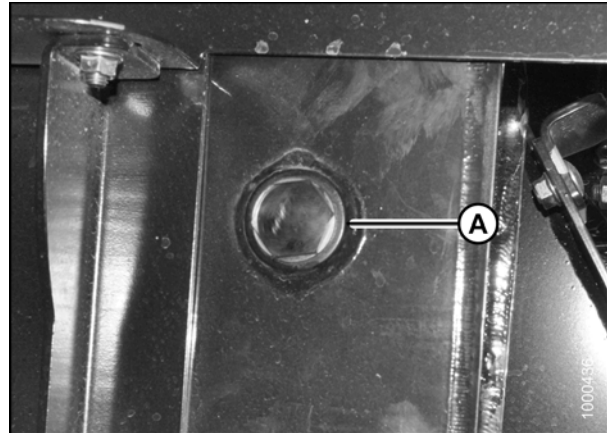


Figure 5.178: Hydraulic Oil Sight Glass

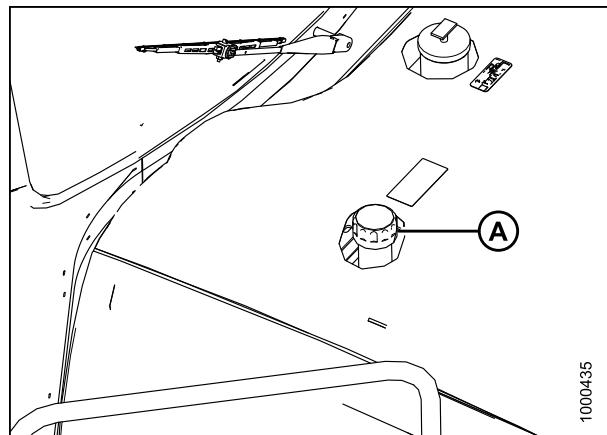


Figure 5.179: Engine Hood

MAINTENANCE AND SERVICING

- If necessary, add oil to maintain a level between the low (L) and full (H) marks. Refer to [8.2.3 Lubricants, Fluids, and System Capacities, page 477](#) for hydraulic oil specifications and quantity.

NOTE:

When dipstick is showing low (L), approximately 4 liters (1 US gallon) is required to reach the full (H) mark.

IMPORTANT:

- Use new, good quality, prefiltered clean oil
 - Exercise care to prevent debris from falling into tank
- Reinstall dipstick and filler cap, and turn clockwise to tighten/lock.
 - Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\), page 309](#).

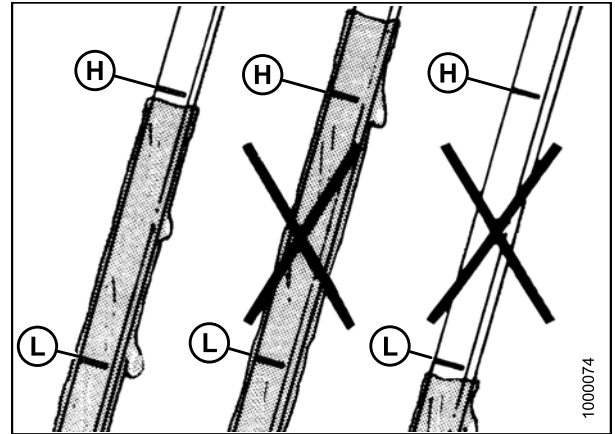


Figure 5.180: Hydraulic Oil Levels

5.10.2 Hydraulic Oil Cooler

The hydraulic oil cooler is located inside the cooling box behind the radiator.

It should be cleaned daily with compressed air. Refer to [Cleaning Cooler Box Components, page 361](#).

5.10.3 Changing the Hydraulic Oil

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Hydraulic oil should be changed every 1500 hours or every 2 years.

To drain hydraulic oil, follow these steps:

MAINTENANCE AND SERVICING

1. Park the windrower on level ground, and lower the header and reel so that the lift cylinders are fully retracted.
2. Stop the engine and remove the key.
3. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 309.
4. Place a clean container (at least 75 liters [20 US gallons]) under drain at the bottom of the hydraulic reservoir to collect the oil.
5. Remove drain plug (A) and allow oil to drain.
6. Inspect particles and clean off any metal debris that may have accumulated on magnetic plug. Wipe plug with a clean cloth. Check O-ring condition. Look for cracking, breakage, or deformation that may impede sealing ability and replace as required.
7. Install drain plug (A), torque to 80 N·m (59 ft·lbf).
8. Fill hydraulic oil reservoir. Refer to [5.10.1 Checking and Filling Hydraulic Oil](#), page 406.

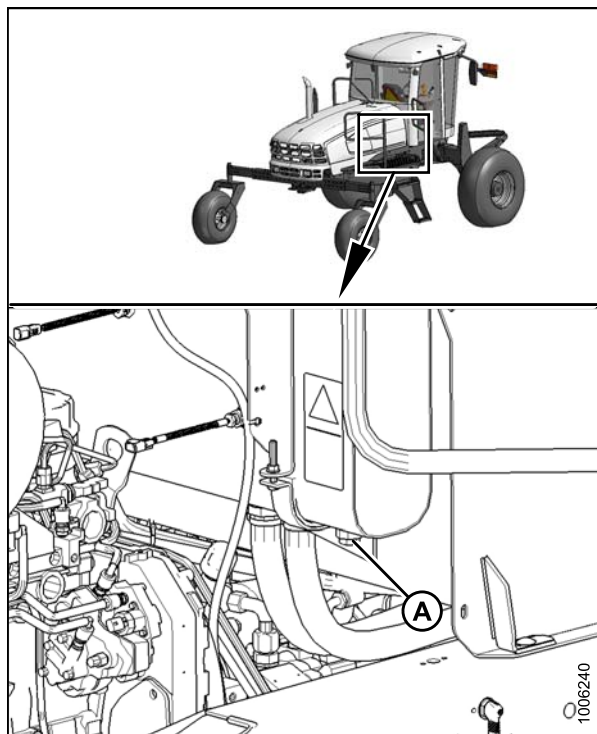


Figure 5.181: Hydraulic Oil Drain Plug

5.10.4 Changing Hydraulic Oil Filters

Change hydraulic oil filters after the first 50 hours of operation, and every 500 hours thereafter. Filter (A) (MD #112419) and filter (B) (MD #151975) can be obtained from your Dealer.

The charge oil filter (A) and return oil filter (B) are located just inside the frame on the left side and are accessible from under the windrower.

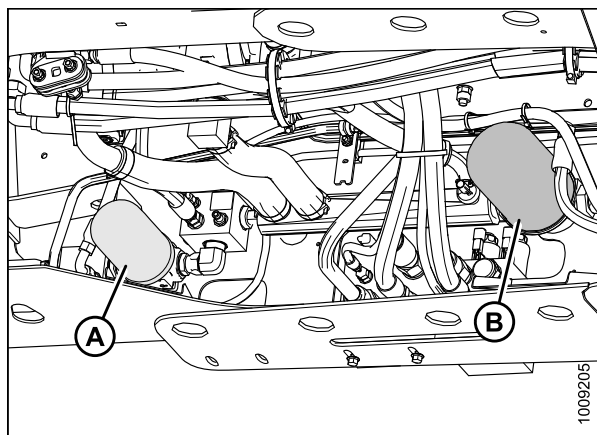


Figure 5.182: Hydraulic Oil Filters

Charge Oil Filter

The charge oil filter cleans the oil in the hydraulic charge circuit. The charge circuit replenishes oil losses that occur normally at the motor and pump case drains and associated circuits.

Refer to the following procedures to change the charge oil filter:

- [Removing Charge Oil Filter](#), page 409
- [Installing Charge Oil Filter](#), page 409

Removing Charge Oil Filter

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Clean around head of the filter.
3. Place a container beneath the filter to collect any oil that may leak out.
4. Unscrew filter (A) with a filter wrench.
5. Dispose of used oil and filter in accordance with local environmental legislation.

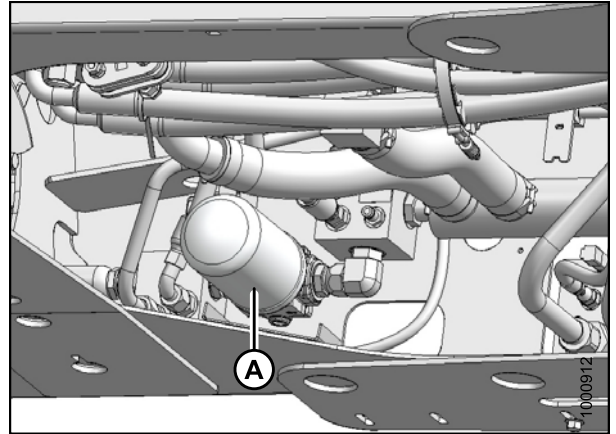


Figure 5.183: Charge Oil Filter

Installing Charge Oil Filter

NOTE:

For charge oil filter replacement part number, refer to [8.2.4 Filter Part Numbers, page 478](#).

1. Clean the gasket surface of the filter head.
2. Apply a thin film of clean oil to the filter gasket.
3. Screw the new filter (A) onto the mount until the gasket contacts the filter head.
4. Tighten filter an additional 1/2 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install oil filter. Overtightening can damage gasket and filter.

5. Check hydraulic fluid levels and add fluid if needed. Refer to [5.10.1 Checking and Filling Hydraulic Oil, page 406](#).

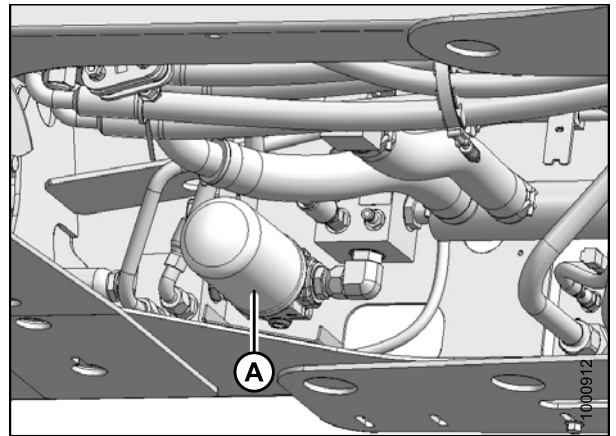


Figure 5.184: Charge Oil Filter

Return Oil Filter

The return oil filter filters the oil in the header drive systems and should be changed after the first 50 hours of operation, and then at 500 hour intervals.

To change the return oil filter, refer to the following procedures:

- [Removing Return Oil Filter, page 410](#)
- [Installing Return Oil Filter, page 410](#)

Removing Return Oil Filter

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Clean around head of the filter (A).
3. Place a container beneath the filter (A) to collect any oil that may leak out.
4. Unscrew filter (A) with a filter wrench.
5. Dispose of used oil and filter in accordance with local environmental legislation.

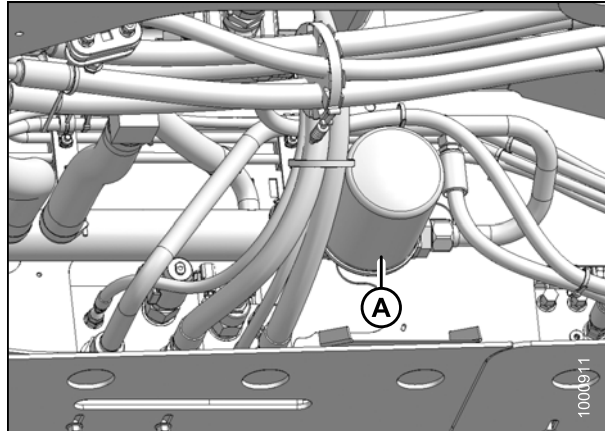


Figure 5.185: Return Oil Filter

NOTE:

Image showing filter head removed to show component clarity.

6. Remove gasket (C) from groove (B) in filter head (A). Filter (D) shown for context.

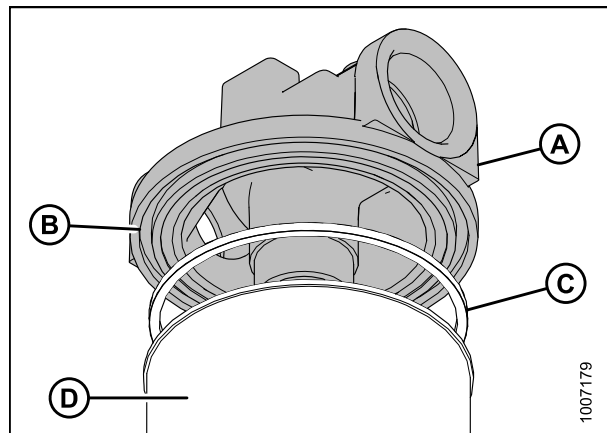


Figure 5.186: Return Oil Filter

Installing Return Oil Filter

NOTE:

For filter specifications, refer to [8.2.4 Filter Part Numbers, page 478](#).

MAINTENANCE AND SERVICING

1. Clean the gasket groove (B) in the filter head (A).
2. Apply a thin film of clean oil to the filter gasket (C).
3. Install new gasket (C) into the groove (B) in the filter head (A).
4. Screw the new filter (D) onto the filter head until the gasket contacts the filter.

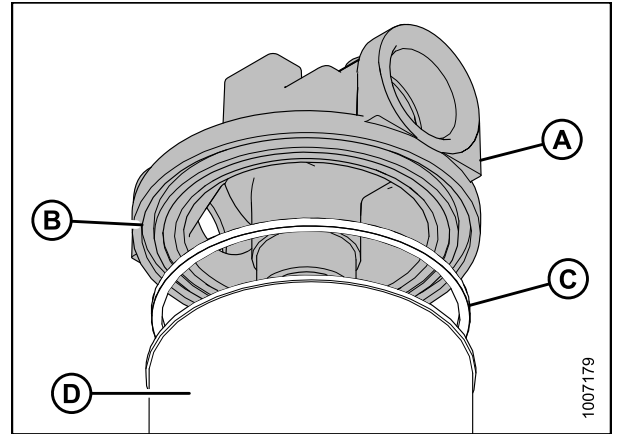


Figure 5.187: Return Oil Filter

5. Tighten filter (A) an additional 3/4 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install oil filter. Overtightening can damage gasket and filter.

6. Check hydraulic fluid levels. Refer to [5.10.1 Checking and Filling Hydraulic Oil](#), page 406.

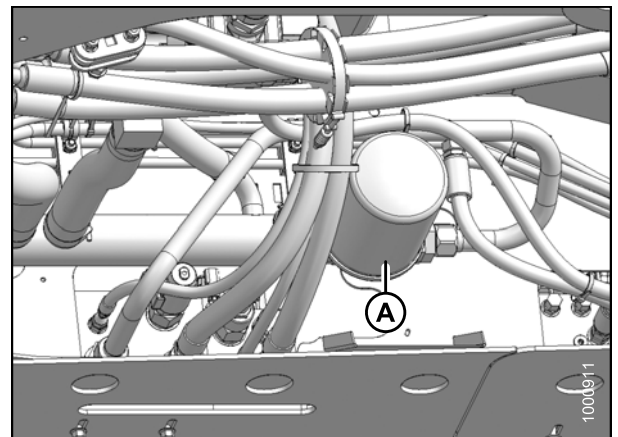


Figure 5.188: Return Oil Filter

5.10.5 Header and Reel Hydraulics

Hoses and Lines

Check hydraulic hoses and lines daily for signs of leaks.

⚠ WARNING

- **Avoid high-pressure fluids.** Escaping fluid can penetrate the skin causing serious injury.
- **Relieve pressure before disconnecting hydraulic lines.** Tighten all connections before applying pressure.
- **Keep hands and body away from pin-holes and nozzles which eject fluids under high pressure.**
- **If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a Doctor familiar with this type of injury or gangrene may result.**
- **Use a piece of cardboard or paper to search for leaks.**

IMPORTANT:

- Keep hydraulic coupler tips and connectors clean. Dust, dirt, water, and foreign material are the major causes of hydraulic system damage.
- **DO NOT** attempt to service hydraulic system in the field. Precision fits require WHITE ROOM CARE during overhaul.

Pressure Compensator Valve

The pressure compensator valve protects the header drive pumps from overheating under very heavy loads.

When the operating pressure reaches the absolute pressure limit setting (refer to [5.3 Header Hydraulic Pressures, page 413](#)) the compensator valve in the pump is activated and the header drive will slow down to avoid overheating the drive pumps. At this point, reduce the ground speed to maintain the correct system load and header drive operation.

NOTE:

An optional pressure sensor is available to monitor the knife or reel drive hydraulic pressure and provide a warning tone from the cab display module (CDM) if the system pressure approaches a preset limit. The system pressure limit is set during CDM programming. Refer to [7.1.5 Pressure Sensor Kit, page 456](#). The warning tone is only heard if the pressure sensor is installed and enabled.

NOTE:

A warning tone is normal when the operating pressure is close to the compensator valve's pressure setting.



Figure 5.189: Hydraulic Pressure Hazard

MAINTENANCE AND SERVICING

Table 5.3 Header Hydraulic Pressures

Header Model	Application/System	Windrower Absolute Pressure Limit Setting kPa (psi)	Suggested Overload Warning Setting kPa (psi)
R-Series	Disc pressure	28,958 (4200)	27,579 (4000)
D-Series A-Series	Reel/drapper pressure	22,063 (3200)	20,684 (3000)
	Knife/conditioner pressure	28,958 (4200)	27,579 (4000)

If lift and drive capacity problems develop, the pressure compensator valve may require adjusting. Contact your MacDon Dealer for assistance.

Flow Control Blocks

Two hydraulic valve blocks with multiple cartridges are used for the various windrower functions and are controlled by the windrower control module (WCM) according to the inputs from the Operator. The valve blocks are located behind the left cab-forward side platform.

The valve blocks do not require any scheduled maintenance other than to check for leaking fittings or loose electrical connections. If service is required, contact your MacDon Dealer.

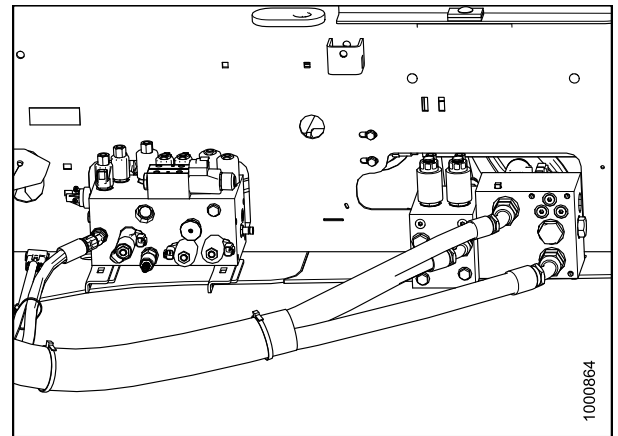


Figure 5.190: Hydraulic Valve Blocks

Adjusting Header Drop Rate

The header should lower gradually when the lower header switch is pressed. From fully raised to ground position, it should take approximately three to four seconds.

IMPORTANT:

Drop rate should **NOT** be less than three to four seconds as structural damage may result.

NOTE:

If drop rate is too slow (over 30 seconds), return to cut height or tilt or float presets will deactivate to prevent overheating the hydraulic system.

 DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Lower header to ground, stop the engine, and remove the key.
2. Open left cab-forward side platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.

MAINTENANCE AND SERVICING

- Loosen inner knob (B) on needle valve, and then turn outer knob (A)
 - Clockwise to decrease the drop rate
 - Counterclockwise to increase the drop rate
- Tighten inner knob (A).
- Check drop rate and readjust, as required.
- Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 312.

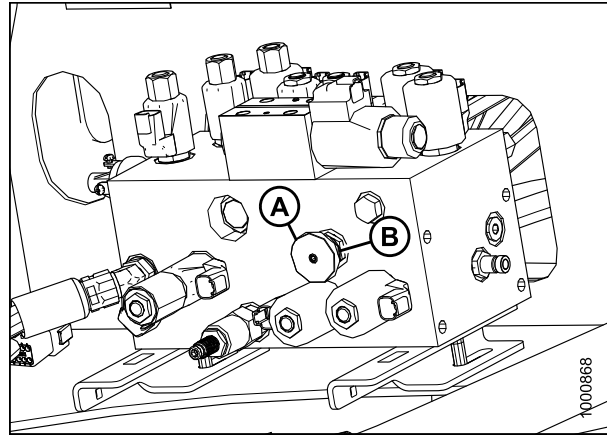


Figure 5.191: Multifunction Control Block

Adjusting Reel Drop Rate

The reel should lower gradually when the lower reel switch is pressed. From fully raised to fully lowered should take approximately three to four seconds. Drop rate is a customer preference and will vary based on crop type and cutting condition.

IMPORTANT:

Drop speed should **NOT** be less than three to four seconds as structural damage may result.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- Lower header to ground, stop the engine, and remove the key.
- Open the left cab-forward side maintenance platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 311.

MAINTENANCE AND SERVICING

3. Locate the valve (A) that controls the reel drop rate installed at port D.

NOTE:

This valve is installed on draper-ready windrowers and only affects draper headers.

4. Loosen setscrew (B), then refer to the following options:
 - Turn cap (C) clockwise to decrease the drop rate
 - Turn cap (C) counterclockwise to increase the drop rate
5. Check drop rate and adjust, as required.
6. Tighten setscrew (B).

NOTE:

To reset to factory specifications, fully close the needle valve and open it four turns counterclockwise.

7. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 312.

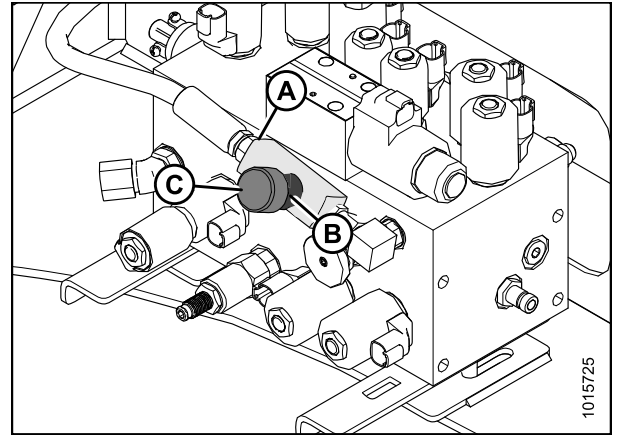


Figure 5.192: Multifunction Control Block

5.10.6 Traction Drive Hydraulics

The windrower transmission consists of two variable-displacement axial-piston hydraulic pumps—one for each drive wheel.

The pumps are driven through a gearbox from the engine. Each pump requires charge flow in order to

- Make up for internal leakage
- Maintain positive pressure in the main circuit
- Provide flow for cooling
- Replace any leakage losses from external valving or auxiliary systems

The charge pressure is monitored. The cab display module (CDM) sounds a tone and displays a flashing warning if charge pressure drops below 1725 kPa (250 psi). Refer to [Display Warnings and Alarms](#), page 86.

Checking Transmission Oil Pressure

IMPORTANT:

Rated charge pressure **MUST** be maintained under all conditions of operation to prevent damage to the transmission.

If the TRANS OIL PRESSURE warning is displayed, shut down the engine, and proceed as follows:

1. Check the hydraulic fluid level in the tank. Refer to [5.10.1 Checking and Filling Hydraulic Oil](#), page 406.
2. Check the hoses and lines for leakage.
3. Check the charge pressure relief valve. Refer to [Checking Charge Pump Pressure](#), page 416.
4. If charge pressure still cannot be maintained, do **NOT** operate the windrower. Contact your MacDon Dealer.

Checking Charge Pump Pressure

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Incorrect charge pressure settings may result in the inability to build required system pressure and/or inadequate loop flushing flows.

Correct charge pressure **MUST** be maintained under all conditions to maintain pump control performance and to operate the brake release.

Check charge pump pressure as follows:

1. Open hood fully. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 309.
2. Attach a 0–4000 kPa (600 psi) pressure gauge to a hose that is long enough to allow pressure gauge to be read from the operator's seat.
3. Locate the test port (A) on the charge filter head. Clean test port fitting and attach hose to the fitting.
4. Start engine and leave at idle. Pressure should be 240–325 psi (1655–2241 kPa) with the hydraulic oil at 40°C (100°F) minimum.
5. Make note of the reading and shut down windrower.
6. If pressure is **NOT** within this range, contact your MacDon Dealer.
7. If pressure is within range, remove hose from test port and close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\)](#), page 310.

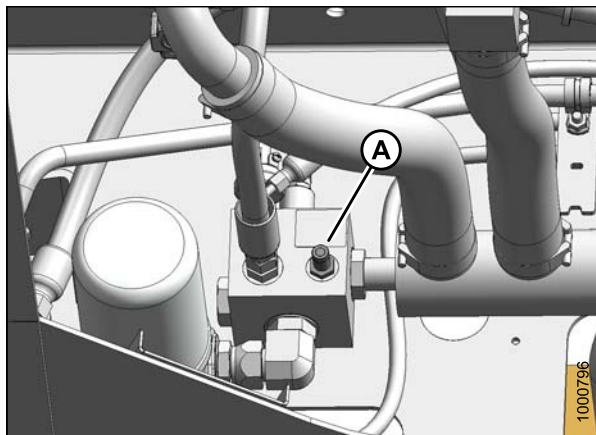


Figure 5.193: Charge Pump Test Port

5.11 Wheels and Tires

5.11.1 Drive Wheels

Inflating Drive Wheel Tire

DANGER

- Use a safety cage if available.
- Do NOT stand over tire. Use a clip-on chuck and extension hose.
- NEVER install a tube in a cracked wheel rim.
- NEVER weld a wheel rim.
- Do NOT exceed maximum inflation pressure as per label on tire.
- Make sure all the air is removed from a tire before removing the tire from the rim.

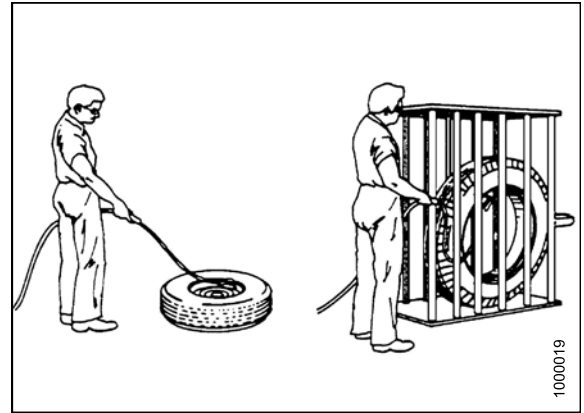


Figure 5.194: Drive Tire Inflation

DANGER

- NEVER use force on an inflated or partially inflated tire. Make sure the tire is correctly seated before inflating to operating pressure.
- Do NOT remove, install, or make repairs to a tire on a rim unless you have the proper equipment and experience to perform the job. Take the tire and rim to a qualified tire repair shop.
- If the tire is NOT in correct position on the rim or if over-inflated, the tire bead can loosen on one side, causing air to leak at high speed and with great force. An air leak of this nature can thrust the tire in any direction, endangering anyone in the area.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Visually check daily that tires have not lost pressure. Adjust pressure as required. Under-inflated drive tires can cause sidewall cracks. Check tire pressure every year.

Maintain tire pressure as follows:

1. Shut down the engine and remove key.
2. Determine the type and size of tire that is installed on your machine.
3. Refer to the following table to determine the appropriate tire pressure:

Table 5.4 Drive Wheel Tire Options (Ten Bolt)

18.4-26 Bar	600 65 R28 Bar	18.4-26 Turf	23.1-26 Turf
317 kPa (46 psi)	241 kPa (35 psi)	317 kPa (46 psi)	234 kPa (34 psi)

4. Adjust tire pressure as required.

IMPORTANT:

Check maximum inflation rating on tire sidewall. Do NOT exceed recommendation on tire.

MAINTENANCE AND SERVICING

Tightening Drive Wheel Nuts

At first use, or when a wheel is removed, torque drive wheel nuts after one hour of operation. Continue with torque procedure every hour until two consecutive checks produce no movement of the nuts.

IMPORTANT:

- To avoid damage to wheel rims and studs, tighten nuts by hand, do **NOT** use an impact gun, do **NOT** use lubricant or Never-Seez® compound, and do **NOT** overtighten wheel nuts.
 - Ensure only the manufacture's specified wheel nuts are used.
1. Tighten drive wheel nuts (A). Ensure nuts and studs are dry with no lubricant or Never-Seez® compound. Torque each to 510 N·m (375 ft·lbf) using the tightening sequence shown at right.
 2. Repeat tightening sequence two additional times at specified torque.
 3. Repeat torque procedure every hour until two consecutive checks produce no movement of the nuts.

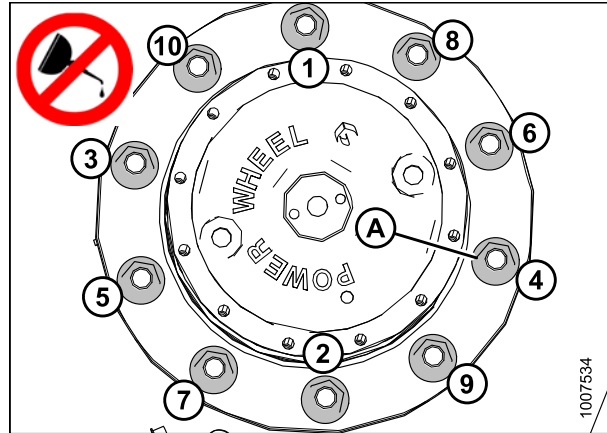


Figure 5.195: Wheel Nut Tightening Sequence

Lubricating Wheel Drive

Refer to these procedures to lubricate the wheel drive.

- [Checking Wheel Drive Lubricant Level, page 418](#)
- [Adding Wheel Drive Lubricant, page 419](#)
- [Changing Wheel Drive Lubricant, page 420](#)

Checking Wheel Drive Lubricant Level

Check the wheel drive lubricant level every 200 hours or annually.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

1. Park the windrower on level ground.
2. Position windrower so plugs (A and B) are horizontally aligned with the center (C) of the hub.
3. Stop the engine, and remove the key.
4. Remove plug (A or B). The lubricant should be visible through the port or running out slightly. If lubricant needs to be added, refer to [Adding Wheel Drive Lubricant, page 419](#).

NOTE:

The type of lubricant used after the first lubricant change is different from the factory supplied lubricant.

5. Reinstall plugs and tighten.

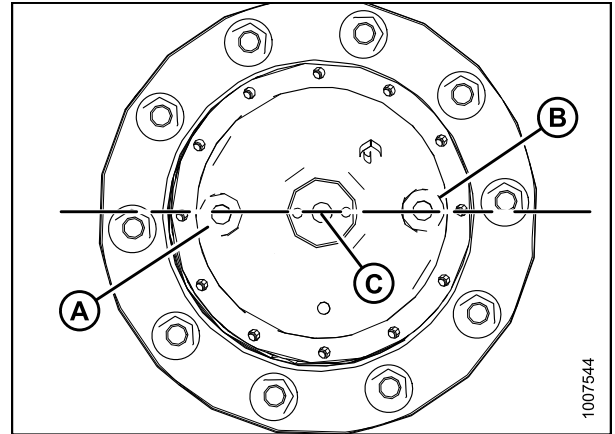


Figure 5.196: Drive Wheel Hub

Adding Wheel Drive Lubricant

NOTE:

Do **NOT** mix lubricants of different brands or characteristics.



To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Rotate the wheel drive so plugs (A) and (B) are horizontal with the center of the hub (C).
2. Stop windrower and remove key from ignition.
3. Remove the two plugs (A) and (B). The oil should be visible through the hole, or slightly running out.
4. If lubricant needs to be added, remove the second plug (B), and add lubricant until lubricant runs out at (A). Refer to [8.2.3 Lubricants, Fluids, and System Capacities, page 477](#).

NOTE:

The type of lubricant used after first lubricant change is different from factory supplied lubricant.

5. Reinstall and tighten plugs (A) and (B).
6. Start up and operate the windrower for a few minutes, then stop and check the oil level. If necessary, add more oil.

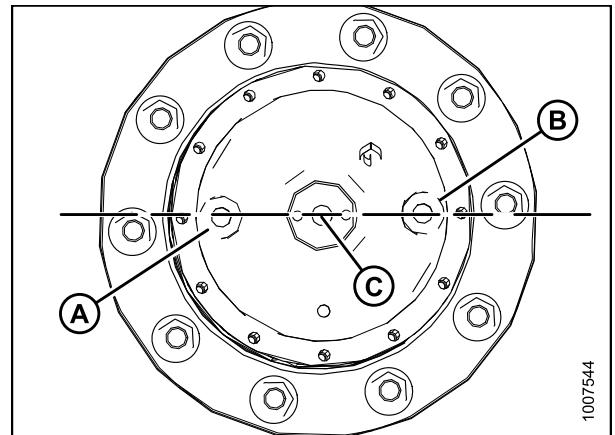


Figure 5.197: Drive Wheel Hub

Changing Wheel Drive Lubricant

The wheel drive lubricant should be changed after the first 50 hours and then changed after every 1000 hours. Change the lubricant when it is warm.

Check the level every 200 hours or annually.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Park windrower on level ground and position windrower so that one of the drain plugs (B) is at the lowest point.
2. Shut down the windrower and remove key from ignition.
3. Place a container that is about 2 liters (2 quarts) under the lower drain plug (B).
4. Remove both plugs (A and B), and drain lubricant into container.

⚠ CAUTION

Dispose of oil in a manner that complies with local rules and regulations.

5. After the lubricant has drained completely, start the windrower and position it so that ports (A and B) on wheel are level with the center of the hub (C) as shown.
6. Shut down the windrower and remove the key from the ignition.
7. Add lubricant. Refer to [Adding Wheel Drive Lubricant, page 419](#).

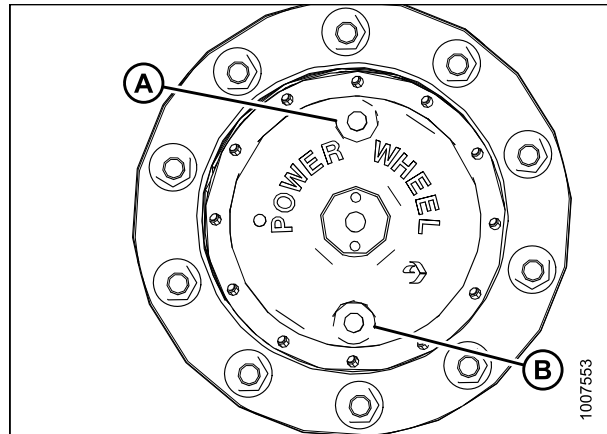


Figure 5.198: Drive Wheel Hub

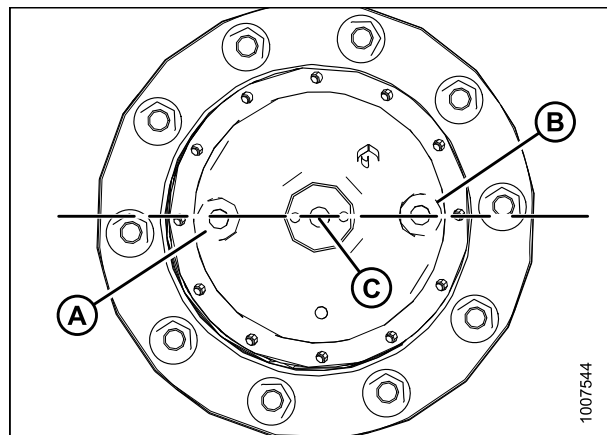


Figure 5.199: Drive Wheel Hub

Servicing Drive Wheel

To service a drive wheel, refer to the following procedures:

- [Raising Drive Wheel, page 421](#)
- [Removing Drive Wheel, page 421](#)
- [Installing Drive Wheel, page 422](#)
- [Lowering Drive Wheel, page 423](#)

Raising Drive Wheel

This procedure can be used on both drive wheels.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

⚠ CAUTION

Header **MUST** be removed and **NO** weight box installed. Use a hydraulic jack with minimum lifting capacity of 2268 kg (5000 lb.) to provide adequate support for the machine.

1. Remove the header.
2. Park windrower on level ground and block all wheels.
3. Place ground speed lever (GSL) in N-DETENT (A), shut down engine, and remove key.



Figure 5.200: Ground Speed Lever

⚠ CAUTION

Jack stand must be capable of supporting a minimum of 2268 kg (5000 lb.).

4. Place a jack under the leg jack point (A), and raise the drive wheel until it is slightly off ground. Place a jack stand beneath the lift cylinder mount (B).

NOTE:

Do **NOT** place jack stand under the cylinder. Use a small metal plate on top of the jack stand.

5. Lower the windrower onto the jack stand.

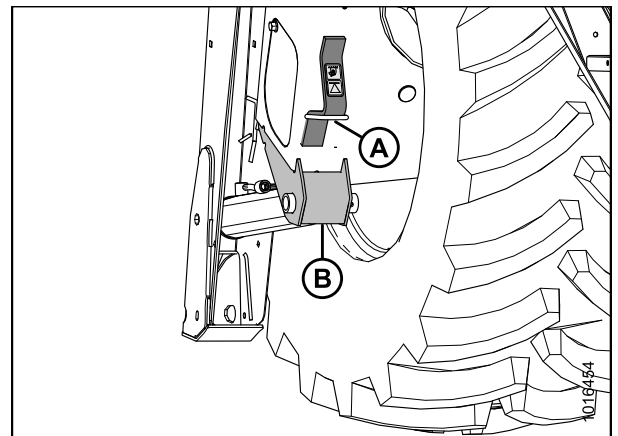


Figure 5.201: Drive Wheel Jack Point

Removing Drive Wheel

⚠ CAUTION

Use a suitable lifting device capable of supporting a minimum of 907 kg (2000 lb.) to lift the wheel assembly away from the windrower.

MAINTENANCE AND SERVICING

1. Raise the windrower drive wheel (A) off the ground. Refer to [Raising Drive Wheel, page 421](#).
2. Remove the wheel nuts (B).
3. Use a suitable lifting device to remove the drive wheel (A).

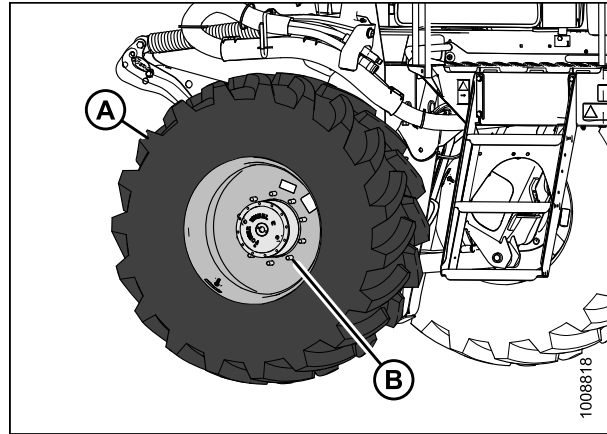


Figure 5.202: Drive Wheel

Installing Drive Wheel

CAUTION

Use a suitable lifting device capable of supporting a minimum of 907 kg (2000 lb.) to lift the wheel assembly away from the windrower.

NOTE:

Windrower must be supported off the ground with stands. Refer to [Raising Drive Wheel, page 421](#).

1. Position drive wheel (A) against the wheel drive hub (B) so the air valve (C) is on the outside and the tire tread (D) points in cab-forward direction.

NOTE:

For turf tires (diamond tread), be sure arrow on sidewall points in cab-forward rotation.

2. Lift wheel onto hub using a suitable lifting device.
3. Remove the lifting device.

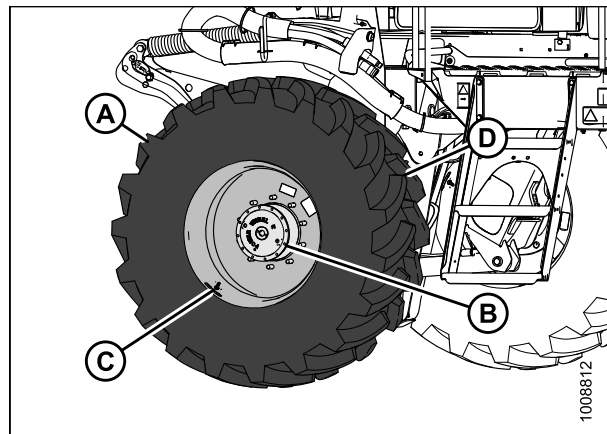


Figure 5.203: Drive Wheel

MAINTENANCE AND SERVICING

4. Line up the holes in the rim with the studs on the wheel drive hub and install wheel nuts (A).

IMPORTANT:

To avoid damage to wheel rims and studs, tighten nuts by hand. Do **NOT** use an impact gun, do **NOT** use lubricant or Never-Seez® compound, and do **NOT** overtighten wheel nuts.

5. Torque drive wheel nuts. Refer to [Tightening Drive Wheel Nuts](#), page 418.
6. Repeat tightening sequence two additional times ensuring the specified torque of 510 N·m (375 ft·lbf) is achieved each time.
7. Lower the windrower, and remove jack. Refer to [Lowering Drive Wheel](#), page 423.
8. Repeat torque procedure every hour until two consecutive checks confirm there is no movement of the nuts.

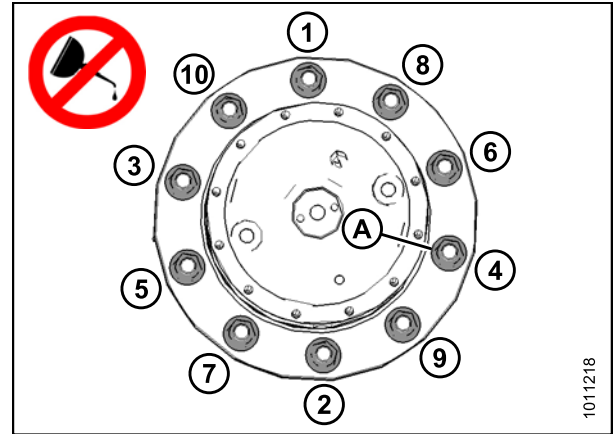


Figure 5.204: Drive Wheel Nuts

Lowering Drive Wheel

This procedure is for lowering the drive wheel when it is raised on a jack stand. This procedure can be used on both drive wheels.

CAUTION

Jack stand must be capable of supporting a minimum of 2268 kg (5000 lb.).

1. Place a jack under the leg jacking point (A), and raise the drive wheel slightly off the jack stand.
2. Remove the jack stand from under the cylinder lift mount (B), and lower the drive wheel to the ground.
3. Remove the jack.

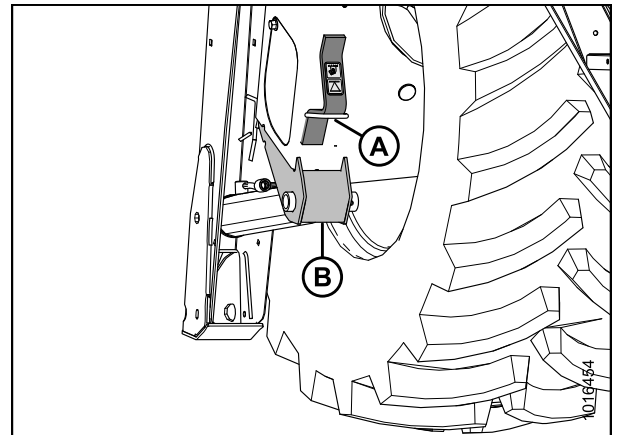


Figure 5.205: Drive Wheel Leg Jacking Point

5.11.2 Caster Wheels

Inflating Caster Tire

DANGER

- Do NOT exceed maximum inflation pressure as per label on tire.
- Use a safety cage if available.
- Do NOT stand over tire. Use a clip-on chuck and extension hose.
- NEVER install a tube in a cracked wheel rim.
- NEVER weld a wheel rim.
- Make sure all the air is removed from a tire before removing the tire from the rim.



Figure 5.206: Safely Filling a Tire with Air

DANGER

- NEVER use force on an inflated or partially inflated tire. Make sure the tire is correctly seated before inflating to operating pressure.
- Do NOT remove, install, or make repairs to a tire on a rim, unless you have the proper equipment and experience to perform the job. Take the tire and rim to a qualified tire repair shop.
- If the tire is NOT in correct position on the rim or if too full of air, the tire bead can loosen on one side, causing air to leak at high speed and with great force. An air leak of this nature can thrust the tire in any direction, endangering anyone in the area.
- To avoid severe personal injury or death caused by machine runaway, shut off engine and remove key before performing any of the following checks and/or adjustments.

Check tire pressure every year. Caster tire pressure should be 69 kPa (10 psi).

To maintain pressure, visually check daily that tires have not lost pressure, and adjust pressure as needed. Under-inflation of tires can cause sidewall cracks.

NOTE:

If caster wheels shimmy, a possible cause is over-inflation.

Table 5.5 Caster Tire Options

Formed Caster	Forked Caster
7.5–16SL single rib, 10-16 front steer tire	16.5L–16.1 rib implement flotation, 10–16 front steer tire
69 kPa (10 psi)	69 kPa (10 psi)

Tightening Caster Wheel Nuts

At first use or when a wheel is removed, check wheel nut/bolt torque every 15 minutes on the road or 1 hour in the field until the specified torque is maintained.

Once specified torque is maintained, check wheel nut/bolt torque after 10 and 50 hours (field or road operation) and then at 200 hour intervals thereafter.

MAINTENANCE AND SERVICING

To tighten the caster wheel nuts on either forked or formed caster wheels, follow these steps:

1. Position wheel assembly on hub and install wheel bolts (A).
2. Tighten wheel nuts (A) to 163 N·m (120 ft·lbf) using the tightening sequence suitable for the type of caster wheel shown at right. Repeat the tightening sequence three times.

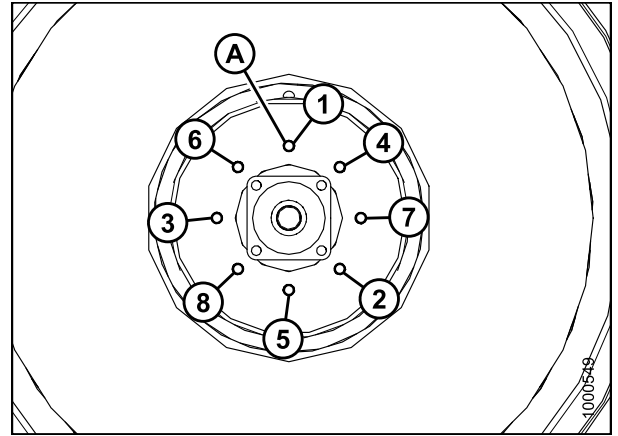


Figure 5.207: Forked Caster Wheel Nut Tightening Sequence

Wheel bolt (A) tightening sequence for a formed caster wheel (B) shown at right.

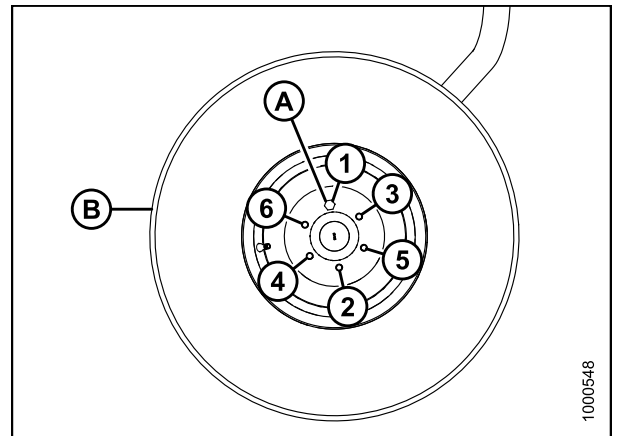


Figure 5.208: Formed Caster Wheel Nut Tightening Sequence

Servicing Caster Wheels

Refer to the following procedures:

- [Raising Caster Wheel \(Formed and Forked\), page 426](#)
- [Lowering Caster Wheel \(Formed and Forked\), page 426](#)
- [Removing Forked Caster Wheel, page 427](#)
- [Installing Forked Caster Wheel, page 428](#)
- [Removing Formed Caster Wheel, page 428](#)
- [Installing Formed Caster Wheel, page 429](#)

MAINTENANCE AND SERVICING

Raising Caster Wheel (Formed and Forked)

This procedure is the same for forked and formed caster wheels.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

⚠ CAUTION

Jack stand must be capable of supporting a minimum of 2268 kg (5000 lb.).

1. Park windrower on level ground and block the drive wheels.
2. Place the ground speed lever (GSL) in N-DETENT (A), stop the engine and remove the key.



Figure 5.209: GSL Position

3. Raise the end of walking beam (A) until the caster wheel assembly (B) is slightly off the ground. Use a suitable lifting device, capable of lifting 2268 kg (5000 lb.) minimum.
4. Place a jack stand beneath the walking beam and lower the beam until resting on the stand.

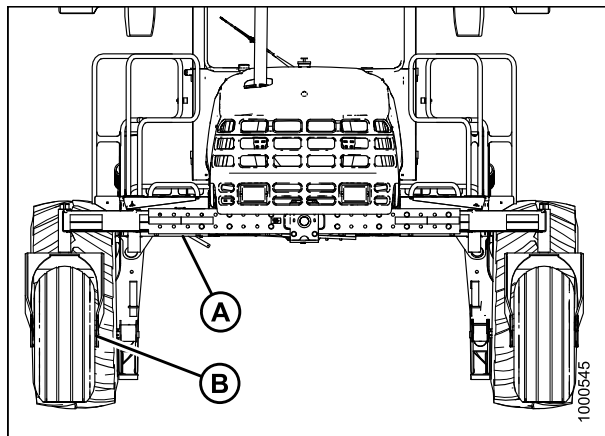


Figure 5.210: Caster Wheels and Walking Beam (Engine-Forward View)

Lowering Caster Wheel (Formed and Forked)

This procedure is for lowering the caster wheel when it is raised on a jack stand. This procedure is the same for forked and formed caster wheels.

⚠ CAUTION

Jack stand must be capable of supporting a minimum of 2268 kg (5000 lb.).

MAINTENANCE AND SERVICING

1. Raise the end of walking beam (A) slightly, using a suitable lifting device capable of lifting minimum 2268 kg (5000 lb.).
2. Remove the jack stand and lower the end of the walking beam until the caster wheel assembly (B) is on the ground.
3. Remove blocks from the drive tires.

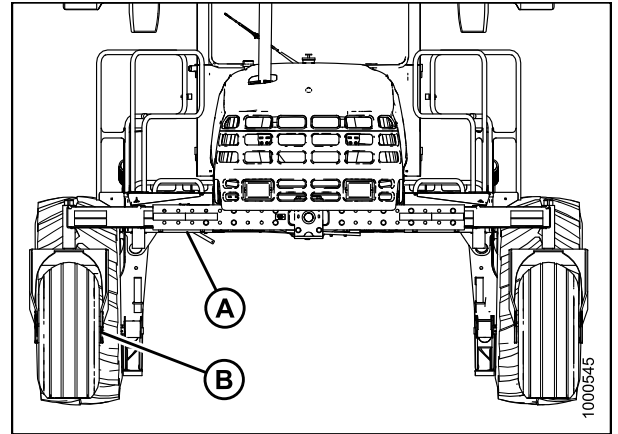


Figure 5.211: Caster Wheel Assembly and Walking Beam (Engine-Forward View)

Removing Forked Caster Wheel

CAUTION

Wheel assemblies are heavy. Support wheel assembly before removing axle bolts.

1. Raise caster wheel. Refer to [Raising Caster Wheel \(Formed and Forked\)](#), page 426.
2. Remove the eight bolts (A) (four on each side of caster) attaching axle (B) and cover (C) to forked caster (E), and remove wheel assembly (D) from caster (E).
3. Remove the eight wheel nuts (A) that secure the axle (B) to the wheel (C).
4. Separate axle (B) and wheel (C).

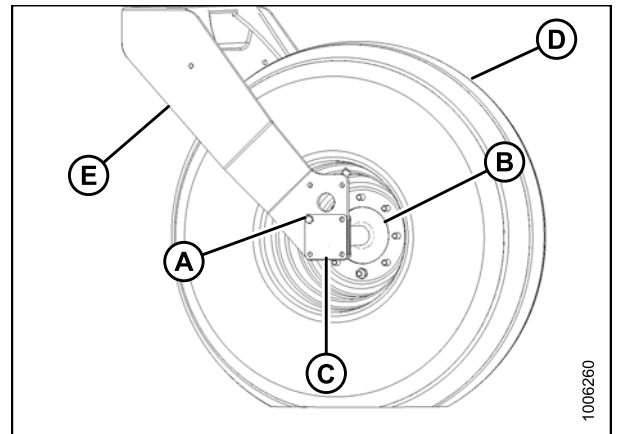


Figure 5.212: Forked Caster Wheel

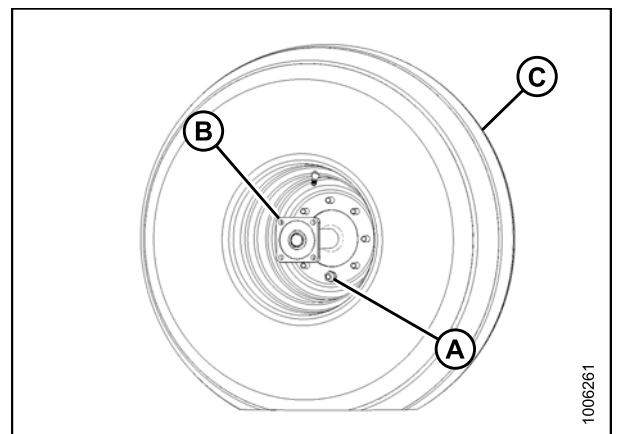


Figure 5.213: Forked Caster Wheel

Installing Forked Caster Wheel

CAUTION

Wheel assemblies are heavy. Support wheel assembly before removing axle bolts.

1. Position wheel assembly (C) on axle assembly (B) and install wheel nuts (A).
2. Torque wheel nuts (A). Refer to [Tightening Caster Wheel Nuts, page 424](#).

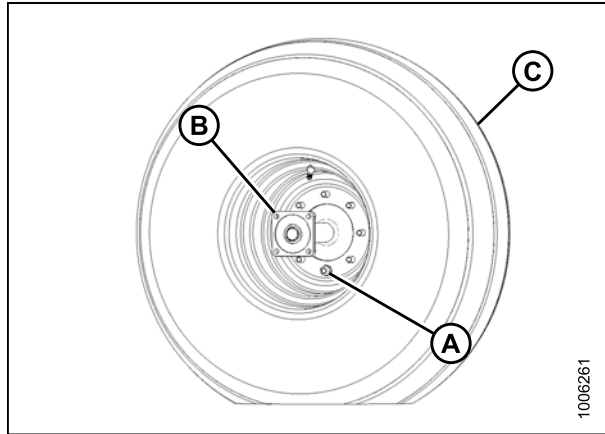


Figure 5.214: Forked Caster Wheel

3. Position wheel assembly (D) in forked caster (E).
4. Position cover plates (C) and install eight bolts (A) (four on each side of caster) to secure axle (B) to caster (E). Torque bolts to 97–107 N·m (75–79 ft·lbf).
5. Lower caster wheel. Refer to [Lowering Caster Wheel \(Formed and Forked\), page 426](#).

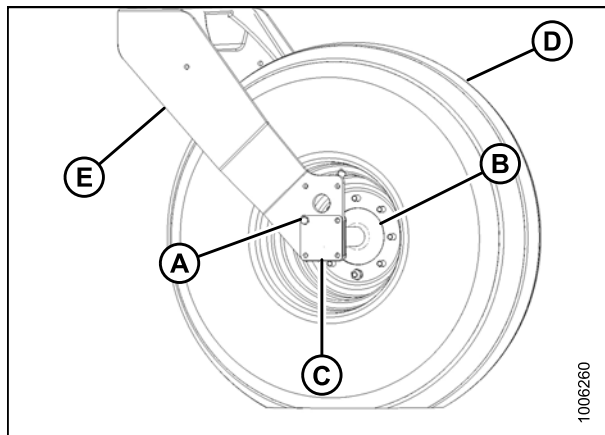


Figure 5.215: Forked Caster Wheel

Removing Formed Caster Wheel

CAUTION

Wheel assemblies are heavy. Support wheel assembly before removing axle bolts.

MAINTENANCE AND SERVICING

1. Raise caster wheel. Refer to [Raising Caster Wheel \(Formed and Forked\)](#), page 426.
2. Remove the six bolts (A) that secure the wheel (B) to the hub.
3. Remove wheel (B).

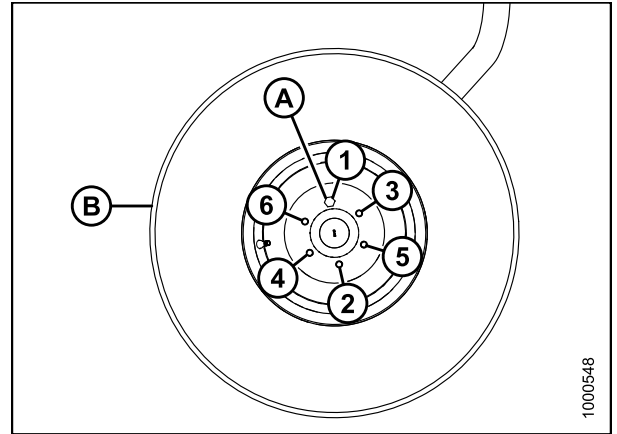


Figure 5.216: Formed Caster Wheel

Installing Formed Caster Wheel

CAUTION

Wheel assemblies are heavy. Support wheel assembly before removing axle bolts.

1. Position wheel assembly (B) on hub, and install the six wheel bolts (A).
2. Torque bolts (A). Refer to [Tightening Caster Wheel Nuts](#), page 424.
3. Lower caster wheel. Refer to [Lowering Caster Wheel \(Formed and Forked\)](#), page 426.

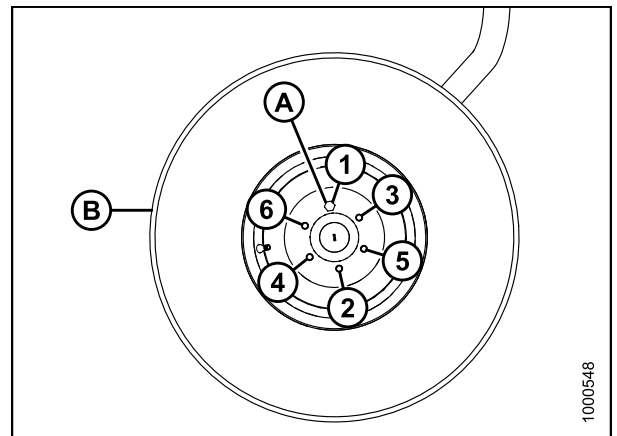


Figure 5.217: Formed Caster Wheel

Tightening Caster Wheel Anti-Shimmy Dampeners

Each caster is equipped with a fluid-filled anti-shimmy dampener (A).

The mounting bolts (B) need to be checked periodically for security. Refer to [5.12 Maintenance Schedule](#), page 431.

- Inboard bolt should be tightened to 135 N·m (100 ft·lbf)
- Outboard bolt should be tightened to 115 N·m (85 ft·lbf)

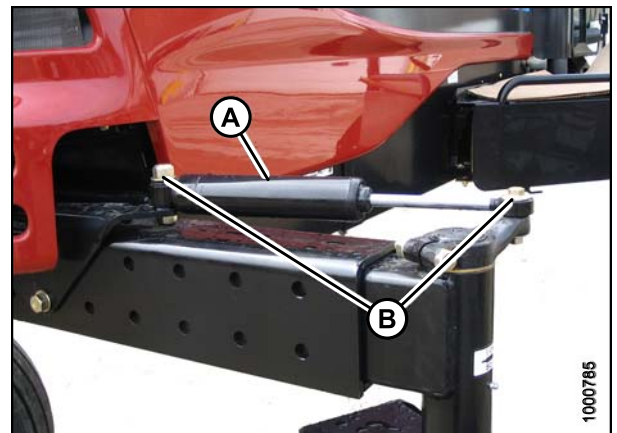


Figure 5.218: Anti-Shimmy Dampener

MAINTENANCE AND SERVICING

Ballast Requirements

Fluid ballasting of rear caster tires is recommended to provide adequate machine stability when using large headers on the windrower. The stability of the machine varies with different attachments, windrower options, terrain, and the operator's driving technique.

Ballast capability per tire is at a maximum fill of 75%, or when fluid is level with valve stem when the stem is positioned at 12 o'clock. Fluid can be added to any level up to maximum fill. Always add an equal amount of fluid on both sides.

Table 5.6 Recommended Ballast Weight

Header Description		Recommended Ballast				Recommended Tire Size
		Level Ground		Hills		
Type	Size	Per Tire	Both Tires	Per Tire	Both Tires	
		liters (US Gal)	kg (lb.) ³³	liters (US Gal)	kg (lb.) ³³	
A-Series	All	0				7.5 x 16 10 x 16 16.5 x 16.1
R-Series	13-foot ONLY					
D-Series	25-foot and smaller	0				
	30-foot single or double reel without conditioner 35-foot single reel					
	30-foot double reel steel fingers and conditioner 35-foot double reel (5 or 6-bat)	69 (18)	170 (380)	115 (30)	288 (630)	Level ground: 10 x 16 Level ground: 16.5 x 16.1 Hills: 16.5 x 16.1
	40-foot	115 (30)	288 (630)	158 (41)	377 (830)	16.5 x 16.1

33. Weights are given for typical calcium chloride and water mixtures. Weight is reduced by 20% if only water is used (for areas that do **not** require anti-freeze protection).

5.12 Maintenance Schedule

The Maintenance Schedule specifies the recommended periodic maintenance procedures and service intervals. Regular maintenance is the best insurance against early wear and untimely breakdowns. Follow this schedule to maximize machine life.

For detailed instructions, refer to the various procedures in this chapter. Use the fluids and lubricants specified in [8.2 Recommended Fuel, Fluids, and Lubricants, page 476](#).

Service Intervals: The recommended service intervals are in hours of operation. Where a service interval is given in more than one time frame, for example 100 hours or annually, service the machine at whichever interval is reached first.

IMPORTANT:

Recommended intervals are for average conditions. Service the machine more often if operated under adverse conditions (severe dust, extra heavy loads, etc.).




 **CAUTION**

Carefully follow safety messages given in [1 Safety, page 1](#).

5.12.1 Maintenance Schedule/Record

Windrower Serial Number: _____

Combine this record with the record in the header operator's manual. Make copies of this page to continue the record.

Action: ✓ Check ♦ Lubricate ▲ Change ✱ Clean													
	Hour meter reading												
	Service date												
	Serviced by												
Preseason or Annual. Refer to 4.3.3 Preseason Checks / Annual Service, page 158 .													
First hour³⁴													
✓	Drive wheel nuts												
Refer to Tightening Drive Wheel Nuts, page 418 .													
First 5 hours³⁴													
✓	A/C compressor belt												
Refer to Tensioning Air Conditioner (A/C) Compressor Belt, page 369 .													
✓	Caster wheel nuts												
Refer to Tightening Caster Wheel Nuts, page 424 .													
✓	Caster wheel anti-shimmy dampener												
bolts. Refer to Tightening Caster Wheel Anti-Shimmy Dampeners, page 429 .													

34. Begins from first use of machine.

MAINTENANCE AND SERVICING

Action: ✓ Check ⬇ Lubricate ▲ Change ✱ Clean														
✓	Walking beam width adjustment bolts	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Refer to 4.3.7 Adjusting Caster Tread Width, page 173.														
First 10 hours³⁵														
✓	Walking beam width adjustment bolts	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Refer to 4.3.7 Adjusting Caster Tread Width, page 173.														
✓	Neutral adjustment ³⁶	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Every 10 hours or daily³⁵														
✱	A/C condenser ³⁷	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Refer to Cleaning Cooler Box Components, page 361.														
✱	Charge air cooler ³⁷	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Refer to Cleaning Cooler Box Components, page 361.														
✓	Engine oil level ³⁷	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Refer to Checking Engine Oil Level, page 335.														
✓	Engine coolant level ³⁷	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Refer to Checking Coolant Level, page 354.														
✓	Fuel tank ³⁷	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Refer to Filling the Fuel Tank, page 163.														
✓	Fuel filter water trap ³⁷	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Refer to Removing Water from Fuel System, page 351.														
✓	Hydraulic hoses and lines ³⁷	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Refer to Hoses and Lines, page 412.														
✱	Hydraulic oil cooler ³⁷	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Refer to 5.10.2 Hydraulic Oil Cooler, page 407.														
✓	Hydraulic oil level ³⁷	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Refer to 5.10.1 Checking and Filling Hydraulic Oil, page 406.														
✱	Radiator ³⁷	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Refer to Maintaining Engine Cooling Box, page 359.														
✓	Tire inflation ³⁷	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Refer to Inflating Drive Wheel Tire, page 417.														

35. Begins from first use of machine.

36. Dealer adjusted.

37. A record of daily maintenance is not normally required but is at the Owner/Operator's discretion.

MAINTENANCE AND SERVICING

Action: ✓ Check ⬇ Lubricate ▲ Change ✱ Clean	
First 50 hours³⁸	
✓	Hose clamps: air intake/radiator/ heater/hydraulic ³⁹ . Refer to specific hose clamp section.
✓	Walking beam width adjustment bolts Refer to 4.3.7 Adjusting Caster Tread Width, page 173 .
✓	Caster wheel anti-shimmy dampener bolts (if installed). Refer to Tightening Caster Wheel Anti-Shimmy Dampeners, page 429 .
▲	Main gearbox oil Refer to Changing Lubricant, page 365 .
▲	Drive wheel lubricant Refer to Changing Wheel Drive Lubricant, page 420 .
▲	Charge system oil filter Refer to Charge Oil Filter, page 408 .
▲	Return oil filter Refer to Return Oil Filter, page 409 .
Every 50 hours³⁸	
✱	Cab fresh air intake filter Refer to Inspecting and Cleaning Fresh Air Filter Element, page 326 .
⬇	Caster pivots Refer to 5.4.2 Lubrication Points, page 317 .
⬇	Forked caster spindle bearings Refer to 5.4.2 Lubrication Points, page 317 .
✓	Gearbox oil level Refer to Checking Lubricant Level and Adding Lubricant, page 364 .
⬇	Top lift link pivots Refer to 5.4.2 Lubrication Points, page 317 .
⬇	Walking beam center pivot ⁴⁰

38. Begins from first use of machine.

39. Hand-tighten unless otherwise noted.

40. 2014 and previous.

MAINTENANCE AND SERVICING

Action: ✓ Check ♦ Lubricate ▲ Change * Clean															
Once a year ^{41 42}															
✓	A/C blower														
Refer to Air Conditioning (A/C) Compressor Coolant Cycling, page 159.															
✓	Antifreeze concentration														
Refer to Checking Engine Coolant Strength, page 353.															
✓	Battery charge														
Refer to Maintaining Batteries, page 371.															
✓	Battery fluid level														
Refer to Charging the Batteries, page 373.															
▲	Fuel tank vent line filter														
Refer to Replacing Fuel Tank Vent Filter, page 345.															
✓	Steering linkages														
Refer to Checking Steering Link Pivots, page 321.															
Every 100 hours or once a year ^{43 42}															
*	Cab air return filter														
Refer to Cleaning Return Air Cleaner/Filter, page 329.															
✓	Cab suspension limit straps														
Refer to 5.6 Cab Suspension Limit Straps, page 325.															
Every 250 hours or once a year ^{43 42}															
▲	Engine oil and filter														
Refer to Changing Engine Oil, page 336.															
▲	Engine air cleaner primary filter														
element. Refer to Removing Primary Air Filter, page 340 and Installing Primary Air Filter, page 342.															
♦	Formed caster wheel hub bearings														
Refer to 5.4.2 Lubrication Points, page 317.															
✓	Drive wheel lubricant														
Refer to Checking Wheel Drive Lubricant Level, page 418.															

41. Begins from first use of machine.

42. It is recommended that annual maintenance be done prior to start of operating season.

43. Begins from first use of machine, whichever occurs first.

MAINTENANCE AND SERVICING

Action: ✓ Check ♠ Lubricate ▲ Change ✱ Clean															
Every 500 hours or once a year ^{44 45}															
▲	Fuel filters														
Refer to Maintaining Fuel Filters, page 346 .															
▲	Gearbox lubricant														
Refer to Changing Lubricant, page 365 .															
▲	Charge system and return oil filters														
Refer to 5.10.4 Changing Hydraulic Oil Filters, page 408 .															
✓	Safety systems														
Refer to 5.5.2 Safety Systems, page 318 .															
Every 1000 hours ⁴⁴															
▲	Drive wheel lubricant														
Refer to Changing Wheel Drive Lubricant, page 420 .															
1500 hours or every two years ⁴⁴															
▲	Hydraulic oil														
Refer to 5.10.3 Changing the Hydraulic Oil, page 407 .															
5000 hours or every two years ⁴⁴															
✓	Engine valve tappet clearance														

44. Begins from first use of machine.

45. It is recommended that annual maintenance be done prior to start of operating season.

6 Troubleshooting

6.1 Engine Troubleshooting

Symptom	Problem	Solution	Section
Engine hard to start or will not start	Controls not in NEUTRAL	Move GSL to NEUTRAL.	Starting the Engine, page 160
		Move steering wheel to locked position.	
		Disengage header drive switch.	4.4.4 Header Drive, page 202
	NEUTRAL Interlock misadjusted	Contact Dealer.	Contact Dealer
	No fuel to engine	Fill empty fuel tank. Replace clogged filter.	Filling the Fuel Tank, page 163 and Maintaining Fuel Filters, page 346
	Old fuel in tank	Drain tank. Refill with fresh fuel.	5.8.5 Fuel System, page 345
	Water, dirt, or air in fuel system	Drain, flush, fill, and prime system.	
	Improper type of fuel	Use proper fuel for operating conditions.	8.2.2 Fuel Specifications, page 476
	Crankcase oil too heavy	Use recommended oil.	8.2.3 Lubricants, Fluids, and System Capacities, page 477
	Low battery output	Have battery tested. Check battery electrolyte level.	5.9.2 Battery, page 371
	Poor battery connection	Clean and tighten loose connections.	
	Faulty starter	Contact Dealer.	Contact Dealer
	Loose electrical connection at fuel pump	Ensure connector at pump is fully pushed in.	Contact Dealer
	Wiring shorted, circuit breaker open	Check continuity of wiring and breaker (manual reset).	Checking and Replacing Fuses, page 400
	ECM fuse (1 of 2) blown	Replace.	
	ECM Ignition relay faulty		
	NEUTRAL Logic relay faulty		
Faulty injectors	Contact Dealer.	Contact Dealer	

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Engine knocks	Engine out of time	Contact Dealer.	Contact Dealer
	Insufficient oil	Add oil.	Adding Engine Oil, page 337
	Low or high coolant temperature	Contact Dealer.	Contact Dealer
	Improper fuel	Use proper fuel.	8.2.2 Fuel Specifications, page 476
Low oil pressure	Low oil level	Add oil.	Adding Engine Oil, page 337
	Improper type of oil	Drain and fill crankcase with proper oil.	8.2.3 Lubricants, Fluids, and System Capacities, page 477
	Worn components	Contact Dealer.	Contact Dealer
Internal parts worn			
High oil consumption	Crankcase oil too light	Use recommended oil.	8.2.3 Lubricants, Fluids, and System Capacities, page 477
	Oil leaks	Check for leaks around gaskets, seals, and drain plugs.	Checking Engine Oil Level, page 335
	Unsteady fuel supply	Change filter on fuel tank vent line. Replace clogged fuel filter.	Replacing Fuel Tank Vent Filter, page 345 and 5.8.5 Fuel System, page 345
Engine runs irregularly or stalls frequently	Water or dirt in fuel system	Drain, flush, and fill fuel system.	8.2.3 Lubricants, Fluids, and System Capacities, page 477
	Low coolant temperature	Remove and check thermostat.	Contact Dealer
	Air in fuel system	Contact Dealer.	
	Dirty or faulty injectors		

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Lack of power	Incorrect timing	Contact Dealer.	Contact Dealer
	Engine oil viscosity too high	Use recommended oil.	8.2.3 Lubricants, Fluids, and System Capacities, page 477
	Intake air restriction	Service air cleaner.	5.8.4 Air Intake System, page 338
	Clogged fuel filter	Replace primary fuel filter, and if necessary, replace secondary fuel filter.	Maintaining Fuel Filters, page 346
	High back pressure	Clean out or replace muffler.	5.8.8 Exhaust System, page 366
	Improper type of fuel	Use proper fuel.	8.2.2 Fuel Specifications, page 476
	High or low engine temperature	Remove and check thermostat.	Contact Dealer
	Improper valve clearance	Contact Dealer.	
Faulty injectors			
Engine temperature below normal	Defective thermostat	Remove and check thermostat.	
Warning alarm sounds	Engine overheated	Check coolant level.	Checking Coolant Level, page 354
		Check thermostat.	Contact Dealer
	Low engine oil pressure	Check oil level.	Checking Engine Oil Level, page 335
	Low transmission oil pressure		5.10.1 Checking and Filling Hydraulic Oil, page 406

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Engine overheats	Low coolant level	Fill reserve tank to proper level. Check system for leaks.	5.8.6 Engine Cooling System, page 353
	Water only for coolant	Replace with antifreeze.	
	Engine overloaded	Reduce ground speed.	Driving Forward in Cab-Forward Mode, page 167
	Defective radiator cap	Replace cap.	Inspecting Radiator Cap, page 353
	Defective fan belt	Replace belt.	Replacing Fan Belt, page 367 Replacing Fan Belt, page 367
	Dirty radiator screen, rotors turning	Check for obstructions in ducting from screen to fan shroud.	Maintaining Engine Cooling Box, page 359
	Dirty radiator screen, rotors not turning	Check connections to rotor electric motor.	
	Dirty radiator core	Clean radiator.	5.8.6 Engine Cooling System, page 353
	Cooling system dirty	Flush cooling system.	
	Defective thermostat	Remove and check thermostat.	Contact Dealer
	Defective temperature gauge or sender	Check coolant temperature with thermometer. Replace gauge if necessary.	
	Defective water pump	Contact Dealer.	
High fuel consumption	Clogged or dirty air cleaner	Service air cleaner.	5.8.4 Air Intake System, page 338
	Engine overloaded	Reduce ground speed.	Driving Forward in Cab-Forward Mode, page 167
	Improper valve clearance	Contact Dealer.	Contact Dealer
	Engine out of time		
	Dirty injector nozzles		
	Low engine temperature	Check thermostat.	
Improper type of fuel	Use proper fuel.	8.2.2 Fuel Specifications, page 476	

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Engine emits black or grey exhaust	Improper type of fuel	Consult your fuel supplier, and use proper type fuel for conditions.	8.2.2 Fuel Specifications, page 476
	Engine overloaded	Reduce ground speed.	Driving Forward in Cab-Forward Mode, page 167
	Clogged or dirty air cleaner	Service air cleaner.	5.8.4 Air Intake System, page 338
	Defective muffler	Check muffler for possible damage that might create back pressure.	5.8.8 Exhaust System, page 366
	Dirty or faulty injectors	Contact Dealer.	Contact Dealer
	Engine out of time		
	Air in fuel system		
Engine emits white exhaust	Engine out of time	Contact Dealer.	Contact Dealer
	Improper type of fuel	Consult your fuel supplier, and use proper type fuel for conditions.	8.2.2 Fuel Specifications, page 476
	Cool engine	Warm engine up to normal operating temperature.	Engine Warm-Up, page 162
	Defective thermostat	Remove and check thermostat.	Contact Dealer

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Starter cranks slowly or will not operate	Low battery output	Check battery charge.	Maintaining Batteries, page 371
	Loose or corroded battery connections	Clean and tighten loose connections.	Maintaining Batteries, page 371
	Controls not in NEUTRAL	Move GSL to NEUTRAL.	Driving Forward in Cab-Forward Mode, page 167
		Move steering wheel to CENTER position.	Driving Reverse in Cab-Forward Mode, page 168
		Disengage header.	Engaging and Disengaging the Header, page 202
	Relay not functioning	Check relay and wire connections.	5.9 Electrical System, page 371
	Main fuse defective/blown	Replace main fuse.	
	Key power fuse blown	Replace.	
	Key switch worn or terminals loose	Contact Dealer.	Contact Dealer
	Switch at Interlock not closed or defective	Adjust switch or replace. Contact your Dealer.	
Crankcase oil too high viscosity	Use recommended oil.	8.2.3 Lubricants, Fluids, and System Capacities, page 477	
Air filters require frequent cleaning	Aspirator plugged	Clean out aspirator.	5.8.4 Air Intake System, page 338

TROUBLESHOOTING

6.2 Electrical Troubleshooting

Symptom	Problem	Solution	Section
Low voltage and/or battery will not charge	Defective battery	Have battery tested.	5.9.2 Battery, page 371
	Loose or corroded connections	Clean and tighten battery connections.	Maintaining Batteries, page 371
	Defective alternator belt	Replace worn belt.	Replacing Fan Belt, page 367
	Alternator or voltage regulator not connected properly	Connect properly.	5.9.2 Battery, page 371
	Dirty or defective alternator, defective voltage regulator, or high resistance in circuit	Contact Dealer.	Contact Dealer
Lights dim	Defective light switch		
	High resistance in circuit or poor ground on lights	Check the wiring circuit for a break in a wire or a poor ground.	—
Lights do not light	Burned out or defective light bulb	Replace light bulb.	Replacing Headlight Bulb, page 380
			Replacing Bulb in Cab-Forward Flood Light, page 385
			Replacing Bulb in Rear Flood Light, page 390
	Broken wiring	Check wiring for broken wire or shorts.	—
	Poor ground on lights	Clean and tighten ground wires.	—
	Open or defective circuit breaker	Check circuit breaker.	Accessing Circuit Breakers and Fuses, page 400
	Defective relay	Replace relay.	Replacing Circuit Breakers and Relays, page 401
	Defective light switch	Contact Dealer.	Contact Dealer
Turn signals or indicators showing wrong direction	Reversed wires	Contact Dealer.	Contact Dealer
No current to cab	Broken or disconnected wire	Contact Dealer.	Contact Dealer
	Circuit breaker tripped	Breaker automatically resets.	—
	Battery disconnect switch is OFF	Turn battery disconnect switch ON.	Battery Main Disconnect Switch, page 372

TROUBLESHOOTING

6.3 Hydraulics Troubleshooting

Symptom	Problem	Solution	Section
Header or reel not lifting	Appropriate solenoids not being energized by activating switch	Contact Dealer.	Contact Dealer
	Contaminant in relief valve	Clean relief valve at cylinder control valve.	Contact Dealer
Header or reel lifts but lacks power	Relief pressure too low or contaminant in relief valve	Check/adjust/clean relief valve at cylinder control valve.	
Reel and/or conveyor not turning	HEADER DRIVE switch not engaged	Engage HEADER DRIVE switch.	<i>Engaging and Disengaging the Header, page 202</i>
	Flow controls adjusted too low	Toggle speed controls on CDM to increase flow.	D-Series: <i>4.6.6 Draper Speed, page 290</i> , and <i>4.6.5 Reel Speed, page 286</i> A-Series: <i>4.7.1 Auger Speed, page 297</i> R-Series: <i>4.8.1 Disc Speed, page 304</i>
	Appropriate solenoid on flow control block not being energized	Contact Dealer.	Contact Dealer
Reel and/or conveyor turns but lacks power	Relief pressure too low	Check/adjust/clean relief valve.	
Hydraulic oil high-temperature alarm	Hydraulic oil cooling system not working properly	Check/clean cooling box.	<i>Maintaining Engine Cooling Box, page 359</i>
	Faulty bypass valve	Clean or replace.	Contact Dealer
Hydraulic oil low-temperature alarm	Hydraulic oil too cold	Run engine until hydraulic oil warms up.	—

TROUBLESHOOTING

6.4 Header Drive Troubleshooting

Symptom	Problem	Solution	Section
Header drive not engaging	Header DRIVE switch in cab not engaged	Engage HEADER DRIVE switch.	<i>Engaging and Disengaging the Header, page 202</i>
	Operator Presence switch not closed or faulty	Occupy operator's seat or replace switch. Contact your Dealer.	Contact Dealer
	Appropriate solenoid not being energized by activating switch	Contact Dealer.	
Header drive lacks power	Relief valve setting too low		Refer to the header operator's manual.
	Hydraulic couplers/unions not properly connected	Ensure hoses are connected correctly and hose couplers/unions are tight.	
	Header drive overload	Reduce ground speed.	—
Warning alarm sounds	Relief valve setting too low	Contact Dealer.	Contact Dealer

TROUBLESHOOTING

6.5 Traction Drive Troubleshooting

Symptom	Problem	Solution	Section
Warning alarm sounds and transmission oil light is on	Low hydraulic oil level	Stop engine, and add oil to hydraulic system.	5.10.1 Checking and Filling Hydraulic Oil, page 406
	Low hydraulic pressure	Contact Dealer.	Contact Dealer
	Foreign material shorting sender		
	Short in alarm wiring		
	Faulty sender		
Wheels lack pulling ability on a grade or pulling out of a ditch	Internal pump or motor damage		
	Insufficient torque at drive wheels	Move ground speed range control to field position, and reduce ground speed.	Driving Forward in Engine-Forward Mode, page 169
	Loose or worn controls	Check controls.	5.5.3 Ground Speed Lever (GSL) Adjustments, page 319
	Air in system	Use proper oil.	8.2.3 Lubricants, Fluids, and System Capacities, page 477
		Check oil level and leaks.	5.10.1 Checking and Filling Hydraulic Oil, page 406
		Check hydraulic oil filters.	5.10 Hydraulic System, page 405
	Brakes binding or not releasing fully	Check pressure on brake release valve (min. 1379 kPa [200 psi]).	Contact Dealer
	Relief valve in tandem pump dirty or damaged	Replace relief valve.	
With steering wheel centered, one wheel pulls more than the other	Leakage at pump or motor	Contact Dealer.	Contact Dealer
	Wheels not in same speed range		
	Faulty relief valve	Repair or replace valve. Contact Dealer.	

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Both wheels will not pull in forward or reverse	Pump arms have broken shaft or loose hardware	Repair or tighten.	Contact Dealer
	Brakes binding or not releasing fully	Check pressure on brake release valve (min. 1379 kPa [200 psi]).	
	Low oil level	Check oil reservoir level.	5.10.1 Checking and Filling Hydraulic Oil, page 406
	Power hubs disengaged	Engage final drives.	Final Drives, page 191
	Damaged hydraulic lines preventing proper oil flow	Replace damaged lines.	Contact Dealer
	Ground speed range control not working	Contact Dealer.	
	Steering controls worn or defective	Check GSL and steering for loose, worn or damaged ball joints and connecting rods.	5.5.3 Ground Speed Lever (GSL) Adjustments, page 319 and 5.5.4 Steering Adjustments, page 321
	Charge pressure relief valve misadjusted or damaged	Check the valve adjustment. Check valve parts and seat.	Checking Charge Pump Pressure, page 416
	Failed pump or motor	Contact Dealer.	Contact Dealer

TROUBLESHOOTING

Symptom	Problem	Solution	Section
One wheel does not pull in forward or reverse	Broken pump arm or shaft	Contact Dealer.	Contact Dealer
	One final drive disengaged	Engage final drive.	Final Drives, page 191
	Steering controls worn or defective	Check GSL and steering for loose, worn or damaged ball joints and connecting rods.	5.5.3 Ground Speed Lever (GSL) Adjustments, page 319 and 5.5.4 Steering Adjustments, page 321
	High pressure relief valve stuck open, damaged seat	Check valve, and clean or replace.	Contact Dealer
	Brakes binding or not releasing fully	Check pressure on brake release valve (min. 1379 kPa [200 psi]).	Contact Dealer
	Damaged hydraulic lines preventing proper oil flow	Contact Dealer.	
	Ground speed range control not working		
	Failed pump, motor or power hub		
Excessive noise from drive system	Mechanical interference in steering or ground speed linkage	Adjust, repair, and replace.	5.5.3 Ground Speed Lever (GSL) Adjustments, page 319 and 5.5.4 Steering Adjustments, page 321
	Brakes binding or not releasing fully	Check pressure on brake release valve (min. 1379 kPa [200 psi]).	Contact Dealer
	Faulty pump or motor	Contact Dealer.	
	Air in system	Check lines for leakage.	—
	Hydraulic line clamps loose	Tighten clamps.	
Hydraulic oil filter leaks at seal	Not properly tightened	Tighten filter element.	5.10.4 Changing Hydraulic Oil Filters, page 408
	Damaged seal or threads	Replace filter or filter head.	

TROUBLESHOOTING

6.6 Steering and Ground Speed Control Troubleshooting

Symptom	Problem	Solution	Section
Machine will not steer straight	Linkage worn or loose	Adjust steering chain tension. Replace worn parts. Adjust linkage.	5.5.4 Steering Adjustments, page 321
Machine moves on flat ground with controls in neutral	Neutral interlock misadjusted	Contact Dealer.	Contact Dealer
	Parking brake not functioning		
	GSL servo misadjusted		
	GSL cable misadjusted		
Steering wheel will not lock with gsl in n-detent	Transmission interlock misadjusted		
Steering wheel will not unlock	Transmission interlock cylinder not working		
Insufficient road speed	Ground speed range control in field position	Move to road position.	Driving on the Road, page 175
Steering is too stiff or too loose	Steering chain tension is out of adjustment	Adjust steering chain tension.	5.5.4 Steering Adjustments, page 321

TROUBLESHOOTING

6.7 Cab Air Troubleshooting

Symptom	Problem	Solution	Section
Blower fan will not run	Burned out motor	Contact Dealer.	Contact Dealer
	Burned out switch		
	Motor shaft tight or bearings worn		
	Faulty wiring—loose or broken		
Blower fan operating but no air coming into cab	Blower rotors in contact with housing		
	Dirty fresh air filter	Clean fresh air filter.	<i>Inspecting and Cleaning Fresh Air Filter Element, page 326</i>
	Dirty recirculating air filter	Clean recirculating filter.	<i>Cleaning Return Air Cleaner/Filter, page 329</i>
	Evaporator clogged	Clean evaporator.	<i>Cleaning Air Conditioning (A/C) Evaporator Core, page 330</i>
	Air flow passage blocked	Remove blockage.	—
Heater not heating	Heater shut-off valve at engine closed	Open valve.	<i>3.10.1 Heater Shut-Off, page 57</i>
	Defective thermostat in engine water outlet manifold	Replace thermostat.	Contact Dealer
	Heater temperature control defective	Replace control.	
	No thermostat in engine water outlet manifold	Install thermostat.	
Odor from air louvers	Plugged drainage hose	Blow out hose with compressed air.	—
	Dirty filters	Clean filters.	<i>Cleaning Engine Air Filter Primary Element, page 343 and Cleaning Return Air Cleaner/Filter, page 329</i>

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Air conditioning not cooling	Low refrigerant level	Add refrigerant. Contact Dealer.	Contact Dealer
	Clutch coil burned out or disconnected	Contact Dealer.	
	Blower motor disconnected or burned out		
	Switch contacts in thermostat burned excessively, or sensing element defective	Replace thermostat.	
	Compressor partially or completely seized	Remove compressor for service or replacement.	
	Condenser fins plugged	Clean condenser.	5.7.3 Air Conditioning Condenser, page 329
	Loose or broken compressor drive belt	Replace drive belt and/or tighten to specifications.	Tensioning Air Conditioner (A/C) Compressor Belt, page 369 and Replacing Air Conditioner (A/C) Compressor Belt, page 369
	Dirty filters	Clean fresh air and recirculation filters.	Cleaning Engine Air Filter Primary Element, page 343 and Cleaning Return Air Cleaner/Filter, page 329
	Broken or disconnected electrical wire	Check all terminals for loose connections; check wiring for hidden breaks.	—
	Broken or disconnected ground wire	Check ground wire to see if loose, broken, or disconnected.	
	Expansion valve stuck in open or closed position	Contact Dealer.	Contact Dealer
	Broken refrigerant line		
	Leak in system		
	Compressor shaft seal leaking		
Clogged screen in receiver-drier; plugged hose or coil			

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Air conditioning not producing sufficient cooling. (sufficient cooling defined as when air temperature in cab, measured at louvered vent, can be maintained at 25°F [14°C] below ambient air temperature.)	Compressor clutch slipping	Remove clutch assembly for service or replacement.	Contact Dealer
	Thermostat defective or improperly adjusted	Replace thermostat.	
	Clogged air filters	Remove air filters, and clean or replace as necessary.	Cleaning Engine Air Filter Primary Element, page 343 and Cleaning Return Air Cleaner/Filter, page 329
	Heater circuit is open	Close temperature control in cab, and valve on engine.	3.10.3 Climate Controls, page 58 and 3.10.1 Heater Shut-Off, page 57
	Insufficient air circulation over condenser coil; fins clogged with dirt or insects	Clean condenser.	5.7.3 Air Conditioning Condenser, page 329
	Evaporator fins clogged	Clean evaporator fins (under cab floor).	Cleaning Air Conditioning (A/C) Evaporator Core, page 330
	Refrigerant low	Contact Dealer.	Contact Dealer
	Clogged expansion valve		
	Clogged receiver-drier		
	Excessive moisture in system		
Air in system			
Blower motor sluggish in operation			
Air Conditioning Cools Intermittently	Unit icing up due to thermostat adjusted too low	Adjust thermostat.	Contact Dealer
	Unit icing up due to excessive moisture in system	Contact Dealer.	
	Unit icing up due to incorrect super-heat adjustment in the expansion valve		
	Thermostat defective		
	Defective blower switch or blower motor		
	Partially open, improper ground or loose connection in compressor clutch coil		
	Compressor clutch slipping		

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Air Conditioning System Too Noisy	Defective winding or improper connection in compressor clutch coil or relay	Contact Dealer.	Contact Dealer
	Excessive charge in system		
	Low charge in system		
	Excessive moisture in system		
	Loose or excessively worn drive belt	Tighten or replace as required.	Tensioning Air Conditioner (A/C) Compressor Belt, page 369 and Replacing Air Conditioner (A/C) Compressor Belt, page 369
	Noisy clutch	Remove clutch for service or replacement as required.	Contact Dealer
	Noisy compressor	Check mountings and repair. Remove compressor for service or replacement.	
	Compressor oil level low	Add SP-15 PAG refrigerant oil.	
Blower fan noisy due to excessive wear	Remove blower motor for service or replacement as necessary.		
Windows Fog Up	High humidity	Run A/C to dehumidify air and heater to control temperature.	3.10.3 Climate Controls, page 58

TROUBLESHOOTING

6.8 Operator's Station Troubleshooting

Symptom	Problem	Solution	Section
Rough ride	Seat suspension not adjusted for operator's weight	Adjust seat suspension.	<i>3.3 Operator's Seat Adjustments, page 42</i>
Rough ride	High air pressure in tires	Deflate to proper pressure.	<i>Inflating Drive Wheel Tire, page 417 and Inflating Caster Tire, page 424</i>
Rough ride	Cab suspension too stiff	Adjust suspension.	Contact Dealer

7 Options and Attachments

The following options and attachments are available through your MacDon Dealer. The Dealer will require the part number (MD #) to determine pricing and availability.

7.1 Cab

7.1.1 AM/FM Radio

The cab is pre-wired for easy installation of a single DIN audio component available from your MacDon Dealer. Speakers are factory-installed.

In order to retain radio settings and preset memory with the battery disconnect turned off, select a radio with non-volatile memory.

For installation details, refer to the unloading and assembly instructions supplied with your windrower.

7.1.2 Automated Steering Systems

A MacDon-approved automated steering system is available from MacDon Dealers that provide Trimble® GPS installation and support services.

MacDon windrowers are partially prewired for either the Trimble® AutoPilot™ hydraulically integrated steering system or the Trimble® EZ-Pilot® wheel/column based assisted steering system. The windrower's ground speed lever (GSL) has an automated steering (autosteer) engage switch and the Trimble® display mounting kit (MD #183348) is supplied in the cab.

The Trimble® AutoPilot™ system requires the MacDon automated steering hydraulic interface kit (MD #B5589). Installation instruction (MD #169539) is included in the bundle.

Other GPS providers may supply parts in their vehicle-specific installation packages or make installation kits available through MacDon Dealers.

7.1.3 HID Auxiliary Lighting

Provides additional field lighting. The kit includes two cab-mounted high intensity discharge (HID) lamps and installation instructions.

MD #B5596

Instruction MD #169621 is included in the bundle.

7.1.4 Lighting and Marking for Cab-Forward Road Travel

Allows the windrower to be compliant with vehicle lighting regulations when travelling in the cab-forward mode on public roads. The kit includes red taillights, slow moving vehicle (SMV) markings, hardware, and installation instructions.

MD #B5412

Instruction MD #169426 is included in the bundle.

OPTIONS AND ATTACHMENTS

7.1.5 Pressure Sensor Kit

For enhanced monitoring of the knife drive (or reel drive) hydraulic pressure, and warns of overload conditions.

MD #B5574

Instruction MD #169031 is included in the bundle.

7.1.6 Warning Beacons

Two rotating warning beacons that are designed for installation onto the pre-wired cab. The kit includes the beacons, a switch, mounting hardware, and instructions. The beacons are standard equipment for exported windrowers, and are optional for North America. Fits 2009 and newer machines.

MD #B5582

Instruction MD #169538 is included in the bundle.

7.1.7 Windshield Shades

Retractable sun shades for front and rear windows. Attachment hardware is included.

MD #B4866

Instruction MD #169218 is included in the bundle.

7.2 Engine

7.2.1 Engine Block Heater

Contact your nearest Cummins Engine Distributor, and provide your engine model and serial numbers to ensure the proper heater is supplied.

7.2.2 Engine Fan Air Baffle

Prevents the windrow from being disturbed by engine cooling fan air blast.

MD #B5440

Instruction MD #169443 is included in the bundle.

7.3 Header Operation

7.3.1 Spring with External Booster Spring Kit

Available for headers over 2724 kg (6000 lb.) to increase the float capacity.

MD #B4659 (Spring with External Booster Spring kit) includes two springs (one for each side) and mounting brackets. Kit instruction MD #169032 is included in the bundle.

7.3.2 Spring with Internal Booster Spring kit

MacDon windrowers have two large diameter springs on each side—one is the outboard spring (B), and the other is the inboard spring (A). This kit (MD #B5303) replaces ONE of the large diameter springs (that does not already have an inner booster spring installed) with a new inboard spring assembly that comes with an internal booster spring inside.

MD #B5303 – includes one spring and castings for one side of the windrower.

Instruction MD #169316 is included in the bundle.

7.3.3 Draper Header Case Drain Kit

The Draper Header Case Drain kit must be installed when attaching a MacDon D50, D60, or D65 draper header with an upper cross auger (UCA), but without double draper drive. Case Drain Kit (MD #B5842) is **NOT** required for double-draper drive headers equipped with kits MD #B5606 and MD #B5653.

MD #B5842

7.3.4 Draper Header Reel Drive and Lift Plumbing

Base kit required to run draper header. Includes draper header reel drive and lift plumbing (less valve) and reel fore-aft hydraulics.

NOTE:

If the last digit of windrower code is B, this bundle is already installed.

MD #B5577

Instruction MD #169537 is included in the bundle.

7.3.5 Double Windrow Attachment (DWA)

Allows auger, and draper headers (without deck shift) to lay a double windrow when installed on a self-propelled windrower. The kit includes a draper deck, linkage assembly, hydraulics, and installation instructions.

MD #C1987 consists of:

- MD #B5973 Deck
- MD #B5974 Linkage assembly
- MD #B5301 Hydraulic kit
- Double Windrow Attachment (DWA) manual

7.3.6 Header Drive Reverser

Allows the conditioner, knife, auger, and reel to reverse on the auger header, and the conditioner and knife to reverse on the draper header.

MD #B4656^{46,47,48,49}

Instruction MD #169213 is included with the bundle.

7.3.7 Hydraulic Center-Link

Allows remote adjustment of the header angle using a hydraulic cylinder between the header and the windrower.

MD #B4650 (hydraulic center-link)

Instruction MD #169236 is included in the bundle.

7.3.8 Light Header Flotation

Available for headers that do not require as much spring tension for header float.

MD #B4664

Instruction MD #169033 is included in the bundle.

7.3.9 Mechanical Center-Link

The mechanical center-link provides a manually adjustable connection between the windrower and the header/mower conditioner.

MD #B4665

7.3.10 Rotary Header Drive Hydraulics (13-Foot)

Used to allow operation of a 13-foot rotary header. The kit includes header drive plumbing and installation instructions.

MD #B5510

Instructions are included in the bundle.

- MD #169544 13-foot R80 and R85 attached to M150 or M155

46. If installed on a windrower equipped with a D-Series draper header, only the knife circuit will reverse.

47. If installed on a windrower equipped with an A-Series auger header, the knife, reel, auger, and conditioner will reverse. Grass seed auger headers are not equipped with conditioners.

48. If installed on a windrower equipped with a D-Series draper header and HC10 Hay Conditioner, knife and conditioner will reverse.

49. R-Series rotary headers cannot use the reversing feature.

OPTIONS AND ATTACHMENTS

7.3.11 Self-Aligning Center-Link

Allows the center-link cylinder to be hydraulically positioned and connected to the header without leaving the operator's station.

Hydraulic center-link (MD #B4650) must be installed.

MD #B6028

Instruction MD #147811 included in the bundle.

7.3.12 Swath Roller

An axle-mounted swath roller increases the windrow's resistance to wind disturbance, especially in canola or similar crops. It can be fitted with a hydraulic lift with in-cab controls.

Contact your MacDon Dealer for information.

7.4 Transport

7.4.1 Towing Harness

The towing harness is used together with the weight box (refer to [7.4.2 Weight Box, page 461](#)) when towing a D-Series Draper Header equipped with slow speed transport option behind the windrower.

MD #B5280 – Weight box harness only. Includes hitch pin and wiring for use with slow speed header transport option. Instruction MD #169278 is included in the bundle.

7.4.2 Weight Box

To move the windrower without an attached header, attach the weight box to the header lift system. The weight box allows you to transport a header behind the windrower by providing additional weight on the drive wheels.

MD #B5238 – Weight box without harness

MD #B5240 – Weight box without harness and concrete⁵⁰. Instruction MD #169280 is included in the B5240 bundle.

A towing harness is required to use with the weight box. Refer to [7.4.1 Towing Harness, page 461](#) for more information.

50. For use outside of North America.

8 Reference

8.1 Recommended Torques

8.1.1 Torque Specifications

The following tables provide the correct torque values for various bolts, cap screws, and hydraulic fittings.

- Tighten all bolts to torque values specified in charts (unless otherwise noted throughout this manual).
- Replace hardware with same strength and grade of bolt.
- Use torque value tables as a guide and periodically check tightness of bolts.
- Understand torque categories for bolts and cap screws by using their identifying head markings.

SAE Bolt Torque Specifications

Torque values shown in the following tables are valid for non-greased, or non-oiled threads and heads; therefore, do **NOT** grease or oil bolts or cap screws unless otherwise specified in this manual.

Table 8.1 SAE Grade 5 Bolt and Grade 5 Free Spinning Nut

Nominal Size (A)	Torque (N·m)		Torque (ft·lbf) (*in·lbf)	
	Min.	Max.	Min.	Max.
1/4-20	11.9	13.2	*106	*117
5/16-18	24.6	27.1	*218	*241
3/8-16	44	48	32	36
7/16-14	70	77	52	57
1/2-13	106	118	79	87
9/16-12	153	170	114	126
5/8-11	212	234	157	173
3/4-10	380	420	281	311
7/8-9	606	669	449	496
1-8	825	912	611	676

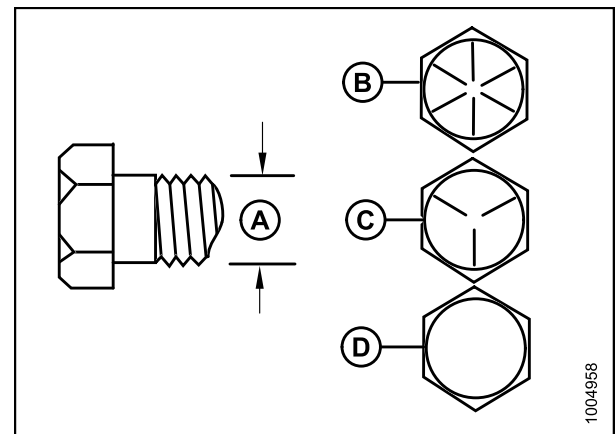


Figure 8.1: Bolt Grades

A - Nominal Size
C - SAE-5

B - SAE-8
D - SAE-2

REFERENCE

Table 8.2 SAE Grade 5 Bolt and Grade F Distorted Thread Nut

Nominal Size (A)	Torque (N·m)		Torque (ft·lbf) (*in·lbf)	
	Min.	Max.	Min.	Max.
1/4-20	8.1	9	*72	*80
5/16-18	16.7	18.5	*149	*164
3/8-16	30	33	22	24
7/16-14	48	53	35	39
1/2-13	73	80	54	59
9/16-12	105	116	77	86
5/8-11	144	160	107	118
3/4-10	259	286	192	212
7/8-9	413	456	306	338
1-8	619	684	459	507

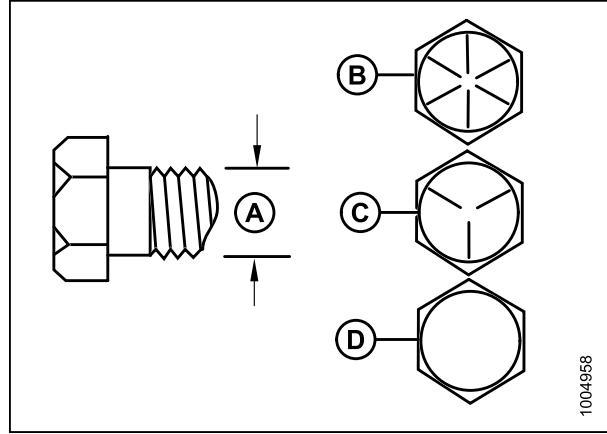


Figure 8.2: Bolt Grades

A - Nominal Size
 B - SAE-8
 C - SAE-5
 D - SAE-2

Table 8.3 SAE Grade 8 Bolt and Grade G Distorted Thread Nut

Nominal Size (A)	Torque (N·m)		Torque (ft·lbf) (*in·lbf)	
	Min.	Max.	Min.	Max.
1/4-20	16.8	18.6	*150	*165
5/16-18	24	26	18	19
3/8-16	42	46	31	34
7/16-14	67	74	50	55
1/2-13	102	113	76	84
9/16-12	148	163	109	121
5/8-11	204	225	151	167
3/4-10	362	400	268	296
7/8-9	583	644	432	477
1-8	874	966	647	716

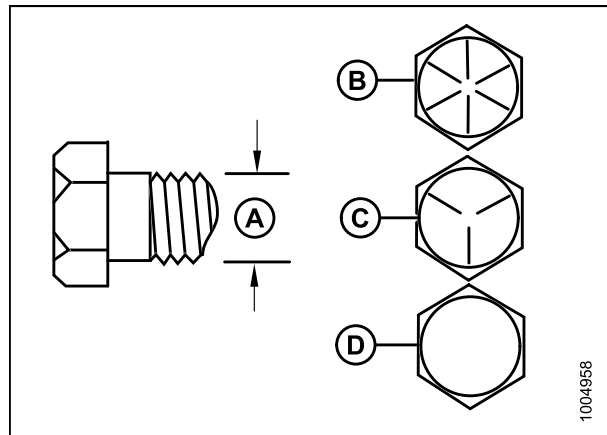


Figure 8.3: Bolt Grades

A - Nominal Size
 B - SAE-8
 C - SAE-5
 D - SAE-2

REFERENCE

Table 8.4 SAE Grade 8 Bolt and Grade 8 Free Spinning Nut

Nominal Size (A)	Torque (N·m)		Torque (ft·lbf) (*in·lbf)	
	Min.	Max.	Min.	Max.
1/4-20	16.8	18.6	*150	*165
5/16-18	35	38	26	28
3/8-16	61	68	46	50
7/16-14	98	109	73	81
1/2-13	150	166	111	123
9/16-12	217	239	160	177
5/8-11	299	330	221	345
3/4-10	531	587	393	435
7/8-9	855	945	633	700
1-8	1165	1288	863	954

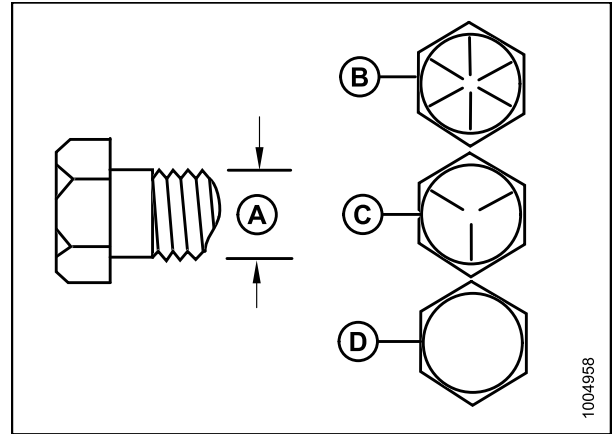


Figure 8.4: Bolt Grades

A - Nominal Size
C - SAE-5

B - SAE-8
D - SAE-2

Metric Bolt Specifications

Table 8.5 Metric Class 8.8 Bolts and Class 9 Free Spinning Nut

Nominal Size (A)	Torque (N·m)		Torque (ft·lbf) (*in·lbf)	
	Min.	Max.	Min.	Max.
3-0.5	1.4	1.6	*13	*14
3.5-0.6	2.2	2.5	*20	*22
4-0.7	3.3	3.7	*29	*32
5-0.8	6.7	7.4	*59	*66
6-1.0	11.4	12.6	*101	*112
8-1.25	28	30	20	23
10-1.5	55	60	40	45
12-1.75	95	105	70	78
14-2.0	152	168	113	124
16-2.0	236	261	175	193
20-2.5	460	509	341	377
24-3.0	796	879	589	651

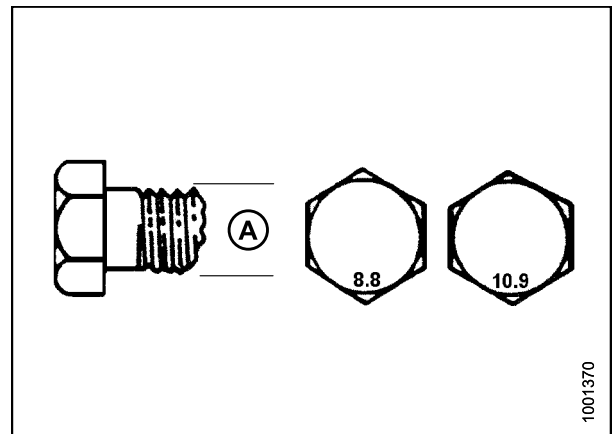


Figure 8.5: Bolt Grades

REFERENCE

Table 8.6 Metric Class 8.8 Bolts and Class 9 Distorted Thread Nut

Nominal Size (A)	Torque (N·m)		Torque (ft·lbf) (*in·lbf)	
	Min.	Max.	Min.	Max.
3-0.5	1	1.1	*9	*10
3.5-0.6	1.5	1.7	*14	*15
4-0.7	2.3	2.5	*20	*22
5-0.8	4.5	5	*40	*45
6-1.0	7.7	8.6	*69	*76
8-1.25	18.8	20.8	*167	*185
10-1.5	37	41	28	30
12-1.75	65	72	48	53
14-2.0	104	115	77	85
16-2.0	161	178	119	132
20-2.5	314	347	233	257
24-3.0	543	600	402	444

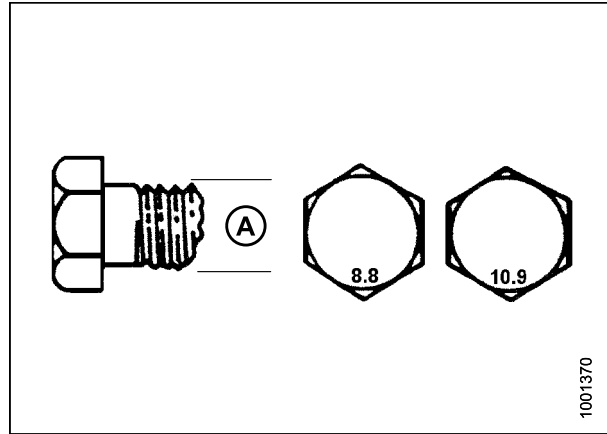


Figure 8.6: Bolt Grades

Table 8.7 Metric Class 10.9 Bolts and Class 10 Free Spinning Nut

Nominal Size (A)	Torque (N·m)		Torque (ft·lbf) (*in·lbf)	
	Min.	Max.	Min.	Max.
3-0.5	1.8	2	*18	*19
3.5-0.6	2.8	3.1	*27	*30
4-0.7	4.2	4.6	*41	*45
5-0.8	8.4	9.3	*82	*91
6-1.0	14.3	15.8	*140	*154
8-1.25	38	42	28	31
10-1.5	75	83	56	62
12-1.75	132	145	97	108
14-2.0	210	232	156	172
16-2.0	326	360	242	267
20-2.5	637	704	472	521
24-3.0	1101	1217	815	901

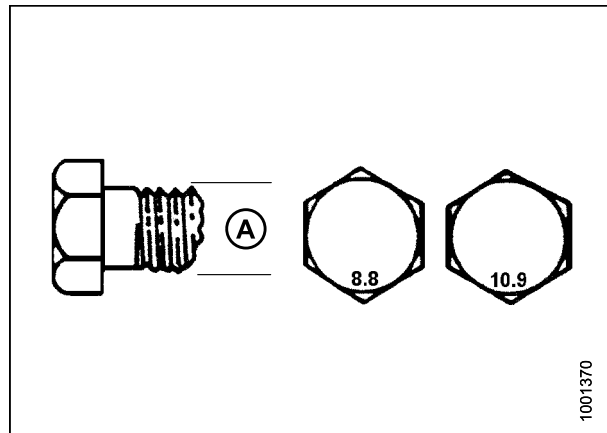


Figure 8.7: Bolt Grades

REFERENCE

Table 8.8 Metric Class 10.9 Bolts and Class 10 Distorted Thread Nut

Nominal Size (A)	Torque (N·m)		Torque (ft·lbf) (*in·lbf)	
	Min.	Max.	Min.	Max.
3-0.5	1.3	1.5	*12	*13
3.5-0.6	2.1	2.3	*19	*21
4-0.7	3.1	3.4	*28	*31
5-0.8	6.3	7	*56	*62
6-1.0	10.7	11.8	*95	*105
8-1.25	26	29	19	21
10-1.5	51	57	38	42
12-1.75	90	99	66	73
14-2.0	143	158	106	117
16-2.0	222	246	165	182
20-2.5	434	480	322	356
24-3.0	750	829	556	614

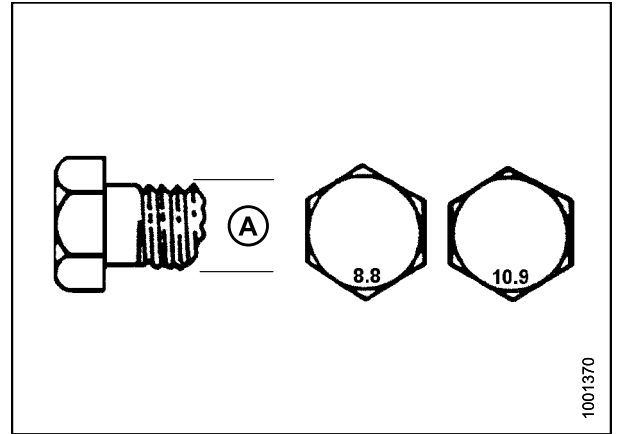


Figure 8.8: Bolt Grades

REFERENCE

Metric Bolt Specifications Bolting into Cast Aluminum

Table 8.9 Metric Bolt Bolting into Cast Aluminum

Nominal Size (A)	Bolt Torque			
	8.8 (Cast Aluminum)		10.9 (Cast Aluminum)	
	N·m	ft·lbf	N·m	ft·lbf
M3	–	–	–	1
M4	–	–	4	2.6
M5	–	–	8	5.5
M6	9	6	12	9
M8	20	14	28	20
M10	40	28	55	40
M12	70	52	100	73
M14	–	–	–	–
M16	–	–	–	–

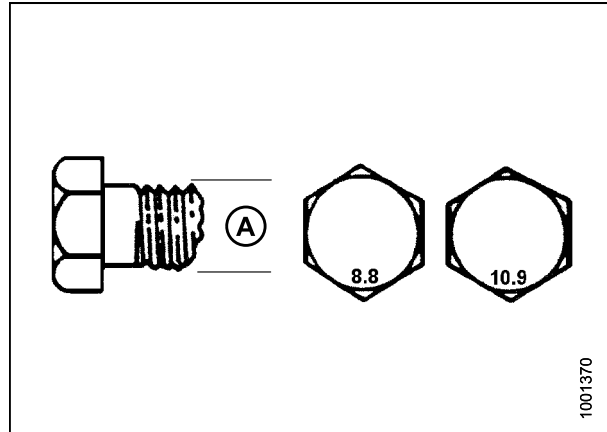


Figure 8.9: Bolt Grades

Flare-Type Hydraulic Fittings

1. Check flare (A) and flare seat (B) for defects that might cause leakage.
2. Align tube (C) with fitting (D) and thread nut (E) onto fitting without lubrication until contact has been made between flared surfaces.
3. Torque fitting nut (E) to specified number of flats from finger tight (FFFT) or to a given torque value in [Table 8.10 Flare-Type Hydraulic Tube Fittings, page 469](#).
4. Use two wrenches to prevent fitting (D) from rotating. Place one wrench on fitting body (D), and tighten nut (E) with other wrench to torque shown.
5. Assess final condition of connection.

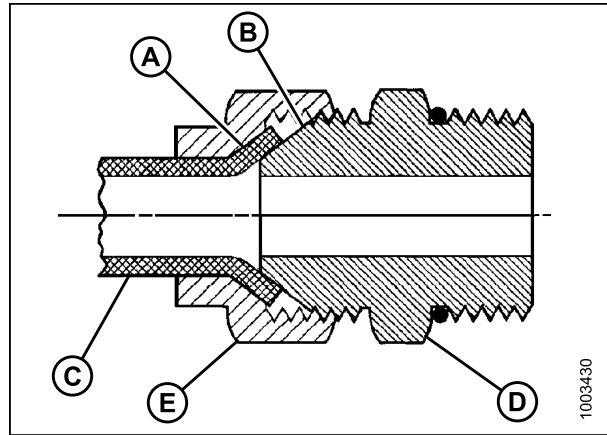


Figure 8.10: Hydraulic Fitting

REFERENCE

Table 8.10 Flare-Type Hydraulic Tube Fittings

SAE Dash Size	Thread Size (in.)	Torque Value ⁵¹		Flats from Finger Tight (FFFT)	
		N·m	ft·lbf	Tube	Swivel Nut or Hose
-2	5/16-24	4-5	3-4	—	—
-3	3/8-24	7-8	5-6	—	—
-4	7/16-20	18-19	13-14	2-1/2	2
-5	1/2-20	19-21	14-15	2	2
-6	9/16-18	30-33	22-24	2	1-1/2
-8	3/4-16	57-63	42-46	2	1-1/2
-10	7/8-14	81-89	60-66	1-1/2	1-1/2
-12	1-1/16-12	113-124	83-91	1-1/2	1-1/4
-14	1-3/16-12	136-149	100-110	1-1/2	1-1/4
-16	1-5/16-12	160-176	118-130	1-1/2	1
-20	1-5/8-12	228-250	168-184	1	1
-24	1-7/8-12	264-291	195-215	1	1
-32	2-1/2-12	359-395	265-291	1	1
-40	3-12	—	—	1	1

51. Torque values shown are based on lubricated connections as in reassembly.

REFERENCE

O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)

1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
2. Back off lock nut (C) as far as possible. Ensure that washer (D) is loose and is pushed toward lock nut (C) as far as possible.
3. Check that O-ring (A) is **NOT** on threads and adjust if necessary.
4. Apply hydraulic system oil to O-ring (A).

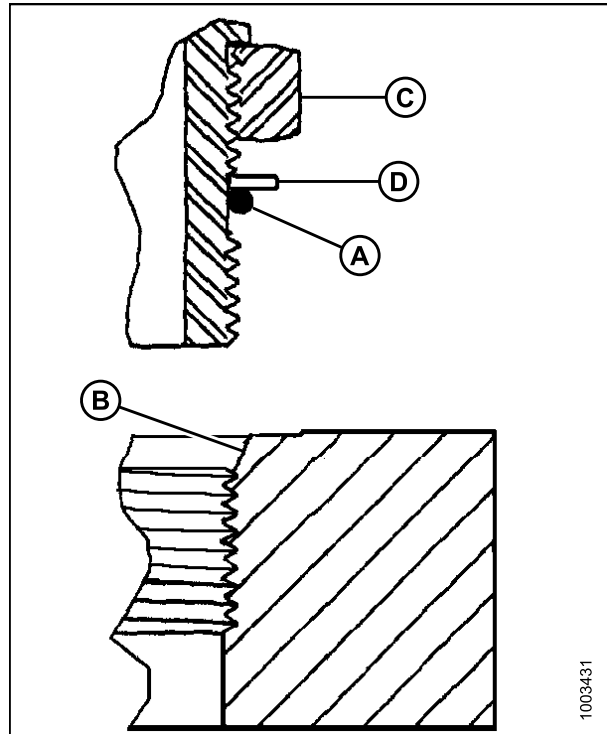


Figure 8.11: Hydraulic Fitting

5. Install fitting (B) into port until back up washer (D) and O-ring (A) contact part face (E).
6. Position angle fittings by unscrewing no more than one turn.
7. Turn lock nut (C) down to washer (D) and tighten to torque shown. Use two wrenches, one on fitting (B) and other on lock nut (C).
8. Check final condition of fitting.

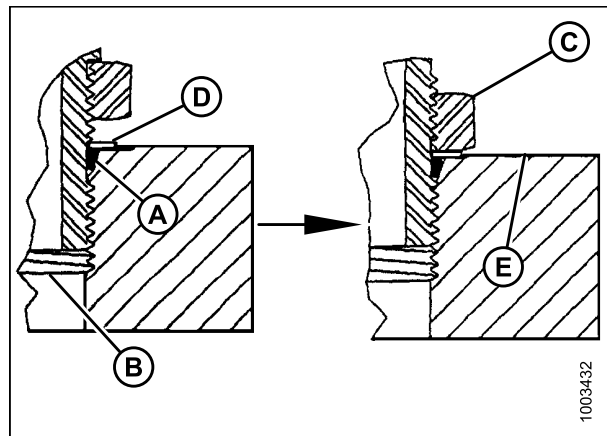


Figure 8.12: Hydraulic Fitting

REFERENCE

Table 8.11 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)

SAE Dash Size	Thread Size (in.)	Torque Value ⁵²	
		N·m	ft·lbf (*in·lbf)
-2	5/16-24	6-7	*53-62
-3	3/8-24	12-13	*106-115
-4	7/16-20	19-21	14-15
-5	1/2-20	21-33	15-24
-6	9/16-18	26-29	19-21
-8	3/4-16	46-50	34-37
-10	7/8-14	75-82	55-60
-12	1-1/16-12	120-132	88-97
-14	1-3/8-12	153-168	113-124
-16	1-5/16-12	176-193	130-142
-20	1-5/8-12	221-243	163-179
-24	1-7/8-12	270-298	199-220
-32	2-1/2-12	332-365	245-269

52. Torque values shown are based on lubricated connections as in reassembly.

REFERENCE

O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)

1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
2. Check that O-ring (A) is **NOT** on threads and adjust if necessary.
3. Apply hydraulic system oil to O-ring.
4. Install fitting (C) into port until fitting is hand tight.
5. Torque fitting (C) according to values in Table [8.12 O-Ring Boss \(ORB\) Hydraulic Fittings \(Non-Adjustable\)](#), page 472.
6. Check final condition of fitting.

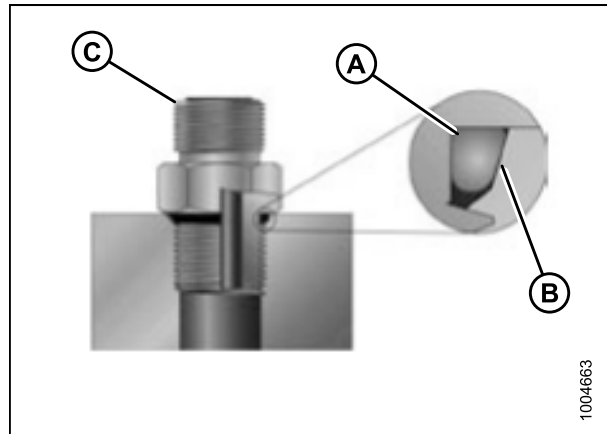


Figure 8.13: Hydraulic Fitting

Table 8.12 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)

SAE Dash Size	Thread Size (in.)	Torque Value ⁵³	
		N·m	ft·lbf (*in·lbf)
-2	5/16–24	6–7	*53–62
-3	3/8–24	12–13	*106–115
-4	7/16–20	19–21	14–15
-5	1/2–20	21–33	15–24
-6	9/16–18	26–29	19–21
-8	3/4–16	46–50	34–37
-10	7/8–14	75–82	55–60
-12	1-1/16–12	120–132	88–97
-14	1-3/8–12	153–168	113–124
-16	1-5/16–12	176–193	130–142
-20	1-5/8–12	221–243	163–179
-24	1-7/8–12	270–298	199–220
-32	2-1/2–12	332–365	245–269

53. Torque values shown are based on lubricated connections as in reassembly.

REFERENCE

O-Ring Face Seal (ORFS) Hydraulic Fittings

1. Check components to ensure that sealing surfaces and fitting threads are free of burrs, nicks, scratches, or any foreign material.



Figure 8.14: Hydraulic Fitting

2. Apply hydraulic system oil to O-ring (B).
3. Align tube or hose assembly so that flat face of sleeve (A) or (C) comes in full contact with O-ring (B).
4. Thread tube or hose nut (D) until hand-tight. The nut should turn freely until it is bottomed out.
5. Torque fittings according to values in [Table 8.13 O-Ring Face Seal \(ORFS\) Hydraulic Fittings, page 474](#).

NOTE:

If applicable, hold hex on fitting body (E) to prevent rotation of fitting body and hose when tightening fitting nut (D).

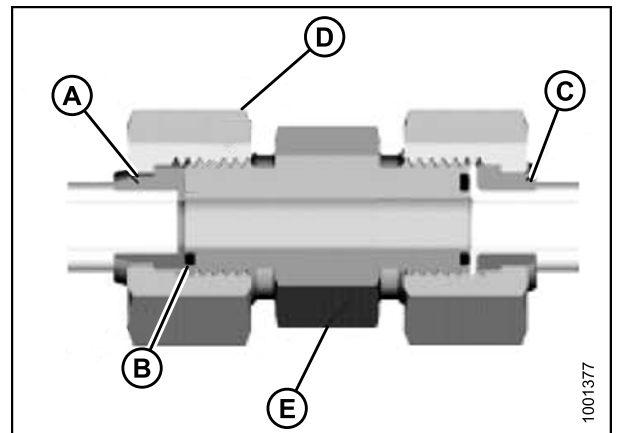


Figure 8.15: Hydraulic Fitting

6. Use three wrenches when assembling unions or joining two hoses together.
7. Check final condition of fitting.

REFERENCE

Table 8.13 O-Ring Face Seal (ORFS) Hydraulic Fittings

SAE Dash Size	Thread Size (in.)	Tube O.D. (in.)	Torque Value ⁵⁴	
			N·m	ft·lbf
-3	Note ⁵⁵	3/16	–	–
-4	9/16	1/4	25–28	18–21
-5	Note ⁵⁵	5/16	–	–
-6	11/16	3/8	40–44	29–32
-8	13/16	1/2	55–61	41–45
-10	1	5/8	80–88	59–65
-12	1-3/16	3/4	115–127	85–94
-14	Note ⁵⁵	7/8	–	–
-16	1-7/16	1	150–165	111–122
-20	1-11/16	1-1/4	205–226	151–167
-24	1–2	1-1/2	315–347	232–256
-32	2-1/2	2	510–561	376–414

54. Torque values and angles shown are based on lubricated connection as in reassembly.

55. O-ring face seal type end not defined for this tube size.

REFERENCE

Tapered Pipe Thread Fittings

Assemble pipe fittings as follows:

1. Check components to ensure that fitting and port threads are free of burrs, nicks and scratches, or any form of contamination.
2. Apply pipe thread sealant (paste type) to external pipe threads.
3. Thread fitting into port until hand-tight.
4. Torque connector to appropriate torque angle. The Turns From Finger Tight (TFFT) values are shown in Table [8.14 Hydraulic Fitting Pipe Thread, page 475](#). Make sure that tube end of a shaped connector (typically 45° or 90°) is aligned to receive incoming tube or hose assembly. Always finish alignment of fitting in tightening direction. Never back off (loosen) pipe threaded connectors to achieve alignment.
5. Clean all residue and any excess thread conditioner with appropriate cleaner.
6. Assess final condition of fitting. Pay special attention to possibility of cracks to port opening.
7. Mark final position of fitting. If a fitting leaks, disassemble fitting and check for damage.

NOTE:

Over-torque failure of fittings may not be evident until fittings are disassembled.

Table 8.14 Hydraulic Fitting Pipe Thread

Tapered Pipe Thread Size	Recommended T.F.F.T	Recommended F.F.F.T
1/8-27	2-3	12-18
1/4-18	2-3	12-18
3/8-18	2-3	12-18
1/2-14	2-3	12-18
3/4-14	1.5-2.5	12-18
1-11 1/2	1.5-2.5	9-15
1 1/4-11 1/2	1.5-2.5	9-15
1 1/2-11 1/2	1.5-2.5	9-15
2-11 1/2	1.5-2.5	9-15

8.2 Recommended Fuel, Fluids, and Lubricants

8.2.1 Storing Lubricants and Fluids

Your machine can only operate at top efficiency if clean fuel and lubricants are used.

- Buy good quality, clean fuel from a reputable dealer.
- Use clean containers to handle fuel and lubricants.
- Keep containers full to avoid condensation issues
- Store in an area protected from dust, moisture, and other contaminants.
- Avoid storing fuel over long periods of time. If you have a slow fuel turnover in the windrower or supply tank, add fuel conditioner to avoid condensation problems.
- Store fuel in a convenient place away from buildings.

8.2.2 Fuel Specifications

Use good quality diesel fuel from a reputable supplier. For most year-round service, a No.2 diesel fuel that meets ASTM specification D975 Grade S15 will provide good performance.

If the vehicle is exposed to extreme cold (below -7°C [20°F]) or is required to operate at colder-than-normal conditions for prolonged periods, use climatized No.2 diesel fuel, or dilute the No.2 fuel with 50% No.1 fuel. This will provide better protection from fuel gelling or wax-plugging of the fuel filters.

Table 8.15 Fuel Specification

Fuel	Specification	Sulphur (by weight)	Water and Sediment (by volume)	Cetane No.	Lubricity
Grade no. 2	ASTM D975	0.5% maximum	0.05% maximum	40°C (104°F) minimum	520 Microns
Grade no.1 and 2 mix ⁵⁶	n/a	1% maximum 0.5% maximum preferred	0.1% maximum	45–55°C (113–131°F) cold weather / high altitude	460 Microns

In extreme situations, when available fuels are of poor quality or problems exist which are peculiar to certain operations, additives can be used. However, the engine manufacturer recommends consultation with the fuel supplier or engine manufacturer before using fuel additives. Situations where additives are useful include:

- A cetane improver additive can be used with low cetane fuels.
- A wax crystal modifier can help with fuels with high cold filter plugging points (CFPP).
- An anti-icer can help prevent ice formation in wet fuel during cold weather.
- An antioxidant or storage stability additive can help with fuel system deposits and poor storage stability.
- A lubricity enhancer can be used to increase the lubricity of fuels so that they meet the requirements given in the table on the previous page. Diesel fuel conditioner is available from your Dealer.

⁵⁶. Optional when operating temperature is below 0°C (32°F).

REFERENCE

8.2.3 Lubricants, Fluids, and System Capacities

CAUTION

To avoid injury or death, do not allow ANY machine fluids to enter the body.

Table 8.16 System Capacities

Lubricant/Fluid	Location	Description	Capacity
Grease	As required unless otherwise specified	SAE multi-purpose high temperature extreme pressure (EP2) performance with 1% max Molybdenum Disulphide (NLGI Grade 2) lithium base	
Diesel fuel	Fuel tank	Diesel Grade No.2, or Diesel Grade No.1 and 2 mix ⁵⁷ ; refer to 8.2.2 Fuel Specifications, page 476 for more information	378 liters (97 US gallons)
Hydraulic oil	Hydraulic reservoir	SAE 15W-40 compliant with SAE specs for API class SJ and CH-4 engine oil.	65 liters (17.2 US gallons)
Gear lubricant	Gearbox	SAE 80W-140 ⁵⁸ , API service class GL-5, fully synthetic gear lubricant, (SAE J2360 preferred)	2.1 liters (2.2 US quarts)
	Wheel drive ⁵⁹	SAE 75W-90, API service class GL-5, fully synthetic gear lubricant, (SAE J2360 preferred)	1.4 liters (1.5 US quarts)
Antifreeze	Engine cooling system	ASTM D-6210 and Fleetguard ES Compleat [®] See belowlast page of this section	27.5 liters (7.3 US gallons) ⁶⁰
Engine oil	Engine oil pan	SAE 15W-40 compliant with SAE specs for API class SJ and CH-4 engine oil	11 liters (11.6 US quarts)
Air conditioning refrigerant ⁶¹	Air conditioning system	R134A	2.27 kg (5 lb.)
Air conditioning refrigerant oil ⁶²	Air conditioning system total capacity	PAG SP-15	240 cc (8.1 fl. oz.)

57. Optional when operating temperature is below 0°C (32°F).

58. SAE 75W-140 may be substituted for SAE 80W-140 if necessary.

59. SAE 85W-140 API Service Class GL-5. Extreme Pressure Gear Lubricant is used before initial change.

60. Equal parts with water, high quality, soft, de-ionized or distilled water as recommended by Supplier.

61. For prior models who have not upgraded to 5 lb. of refrigerant order Kit MD #183180, which includes decal to advise of systems 5 lb. charge requirement. Refer to Service Bulletin 1254.

62. New compressor (MD #203013) comes filled. If installing on 2014 and prior, refer to Service Bulletin 1254.

REFERENCE

If Fleetguard ES Compleat® is unavailable, use a coolant concentrate or prediluted coolant intended for use with heavy duty diesel engines and with a minimum of the following chemical and physical properties:

- Provides cylinder cavitation protection according to fleet study run at or above 60% load capacity.
- Protects the cooling system metals (cast iron, aluminum alloys, and copper alloys such as brass) from corrosion.

The additive package must be part of one of the following coolant mixtures:

- Ethylene glycol or propylene glycol base prediluted (40–60%) heavy duty coolant.
- Ethylene glycol or propylene glycol base heavy duty coolant concentrate in a 40–60% mixture of concentrate with quality water.

Water quality is important to the performance of the cooling system. Distilled, deionized, or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

IMPORTANT:

Do **NOT** use cooling system sealing additives or antifreeze that contains sealing additives.

8.2.4 Filter Part Numbers

Table 8.17 M155 Filter Part Numbers

Filter	Part Number
Engine oil filter	MD #111974
Charge oil filter	MD #112419
Return oil filter	MD #151975
Primary fuel filter element	MD #111972
Secondary fuel filter element	MD #166312
Fuel strainer filter (breather)	MD #111608
Fuel filler filter	MD #163989
Return air filter	MD #109797
Primary element (cab)	MD #111060
Primary air filter element	MD #111954
Safety air filter element	MD #111955

REFERENCE

8.3 Conversion Chart

Table 8.18 Conversion Chart

Quantity	SI Units (Metric)		Factor	Inch-Pound Units	
	Unit Name	Abbreviation		Unit Name	Abbreviation
Area	hectares	ha	$\times 0.4047 =$	acres	acres
Flow	liters per minute	L/min	$\times 3.7854 =$	US gallons per minute	gpm
Force	Newtons	N	$\times 4.4482 =$	pounds force	lbf
Length	millimeters	mm	$\times 25.4 =$	inch	in.
	meters	m	$\times 0.305 =$	foot	ft.
Power	kilowatts	kW	$\times 0.7457 =$	horsepower	hp
Pressure	kilopascals	kPa	$\times 6.8948 =$	pounds per square inch	psi
	megapascals	MPa	$\times .00689 =$		
	bar (Non-SI)	bar	$\div 14.5038 =$		
Torque	Newton meters	N·m	$\times 1.3558 =$	pound feet or foot pounds	ft·lbf
	Newton meters	N·m	$\times 0.1129 =$	pound inches or inch pounds	in·lbf
Temperature	Celsius	°C	$(^{\circ}\text{F}-32) \times 0.56 =$	degrees Fahrenheit	°F
Velocity	meters per minute	m/min	$\times 0.3048 =$	feet per minute	ft/min
	meters per second	m/s	$\times 0.3048 =$	feet per second	ft/s
	kilometers per hour	km/h	$\times 1.6063 =$	miles per hour	mph
Volume	liters	L	$\times 3.7854 =$	US gallons	US gal
	milliliters	ml	$\times 29.5735 =$	ounces	oz.
	cubic centimeters	cm ³ or cc	$\times 16.3871 =$	cubic inches	in. ³
Weight	kilograms	kg	$\times 0.4536 =$	pounds	lb.

REFERENCE

8.4 Engine Error Codes

The following example explains the segments of an error code:

If the cab display module (CDM) displays the Error Code 629S 12F 28C

629S: S represents the J1939 SPN column. Locate code 629 in that column.

12F: F represents the FMI column. Locate code 12 in that column.

28C: C represents the occurrences (count); 28 is the quantity.

J1939 SPN description: Controller #1. The Cummins description of this is engine control module critical internal failure—Bad intelligent device or component.

The Cummins Dealer will request the fault code that corresponds with the number that you have located in the J1939 SPN column.

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description ⁶³
719	22	3	Amber	Crankcase pressure	Extended crankcase blow-by pressure circuit—voltage above normal, or shorted to high source
729	22	4	Amber	Crankcase pressure	Extended crankcase blow-by pressure circuit—voltage below normal, or shorted to low source
2114	52	0	Red	Coolant temperature	Coolant temperature 2—data valid but above normal operational range—most severe level
2111	52	3	Amber	Coolant temperature	Coolant temperature 2 sensor circuit—voltage above normal, or shorted to high source
2112	52	4	Amber	Coolant temperature	Coolant temperature 2 sensor circuit—voltage below normal, or shorted to low source
2113	52	16	Amber	Coolant temperature	Coolant temperature 2—data valid but above normal operational range—moderately severe level
241	84	2	Amber	Wheel-based vehicle speed	Vehicle speed sensor circuit—data erratic, intermittent, or incorrect
242	84	10	Amber	Wheel-based vehicle speed	Vehicle speed sensor circuit tampering has been detected—abnormal rate of change
148	91	0	Red	Accelerator pedal position	Accelerator pedal or lever position sensor circuit—abnormal frequency, pulse width, or period
147	91	1	Red	Accelerator pedal position	Accelerator pedal or lever position sensor circuit—abnormal frequency, pulse width, or period

63. The descriptions of Cummins J1939 SPN codes are subject to change at their discretion.

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁶³
1242	91	2	Red	Accelerator pedal position	Accelerator pedal or lever position sensor 1 and 2—data erratic, intermittent, or incorrect
131	91	3	Red	Accelerator pedal position	Accelerator pedal or lever position sensor circuit—voltage above normal, or shorted to high source
132	91	4	Red	Accelerator pedal position	Accelerator pedal or lever position sensor circuit—voltage below normal, or shorted to low source
287	91	19	Red	Accelerator pedal position	SAE J1939 multiplexing accelerator pedal or lever sensor system error—received network data in error
528	93	2	Amber	Switch—data	Auxiliary alternate torque validation switch—data erratic, intermittent, or incorrect
2216	94	1	Amber	Fuel delivery pressure	Fuel pump delivery pressure—data valid but above normal operational range—moderately severe level
268	94	2	Amber	Fuel delivery pressure	Fuel pressure sensor circuit—data erratic, intermittent, or incorrect
546	94	3	Amber	Fuel delivery pressure	Fuel delivery pressure sensor circuit—voltage above normal, or shorted to high source
547	94	4	Amber	Fuel delivery pressure	Fuel delivery pressure sensor circuit—voltage below normal, or shorted to low source
2261	94	15	Amber Blinking	Fuel delivery pressure	Fuel pump delivery pressure—data valid but above normal operational range—least severe level
2262	94	17	Amber Blinking	Fuel delivery pressure	Fuel pump delivery pressure—data valid but below normal operational range—least severe level
2215	94	18	Amber	Fuel delivery pressure	Fuel pump delivery pressure—data valid but below normal operational range—moderately severe level
2372	95	16	Amber	Engine fuel filter differential pressure	Fuel filter differential pressure—data valid but above normal operational range—moderately severe level
428	97	3	Amber	Water in fuel indicator	Water in fuel sensor circuit—voltage above normal, or shorted to high source
429	97	4	Amber	Water in fuel indicator	Water in fuel sensor circuit—voltage below normal, or shorted to low source

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁶³
418	97	15	Amber Blinking	Water in fuel indicator	Water in fuel indicator high—data valid but above normal operational range—least severe level
1852	97	16	Amber	Water in fuel indicator	Water in fuel indicator—data valid but above normal operational range—moderately severe level
415	100	1	Red	Engine oil pressure	Oil pressure low—data valid but below normal operational range—most severe level
435	100	2	Amber	Engine oil pressure	Oil pressure sensor circuit—data erratic, intermittent, or incorrect
135	100	3	Amber	Engine oil pressure	Oil pressure sensor circuit—voltage above normal, or shorted to high source
141	100	4	Amber	Engine oil pressure	Oil pressure sensor circuit—voltage below normal, or shorted to low source
143	100	18	Amber	Engine oil pressure	Oil pressure low—data valid but below normal operational range—moderately severe level
2973	102	2	Amber	Boost pressure	Intake manifold pressure sensor circuit—data erratic, intermittent, or incorrect
122	102	3	Amber	Boost pressure	Intake manifold pressure sensor circuit—voltage above normal, or shorted to high source
123	102	4	Amber	Boost pressure	Intake manifold pressure sensor circuit—voltage below normal, or shorted to low source
124	102	16	Amber	Boost pressure	Intake manifold 1 pressure—data valid but above normal operational range—moderately severe level
2345	103	10	Amber	Turbocharger 1 speed	Turbocharger speed invalid rate of change detected—abnormal rate of change
595	103	16	Amber	Turbocharger 1 speed	Turbocharger #1 speed high—data valid but above normal operational range—moderately severe level
687	103	18	Amber	Turbocharger 1 speed	Turbocharger #1 speed low—data valid but below normal operational range—moderately severe level
155	105	0	Red	Intake manifold #1 temp	Intake manifold air temperature high—data valid but above normal operational range—most severe level

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁶³
153	105	3	Amber	Intake manifold #1 temp	Intake manifold air temperature sensor circuit—voltage above normal, or shorted to high
154	105	4	Amber	Intake manifold #1 temp	Intake manifold air temperature sensor circuit—voltage below normal, or shorted to low source
488	105	16	Amber	Intake manifold	Intake manifold 1 temperature—data valid but above normal operational range—moderately severe level
295	108	2	Amber	Barometric pressure	Barometric pressure sensor circuit—data erratic, intermittent, or incorrect
221	108	3	Amber	Barometric pressure	Barometric pressure sensor circuit—voltage above normal, or shorted to high source
222	108	4	Amber	Barometric pressure	Barometric pressure sensor circuit—voltage below normal, or shorted to low source
231	109	3	Amber	Coolant pressure	Coolant pressure sensor circuit—voltage above normal, or shorted to high source
232	109	4	Amber	Coolant pressure	Coolant pressure sensor circuit—voltage below normal, or shorted to low source
233	109	18	Amber	Coolant pressure	Coolant pressure—data valid but below normal operational range—moderately severe level
151	110	0	Red	Engine coolant temperature	Coolant temperature high—data valid but above normal operational range—most severe level
334	110	2	Amber	Engine coolant temperature	Coolant temperature sensor circuit—data erratic, intermittent, or incorrect
144	110	3	Amber	Engine coolant temperature	Coolant temperature sensor circuit—voltage above normal, or shorted to high source
145	110	4	Amber	Engine coolant temperature	Coolant temperature sensor circuit—voltage below normal, or shorted to low source
2963	110	15	None	Engine coolant temperature	Engine coolant temperature high—data valid but above normal operational range—least severe level
146	110	16	Amber	Engine coolant temperature	Coolant temperature high—data valid but above normal operational range—moderately severe level

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description ⁶³
235	111	1	Red	Coolant level	Coolant level low—data valid but below normal operational range—most severe level
422	111	2	Amber	Coolant level	Coolant level—data erratic, intermittent, or incorrect
195	111	3	Amber	Coolant level	Coolant level sensor circuit—voltage above normal, or shorted to high source
196	111	4	Amber	Coolant level	Coolant level sensor circuit—voltage below normal, or shorted to low source
2448	111	17	Amber Blinking	Coolant level	Coolant level—data valid but below normal operating range—least severe level
197	111	18	Amber	Coolant level	Coolant level—data valid but below normal operational range—moderately severe level
449	157	0	Red	Injector metering rail 1 pressure	Fuel pressure high—data valid but above normal operational range—moderately severe level
1911	157	0	Amber	Injector metering rail	Injector metering rail 1 pressure—data valid but above normal operational range—most severe level
224 9	157	1	Amber	Injector metering rail 1 pressure	Injector metering rail 1 pressure—data valid but below normal operational range—most severe level
554	157	2	Amber	Injector metering rail 1 pressure	Fuel pressure sensor error—data erratic, intermittent, or incorrect
451	157	3	Amber	Injector metering rail 1 pressure	Injector metering rail #1 pressure sensor circuit—voltage above normal, or shorted to high source
452	157	4	Amber	Injector metering rail 1 pressure	Injector metering rail #1 pressure sensor circuit—voltage below normal, or shorted to low source
553	157	16	Amber	Injector metering rail 1 pressure	Injector metering rail #1 pressure high—data valid but above normal operational range—moderately severe level
559	157	18	Amber	Injector metering rail 1 pressure	Injector metering rail #1 pressure low—data valid but below normal operational range—moderately severe level
951	166	2	None	Cylinder power	Cylinder power imbalance between cylinders—data erratic, intermittent, or incorrect

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁶³
598	167	1	Red	Alternate potential (voltage)	Electrical charging system voltage low—data valid but below normal operational range—most severe level
596	167	16	Amber	Alternate potential (voltage)	Electrical charging system voltage high—data valid but above normal operational range—moderately severe level
597	167	18	Amber	Alternate potential (voltage)	Electrical charging system voltage low—data valid but below normal operational range—moderately severe level
442	168	16	Amber	Electrical potential (voltage)	Battery #1 voltage high—data valid but above normal operational range—moderately severe level
441	168	18	Amber	Electrical potential (voltage)	Battery #1 voltage low—data valid but below normal operational range—moderately severe level
249	171	3	Amber	Ambient air temperature	Ambient air temperature sensor circuit—voltage above normal, or shorted to high source
256	171	4	Amber	Ambient air temperature	Ambient air temperature sensor circuit—voltage below normal, or shorted to low source
263	174	3	Amber	Fuel temperature	Engine fuel temperature sensor 1 circuit—voltage above normal, or shorted to high source
265	174	4	Amber	Fuel temperature	Engine fuel temperature sensor 1 circuit—voltage below normal, or shorted to low source
261	174	16	Amber	Fuel temperature	Engine fuel temperature—data valid but above normal operational range—moderately severe level
214	175	0	Red	Oil temperature	Engine oil temperature—data valid but above normal operational range—most severe level
425	175	2	Amber	Oil temperature	Engine oil temperature—data erratic, intermittent, or incorrect
212	175	3	Amber	Oil temperature	Engine oil temperature sensor 1 circuit—voltage above normal, or shorted to high source
213	175	4	Amber	Oil temperature	Engine oil temperature sensor 1 circuit—voltage below normal, or shorted to low source

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description ⁶³
234	190	0	Red	Engine speed	Engine speed high—data valid but above normal operational range—most severe level
689	190	2	Amber	Engine speed	Primary engine speed sensor error—data erratic, intermittent, or incorrect
2321	190	2	None	Engine speed	Engine speed/position sensor #1—data erratic, intermittent, or incorrect
349	191	16	Amber	Transmission output shaft speed	Transmission output shaft speed—data valid but above normal operational range—moderately severe level
489	191	18	Amber	Transmission output shaft speed	Transmission output shaft speed—data valid but below normal operational range—moderately severe level
319	251	2	Amber Blinking	Real time clock power	Real time clock power interrupt—data erratic, intermittent, or incorrect
2375	412	3	Amber	Exhaust gas recirculation temperature	Exhaust gas recirculation temperature sensor circuit—voltage above normal, or shorted to high source
2376	412	4	Amber	Exhaust gas recirculation temperature	Exhaust gas recirculation temperature sensor circuit—voltage below normal, or shorted to low source
293	441	3	Amber	OEM temperature	Auxiliary temperature sensor input #1 circuit—voltage above normal, or shorted to high source
294	441	4	Amber	OEM temperature	Auxiliary temperature sensor input #1 circuit—voltage below normal, or shorted to low source
292	441	14	Red	Auxiliary temperature 1	Auxiliary temperature sensor input 1—special instructions
431	558	2	Amber	Accelerator pedal low idle switch	Accelerator pedal or lever idle validation circuit—data erratic, intermittent, or incorrect
551	558	4	Amber	Accelerator pedal low idle switch	Accelerator pedal or lever idle validation circuit—voltage below normal, or shorted to low source
432	558	13	Red	Accelerator pedal low idle switch	Accelerator pedal or lever idle validation circuit—out of calibration
523	611	2	Amber	System diagnostic code #1	OEM intermediate (PTO) speed switch validation—data erratic, intermittent, or incorrect
2292	611	16	Amber	Fuel inlet meter device	Fuel inlet meter device—data valid but above normal operational range—moderately severe level

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁶³
2293	611	18	Amber	Fuel inlet meter device	Fuel inlet meter device flow demand lower than expected—data valid but below normal operational range—moderately severe level
115	612	2	Red	System diagnostic code #2	Engine speed/position sensor circuit lost both of two signals from the magnetic pickup sensor—data erratic, intermittent, or incorrect
244	623	4	Amber	Red stop lamp	Red stop lamp driver circuit—voltage below normal, or shorted to low source
1117	627	2		Power supply	Power lost with ignition on—data erratic, intermittent, or incorrect
351	627	12	Amber	Controller #1	Injector power supply—bad intelligent device or component
111	629	12	Red	Controller #1	Engine control module critical internal failure—bad intelligent device or component
343	629	12	Amber	Controller #1	Engine control module warning internal hardware failure—bad intelligent device or component
341	630	2	Amber	Calibration memory	Engine control module data lost—data erratic, intermittent, or incorrect
342	630	13	Red	Calibration memory	Electronic calibration code incompatibility—out of calibration
2217	630	31	Amber	Calibration memory	ECM program memory (ram) corruption—condition exists
2311	633	31	Amber	Fuel control valve #1	Fueling actuator #1 circuit error—condition exists
285	639	9	Amber	SAE J1939 datalink	SAE J1939 multiplexing PGN timeout error—abnormal update rate
286	639	13	Amber	SAE J1939 datalink	SAE J1939 multiplexing configuration error—out of calibration
599	640	14	Red	Engine external protection input	Auxiliary commanded dual output shutdown—special instructions
237	644	2	Amber	External speed input	External speed input (multiple unit synchronization)—data erratic, intermittent, or incorrect
2377	647	3	Amber	Fan clutch output device driver	Fan control circuit—voltage above normal, or shorted to high source
245	647	4	Amber	Fan clutch output device driver	Fan control circuit—voltage below normal, or shorted to low source

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description ⁶³
322	651	5	Amber	Injector cylinder #01	Injector solenoid cylinder #1 circuit— current below normal, or open circuit
1139	651	7	Amber	Injector cylinder #01	Injector cylinder #1— mechanical system not responding properly or out of adjustment
331	652	5	Amber	Injector cylinder #02	Injector solenoid cylinder #2 circuit— current below normal, or open circuit
1141	652	7	Amber	Injector cylinder #02	Injector cylinder #2— mechanical system not responding properly or out of adjustment
324	653	5	Amber	Injector cylinder #03	Injector solenoid cylinder #3 circuit— current below normal, or open circuit
1142	653	7	Amber	Injector cylinder #03	Injector cylinder #3— mechanical system not responding properly or out of adjustment
332	654	5	Amber	Injector cylinder #04	Injector solenoid cylinder #4 circuit— current below normal, or open circuit
1143	654	7	Amber	Injector cylinder #04	Injector cylinder #4— mechanical system not responding properly or out of adjustment
323	655	5	Amber	Injector cylinder #05	Injector solenoid cylinder #5 circuit— current below normal, or open circuit
1144	655	7	Amber	Injector cylinder #05	Injector cylinder #5— mechanical system not responding properly or out of adjustment
325	656	5	Amber	Injector cylinder #06	Injector solenoid cylinder #6 circuit— current below normal, or open circuit
1145	656	7	Amber	Injector cylinder #06	Injector cylinder #6— mechanical system not responding properly or out of adjustment
584	677	3	Amber	Starter solenoid lockout relay driver circuit	Starter relay circuit— voltage above normal, or shorted to high source
585	677	4	Amber	Starter solenoid lockout relay driver circuit	Starter relay circuit— voltage below normal, or shorted to low source
2557	697	3	Amber	Auxiliary PWM driver #1	Auxiliary PWM driver #1— voltage above normal, or shorted to high source
2558	697	4	Amber	Auxiliary PWM driver #1	Auxiliary PWM driver #1— voltage below normal, or shorted to low source
527	702	3	Amber	Circuit— voltage	Auxiliary input/output 2 circuit— voltage above normal, or shorted to high source
529	703	3	Amber	Circuit— voltage	Auxiliary input/output 3 circuit— voltage above normal, or shorted to high source
779	703	11	Amber	Auxiliary equipment sensor input	Warning auxiliary equipment sensor input #3 (OEM switch)—root cause not known

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description ⁶³
2195	703	14	Red	Auxiliary equipment sensor	Auxiliary equipment sensor input 3 engine protection critical—special instructions
778	723	2	Amber	Engine speed sensor #2	Engine speed sensor (camshaft) error—data erratic, intermittent, or incorrect
2322	723	2	None	Engine speed sensor #2	Engine speed/position sensor #2—data erratic, intermittent, or incorrect
731	723	7	Amber	Engine speed sensor #2	Engine speed/position #2 mechanical misalignment between camshaft and crankshaft sensors—mechanical system not responding properly or out of adjustment
2555	729	3	Amber	Inlet air heater driver #1	Intake air heater #1 circuit—voltage above normal, or shorted to high source
2556	729	4	Amber	Inlet air heater driver #1	Intake air heater #1 circuit—voltage below normal, or shorted to low source
2426	730	3	None	Intake air heater #2	Intake air heater 2 circuit—voltage above normal, or shorted to high source
2425	730	4	None	Intake air heater #2	Intake air heater 2 circuit—voltage below normal, or shorted to low source
133	974	3	Red	Remote accelerator	Remote accelerator pedal or lever position sensor circuit—voltage above normal, or shorted to high source
134	974	4	Red	Remote accelerator	Remote accelerator pedal or lever position sensor circuit—voltage below normal, or shorted to low source
288	974	19	Red	Remote accelerator	SAE J1939 multiplexing remote accelerator pedal or lever data error—received network data in error
284	1043	4	Amber	Internal sensor voltage supply	Engine speed/position sensor (crankshaft) supply voltage circuit—voltage below normal, or shorted to low source
2182	1072	3	Amber	Engine brake output #1	Engine brake actuator driver 1 circuit—voltage above normal, or shorted to high source
2183	1072	4	Amber	Engine brake output #1	Engine brake actuator driver 1 circuit—voltage below normal, or shorted to low source
2367	1073	3	Amber	Engine compression brake output #2	Engine brake actuator circuit #2—voltage above normal, or shorted to high source
2363	1073	4	Amber	Engine compression brake output #2	Engine brake actuator circuit #2—voltage below normal, or shorted to low source
2265	1075	3	Amber	Electric lift pump for engine fuel	Fuel priming pump control signal circuit—voltage above normal, or shorted to high source

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁶³
2266	1075	4	Amber	Electric lift pump for engine fuel	Fuel priming pump control signal circuit—voltage below normal, or shorted to low source
2368	1112	3	Amber	Engine brake output #3	Engine brake actuator driver 3 circuit—voltage above normal, or shorted to high source
2365	1112	4	Amber	Engine brake output #3	Engine brake actuator driver output 3 circuit—voltage below normal, or shorted to low source
697	1136	3	Amber	Sensor circuit—voltage	ECM internal temperature sensor circuit—voltage above normal, or shorted to high source
698	1136	4	Amber	Sensor circuit—voltage	ECM internal temperature sensor circuit—voltage below normal, or shorted to low source
691	1172	3	Amber	Turbocharger #1 compressor inlet temperature	Turbocharger #1 compressor inlet temperature sensor circuit—voltage above normal, or shorted to high source
692	1172	4	Amber	Turbocharger #1 compressor inlet temperature	Turbocharger #1 compressor inlet temperature sensor circuit—voltage below normal, or shorted to low source
2373	1209	3	Amber	Exhaust gas pressure	Exhaust gas pressure sensor circuit—voltage above normal, or shorted to high source
2374	1209	4	Amber	Exhaust gas pressure	Exhaust gas pressure sensor circuit—voltage below normal, or shorted to low source
338	1267	3	Amber	Vehicle accessories relay driver	Idle shutdown vehicle accessories relay driver circuit—voltage above normal, or shorted to high source
339	1267	4	Amber	Vehicle accessories relay driver	Idle shutdown vehicle accessories relay driver circuit—voltage below normal, or shorted to low source
272	1347	3	Amber	Fuel pump pressurizing assembly #1	High fuel pressure solenoid valve circuit—voltage above normal, or shorted to high source
271	1347	4	Amber	Fuel pump pressurizing assembly #1	High fuel pressure solenoid valve circuit—voltage below normal, or shorted to low source
281	1347	7	Amber	Fuel pump pressurizing assembly #1	High fuel pressure solenoid valve #1—mechanical system not responding properly or out of adjustment

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁶³
497	1377	2	Amber	Switch circuit	Multiple unit synchronization switch circuit—data erratic, intermittent, or incorrect
649	1378	31	Amber Blinking	Engine oil change interval	Change lubricating oil and filter—condition exists
297	1388	3	Amber	Auxiliary pressure	Auxiliary pressure sensor input #2 circuit—voltage above normal, or shorted to high source
298	1388	4	Amber	Auxiliary pressure	Auxiliary pressure sensor input #2 circuit—voltage below normal, or shorted to low source
296	1388	14	Red	Auxiliary pressure	Auxiliary pressure sensor input 1—special instructions
211	1484	31	None	J1939 error	Additional auxiliary diagnostic codes logged—condition exists
1256	1563	2	Amber	Control module identification input state	Control module identification input state error—data erratic, intermittent, or incorrect
1257	1563	2	Red	Control module identification input state	Control module identification input state error—data erratic, intermittent, or incorrect
199	1661	4	Amber	Engine automatic start lamp	Engine automatic start lamp driver circuit—voltage above normal, or shorted to high source
2263	1800	16	Amber	Battery temperature	Battery temperature—data valid but above normal operational range—moderately severe level
2264	1800	18	Amber	Battery temperature	Battery temperature—data valid but below normal operational range—moderately severe level
1239	2623	3	Amber	Accelerator pedal position	Accelerator pedal or lever position sensor 2 circuit—voltage above normal, or shorted to high source
1241	2623	4	Amber	Accelerator pedal position	Accelerator pedal or lever position sensor 2 circuit—voltage below normal, or shorted to low source
2346	2789	15	None	System diagnostic code #1	Turbocharger turbine inlet temperature (calculated)—data valid but above normal operational range—least severe level
2347	2790	15	None	System diagnostic code #1	Turbocharger compressor outlet temperature (calculated)—data valid but above normal operational range—least severe level

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁶³
757	2802	31	Amber	Electronic control module	Electronic control module data lost—condition exists
2115	2981	3	Amber	Coolant pressure	Coolant pressure 2 circuit—voltage above normal, or shorted to high source
2116	2981	4	Amber	Coolant pressure	Coolant pressure 2 circuit—voltage below normal, or shorted to low source
2117	2981	18	Amber	Coolant pressure	Coolant pressure 2—data valid but below normal operational range—moderately severe level
386	3509	3	Amber	5 volts dc supply	Sensor supply voltage #1 circuit—voltage above normal, or shorted to high source
352	3509	4	Amber	5 volts dc supply	Sensor supply voltage #1 circuit—voltage below normal, or shorted to low source
227	3510	3	Amber	5 volts dc supply	Sensor supply voltage #2 circuit—voltage above normal, or shorted to high source
187	3510	4	Amber	5 volts dc supply	Sensor supply voltage #2 circuit—voltage below normal, or shorted to low source
239	3511	3	Amber	System diagnostic code #2	Sensor supply voltage #3 circuit—voltage above normal, or shorted to high source
238	3511	4	Amber	System diagnostic code #1	Sensor supply voltage #3 circuit—voltage below normal, or shorted to low source
2185	3512	3	Amber	System diagnostic code #1	Sensor supply voltage #4 circuit—voltage above normal, or shorted to high source
2186	3512	4	Amber	System diagnostic code #1	Sensor supply voltage #4 circuit—voltage below normal, or shorted to low source
193	520199	3	Amber	Cruise control	Cruise control (resistive) signal circuit—voltage above normal, or shorted to high source
194	520199	4	Amber	Cruise control	Cruise control (resistive) signal circuit—voltage below normal, or shorted to low source

REFERENCE

8.5 Cab Display Module (CDM) Error Codes

The CDM displays error codes when there is a fault with one of the sensors that monitor and control windrower operation. Use the list of error codes to help locate a specific problem with the windrower.

NOTE:

In the case of dual codes being shown for an item (primarily the solenoid valves), the first code indicates a SHORT CIRCUIT condition, while the second code indicates an OPEN CIRCUIT condition. That is, E41 would be a SHORT in the reel aft solenoids (P55, P59), while E141 would indicate an OPEN circuit.

Codes		CDM Display	Description
E1			
E2		RTCH NOT ALLOWED	Return to cut activated with the header off
E3		CDM CAN BUS ERROR	E3 is triggered when the CDM module can not transmit and/or receive CANBUS. Check CAN signals on pin 22, 23, 24 and the power ground on 9, 11 and 25 in connector P38. If all signals check out OK, check CANBUS cabling and end bus terminations in place. The terminators are located behind the Cab Display Module (CDM) connector P41, and near the engine Electronic Control Module (ECM) connector P40. The resistance should be 120 ohm resistance
E4		HDR DRV NOT ALLOWED	HEADER ENGAGE switch activated while in engine-forward
E5		CHECK HEADER ID	Header ID change has been detected while the header was engaged
E6		TEMP GAUGE SHORT	Wiring/connection problem
E7		SPEED STICK SHORT	Wiring/connection problem
E8		HEADER ENABLE SHORT	Wiring/connection problem
E9		WCM ENABLE SHORT	Wiring/connection problem
E10		CDM INTERNAL ERROR	A generic internal CDM error summarizing a number of internal problems
E11		CDM POWER UP	Indicates that the voltage on CDM connector P38, pin 26 is too low or the ground connections are loose; could be a wiring issue
E12		WCM POWER UP	E12 indicates that the voltage on WCM connector P34, pin 2 is too low or the ground on pin 9 is loose; could be a wiring issue
E13		FUEL SOLENOID	WCM fuel solenoid output fault detected
E14			
E15		KNIFE DRIVE PWM P68	Knife drive – PWM solenoid P68 drive fault detected
E16		DRAPER DRIVE PWM P69	Draper drive – PWM solenoid P69 drive fault detected
E17		REEL DRIVE PWM P70	Reel drive – PWM solenoid P70 drive fault detected
E18			
E19	E119	Load Sense P75	Disc block valve – Solenoid P75 drive fault detected
E20			

REFERENCE

Codes		CDM Display	Description
E21	E121	REVERSER P106	Reverser solenoid P106 fault detected
E22			
E23	E123	REVERSER	Reverser – solenoid (P65, P66, P67) fault detected
E24	E124	DECK SHFT RIGHT P95	Right deck shift solenoid P95 fault detected
E25	E125	DECK SHFT LEFT P96	Left deck shift solenoid P96 fault detected
E26	E126	DWA UP	DWA raise solenoid P72, P73 fault detected
E27	E127	DWA DOWN	DWA lower solenoid P72, P73, fault detected circuit
E28	E128	TILT RETRACT	Header tilt retract solenoid P54, fault detected
E29	E129	TILT EXTEND	Header tilt extend solenoid P53, P54, fault detected
E30	E130	4 WAY VALVE P62	4-way valve solenoid P62 fault detected
E31	E131	BYPASS VALVE P52	Bypass valve solenoid P52 fault detected
E32	E132	HEADER UP/DOWN P57	Header up/down solenoid P57, fault detected
E33	E133	SCREEN CLEANERS	Screen cleaner output fault detected
E34	E134	RIGHT STOP LAMP	Right stop lamp output fault detected
E35	E135	LEFT STOP LAMP	Left stop lamp output fault detected ⁶⁴
E36	E136	RIGHT TURN LAMP	Right turn lamp output fault detected ⁶⁵
E37	E137	LEFT TURN LAMP	Left turn lamp output fault detected
E38	E138	MAIN DRIVE	Main header drive solenoid P71 fault detected
E39	E139	LOW RANGE P61	Low range solenoid P61 fault detected
E40	E140	HIGH RANGE P60	High range solenoid P60 fault detected
E41	E141	REEL AFT	Reel aft solenoid P55, P59, fault detected
E42	E142	REEL FORE	Reel fore solenoid P55, P59, fault detected
E43	E143	REEL UP/DOWN P58	Reel up/down solenoid P58, P52, P62 fault detected
E44	E144	FLOAT RHS P64	RHS float solenoid P64, fault detected
E45	E145	FLOAT LHS P63	LHS float solenoid P63, fault detected
E46		SENSOR VOLTS HIGH	WCM's 9V Sensor voltage output high (wire 5)
E47		SENSOR VOLTS LOW	WCM's 9V Sensor voltage output low (wire 5)
E48		WCM OVER TEMP	E49 the temp limits are set to -10C and +85C representing the board temp read by the chip inside the WCM module; this is to protect the module when operating at extreme temp; the WCM outputs will stop working (they stay off) when the board temp is below -20C or above 120C; the high temp may indicate a strong/ massive short circuit in the cabling on the WCM outputs

64. If road light kit is not installed, CDM will display E135 LEFT STOP LAMP as a malfunction in CAB-FORWARD mode.

65. If road light kit is not installed, CDM will display E134 RIGHT STOP LAMP as a malfunction in CAB-FORWARD mode.

REFERENCE

Codes		CDM Display	Description
E49		WCM LOW TEMP	WCM low temp fault
E50		BATT+ OUT OF RANGE	System voltage above 15.5 VDC
E51	E151	DISK DRIVE PWM P68	Disk header drive solenoid P68 fault detected
E52			
E53			
E54			
E55		DISK SPD OVERLOAD	Low disk speed detected < setpoint
Error codes E56 to E63 not allocated			
E64		HEADER OIL PRESSURE	Header drive charge pressure low (Switch MD #112848 on return manifold)
E65		KNIFE OVERLOAD	Low knife speed detected < setpoint
E66		##.# LOW VOLTS	Low system voltage <11.5 VDC
E67		TRANS OIL PRESSURE	Supercharge pressure low (switch MD #139775)
E68		HYDRAULIC OIL HOT	Oil tank temp >230°F/110°C
E69		ENGINE AIR FILTER	Engine air filter plugged
E70		HYDRAULIC FILTER	Hydraulic filter pressure too high (MD #139722)
E71		LOW HYDRAULIC OIL	Low hydraulic oil level sensor tripped (MD #138473)
E72		##.# HIGH VOLTS	System voltage above 15.5 VDC
Error codes E73 to E100 not allocated			
E101		SPI ERROR	Indicates that the communication between the two micros inside the WCM module is not working properly; could be resolved by reprogramming the WCM
E102		CAN ERROR	E102 is detected by the WCM module so the issue is related to the CANBUS signals on the WCM end; it may happen when the CDM sees the engine ECU but not the WCM (not hooked up or experiencing power or CANBUS problems; may also happen if the CDM connector P38, pin 8 signal is malfunctioning or the wire between the CDM connector P38, pin 8 and WCM connector P36, pin 30 is not making a proper connection). The wire at the CDM is CB60 and at the WCM CH60
E103		EEPROM READ ERROR	Internal errors specific to the WCM; try reprogramming the module
E104		EEPROM WRITE ERROR	Internal errors specific to the WCM; try reprogramming the module
E105		TEMP SENSOR ERROR	Internal errors specific to the WCM; try reprogramming the module

Index

A

A-Series headers	
A30-D	
auger speed	297
reel speed	298
A30-S	
auger speed	297
A40-D	
auger speed	297
reel only speed	299
reel speed	298
reel speed while moving	300
reel to ground speed	300
attaching an A-Series header	237
attaching header with hydraulic center-link and optional self-alignment kit	238
attaching header with mechanical center-link	249
auger speed	297
knife speed	303
air conditioning, See HVAC system	
antenna mountings	63
API	
definitions	27
assembly	
connecting batteries	379
installing drive wheels	422
ASTM	
definitions	27
auger speeds	297
A30-D header	297
A30-S header	297
A40-D header	297
auto raise height feature	209
programming auto raise height	209
using auto raise height feature	210
automated steering	455

B

batteries	
adding electrolyte	375
boosting	375
charging	373
connecting	379
installing	378
main disconnect switch	372
maintaining	371
removing	376
belts	
A/C compressor belt	

replacing	369
tensioning	369
alternator/fan belt	
tensioning	367
replacing alternator/fan belt	367
brakes	
park brake	324

C

cab display module (CDM)	
calibrating header sensors	
header float sensor	100
header height sensor	95
header tilt sensor	98
CDM display settings	
backlighting	93
buzzer volume	92
contrast	94
display language	90
windrower speed	91
CDM/WCM fault codes	152
displaying locked CDM buttons	127
engine and windrower functions	74
engine error codes	152, 480
engine warning lights	85
header functions	75
locking CDM buttons	
auger speed	122
draper speed	121
header float	120
header tilt	126
knife speed	117
reel fore-aft	125
reel speed	123
rotary disc speed	118
operating screens	76
programming	89
auger reel speed	113
auto raise height	112
double windrower attachment (DWA)	110
drive manifold	110
engine intermediate speed control (ISC)	115
hay conditioner	112
header cut width	109
header index mode	107
hydraulic center-link	101
hydraulic overload pressure	106
knife overload speed	104
knife speed	103

INDEX

return to cut mode	108	setting draper index.....	291
rotary disc hydraulics.....	102	draper speed.....	290
rotary disc overload speed.....	105	setting draper speed	290
tire size	114	setting independent of ground speed.....	292
troubleshooting		setting minimum draper speed	290
activating hydraulic purge	142	header float	
forcing a header ID	133	float options with deck shift.....	295
header sensors.....	131	header position	285
sensor input signals	132	hydraulics configuration - D-Series	284
testing double windrower attachment		reel fore-aft position.....	285
(DWA)	150	reel height.....	286
testing draper drive	145	reel speed	
testing header tilt	138	reel index	286
testing header up/down	135	reel minimum speed.....	286
testing knife drive.....	143	reel only speed	289
testing reel drive	147	reel to ground speed	286
testing reel fore-aft	140	setting draper to ground speed.....	290
testing reel up/down function	137	decals	
testing rotary disc drive.....	148	fuse box decal.....	402
windrower error codes		GSL header switch functions.....	70
engine error codes.....	129	location of safety signs	13
warning/alarms.....	85	deck shift	
cab suspension limit straps	325	deck shift control	294
cab temperature, <i>See</i> HVAC system		definition of terms	27
California proposition 65.....	2	double windrow attachment (DWA)	211
CanWin service tool		deck position.....	211
cab display module (CDM)		draper speed.....	212
clearing sub-acres.....	117	draper index	
error codes	493	setting for D-Series.....	291
caster wheels	424	draper speed	
CDM, <i>See</i> cab display module (CDM)		setting for D-Series.....	290
center-links	27	setting independent of ground speed	292
<i>See also</i> , hydraulic links		setting minimum draper speed	290
definitions	27	drive wheels	
self-locking center-link hook mechanism	205	installing	422
circuit breakers.....	400	driving the windrower	165
accessing	400	cab-forward operation.....	167
replacing.....	401	driving on road	175
climate control system, <i>See</i> HVAC system		engine-forward operation	169
climate controls	58	entering/exiting.....	166
component locations	36	reverse in cab-forward mode.....	168
consoles	39	reverse in engine-forward mode	171
conversion charts	479	spin turn	172
cutting height.....	206	stopping.....	172

D

D-Series headers	
attaching.....	214
header boots	213
deck shift	294
deck shift control.....	294
setting float options	295
draper index	

E

electrical system.....	164, 371
accessing circuit breakers and fuses	400
battery	371
adding electrolyte.....	375
battery main disconnect switch	372
boosting the battery.....	375
charging the battery	373

INDEX

connecting the battery	379	starting the engine	160
installing the battery	378	engine warm-up	162
maintaining the battery	371	engine warning lights	85
removing the battery	376	evaporator core	329
checking and replacing fuses	400	cleaning	330
circuit breakers and fuses	400		
fuse box decal	402	F	
inspecting 125A main fuse	403	filters	
preventing damage to electrical system	371	air filter	
replacing 125A main fuse	403	installing primary air filter	342
replacing circuit breaker/relay	401	removing primary air filter	340
engine	333	removing/installing secondary air filter	344
air intake system	338	servicing air filter restriction indicator	339
belts	367	charge oil filter	408
charge air cooling	360	installing	409
cleaning filter element	343	removing	409
engine controls and gauges	66	engine filter	
engine cooling system	353	cleaning filter element	343
engine error codes on CDM display	152	fuel filter	346
engine gearbox maintenance	364	fuel filters	
adding lubricant	364	installing primary fuel filter	347
changing lubricant	365	installing secondary fuel filter	348
checking lubricant level	364	removing primary fuel filter	346
general engine inspection	333	removing secondary fuel filter	348
inspecting exhaust system	366	HVAC filter	
manually turning the engine	333	cleaning return air cleaner/filter	329
manuals	333	installing fresh air filter	327
warning lights	164	removing fresh air filter	326
engine compartment hoods, <i>See</i> hoods		removing/installing return air filter/cleaner	328
engine cooling system	353	hydraulic oil filters	408
cooler box	359	return oil filter	409
cleaning screens and coolers	360	installing	410
closing screen	364	removing	410
maintaining	361	final drives	191
opening screen	359	floats, <i>See</i> header float	
screen cleaner duct to screen clearance	363	fuel system	345
engine coolant		fuel filter	346
adding coolant	358	fuel filters	
changing coolant	355	installing primary fuel filter	347
checking coolant level	354	installing secondary fuel filter	348
checking coolant strength	353	removing primary fuel filter	346
draining coolant	355	removing secondary fuel filter	348
radiator cap		fuel specifications	476
inspecting radiator cap	353	fuel tank	
engine error codes	480	draining the fuel tank	349
engine operation		filling the fuel tank	163
adjusting the throttle	370	fuel/water separator	351
engine speed	370	removing water-in-fuel system	351
engine temperature	164	removing/installing fuel tank vent filter	345
fuelling	163	fuel, fluids, and lubricants	476
intermediate speed control (ISC)	162	priming	352
oil pressure	164	fuse box decals	402
shutting down the engine	162		

INDEX

- fuses..... 400
 - accessing 400
 - checking and replacing 400
 - inspecting and replacing 125A..... 403

- G**
- gearboxes
 - engine gearbox maintenance 364
- glossary 27
- gps automated steering systems..... 455
- GSL, *See* header controls

- H**
- header angles 203
- header controls..... 69
 - console header switches..... 72
 - deck shift/float preset switch 72
 - DWA/swath roller switch (if installed) 73
 - display selector switch 71
 - ground speed lever (GSL) header switches..... 70
 - header drive reverse button 69
 - header drive switch 69
 - header position switches..... 71
 - reel and disc speed switches..... 72
- header drive 202
- header float..... 195
 - adjusting float using drawbolts..... 197
 - checking float..... 195
 - float operating guidelines 195
 - float options and presets..... 198
 - float options with deck shift (D-Series) 295
- header levelling 199
- header operation 193
 - engaging the header..... 202
 - header and reel hydraulics..... 412
 - header angle..... 203
 - header drive..... 202
 - header drop rate..... 210
 - header float..... 195
 - levelling the header 199
 - operating with a header
 - A-Series header..... 297
 - D-Series header..... 284
 - R-Series header..... 304
 - reversing the header..... 203
- headers
 - A-Series headers
 - attaching
 - mechanical center-link 249
 - non-self-aligning hydraulic center-link 243
 - self-aligning hydraulic center-link 238
 - detaching
 - hydraulic center-link..... 254
 - mechanical center-link 257
 - D-Series headers
 - attaching
 - header boots 213
 - mechanical center-link 225
 - non-self-aligning hydraulic center-link 219
 - self-aligning hydraulic center-link 214
 - detaching
 - hydraulic center-link..... 229
 - mechanical center-link 233
 - definitions 27
 - drop rate..... 413
 - R-Series headers
 - attaching
 - mechanical center-link 271
 - non-self-aligning hydraulic center-link 266
 - self-aligning hydraulic center-link 261
 - detaching
 - hydraulic center-link..... 276
 - mechanical center-link 280
- heater shut-off valves..... 57
- heating, *See* HVAC system
- hoods
 - closing from highest position 310
 - closing from lower position..... 309
 - opening to highest position..... 309
 - opening to lowest position 308
- horns 65
- HVAC system
 - A/C compressor 332
 - coolant cycling..... 159
 - servicing the compressor..... 332
 - A/C condenser 329
 - A/C cover
 - installing cover..... 331
 - removing cover 330
 - A/C evaporator core 329
 - cleaning evaporator core 330
 - air distribution 57
 - components
 - compressor belt
 - replacing 369
 - tensioning 369
 - controls 58
 - fresh air filter element cleaning..... 326
 - fresh air intake filter 326
 - installing filter..... 327
 - removing filter 326
 - heater shut-off valve 57
 - return air cleaner/filter..... 328

INDEX

- cleaning 329
 - removing/installing 328
 - hydraulics
 - changing hydraulic oil filters 408
 - charge oil filter 408
 - checking and filling hydraulic oil 406
 - D-Series header hydraulics 284
 - draining hydraulic oil 407
 - filter
 - installing charge oil filter 409
 - installing return oil filter 410
 - part numbers 478
 - removing charge oil filter 409
 - removing return oil filter 410
 - fittings
 - flare-type 468
 - O-ring boss (ORB) adjustable 470
 - O-ring boss (ORB) non-adjustable 472
 - O-ring face seal (ORFS) 473, 475
 - header and reel hydraulics 412
 - flow control blocks 413
 - header drop rate 413
 - pressure compensator valve 412
 - hydraulic hoses and lines 412
 - hydraulic oil cooler 407
 - hydraulic safety 6
 - reel drop rate
 - adjusting 414
 - return oil filter 409
 - traction drive hydraulics 415
 - charge pump pressure 416
 - transmission oil pressure 415
 - warnings 405
- K**
- knife speed
 - A-Series header 303
- L**
- lighting 49
 - auto road 53
 - beacons 53
 - replacing bulb 393
 - cab-forward mode
 - field 49
 - road 51
 - engine-forward mode
 - field 50
 - field lights
 - adjusting field lights 384
 - replacing bulb 384
 - flood lights
 - adjusting cab-forward flood lights 385
 - adjusting rear flood lights 389
 - replacing bulb in cab-forward flood light 385
 - replacing bulb in rear flood light 390
 - headlights
 - aligning headlights 382
 - replacing bulb 380
 - HID auxiliary lighting 54, 386, 455
 - adjusting HID lights 387
 - replacing lamp 387
 - interior lights 59
 - ambient light 399
 - console gauge light 398
 - dome light 399
 - red and amber lights
 - replacing bulbs 391
 - red taillights (if installed)
 - replacing bulb 392
 - turn signal indicators 400
 - lubricating windrowers 316
 - lubricants/fluids/system capacities 477
 - lubricating wheel drive 418
 - adding lubricant 419
 - changing wheel drive lubricant 420
 - lubricating wheel drives
 - checking lubricant levels 418
 - lubrication points 317
 - lubrication procedure 316
 - storing lubricants and fluids 476
 - lubrication
 - lubricating engine gearbox 364
 - recommended fuel, fluids, and lubricants 476
- M**
- maintenance 307
 - A/C compressor belt
 - replacing 369
 - tensioning 369
 - battery 371
 - electrical system 371
 - engine 333
 - air intake system 338
 - charge air cooling 360
 - engine oil
 - checking 335
 - general engine inspection 333
 - manually turning the engine 333
 - engine belt 367
 - engine compartment
 - opening and closing platforms 311
 - engine cooling system 353
 - engine exhaust system 366
 - engine gearbox 364

INDEX

engine oil	335	distributing A/C compressor coolant	159
filter part numbers	478	return to cut feature	
fuel system	345	programming return to cut feature	207
priming the fuel system.....	352	using return to cut feature	208
fuel, fluids, and lubricants.....	476	swath roller	212
HVAC system.....	326	operator presence system	41
fresh air filter element cleaning	326	engine and transmission	41
lighting		header drive.....	41
aligning headlights	382	operator's seat	
lubricating the windrower	316	adjusting armrest.....	43
maintenance schedule.....	431	adjusting armrest angle.....	45
operator presence system.....	318	adjusting fore-aft position	42
operator's station.....	318	adjusting lumbar support.....	45
engine interlock	319	adjusting seat tilt	44
preparing for servicing	307	adjusting suspension and seat height	42
safety systems	318	adjusting vertical dampener	43
system priming.....	352	fore-aft isolator lock	44
wheels and tires	417	operator's station	39, 318
caster wheels	424	AM/FM radio	63
maintenance platforms.....	311	auto road light	53
maintenance safety.....	5	beacon lighting.....	53
maintenance schedule	431	cab-forward lighting - field mode.....	49
metric bolts		cab-forward lighting - road	51
torque specifications.....	465	climate controls	58
minimum reel speed	286	emergency exit.....	60
		engine controls and gauges	66
O		engine interlock.....	319
oils (engine)	335	engine-forward lighting - road.....	50
adding	337	GSL adjustments.....	319
changing engine oil	336	adjusting GSL fore-aft movement.....	320
checking level	335	adjusting GSL lateral movement	319
draining	336	header controls	69
replacing engine oil filter	337	HID lighting (optional)	54
operating the windrower	157	horn	65
<i>See also</i> engine operation		interior light.....	59
<i>See also</i> header operation		lighting.....	49
owner/operator responsibilities	153	operator amenities.....	61
symbols	154	operator console	39
operations		operator presence system.....	41, 318
auto raise height feature	209	engine and transmission.....	41
programming auto raise height feature	209	header drive	41
using auto raise height	210	parking brake	324
break-in period	158	rear view mirror	56
daily check.....	159	safety systems	318
double windrowing.....	211	seat belts	47, 318
deck position	211	steering adjustments	321
draper speed	212	steering column.....	48
driving the windrower.....	165	training seat	46
operating with a header	193	windrower controls	67
A-Series header.....	297	windshield wiper.....	55
D-Series header.....	284	options and attachments	455
R-Series header.....	304	AM/FM radio	455
preseason checks/annual service	158	automated steering.....	455
		booster spring kit (external).....	458

INDEX

- booster spring kit (internal)..... 458
- case drain kit..... 458
- center-link
 - hydraulic 459
 - mechanical 459
- double windrow attachment (DWA)..... 458
- engine block heater 457
- fan air baffle 457
- header drive reverser 459
- HID auxiliary lighting 455
- light header flotation 459
- lighting/marketing for cab-forward travel 455
- pressure sensor kit 456
- rotary header drive hydraulics (13-foot)..... 459
- self-aligning center-link 460
- swath roller 212, 460
- towing harness 461
- warning beacons 456
- weight box 184, 461
- windshield shades 456
- owner/operator responsibilities 153

- P**
- platforms 311
 - closing platform (major service)..... 315
 - closing platform (standard position) 312
 - opening platform (major service) 313
 - opening platform (standard position)..... 311
- priming
 - fuel system 352
- programming
 - auto raise height feature 209
 - cab display module (CDM)..... 89
 - return to cut-feature 207

- R**
- R-Series headers
 - attaching..... 261
 - disc speed 304
 - kit for 13-foot R85..... 304
 - setting disc speed 304
- radiator
 - inspecting radiator cap..... 353
- radios 63
- rear view mirrors..... 56
- reel height
 - D-Series header 286
- reel index 286
- reel minimum speed 286
- reel speed
 - A30-D header 298
 - A40-D header 298
- D-Series header 286
- reel-to-ground speed 286
- relays
 - replacing 401
- return to cut feature 207
 - programming return to cut 207
 - using return to cut 208
- revisions list ii
- rpm
 - definitions 27

- S**
- SAE
 - bolt torques 463
 - definitions 27
- safety
 - alert symbols 1
 - battery safety 8
 - engine safety 10
 - engine electronics 11
 - high pressure rails 10
 - general safety 3
 - header safety props 193
 - hydraulic safety 6
 - maintenance and servicing 5
 - operational safety 157
 - safety sign decals 12
 - installing decals 12
 - interpreting decals 17
 - sign location 13
 - signal words 2
 - tire safety 7
- screen cleaners
 - adjusting clearance 363
- seat belts 47
 - maintaining seat belts 318
- serial numbers
 - location iv
- shutting down the engine 162
- specifications 30
 - filter part numbers 478
 - fuel 476
 - torque specifications 463
 - windrower dimensions 34
- spm
 - definitions 27
- starting the engine 160
 - engine warm-up 162
- steering
 - adjusting steering chain tension 323
 - adjusting steering column 48
 - adjustments 321
 - checking steering link pivots 321

INDEX

storing windrowers.....	192
swath rollers.....	212
symbols	
definition.....	154
engine function.....	154
header function.....	156
windrower operating.....	155

T

temperature	
cab.....	57
engine.....	164
torque specifications.....	463
flare-type hydraulic fittings.....	468
metric bolt specifications.....	465
bolting into cast aluminum.....	468
O-ring boss (ORB) fittings (non-adjustable).....	472
O-ring boss (ORB) hydraulic fittings (adjustable).....	470
O-ring face seal (ORFS) fittings.....	473, 475
SAE bolt torque specifications.....	463
towing	
attaching tow-bar to windrower.....	184
towing header with windrower.....	177
towing the windrower (emergency).....	191
training seats.....	46
transporting	
attaching header transport hitch to header.....	184
converting from field to transport mode.....	178, 187
converting from transport to field mode.....	181
troubleshooting	
cab air.....	450
electrical.....	443
engine.....	437
header drive.....	445
hydraulics.....	444
operator's station.....	454

steering and ground speed control.....	449
traction drive.....	446

V

ventilating, See HVAC system

W

weight boxes	
attaching to windrower.....	184
wheels and tires.....	417
adjusting caster tread width.....	173
caster wheels.....	173
anti-shimmy dampener.....	429
ballast requirement.....	430
inflating caster tire.....	424
installing forked caster wheels.....	428
installing formed caster wheels.....	429
lowering formed/forked caster wheels.....	426
raising forked/formed caster wheels.....	426
removing forked caster wheels.....	427
removing formed caster wheels.....	428
servicing.....	425
tightening nuts.....	424
drive wheels	
drive wheel nut torque procedure.....	418
inflating drive tire.....	417
lowering.....	423
raising.....	421
removing.....	421
servicing.....	420
safety.....	7
wheel drive	
adding lubricant.....	419
changing lubricant.....	420
checking lubricant levels.....	418
lubricating wheel drive.....	418
windshield wipers.....	55

MacDon Industries Ltd.

680 Moray Street
Winnipeg, Manitoba
Canada R3J 3S3
t. (204) 885-5590
f. (204) 832-7749

MacDon, Inc.

10708 N. Pomona Avenue
Kansas City, Missouri
United States 64153-1924
t. (816) 891-7313
f. (816) 891-7323

MacDon Australia Pty. Ltd.

A.C.N. 079 393 721
P.O. Box 243, Suite 3, 143 Main Street
Greensborough, Victoria, Australia 3088
t. 03 9432 9982
f. 03 9432 9972

LLC MacDon Russia Ltd.

123317 Moscow, Russia
10 Presnenskaya nab, Block C
Floor 5, Office No. 534, Regus Business Centre
t. +7 495 775 6971
f. +7 495 967 7600

CUSTOMERS

MacDon.com

DEALERS

Portal.MacDon.com

Trademarks of products are the marks of their respective manufacturers and/or distributors.

Printed in Canada