

M155

Self-Propelled Windrower

Operator's Manual

262947 Revision A

Original Instruction

M155 Self-Propelled Windrower featuring Dual Direction® and Ultra Glide® suspension.



Published December 2024

© 2024 MacDon Industries, Ltd.

The information in this publication is based on the information available and in effect at the time of printing. MacDon Industries, Ltd. makes no representation or warranty of any kind, whether expressed or implied, with respect to the information in this publication. MacDon Industries, Ltd. reserves the right to make changes at any time without notice.

California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm. Battery posts, terminals, and related accessories contain lead and lead components. Wash your hands after handling a battery.

Whole Body and Hand-Arm Vibration Levels

The weighted root mean square acceleration, to which the whole body is subjected, ranges from 0.57 to 1.06 m/s² as measured on a representative machine during typical operations and analyzed in accordance with ISO 5008.

During the same operations, the weighted root mean square hand-arm vibration was less than 1.45 m/s² when analyzed in accordance with ISO 5349. These acceleration values depend on the roughness of the ground, the speeds at which the windrower is operated, the operator's experience, weight, and driving habits.

Noise Levels

The A-weighted sound pressure levels inside the operator's station ranged from 70.1 to 73.1 dB(A) as measured on several representative machines in accordance with ISO 5131. The sound pressure level depends upon the engine speed and load, field and crop conditions, and the type of platform used.

Introduction

This manual contains information on the MacDon M155 Self-Propelled Windrower which, when paired with one of MacDon's A Series Auger Headers, D, D1, or D2 Series Draper Headers, or R, R1, and R2 Series Rotary Disc Headers, provides a package designed to cut and lay in windrows a variety of grain, hay, and specialty crops.

Your machine

Use this manual as your first source of information about the machine. If you follow the instructions provided, it will work well for many years. Contact your Dealer if you need assistance, information, or additional copies of this manual.

The M155 Self-Propelled Windrower is equipped with Dual Direction[®] capability, which allows the windrower to be driven either in cab-forward or in engine-forward mode. Right and left designations are therefore determined by the operator's position, facing the direction of travel. This manual uses the terms right cab-forward, left cab-forward, right engine-forward, and left engine-forward when referencing specific locations on the machine.

Your warranty

MacDon provides warranty for Customers who operate and maintain their equipment as described in this manual. A copy of the MacDon Industries Limited Warranty Policy, which explains this warranty, should have been provided to you by your Dealer. Damage resulting from any of the following conditions will void the warranty:

- Accident
- Misuse
- Abuse
- Improper maintenance or neglect
- Abnormal or extraordinary use of the machine
- Failure to use the machine, equipment, component, or part in accordance with the manufacturer's instructions

Your manual

Carefully read all the material provided before attempting to use the machine.

Use this manual as your first source of information about the machine. Use the Table of Contents and the Index to guide you to specific content areas. Study the Table of Contents to familiarize yourself with how this material is organized.

The following conventions are used in this document:

- The M155 Windrower is Dual Direction[®], meaning the windrower can be driven in cab-forward or engine-forward modes. Right and left designations are therefore determined from the operator's position, facing the direction of travel. This manual uses the terms "right cab-forward", "left cab-forward", "right engine-forward", and "left engine-forward" when referencing specific locations on the machine.
- Unless otherwise noted, use the standard torque values provided in Chapter *9.1 Recommended Torque Values*, page 521 of this document.

A manual storage case is provided in the cab. Keep this manual handy for frequent reference. Ensure that this manual is made available to any Owners or Operators of this machine.

Use this manual in conjunction with your header operator's manual.

NOTE: Keep your MacDon publications up-to-date. The most current version can be downloaded from our website (<https://macdon.com/>) or from our Dealer-only site (<https://portal.macdon.com>) (login required).

This document is available in Chinese, English, and Russian.

Summary of Changes

At MacDon, we're continuously making improvements; occasionally these improvements impact product documentation. The following list provides an account of major changes from the previous version of this document.

Section	Summary of Change	Internal Use Only
<i>Introduction, page i</i>	Updated introduction	Technical Publications
<i>5.7 Attaching R80 or R1 Series Rotary Disc Header, page 320</i>	Updated title.	Product Support
<i>5.9 Attaching R2 Series Rotary Disc Header, page 344</i>	Added topic.	Technical Publications
<i>5.9.1 Attaching R2 Series Rotary Disc Header – Hydraulic Center-Link with Self-Alignment, page 344</i>	Added topic.	Technical Publications
<i>5.9.2 Attaching R2 Series Rotary Disc Header – Hydraulic Center-Link without Self-Alignment, page 351</i>	Added topic.	Technical Publications
<i>5.9.3 Attaching R2 Series Rotary Disc Header – Completing Hydraulic and Electrical Connections, page 357</i>	Added topic.	Technical Publications
<i>5.10 Detaching R2 Series Rotary Disc Header, page 358</i>	Added topic.	Technical Publications
<i>6.9.8 Inspecting Exhaust System, page 437</i>	Added step to clarify correct exhaust clamp placement.	ECN 65519

Serial Numbers

The windrower's engine and chassis serial numbers can be found on the machine.

Record the model year and serial number of the windrower and its engine in the fields below.

Windrower serial number plate (A) is located on the left side of the main frame near the walking beam.

Windrower serial number _____
Year of manufacture _____

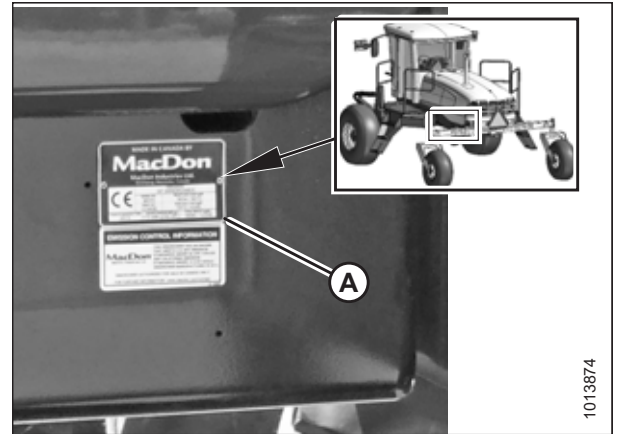


Figure 1: Windrower Serial Number Location

The engine serial number plate (A) is located on top of the engine cylinder head cover.

Engine serial number _____
Date of manufacture _____

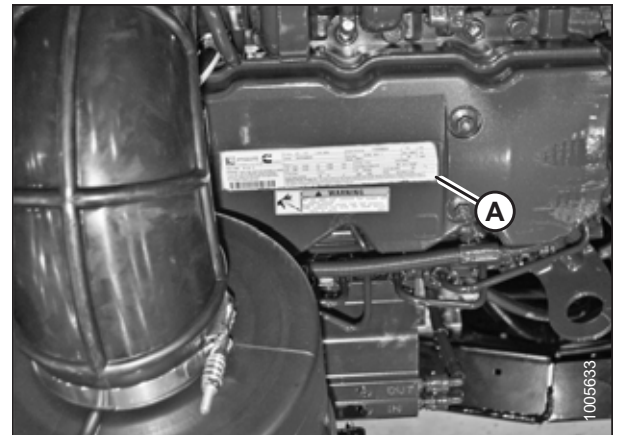


Figure 2: Engine Serial Number Location

TABLE OF CONTENTS

Introduction	i
Summary of Changes.....	ii
Serial Numbers.....	iii
Chapter 1: Safety	1
1.1 Safety Alert Symbols	1
1.2 Signal Words	1
1.3 General Safety	2
1.4 Maintenance Safety	4
1.5 Hydraulic Safety	5
1.6 Tire Safety.....	6
1.7 Battery Safety	7
1.8 Welding Precautions	8
1.9 Engine Safety	8
1.9.1 High-Pressure Rail	9
1.9.2 Engine Electronics	9
1.10 Decommissioning and Disposing of Agricultural Equipment.....	10
1.11 Safety Signs	12
1.11.1 Installing Safety Decals	12
1.12 Safety Sign Locations	13
1.13 Understanding Safety Signs	17
Chapter 2: Product Overview	27
2.1 Definitions	27
2.2 Specifications.....	28
2.3 Windrower Dimensions	32
2.4 Component Location.....	35
Chapter 3: Operator's Station	37
3.1 Operator's Console	37
3.2 Operator Presence System	38
3.2.1 Header Drive.....	38
3.2.2 Engine and Transmission	38
3.3 Operator's Seat Adjustments	39
3.3.1 Adjusting Fore-Aft Position	39
3.3.2 Adjusting Seat Suspension and Height	39
3.3.3 Adjusting Vertical Dampener.....	40
3.3.4 Adjusting Armrest	40
3.3.5 Adjusting Fore-Aft Isolator Lock	41
3.3.6 Adjusting Seat Tilt	41
3.3.7 Adjusting Armrest Angle.....	42
3.3.8 Adjusting Lumbar Support	42

TABLE OF CONTENTS

3.4	Using Training Seat	43
3.5	Using Seat Belts	44
3.6	Adjusting Steering Column	45
3.7	Exterior Lighting	45
3.7.1	Auto-Road Lighting.....	46
3.7.2	Cab-Forward Lighting.....	46
3.7.3	Engine-Forward Lighting.....	47
3.7.4	High Intensity Discharge Auxiliary Lighting (Option).....	49
3.8	Windshield Wipers	50
3.9	Rearview Mirrors.....	50
3.10	Cab Temperature.....	50
3.10.1	Heater Shut-Off.....	51
3.10.2	Air Distribution	51
3.10.3	Climate Controls	52
3.11	Interior Lights.....	52
3.12	Emergency Exit.....	53
3.13	Operator Amenities.....	54
3.14	Radio	56
3.14.1	AM/FM Radio	56
3.14.2	Mounting Antenna	56
3.15	Horn.....	57
3.16	Engine Controls and Gauges	58
3.17	Windrower Controls	59
3.18	Header Controls	60
3.18.1	Header Drive Switch	61
3.18.2	Header Drive Reverse Button	61
3.18.3	Ground Speed Lever Header Switches.....	62
Display Selector Switch	63	
Header Position Switches.....	63	
Reel and Disc Speed Switches	64	
3.18.4	Console Header Switches.....	65
Deck Shift / Float Preset Switch.....	65	
Double Windrow Attachment / Swath Compressor Switch – Option	66	
3.19	Cab Display Module	67
3.19.1	Engine and Windrower Functions.....	67
3.19.2	Header Functions	68
3.19.3	Operating Screens	69
Ignition ON, Engine Not Running	69	
Engine-Forward, Engine Running	70	
Cab-Forward, Engine Running, Header Disengaged	70	
Cab-Forward, Engine Running, Header Engaged, Auger Header Attached, Index Switch OFF.....	71	
Cab-Forward, Engine Running, Header Engaged, Auger Header Attached, Index Switch ON	72	
Engine Running, Header Engaged, Auger Header	73	
Cab-Forward, Engine Running, Header Engaged, Draper Header Attached, Index Switch OFF	74	
Cab-Forward, Engine Running, Header Engaged, Draper Header Attached, Index Switch ON	75	

TABLE OF CONTENTS

Cab-Forward, Engine Running, Header Engaged, Rotary Disc Header Attached	76
Miscellaneous Operational Information	77
3.19.4 Cab Display Module Warning and Alarms	78
Engine Warning Lights	78
Display Warnings and Alarms.....	79
3.19.5 Cab Display Module – Configuration Guidelines	81
3.19.6 Cab Display Module – Configuration Functions	82
3.19.7 Cab Display Options.....	83
Setting Cab Display Language.....	83
Changing Windrower Display Units	84
Adjusting Cab Display Buzzer Volume	85
Adjusting Cab Display Backlighting.....	86
Adjusting Cab Display Contrast.....	87
3.19.8 Configuring Windrower	88
Setting Header Knife Speed	88
Setting Knife Overload Speed.....	89
Setting Rotary Disc Overload Speed	90
Setting Hydraulic Overload Pressure	91
Setting Header Index Mode	92
Setting Return to Cut Mode.....	93
Setting Auto Raise Height.....	94
Configuring Double Windrow Attachment Controls.....	95
Activating Hydraulic Center-Link.....	97
Activating Rotary Disc Header Drive Hydraulics	98
Setting Header Cut Width	99
Activating Swath Compressor	100
Activating Hay Conditioner	102
Setting Reel Speed Display Units	103
Setting Tire Size.....	104
Setting Engine Intermediate Speed Control	105
Clearing Sub-Acres	106
3.19.9 Activating Cab Display Lockouts	106
Activating Header Tilt Control Lockout.....	107
Activating Header Float Control Lockout	108
Activating Reel Fore-Aft Control Lockout.....	109
Activating Draper Speed Control Lockout.....	111
Activating Auger Speed Control Lockout	112
Activating Knife Speed Control Lockout	113
Activating Rotary Disc Speed Control Lockout.....	115
Activating Reel Speed Control Lockout	116
3.19.10 Displaying Active Cab Display Lockouts.....	117
3.19.11 Calibrating Header Sensors.....	119
Calibrating Header Height Sensor	119
Calibrating Header Tilt Sensor	121
Calibrating Header Float Sensors	124
3.19.12 Calibrating Swath Compressor Sensor	126
3.19.13 Troubleshooting Windrower Problems	128
Displaying Windrower and Engine Error Codes.....	128
Enabling or Disabling Header Sensors.....	129
Displaying Header Sensor Input Signals.....	131
Forcing Header Identification.....	132
3.19.14 Troubleshooting Header Problems.....	134

TABLE OF CONTENTS

Testing Header Up/Down Activate Function Using Cab Display Module	134
Testing Reel Up/Down Activate Function Using Cab Display Module	135
Testing Header Tilt Activate Function Using Cab Display Module	137
Testing Knife Drive Circuit Using Cab Display Module	139
Testing Draper Drive Circuit Activate Function Using Cab Display Module	140
Testing Reel Drive Circuit Activate Function Using Cab Display Module	142
Testing Rotary Disc Drive Circuit Activate Function Using Cab Display Module	144
Testing Double Windrow Attachment Drive Activate Function Using Cab Display Module	145
Testing Reel Fore-Aft Activate Function Using Cab Display Module	147
Activating Hydraulic Purge Using Cab Display Module	149
3.19.15 Engine Error Codes	150
3.19.16 Cab Display Module and Windrower Control Module Fault Codes	151
Chapter 4: Operation	153
4.1 Owner/Operator Responsibilities	153
4.2 Symbol Definitions.....	153
4.2.1 Engine Functions.....	154
4.2.2 Windrower Operating Symbols.....	155
4.2.3 Header Functions.....	156
4.3 Operating Windrower	156
4.3.1 Operational Safety	156
4.3.2 Break-In Period.....	157
4.3.3 Preseason Checks / Annual Service	158
Cycling Air Conditioning Compressor Coolant	159
4.3.4 Daily Checks and Maintenance	159
4.3.5 Engine Operation	159
Starting Engine.....	160
Engine Warm-Up	162
Engine Intermediate Speed Control.....	162
Stopping Engine	162
Filling Fuel Tank.....	163
Engine Temperature.....	164
Engine Oil Pressure	164
Cab Display Module Voltage Display	165
Engine Warning Lights	165
4.3.6 Driving Windrower	166
Entering and Exiting Windrower	167
Driving Forward in Cab-Forward Mode	168
Driving in Reverse in Cab-Forward Mode	169
Driving Forward in Engine-Forward Mode	170
Driving in Reverse in Engine-Forward Mode	172
Spin Turning	173
Stopping	173
4.3.7 Adjusting Caster Tread Width.....	174
4.3.8 Transporting	176
Driving on Road.....	176
Towing Header with Windrower.....	179
Towing Windrower – Emergency	190
Engaging and Disengaging Wheel Drives	190
4.3.9 Storing Windrower	191

TABLE OF CONTENTS

4.4	Operating with Header	192
4.4.1	Engaging and Disengaging Header Safety Props	192
4.4.2	Header Float M-Series	194
	Float Operating Guidelines	194
	Checking Float.....	195
	Float Options	196
4.4.3	Leveling Header	198
4.4.4	Header Drive Controls.....	201
	Engaging and Disengaging Header	201
	Reversing Header	202
4.4.5	Adjusting Header Angle.....	202
	Checking Self-Locking Center-Link Hook	204
4.4.6	Controlling Cutting Height	205
4.4.7	Return to Cut	206
	Configuring Return to Cut Feature	206
	Using Return to Cut Feature	207
4.4.8	Auto Raise Height	208
	Configuring Auto Raise Height Feature	208
	Using Auto Raise Height Feature	209
4.4.9	Header Drop Rate	209
4.4.10	Swath Compressor	210
	Using Swath Compressor	210
4.4.11	Double Windrow Attachment	212
	Engaging and Disengaging Double Windrow Attachment	213
	Adjusting Double Windrow Attachment Draper Speed	214
4.5	Operating with D, D1, or D2 Series Draper Header	215
4.5.1	Header Position	215
4.5.2	Adjusting Reel Fore-Aft Position	216
4.5.3	Adjusting Reel Height	216
4.5.4	Reel Speed.....	216
	Indexing Reel Speed to Ground Speed	217
	Adjusting Reel Speed without Indexing.....	219
4.5.5	Draper Speed	219
	Indexing Draper Speed to Ground Speed	220
	Setting Minimum Draper Speed	220
	Setting Draper Index	221
	Adjusting Draper Speed without Indexing	222
4.5.6	Knife Speeds	223
4.5.7	Deck Shift Control	224
	Engaging Deck Shift.....	224
	Setting Float Options with Deck Shift	225
4.6	Operating with A Series Auger Header	227
4.6.1	Auger Speed	227
	Setting Auger Speed on A30D Auger Headers	227
	Setting Auger Speed on A40D Auger Headers	227
4.6.2	Reel Speed.....	228
	Reel Speed – A30D Auger Headers.....	228
	Reel Speed – A40D Auger Headers.....	228
4.6.3	Knife Speed.....	233

TABLE OF CONTENTS

4.7 Operating with R, R1, or R2 Series Rotary Disc Header	233
4.7.1 Disc Speed	233
Setting Disc Speed	234
Chapter 5: Attaching and Detaching Headers	235
5.1 Attaching A Series Auger Header	235
5.1.1 Attaching A Series Auger Header – Hydraulic Center-Link with Self-Alignment	235
5.1.2 Attaching A Series Auger Header – Hydraulic Center-Link without Self-Alignment.....	241
5.1.3 Attaching A Series Auger Header – Mechanical Center-Link	246
5.2 Detaching A Series Auger Header	251
5.2.1 Detaching A Series Auger Header – Hydraulic Center-Link	252
5.2.2 Detaching A Series Auger Header – Mechanical Center-Link	256
5.3 Attaching D or D1 SP Series Draper Header	260
5.3.1 Attaching Draper Header Supports.....	260
5.3.2 Attaching D or D1 SP Series Draper Header – Hydraulic Center-Link with Self-Alignment	261
5.3.3 Attaching D or D1 SP Series Draper Header – Hydraulic Center-Link without Self-Alignment.....	268
5.3.4 Attaching D or D1 SP Series Draper Header – Mechanical Center-Link	273
5.4 Detaching D or D1 SP Series Draper Header	279
5.4.1 Detaching D or D1 SP Series Draper Header – Hydraulic Center-Link	279
5.4.2 Detaching D or D1 SP Series Draper Header – Mechanical Center-Link.....	284
5.5 Attaching D2 SP Series Draper Header.....	287
5.5.1 Attaching Draper Header Supports.....	287
5.5.2 Attaching D2 SP Series Draper Header – Hydraulic Center-Link with Self-Alignment	289
5.5.3 Attaching D2 SP Series Draper Header – Hydraulic Center-Link without Self-Alignment	296
5.5.4 Attaching D2 SP Series Draper Header – Mechanical Center-Link.....	304
5.6 Detaching D2 SP Series Draper Header	311
5.6.1 Detaching D2 SP Series Draper Header – Hydraulic Center-Link	311
5.6.2 Detaching D2 SP Series Draper Header – Mechanical Center-Link	316
5.7 Attaching R80 or R1 Series Rotary Disc Header	320
5.7.1 Attaching R or R1 Series Rotary Disc Header – Hydraulic Center-Link with Self-Alignment	320
5.7.2 Attaching R or R1 Series Header – Hydraulic Center-Link without Self-Alignment	326
5.7.3 Attaching R or R1 Series Rotary Disc Header – Mechanical Center-Link	332
5.8 Detaching R or R1 Series Rotary Disc Header	337
5.8.1 Detaching R or R1 Series Rotary Disc Header – Hydraulic Center-Link.....	337
5.8.2 Detaching R or R1 Series Rotary Disc Header – Mechanical Center-Link	341
5.9 Attaching R2 Series Rotary Disc Header	344
5.9.1 Attaching R2 Series Rotary Disc Header – Hydraulic Center-Link with Self-Alignment	344
5.9.2 Attaching R2 Series Rotary Disc Header – Hydraulic Center-Link without Self-Alignment.....	351
5.9.3 Attaching R2 Series Rotary Disc Header – Completing Hydraulic and Electrical Connections	357
5.10 Detaching R2 Series Rotary Disc Header	358
Chapter 6: Maintenance and Servicing.....	365
6.1 Maintenance Schedule	365

TABLE OF CONTENTS

6.2	Preparing for Servicing	370
6.3	Engine Compartment Hood	371
6.3.1	Opening Hood – Lower Position.....	371
6.3.2	Closing Hood – Lower Position	372
6.3.3	Opening Hood – Highest Position.....	372
6.3.4	Closing Hood – Highest Position	373
6.4	Maintenance Platforms	374
6.4.1	Opening Platforms – Standard Position	374
6.4.2	Closing Platforms – Standard Position.....	375
6.4.3	Opening Platforms – Major Service Position	376
6.4.4	Closing Platforms – Major Service Position	377
6.5	Windrower Lubrication.....	378
6.5.1	Lubricating Windrower	379
6.5.2	Lubrication Points	380
6.6	Operator’s Station	381
6.6.1	Seat Belts	381
6.6.2	Safety Systems	381
Checking Operator Presence System	381	
Checking Engine Interlock	382	
6.6.3	Ground Speed Lever Adjustments	382
Adjusting Ground Speed Lever Lateral Movement	382	
Adjusting Ground Speed Lever Fore-Aft Movement	384	
6.6.4	Steering Adjustments.....	384
Checking Steering Link Pivots.....	384	
Checking and Adjusting Steering Chain Tension.....	386	
6.6.5	Park Brake	387
Testing Parking Brake	387	
6.7	Cab Suspension Limit Straps	390
6.8	Heating, Ventilating, and Air Conditioning System	390
6.8.1	Fresh Air Intake Filter	390
Removing Fresh Air Intake Filter.....	390	
Inspecting and Cleaning Fresh Air Intake Filter Element.....	391	
Installing Fresh Air Intake Filter	392	
6.8.2	Servicing Return Air Cleaner/Filter	393
Cleaning Return Air Cleaner/Filter	394	
6.8.3	Air Conditioning Condenser	394
6.8.4	Air Conditioning Evaporator Core.....	395
Removing Air Conditioner Cover.....	395	
Cleaning Air Conditioning Evaporator Core.....	396	
Installing Air Conditioning Cover.....	397	
6.8.5	Air Conditioning Compressor.....	397
Servicing Air Conditioning Compressor	398	
6.9	Engine	398
6.9.1	General Engine Inspection	398
6.9.2	Turning Engine Manually	398
6.9.3	Engine Oil	400

TABLE OF CONTENTS

Checking Engine Oil Level	400
Changing Engine Oil	401
Draining Engine Oil	402
Replacing Engine Oil Filter	402
Adding Engine Oil	403
6.9.4 Air Intake System	404
Air Filter Restriction Indicator	405
Removing Primary Air Filter	405
Installing Primary Air Filter	407
Cleaning Engine Air Filter Primary Element	409
Removing and Installing Secondary Air Filter	410
Air Precleaner	411
6.9.5 Fuel System	411
Replacing Fuel Tank Vent Filter	411
Maintaining Fuel Filters	412
Removing Primary Fuel Filter	413
Installing Primary Fuel Filter	415
Removing Secondary Fuel Filter	418
Installing Secondary Fuel Filter	418
Draining Fuel Tank	419
Fuel/Water Separator	421
Removing Water from Fuel System	421
Priming Fuel System	421
6.9.6 Engine Cooling System	422
Inspecting Radiator Cap	422
Checking Engine Coolant Strength	423
Checking Coolant Level	424
Changing Coolant	425
Draining and Cleaning Cooling System	425
Adding Coolant	428
Maintaining Engine Cooling Box	429
Opening Cooler Box Screen	429
Charge Air Cooling	430
Cleaning Screens and Coolers	430
Cleaning Cooler Box Components	432
Adjusting Screen Cleaner Rotor to Screen Clearance	433
Closing Cooler Box Screen	434
6.9.7 Gearbox	435
Checking Lubricant Level and Adding Lubricant	435
Changing Lubricant	436
6.9.8 Inspecting Exhaust System	437
6.9.9 Belts	438
Tensioning Fan Belt	438
Replacing Fan Belt	438
Tensioning Air Conditioner Compressor Belt	439
Replacing Air Conditioner Compressor Belt	439
6.9.10 Engine Speed	440
Throttle Adjustment	440
6.10 Electrical System	441
6.10.1 Preventing Electrical System Damage	441
6.10.2 Battery	442
Maintaining Batteries	442

TABLE OF CONTENTS

Battery Main Disconnect Switch	442
Charging Batteries	443
Boosting Battery	445
Adding Electrolyte to Batteries	446
Removing Batteries	447
Installing Batteries	448
Connecting Batteries	449
6.10.3 Headlights – Engine-Forward	450
Replacing Headlight Bulb	450
Aligning Headlights	453
6.10.4 Field Lights – Cab-Forward	455
Adjusting Field Lights	455
Replacing Field Light Bulb	456
6.10.5 Floodlights – Cab-Forward	456
Adjusting Forward Floodlights	456
Replacing Bulb in Cab-Forward Floodlight	456
6.10.6 High-Intensity Discharge Auxiliary Lighting – Option	458
Replacing High Intensity Discharge Floodlights	458
Adjusting High-Intensity Discharge Auxiliary Lights	461
6.10.7 Floodlights – Rear	461
Adjusting Rear Floodlights	461
Replacing Bulb in Rear Floodlight	462
6.10.8 Replacing Bulbs in Red and Amber Lights	463
6.10.9 Replacing Red Taillights	464
6.10.10 Replacing Beacon Lights	465
6.10.11 Replacing Console Gauge Light	465
6.10.12 Replacing Cabin Dome Light	467
6.10.13 Replacing Ambient Light Fixture	467
6.10.14 Turn Signal Indicators	468
6.10.15 Circuit Breakers and Fuses	468
Accessing Main Fuse Box	468
Checking and Replacing Fuses	469
Replacing Circuit Breakers and Relays	469
Fuse Box Decal	471
Inspecting and Replacing 125A Main Fuses	472
6.11 Hydraulic System	473
6.11.1 Checking and Filling Hydraulic Oil	474
6.11.2 Hydraulic Oil Cooler	476
6.11.3 Changing Hydraulic Oil	476
6.11.4 Changing Hydraulic Oil Filters	477
Charge Oil Filter	477
Removing Charge Oil Filter	477
Installing Charge Oil Filter	478
Return Oil Filter	478
Removing Return Oil Filter	478
Installing Return Oil Filter	479
6.11.5 Header and Reel Hydraulics	480
Hoses and Lines	480
Pressure Compensator Valve	481
Flow Control Blocks	482

TABLE OF CONTENTS

Adjusting Header Drop Rate	482
Adjusting Reel Drop Rate	483
6.11.6 Traction Drive Hydraulics	484
Checking Transmission Oil Pressure	485
Checking Charge Pump Pressure.....	485
6.12 Wheels and Tires	486
6.12.1 Traction Drive	486
Inflating Drive Wheel Tire.....	486
Tightening Drive Wheel Nuts	487
Checking Wheel Drive Lubricant Level	487
Adding Wheel Drive Lubricant.....	488
Changing Wheel Drive Lubricant.....	489
Raising Drive Wheel – Jack Method.....	490
Removing Drive Wheel	492
Installing Drive Wheel.....	492
Lowering Drive Wheel – Jack Method.....	493
6.12.2 Caster Wheels	494
Inflating Caster Tire.....	494
Tightening Caster Wheel Hardware	494
Raising Caster Wheel – Formed and Forked.....	495
Lowering Caster Wheel – Formed and Forked.....	496
Removing Forked Caster Wheel.....	497
Installing Forked Caster Wheel	498
Removing Formed Caster Wheel	499
Installing Formed Caster Wheel.....	499
Tightening Caster Wheel Anti-Shimmy Dampeners	500
Adding Tire Ballast	500
Chapter 7: Troubleshooting.....	503
7.1 Engine Troubleshooting	503
7.2 Electrical Troubleshooting.....	506
7.3 Hydraulics Troubleshooting	507
7.4 Header Drive Troubleshooting	508
7.5 Traction Drive Troubleshooting	508
7.6 Steering and Ground Speed Control Troubleshooting.....	510
7.7 Cab Air Troubleshooting	511
7.8 Operator’s Station Troubleshooting	513
Chapter 8: Options and Attachments	515
8.1 Cab	515
8.1.1 AM/FM Radio.....	515
8.1.2 Automated Steering Systems	515
8.1.3 High Intensity Discharge Auxiliary Lighting.....	515
8.1.4 Warning Beacons	516
8.1.5 Windshield Shades	516
8.2 Engine	516
8.2.1 Engine Block Heater	516
8.2.2 Engine Fan Air Baffle	516

TABLE OF CONTENTS

8.3 Header Operation	516
8.3.1 Draper Header Case Drain Kit.....	516
8.3.2 Draper Header Reel Drive and Lift Plumbing.....	516
8.3.3 Header Drive Reverser.....	517
8.3.4 Hydraulic Center-Link.....	517
8.3.5 Light Header Flotation.....	517
8.3.6 Mechanical Center-Link.....	517
8.3.7 Pressure Sensor Kit.....	517
8.3.8 R/R1 Disc Drive Kit.....	517
8.3.9 R80 and R85 Rotary Header Drive Hydraulics.....	518
8.3.10 Self-Aligning Center-Link.....	518
8.3.11 Spring with External Booster Spring.....	518
8.3.12 Spring with Internal Booster Spring.....	519
8.3.13 Swath Compressor.....	519
8.3.14 Swath Roller.....	519
8.4 Transport	519
8.4.1 Lighting and Marking for Cab-Forward Road Travel.....	519
8.4.2 Towing Harness.....	520
8.4.3 Weight Box.....	520
Chapter 9: Reference	521
9.1 Recommended Torque Values	521
9.1.1 Torque Specifications.....	521
SAE Bolt Torque Specifications.....	521
Metric Bolt Specifications.....	523
Metric Bolt Specifications – Cast Aluminum.....	524
Flare-Type Hydraulic Fittings.....	525
O-Ring Boss Hydraulic Fittings – Adjustable.....	526
O-Ring Boss Hydraulic Fittings – Non-Adjustable.....	528
O-Ring Face Seal Hydraulic Fittings.....	528
Tapered Pipe Thread Fittings.....	530
9.2 Recommended Fuel, Fluids, and Lubricants	531
9.2.1 Storing Lubricants and Fluids.....	531
9.2.2 Fuel Specifications.....	531
9.2.3 Lubricants, Fluids, and System Capacities.....	532
9.2.4 Filter Part Numbers.....	533
9.3 Conversion Chart	534
9.4 Engine Error Codes	534
9.5 Cab Display Module Error Codes	545
Index	549
Lubricants, Fluids, and System Capacities	559

Chapter 1: Safety

Understanding and consistently following these safety procedures will help to ensure the safety of those operating the machine and of bystanders.

1.1 Safety Alert Symbols

The safety alert symbol indicates important safety messages in this manual and on safety signs on the machine.

This symbol means:

- **ATTENTION!**
- **BECOME ALERT!**
- **YOUR SAFETY IS INVOLVED!**

Carefully read and follow the safety message accompanying this symbol.

Why is safety important to you?

- Accidents disable and kill
- Accidents cost
- Accidents can be avoided



Figure 1.1: Safety Symbol

1.2 Signal Words

Three signal words, **DANGER**, **WARNING**, and **CAUTION**, are used to alert you to hazardous situations. Two signal words, **IMPORTANT** and **NOTE**, identify non-safety related information.

Signal words are selected using the following guidelines:



DANGER

Indicates an imminently hazardous situation that, if it is not prevented, will result in death or serious injury.



WARNING

Indicates a potentially hazardous situation that, if it is not prevented, could result in death or serious injury. It may also be used to alert you to unsafe practices.



CAUTION

Indicates a potentially hazardous situation that, if it is not prevented, may result in minor or moderate injury. It may also be used to alert you to unsafe practices.

IMPORTANT:

Indicates a situation that, if not prevented, could result in a malfunction or damage to the machine.

NOTE:

Provides additional information or advice.

1.3 General Safety

Operating, servicing, and assembling machinery presents several safety risks. These risks can be reduced or eliminated by following the relevant safety procedures and wearing the appropriate personal protective equipment.

CAUTION

The following general farm safety precautions should be part of your operating procedure for all types of machinery.

Wear all protective clothing and personal safety devices that could be necessary for the job at hand. Do **NOT** take chances. You may need the following:

- Hard hat
- Protective footwear with slip-resistant soles
- Protective glasses or goggles
- Heavy gloves
- Wet weather gear
- Respirator or filter mask

In addition, take the following precautions:

- Be aware that exposure to loud noises can cause hearing impairment. Wear suitable hearing protection devices such as earmuffs or earplugs to help protect against loud noises.



Figure 1.2: Safety Equipment



Figure 1.3: Safety Equipment

- Provide a first aid kit in case of emergencies.
- Keep a properly maintained fire extinguisher on the machine. Familiarize yourself with its use.
- Keep young children away from machinery at all times.
- Be aware that accidents often happen when Operators are fatigued or in a hurry. Take time to consider the safest way to accomplish a task. **NEVER** ignore the signs of fatigue.

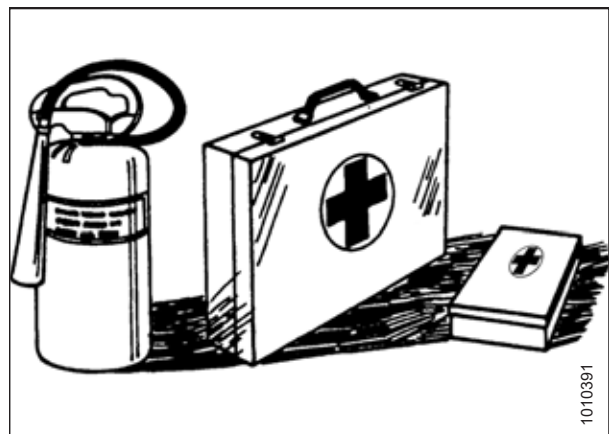


Figure 1.4: Safety Equipment

SAFETY

- Wear close-fitting clothing and cover long hair. **NEVER** wear dangling items such as hoodies, scarves, or bracelets.
- Keep all shields in place. **NEVER** alter or remove safety equipment. Ensure that the driveline guards can rotate independently of their shaft, and that they can telescope freely.
- Use only service and repair parts made or approved by the equipment manufacturer. Parts from other manufacturers may not meet the correct strength, design, or safety requirements.



Figure 1.5: Safety around Equipment

- Keep hands, feet, clothing, and hair away from moving parts. **NEVER** attempt to clear obstructions or objects from a machine while the engine is running.
- Do **NOT** modify the machine. Unauthorized modifications may impair the functionality and/or safety of the machine. It may also shorten the machine's service life.
- To avoid injury or death from the unexpected startup of the machine, **ALWAYS** stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

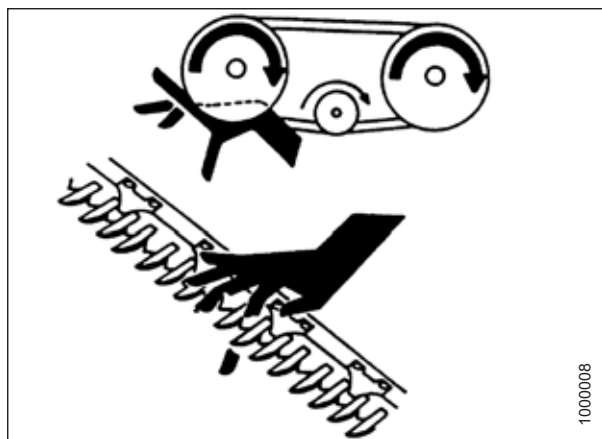


Figure 1.6: Safety around Equipment

- Keep the machine service area clean and dry. Wet and/or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment. Ensure that all electrical outlets and tools are properly grounded.
- Keep the work area well-lit.
- Keep machinery clean. Straw and chaff on a hot engine are fire hazards. Do **NOT** allow oil or grease to accumulate on service platforms, ladders, or controls. Clean machines before they are stored.
- **NEVER** use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.
- When storing machinery, cover any sharp or extending components to prevent injury from accidental contact.



Figure 1.7: Safety around Equipment

1.4 Maintenance Safety

Maintaining your equipment safely requires that you follow the relevant safety procedures and wear the appropriate personal protective equipment for the task.

To ensure your safety while maintaining the machine:

- Review the operator's manual and all safety items before operating or performing maintenance on the machine.
- Place all controls in Neutral, stop the engine, set the parking brake, remove the ignition key, and wait for all moving parts to stop before servicing, adjusting, or repairing the machine.
- Follow good shop practices:
 - Keep service areas clean and dry
 - Ensure that electrical outlets and tools are properly grounded
 - Keep the work area well lit
- Relieve pressure from hydraulic circuits before servicing and/or disconnecting the machine.
- Ensure that all components are tight and that steel lines, hoses, and couplings are in good condition before applying pressure to hydraulic systems.
- Keep hands, feet, clothing, and hair away from all moving and/or rotating parts.
- Clear the area of bystanders, especially children, when carrying out any maintenance, repairs, or adjustments.
- Install the transport lock or place safety stands under the frame before working under the machine.
- If more than one person is servicing the machine at the same time, be aware that rotating a driveline or another mechanically driven component by hand (for example, accessing a lubricant fitting) will cause drive components in other areas (belts, pulleys, and knives) to move. Stay clear of driven components at all times.



Figure 1.8: Wet Floors Present Safety Risks

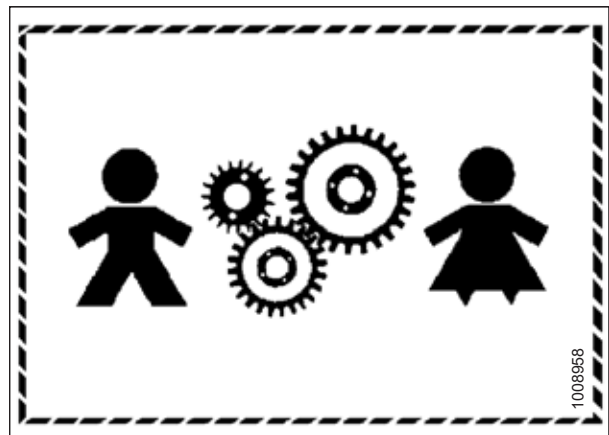


Figure 1.9: Equipment is NOT Safe for Children

SAFETY

- Wear protective gear when working on the machine.
- Wear heavy gloves when working on knife components.



Figure 1.10: Personal Protective Equipment

1.5 Hydraulic Safety

Because hydraulic fluid is under extreme pressure, hydraulic fluid leaks can be very dangerous. Follow the proper safety procedures when inspecting hydraulic fluid leaks and servicing hydraulic equipment.

- Always place all hydraulic controls in **NEUTRAL** before leaving the operator's seat.
- Ensure that all of the components in the hydraulic system are kept clean and in good condition.
- Replace any worn, cut, abraded, flattened, or crimped hoses and steel lines.
- Do **NOT** attempt any makeshift repairs to hydraulic lines, fittings, or hoses by using tapes, clamps, cements, or welding. The hydraulic system operates under extremely high pressure. Makeshift repairs can fail suddenly and create hazardous conditions.



Figure 1.11: Testing for Hydraulic Leaks

- Wear proper hand and eye protection when searching for high-pressure hydraulic fluid leaks. Use a piece of cardboard as a backstop instead of your hands to isolate and identify a leak.
- If you are injured by a concentrated, high-pressure stream of hydraulic fluid, seek medical attention immediately. Serious infection or a toxic reaction can develop from hydraulic fluid piercing the skin.



Figure 1.12: Hydraulic Pressure Hazard

SAFETY

- Ensure that all components are tight and that steel lines, hoses, and couplings are in good condition before applying pressure to a hydraulic system.

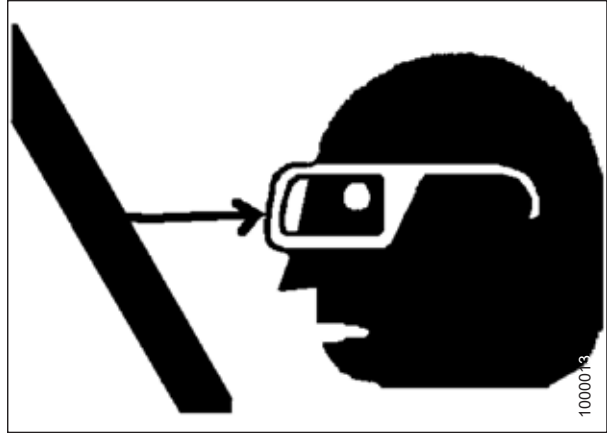


Figure 1.13: Safety around Equipment

1.6 Tire Safety

Inflating, installing, removing, and handling tires presents several safety risks that must be taken into account.

WARNING

- A tire can explode during inflation, causing serious injury or death.
- Follow the proper procedures when mounting a tire. Failure to do so can produce an explosion, causing serious injury or death.

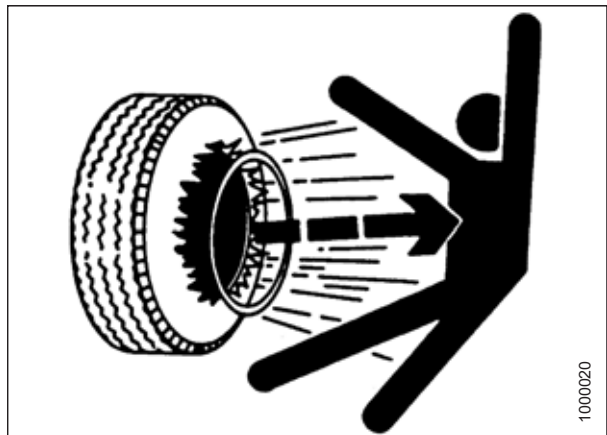


Figure 1.14: Overinflated Tire

WARNING

- Do NOT remove, install, or repair a tire on a rim unless you have the proper equipment and experience to perform the task. Take the tire and rim to a qualified tire repair shop if necessary.
- Ensure that the tire is correctly seated on the rim before inflating it. If the tire is not correctly positioned on the rim or is overinflated, the tire bead can loosen on one side causing air to escape at high speed and with great force. An air leak of this nature can thrust the tire in any direction, endangering anyone in the area.
- Do NOT stand over the tire when inflating it. Use a clip-on chuck and extension hose when inflating a tire.
- Do NOT exceed the maximum inflation pressure indicated on the tire label.
- Never use force on an inflated or partially-inflated tire.
- Ensure that all air is removed from the tire before removing the tire from the rim.
- Never weld a wheel rim.
- Replace tires that have defects. Replace wheel rims that are cracked, worn, or severely rusted.



Figure 1.15: Safely Inflating Tire

1.7 Battery Safety

Working with lead-acid vehicle batteries presents several safety risks.

WARNING

- Keep all sparks and flames away from batteries. The electrolyte fluid in the battery cells emits an explosive gas which can build up over time.
- Ensure that there is adequate ventilation when charging the battery.



Figure 1.16: Safety around Batteries

WARNING

- Wear safety glasses when working near batteries.
- To avoid the loss of electrolyte fluid, do NOT tip a battery more than 45° off of its base.
- Battery electrolyte causes severe burns. Ensure that it does not contact your skin, eyes, or clothing.
- Electrolyte splashed into the eyes is extremely damaging. If you are treating this condition: force the eye open and flush it with cool, clean water for 5 minutes. Call a doctor immediately.
- If electrolyte is spilled or splashed on one's clothing or their body, neutralize it immediately with a solution of baking soda and water, then rinse the strained area with clean water.

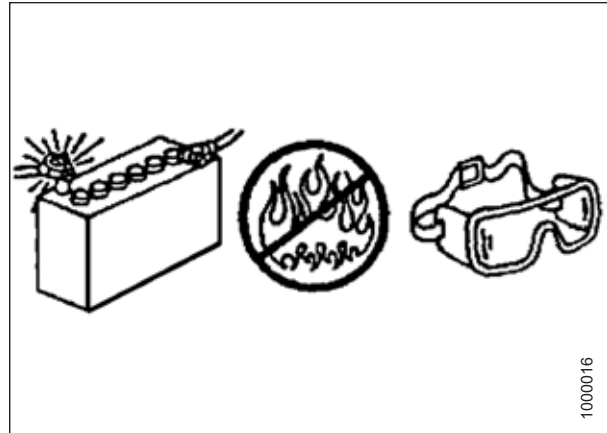


Figure 1.17: Safety around Batteries

WARNING

- To avoid injury from a spark or short circuit, disconnect the battery ground cable before servicing any part of the electrical system.
- Do NOT operate the engine with the alternator or battery disconnected. With the battery cables disconnected and the engine running, a high voltage can be built up if the cable terminals touch the machine frame. Anyone touching the machine frame under these conditions may be electrocuted.
- When working around batteries, remember that all of the exposed metal parts are live. Never lay a metal object across the terminals; this will generate a powerful spark and can electrocute the holder of the tool if they are not properly grounded.
- Keep batteries out of reach of children.

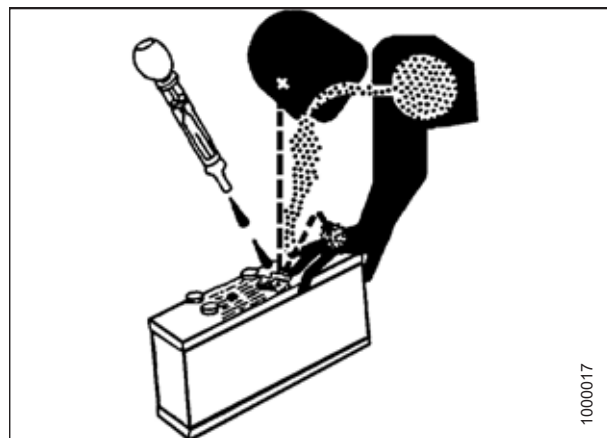


Figure 1.18: Safety around Batteries

1.8 Welding Precautions

The high current and voltage spikes associated with welding can cause damage to the electronic components on the windrower. Before attempting to weld any part of the windrower or an attached header, disconnect all of the electronic module harness connections as well as the battery cables. For further instructions, contact your Dealer.

1.9 Engine Safety

Operating, maintaining, and servicing an engine presents several safety risks. These risks can be reduced or eliminated by following the relevant safety recommendations.

WARNING

Do NOT use aerosol starting aids such as ether when attempting to start the engine. Use of these substances could result in an explosion.

CAUTION

- When starting up a new, serviced, or repaired engine, always be ready to stop the engine to prevent overspeeding. Do this by shutting off the air and/or fuel supply to the engine.
- Do NOT bypass or disable automatic shutoff circuits. These circuits help prevent injury and damage to the engine. Contact your Dealer for repairs and adjustments.
- Inspect the engine for potential hazards.
- Before starting the engine, ensure that no one is on, underneath, or close to the engine. Ensure that bystanders are clear of the area.
- All protective guards and covers must be installed if the engine must be started to perform service procedures.
- Work around rotating parts carefully.
- If a warning tag is attached to the engine start switch or controls, do NOT start the engine or move the controls. Consult whoever attached the warning tag before starting the engine.
- Start the engine from the operator's station. Follow the procedure in the Starting Engine section of the operator's manual. Following the correct procedure will help prevent major damage to engine components and prevent personal injury.
- To ensure that the jacket water heater (if equipped) and/or lubricant oil heater (if equipped) are working correctly, check the water temperature gauge and/or oil temperature gauge during heater operation.
- Engine exhaust contains combustion products, which can be harmful to your health. Always start and operate the engine in a well-ventilated area. If the engine is started in an enclosed area, vent the exhaust to the outside.
- Engine exhaust gases become very hot during operation and can burn people and common materials. Stay clear of the rear of machine and avoid exhaust gases when the engine is running.

NOTE:

If the engine will be operated in very cold conditions, then an additional cold-starting aid may be required.

1.9.1 High-Pressure Rail

Fuel is delivered to the engine under high pressure. The risks of working with fuel under pressure must be understood before the fuel system can be serviced.

WARNING

- Before disconnecting fuel lines or any other components under high pressure between the fuel pump and the high-pressure common rail fuel system, confirm that the fuel pressure has been relieved.
- Contact with high-pressure fuel may cause fluid penetration and burn hazards. High-pressure fuel spray presents a potential fire hazard. Failure to follow these instructions may cause injury or death.

1.9.2 Engine Electronics

The engine control module (ECM) is a sensitive piece of equipment, which can be damaged if the proper safety procedures are not followed. The ECM also regulates various aspects of engine performance, which can affect the safe use of the machine.

WARNING

Tampering with the electronic system or the original equipment manufacturer (OEM) wiring installation is dangerous and could result in injury to people, death, or damage to the equipment.

 **WARNING**

The electronic unit injectors use DC voltage. The ECM sends this voltage to the electronic unit injectors. Do NOT touch the harness connector for the electronic unit injectors while the engine is operating. Failure to follow this instruction could result in an electrical shock, causing personal injury or death.

This engine has a comprehensive, programmable engine monitoring system. The ECM has the ability to monitor engine operating conditions. If certain conditions exceed their allowable range, the ECM will initiate immediate action.

The engine monitoring system can initiate the following actions:

- Warning
- Derate
- Shut down

Abnormalities in the following monitored conditions can limit engine speed and/or engine power:

- Engine coolant temperature
- Engine oil pressure
- Engine speed
- Intake manifold air temperature

While the engine monitoring package can vary for different engine models and different engine applications, the engine monitoring system and control will be similar for all engines. Together, two controls provide engine monitoring functions for specific engine applications.

1.10 Decommissioning and Disposing of Agricultural Equipment

When agricultural equipment is no longer serviceable and needs to be decommissioned and disposed of, recyclable materials including ferrous and non-ferrous metals, rubber, and plastics; fluids such as lubricants, refrigerants, and fuels; and hazardous materials found in batteries, some light bulbs, and electronic equipment must be handled safely and not introduced into the environment.

Comply with local regulations and authorities.

SAFETY

Products with symbol (A) should **NOT** be disposed of with domestic waste.

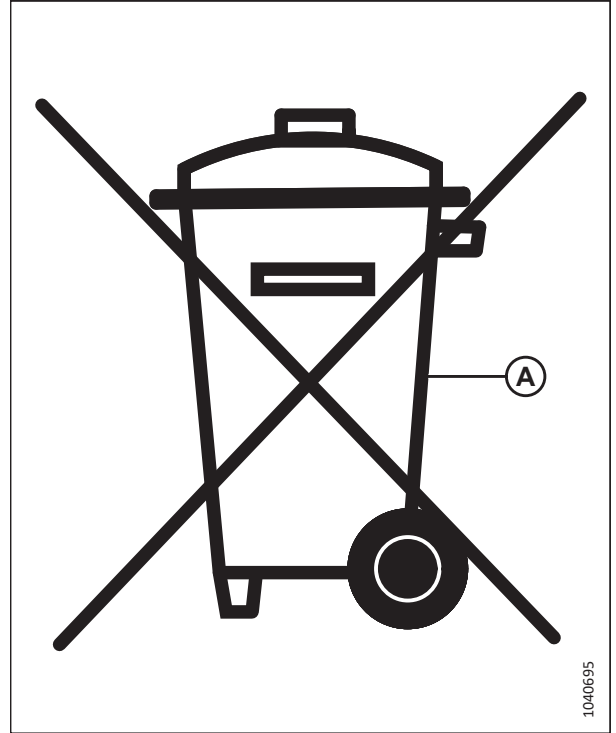


Figure 1.19: Symbol for Do NOT Dispose with Domestic Waste

Materials with symbol (B) should be recycled as labelled.

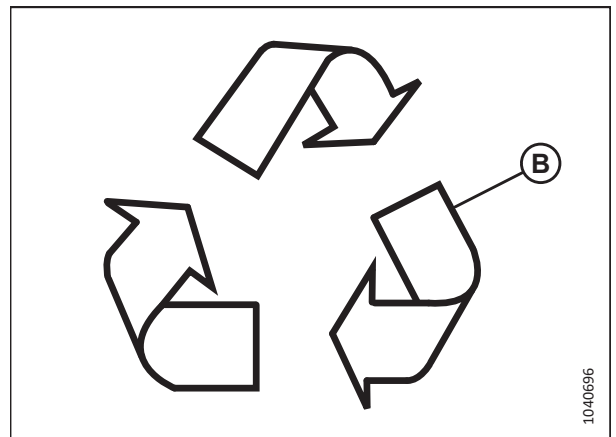


Figure 1.20: Symbol for Recycle as Labelled

SAFETY

- Use appropriate personal protective equipment when removing and handling objects and materials.
- Use appropriate personal protective equipment when handling objects with residue from pesticides, fertilizers, or other agricultural chemicals. Follow local regulations when handling and disposing of these objects.
- Safely release stored energy from suspension components, springs, hydraulic, and electrical systems.
- Recycle or reuse packaging material.
- Recycle or reuse plastics that are labelled with specifications for a material such as PP TV 20. Do **NOT** dispose of them with domestic waste.
- Return batteries to the vendor or take them to a collection point. Batteries contain hazardous substances. Do **NOT** dispose of batteries with domestic waste.
- Follow local regulations to correctly dispose of hazardous materials such as oils, hydraulic fluids, brake fluids, and fuels.
- Take refrigerants to qualified people at specialized facilities for disposal. Refrigerants must **NEVER** be released into the atmosphere.

1.11 Safety Signs

Safety signs are decals placed on the machine where there is a risk of personal injury, or where the Operator should take extra precautions before operating the controls. They are usually yellow.

- Keep safety signs clean and legible at all times.
- Replace safety signs that are missing or illegible.
- If the original part on which a safety sign was installed is replaced, ensure that the repair part displays the current safety sign.
- Replacement safety signs are available from your Dealer.

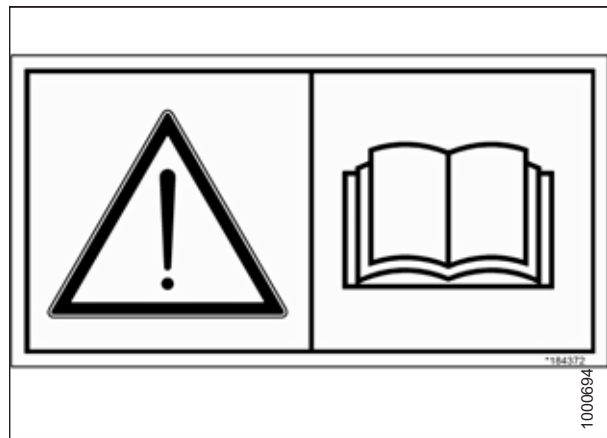


Figure 1.21: Operator's Manual Decal

1.11.1 Installing Safety Decals

Worn or damaged safety decals will need to be removed and replaced.

1. Decide exactly where you are going to place the decal.
2. Clean and dry the installation area.
3. Remove the smaller portion of the split backing paper.
4. Place the decal in position and slowly peel back the remaining paper, smoothing the decal as it is applied.
5. Prick small air pockets with a pin and smooth them out.

1.12 Safety Sign Locations

Safety signs can be found in various locations on the windrower.

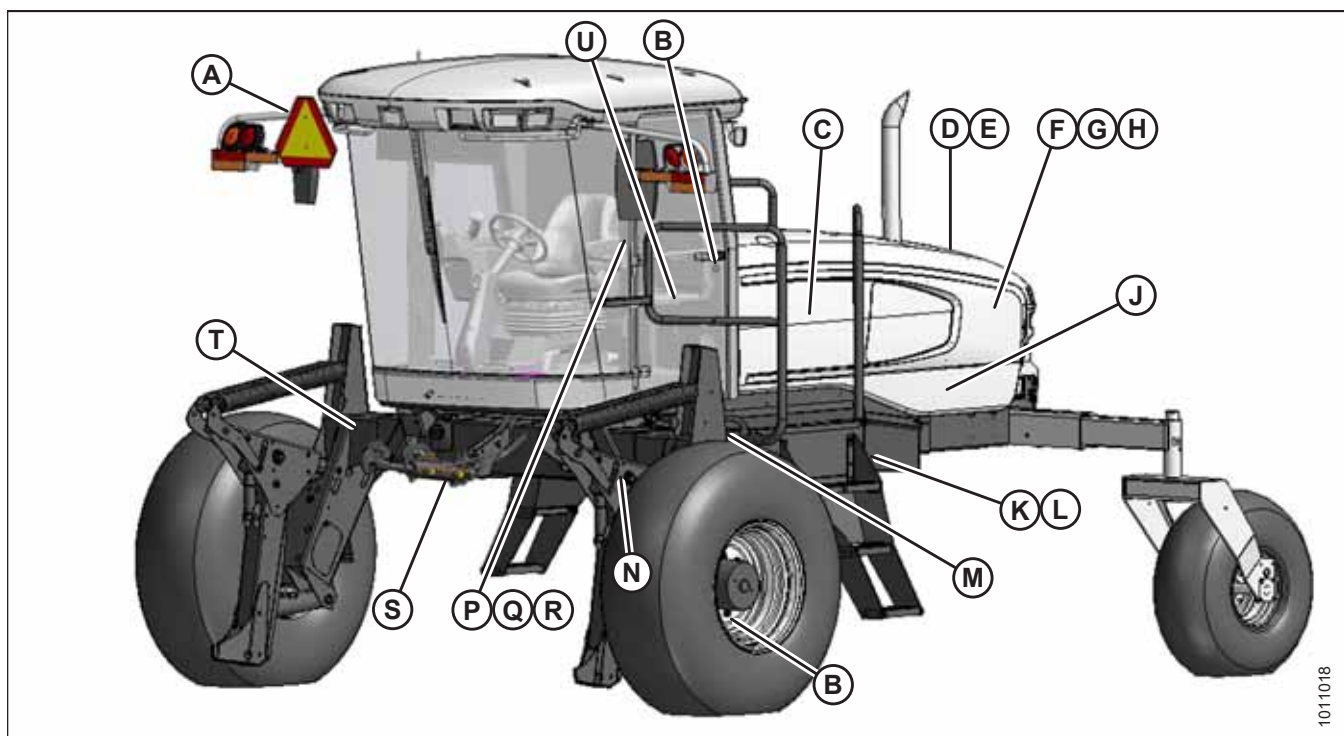


Figure 1.22: Safety Sign Locations – Left Cab-Forward Side

A - Hazard Sign (MD #135378)

D - Exhaust Cover (MD #166450)

G - Fan Shroud (Middle) (MD #166451)

K - Platform (Left of Step) (MD #166425)

N - Lift Linkage (MD #306179/306181)

R - Inner Post (MD #166463)

U - Trainer's Seat (MD #167502)

B - Cab Door and Rim (MD #166454)

E - Close to Radiator Cap (MD #306756)

H - Fan Shroud (Bottom) (MD #166452)

L - Platform (Right of Step) (MD #166441)

P - Inner Post (MD #166457)

S - Neutral Interlock (MD #166425)

C - Oil Reservoir under Hood (MD #166466)

F - Fan Shroud (Top) (MD #166450)

J - Frame Opening (MD #166233)

M - Frame at Multifunction Manifold (MD #166466)

Q - Inner Post (MD #166234)

T - Frame (MD #166425)

1011018


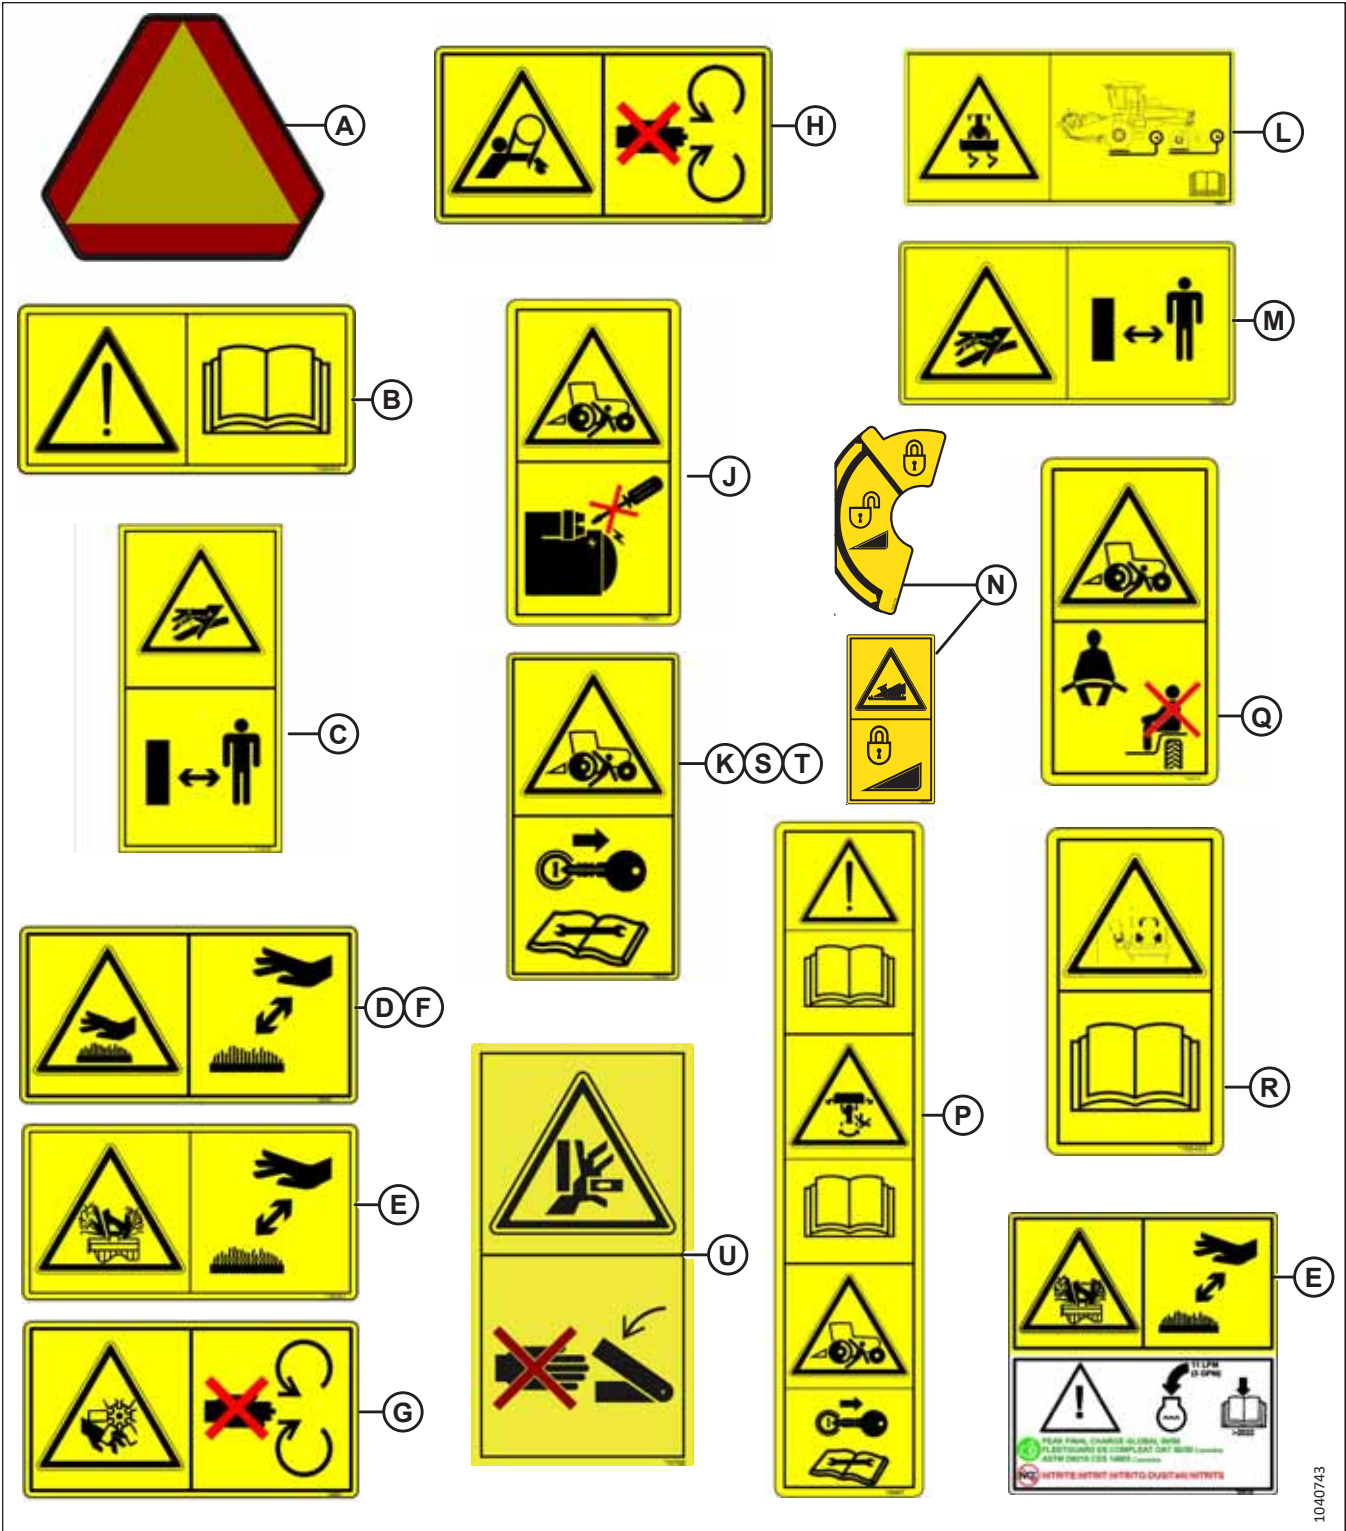


Figure 1.23: Safety Signs – Left Cab-Forward Side

1040743

SAFETY

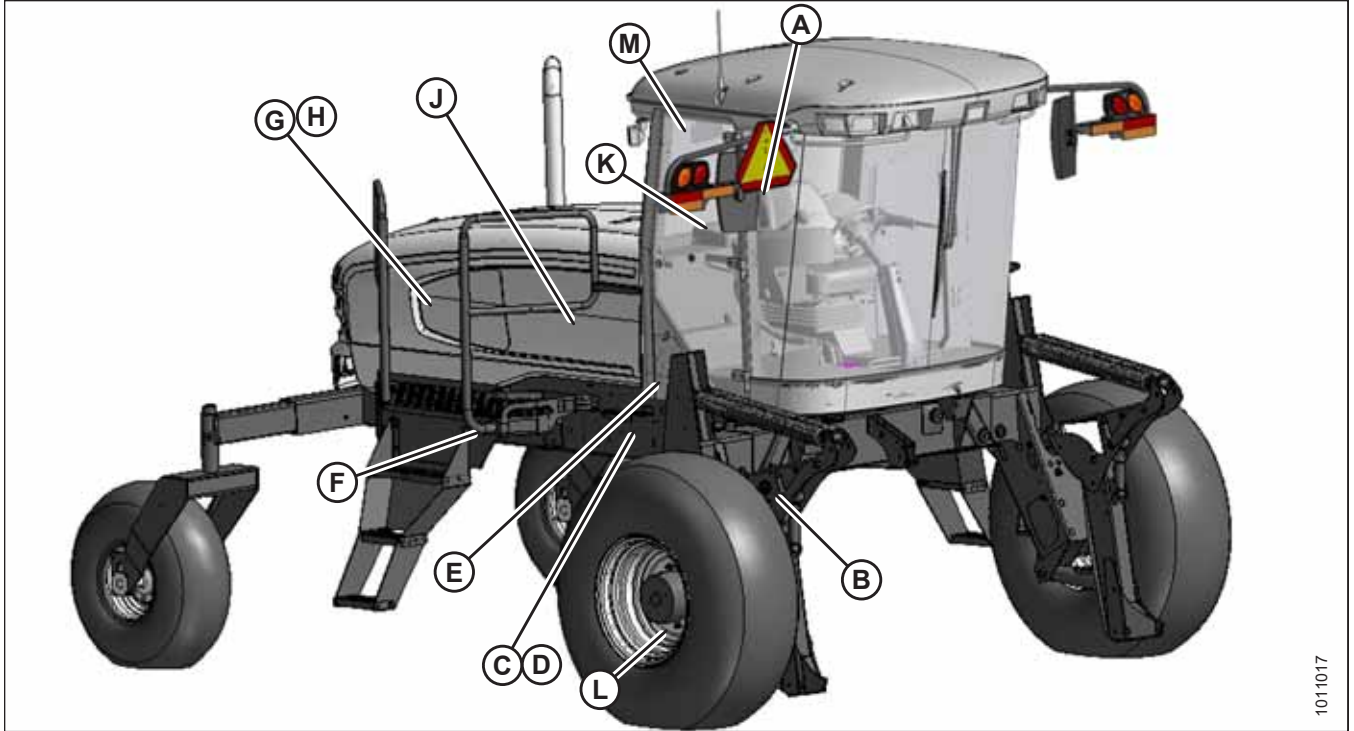

1011017


Figure 1.24: Safety Sign Locations – Right Cab-Forward Side

A - Hazard Sign on Seat (MD #115148)
D - Frame (MD #166456)
G - Shroud (MD #166451)
K - Wiper Cover (MD #166465)

B - Lift Linkage (MD #306180/306181)
E - Cab Frame (MD #184372)
H - Shroud (MD #166452)
L - Rim (MD #166454)

C - Frame (MD #166455)
F - Platform (MD #166425)
J - Hydraulic Reservoir (MD #174436)
M - Window (MD #167504)

SAFETY

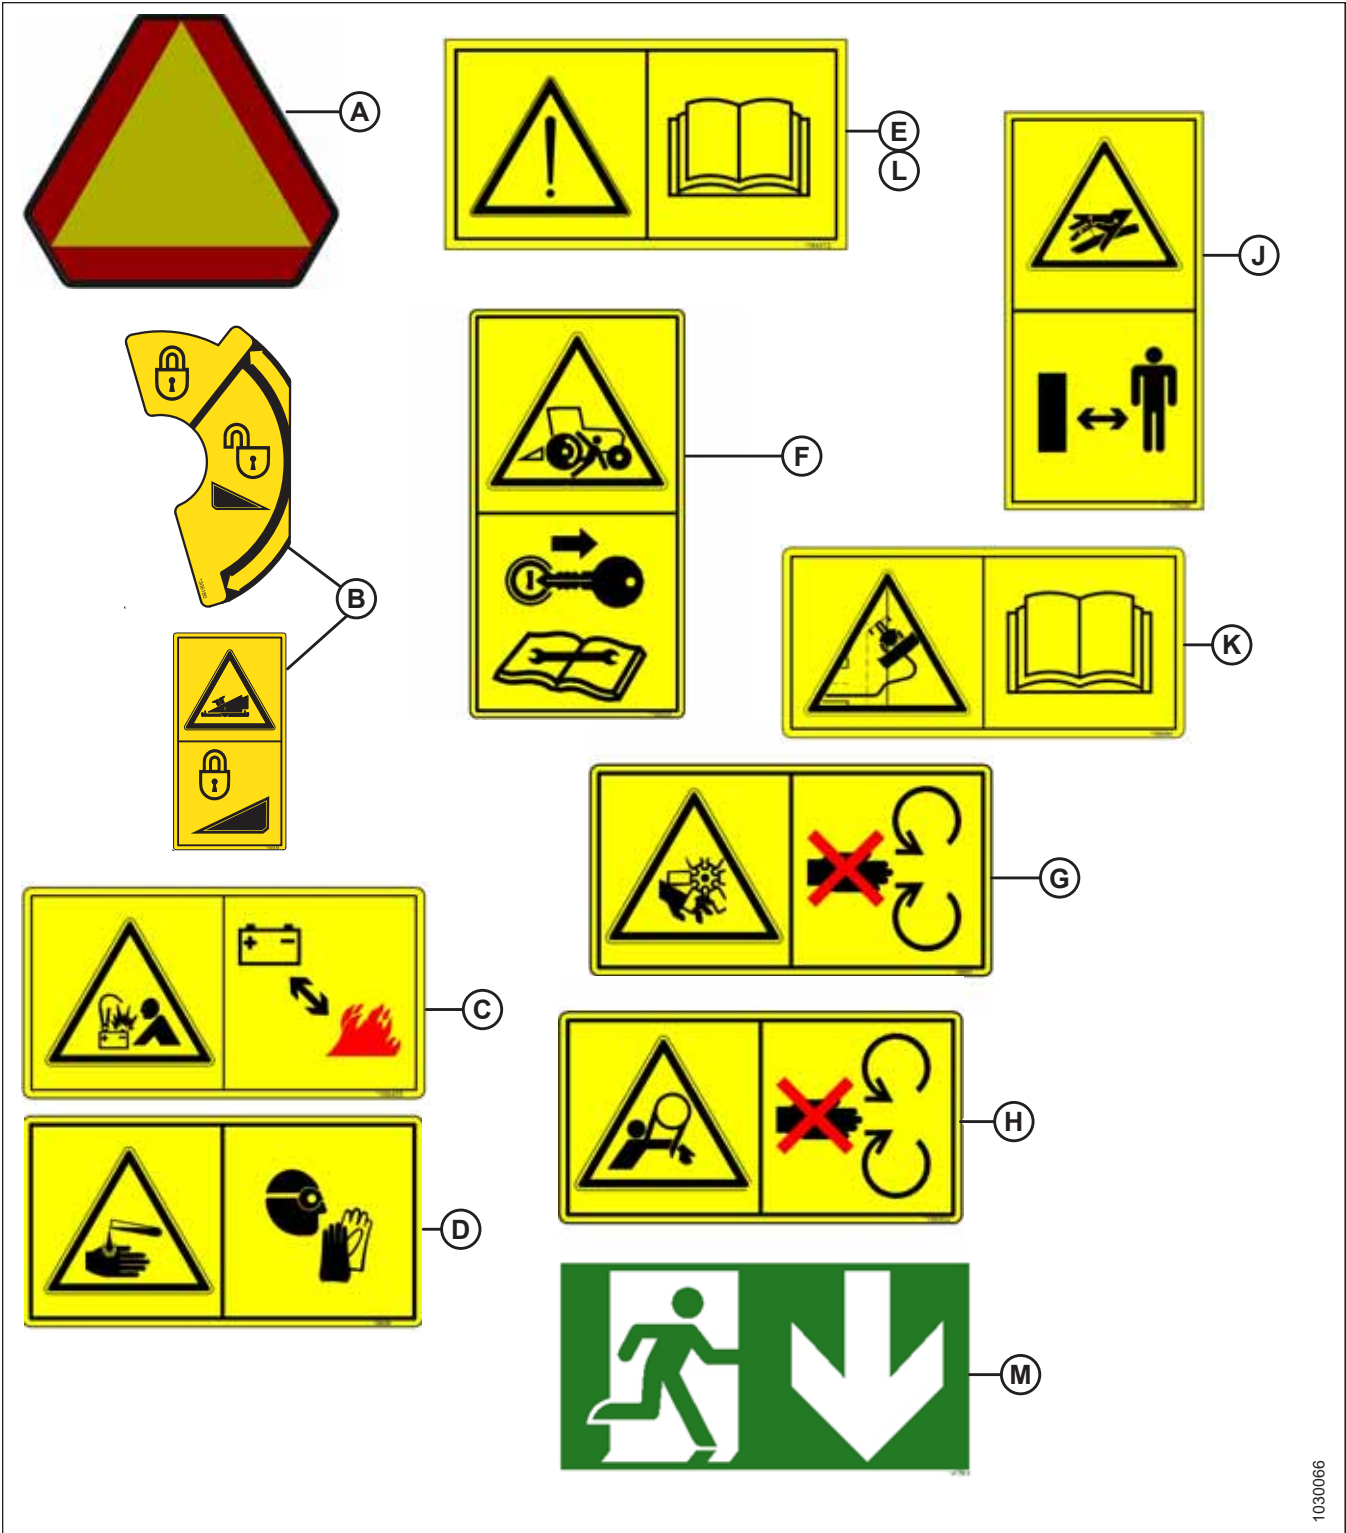

1030066

Figure 1.25: Safety Signs – Right Cab-Forward Side

1.13 Understanding Safety Signs

Safety sign decals use illustrations to convey important safety or equipment maintenance information.

MD #166233

Run-over hazard

DANGER

- Starting the machine while it is in gear can lead to serious injury or death
- Do **NOT** start the engine by shorting the starter or the starter relay terminals. If the machine starts with the drive engaged, it can begin moving.
- Start the engine **ONLY** from the operator's seat. Do **NOT** try to start the engine with someone under or near the machine.



Figure 1.26: MD #166233

MD #166234

Run-over hazard

DANGER

- A training seat is provided so that an experienced Operator can instruct a new Operator on how to use the machine.
- The training seat is **NOT** intended as a passenger seat or for use by children.
- The Operator and the Passenger must wear their safety belts when they are operating the machine.
- Keep all other riders off of the machine.



Figure 1.27: MD #166234

MD #166425

Run-over hazard

DANGER

To prevent the machine from moving when there is no Operator at the controls:

- Stop the engine and remove the key from the ignition before you perform any maintenance or service on the steering linkage or the neutral interlock system.
- Refer to the windrower and header operator's manuals for maintenance and inspection procedures.

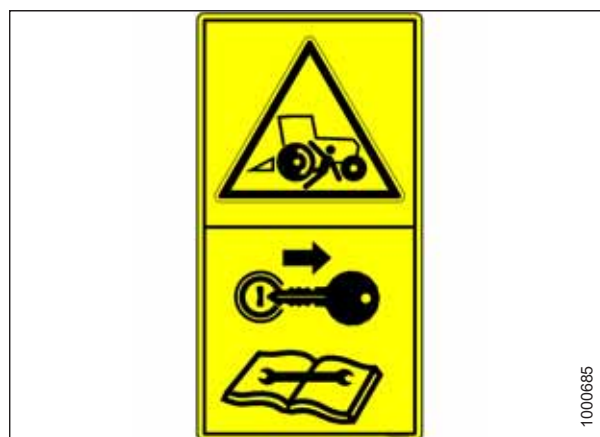


Figure 1.28: MD #166425

SAFETY

MD #166441

Loss-of-control hazard

DANGER

To prevent serious injury or death from losing control of the machine:

- It is essential that the machine be operated within its specified weight limits.
- The weight on the caster wheels must be greater than 1179 kg (2600 lb.) when the windrower is operated in the cab-forward position.
- To maintain the machine's balance, ensure that the recommended rear ballast kits are installed. When operating the machine on sloped terrain, additional rear ballast kits may be required.



Figure 1.29: MD #166441

MD #166450

Hot surface hazard

CAUTION

To prevent injury:

- Keep a safe distance from hot surfaces.
- Allow hot surfaces to cool before touching them.

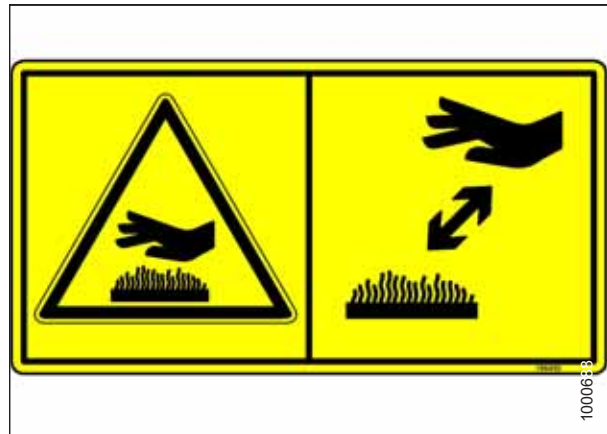


Figure 1.30: MD #166450

MD #166451

Rotating fan hazard

WARNING

To prevent injury:

- Do **NOT** operate the engine when the hood is open.
- Stop the engine and remove the key from the ignition before opening the hood.

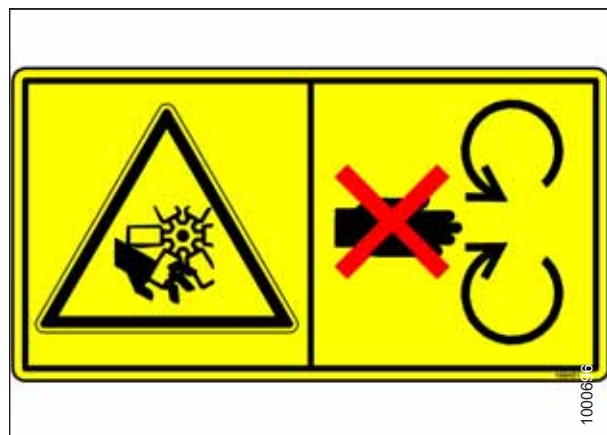


Figure 1.31: MD #166451

SAFETY

MD #166454

General hazard pertaining to machine operation and servicing

DANGER

To prevent injury or death from improper or unsafe machine operation:

- Follow all of the safety instructions provided in the machine's operator's manual. If you do not have a manual, obtain one from your Dealer.
- Do **NOT** allow untrained persons to operate the machine.
- Review the safety instructions in this manual with all Operators every year.
- Ensure that all safety signs are installed and legible.
- Ensure that everyone is clear of the machine before starting the engine and during its operation.
- Do not allow riders on the machine.
- Keep all shields in place. Stay clear of moving parts.
- Disengage the header drive, put the transmission in Neutral, and wait for all movement to stop before you leave the operator's seat.
- Stop the engine and remove the key from the ignition before you service, adjust, lubricate, clean, or unplug the machine.
- Engage the safety locks to the header or reel from falling before servicing the header when it is in the raised position.
- Use a slow-moving vehicle emblem and activate the machine's warning lights when operating on roadways, unless these actions are prohibited by law.

MD #166455

Battery explosion hazard

WARNING

Lead-acid batteries emit explosive gases. To prevent serious bodily injury caused by an explosion:

- Keep sparks and flames away from the battery.
- If you are attaching a booster battery to the windrower's battery, ensure that the booster cables are attached correctly.
- Refer to the operator's manual for the correct battery boosting and charging procedures.

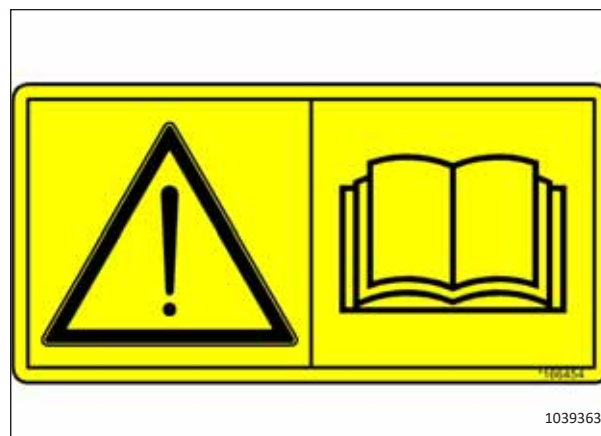


Figure 1.32: MD #166454

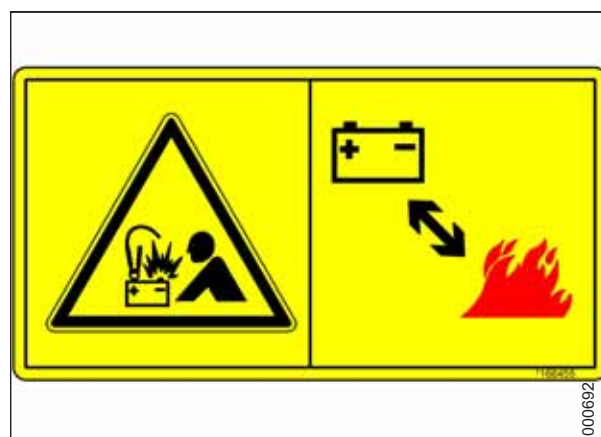


Figure 1.33: MD #166455

SAFETY

MD #166456

Battery acid hazard

WARNING

Lead-acid batteries contain corrosive and poisonous acid, which can damage clothing and cause injury or death. To prevent injury:

- Wear protective clothing and personal protective devices when handling battery acid.



Figure 1.34: MD #166456

MD #166457

General hazard pertaining to machine operation and servicing

DANGER

To prevent injury or death from improper or unsafe machine operation:

- Follow all the safety instructions provided in the machine's operator's manual. If you do not have a manual, obtain one from your Dealer.
- Do **NOT** allow untrained persons to operate the machine.
- Review these safety instructions with all Operators every year.
- Ensure that all safety signs are installed and are legible.
- Ensure that everyone is clear of the machine before starting the engine and during its operation.
- Do not allow riders on the machine.
- Keep all shields in place. Stay clear of moving parts.
- Disengage the header drive, put the transmission in Neutral, and wait for all movement to stop before you leave the operator's seat.
- Stop the engine and remove the key from the ignition before you service, adjust, lubricate, clean, or unplug the machine.
- Engage the safety locks to prevent the header or the reel from falling before servicing the header when it is in the raised position.
- Use a slow-moving vehicle emblem and activate the machine's warning lights when operating on roadways, unless these actions are prohibited by law.

Run-over hazard

DANGER

- The machine will move if the steering wheel is turned while the engine is running.
- Steering response is the opposite of what is normally expected when you are backing up the machine. Turn the bottom of the steering wheel in the direction in which you want to go.
- Always move the ground speed lever to the low end of the range before you move the high-low speed control.
- Stop the engine and remove the key from the ignition before you service, adjust, lubricate, clean, or unplug the machine, or before you perform maintenance or service on the steering linkage or neutral interlock system.
- Refer to the windrower and header operator's manuals for inspection and maintenance instructions.

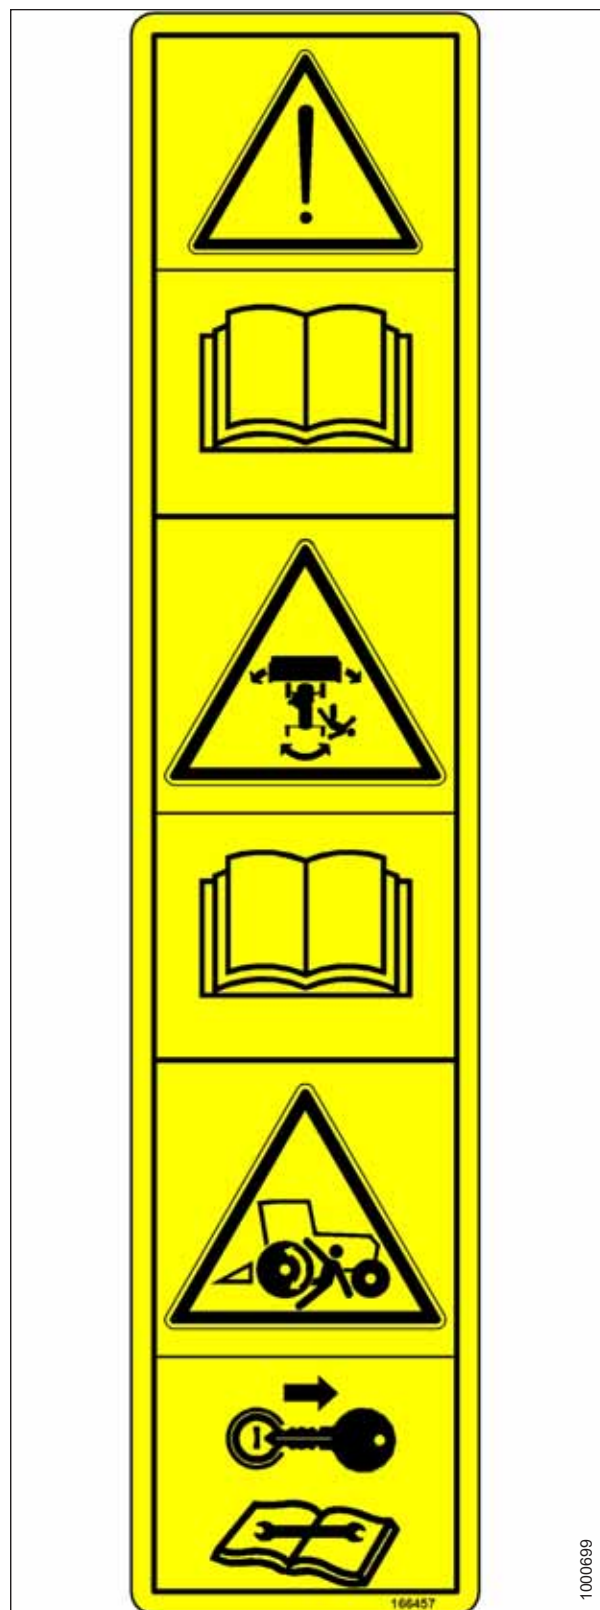


Figure 1.35: MD #166457

SAFETY

MD #166463

Collision hazard

DANGER

To prevent injury or death from a collision between the windrower and other vehicles when you are operating the windrower on public roadways:

- Obey all highway traffic regulations in your area. Use pilot vehicles in the front and the rear of the windrower if you are required to do so by law.
- Use a slow-moving vehicle emblem and activate the machine's warning lights, unless these actions are prohibited by law.
- If the attached header impedes other vehicle traffic, remove the header and install a MacDon approved weight box onto the windrower. Refer to the windrower and header operator's manuals for instructions on safely towing the header.

MD #166465

Loss of control hazard

DANGER

To prevent serious injury or death from losing control of the machine:

- Do **NOT** make abrupt changes in the direction in which you are steering.
- Slow down before turning the machine.
- Do **NOT** make sudden, sharp changes to your speed while turning, such as hard braking.

When travelling on steep slopes:

- Reduce the machine's speed and lower the header.
- Move the ground speed lever to the slow end of the range.
- Shift the high-low speed control to the low range.

When the windrower is operating without a header attached, weight must be added over the drive wheels so that you can maintain steering control. If you must drive the windrower without a header or without a MacDon weight system:

- Operate the windrower in the low-speed range.
- Avoid slopes.
- Do **NOT** tow a header.
- If control of the machine is lost, immediately pull the ground speed lever to the neutral position.



Figure 1.36: MD #166463

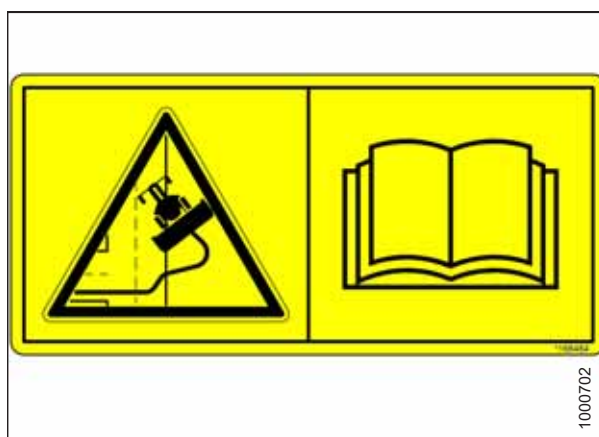


Figure 1.37: MD #166465

SAFETY

MD #166466

High-pressure oil hazard

WARNING

High-pressure hydraulic fluid can penetrate human skin, which can cause serious injury such as gangrene, which can be fatal. To prevent this:

- Do **NOT** go near hydraulic fluid leaks.
- Do **NOT** use a finger or skin to check for hydraulic fluid leaks.
- Lower the load or relieve the pressure in the hydraulic system before loosening any hydraulic fittings.
- If you are injured, seek emergency medical help. **IMMEDIATE** surgery is required to remove hydraulic fluid which has penetrated the skin.



Figure 1.38: MD #166466

MD #166843

Loss of control hazard

DANGER

To prevent serious injury or death from losing control of the machine:

- Do **NOT** make abrupt changes in the direction in which you are steering.
- Slow down before you begin turning the machine.
- Do **NOT** make sudden, sharp changes to the windrower's speed (such as hard braking) when you are turning the windrower.



Figure 1.39: MD #166843

When you are travelling on steep slopes:

- Reduce the machine's speed and lower the header.
- Move the ground speed lever to the low end of the range.
- Shift the high-low speed control to the low range (16 km/h [10 mph]).

When the windrower is operating without a header attached, weight must be added over the drive wheels so that you can maintain steering control. If you must drive the windrower without a header or without a MacDon weight system:

- Operate the windrower in the low-speed range (16 km/h [10 mph]).
- Avoid slopes.
- Do **NOT** tow a header.
- If control of the machine is lost, immediately pull the ground speed lever to the neutral position and shut off the engine.

SAFETY

MD #167502

Pinch point hazard

CAUTION

To prevent injury:

- Do **NOT** reach into the pinch area.



Figure 1.40: MD #167502

MD #167504

Emergency exit information

ATTENTION

To exit the machine in case of an emergency:

- Follow the arrow on the sign.



Figure 1.41: MD #167504

MD #174436

High-pressure oil hazard

WARNING

High-pressure hydraulic fluid can penetrate human skin, which can cause serious injury such as gangrene, which can be fatal.

To prevent this:

- Do **NOT** go near hydraulic fluid leaks.
- Do **NOT** use a finger or skin to check for hydraulic fluid leaks.
- Lower the load or relieve the pressure in the hydraulic system before loosening any hydraulic fittings.
- If you are injured, seek emergency medical help. **IMMEDIATE** surgery is required to remove hydraulic fluid which has penetrated the skin.



Figure 1.42: MD #174436

SAFETY

MD #190546

Slipping hazard

WARNING

To prevent injury or death:

- Do **NOT** use this area as a step or platform.

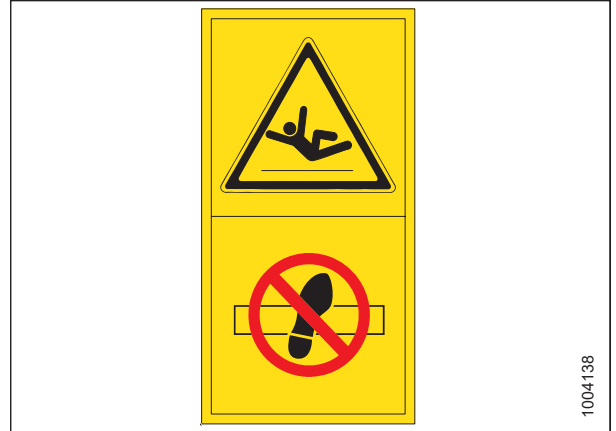


Figure 1.43: MD #190546

MD #306179/306180/306181

Header crushing hazard

DANGER

To prevent injury or death from the fall of a raised header:

- Fully raise the header, stop the engine, remove the key from the ignition, and engage the safety props before going under the header.

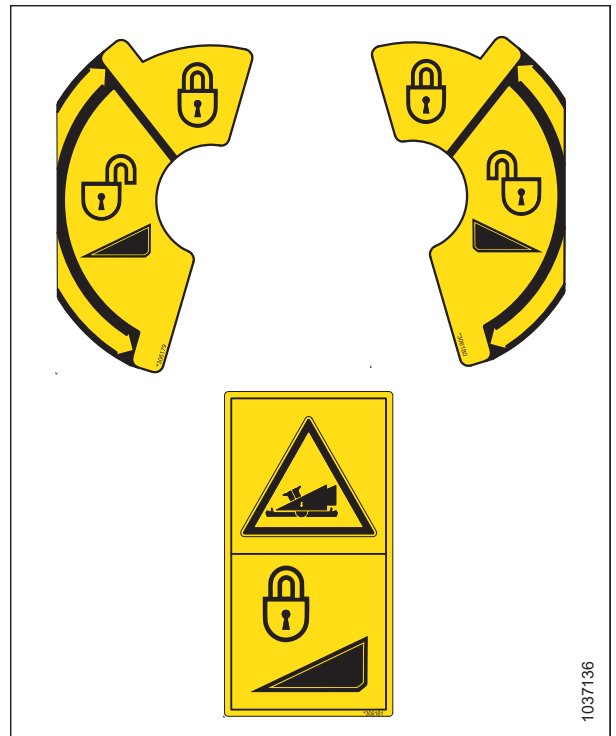


Figure 1.44: MD #306179/306180/306181

SAFETY

MD #306756

Hot fluid spray hazard, engine coolant fill rate instructions, and engine coolant specifications

CAUTION

The engine cooling system is under pressure when the engine coolant is hot. To prevent injury:

- Do **NOT** remove the fluid fill cap when the engine is hot.
- Allow the engine to cool down before you open the fluid fill cap.
- If possible, use the specified Peak Final Charge Global or Fleetguard EX Compleat OAT nitrite-free coolants. If they are unavailable, use nitrite-free coolant that meets ASTM D6210 and CES 14603 specifications.
- Fill the tank slowly. Do **NOT** exceed a fill rate of 11 L/min (3 gpm).



Figure 1.45: MD #306756

Chapter 2: Product Overview

The definitions of the technical terms used in this manual, the machine's specifications, and the locations of key components on the machine are provided.

2.1 Definitions

The following terms, abbreviations, and acronyms are used in this manual.

Table 2.1 Definitions

Term	Definition
A Series Header	MacDon A30S, A30D, A40D, A40DX, standard and Grass Seed auger headers
API	American Petroleum Institute
Bolt	A headed and externally threaded fastener designed to be paired with a nut
Cab-forward	Windrower operation mode in which the operator's seat faces the header
CDM	The cab display module in an M Series Windrower
Center-link	A hydraulic cylinder or manually adjustable turnbuckle type connection between the header and the vehicle, which is used to change the angle of the header relative to the vehicle
CGVW	Combined gross vehicle weight
D Series Header	MacDon D50, D60, and D65 rigid draper headers
D1 Series Header	MacDon D115, D120, D125, D130, D135, and D140 rigid draper headers for windrowers
D2 Series Draper Header	MacDon D215, D220, D225, D230, D235, and D241 Draper Headers for M, M1, and M2 Series Windrowers, and the TM100 Tractor Mount.
DWA	Double Windrow Attachment
ECM	Engine control module
Engine-forward	Windrower operation with Operator and engine facing in direction of travel
FFFT	Flats from finger tight
Finger tight	A reference position in which the given sealing surfaces or components are making contact with each other. The fitting has been tightened by hand to a point where the fitting is no longer loose and cannot be tightened further by hand
GSL	Ground speed lever
GVW	Gross vehicle weight
Hard joint	A joint made with use of a fastener where joining materials are highly incompressible
Header	A machine that cuts and lays crop into a windrow when attached to a windrower
Hex key	A tool of hexagonal cross-section used to drive bolts and screws that have a hexagonal socket in the head (internal-wrenching hexagon drive); also known as an Allen key
ISC	Intermediate Speed Control
Knife	A cutting device found on a header's cutterbar which uses a reciprocating cutter (also called a sickle) to cut crop so that it can be fed into the header
M Series Windrowers	MacDon M100, M105, M150, M155, M155E4, M200, and M205 Self-Propelled Windrowers
n/a	Not applicable
N-DETENT	The slot opposite the NEUTRAL position on the operator's console of M Series SP Windrowers
Nut	An internally threaded fastener designed to be paired with a bolt
ORB	O-ring boss: A style of fitting commonly used in port openings on manifolds, pumps, and motors

PRODUCT OVERVIEW

Table 2.1 Definitions (continued)

Term	Definition
ORFS	O-ring face seal: A style of fitting commonly used for connecting hoses and tubes. This style of fitting is also commonly called ORS, which stands for O-Ring Seal
R Series Header	MacDon R80 and R85 Rotary Disc Headers
R1 SP Series Header	MacDon R113 and R116 Rotary Disc Headers for windrowers
R2 SP Series Header	MacDon R216 Rotary Disc Headers for windrowers
rpm	Revolutions per minute
SAE	Society of Automotive Engineers
Screw	A headed and externally threaded fastener that threads into preformed threads or forms its own thread when it is inserted into a mating part
Self Propelled (SP) Windrower	Self-propelled machine consisting of a power unit and a header. It is designed to cut and lay crops into windrows for later harvest
spm	Strokes per minute
SST	Slow speed transport
Tension	An axial load placed on a bolt or screw, usually measured in Newtons (N) or pounds (lb.). This term can also be used to describe the force a belt exerts on a pulley or sprocket
TFFT	Turns from finger tight
Torque	The product of a force * the length of a lever arm, usually measured in Newton-meters (Nm), foot-pounds (lbf-ft), or inch-pounds (lbf-in)
Torque angle	A tightening procedure in which a fitting is assembled to a specified tightness (usually finger tight) and then the nut is turned farther by a specified number of degrees until it achieves its final position
Torque-tension	The relationship between the assembly torque applied to a piece of hardware and the axial load it induces in a bolt or screw
UCA	Upper cross auger
ULSD	Ultra-low sulphur diesel
Washer	A thin cylinder with a hole or a slot located in the center, used as a spacer, a load distribution element, or a locking mechanism
WCM	Windrower control module
Windrower	The power unit for a header

2.2 Specifications

The physical characteristics of and the equipment specifications for the windrower are provided.

Engine		
Type	Cummins QSB-4.5L CM850 4 cylinder turbo diesel. B20 biodiesel approved.	
Displacement	4.5 L (275 cu. in.)	
Power	Rated	148 hp (110 kW) @ 2300 rpm
	Peak	156 hp (116 kW) @ 2000 rpm
Electrical System		
Recommended battery (2)	12 Volt, maximum dimensions: 334 x 188 x 232 mm (13.25 x 7.37 x 9.44 in.). Group rating 29H or 31A. Heavy duty / off-road / vibration-resistant.	
Minimum CCA per battery (cold cranking amps)	650	

PRODUCT OVERVIEW

Engine		
Battery BCI group rating		29H or 31A
Alternator		130 amp
Egress lighting		Standard
Starter		Wet type
Working lights		11
Traction Drive		
Type		Hydrostatic, 3-speed electric shift
Speed	Field (cab-forward)	Low range: 0–18 km/h (11 mph) Mid range: 0–26 km/h (16 mph)
	Reverse (cab-forward)	9.6 km/h (6 mph)
	Transport (engine-forward)	High range: 0–37 km/h (23 mph)
Transmission	Type	2 Piston pumps (1 per drive wheel)
	Displacement	44 cc (2.65 cu. in.)
	Flow	167 L/min (40 US gpm)
	Pressure	37,921 kPa (5500 psi)
Final drive	Type	Planetary gearbox
	Ratio	30.06:1
Wheel motor displacement	Low range	68 cc (4.15 cu. in.)
	Mid range	50 cc (3.01 cu. in.)
	High range	32 cc (1.93 cu. in.)
System Capacities		
Fuel tank		367 L (97 US gal)
Hydraulic reservoir		65 L (17.2 US gal)
Header Drive ¹		
Header Lift/Tilt		
Type	Hydraulic double acting cylinders. Tilt - optional hydraulic positioning, Optional hydraulic center-link	
Function	Lift / tilt / float	

1. Refer to Table *Hydraulic Pumps* .

PRODUCT OVERVIEW

Engine		
Header Float		
Primary adjustment	Manual, external, drawbolt with springs (1 per side). Two inner booster springs (1 per side)	
Fine adjustment	Hydraulic, in-cab switch	
Automatic	Hydraulic, 3 programmable settings for all headers (deck shift compensation on draper headers)	
Cab		
Type	Spring/shock suspension	
Dimensions	Width	1600 mm (63 in.)
	Depth	1735 mm (68.3 in.) (at top of window)
	Height	1640 mm (64.6 in.)
	Volume	3540 L (125 cu. ft.)
Seat	Driver	Adjustable air-ride suspension, seat belt
	Training	Folding, cab mounted, seat belt
Windshield wiper	Front	800 mm (31.5 in.) blade
	Rear	560 mm (22 in.) blade
Heater	7038 W (24,000 Btu/h)	
Air conditioning	8288 W (28,280 Btu/h)	
Electrical outlets	One live, two on ignition, one live/keyed	
Mirrors	One inside (transport), two outside (field)	
Radio	Two speakers and antenna, factory-installed. Radio is Dealer-installed.	
System Monitoring		
Speeds	Ground (mph or km/h), engine (rpm), knife (spm), disc (rpm), reel (rpm or mph/km/h), conveyor (ref. no.)	
Header	Height, angle, float, header drive load gauge	
Tire Options ² .		
Frame and Structure		
Dimensions	Refer to 2.3 Windrower Dimensions, page 32	
Frame to ground (crop clearance)	1160 mm (45.7 in.)	
Weight	Base	4360 kg (9610 lb.) ³
	Maximum GVW	9750 kg (21,500 lb.) ³
	Maximum CGVW	10,480 kg (23,100 lb.) ³
Header Compatibility		
Auger headers	A30D, A40D	All sizes
Draper headers	D50	Up to 10.7 m (35 ft.) ⁴
	D60 and D65	Up to 12.2 m (40 ft.) ⁴
	D1 Series	Up to 12.2 m (40 ft.) ⁴

2. Refer to Table [Drive Tires](#) for options
3. Weights do not include options.
4. Depending on header options

PRODUCT OVERVIEW

Engine		
	D2 Series	Up to 12.5 m (41 ft.) ⁵
Rotary disc	R80 and R85	4.0 m (13 ft.) only ⁶
	R113 and R116	4.0 and 4.8 m (13 and 16 ft.)
	R216	4.8 m (16 ft.)

NOTE:

Specifications and design are subject to change without notice or obligation to revise previously sold units.

Pump locations:

- Knife drive pump (A) (closest to engine)
- Reel/conveyor pump (B) (or M2 with disc)
- Inner gear pump (C) – Oil from the inner gear pump is normally routed directly to the cooler bypass valve and combines with the return flow from the first gear pump. From there the oil is cooled and moves through the high pressure filter and then into the supercharge valve manifold.
- Outboard gear pump (D) – The outboard gear pump supplies oil to the multifunction control manifold. The returned oil combines with the return flow from the inboard gear pump (C) at the cooler bypass and maintains standby pressure to operate brake disengage (either low- or high-speed range) and the neutral interlock cylinder.
- Traction drive double piston pump (E) – Engine end pump drives right wheel; outboard pump drives left wheel.

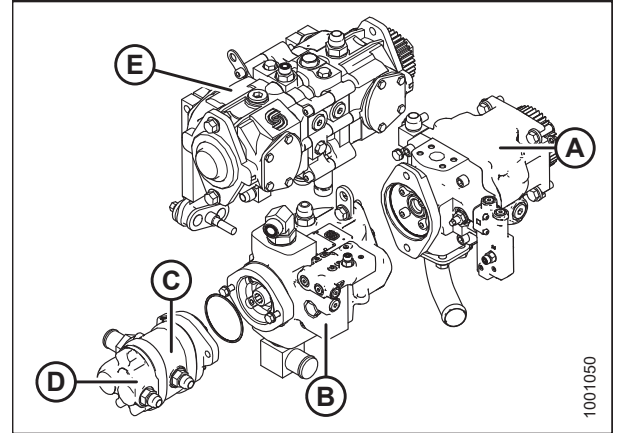


Figure 2.1: Pumps

Table 2.2 Hydraulic Pumps

Pump Type	Specifications	Controller Type	Function
Pump A – load sense pressure-compensated piston pump	Variable displacement: 0–45 cc (2.75 cu. in.) Flow = 0–102 L/min (27 gpm) at 27.56 MPa (4000 psi)	Electric over hydraulic Maximum flow rate determined by header ID	Knife drive or part of disc drive (option) M1 circuit
Pump B – load sense pressure-compensated piston pump	Variable displacement: 0–38 cc (2.32 cu. in.) Flow = 0–84 L/min (24 gpm) at 22.05 MPa (3200 psi)	Electric over hydraulic Maximum flow rate determined by header ID	Conveyor and reel drive or part of disc drive (option) M2 circuit

5. The D241 can only be paired with an M Series Windrower as a base header. Performance options CANNOT be installed.

6. Only 18.4 x 26 tires are compatible with the 4.0 m (13 ft.) R80 and R85.

PRODUCT OVERVIEW

Table 2.2 Hydraulic Pumps (continued)

Pump Type	Specifications	Controller Type	Function
Pump C – gear pump	Displacement: 13.8 cc (0.84 cu. in.) Flow at full throttle 44 L/min (11.5 gpm) at 17.23 MPa (2500 psi)	Engine rpm	Directs oil to the cooler bypass valve
Pump D – gear pump	Displacement: 13.8 cc (0.84 cu. in.) Flow at full throttle 44 L/min (11.5 gpm) at 17.23 MPa (2500 psi)	Engine rpm	Supplies oil to the multifunction control manual

2.3 Windrower Dimensions

The length and width of the windrower can be specified in several ways, including frame width, wheel-to-wheel width, frame length, and total length.

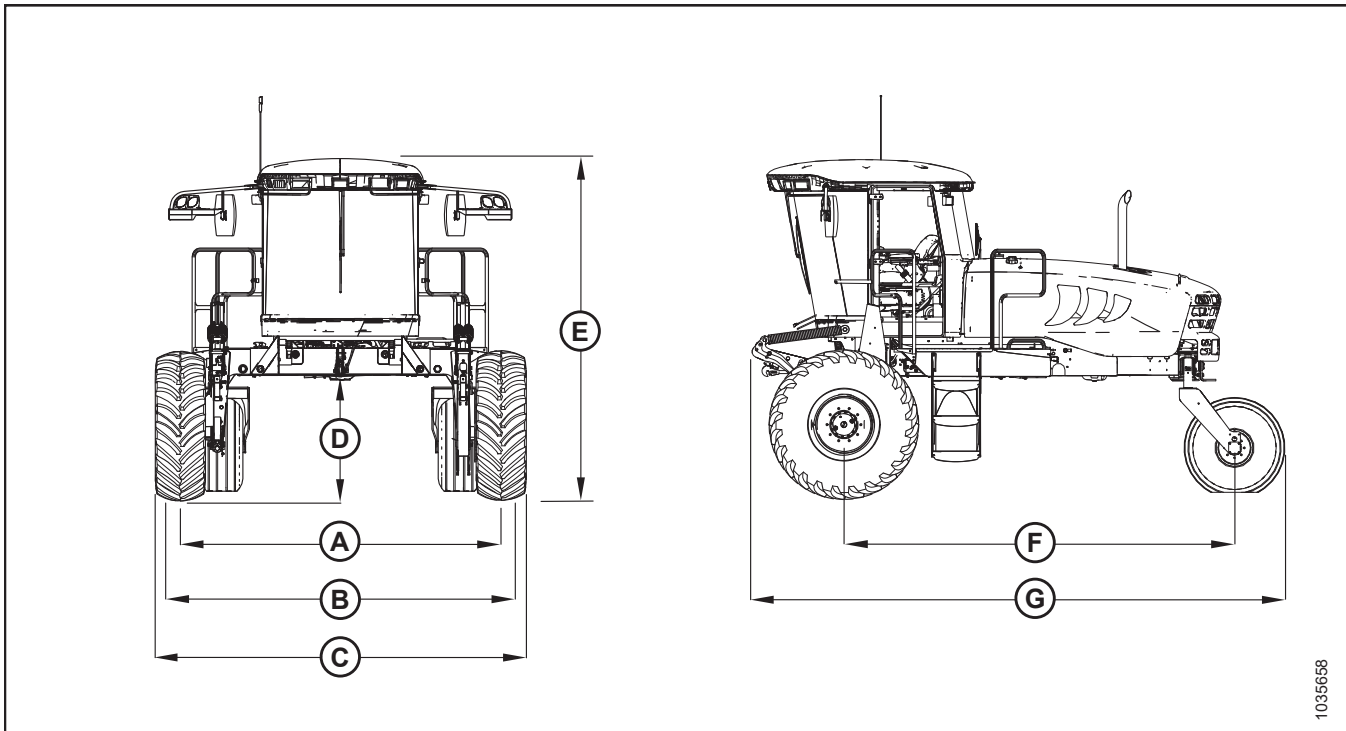


Figure 2.2: Windrower Dimensions – Cab-Forward

A - Drive Tire Tread
 C - Drive Tires
 E - 3378 mm (133 in.)
 G - 5280 mm (207 7/8 in.)

B - Drive Tire Hubs
 D - 1160 mm (45 3/4 in.)
 F - 4022 mm (158 5/16 in.)

PRODUCT OVERVIEW

Table 2.3 Drive Tires

Tire Size	Wheel Position	Tread (A) mm (in.)	Hubs (B) mm (in.)	Tires (C) mm (in.)
18.4 x 26 bar and turf narrow track ⁷	Inner/outer (shipping)	3144 (123 3/4)	3571 (140 9/16)	3644 (143 7/16)
18.4 x 26 bar and turf narrow track ⁷	Outer/outer	3324 (130 7/8)	3751 (147 11/16)	3824 (150 5/8)
18.4 x 26 bar and turf narrow track ⁷	Inner/inner	2964 (116 11/16)	3391 (133 1/2)	3464 (136 3/8)
18.4 x 26 bar and turf wide track ⁷	Inner/outer (shipping)	3319 (130 11/16)	3571 (140 9/16)	3819 (150 3/8)
18.4 x 26 bar and turf wide track ⁷	Outer/outer	3499 (137 3/4)	3751 (147 11/16)	3999 (157 7/16)
18.4 x 26 bar and turf wide track ⁷	Inner/inner	3139 (123 9/16)	3391 (133 1/2)	3639 (143 1/4)
600/65R28 radial tire	Inner/outer (shipping)	3139 (123 9/16)	3571 (140 9/16)	3758 (147 15/16)
600/65R28 radial tire	Outer/outer	3319 (130 11/16)	3751 (147 11/16)	3938 (155 1/16)
600/65R28 radial tire	Inner/inner	2959 (116 1/2)	3391 (133 1/2)	3578 (140 7/8)
23.1-26 and 580/70R26 turf tires	Inner/outer (shipping)	3203 (126 1/8)	3571 (140 9/16)	3793 (149 5/16)
23.1-26 and 580/70R26 turf tires	Outer/outer	3383 (133 3/16)	3751 (147 11/16)	3973 (156 7/16)
23.1-26 and 580/70R26 turf tires	Inner/inner	3023 (119)	3391 (133 1/2)	3613 (142 1/4)

7. Only 18.4 x 26 tires are compatible with the 4.0 m (13 ft.) R80 and R85.

PRODUCT OVERVIEW

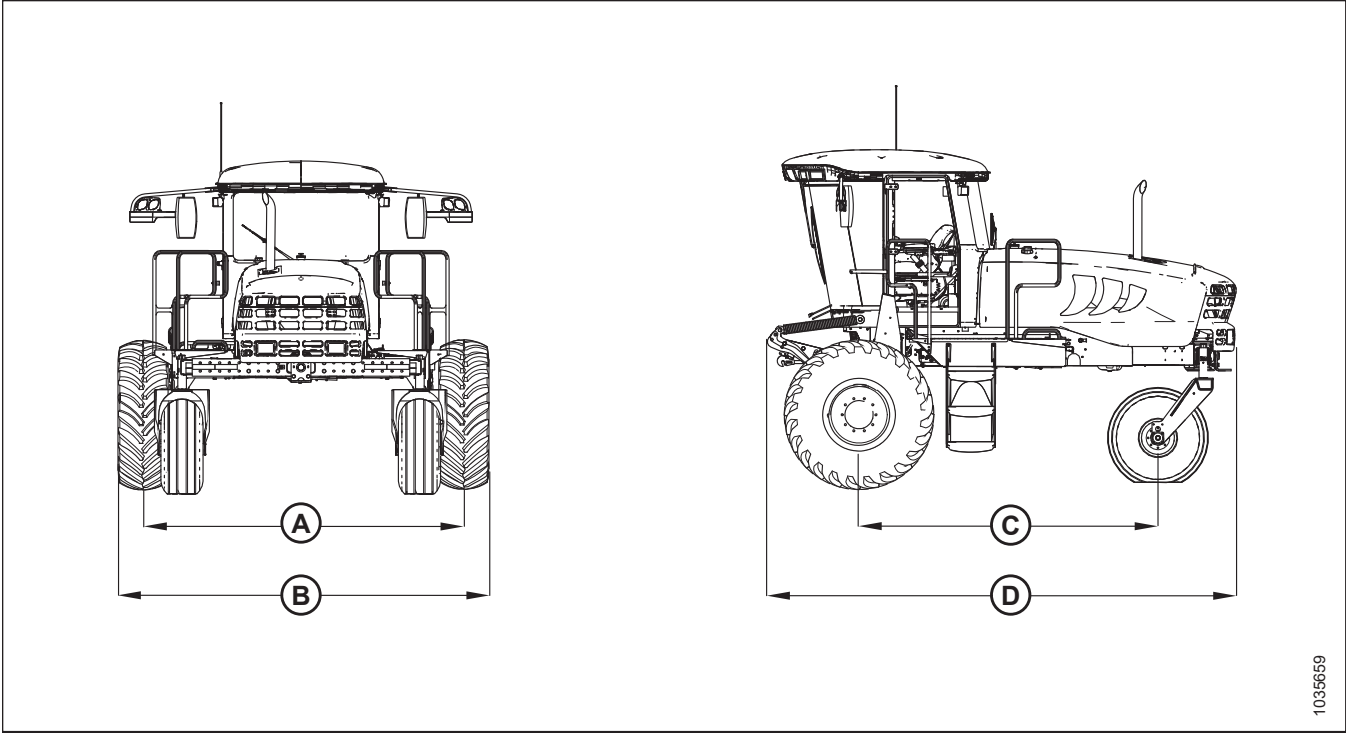


Figure 2.3: Windrower Dimensions – Engine-Forward

A - Caster Tire Tread
 C - 3064 mm (120 9/16 in.)

B - Caster Tire Casters
 D - 4747 mm (186 7/8 in.)

Table 2.4 Caster Tires

Tire Size	Wheel Position	Tread (D) mm (in.)	Casters (E) mm (in.)
7.5-16SL	Minimum	2448 (96 7/16)	3032 (118 15/16)
7.5-16SL	Maximum	3448 (135 11/16)	4032 (158 3/4)
10-16 formed caster	Minimum	2448 (96 7/16)	3032 (118 15/16)
10-16 formed caster	Maximum	3448 (135 11/16)	4032 (158 3/4)
10-16 forked caster	Minimum	2448 (96 7/16)	3014 (118 11/16)
10-16 forked caster	Maximum	3448 (135 11/16)	4014 (158)
16.5 x 16.1	Minimum	2448 (96 7/16)	3014 (118 11/16)
16.5 x 16.1	Maximum	3448 (135 11/16)	4014 (158)

2.4 Component Location

Knowing the location and the identity of key windrower components is critical to operating and properly maintaining the machine.

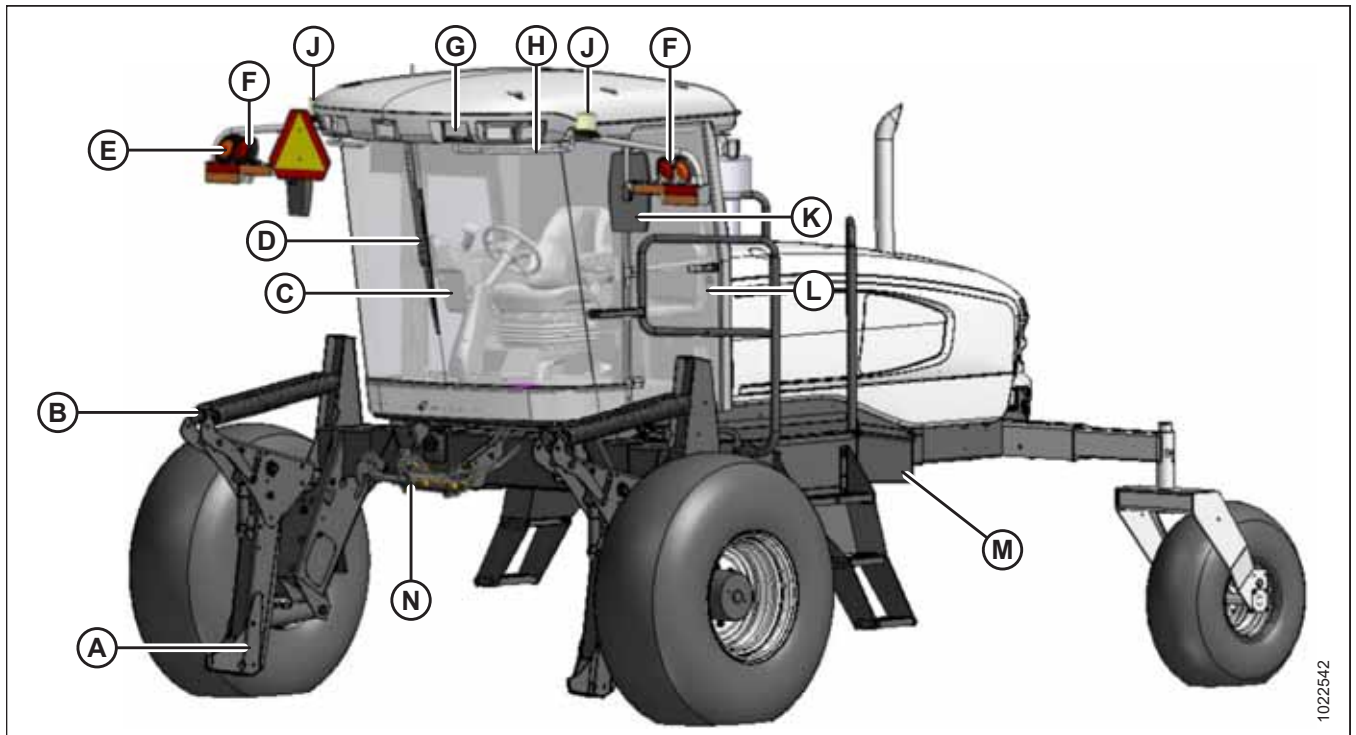



Figure 2.4: Front Cab-Forward View

A - Header Lift Leg
 D - Windshield Wiper
 G - Field/Road Lights
 K - Mirror
 N - Center-Link

B - Header Float Springs
 E - Turn Signal / Hazard Lights
 H - Handholds
 L - Door

C - Operator's Station
 F - Taillight Engine-Forward
 J - Beacon
 M - Maintenance Platform

PRODUCT OVERVIEW

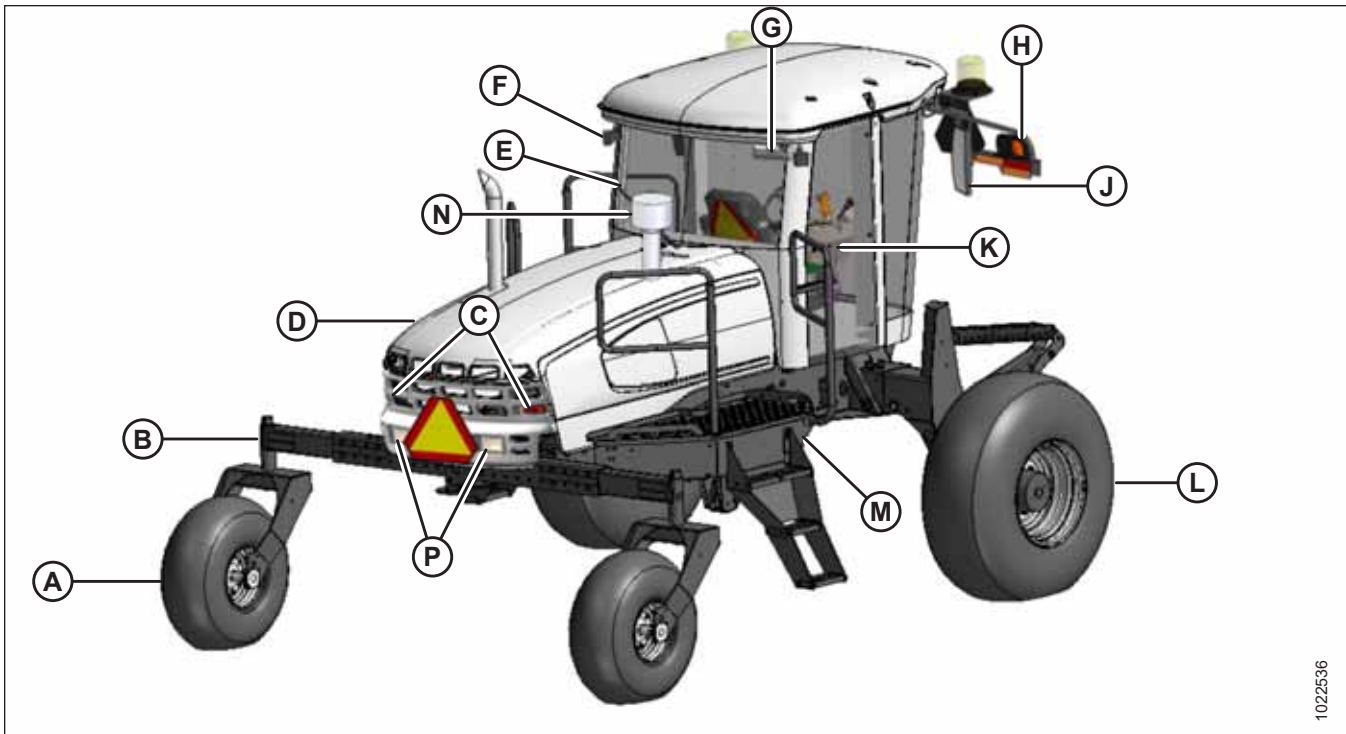

1022536

Figure 2.5: Rear Cab-Forward View

A - Caster Wheel

D - Engine Compartment Hood

G - Horn

K - Door

N - Engine Air Precleaner (Export)

B - Walking Beam

E - Windshield Wiper

H - Turn Signal / Hazard Lights

L - Drive Wheel

P - Headlights

C - Taillights - Cab-Forward (Option)

F - Field Lights

J - Mirror

M - Maintenance Platform

Chapter 3: Operator's Station

The operator's station, which includes the seat, the operating console, and the steering column, contains all of the controls necessary to operate the windrower. It allows the Operator to operate the windrower in cab-forward mode (working mode) or in engine-forward mode (transport mode).

3.1 Operator's Console

The operator's console contains the controls necessary to operate the windrower and its amenities. The console position can be adjusted to suit each Operator.

Note the position of each instrument on the operator's console.

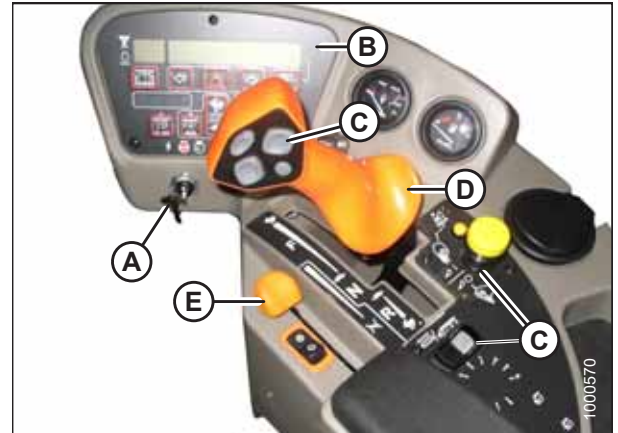


Figure 3.1: Operator's Console

A - Ignition
B - Cab Display Module (CDM)
C - Header Controls
D - Ground Speed Lever (GSL)
E - Throttle

1. To adjust the operator console's fore-aft setting and its height:
 - a. Pull lever (A) and slide the console fore or aft to the desired position.
 - b. Release the lever to lock the console.

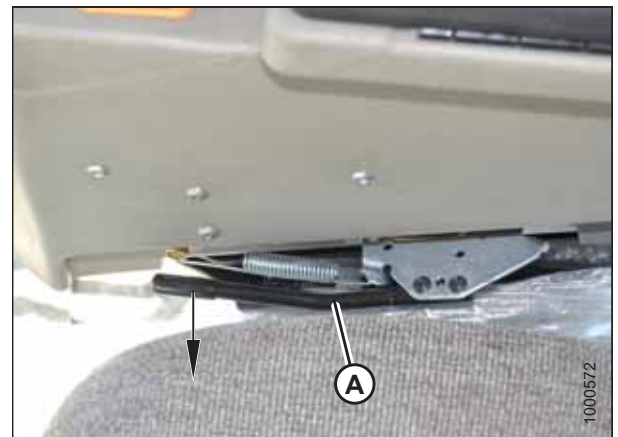


Figure 3.2: Console Fore-Aft Adjustment

OPERATOR'S STATION

2. To adjust only the operator console's fore-aft setting without adjusting its height:
 - a. Loosen nuts (A) under the console.
 - b. Move the console as needed.
 - c. Tighten nuts (A).



Figure 3.3: Console Fore-Aft Adjustment

3.2 Operator Presence System

The operator presence system is a safety feature designed to activate or deactivate certain systems when the Operator is not seated at the operator's station.

These systems are:

- Header drive
- Engine and transmission

3.2.1 Header Drive

The header drive system will only operate if allowed to do so by the operator presence system.

- To engage the header drive, the Operator must be seated in the operator's seat.
- If the Operator leaves the seat, power to the header drive is maintained for 5 seconds, then the header shuts down automatically.
- To restart the header after an automatic shut down, move the HEADER DRIVE switch to the OFF position and then to the ON position.

3.2.2 Engine and Transmission

The engine and transmission systems will only operate if allowed to do so by the operator presence system.

- If the HEADER DRIVE switch is engaged, the engine will not start.
- If the windrower is traveling at 8 km/h (5 mph) or slower and the Operator leaves the seat, the cab display module (CDM) will display the message NO OPERATOR on the upper line and ENGINE SHUT DOWN 5...4...3...2...1...0 on the lower line, and a steady tone will sound. When the countdown reaches 0, the engine will shut down.
- If the windrower is traveling at 8 km/h (5 mph) or faster, and the Operator leaves the seat for more than five seconds, an alarm will sound and the lower display line will display the message NO OPERATOR.
- If the operator's seat is in between the cab-forward and engine-forward positions and the transmission is not locked in the NEUTRAL position, the engine will shut down. The lower display will display the message LOCK SEAT BASE until the seat base is locked into position.

3.3 Operator's Seat Adjustments

The operator's seat can be adjusted in several ways so that the Operator remains comfortable while operating the machine.

3.3.1 Adjusting Fore-Aft Position

Changing the fore-aft setting moves the operator's chair closer to or farther away from the front of the windrower.

1. Pull lever (A) up to release the fore-aft position lock.
2. Move the seat forward or rearward, as desired.
3. Release lever (A).



Figure 3.4: Fore-Aft Position

3.3.2 Adjusting Seat Suspension and Height

The height of the operator's seat can be adjusted electrically by using the switch on the armrest.

To increase the seat's height, press upper switch (A).

To decrease the seat's height, press upper switch (B).



Figure 3.5: Seat Suspension and Height

3.3.3 Adjusting Vertical Dampener

The vertical dampener regulates the degree of shock absorption the seat provides in the up-and-down plane.

To increase the seat's vertical dampening, turn knob (A) counterclockwise.

To decrease the seat's vertical dampening, turn knob (A) clockwise.



Figure 3.6: Vertical Dampener

3.3.4 Adjusting Armrest

The armrest can be put into the raised or the lowered position to facilitate access to the seat.

Raise armrest (A) so that the seat can be more easily accessed.

Lower armrest (A) after sitting down and buckling the operator's safety belt.



Figure 3.7: Armrest

3.3.5 Adjusting Fore-Aft Isolator Lock

The fore-aft isolator provides a degree of shock absorption when the windrower is turned. It can be locked or unlocked.

To lock the fore-aft isolator, push lever (A) down.

To unlock the fore-aft isolator, push lever (A) up.



Figure 3.8: Fore-Aft Isolator Lock

3.3.6 Adjusting Seat Tilt

The angle of the seat back relative to the operator's seat can be adjusted using the seat tilt lever.

1. Pull lever (A) to release the seat tilt lock.
2. Position the seat back as desired.
3. Release lever (A).



Figure 3.9: Seat Tilt

3.3.7 Adjusting Armrest Angle

The angle of the armrest relative to the operator's seat can be adjusted using the knob on the bottom of the armrest.

To increase the armrest angle, rotate knob (A) clockwise.

To decrease the armrest angle, rotate knob (A) counterclockwise.



Figure 3.10: Armrest Angle

3.3.8 Adjusting Lumbar Support

Lumbar support fills in the gap between the curve of the spine of the lower back and the seat back so that the Operator can maintain proper posture. It can be adjusted by using the knob on the back of the seat back.

To increase the seat's lumbar support, rotate knob (A) upward.

To decrease the seat's lumbar support, rotate knob (A) downward.

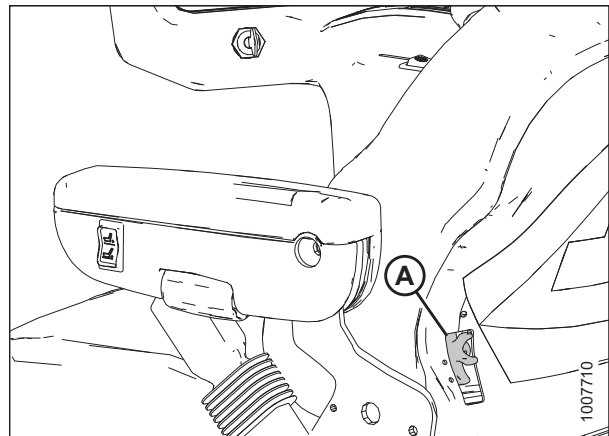


Figure 3.11: Lumbar Support

3.4 Using Training Seat

A wall-mounted, fold-up training seat complete with seat belt is provided solely for the purpose of training new Operators.

WARNING

- The training seat is provided for use by experienced machine Operators, so that they can train new Operators on the use of the machine.
- Never use the training seat when operating the windrower in engine-forward mode.
- The training seat is NOT intended as a passenger seat or for use by children. Use the seat belt whenever you are operating the machine or when you are riding as a Trainer.
- Keep all other riders off of the machine.

To store the training seat, lift seat (B) and secure it with latch (A).

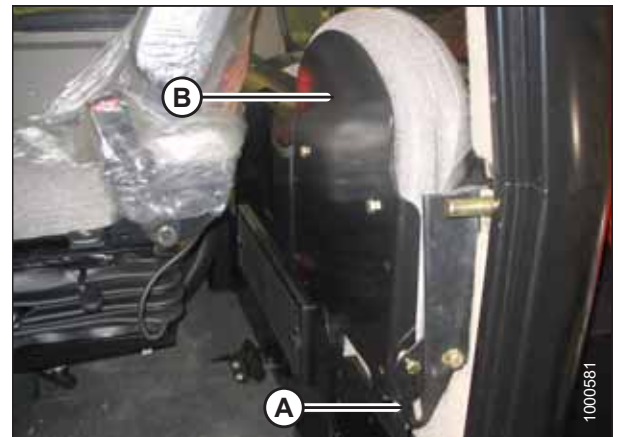


Figure 3.12: Training Seat in Storage Position

To lower the seat, lift latch (A) and lower seat (B).



Figure 3.13: Training Seat

3.5 Using Seat Belts

The windrower is equipped with seat belts on the operator's and trainer's seats.

WARNING

Seat belts can help ensure your safety when they are properly used and maintained.

- Before starting the engine, fasten your seat belt, and ensure that the training seat occupant's seat belt is securely fastened.
- Never wear a seat belt loosely or leave any slack in the belt system. Never wear the belt in a twisted condition or pinched between the seat structural members.

To fasten a seat belt:

1. Pull metal eye (A) and pull the seat belt completely across your body.
2. Push metal eye (A) into buckle (B) until the eye is locked in place.
3. Adjust the position of the belt as low on your body as possible.

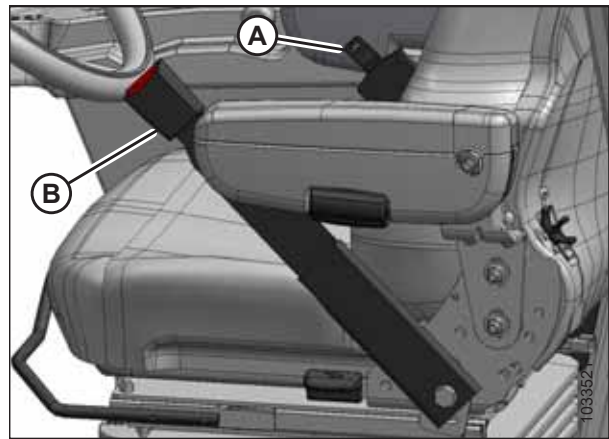


Figure 3.14: Seat Belt

To release a seat belt:

1. Push red button (C) at the end of the buckle.
2. Separate buckle (B) and metal eye (A).

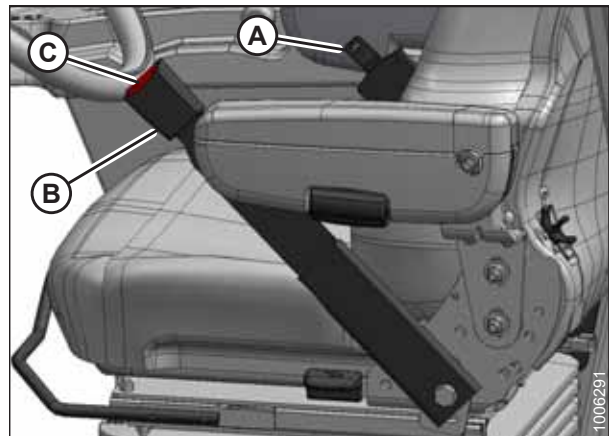


Figure 3.15: Seat Belt

3.6 Adjusting Steering Column

The position of the steering column can be adjusted to suit each Operator and to make it easier to get in and out of the seat.

1. Hold onto the steering wheel, lift handle (A), and move the steering wheel up or down to the desired position.
2. Release handle (A) to lock the position of the steering wheel.

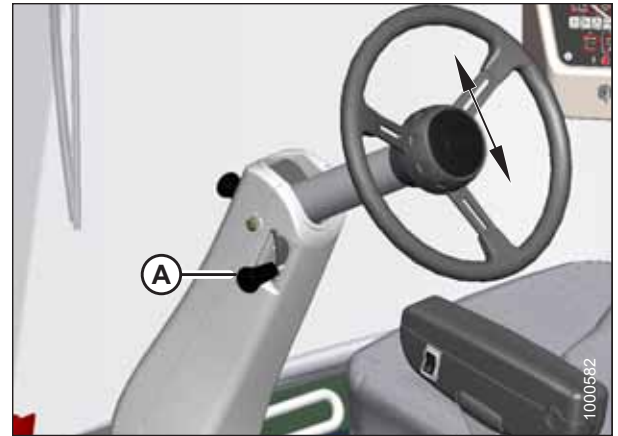


Figure 3.16: Steering Column

3.7 Exterior Lighting

The exterior lighting system consists of the field, road, and beacon and/or clearance lights. These lights can be controlled from a panel in the cab's headliner.

Field/road (A), high/low beam (B), and beacon light (C) switches are located on a panel in the cab headliner. The hazard/turn signal switch is located on the cab display module (CDM).

The position of the operator's station (cab-forward mode or engine-forward mode) and the auto-road lighting feature automatically determines which lighting systems are activated.

IMPORTANT:

Red and amber reflector tape is positioned so as to be visible in both the engine-forward and cab-forward modes.

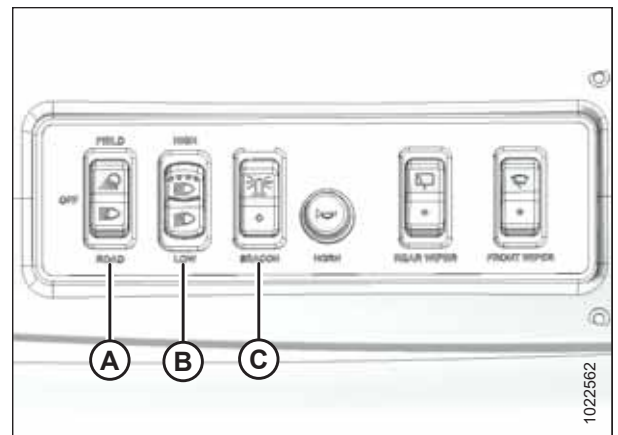


Figure 3.17: Headliner Console – All Countries Except Russia

- A - FIELD / OFF / ROAD
- B - HIGH / LOW
- C - BEACONS / OFF

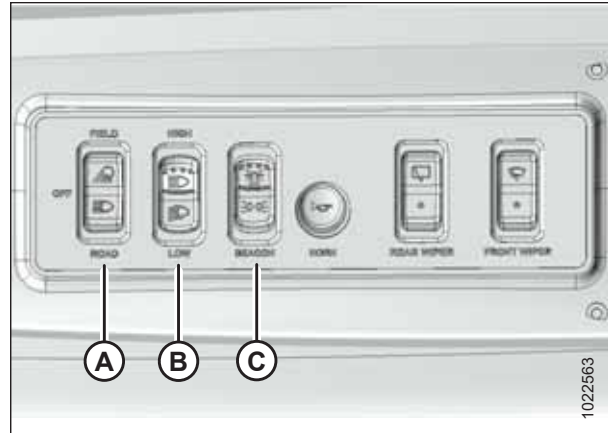


Figure 3.18: Headliner Console – Russia Only

A - FIELD / OFF / ROAD

B - LOW / HIGH

C - BEACON & CLEARANCE / OFF / CLEARANCE

3.7.1 Auto-Road Lighting

This feature automatically activates a default set of lights for road travel when specific operating conditions are met.

This feature will activate road headlights, hazards, and beacons when the following conditions are met:

- The windrower is in cab- or engine-forward mode
- The engine is running
- The header is disengaged
- The transmission is in either mid or high range

3.7.2 Cab-Forward Lighting

This section explains the lighting defaults with the windrower in cab-forward mode.

Table 3.1 Cab-Forward Lighting

Switch Position ⇔⇔ Lights ↓	Auto Road Inactive		Auto Road Active ⁸	
	Field	Road	Field	Road
Field (A)	ON	OFF	OFF	OFF
Field (B)	ON	ON	ON	ON
Field (C)	ON with high or low beam	ON with high or low beam	ON with high or low beam	ON with high or low beam
Field (D)	ON	OFF	OFF	OFF
Tail (E)	OFF ⁹	OFF ⁹	OFF ⁹	OFF ⁹
Hazard/turn signals (F)	CDM switched	CDM switched	CDM switched	CDM switched
Tail (G)	OFF	ON	ON	ON
Header (H) (not shown)	OFF	OFF	OFF	OFF

8. These lights are active when the engine is running, the transmission is in mid-range, and the header is disengaged

9. This light is ON when the three-position switch is in the beacon position or is in the clearance light position.

OPERATOR'S STATION

Table 3.1 Cab-Forward Lighting (continued)

Switch Position ⇔⇔ Lights ↓	Auto Road Inactive		Auto Road Active ¹⁰	
	Field	Road	Field	Road
Field (J)	ON with high or low beam	OFF	OFF	OFF
Beacons (K)	ON or OFF	ON or OFF	ON	ON

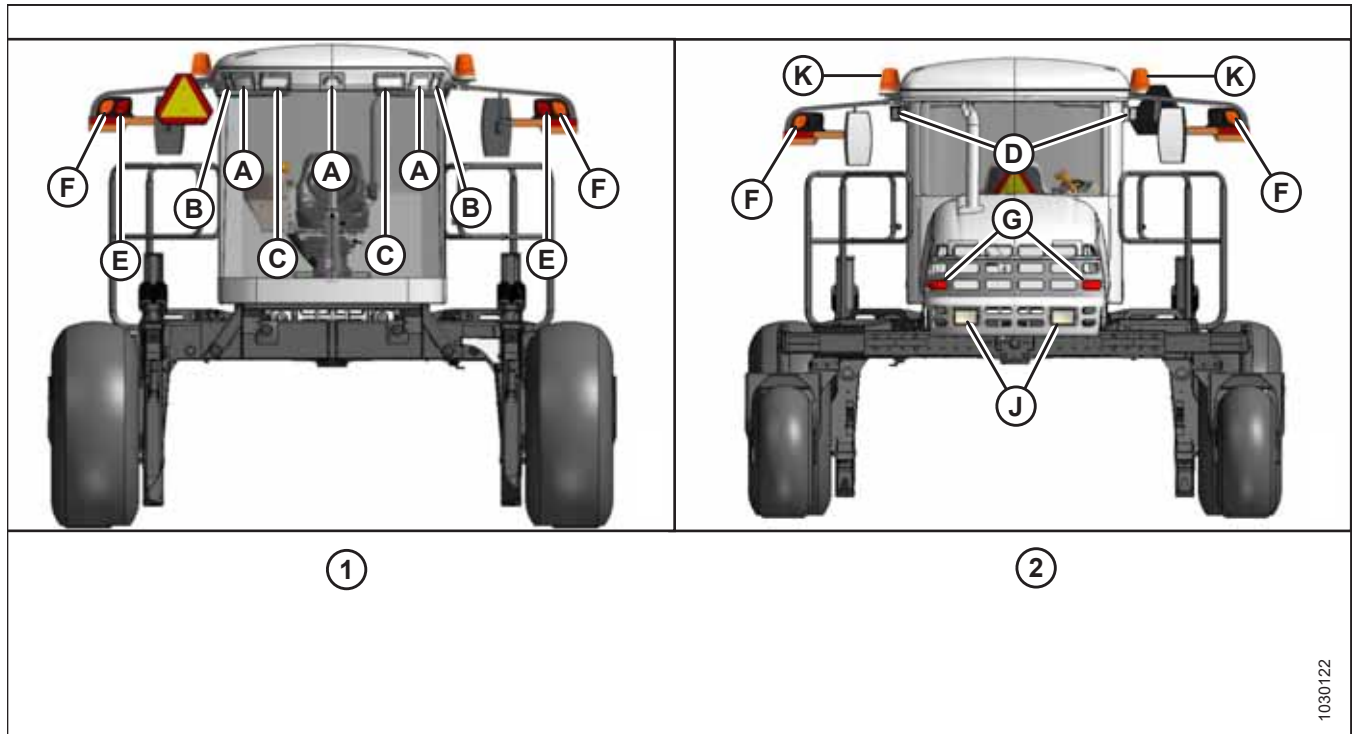


Figure 3.19: Cab-Forward Lighting

- | | | |
|-------------------------------|---------------------------------|---------------------|
| 1 - Front | 2 - Rear | A - Field (Qty 3) |
| B - Field/Road (Qty 2) | C - Field/Road (Qty 2) | D - Field (Qty 2) |
| E - Tail (Qty 2) | F - Hazard/Turn Signals (Qty 2) | G - Tail (Qty 2) |
| H - Header Lights (Not Shown) | J - Field (Qty 2) | K - Beacons (Qty 2) |

3.7.3 Engine-Forward Lighting

This section explains the lighting defaults with the windrower in engine-forward mode.

Table 3.2 Engine-Forward Lighting


Switch Position ⇔⇔ Lights ↓	Auto Road Inactive		Auto Road Active ¹¹	
	Field	Road	Field	Road
Field (A)	ON	ON	ON	ON
Tail (B)	ON ¹²	ON ¹²	ON ¹²	ON ¹²
Hazard/turn signal (C)	CDM switched	CDM switched	CDM switched	CDM switched
Tail (D) (cab-forward only)	OFF	OFF	OFF	OFF

10. These lights are active when the engine is running, the transmission is in mid-range, and the header is disengaged
 11. These lights are active when the engine is running, the transmission is in mid-range, and the header is disengaged.
 12. This light is only on when the beacon switch is set to ON.

OPERATOR'S STATION

Table 3.2 Engine-Forward Lighting (continued)

Switch Position ⇌⇌ Lights ↓	Auto Road Inactive		Auto Road Active ¹³	
	Field	Road	Field	Road
Tail on header (not shown)	ON	ON	ON	ON
Road (E)	ON in high or low beam	ON in high or low beam	ON in high or low beam	ON in high or low beam
Beacon (F)	ON or OFF	ON or OFF	ON	ON

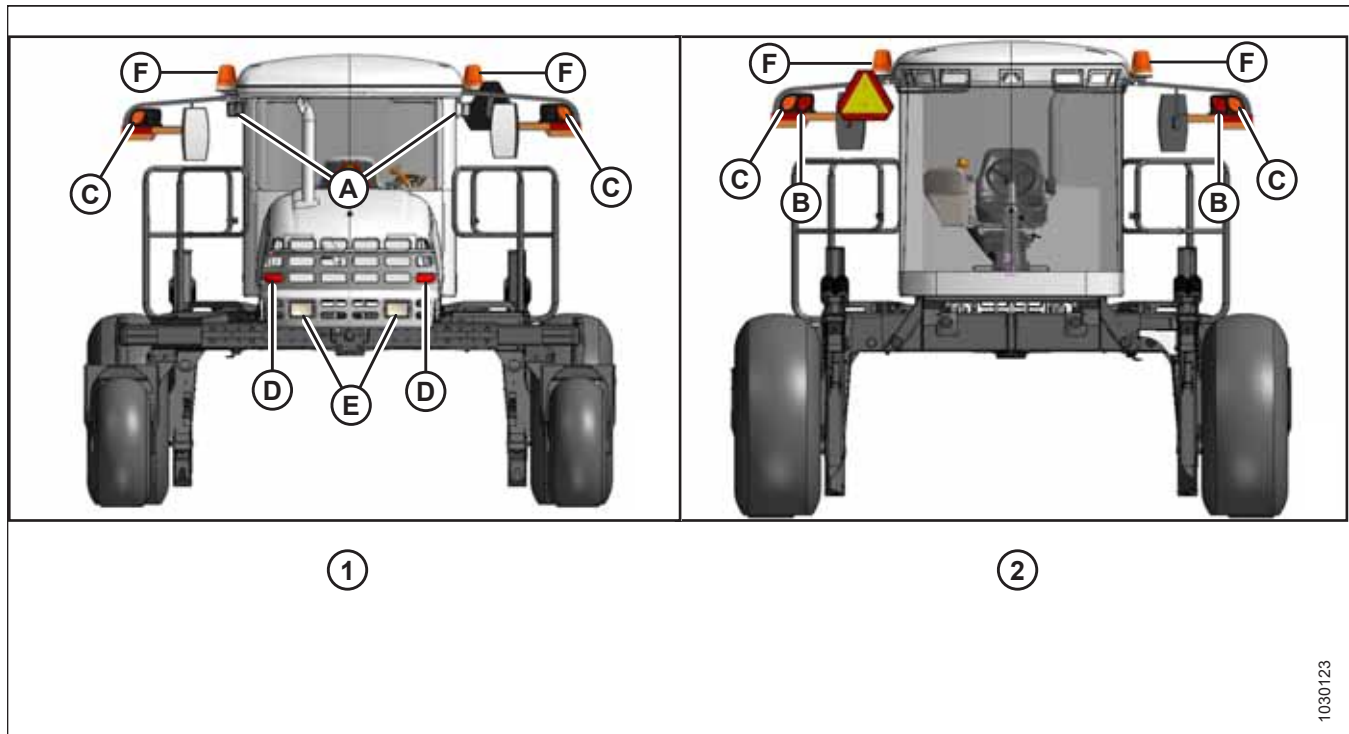

1030123

Figure 3.20: Engine-Forward Lighting

- | | | | |
|---------------------------------|------------------|-------------------|---------------------|
| 1 - Front | 2 - Rear | A - Field (Qty 2) | B - Tail (Qty 2) |
| C - Hazard/Turn Signals (Qty 2) | D - Tail (Qty 2) | E - Road (Qty 2) | F - Beacons (Qty 2) |

13. These lights are active when the engine is running, the transmission is in mid-range, and the header is disengaged.

3.7.4 High Intensity Discharge Auxiliary Lighting (Option)

Two optional high intensity discharge (HID) lights provide additional lighting when the windrower is being operated in the field.

If installed, the HID auxiliary lights are located on mirror supports (A). They can be activated only when the windrower is in cab-forward mode.

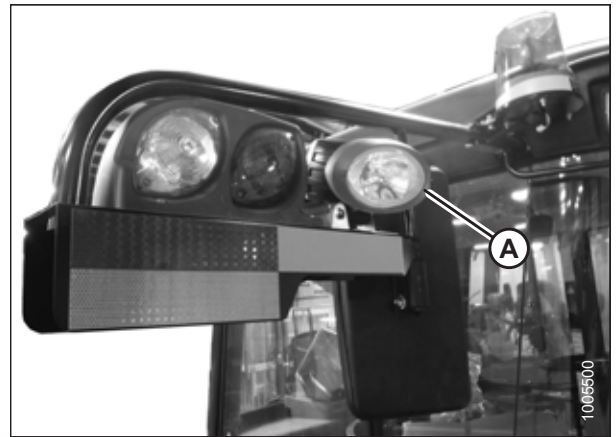


Figure 3.21: HID Auxiliary Lights

The HID auxiliary lighting is activated by moving light switch (A) to the FIELD position.

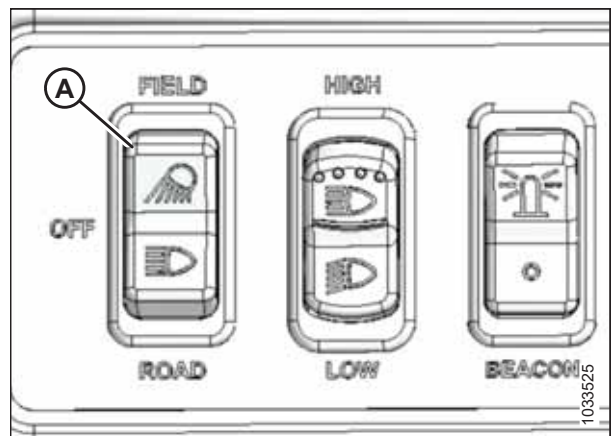


Figure 3.22: Field Light Switch – All Countries Except Russia

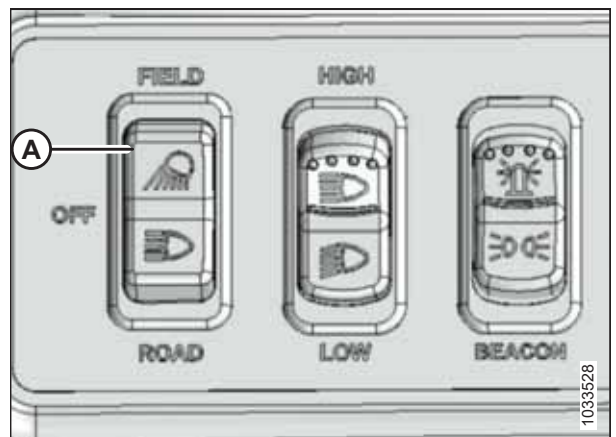


Figure 3.23: Field Light Switch – Russia Only

3.8 Windshield Wipers

The windrower has two windshield wipers: one in the front, and one in the rear. They can be controlled independently.

The windshield wiper controls are located in the cab headliner. The illustration shows the controls when the windrower is in cab-forward mode.

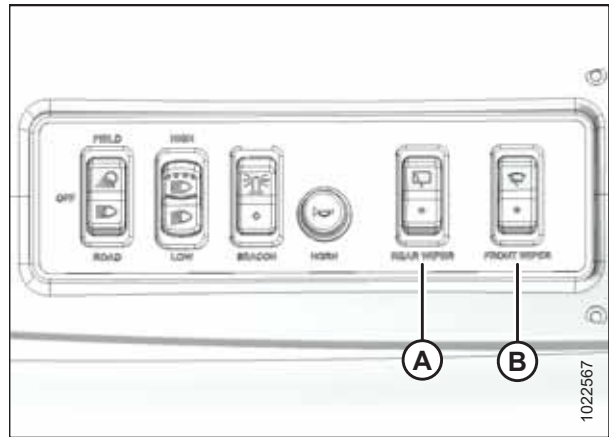


Figure 3.24: Wiper Controls
 A - Rear Wiper B - Front Wiper

3.9 Rearview Mirrors

The type of rearview mirror available to the Operator depends on whether the windrower is being operated in cab-forward or engine-forward mode.

Two outside-mounted, adjustable mirrors (A) provide a rear view when the windrower is in cab-forward mode.

A single interior-mounted mirror (B) provides a rear view when the windrower is in engine-forward mode.

Mirror/light assembly (A) is designed to fold back if it is struck. A detent-type lock keeps it in place.

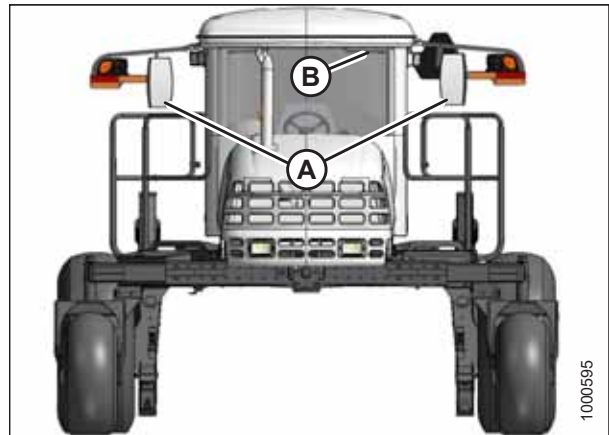


Figure 3.25: Mirrors

3.10 Cab Temperature

The temperature in the windrower cab is regulated by a climate control system which can provide filtered cool or warm air. The heater shut-off valve must be open for the heater to work properly.

The heater/evaporator/blower assembly is located under the cab floor and is accessible from beneath the windrower.

3.10.1 Heater Shut-Off

A coolant shut-off valve near the engine allows the cab heater to be isolated from the engine's cooling system.

Shut-off valve (A) must be OPEN to provide heat to the cab, but can be CLOSED in warm weather so that the cab cooling system can operate at maximum efficiency.

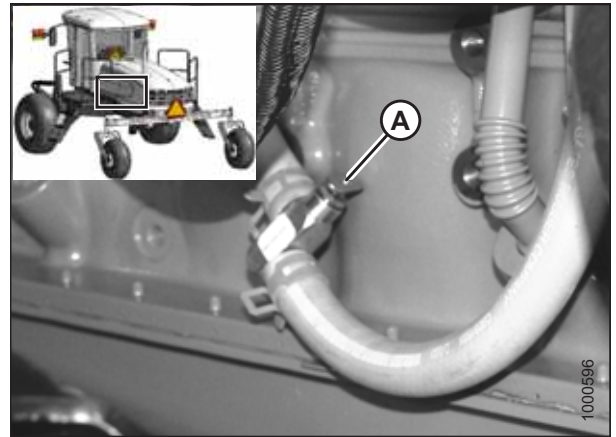


Figure 3.26: Heater Shut-Off Valve

3.10.2 Air Distribution

Air distribution in the cab is controlled through adjustable air vents.

Air vents (A) can be opened or closed, and the direction in which they blow can be changed to suit each Operator.

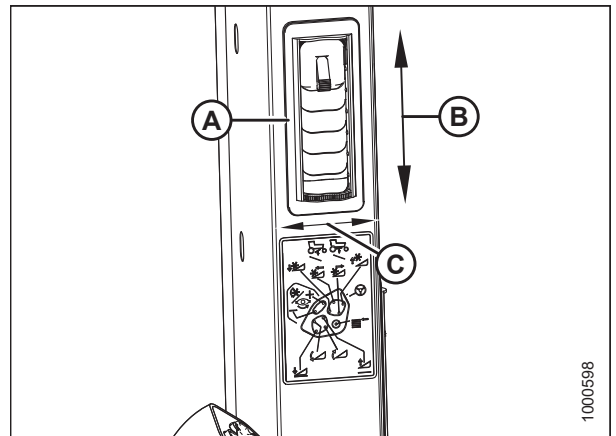


Figure 3.27: Adjustable Air Vents

A - Vent

B - Open/Close

C - Horizontal Direction

3.10.3 Climate Controls

The climate controls in the cab's headliner allow the Operator to control the blower fan speed, to turn the air conditioning (A/C) on and off, to change the air supply source, and to control the temperature of the blown air.

Blower switch (A) – controls the blower fan speed

- OFF / LOW / MEDIUM / HIGH

Air conditioning (A/C) switch (B) – controls the A/C system

- OFF: A/C is not active
- ON: A/C is active when the blower switch is set to a non-OFF setting (that is, low, medium, or high)

Outside air switch (C) – controls the air source for the blower

- FRESH AIR: Starts the booster fan, so that filtered outside air is drawn into the cab
- RECIRCULATE: Stops the booster fan, so that no fresh air is drawn into the cab

Temperature control dial (D) – controls the temperature of the blown air

- Turning the dial clockwise increases the temperature of the blown air
- Turning the dial counterclockwise decreases the temperature of the blown air

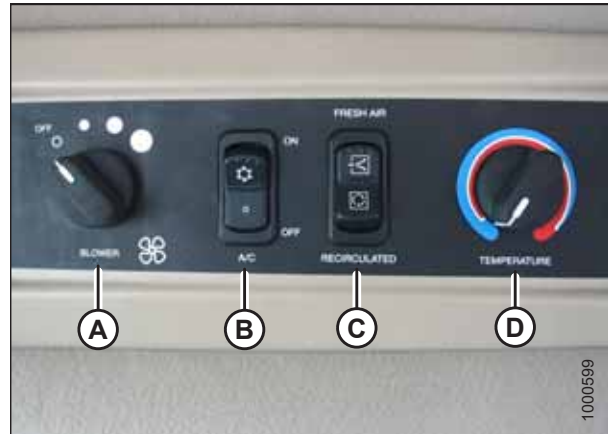


Figure 3.28: Climate Controls

IMPORTANT:

When starting the windrower after it has been stored for a week or more, the refrigerant must be distributed through the A/C system for it to work properly. For instructions, refer to [Cycling Air Conditioning Compressor Coolant, page 159](#).

3.11 Interior Lights

Two interior lights are provided in the cab for the convenience of the Operator.

Low intensity LED light (A) is located directly overhead. It functions only when the windrower's key is in the RUN position. An ON/OFF switch is located on the light.

Interior light (B) is located on the headliner switch panel. The light can be turned on or off by pressing on the housing. This light can be activated at any time.

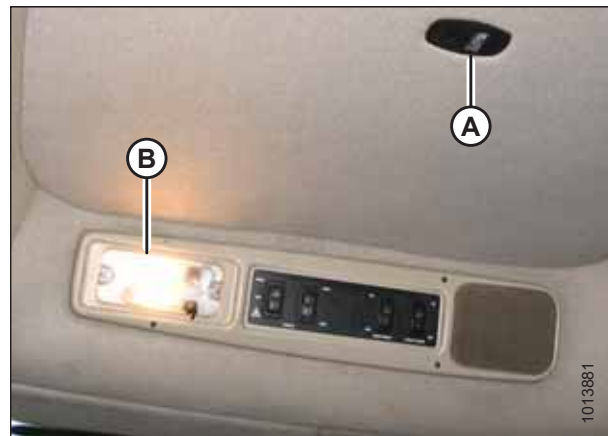


Figure 3.29: Interior Lights

3.12 Emergency Exit

An emergency exit is provided to allow the Operator to exit the windrower in case the door is no longer usable.

The emergency exit window (indicated by emergency exit decal [A]) is located beside the operator's station.

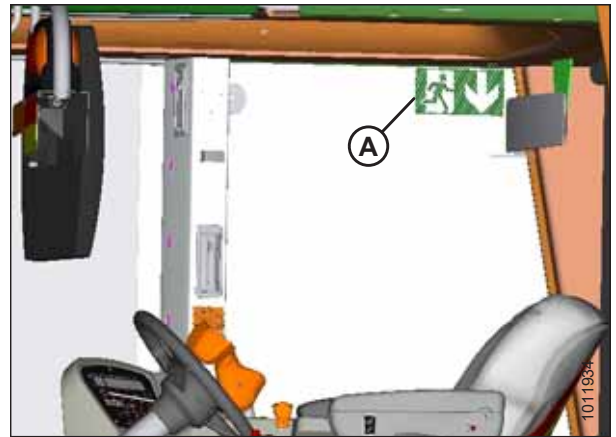


Figure 3.30: Emergency Exit Sign

To open the emergency exit window:

1. Release window latch (A).
2. Remove latch pin (B).
3. Push window (C) open.

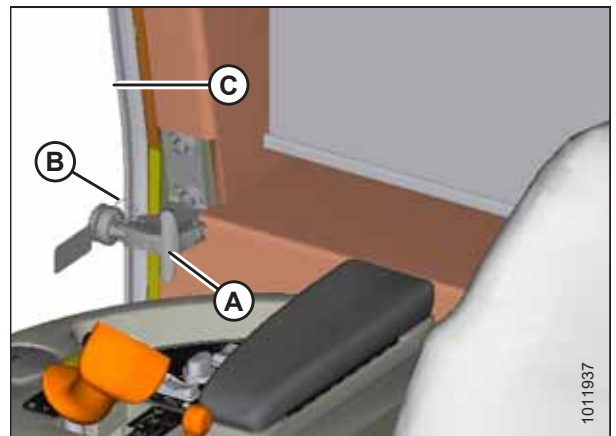


Figure 3.31: Emergency Exit Window

3.13 Operator Amenities

The operator's station includes a number of features which make operating the windrower more convenient, such as an auxiliary power outlet and a cup holder.

Operator's console

- A - Auxiliary power outlet
- B - Utility tray (under armrest)
- C - Cigarette lighter
- D - Ashtray/cup holder
- E - Utility tray

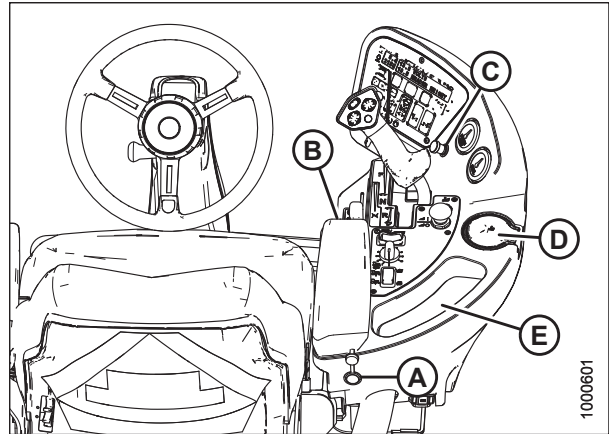


Figure 3.32: Console

Windshield shades (optional)

Retractable window shades (A) can be installed for the front and rear windows. Refer to [8.1.5 Windshield Shades, page 516](#) for ordering information.

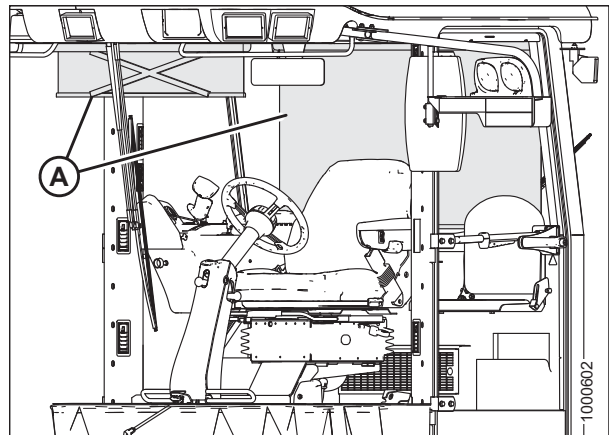


Figure 3.33: Windshield Shades

Auxiliary outlets

Two auxiliary power outlets are located on either side of the wiper motor cover/storage tray behind the Operator (when the operator's station is in cab-forward mode).

- A - Auxiliary power outlet
- B - Auxiliary power outlet
- C - Battery terminal
- D - Ground terminal
- E - Switched terminal

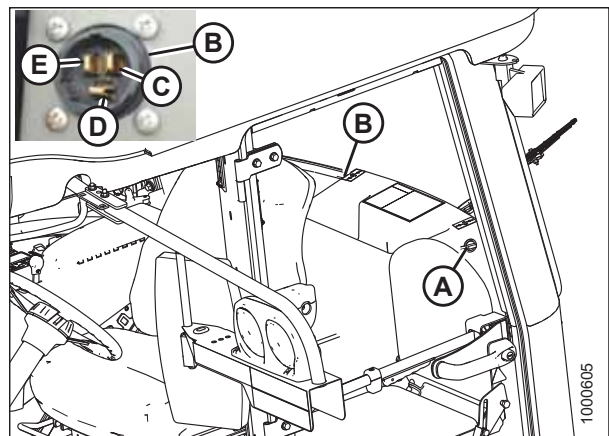


Figure 3.34: Auxiliary Power Outlets

OPERATOR'S STATION

Manual storage

Manual storage case (A) is located under the training seat.

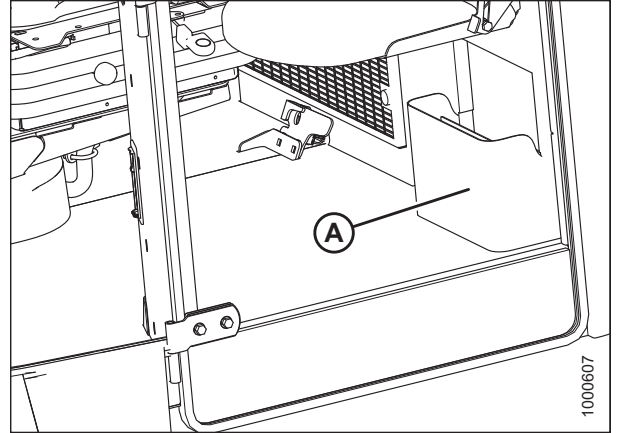


Figure 3.35: Operator's Manual Storage

Coat hook

Coat hook (A) is located above the training seat, left of the Operator.

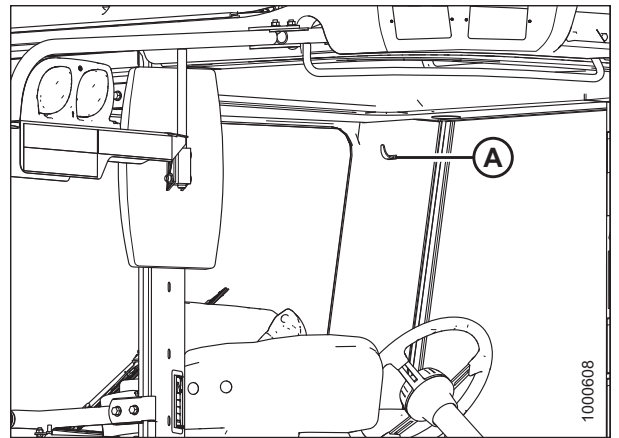


Figure 3.36: Coat Hook

3.14 Radio

A radio is available as optional equipment from your Dealer.

3.14.1 AM/FM Radio

A space is provided in the cab headliner to accommodate the installation of an AM/FM radio. In order to retain the radio settings and the preset memory when the battery disconnect is turned off, a radio which features non-volatile settings memory will need to be installed.

Two pre-wired speakers (A) have been factory-installed in the headliner.

For radio installation procedures, refer to the windrower unloading and assembly instructions.

Operating instructions are supplied with the radio.

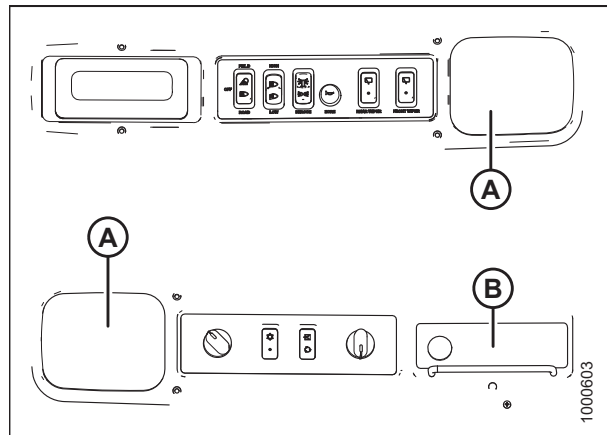


Figure 3.37: Speakers in Headliner
 A - Speakers
 B - Radio Mounting Location

3.14.2 Mounting Antenna

An optional base for a magnetic, roof-mounted antenna is available from your Dealer.

IMPORTANT:

The antenna base can be installed only on the left cab-forward and right rear cab roof bolts.

Order the magnetic antenna mount (MD #160288 [B]) from your Dealer. Alternately, refer to [3.40, page 57](#) for information on making an improvised version. Knockout (C) for the antenna lead is provided on the cab post.

Mounting antenna

1. Remove bolt (A).
2. Position antenna mount (B) as shown. Secure it with bolt (A).

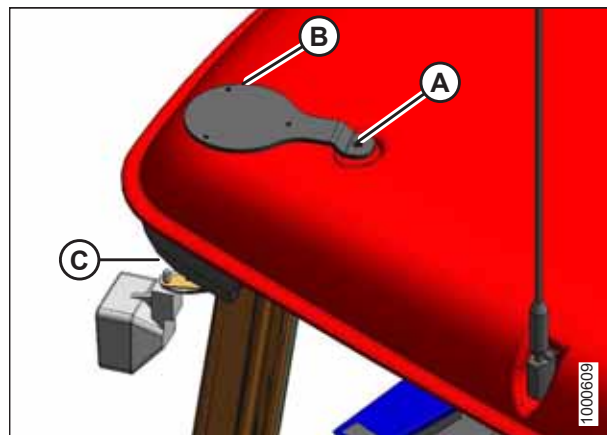


Figure 3.38: Antenna Mount

OPERATOR'S STATION

Knockout (A) is located on the exterior right cab-forward rear corner post of the cab, under the roof, between the horn and the light.

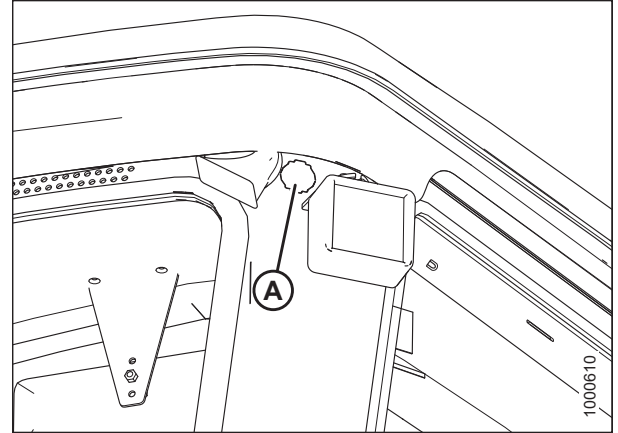


Figure 3.39: Knockout Location in Cab

Custom antenna mount dimensions

To make your own mount, refer to the dimensions template provided. Use 11 gauge or 3.0 mm-thick steel sheeting.

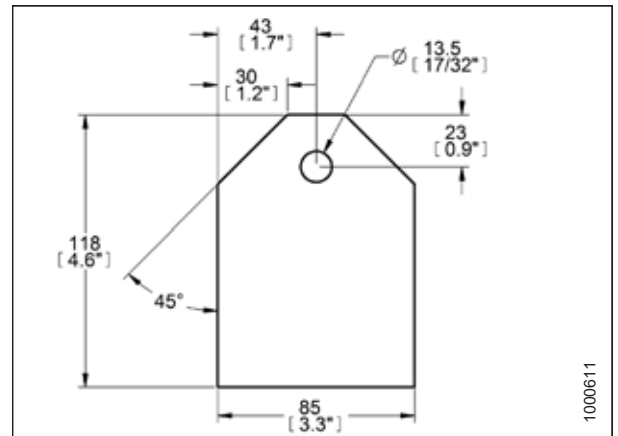


Figure 3.40: Template for Antenna Mount

3.15 Horn

The horn allows the Operator to alert bystanders and other vehicle operators.

The horn is activated by pushing button (A) on the headliner console.

Sound the horn three times prior to starting the engine.

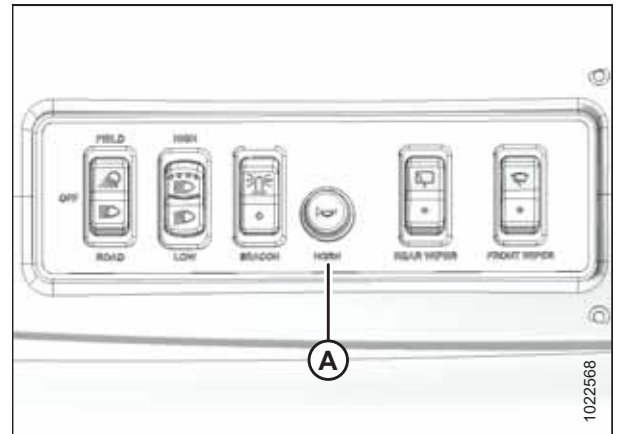


Figure 3.41: Horn Button Location

OPERATOR'S STATION

Horn (A) is located outside the cab on the rear right cab-forward corner of the cab, under the roof.

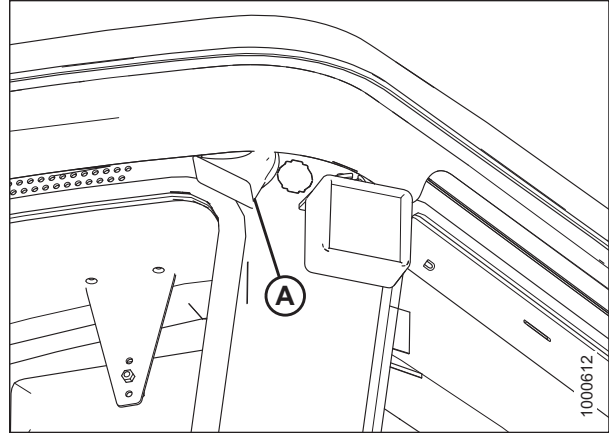


Figure 3.42: Horn Location

3.16 Engine Controls and Gauges

The ignition, fuel gauge, engine temperature gauge, and throttle are located on the operator's console.

IGNITION switch (A)

The features of the windrower that are active depend on the position of the ignition key:

- ACC (accessory): Features such as exterior lighting will be available in this mode. Turn the ignition key fully counterclockwise to activate this mode.
- OFF: One position clockwise of ACC. The engine and all accessories will be off when the key is in this position.
- RUN: The key will remain in this position after the engine has been started.
- START: Turn the ignition key fully clockwise to crank the engine. Once the engine has started, the key will sit in the RUN position.

NOTE:

Remove the key when the windrower is not in use; the key also locks the windrower's cab doors.

Engine coolant temperature gauge (B)

- Normal running temperature: 82°–104°C (180°–220°F)

NOTE:

For information about temperature warnings and alarms, refer to [Display Warnings and Alarms, page 79](#).

Fuel gauge (C)

- E: Empty
- F: Full

Throttle (D) controls the speed of the engine



Figure 3.43: Engine Controls and Gauges

3.17 Windrower Controls

The windrower controls on the operator's console allow the Operator to control the speed and direction of the windrower, as well as the turn signals and hazard lights.

Console controls

Turn signals (A): the turn signal switches activate the turning indicator lights on the windrower and the header. Each switch can be pushed to activate it, and pushed again to deactivate it.

Ground speed lever (GSL) (B): the GSL controls the windrower's speed and whether the windrower is moving forward or in reverse. The positions on the GSL lever are:

- F: Forward
- N: Neutral
- N-Detent: Engages the neutral interlock and applies the parking brake when the steering wheel is center-locked
- R: Reverse

Hazard warning lights (C): this switch allows the Operator to activate all of the hazard warning lights on the windrower and the header. It can be pushed to activate the hazard lights, and pushed again to deactivate them.

GROUND SPEED RANGE switch (D): this switch allows the Operator to change the transmission's speed range. The ranges which can be set are:

- High range: 0–37 km/h (23 mph) (engine-forward mode only)
- Mid range: 0–25.7 km/h (16 mph) (cab-forward mode only)
- Low range: 0–17.7 km/h (11 mph)

N-Detent (E): When the GSL is in this position, the neutral interlock is engaged, and when the steering wheel is centered and locked, the parking brake will be applied

Autosteer control

Autosteer engagement switch (A): This switch engages or disengages the automated steering system (if a compatible system is installed on the windrower). Press the switch to engage the autosteer system, and press it again or turn the steering wheel to disengage the autosteer system.

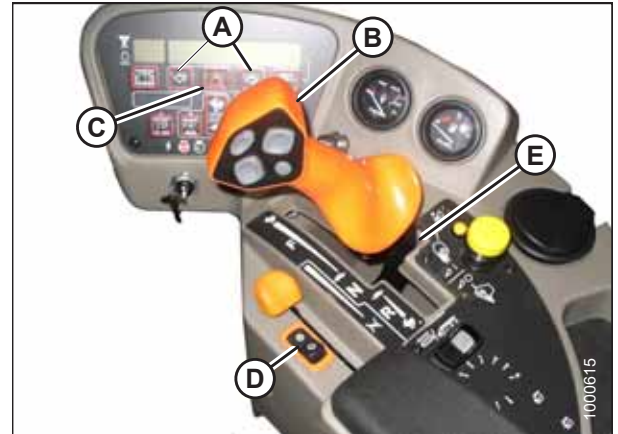


Figure 3.44: Console Controls

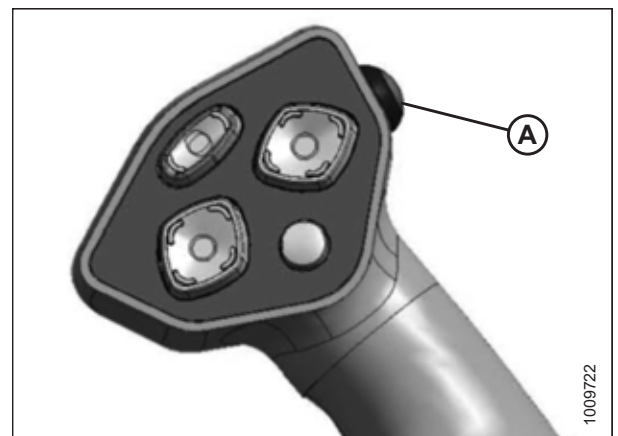


Figure 3.45: GSL

OPERATOR'S STATION

The autosteer engagement switch harness has two connectors:

GSL SW1 (A) is located in the cab, beneath the floor mat at the engine-end seat position switch.

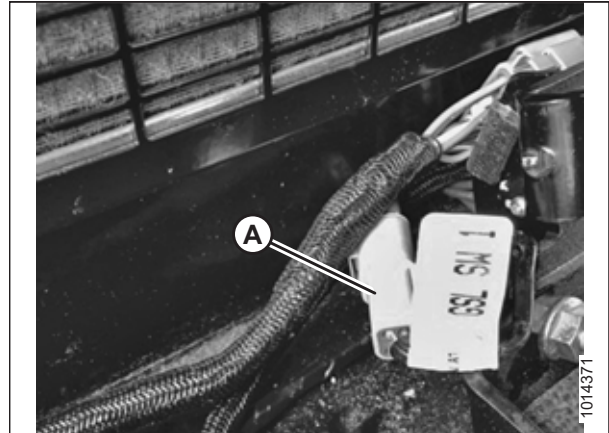


Figure 3.46: Autosteer Harness SW1

GSL SW2 (A) is located beneath the cab, between the fuel tank and the evaporator box.

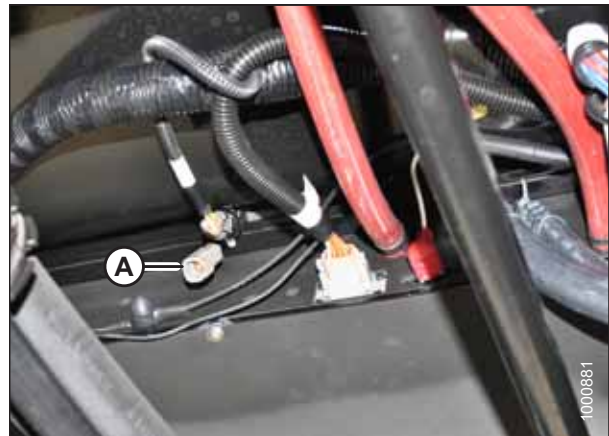


Figure 3.47: Autosteer Harness SW2

3.18 Header Controls

The Operator can control the header attached to the windrower by using the operator's console and the switches on the ground speed lever (GSL) handle.

NOTE:

Some features are only available when certain optional equipment is installed. Some controls may be installed but will be nonfunctional for certain header models.

Refer to [4 Operation, page 153](#) for instructions on operating specific header models.

3.18.1 Header Drive Switch

The header drive switch engages and disengages the header drive.

To engage the header drive, pull up on collar (B) and push down on switch (A).

To disengage the header drive, push the switch down.

IMPORTANT:

Always move the throttle lever back to the IDLE position before engaging the header drive. Do **NOT** engage the header when the engine is operating at any speed above idle.

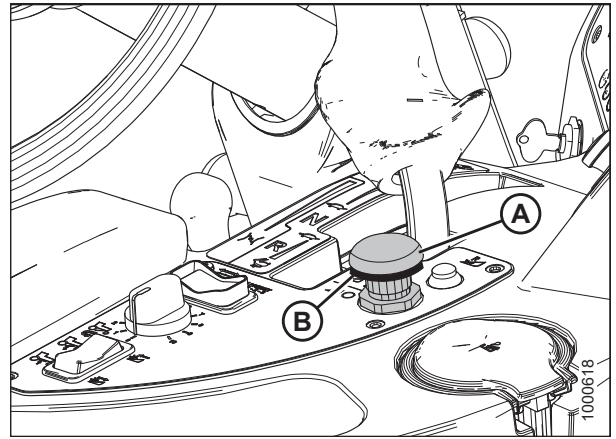


Figure 3.48: Header Drive Switch

3.18.2 Header Drive Reverse Button

The header drive reverse button allows the Operator to run the header in reverse. Typically, this is done to clear obstructions which prevent the header from operating properly.

NOTE:

Reversing an auger header or a draper header equipped with a conditioner requires the installation of a hydraulic reversing kit on the windrower. Contact your MacDon Dealer for more information.

- To engage the header and run it in reverse, push and hold REVERSER button (B), and engage the header by pushing switch (A).
- To disengage the header: Release REVERSER button (B)

NOTE:

To engage the header so that it runs in the forward direction, push switch (A) down and then up again.

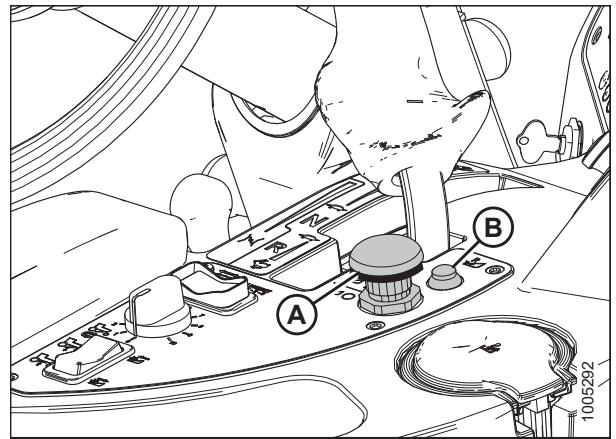


Figure 3.49: Header Drive Switches

3.18.3 Ground Speed Lever Header Switches

Header functions such as the display selection, reel position, header height, and the speed of the reel or discs can be controlled from the switches on the ground speed lever (GSL).

The switches on GSL (A) control the most common header functions.

NOTE:

Decal (B) identifies the functions of the switches on the GSL. Decal (B) can be found on the cab post above the operator's console.

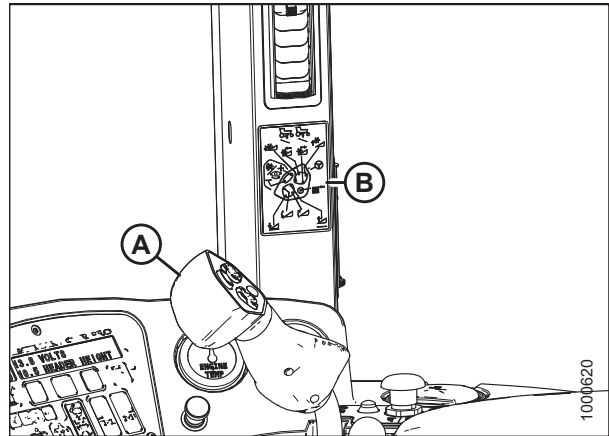


Figure 3.50: GSL

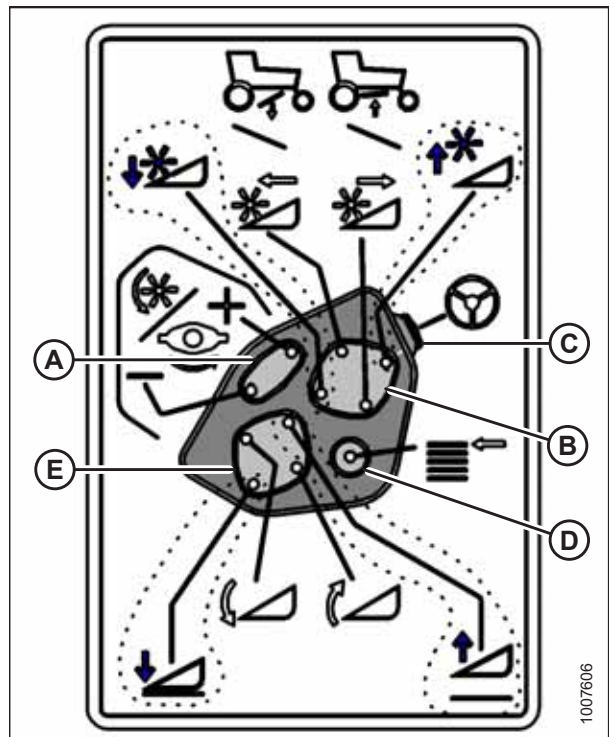


Figure 3.51: GSL Function Groups

- A - Reel Speed
- B - Reel Position
- C - Autosteer Engagement
- D - Display Selector
- E - Header Position

Display Selector Switch

The display selector switch allows the Operator to choose what information is displayed on the cab display module's (CDM) top line read-out.

Press switch (A) to scroll through the settings.

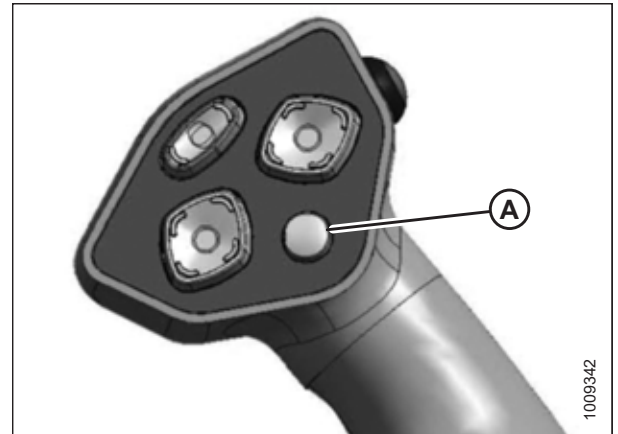


Figure 3.52: Ground Speed Lever

Header Position Switches

The header position switches on the ground speed lever (GSL) are used to adjust the height and angle of the header.

- To lower the header, press switch (A)
- To tilt the header down, press switch (B)
- To raise the header, press switch (C)
- To tilt the header up, press switch (D)

Release the switch when the header is at the desired position.

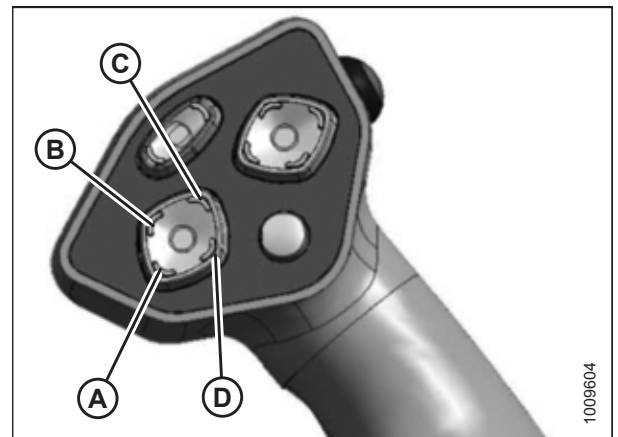


Figure 3.53: Ground Speed Lever

OPERATOR'S STATION

Reel and Disc Speed Switches

The reel speed switches are used to control the speed of the reel when a draper header is attached to the windrower. When other types of headers are attached to the windrower, the reel speed switches control different header functions.

Press and hold switch (A) to increase the reel or the disc speed.
Press and hold switch (B) to decrease the reel or the disc speed.
Release the switch when the feature is operating at the desired speed.

Reel speed switch functions by header type

Auger headers

- A30D Auger Header: the reel speed switches are not applicable in this application
- A40D Auger Header: the speed of the auger changes automatically when the speed of the reel is changed

IMPORTANT:

The reel speed on an auger header **MUST NOT EXCEED** 85 rpm. The auger speed **MUST NOT EXCEED** 320 rpm.

Draper headers

- The speed of the reel is controlled by the header index speed setting

Rotary disc headers

- The speed of the conditioner is automatically adjusted when the disc speed is changed

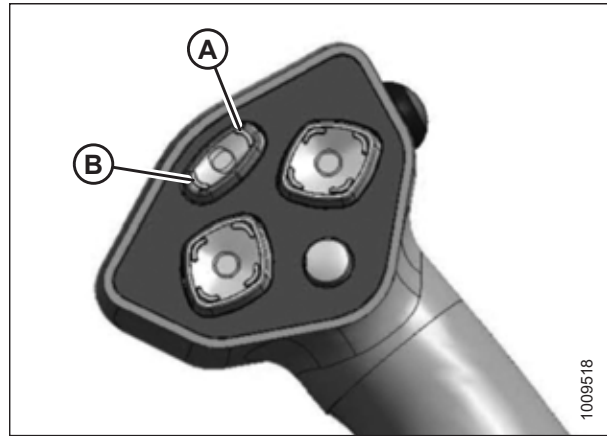


Figure 3.54: Ground Speed Lever

3.18.4 Console Header Switches

The operator's console allows the Operator to control the deck shift and float functions of the header. It is also used to control the Double Windrow Attachment (DWA) and the swath compressor, if these options have been installed on the windrower.

Deck Shift / Float Preset Switch

Depending on the particular configuration of your windrower, this part of the operator's console controls either the deck shift and float presets, or controls the float presets alone.

Draper header with the deck shift option installed

When a draper header with the deck shift option installed is attached to the windrower, this switch controls the deck shift and float settings for double windrowing options with a draper header.

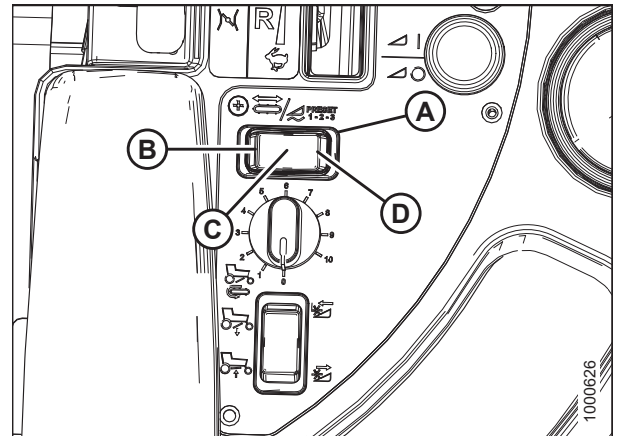


Figure 3.55: Header Switches

- A - Deck Shift / Float Preset Switch
- B - Left-Side Delivery
- C - Center Delivery
- D - Right-Side Delivery

Draper header with fixed decks / auger header / rotary disc header

When a fixed-deck draper header, auger header, or rotary disc header is attached to the windrower, this switch is used to select one of the preprogrammed header float settings. Refer to [Float Options, page 196](#) to learn how to configure these presets.

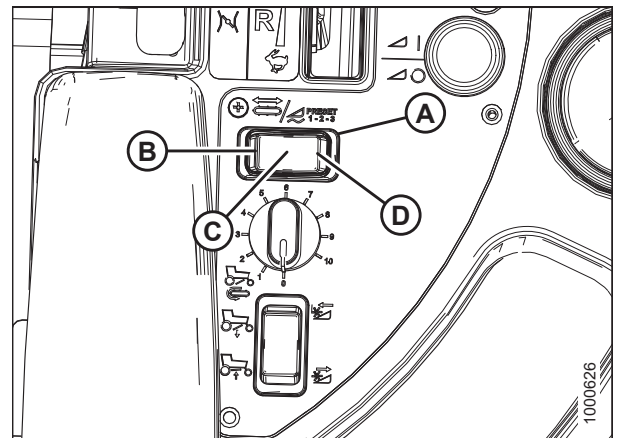


Figure 3.56: Header Switches

- A - Deck Shift / Float Preset Switch
- B - Float Preset 1
- C - Float Preset 2
- D - Float Preset 3

OPERATOR'S STATION

Double Windrow Attachment / Swath Compressor Switch – Option

The Double Windrow Attachment (DWA) / swath compressor switch can be used to control the position of the DWA or the swath compressor, depending on which option is installed on the windrower. These functions must be programmed into the cab display module (CDM) before the switch can be used.

If the windrower is equipped with a DWA:

- The DWA deck is raised when switch (A) is in position (C)
- The DWA deck is lowered when switch (A) is in position (B)

The CDM must be programmed for this configuration. For instructions, refer to [Configuring Double Windrow Attachment Controls, page 95](#).

Switch (A) may be used instead of the DWA switches on the ground speed lever (GSL). If using switch (A) is not desired, the controls can be swapped to the reel fore/aft buttons on the GSL.

Rotary switch (D) on the operator's console controls the speed of the DWA.

For more information on using the DWA attachment and its controls, refer to [4.4.11 Double Windrow Attachment, page 212](#).

If the windrower is equipped with a swath compressor attachment:

- The swath compressor is raised by pressing switch (A) to position (C)
- The swath compressor is lowered by pressing switch (A) to position (B)

NOTE:

When using the DWA, the Operator can choose to use either the rocker switch on the operator's console or the switches on the GSL handle. This option can be set in the CDM. For more information, refer to [3.19.6 Cab Display Module – Configuration Functions, page 82](#).

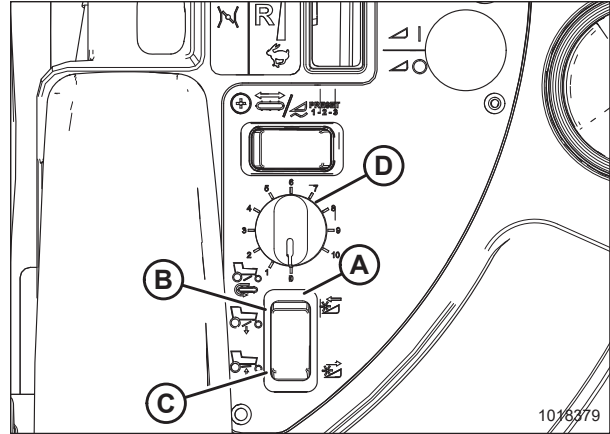


Figure 3.57: Console Switches

3.19 Cab Display Module

The cab display module (CDM) is a computer located on the windrower operator's console. It is used to configure and operate the windrower and its attachments. It also supplies the Operator with information about the windrower's performance and alerts them to any problems encountered during operation.

3.19.1 Engine and Windrower Functions

The cab display module (CDM) is used to control and report on several windrower functions, such as whether or not the hazard lights are on, and to report engine performance data such as engine speed to the Operator.

Figure 3.58: Cab Display Module (CDM) Engine and Windrower Functions



- ENGINE RPM (A)
- GROUND SPEED (B) – km/h or mph
- DISPLAY (C) – Reports windrower performance data
- HAZARD LIGHTS SWITCH (D) – Activates the hazard warning lights; can also be used to cancel an active turn signal
- SELECT SWITCH (E) – Allows the Operator to select a display item on the lower line. Push the switch to SELECT a highlighted option
- TURN SIGNAL SWITCHES (F) – Activates the turn signals on the windrower and on the header. Push the switch to turn the turn signal ON, and push it again to turn it OFF
- IGNITION SWITCH POSITIONS (G) – Depending on the position of the ignition key in the ignition cylinder, the relevant icon will be highlighted: Accessory / Stop / Run / Start
- ENGINE WARNING LIGHTS (H) – These lights report on the state of the engine, or offer warnings about its performance: Engine Pre-Heat / Water In Fuel / CAUTION / Stop Engine

3.19.2 Header Functions

Several header functions such as the header float and the speed of the auger or draper (depending on the type of header attached to the windrower) are controlled from the cab display module (CDM).

Figure 3.59: Cab Display Module (CDM)



- DISPLAY (A) – Reports header performance information.
- SELECT SWITCH (B) – Allows the Operator to select a display item on the lower line. Push the switch to select a highlighted option.
- FLOAT SWITCH (C) – Header right side: changes the header’s right float setting. If the deck shift option is installed on the attached header, individual float settings can be configured for each deck shift delivery position. Push + to increase the float; push – to decrease it.
- FLOAT SWITCH (D) – Header left side: changes the header’s left float setting. If the deck shift option is installed on the attached header, individual float settings can be configured for each deck shift delivery position. Push + to increase the float; push – to decrease it.

NOTE:

Refer to *Setting Float Options with Deck Shift, page 225* for more information on configuring the deck shift float presets.

- AUGER/DRAPER SPEED ADJUST (E): changes the auger or draper speed index when index switch (F) is set to ON. When index switch (F) is set to OFF, this switch is used to change the auger or draper speed. Push the upper switch to increase this setting; push the lower switch to decrease it.
- HEADER INDEX SWITCH (F): this switch is used to link the speed of the reel and the conveyor to the windrower’s ground speed (“speed indexing”). Push the switch to turn speed indexing on; push it again to turn speed indexing off.

NOTE:

Header index switch (F) will light up when speed indexing is enabled.

OPERATOR'S STATION

- RETURN-TO-CUT HEIGHT SWITCH (G): this switch allows the Operator to make use of the cutting height preset. Push the switch to enable this feature; push it again to disable it.

NOTE:

Return-to-cut height switch (G) will light up when this feature is enabled.

3.19.3 Operating Screens

The display screen on the cab display module (CDM) reports performance information about the windrower and its attached header. Information on the meaning of the messages seen on the upper and lower lines of the display is provided. The message categories in this section are organized according to the state of the windrower (for example, whether or not the engine is running) and the state of the header (for example, whether or not the header is engaged).



Figure 3.60: CDM Operating Screen

A - Display Selector for Upper Line
D - CDM Lower Line

B - Display
E - Display Selector for Lower Line

C - CDM Upper Line

Ignition ON, Engine Not Running

These are the messages which can appear in the cab display module (CDM) when the ignition key is in the RUN position, but the engine has not been started.

Display (Upper Line) (2–3 Seconds)	Description
HEADER DISENGAGED	Indicates that the HEADER DRIVE switch is OFF
IN PARK	Indicates that the ground speed lever (GSL) is in the N-DETENT position

OPERATOR'S STATION

Engine-Forward, Engine Running

These are the messages which can appear in the cab display module (CDM) when the windrower is in engine-forward mode and the engine is running.

Display	Description
ROAD GEAR (upper line)	Indicates that the windrower's transmission is in the HIGH range
#####.# ENGINE HRS (upper or lower line)	Displays the total engine operating time
#####.# UNIT HRS (upper or lower line)	Displays the total windrower operating time
#####.# HEADER HRS (upper or lower line)	Displays the total header operating time
##### TOTAL ACRES (upper or lower line) ##### TOTAL HECT (if metric)	Displays the total area cut by the machine
##.# HEADER HEIGHT (upper or lower line)	Displays the distance setting (00.0–10.0) between the cutterbar and the ground
##.# HEADER ANGLE (upper or lower line)	Displays the angle setting (00.0–10.0) of the header relative to the ground
### °C or F HYD OIL TEMP	Displays the temperature of the windrower's hydraulic oil
##.# VOLTS (upper or lower line)	Displays the engine electrical system's operating voltage
##.# SWATH COMPR HT	Displays the height setting of the swath compressor (00.0–10.0); fully raised is 0
SCROLL (lower line)	Causes the performance messages to display one after the other for two to three seconds at a time; press SELECT to cancel scroll mode

Cab-Forward, Engine Running, Header Disengaged

These are the messages which can appear in the cab display module (CDM) when the windrower is in cab-forward mod, the engine is running, and the header is disengaged.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Displays the total engine operating time
#####.# UNIT HRS	Displays the windrower's total operating time
#####.# HEADER HRS	Displays the header's total operating time
###.# SUB ACRES ###.# SUB HECTARES (if metric)	Displays the total area cut since the last reset was performed. To reset this value: set the CDM to display SUB ACRES on the lower line, then hold down the PROGRAM switch for five to seven seconds until the display resets
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Displays the total area cut by the machine
##.# HEADER HEIGHT	Displays the distance setting (00.0–10.0) between the cutterbar and the ground
##.# HEADER ANGLE	Displays the angle setting (00.0–10.0) of the header relative to the ground.
##.# L FLOAT R ##.#	Displays the float setting (0.0–10.0)
### °C or F HYD OIL TEMP	Displays the temperature of the hydraulic oil
##.# VOLTS	Displays the engine electrical system's operating voltage
##.# SWATH COMPR HT	Displays the height of the swath compressor (00.0–10.0); fully raised is 0
SCROLL (lower line)	Causes the performance messages to display one after the other for two to three seconds at a time; press SELECT to cancel scroll mode

OPERATOR'S STATION

Cab-Forward, Engine Running, Header Engaged, Auger Header Attached, Index Switch OFF

These are the messages which can appear in the cab display module (CDM) when the windrower is in cab-forward mode, the engine is running, the attached auger header is engaged, and the header index switch is set to the OFF state.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Displays the total engine operating time
#####.# UNIT HRS	Displays the windrower's total operating time
#####.# HEADER HRS	Displays the header's total operating time
##.# ACRES/HOUR ##.# HECTARES/HOUR (if Metric)	Displays the actual cutting rate in acres or hectares per hour
###.# SUB ACRES ###.# SUB HECTARES (if Metric)	Displays the total area cut since the last reset was performed. To reset this value: set the CDM to display SUB ACRES on the lower line, then hold down the PROGRAM switch for five to seven seconds until the display resets
##### TOTAL ACRES ##### TOTAL HECT (if Metric)	Displays the total area cut by the machine
##.## REEL RPM ##.## REEL SENSOR	Displays the reel's rotational speed in rpm This message appears if the reel speed sensor is disabled. The messages RPM and SENSOR appear alternately at one-second intervals
##.# AUGER SPEED	Displays the auger's rotational speed (4.7–9.9)
#### KNIFE SPEED #### KNIFE SENSOR	Displays the knife speed in strokes per minute This message appears if the knife speed sensor is disabled. The messages SPEED and SENSOR appear alternately at one-second intervals
##.# HEADER HEIGHT ##.# HEADER SENSOR	Displays the distance setting (00.0–10.0) between the cutterbar and the ground This message appears if the header height sensor is disabled. The messages HEIGHT and SENSOR appear alternately at one-second intervals
##.# HEADER ANGLE ##.# HEADER SENSOR	Displays the angle setting (00.0–10.0) of the header relative to the ground This message appears if the header angle sensor is disabled. The messages ANGLE and SENSOR appear alternately at one-second intervals
##.# L FLOAT R ##.# FLOAT SENS DISABLED	Displays the left and right float settings (0.0–10.0) This message appears if the float sensor is disabled
LOAD ■■■■ ####	This bar graph represents the hydraulic operating pressure of the circuit in which the hydraulic pressure sensor is installed. The bars will appear to be full if the preprogrammed overload pressure (17,237–34,474 kPa [2500–5000 psi]). is reached. If the hydraulic pressure sensor is disabled, this message will not appear ¹⁴
### °C or F HYD OIL TEMP ### °C or F HYD TEMP	Displays the temperature of the hydraulic oil This message appears if the temperature sensor is disabled. The messages TEMP and SENSOR appear alternately at one-second intervals
##.# VOLTS	Displays the engine electrical system's operating voltage

14. A sensor which can monitor the knife/conditioner circuit pressure can be installed as an optional kit. To monitor the hydraulic pressure of the reel/auger circuit, relocate the sensor per kit instruction MD #169031; this instruction is available from your MacDon Dealer.

OPERATOR'S STATION

Display (Lower or Upper Line)	Description
##.# SWATH COMPR HT SWATH CO SENSOR	Displays the swath compressor's height setting(00.0–10.0); fully raised is 0 This message appears if the swath compressor height sensor is disabled
SCROLL SUB-MENU (lower line only) #### KNIFE SPEED ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ ####	Displays the sub-menu after two to three seconds. Press SELECT to exit the sub-menu. Use the CDM switch to scroll through the sub-menu options

Cab-Forward, Engine Running, Header Engaged, Auger Header Attached, Index Switch ON

These are the messages which can appear in the cab display module (CDM) when the windrower is in cab-forward mode, the engine is running, the attached auger header is engaged, and the header index switch is set to the ON state.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Displays the total engine operating time
#####.# UNIT HRS	Displays the windrower's total operating time
#####.# HEADER HRS	Displays the header's total operating time
##.# ACRES/HOUR ##.# HECTARES/HOUR (if metric)	Displays the actual cutting rate in acres or hectares per hour
###.# SUB ACRES ###.# SUB HECTARES (if metric)	Displays the total area cut since the last reset was performed. To reset this value: set the CDM to display SUB ACRES on the lower line, then hold down the PROGRAM switch for five to seven seconds until the display resets
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Displays the total area cut by the machine
###.# REEL IND. ##.# REEL SENSOR	Displays the reel's indexed speed in rpm and the windrower's ground speed in mph or km/h This message appears if the reel sensor is disabled. The messages IND and SENSOR appear alternately at one-second intervals
##.# AUGER SPEED ##.# AUGER SENSOR	Displays the auger's rotational speed (4.7–9.9) This message appears if the auger speed sensor is disabled. The messages SPEED and SENSOR appear alternately at one-second intervals
#### KNIFE SPEED #### KNIFE SENSOR	Displays the knife speed in strokes per minute This message appears if the knife speed sensor is disabled. The messages SPEED and SENSOR appear alternately at one-second intervals
##.# HEADER HEIGHT ##.# HEADER SENSOR	Displays the distance setting (00.0–10.0) between the cutterbar and the ground This message appears if the header height sensor is disabled. The messages HEIGHT and SENSOR appear alternately at one-second intervals
##.# HEADER ANGLE ##.# TILT SENSOR	Displays the angle setting (00.0–10.0) of the header relative to the ground This message appears if the header angle sensor is disabled. The messages TILT and SENSOR appear alternately at one-second intervals
##.# L FLOAT R ##.# FLOAT SENS DISABLED	Displays the left and right float settings (0.0–10.0) This message appears if the float sensor is disabled

OPERATOR'S STATION

Display (Lower or Upper Line)	Description
LOAD ■■■■ ####	This bar graph represents the hydraulic operating pressure of the circuit in which the hydraulic pressure sensor is installed. The bars will appear to be full if the preprogrammed overload pressure (17,237–34,474 kPa [2500–5000 psi]) is reached. If the hydraulic pressure sensor is disabled, this message will not appear ¹⁵
### °C or F HYD OIL TEMP ### °C or F HYD TEMP	Displays the temperature of the hydraulic oil This message appears if the temperature sensor is disabled. The messages TEMP and SENSOR appear alternately at one-second intervals
##.# VOLTS	Displays the engine electrical system's operating voltage
##.# SWATH COMPR HT SWATH CO SENSOR	Displays the swath compressor's height setting(00.0–10.0); fully raised is 0 This message appears if the swath compressor height sensor is disabled
SCROLL SUB-MENU (lower line only) #### KNIFE SPEED ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ ####	Displays the sub-menu after two to three seconds. Press SELECT to exit the sub-menu. Use the CDM switch to scroll through the sub-menu options

Engine Running, Header Engaged, Auger Header

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time
#####.# UNIT HRS	Total windrower operating time
#####.# HEADER HRS	Total header operating time
##.# ACRES/HOUR ##.# HECTARES/HOUR (if metric)	Actual cutting rate in acres (hectares)/hour
###.# SUB ACRES ###.# SUB HECTARES (if Metric)	Area cut since last reset
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Total area cut by machine
##.## REEL RPM ##.## REEL SENSOR (flashing)	Reel rotational speed. Optional Sensor disabled.
##.# AUGER SPEED	Auger rotational speed (4.7–9.9)
#### KNIFE SPEED #### KNIFE SENSOR (flashing)	Knife speed In strokes per minute. Optional Sensor disabled
##.# HEADER HEIGHT ##.# HEADER SENSOR (flashing)	Distance setting (00.0–10.0) between cutterbar and ground Sensor disabled
##.# HEADER ANGLE ##.# ANGLE SENSOR	Angle setting (00.0–10.0) header relative to ground. Optional Sensor disabled
##.# VOLTS	Engine electrical system operating voltage
FUEL ■■■■ ■■■■	Level of fuel in tank

15. A sensor which can monitor the knife/conditioner circuit pressure can be installed as an optional kit. To monitor the hydraulic pressure of the reel/auger circuit, relocate the sensor per kit instruction MD #169031; this instruction is available from your MacDon Dealer.

OPERATOR'S STATION

Display (Lower or Upper Line)	Description
ENGINE TEMP ### °F ENGINE TEMP ### °C (if metric)	Engine coolant temperature
SCROLL SUB-MENU (lower line only) #### KNIFE SPEED ##.# AUGER SPEED ##.### REEL RPM ##.# HEADER HEIGHT	Displays sub-menu after 2–3 seconds. Press SELECT to cancel. Scroll through sub-menu display with CDM switch Knife speed is optional Reel rpm is optional

Cab-Forward, Engine Running, Header Engaged, Draper Header Attached, Index Switch OFF

These are the messages which can appear in the cab display module (CDM) when the windrower is in cab-forward mode, the engine is running, the attached draper header is engaged, and the header index switch is set to the OFF state.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Displays the total engine operating time
#####.# UNIT HRS	Displays the windrower's total operating time
#####.# HEADER HRS	Displays the header's total operating time
##.# ACRES/HOUR ##.# HECTARES/HOUR (if metric)	Displays the actual cutting rate in acres or hectares per hour
###.# SUB ACRES ###.# SUB HECTARES (if metric)	Displays the total area cut since the last reset was performed. To reset this value: set the CDM to display SUB ACRES on the lower line, then hold down the PROGRAM switch for five to seven seconds until the display resets
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Displays the total area cut by the machine
##.### REEL MPH ##.### REEL KPH (if metric) ##.### REEL SENSOR (flashing)	Displays the reel's peripheral speed in miles per hour or kilometers per hour. This message appears if the reel sensor is disabled. The messages MPH / KPH and SENSOR appear alternately at one-second intervals
##.# DRAPER SPEED	Displays the speed of the draper (0.0–11.0)
#### KNIFE SPEED #### KNIFE SENSOR	Displays the knife speed in strokes per minute This message appears if the knife speed sensor is disabled. The messages SPEED and SENSOR appear alternately at one-second intervals
##.# HEADER HEIGHT ##.# HEADER SENSOR	Displays the distance setting (00.0–10.0) between the cutterbar and the ground This message appears if the header height sensor is disabled. The messages HEIGHT and SENSOR appear alternately at one-second intervals
##.# HEADER ANGLE ##.# HEADER SENSOR	Displays the angle setting (00.0–10.0) of the header relative to the ground This message appears if the header angle sensor is disabled. The messages ANGLE and SENSOR appear alternately at one-second intervals
##.# L FLOAT R ##.# FLOAT SENS DISABLED	Displays the left and right float settings (0.0–10.0) This message appears if the float sensor is disabled
### °C or F HYD OIL TEMP ### °C or F HYD SENSOR	Displays the temperature of the hydraulic oil This message appears if the temperature sensor is disabled. The messages TEMP and SENSOR appear alternately at one-second intervals

OPERATOR'S STATION

Display (Lower or Upper Line)	Description
LOAD ■■■■ ####	This bar graph represents the hydraulic operating pressure of the circuit in which the hydraulic pressure sensor is installed. The bars will appear to be full if the preprogrammed overload pressure (17,237–34,474 kPa [2500–5000 psi]) is reached. If the hydraulic pressure sensor is disabled, this message will not appear ¹⁶
##.# VOLTS	Displays the engine electrical system's operating voltage
##.# SWATH COMPR HT SWATH CO SENSOR	Displays the swath compressor's height setting(00.0–10.0); fully raised is 0 This message appears if the swath compressor height sensor is disabled
SCROLL SUB-MENU (lower line only) #### KNIFE SPEED ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ #### ##.## REEL MPH ##.# DRAPER SPEED	Displays the sub-menu after two to three seconds. Press SELECT to exit the sub-menu. Use the CDM switch to scroll through the sub-menu options
KNIFE SPD OVERLOAD	This message appears if the knife speed drops below its programmed threshold value

Cab-Forward, Engine Running, Header Engaged, Draper Header Attached, Index Switch ON

These are the messages which can appear in the cab display module (CDM) when the windrower is in cab-forward mode, the engine is running, the attached draper header is engaged, and the header index switch is set to the ON state.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Displays the total engine operating time
#####.# UNIT HRS	Displays the windrower's total operating time
#####.# HEADER HRS	Displays the header's total operating time
##.# ACRES/HOUR ##.# HECTARES/HOUR (if metric)	Displays the actual cutting rate in acres or hectares per hour
###.# SUB ACRES ###.# SUB HECTARES (if metric)	Displays the total area cut since the last reset was performed. To reset this value: set the CDM to display SUB ACRES on the lower line, then hold down the PROGRAM switch for five to seven seconds until the display resets
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Displays the total area cut by the machine
##.## ##.# REEL IND REEL.SENSOR	Displays the reel's indexed speed in rpm and the windrower's ground speed in mph or km/h This message appears if the reel sensor is disabled. The messages IND and SENSOR appear alternately at one-second intervals
##.# ##.# DRAP INDX	Displays the indexed speed of the draper in rpm and the windrower's ground speed in mph or km/h
#### KNIFE SPEED #### KNIFE SENSOR	Displays the knife speed in strokes per minute This message appears if the knife speed sensor is disabled. The messages SPEED and SENSOR appear alternately at one-second intervals

16. A sensor which can monitor the knife/conditioner circuit pressure can be installed as an optional kit. To monitor the hydraulic pressure of the reel/auger circuit, relocate the sensor per kit instruction MD #169031; this instruction is available from your MacDon Dealer.

OPERATOR'S STATION

Display (Lower or Upper Line)	Description
###.# HEADER HEIGHT ###.# HEADER SENSOR	Displays the distance setting (00.0–10.0) between the cutterbar and the ground This message appears if the header height sensor is disabled. The messages HEIGHT and SENSOR appear alternately at one-second intervals
###.# HEADER ANGLE ###.# HEADER SENSOR	Displays the angle setting (00.0–10.0) of the header relative to the ground This message appears if the header angle sensor is disabled. The messages ANGLE and SENSOR appear alternately at one-second intervals
###.# L FLOAT R ###.# FLOAT SENS DISABLED	Displays the left and right float settings (0.0–10.0) This message appears if the float sensor is disabled
LOAD ■■■■ ####	This bar graph represents the hydraulic operating pressure of the circuit in which the hydraulic pressure sensor is installed. The bars will appear to be full if the preprogrammed overload pressure (17,237–34,474 kPa [2500–5000 psi]) is reached. If the hydraulic pressure sensor is disabled, this message will not appear ¹⁷
###.# VOLTS	Displays the engine electrical system's operating voltage
###.# SWATH COMPR HT SWATH CO SENSOR	Displays the swath compressor's height setting(00.0–10.0); fully raised is 0 This message appears if the swath compressor height sensor is disabled
SCROLL SUB-MENU (lower line only) #### KNIFE SPEED ###.# HEADER HEIGHT LOAD ■■■■ ■■■■ ###.# ###.# REEL IND ###.# ###.# DRAP INDX	Displays the sub-menu after two to three seconds. Press SELECT to exit the sub-menu. Use the CDM switch to scroll through the sub-menu options
###.# REEL MIN RPM (lower line)	This message appears if the reel speed drops below its programmed threshold value
MINIMUM (lower line)	Displays the reel speed when the windrower is stationary

Cab-Forward, Engine Running, Header Engaged, Rotary Disc Header Attached

These are the messages which can appear in the cab display module (CDM) when the windrower is in cab-forward mode, the engine is running, and the attached rotary header is engaged.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Displays the total engine operating time
#####.# UNIT HRS	Displays the windrower's total operating time
#####.# HEADER HRS	Displays the header's total operating time
###.# ACRES/HOUR ###.# HECTARES/HOUR (if metric)	Displays the actual cutting rate in acres or hectares per hour
###.# SUB ACRES ###.# SUB HECTARES (if metric)	Displays the total area cut since the last reset was performed. To reset this value: set the CDM to display SUB ACRES on the lower line, then hold down the PROGRAM switch for five to seven seconds until the display resets
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Displays the total area cut by the machine

17. A sensor which can monitor the knife/conditioner circuit pressure can be installed as an optional kit. To monitor the hydraulic pressure of the reel/auger circuit, relocate the sensor per kit instruction MD #169031; this instruction is available from your MacDon Dealer.

OPERATOR'S STATION

Display (Lower or Upper Line)	Description
#### DISC RPM ##.## DISC SENSOR	Displays the rotational speed of the disc This message appears if the disc speed sensor is disabled. The messages RPM and SENSOR appear alternately at one-second intervals
##.# HEADER HEIGHT ##.# HEIGHT SENSOR	Displays the distance setting (00.0–10.0) between the cutterbar and the ground This message appears if the header height sensor is disabled. The messages HEIGHT and SENSOR appear alternately at one-second intervals
##.# HEADER ANGLE ##.# HEADER SENSOR	Displays the angle setting (00.0–10.0) of the header relative to the ground This message appears if the header angle sensor is disabled. The messages ANGLE and SENSOR appear alternately at one-second intervals
##.# L FLOAT R ##.# FLOAT SENS DISABLED	Displays the left and right float settings (0.0–10.0) This message appears if the float sensor is disabled
LOAD ■■■■ ####	This bar graph represents the hydraulic operating pressure of the circuit in which the hydraulic pressure sensor is installed. The bars will appear to be full if the preprogrammed overload pressure (17,237–34,474 kPa [2500–5000 psi]) is reached. If the hydraulic pressure sensor is disabled, this message will not appear ¹⁸
### °C or F HYD OIL TEMP ### °C or F HYD TEMP	Displays the left and right float settings (0.0–10.0) This message appears if the temperature sensor is disabled. The messages TEMP and SENSOR appear alternately at one-second intervals
##.# VOLTS	Displays the engine electrical system's operating voltage
##.# SWATH COMPR HT SWATH CO SENSOR	Displays the swath compressor's height setting(00.0–10.0); fully raised is 0 This message appears if the swath compressor height sensor is disabled
SCROLL SUB-MENU (lower line only) #### DISC RPM ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ ####	Displays the sub-menu after two to three seconds. Press SELECT to exit the sub-menu. Use the CDM switch to scroll through the sub-menu options

Miscellaneous Operational Information

These messages can appear on the cab display module's (CDM) display screen when the windrower is in various operational states.

Display (Upper Line)	Description
HEADER DISENGAGED	Indicates that the header drive is disengaged
##.# FOOT DISK	Indicates the size of the header attached to the windrower. AUGER or DRAPER will appear in place of DISK, depending on type of header attached
IN PARK	Indicates that the GSL is in the N-DETENT position
< LEFT TURN ■	Indicates that the left turn indicator system is active. This message appears when the left turn arrow on the CDM is pressed when the windrower is in engine-forward mode. ¹⁹⁾

18. A sensor which can monitor the knife/conditioner circuit pressure can be installed as an optional kit. To monitor the hydraulic pressure of the reel/auger circuit, relocate the sensor per kit instruction MD #169031; this instruction is available from your MacDon Dealer.

19. If the windrower's road light kit is not installed, the CDM will display the error message E135 LEFT STOP LAMP when the windrower is in cab-forward mode.

OPERATOR'S STATION

Display (Upper Line)	Description
■ RIGHT TURN >	Indicates that the right turn indicator system is active. This message appears when the right turn arrow on the CDM is pressed when the windrower is in engine-forward mode. ²⁰⁾
■ HAZARD ■	Indicates that the hazard light system is active
HEADER REVERSE	Indicates that the header drive is running in reverse
HEADER ENGAGED	Indicates that the header drive is engaged
ROAD GEAR	This message appears when HIGH RANGE is selected on the console switch

3.19.4 Cab Display Module Warning and Alarms

The cab display module (CDM) displays warnings and sounds alarms to notify the Operator of abnormal operating states.

Engine Warning Lights

The engine warning lights on the cab display module (CDM) allow the Operator to determine the operating state of the engine at a glance.



Figure 3.61: CDM Engine Warning Lights

A - Engine Preheat
D - Stop

B - Water in Fuel
E - Display

C - Caution

- **ENGINE PRE-HEAT:** Yellow light. Indicates that the engine's glow plugs are warming the cylinders. The Operator should wait until this light darkens to start the engine.
- **WATER IN FUEL:** Yellow light. Indicates that the windrower's fuel system should be serviced.
- **CAUTION:** Yellow light. Indicates that the engine requires prompt attention. Refer to the error code displayed on the CDM for more information.

20. If the windrower's road light kit is not installed, the CDM will display the error message E134 RIGHT STOP LAMP when the windrower is in cab-forward mode.

OPERATOR'S STATION

- **STOP:** Red light. Indicates that the Operator should stop the engine **IMMEDIATELY**. Refer to the error code displayed on the CDM for more information.
- **DISPLAY:** Displays error codes. To learn the precise meaning of an error code, refer to [9.4 Engine Error Codes, page 534](#) or contact your MacDon Dealer.

Display Warnings and Alarms

Refer to this table to learn the precise meaning of the alarms, lights, and error messages produced by the cab display module (CDM).



Figure 3.62: CDM Display Warnings and Alarms

Display (A)	Flashing	Alarm Tone	Description
BRAKE OFF	X	Short beep accompanies each flash	Engine is running, GSL is in the N-DETENT position. Indicates a brake pressure switch or brake switch relay fault
BRAKE ON	X	Short beep accompanies each flash	Ground speed lever (GSL) out of the N-DETENT position, but the interlock switch remains closed when the brake is applied
BRAKE SW FAILURE	X	Short beep accompanies each flash	Ignition is in the ON position, the engine is not running, and the brake switch and relay are closed
CAB-FORWARD SW ON/ ENG-FORWARD SW ON	X	Messages flash alternately	Both seat switches activated
CENTER STEERING		Two beeps per second	GSL or interlock switches are not closed when the key is in the ON position while the engine is OFF.

OPERATOR'S STATION

Display (A)	Flashing	Alarm Tone	Description
DISENGAGE HEADER RE-ENGAGE <1800 RPM>	X	None	R80/R85 - Engine rpm above 1800 rpm when attempting to engage the header
ENGINE AIR FILTER	X	Single loud tone for ten seconds; tone repeats every 30 minutes until the condition is corrected	Engine air filter requires servicing
ENGINE TEMPERATURE	X	Ongoing intermittent moderate tone until temperature is below 102°C (215°F)	Engine coolant temperature is greater than 104°C (220°F)
HEADER DISENGAGED		None	Normal operating condition
DISENGAGE HEADER	X	None	Header switch is in the ON position when the Operator is attempting to start the engine
HEADER OIL PRESS	X	Continuous loud tone until oil pressure is regained	Low header charge oil pressure causes the header to shut down. The header's ON switch must be moved to the OFF position and then again to the ON position to restart the header
HYDRAULIC FILTER	X	Single loud tone for ten seconds, Repeats every 15 minutes until the condition is corrected	Excessive pressure increase across the hydraulic oil filter
### °C or F HYD OIL COLD	X	Tone sounds with each flash for 5 seconds and then stops for 1 minute, flashing continues if oil still cold after 1 minute, tone sounds again	Hydraulic oil temperature is less than 10°C (50°F)
### °C or F HYD OIL HOT	X	Tone accompanies each flash for five seconds at 104°C (220°F) then tone stops for 1 minute while flashing continues. If oil still hot after one minute, the tone will sound again. At temperatures of 110°C (230°F) and higher, the light will continue to flash accompanied by a steady tone	Hydraulic oil temperature is more than 104°C (220°F) but less than 110°C (230°F)
IN PARK	X	One short beep	GSL in N-DETENT, steering wheel centered, and brakes are engaged
KNIFE SPEED OVERLOAD	X	Short beep accompanies each flash until the condition is corrected	Machine overload: the knife or disc speed has dropped below its programmed threshold value
LOCK SEAT BASE	X	None	Seat base not detected in cab or engine-forward position
LOW HYDRAULIC OIL	X	Continuous loud tone for five seconds. If the condition is not corrected, a single loud tone will continue to sound every five minutes	Low hydraulic oil level. The header will shut down automatically if it is engaged. The header ON switch must be moved to the OFF position and then again to the ON position to restart the header

OPERATOR'S STATION

Display (A)	Flashing	Alarm Tone	Description
NO HEADER		None	Attached header is not detected
NO OPERATOR		Continuous tone	Operator not detected in seat when the header is engaged, or when the GSL is out of the N-DETENT position. The engine will shut down after five seconds
NO OPERATOR ENGINE SHUT DOWN		Continuous tone	Operator not detected in seat when the machine's ground speed is less than 8 km/h (5 mph). The engine will shut down.
NOT IN PARK	X	Short beep with each flash	GSL or interlock switches not closed when the ignition key is in the ON position while the engine is OFF
PLACE GSL INTO N		Two beeps per second	GSL or interlock switches not closed when the ignition key is in the ON position while the engine is OFF
SLOW DOWN	X	Short beep with each flash	Ground speed is greater than or equal to 40 km/h (25 mph). The Operator should reduce the windrower's ground speed
TRANS OIL PRESS	X	Continuous loud tone until oil pressure is regained	Low transmission charge oil pressure
##.# LOW VOLTS	X	Single loud tone for 10 seconds	Voltage below 11.5
##.# HIGH VOLTS	X	Single loud tone for 10 seconds	Voltage above 15.5

3.19.5 Cab Display Module – Configuration Guidelines

To ensure accurate monitoring, every header attached to the windrower must be configured in the cab display module (CDM).

Use the following guidelines when configuring the CDM:

- The header **MUST** be attached to the windrower for the CDM to recognize the type of header.
- The transmission **MUST** be in neutral (that is, the GSL must be in the N-DETENT position) in order for the Operator to be able to configure the system while the engine is running.
- The ignition switch **MUST** be in the RUN position in order for the Operator to be able to configure the system when the engine is not running.
- A given header only needs to be configured once in the CDM. Most operation parameters are set at the factory, but the Operator can make changes to suit local conditions or to take account of modifications made to the header.
- Windrower input values are provided in this manual. Header function values can be found in the header operator's manual.
- The CDM **MUST** be set to programming mode to view the programming menus. Press PROGRAM and SELECT simultaneously on the CDM to enter programming mode. Exit programming mode at any time by pressing PROGRAM or by turning the ignition key to the OFF position.
- Refer to [3.19.6 Cab Display Module – Configuration Functions, page 82](#) for a detailed list of programming menu items.

NOTE:

Contact your MacDon Dealer for information about software updates to the electronic modules. Your Dealer will have access to the latest software upgrades and the necessary interface tools to install the software.

3.19.6 Cab Display Module – Configuration Functions

Use the cab display module's (CDM) configuration functions to set up the windrower, to change the appearance of the CDM itself, to enter diagnostic mode, and to calibrate the header sensors.



Figure 3.63: CDM

A - Side Display

B - Main Display

C - Select Switch

D - Menu Item Scroll Forward

E - Menu Item Scroll Backward

F - Program Switch

Side display: Displays the current revision level of the windrower's operating software.

- Upper line – C### (CDM software revision level)
- Lower line – M### (Windrower control module [WCM] software revision level)

Main display: Displays potential menu items and the current selection.

NOTE:

The current selection will flash.

- Upper line – Menu item
- Lower line – Current selection

Select switch: Pressing this switch along with the PROGRAM switch puts the CDM into programming mode. Press SELECT to accept the highlighted menu item and to advance the selection to the next item.

Menu item scroll forward: Displays the value of the currently selected menu item.

- Push the MENU ITEM SCROLL FORWARD button to scroll forward
- Hold the MENU ITEM SCROLL FORWARD button down to scroll rapidly

NOTE:

Fast scroll is available only when the Operator is changing the KNIFE SPEED, OVERLOAD PRESSURE, or TIRE SIZE settings.

Menu item scroll backward: Displays the value of the currently selected menu item.

- Push the MENU ITEM SCROLL BACKWARD button to scroll backward

OPERATOR'S STATION

- Hold down the MENU ITEM SCROLL BACKWARD button to scroll rapidly

NOTE:

Fast scroll is available only when the Operator is changing the KNIFE SPEED, OVERLOAD PRESSURE, or TIRE SIZE settings.

Program Switch: Pressing this switch along with the SELECT switch puts the CDM into programming mode.

NOTE:

Contact your MacDon Dealer for information about software updates to the electronic modules. Your Dealer will have access to the latest software upgrades and the necessary interface tools to install the software.

NOTE:

The following menus are available when the ignition key is in the RUN position:

- WINDROWER SETUP
- CAB DISPLAY SETUP
- DIAGNOSTIC MODE

The CALIBRATE SENSORS menu is available only when the engine is running.

3.19.7 Cab Display Options

The cab display module's (CDM) display settings, including the units of measurement, buzzer volume, and lighting options, can be changed by accessing the CDM's CAB DISPLAY SETUP menu.

NOTE:

The following procedures are current for CDM software version C512 and windrower control module (WCM) M236. The WCM is supplied with the latest released version of the operating software already installed. Any subsequent updates will be made available on the MacDon Dealer Portal (<https://portal.macdon.com>).

NOTE:

The menus in the CDM in your windrower may differ from those depicted in the illustrations in this manual if your CDM or WCM have different software versions installed. In addition, not all features are available on every machine.

Setting Cab Display Language

The cab display module's (CDM) language settings can be changed by accessing the CDM's DISPLAY LANGUAGE sub-menu in the CAB DISPLAY SETUP menu.

1. Turn the ignition key to the RUN position, or start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the cab display module (CDM) to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.64: Windrower Setup Display

OPERATOR'S STATION

3. Press SELECT (A) until CAB DISPLAY SETUP? appears on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.65: Cab Setup Display

4. Press right arrow (C) to select YES. Press SELECT (D).
 - DISPLAY LANGUAGE? will appear on the upper line.
 - Default language will appear on the lower line.
5. Press left arrow (B) or right arrow (C) to select your preferred language.

NOTE:

The available languages are English, Russian, and Spanish.

6. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next CAB DISPLAY SETUP? action.



Figure 3.66: Language Display

Changing Windrower Display Units

The cab display module (CDM) can be configured so that units of measurement are displayed in metric or in standard (imperial) format.

1. Turn the ignition key to the RUN position, or start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.67: CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until CAB DISPLAY SETUP? is displayed on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).
 - DISPLAY LANGUAGE? will appear on the upper line.



Figure 3.68: Cab Display Setup

5. Press SELECT (D) until DISPLAY UNITS? appears on the upper line.
 - The current setting will appear on the lower line.
6. Press left arrow (B) or right arrow (C) to select either METRIC or IMPERIAL.
7. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next CAB DISPLAY SETUP? option.



Figure 3.69: Display Units

Adjusting Cab Display Buzzer Volume

The volume level of the alert tones generated by the cab display module (CDM) can be changed by accessing the BUZZER VOLUME sub-menu in the CAB DISPLAY SETUP menu.

1. Turn the ignition key to the RUN position, or start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the cab display module (CDM) to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.70: CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until CAB DISPLAY SETUP? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).
 - DISPLAY LANGUAGE? will appear on the upper line.



Figure 3.71: Cab Display Setup

5. Press SELECT (D) until BUZZER VOLUME appears on the upper line.
 - The current setting will appear on the lower line.
6. Press left (B) or right (C) arrows to adjust the buzzer volume to the preferred level.
7. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next CAB DISPLAY SETUP? option.



Figure 3.72: Buzzer Volume

Adjusting Cab Display Backlighting

The cab display module (CDM) is equipped with a backlight, which makes it easier to read the display in low-light situations. The degree of backlighting can be changed by accessing the BACKLIGHTING sub-menu in the CAB DISPLAY SETUP menu.

1. Turn the ignition key to the RUN position, or start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the cab display module (CDM) to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.73: CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until CAB DISPLAY SETUP? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).
 - DISPLAY LANGUAGE? will appear on the upper line.



Figure 3.74: Cab Display Setup

5. Press SELECT (D) until BACKLIGHTING appears on the upper line.
 - The current setting will appear on the lower line.
6. Press left arrow (B) or right arrow (C) to adjust the degree of backlighting.
7. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next CAB DISPLAY SETUP? option.



Figure 3.75: Display Backlighting Setting

Adjusting Cab Display Contrast

Contrast is the degree of difference between the lightest and darkest colours a display can produce. The contrast of the cab display module's (CDM) display screen can be adjusted by accessing the DISPLAY CONTRAST sub-menu in the CAB DISPLAY SETUP menu.

1. Turn the ignition key to the RUN position, or start the engine.
2. Press PROGRAM (A) and SELECT (B) on the cab display module (CDM) to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.76: CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until CAB DISPLAY SETUP? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).
 - DISPLAY LANGUAGE? will appear on the upper line.



Figure 3.77: Cab Display Setup

5. Press SELECT (D) until DISPLAY CONTRAST appears on the upper line.
 - The current setting will appear on the lower line.
6. Press the left (B) or the right (C) arrow to adjust the CDM's contrast setting.
7. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next CAB DISPLAY SETUP? option.



Figure 3.78: Display Contrast Setting

3.19.8 Configuring Windrower

The Operator can configure several windrower, header, and other attachment performance options using the cab display module (CDM).

Setting Header Knife Speed

The speed of the knife on non-rotary headers can be set by accessing the cab display module's (CDM) SET KNIFE SPEED sub-menu, in the WINDROWER SETUP menu.

NOTE:

The header **MUST** be physically attached and hydraulically and electrically connected to the windrower before the Operator can perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).

OPERATOR'S STATION

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear.
 - The current knife speed will appear on the lower line.



Figure 3.79: CDM Programming Buttons

4. Press left arrow (B) or right arrow (C) to select knife speed. Press SELECT (D).
5. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP action.



Figure 3.80: Knife Speed Setting

Setting Knife Overload Speed

The knife overload speed setting determines the reported header knife speed at which a knife overload speed warning will appear on the cab display module (CDM). By default, this is 75% of the configured header knife speed, but this setting can be changed by accessing the KNIFE OVERLOAD SPD sub-menu in the WINDROWER SETUP menu.

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module automatically adjusts its programming for each header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).
- The recommended knife overload speed is 75% of knife speed.

OPERATOR'S STATION

To set the knife overload speed:

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear.



Figure 3.81: CDM Programming Buttons

4. Press SELECT (D) until KNIFE OVERLOAD SPD? appears on the upper line.
 - The currently configured knife overload speed will appear on the lower line.

NOTE:

The default knife overload speed setting is -300 strokes per minute (spm). The possible input range is -500 to -100 spm.

5. Press left arrow (B) or right arrow (C) to set the knife overload speed. Press SELECT (D).
6. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.82: Knife Overload Speed

Setting Rotary Disc Overload Speed

The rotary disc overload speed setting determines the reported rotary disc speed at which a disc overload speed warning will appear on the cab display module (CDM). By default, this is 75% of the configured rotary disc speed, but this setting can be changed by accessing the DISC OVERLOAD SPD sub-menu in the WINDROWER SETUP menu.

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).
- The recommended disc overload speed is 75% of the configured disc speed. For more information, refer to the rotary disc header operator's manual to determine the appropriate disc overload speed setting.

OPERATOR'S STATION

To set the rotary disc overload speed:

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear.

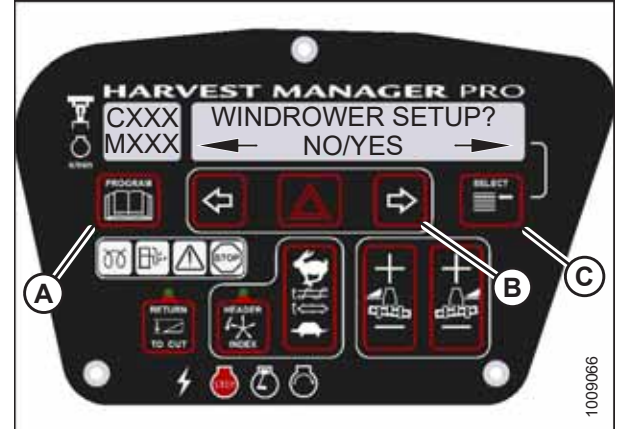


Figure 3.83: CDM Programming Buttons

4. Press SELECT (D) until DISC OVERLOAD SPD? appears on the upper line.
 - The current rotary disc overload speed will appear on the lower line.

NOTE:

The default setting is -300 rpm. The range of possible disc overload speeds is -500 to -100 rpm.

5. Press left (B) or right (C) arrows to set the disc overload speed. Press SELECT (D).
6. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.84: Disc Overload Speed

Setting Hydraulic Overload Pressure

The hydraulic overload pressure setting determines the reported hydraulic pressure at which an overload pressure warning will appear on the cab display module (CDM). This setting can be changed by accessing the OVERLOAD PRESSURE sub-menu in the WINDROWER SETUP menu.

NOTE:

- This procedure requires the installation of the optional hydraulic pressure sensor kit (B5574). For the appropriate overload pressure value, refer to the pressure sensor installation instructions supplied with the kit.
- To enable the hydraulic pressure sensor, refer to *Enabling or Disabling Header Sensors, page 129*.

OPERATOR'S STATION

To set the hydraulic overload pressure setting:

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) simultaneously on the cab display module (CDM) to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear.

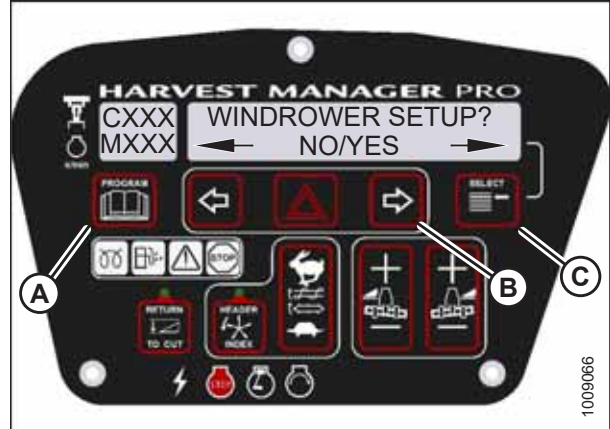


Figure 3.85: CDM Programming Buttons

4. Press SELECT (D) until OVERLOAD PRESSURE? appears on the upper line.
 - The current overload pressure will appear on lower line.

NOTE:

The range of possible pressure settings is 17,237–34,474 kPa (2500–5000 psi).

5. Press left arrow (B) or right arrow (C) to configure the hydraulic overload pressure setting. Press SELECT (D).
6. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.86: Hydraulic Overload Pressure

Setting Header Index Mode

Enabling header index mode in the cab display module (CDM) links the speed of the reel and the draper on draper headers to the windrower's ground speed. It can be configured in the CDM by accessing the HEADER INDEX MODE sub-menu in the WINDROWER SETUP menu.

For more information on the Header Index feature, refer to [4.5.4 Reel Speed, page 216](#) and [4.5.5 Draper Speed, page 219](#).

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).

OPERATOR'S STATION

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.

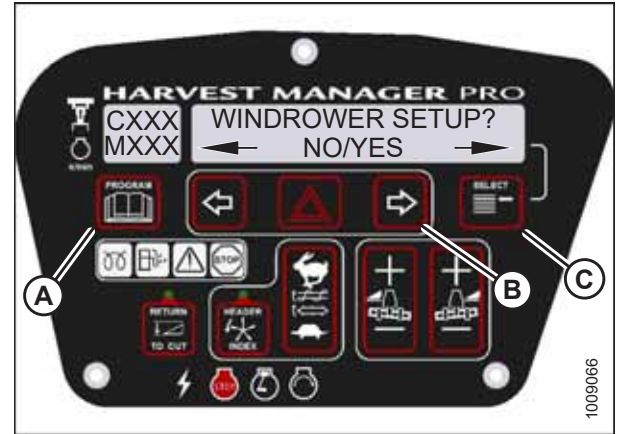


Figure 3.87: CDM Programming Buttons

4. Press SELECT (D) until HEADER INDEX MODE? appears on the upper line.
 - REEL & CONVEYOR or REEL ONLY will appear on the lower line.
5. Press left arrow (B) or right arrow (C) to set HEADER INDEX mode. Press SELECT (D).
6. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.88: Header Index Mode

Setting Return to Cut Mode

Enabling the return to cut feature in the cab display module (CDM) allows the Operator to make use of height and (optionally) tilt position presets. The return to cut feature can be configured by accessing the RETURN TO CUT MODE sub-menu in the WINDROWER SETUP menu.

For more information on the Return to Cut feature, refer to [4.4.7 Return to Cut, page 206](#).

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).

1. Turn the ignition key to the RUN position or start the engine.

OPERATOR'S STATION

2. Press PROGRAM (A) and SELECT (C) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear.



Figure 3.89: CDM Programming Buttons

4. Press SELECT (D) until RETURN TO CUT MODE? appears on the upper line.
 - HEIGHT & TILT or HEIGHT ONLY will appear on the lower line.
5. Press left arrow (B) or right arrow (C) to select RETURN TO CUT MODE. Press SELECT (D).
6. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.90: Return to Cut Mode

Setting Auto Raise Height

Enabling the auto raise height feature in the cab display module (CDM) allows the Operator to raise the header to a preset height by quickly pressing the HEADER UP switch on the ground speed lever (GSL) twice. It can be enabled by accessing the AUTO RAISE HEIGHT sub-menu in the WINDROWER SETUP MENU in the CDM.

For more information on the Auto Raise Height feature, refer to [4.4.8 Auto Raise Height, page 208](#).

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header.

OPERATOR'S STATION

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.



Figure 3.91: CDM Programming Buttons

4. Press SELECT (D) until AUTO RAISE HEIGHT? appears on the upper line.
 - The current auto raise height setting will appear on the lower line.

NOTE:

The auto raise height setting ranges from 4.0 (minimum) to 9.5 (maximum), and can be adjusted in increments of 0.5. A setting of 10 disables the auto raise function.

5. Press left arrow (B) or right arrow (C) to change the auto raise height.
6. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.92: Auto Raise Height

Configuring Double Windrow Attachment Controls

An optional Double Windrow Attachment (DWA) is available. If it is installed on the windrower, it must be configured to work with the windrower's controls. The DWA can be configured in the cab display module's (CDM) WINDROWER SETUP menu.

NOTE:

- The DWA cannot be activated if the swath compressor is enabled.
- This procedure is also applicable to the installation of a drive manifold kit (MD #139508) onto the windrower.

OPERATOR'S STATION

To configure the DWA, follow these steps:

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) simultaneously on the cab display module (CDM) to enter programming mode.
 - WINDROWER SETUP? appears on the upper line.
 - NO/YES appears on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? appears on the upper line.

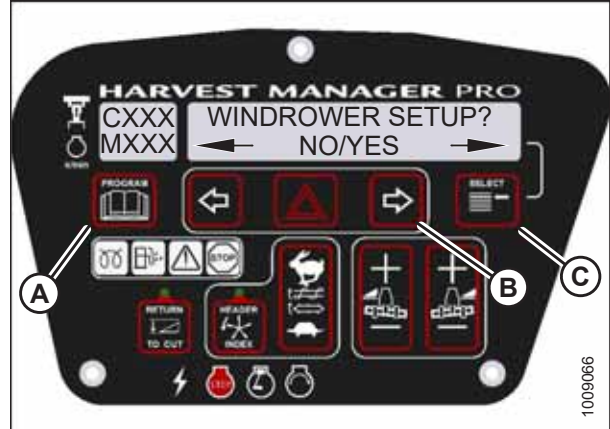


Figure 3.93: CDM Programming Buttons

4. Press SELECT (B) until DWA INSTALLED? appears on the upper line.
 - NO/YES appears on the lower line.
5. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.94: DWA Controls

6. SWAP DWA CONTROLS? appears on the upper line.
 - NO/YES appears on the lower line.

NOTE:

This step is necessary to enable the ground speed lever's (GSL) reel fore-aft buttons to control the DWA.



Figure 3.95: DWA Controls

OPERATOR'S STATION

7. Press right arrow (C) to select YES. Press SELECT (D).
 - DWA AUTO UP/DOWN? appears on the upper line.
 - NO/YES appears on the lower line.

NOTE:

If YES is selected, the DWA Auto-Up function will be activated by the GSL reel fore-aft button.

8. Press right arrow (C) to select YES. Press SELECT (D).
9. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next windrower setup option.



Figure 3.96: DWA Auto Up/Down

Activating Hydraulic Center-Link

Once the hydraulic center-link has been installed on the windrower, it must be activated in the cab display module's (CDM) WINDROWER SETUP menu.

To activate the hydraulic center-link, follow these steps:

NOTE:

This procedure is provided on the assumption that the Hydraulic Center-Link kit (B4650) has been installed.

1. Turn the ignition key to RUN or start the engine.
2. Press PROGRAM (A) and SELECT (C) on the cab display module (CDM) to enter programming mode.
 - WINDROWER SETUP? appears on the upper line.
 - NO/YES appears on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.



Figure 3.97: CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (C) until TILT CYL INSTALLED? appears on the upper line.
 - NO/YES appears on the lower line.
5. Press right arrow (B) to select YES. Press SELECT (C).
6. Press PROGRAM (A) to exit programming mode or press SELECT (C) to proceed to next WINDROWER SETUP action.



Figure 3.98: CDM Programming Buttons

Activating Rotary Disc Header Drive Hydraulics

To operate a rotary disc header with the windrower, the header drive hydraulics option on the windrower's cab display module (CDM) must be activated.

NOTE:

This procedure assumes that the Disc Drive kit (B4657) has been installed. For more information, refer to [8.3.9 R80 and R85 Rotary Header Drive Hydraulics, page 518](#).

1. In the windrower cab, turn the ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on the cab display module (CDM) to enter programming mode.
 - WINDROWER SETUP? appears on the upper line.
 - NO/YES appears on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? appears on the upper line.



Figure 3.99: CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (C) until DISC BLK INSTALLED? appears on the upper line.
 - NO/YES appears on the lower line.
- Press right arrow (B) to select YES. Press SELECT (C).

NOTE:

When the disc drive kit (B4657) is installed on the windrower, this setting must be YES even if a rotary header is not attached to the windrower.

- Press PROGRAM (A) to exit programming mode, or press SELECT (C) to proceed to the next WINDROWER SETUP option.



Figure 3.100: Rotary Disc Hydraulics

Setting Header Cut Width

When a header is attached to the windrower, the windrower's computer automatically detects the type of header. However, the windrower is unable to determine the exact size of the header attached, only its type, and therefore defaults to the smallest available cut width for a given model. For example, A Series Auger Headers come in 4.3, 4.9, and 5.5 m (14, 16, and 18 ft.) sizes; if a 4.9 m (16 ft.) header is attached to the windrower, the windrower's computer will set the cut width to 4.3 m (14 ft.). The cut width setting must be manually adjusted in the cab display module (CDM).

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).
- The header cut width setting corresponds to the actual cutting width of the header, not the total width of the header.

To set the header cut width:

- Turn the ignition key to RUN or start the engine.
- Press PROGRAM (A) and SELECT (C) on the CDM to enter programming mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
- Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed.



Figure 3.101: CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (D) until HDR CUT WIDTH? #### is displayed on the upper line.
 - Previous cutting width is displayed on the lower line.
- Press left arrow (B) or right arrow (C) to change the header cut width. Press SELECT (D).
- Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to next WINDROWER SETUP action.



Figure 3.102: Header Cut Width

Activating Swath Compressor

An optional swath compressor is available through your MacDon Dealer. Before the swath compressor can be used, it must be activated in the cab display module (CDM).

NOTE:

- CDM5 (version 512 or later) and WCM2 (version 237 or later), or WCM3 (version 116 or later), are required to operate the swath compressor.
- The Double Windrow Attachment (DWA) system must be disabled in the CDM when setting up the swath compressor.
- Users can activate and set up the swath compressor via in-cab controls without a header attached to the windrower.

To activate the swath compressor, do the following:

DANGER

Ensure that all bystanders have cleared the area.

- Turn the ignition key to the RUN position or start the engine.
- Press PROGRAM (A) and SELECT (C) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? appears on the upper line.
 - NO/YES appears on the lower line.
- Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? appears on the upper line.



Figure 3.103: Programming Buttons

OPERATOR'S STATION

4. Press SELECT (B) until SWATH COMPR INSTALL? appears on the upper line.
 - NO/YES appears on the lower line.
5. Press right arrow (A) to select YES. Press SELECT (B).
6. Press SELECT (B) until CALIBRATE SENSORS appears on the upper line. NO/YES appears on the lower line.
7. Press right arrow (A) to select YES. Press SELECT (B).
 - TO CALIBRATE SELECT appears on the upper line.
 - HEADER HEIGHT appears on the lower line.
8. Press right arrow (A) to scroll through choices until SWATH COMPR HT appears. Press SELECT (B).
 - SWATH SENSOR CAL appears on the upper line.
 - SWATH UP TO START appears on the lower line.
9. Press switch (A) on the console to raise the swath compressor.
 - CALIBRATING SWATH appears on the upper line.
 - The messages FORM UP and HOLD (HOLD will be flashing) appear, and will remain on the lower line until the system has received a signal from the fully-raised swath compressor.
 - The messages SWATH FORM UP and DONE (accompanied by a buzzer tone) will appear on the lower line when the calibration procedure is complete.
 - SWATH SENSOR CAL appears on the upper line.
 - PRESS SWATH DOWN appears on the lower line.
10. Press switch (B) on the console to lower the swath compressor.
 - CALIBRATING SWATH appears on the upper line.
 - The messages FORM DOWN and HOLD appear on the lower line.
 - SWATH FORM COMPLETE flashes for two seconds on the lower line (accompanied by a buzzer tone) when the calibration procedure is complete.



Figure 3.104: Swath Compressor Controls

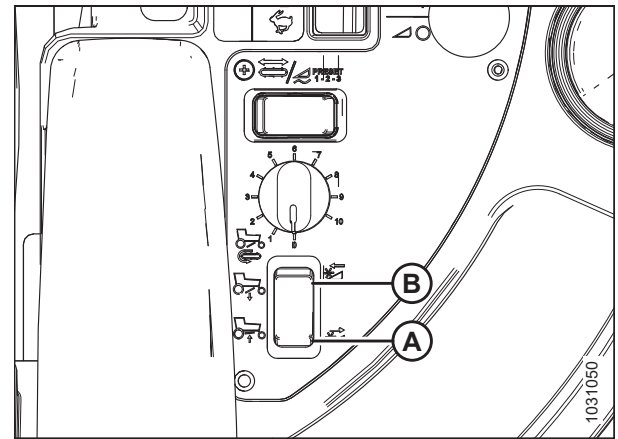


Figure 3.105: Swath Compressor Switch

OPERATOR'S STATION

11. Press PROGRAM (A) to exit programming mode or press SELECT (B) to proceed to the next windrower setup option.



Figure 3.106: CDM Programming Buttons

Activating Hay Conditioner

An optional hay conditioner is available for installation on the header. To use the hay conditioner, it must be activated in the windrower's cab display module (CDM). The HAY CONDITIONER sub-menu can be accessed from the CDM's WINDROWER SETUP menu.

NOTE:

- This procedure applies to windrowers with an attached draper header only.
- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.



Figure 3.107: Cab Display Module

OPERATOR'S STATION

- Press SELECT (C) until HAY CONDITIONER? appears on the upper line.
 - NO/YES will appear on the lower line.
- Press right arrow (B) to select YES. Press SELECT (C).
- Press PROGRAM (A) to exit programming mode or press SELECT (C) to proceed to the next WINDROWER SETUP option.



Figure 3.108: Cab Display Module

Setting Reel Speed Display Units

The preferred unit for header reel speed can be displayed by accessing the HEADER REEL SPEED sub-menu in the WINDROWER SETUP menu in the windrower's cab display module (CDM).

NOTE:

- This procedure applies to windrowers with an attached draper or auger header only.
- The header **MUST** be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).

To display the header's reel speed:

- Turn the ignition key to the RUN position, or start the engine.
- Press PROGRAM (A) and SELECT (C) on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
- Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.



Figure 3.109: CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (D) until HEADER REEL SPEED? appears on the upper line.
 - RPM/MPH or RPM/KPH will appear on the lower line.
5. Press left arrow (B) or right arrow (C) to select either IMPERIAL or METRIC units. Press SELECT (D).
6. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.110: Reel Speed Display

Setting Tire Size

The windrower's tire size must be correctly configured in the cab display module (CDM) for the windrower's ground speed to be reported accurately. This setting can be configured by accessing the SET TIRE SIZE sub-menu in the WINDROWER SETUP menu.

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) on the cab display module (CDM) to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.



Figure 3.111: CDM Programming Buttons

4. Press SELECT (D) until SET TIRE SIZE? appears on the upper line.
 - The current tire size setting will appear on the lower line.

NOTE:

The following tire size options are available:

- 18.4 x 26 TURF
- 18.4 x 26 BAR
- 23.1 x 26 TURF
- 600 – 65 R28

5. Press left arrow (B) or right arrow (C) and select the desired tire size. Press SELECT (D).



Figure 3.112: Tire Size

OPERATOR'S STATION

- Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP option.

Setting Engine Intermediate Speed Control

The engine's Intermediate Speed Control (ISC) feature provides three selectable engine speeds (1900, 2050, or 2200 rpm) for reduced load conditions. This setting can be configured in the windrower's cab display module (CDM) by accessing the WINDROWER SETUP menu.

NOTE:

The programmed engine speed is activated when the header is engaged. For more information, refer to [Engine Intermediate Speed Control, page 162](#).

The engine **MUST** be running for this procedure to be performed.

- Start the engine.
- Press PROGRAM (A) and SELECT (C) on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
- Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.



Figure 3.113: CDM Programming Buttons

- Press SELECT (B) until SET ENGINE ISC RPM? appears on the upper line.
 - NO/YES will appear on the lower line.
- Press right arrow (A) to select YES. Press SELECT (B).
 - PRESS HAZARD TO SET will appear on the upper line.
 - ISC RPM ##### will appear on the lower line.

Table 3.3 ISC Settings

ISC and rpm			
Off ²¹	1	2	3
High Idle ²²	2200 ²³	2000	1800

NOTE:

The previously selected ISC setting will flash.



Figure 3.114: Engine ISC RPM

21. Off is always used when the header is not engaged.

22. Off does not appear as a menu selection, but is used when the header is not engaged.

23. Default setting.

OPERATOR'S STATION

6. Press right arrow (C) to cycle between the setting options. Press HAZARD (B) to confirm the desired setting.
7. Press SELECT (D).
 - EXIT ENGINE ISC? will appear on the upper line.
 - NO/YES will appear on the lower line.
8. Press right arrow (C) to select YES. Press SELECT (D).
9. Press PROGRAM (A) to exit programming mode.



Figure 3.115: ISC RPM

Clearing Sub-Acres

The windrower has two counters for acres: one counter tracks the total number of acres harvested during the machine's lifetime, while the other counter tracks the acres harvested during individual harvesting instances. The sub-acre counter can be reset to zero as needed by accessing the SUB-ACRES menu in the windrower's cab display module (CDM).

1. With the key in the ON position and the operator's station in cab-forward mode, press SELECT until SUB-ACRES appears on the bottom line.
2. Press and hold PROGRAM button (A) until the counter is reset to zero.



Figure 3.116: Cab Display Module (CDM)

3.19.9 Activating Cab Display Lockouts

Some header configuration settings in the windrower's cab display module (CDM) can be locked, so that Operators lacking the proper authorization will be unable to change these settings. Use this feature to keep header settings constant when there are multiple Operators operating the windrower.

NOTE:

FUNCTION LOCKED will appear on the CDM when a header function switch which has been locked out is pressed.

Activating Header Tilt Control Lockout

Activating the header tilt control lockout in the windrower's cab display module (CDM) prevents unauthorized Operators from changing the angle of the attached header.

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to *5 Attaching and Detaching Headers, page 235*.
- This procedure requires installation of the optional Hydraulic Center-Link (B4650).

To activate the header tilt control lockout:

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.

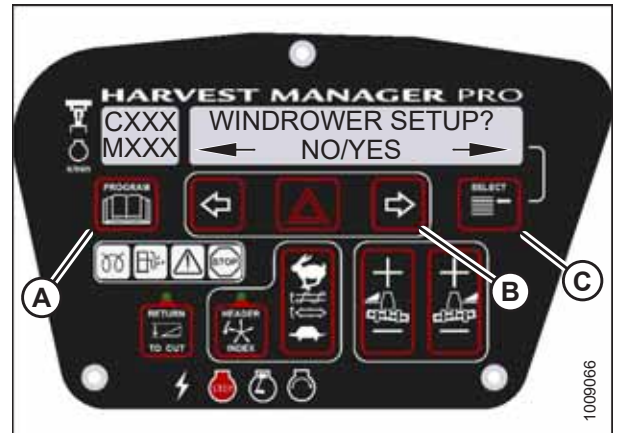


Figure 3.117: CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? appears on the upper line.
 - NO/YES will appear on the lower line.
5. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.118: Control Locks

OPERATOR'S STATION

- Press SELECT (D) until HEADER TILT appears on the upper line.
 - ENABLED/LOCKED will appear on the lower line.
- Press left arrow (B) to enable the use of the HEADER TILT control switch.

Press right arrow (C) to lock the HEADER TILT control switch.
- Press PROGRAM (A) to exit programming mode, or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.119: Header Tilt Control Lock

Activating Header Float Control Lockout

Activating the header float control lockout in the windrower's cab display module (CDM) prevents unauthorized Operators from changing the float setting of the attached header.

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header.

For more information, refer to [5 Attaching and Detaching Headers, page 235](#).

- Turn the ignition key to the RUN position or start the engine.
- Press PROGRAM (A) and SELECT (C) on the cab display module (CDM) to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
- Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.



Figure 3.120: CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (B) until SET CONTROL LOCKS? appears on the upper line.
 - NO/YES will appear on the lower line.
- Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.121: Control Locks

- Press SELECT (D) until HEADER FLOAT appears on the upper line.
 - ENABLED/LOCKED will appear on the lower line.
- Press left arrow (B) to enable the HEADER FLOAT control switch, or press right arrow (C) to lock the HEADER FLOAT control switch.
- Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.122: Header Float Control Lock

Activating Reel Fore-Aft Control Lockout

Activating the header reel fore-aft control lockout in the windrower's cab display module (CDM) prevents unauthorized Operators from changing the reel fore-aft setting of the attached header.

NOTE:

- This procedure applies to windrowers with attached draper headers only.
- The header **MUST** be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).

OPERATOR'S STATION

To activate the reel fore-aft control lockout:

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.



Figure 3.123: CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? appears on the upper line.
 - NO/YES will appear on the lower line.
5. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.124: Control Locks

6. Press SELECT (D) until REEL FORE/AFT appears on the upper line.
 - ENABLED/LOCKED will appear on the lower line.
7. Press left arrow (B) to enable the REEL FORE/AFT control switch.
Press right arrow (C) to lock the REEL FORE/AFT control switch.
8. Press PROGRAM (A) to exit programming mode, or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.125: M155 Reel Fore-Aft Control Lock

OPERATOR'S STATION

Activating Draper Speed Control Lockout

Activating the header draper speed control lockout in the windrower's cab display module (CDM) prevents unauthorized Operators from changing the draper speed setting of the attached header.

NOTE:

- This procedure applies to windrowers with attached draper headers only.
- The header **MUST** be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).

To activate the draper speed control lockout:

1. Turn the ignition key to the RUN position, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.
4. Press SELECT (B) until SET CONTROL LOCKS? appears on the upper line.
 - NO/YES will appear on the lower line.
5. Press right arrow (A) to select YES. Press SELECT (B).

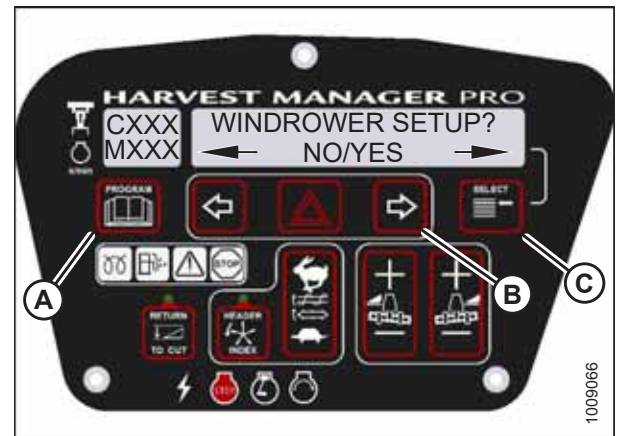


Figure 3.126: CDM Programming Buttons



Figure 3.127: Control Locks

OPERATOR'S STATION

- Press SELECT (D) until DRAPER SPEED appears on the upper line.
 - ENABLED/LOCKED will appear on the lower line.
- Press left arrow (B) to enable the DRAPER SPEED control switch, or press right arrow (C) to lock the DRAPER SPEED control switch.
- Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.128: Draper Control Lock

Activating Auger Speed Control Lockout

Activating the auger speed control lockout in the windrower's cab display module (CDM) prevents unauthorized Operators from changing the auger speed of the attached header.

NOTE:

- This procedure applies to windrowers with attached A40D Auger Headers only.
- An auger header **MUST** be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).

To activate the auger speed control lockout:

- Turn the ignition key to the RUN position or start the engine.
- Press PROGRAM (A) and SELECT (C) on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
- Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.



Figure 3.129: CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (B) until SET CONTROL LOCKS? appears on the upper line.
 - NO/YES will appear on the lower line.
- Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.130: Control Locks

- Press SELECT (D) until AUGER SPEED appears on the upper line.
 - ENABLED/LOCKED will appear on the lower line.
- Press left arrow (B) to enable the AUGER SPEED control switch.
Press right arrow (C) to lock the AUGER SPEED control switch.
- Press PROGRAM (A) to exit programming mode, or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.131: Auger Control Lock

Activating Knife Speed Control Lockout

Activating the header knife speed control lockout in the windrower's cab display module (CDM) prevents unauthorized Operators from changing the knife speed of the attached header.

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).

OPERATOR'S STATION

1. Turn the ignition key to the RUN position, or start the engine.
2. Press PROGRAM (A) and SELECT (C) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.



Figure 3.132: CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? appears on the upper line.
 - NO/YES will appear on the lower line.
5. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.133: Control Locks

6. Press SELECT (D) until KNIFE SPEED appears on the upper line.
 - ENABLED/LOCKED will appear on the lower line.
7. Press left arrow (B) to enable the KNIFE SPEED control switch, or press right arrow (C) to lock the KNIFE SPEED control switch.
8. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.134: Knife Speed Control Lock

OPERATOR'S STATION

Activating Rotary Disc Speed Control Lockout

Activating the rotary disc speed control lockout in the windrower's cab display module (CDM) prevents unauthorized Operators from changing the disc speed of the attached rotary disc header.

NOTE:

- This procedure applies to windrowers with attached rotary disc headers only.
- The header **MUST** be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).

To activate the rotary disc speed control lockout:

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.

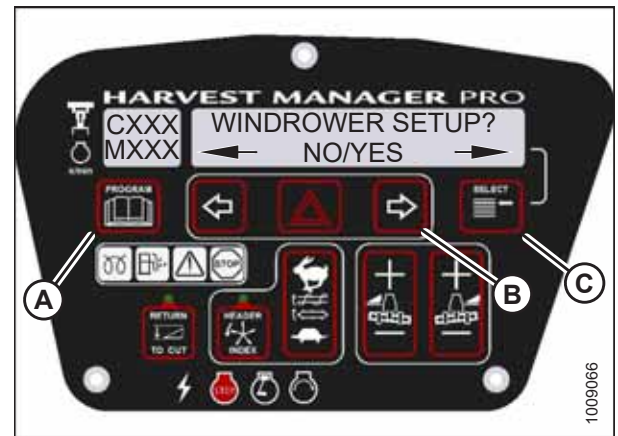


Figure 3.135: CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? appears on the upper line.
 - NO/YES will appear on the lower line.
5. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.136: Control Locks

OPERATOR'S STATION

- Press SELECT (D) until DISK SPEED appears on the upper line.
 - ENABLED/LOCKED will appear on the lower line.
- Press left arrow (B) to enable the DISK SPEED control switch, or press right arrow (C) to lock the DISK SPEED control switch.
- Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.137: Disc Speed Control Lock

Activating Reel Speed Control Lockout

Activating the reel speed control lockout in the windrower's cab display module (CDM) prevents unauthorized Operators from changing the reel speed of the attached rotary disc header.

NOTE:

This procedure applies to windrowers with attached draper headers only.

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).

- Turn the ignition key to the RUN position, or start the engine.
- Press PROGRAM (A) and SELECT (C) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
- Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.



Figure 3.138: CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (B) until SET CONTROL LOCKS? appears on the upper line.
 - NO/YES will appear on the lower line.
5. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.139: Control Locks

6. Press SELECT (D) until REEL SPEED appears on the upper line.
 - ENABLED/LOCKED will appear on the lower line.
7. Press left arrow (B) to enable the REEL SPEED control switch.
Press right arrow (C) to lock the REEL SPEED control switch.
8. Press PROGRAM (A) to exit programming mode, or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.140: Reel Speed Control Lock

3.19.10 Displaying Active Cab Display Lockouts

The Operator can generate a list of all windrower features which have been locked out by accessing the cab display module's (CDM) VIEW CONTROL LOCKS sub-menu.

NOTE:

To display the header tilt control lock, the Hydraulic Center-Link kit (B4650) must be installed.

OPERATOR'S STATION

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press right arrow (B) to select YES. Press SELECT (C).
 - SET KNIFE SPEED? will appear on the upper line.



Figure 3.141: CDM Programming Buttons

4. Press SELECT (B) until VIEW CONTROL LOCKS? appears on the upper line.
 - NO/YES will appear on the lower line.
5. Press right arrow (A) to select YES. Press SELECT (B).

HEADER TILT will appear on the upper line.

 - The control switch status will appear on the lower line. The hours displayed indicate when a switch was enabled or locked.



Figure 3.142: Control Locks

6. Press left arrow (B) or right arrow (C) to cycle between control switch lockouts. The displayed control switches are as follows:
 - HEADER TILT
 - HEADER FLOAT
 - REEL FORE/AFT
 - DRAPER SPEED
 - AUGER SPEED
 - KNIFE SPEED
 - DISK SPEED
 - REEL SPEED



Figure 3.143: Control Locks

NOTE:

Not all control lock options apply to every type of header.

OPERATOR'S STATION

- Press SELECT (D).
 - EXIT VIEW LOCKOUTS? will appear on the upper line.
 - NO/YES will appear on the lower line.
- Press right (C) to select YES.
- Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next WINDROWER SETUP option.



Figure 3.144: Control Locks

3.19.11 Calibrating Header Sensors

When a new header is attached to the windrower, the header's sensors must be calibrated using the cab display module (CDM) so that their output can be correctly interpreted by the windrower control module (WCM).

Calibrating Header Height Sensor

The header height sensor can be calibrated by accessing the cab display module's (CDM) WINDROWER SETUP menu. The calibration procedure must be completed for the sensor to be correctly calibrated.

NOTE:

- The header must be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).
- The engine must be running to perform this procedure.

⚠ DANGER

Ensure that all bystanders have cleared the area.

To calibrate the header height sensor:

- Start the engine.
- Press PROGRAM (A) and SELECT (B) on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
- Press SELECT (B) until CALIBRATE SENSORS? appears on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.145: CDM Programming Buttons

OPERATOR'S STATION

4. Press right arrow (B) to select YES. Press SELECT (C).
 - TO CALIBRATE SELECT will appear on the upper line.
5. Press left arrow (A) or right arrow (B) until HEADER HEIGHT appears on the lower line. Press SELECT (C).
 - CALIBRATING HEIGHT will appear on the upper line.
 - RAISE HEADER HOLD will appear on the lower line.



Figure 3.146: Header Height Calibration

6. Press and hold HEADER UP button (A) on the ground speed lever (GSL).
 - CALIBRATING HEIGHT will appear on the upper line.
 - RAISE HEADER HOLD will appear on the lower line.

NOTE:

The word HOLD will flash during calibration. RAISE HEADER DONE will display on the lower line once calibration is complete.

7. Release HEADER UP button (A).
 - HEIGHT SENSOR CAL will appear on the upper line.
 - PRESS LOWER HEADER will appear on the lower line.

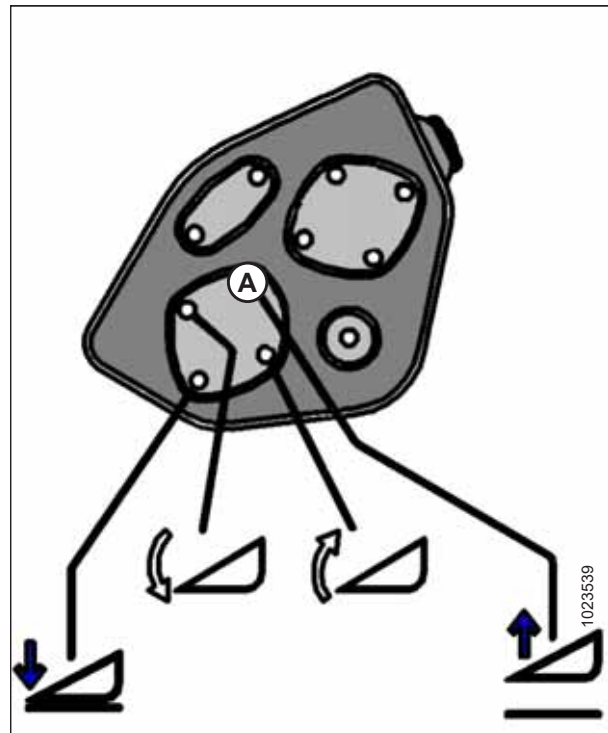


Figure 3.147: Header Height Controls on GSL

OPERATOR'S STATION

- Press and hold HEADER DOWN button (A) on the GSL.

NOTE:

The word HOLD will flash during calibration. HT SENSOR COMPLETE will display on the lower line once calibration is complete.

- Release HEADER DOWN button (A).
 - TO CALIBRATE SELECT will appear on the upper line.
 - HEADER HEIGHT will appear on the lower line.

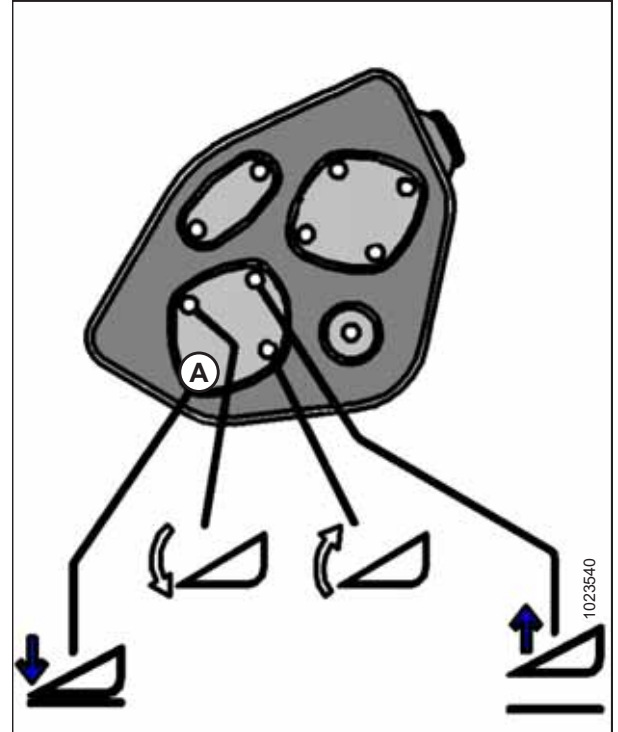


Figure 3.148: Header Height Controls on GSL

- Press the right arrow to select the next header sensor calibration or select STOP & EXIT. Press SELECT.

For instructions on calibrating the header tilt sensor, refer to [Calibrating Header Tilt Sensor, page 121](#). For instructions on calibrating the header float sensor, refer to [Calibrating Header Float Sensors, page 124](#).

- Press PROGRAM to exit programming mode.

Calibrating Header Tilt Sensor

The header tilt sensor can be calibrated by accessing the cab display module's (CDM) WINDROWER SETUP menu. The calibration procedure must be completed for the sensor to report the angle of the header correctly.

NOTE:

- The header must be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).
- This procedure is provided on the assumption that the Hydraulic Center-Link kit (B4650) have been installed.
- The engine must be running to perform this procedure.

⚠ DANGER

Ensure that all bystanders have cleared the area.

OPERATOR'S STATION

1. Start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
3. Press SELECT (B) until CALIBRATE SENSORS? appears on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.149: CDM Programming Buttons

4. Press right arrow (B) to select YES. Press SELECT (C).
5. Press left arrow (A) or right arrow (B) until HEADER TILT appears on the lower line. Press SELECT (C).
 - HDR TILT SENSOR CAL will appear on the upper line.
 - EXTEND TILT TO START will appear on the lower line.



Figure 3.150: Header Tilt Calibration

OPERATOR'S STATION

6. Press and hold HEADER TILT EXTEND button (A) on the ground speed lever (GSL).

- CALIBRATING TILT will appear on the upper line.
- EXTEND TILT HOLD will appear on the lower line.

NOTE:

The word HOLD will flash during calibration. HEADER TILT DONE will display on the lower line once calibration is complete.

7. Release HEADER TILT EXTEND button (A).
- HEADER TILT SENSOR CAL will appear on the upper line.
 - PRESS RETRACT TILT will appear on the lower line.

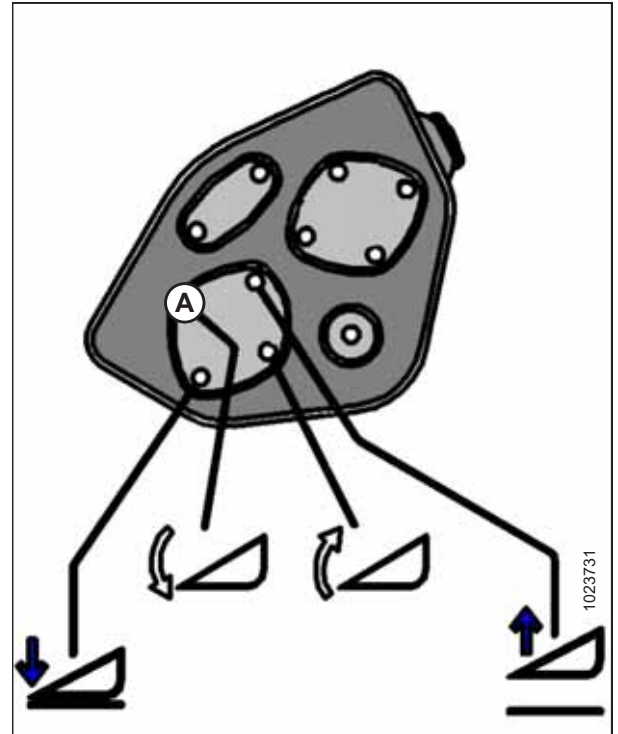


Figure 3.151: Header Tilt Controls on GSL

8. Press and hold HEADER TILT RETRACT button (A) on the GSL.

- CALIBRATING TILT will appear on the upper line.
- RETRACT TILT HOLD will appear on the lower line.

NOTE:

The word HOLD will flash during calibration. HEADER TILT COMPLETE will display on the lower line once calibration is complete.

9. Release HEADER TILT RETRACT button (A).
- TO CALIBRATE SELECT will appear on the upper line.
 - HEADER TILT will appear on the lower line.

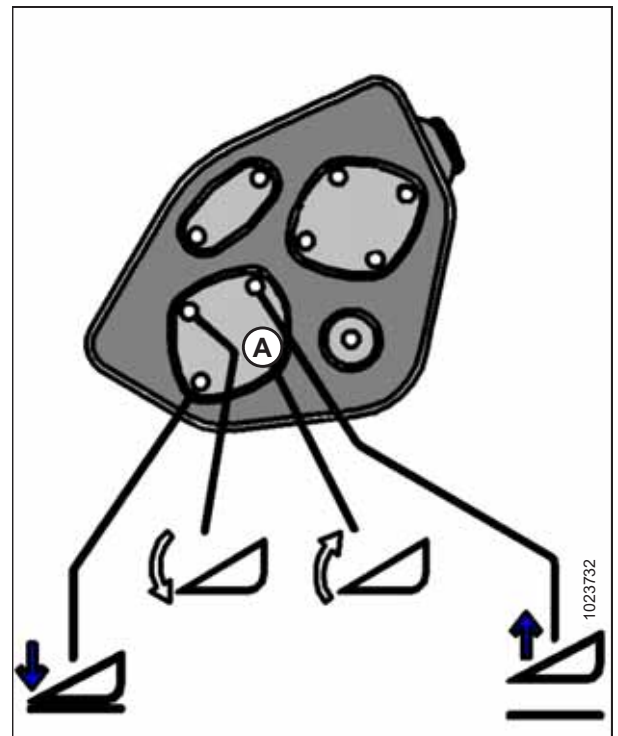


Figure 3.152: Header Tilt Controls on GSL

OPERATOR'S STATION

10. Press the right arrow to select the next header sensor calibration or select STOP & EXIT. Press SELECT.

For instructions, refer to *Calibrating Header Height Sensor, page 119* or *Calibrating Header Float Sensors, page 124*.

11. Press PROGRAM to exit programming mode.

Calibrating Header Float Sensors

The header float sensors can be calibrated by accessing the cab display module's (CDM) WINDROWER SETUP menu. The calibration procedure must be completed for the sensors to be correctly calibrated.

NOTE:

- The header must be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to *5 Attaching and Detaching Headers, page 235*.
- Use the left or right FLOAT buttons on the CDM to perform this procedure.

DANGER

Ensure that all bystanders have cleared the area.

IMPORTANT:

Ensure that float pins (A) are installed in the working position.

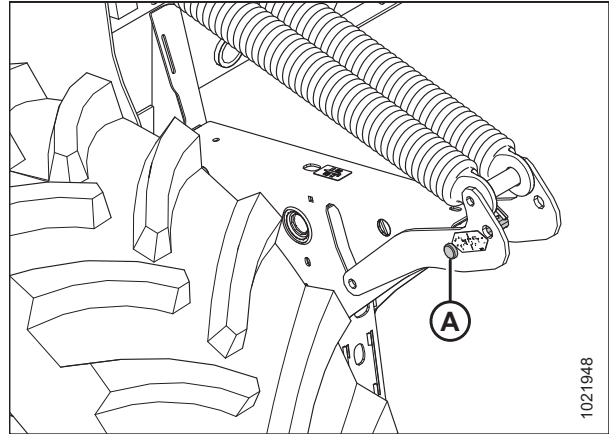


Figure 3.153: Float Pin – Right Side

1. Start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
3. Press SELECT (B) until CALIBRATE SENSORS? appears on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.154: CDM Programming Buttons

OPERATOR'S STATION

4. Press right arrow (B) to select YES. Press SELECT (C).
 - TO CALIBRATE SELECT will appear on the upper line.
5. Press left arrow (A) or right arrow (B) until HEADER FLOAT appears on the lower line. Press SELECT (C).
 - CALIBRATING FLOAT will appear on the upper line.
 - PRESS FLOAT + TO START will appear on the lower line.



Figure 3.155: M155 Header Float Display

6. Press and hold FLOAT + button (A) on the CDM.
 - CALIBRATING FLOAT will appear on the upper line.
 - FLOAT (+) HOLD will appear on the lower line.

NOTE:

The word HOLD will flash during calibration. FLOAT (+) DONE will appear on the lower line once calibration is complete.

7. Release FLOAT + button (A).
 - CALIBRATING FLOAT will appear on the upper line.
 - FLOAT (-) HOLD will appear on the lower line.



Figure 3.156: Positive Header Float Display

8. Press and hold FLOAT – button (A) on the CDM.
 - CALIBRATING FLOAT will appear on the upper line.
 - FLOAT (-) HOLD will appear on the lower line.

NOTE:

The word HOLD will flash during calibration. HDR FLOAT COMPLETE will appear on the lower line once calibration is complete.

9. Release FLOAT – button (A).
 - TO CALIBRATE SELECT will appear on the upper line.
 - HEADER FLOAT will appear on the lower line.



Figure 3.157: Negative Header Float Display

10. Press the right arrow to select the next header sensor calibration or select STOP & EXIT. Press SELECT. For instructions, refer to [Calibrating Header Height Sensor, page 119](#) or [Calibrating Header Tilt Sensor, page 121](#).

11. Press PROGRAM to exit programming mode.

3.19.12 Calibrating Swath Compressor Sensor

The swath compressor's sensor can be calibrated by accessing the cab display module's (CDM) WINDROWER SETUP menu. The calibration procedure must be completed for the sensor to be correctly calibrated. This procedure applies only to windrowers equipped with a swath compressor.

⚠ DANGER

Ensure that all bystanders have cleared the area.

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the cab display module (CDM) to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
3. Press SELECT (B) until CALIBRATE SENSORS? appears on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.158: CDM Programming Buttons

4. Press right arrow (A) to select YES. Press SELECT (B).
 - TO CALIBRATE SELECT will appear on the upper line.
5. Press right arrow (A) to scroll through the choices until SWATH COMPR HT appears on the lower line. Press SELECT (B).
 - SWATH SENSOR CAL will appear on the upper line.
 - SWATH UP TO START will appear on the lower line.



Figure 3.159: Swath Compressor Sensor Calibration

OPERATOR'S STATION

6. Press and hold button (B) to raise the swath compressor.
 - CALIBRATING SWATH will appear on the upper line.
 - The messages FORM UP and HOLD (this message will flash) will appear on the lower line and will remain until the system has received a signal from the swath compressor indicating that it has risen fully.
 - SWATH FORM UP DONE (accompanied by a buzzer tone) will appear on the lower line when the process is complete.

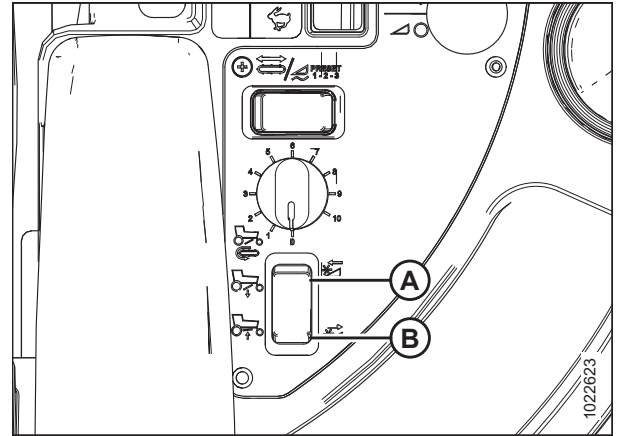


Figure 3.160: Swath Compressor Controls

A - Lower Swath Compressor
B - Raise Swath Compressor

- SWATH SENSOR CAL will appear on the upper line.
- PRESS SWATH DOWN will appear on the lower line.



Figure 3.161: Swath Compressor Sensor Calibration

7. Press and hold button (A) to lower the swath compressor.
 - CALIBRATING SWATH will appear on the upper line.
 - The messages FORM DOWN and HOLD (this message will flash) will appear on the lower line.
 - SWATH FORM COMPLETE will appear for two seconds on the lower line (accompanied by a buzzer tone) when the calibration procedure is complete.
8. Press PROGRAM to exit programming mode.

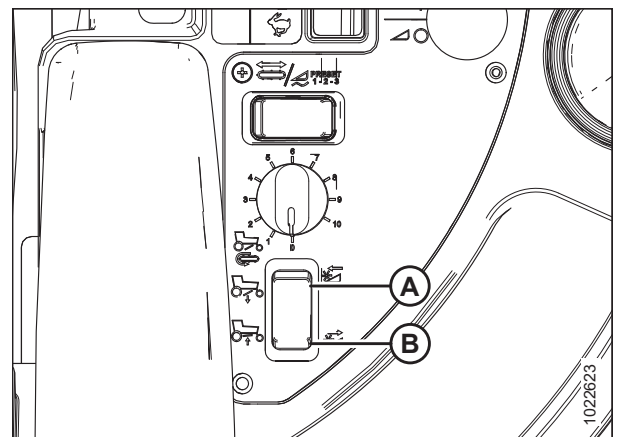


Figure 3.162: Swath Compressor Controls

A - Lower Swath Compressor
B - Raise Swath Compressor

3.19.13 Troubleshooting Windrower Problems

The cab display module (CDM) can be used as a troubleshooting tool, since it can provide information about the status of various sensors and display error codes.

Displaying Windrower and Engine Error Codes

The cab display module (CDM) stores any error codes that occur during operation.

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode. Press SELECT (B).
 - WINDROWER SETUP? will appear on the upper line.
3. Press SELECT (B) until DIAGNOSTIC MODE? appears on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.163: CDM Programming Buttons

4. Press right arrow (A) to select YES. Press SELECT (B).
5. VIEW ERROR CODES? will appear on the upper line.
 - NO/YES will appear on the lower line.
6. Press right arrow (A) to select YES. Press SELECT (B).
 - VIEW WINDRWR CODES? will appear on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.164: Diagnostic Functions

OPERATOR'S STATION

7. Press right arrow (A) to select YES. Press SELECT (C).
 - The most recent error code will appear.
 - Refer to [9.5 Cab Display Module Error Codes, page 545](#).
8. Press right arrow (A) or left arrow (B) to cycle through the last ten recorded windrower error codes until EXIT WINDROWER CODES appears.
9. Press right arrow (A) to select YES. Press SELECT (C).
 - VIEW ENGINE CODES will appear on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.165: Windrower Codes

10. Press right arrow (C) to select YES. Press SELECT (D).
11. Press left arrow (B) or right arrow (C) to cycle through the last ten recorded engine error codes until EXIT ENGINE CODES appears.
 - Refer to [9.4 Engine Error Codes, page 534](#).
12. Press right arrow (C) to select YES. Press SELECT (D).
13. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next diagnostic option.



Figure 3.166: Engine Codes

Enabling or Disabling Header Sensors

Each header sensor can be enabled or disabled using the windrower's cab display module (CDM).

NOTE:

- The header must be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).
- Disabled sensors generate the flashing message SENSOR on the CDM when the header is operating. This message indicates that the output from this sensor has been disabled.

OPERATOR'S STATION

To enable or disable certain header sensors:

1. Turn the ignition key to the RUN position or start the engine.
2. Press PROGRAM (A) and SELECT (C) on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.
3. Press SELECT (C) until DIAGNOSTIC MODE? will appear on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (B) to select YES. Press SELECT (C).
 - VIEW ERROR CODES? will appear on the upper line.
5. Press SELECT (B) until ENTER SENSOR SETUP? appears on the upper line.
 - NO/YES will appear on the lower line.
6. Press right arrow (A) to select YES. Press SELECT (B).
 - KNIFE SPEED SENSOR will appear on the lower line.
 - ENABLE/DISABLE will appear on the lower line.



Figure 3.167: CDM Programming Buttons



Figure 3.168: Diagnostic Functions

7. Press left arrow (B) to enable the selected sensor. Press right arrow (C) to disable the selected sensor. Press SELECT (D) to confirm your selection and to proceed to the next sensor.

These sensors can be enabled or disabled:

- HEADER HT SENSOR
- HEADER TILT SENSOR
- KNIFE SPEED SENSOR
- REEL SPEED SENSOR
- HEADER FLOAT SENSOR
- OVERLOAD PRESSURE SENSOR²⁴
- HYD OIL TEMP SENSOR

Press SELECT (D) to display the EXIT SENSOR SETUP? selection.



Figure 3.169: Header Sensors

24. Requires installation of optional pressure sensor (B5574).

OPERATOR'S STATION

- Press right arrow (C) to select YES. Press SELECT.
- Press PROGRAM (A) to exit programming mode or press SELECT to proceed to the next diagnostic option.

Displaying Header Sensor Input Signals

Review the output voltage from individual header sensors by accessing the DIAGNOSTIC MODE submenu in the WINDROWER SETUP menu in the windrower's cab display module (CDM).

NOTE:

The header must be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).

- Turn the ignition key to the RUN position or start the engine.
- Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.
 - NO/YES will appear on the lower line.



Figure 3.170: CDM Programming Buttons

- Press SELECT (B) until DIAGNOSTIC MODE? appears on the upper line.
 - NO/YES will appear on the lower line.
- Press right arrow (A) to select YES. Press SELECT (B).
 - VIEW ERROR CODES? will appear on the upper line.
- Press SELECT (B) until READ SENSOR SETUP? appears on the upper line.
 - NO/YES will appear on the lower line.

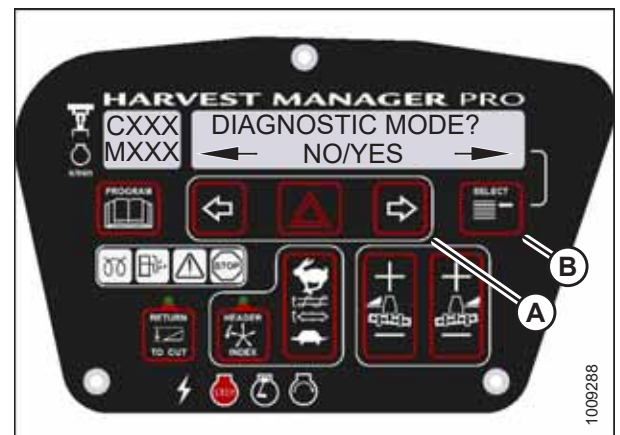


Figure 3.171: Diagnostic Functions

OPERATOR'S STATION

- Press right arrow (C) to select YES. Press SELECT (D).
 - SENSOR INPUT will appear on the upper line.
 - HDR HEIGHT 1.23 V will appear on the lower line.
- Press left arrow (B) or right arrow (C) to review the outputs from different sensors.
- Press SELECT (D) to skip to EXIT READ SENSORS? selection.
- Press right arrow (C) to select YES. Press SELECT.
- Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next diagnostic option.



Figure 3.172: Header Sensors

Forcing Header Identification

The windrower's cab display module (CDM) must recognize the header model in order to proceed with troubleshooting. If the header wiring has been damaged, or if no header is available, you can force the windrower control module (WCM) to behave as if a header is attached to the windrower by manually inputting a header identification code.

IMPORTANT:

Forcing a header ID that is different from that of the attached header can damage the windrower and/or the header. Doing so can cause the header to run too fast, which can cause excessive vibration and component failure.

NOTE:

The WCM will revert to reading NO HEADER each time the engine ignition is cycled.

- Turn the ignition key to the RUN position or start the engine.
- Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.



Figure 3.173: CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until DIAGNOSTIC MODE? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).

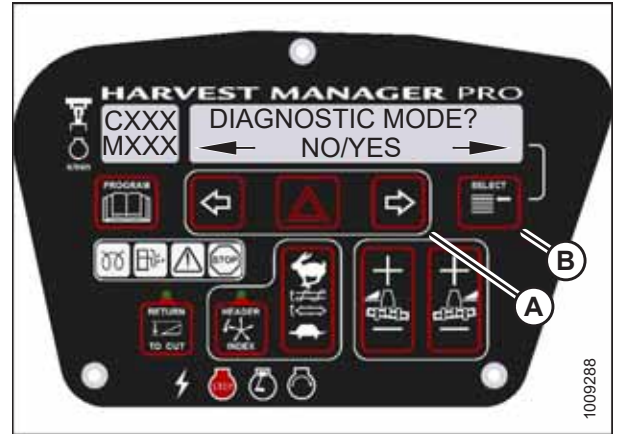


Figure 3.174: Diagnostic Functions

5. Press SELECT (B) until FORCE HEADER TYPE? appears on the upper line.
 - NO/YES will appear on the lower line.
6. Press right arrow (A) to select YES. Press SELECT (B).
 - SELECT HEADER TYPE will appear on the upper line.
 - DISK HEADER will appear on the lower line.



Figure 3.175: Header Type

7. Press left arrow (A) or right arrow (B) to cycle through the list of header types.
8. When the desired header type appears, press SELECT (C).
 - EXIT FORCE HEADER? will appear on the upper line.
 - NO/YES will appear on the lower line.
9. Press right arrow (B) to select YES. Press SELECT (C).
Proceed to the next diagnostic option, or press PROGRAM to exit programming mode.



Figure 3.176: Header Type

3.19.14 Troubleshooting Header Problems

A guide for resolving difficulties encountered while configuring header features in the cab display module (CDM) is provided.

Testing Header Up/Down Activate Function Using Cab Display Module

The cab display module (CDM) can be used to change the height of the attached header, rather than using the height controls on the ground speed lever (GSL). This procedure is used to test the functionality of this feature.

NOTE:

- The header must be attached to the windrower to perform this procedure. The CDM automatically selects the header profile based on the type of attached header. For more information, refer to *5 Attaching and Detaching Headers, page 235*.
- The engine must be running to perform this procedure.

⚠ DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode. Press SELECT (B).
 - WINDROWER SETUP? will appear on the upper line.



Figure 3.177: CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.178: Diagnostic Functions

OPERATOR'S STATION

5. Press SELECT (B) until ACTIVATE FUNCTIONS? appears on the upper line.
 - NO/YES will appear on the lower line.
6. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.179: Functions

7. Press SELECT (D) until ACTIVATE HEADER HT appears on the upper line.
 - DOWN/UP will appear on the lower line.
8. Press and hold left arrow (B) to lower the header, or press and hold right arrow (C) to raise the header. Ensure that the header is working properly.
9. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next header function option.



Figure 3.180: Header Height

Testing Reel Up/Down Activate Function Using Cab Display Module

The cab display module (CDM) can be used to change the height of the attached header's reel, rather than using the reel height controls on the ground speed lever (GSL). This procedure is used to test the functionality of this feature.

NOTE:

- This procedure applies to windrowers with attached draper headers only.
- The header must be attached to the windrower to perform this procedure. The CDM automatically adjusts its programming for each header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).



DANGER

Ensure that all bystanders have cleared the area.

OPERATOR'S STATION

1. Start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode. Press SELECT (B).
 - WINDROWER SETUP? will appear on the upper line.



Figure 3.181: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.182: Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? appears on the upper line.
 - NO/YES will appear on the lower line.
6. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.183: Functions

OPERATOR'S STATION

- Press SELECT (D) until ACTIVATE REEL HT appears on the upper line.
 - DOWN/UP will appear on the lower line.
- Press and hold left arrow (B) to lower the reel. Press and hold right arrow (C) to raise the reel. Ensure that the reel is working properly.
- Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to next ACTIVATE FUNCTION.



Figure 3.184: Reel Height

Testing Header Tilt Activate Function Using Cab Display Module

It may be necessary to use the cab display module (CDM) to change the angle of the attached header, rather than using the header tilt controls on the ground speed lever (GSL). This procedure is used to test the functionality of this feature.

NOTE:

- The header must be attached to the windrower to perform this procedure. The CDM automatically adjusts its programming for each header. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).
- This procedure requires installation of the optional Hydraulic Center-Link (B4650).
- The engine must be running to perform this procedure.

DANGER

Ensure that all bystanders have cleared the area.

- Start the engine.
- Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.



Figure 3.185: CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until DIAGNOSTIC MODE? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.186: Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? appears on the upper line.
 - NO/YES will appear on the lower line.
6. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.187: Functions

7. Press SELECT (D) until ACTIVATE HDR TILT appears on the upper line.
 - IN/OUT will appear on the lower line.
8. Press and hold left arrow (B) to tilt the header toward the ground. Press and hold right arrow (C) to tilt the header away from the ground. Ensure that the tilt functions are working correctly.
9. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next header function option.



Figure 3.188: Header Tilt Angle

Testing Knife Drive Circuit Using Cab Display Module

It may be necessary to use the cab display module (CDM) to test the knife drive circuit, rather than using the controls on the operator's station.

IMPORTANT:

Do **NOT** overspeed the header's knife drive. Overspeeding can lead to vibration, belt failures, or other problems.

NOTE:

- The header must be attached to windrower to follow this procedure. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).
- The engine must be running to perform this procedure.

⚠ DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode. Press SELECT (B).
 - WINDROWER SETUP? will appear on the upper line.



Figure 3.189: CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.190: Diagnostic Functions

OPERATOR'S STATION

5. Press SELECT (B) until ACTIVATE FUNCTIONS? appears on the upper line.
 - NO/YES will appear on the lower line.
6. Press right arrow (A) to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT will appear on the upper line.



Figure 3.191: Functions

7. Press SELECT (E) until KNIFE DRIVE SPD XXXX appears on the upper line.
8. Press and hold HAZARD (C) button.
 - Press left arrow (B) to decrease the knife speed.
 - Press right arrow (D) to increase the knife speed.

IMPORTANT:

Do **NOT** overspeed the knife drive.

IMPORTANT:

Ensure that the knife drive is working properly.

9. Release HAZARD button (C). The knife will stop.
10. Press PROGRAM (A) to exit programming mode or press SELECT (E) to proceed to the next header function option.



Figure 3.192: Knife Drive

Testing Draper Drive Circuit Activate Function Using Cab Display Module

The cab display module (CDM) can be used to test the draper drive circuit, rather than using the controls on the operator's station.

IMPORTANT:

Do **NOT** overspeed the draper drive. Overspeeding can lead to vibration, belt failures, or other overspeeding-related problems.

NOTE:

- A draper header must be attached to windrower to perform this procedure. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).
- The engine must be running to perform this procedure.

DANGER

Ensure that all bystanders have cleared the area.

OPERATOR'S STATION

1. Start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.



Figure 3.193: CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.194: Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? appears on the upper line.
 - NO/YES will appear on the lower line.
6. Press right arrow (A) to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT will appear on the upper line.



Figure 3.195: M155 Functions

OPERATOR'S STATION

7. Press SELECT (E) until DRAPER DRV SPD XXXX appears on the upper line.
8. Press and hold HAZARD button (C).
 - Press left arrow (B) to decrease the draper speed.
 - Press right arrow (D) to increase the draper speed.

IMPORTANT:

Do **NOT** overspeed the drapers.

NOTE:

Ensure that the draper drive is working properly.

9. Release the HAZARD (C) button. The drapers will stop.
10. Press PROGRAM (A) to exit programming mode or press SELECT (E) to proceed to the next header function option.



Figure 3.196: Draper Drive

Testing Reel Drive Circuit Activate Function Using Cab Display Module

The cab display module (CDM) can be used to test the reel drive circuit, rather than using the controls on the operator's station.

IMPORTANT:

Do **NOT** overspeed the reel drive. Overspeeding can lead to vibration, belt failures, or other problems.

NOTE:

- The header must be attached to the windrower to follow this procedure. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).
- This procedure does not apply to windrowers with attached rotary disc headers.
- The engine must be running to perform this procedure.

DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.



Figure 3.197: CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until DIAGNOSTIC MODE? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.198: Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? appears on the upper line.
 - NO/YES will appear on the lower line.
6. Press right arrow (A) to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT will appear on the upper line.



Figure 3.199: Functions

7. Press SELECT (E) until REEL DRV SPD XXXX appears on the upper line.
8. Press and hold HAZARD (C) button.
 - Press left arrow (B) to decrease the reel speed.
 - Press right arrow (D) to increase the reel speed.

IMPORTANT:

Do **NOT** overspeed the reel.

NOTE:

Ensure that the reel drive is working properly.

9. Release HAZARD (C) button. The reel will stop.
10. Press PROGRAM (A) to exit programming mode or press SELECT (E) to proceed to the next header function option.



Figure 3.200: Reel Drive

OPERATOR'S STATION

Testing Rotary Disc Drive Circuit Activate Function Using Cab Display Module

The cab display module (CDM) can be used to test the rotary drive circuit, rather than using the controls on the operator's station.

IMPORTANT:

Do **NOT** overspeed the rotary drive. Overspeeding can lead to vibration, belt failures, or other problems.

NOTE:

- A rotary disc header must be attached to windrower to follow this procedure.
- The engine must be running to perform this procedure.

DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.



Figure 3.201: CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.202: Diagnostic Functions

OPERATOR'S STATION

5. Press SELECT (B) until ACTIVATE FUNCTIONS? appears on the upper line.
 - NO/YES will appear on the lower line.
6. Press right arrow (A) to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT will appear on the upper line.



Figure 3.203: Functions

7. Press SELECT (E) until DISC DRV SPD XXXX appears on the upper line.
8. Press and hold HAZARD button (C).
 - Press left arrow (B) to decrease the disc speed.
 - Press right arrow (D) to increase the disc speed.

IMPORTANT:

Do **NOT** overspeed the disc drive.

NOTE:

Ensure that the disc drive is working properly.

9. Release HAZARD button (C). The disc drive will stop.
10. Press PROGRAM (A) to exit programming mode or press SELECT to proceed to the next header function option.



Figure 3.204: Disc Drive

Testing Double Windrow Attachment Drive Activate Function Using Cab Display Module

The cab display module (CDM) can be used to test the Double Windrow Attachment (DWA) drive circuit, rather than using the controls on the operator's station.

IMPORTANT:

Do **NOT** overspeed the DWA drive. Overspeeding can lead to vibration, belt failures, or other problems.

NOTE:

- The DWA must be attached to the windrower and must have been activated under the WINDROWER SETUP menu. For more information, refer to [Configuring Double Windrow Attachment Controls, page 95](#).
- The engine must be running to perform this procedure.



DANGER

Ensure that all bystanders have cleared the area.

OPERATOR'S STATION

1. Start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode. Press SELECT (B).
 - WINDROWER SETUP? will appear on the upper line.



Figure 3.205: CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.206: Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? appears on the upper line.
 - NO/YES will appear on the lower line.
6. Press right arrow (A) to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT will appear on the upper line.



Figure 3.207: Functions

OPERATOR'S STATION

- Press SELECT (E) until ACTIVATE DWA DRV appears on the upper line.
- Press and hold HAZARD button (C).
 - Press left arrow (B) to decrease the DWA drive speed.
 - Press right arrow (D) to increase the DWA drive speed.

IMPORTANT:

Do **NOT** overspeed the DWA drive.

NOTE:

Ensure that the DWA drive is working properly.

- Release HAZARD button (C). The DWA drive will stop.
- Press PROGRAM (A) to exit programming mode or press SELECT (E) to proceed to the next header function option.

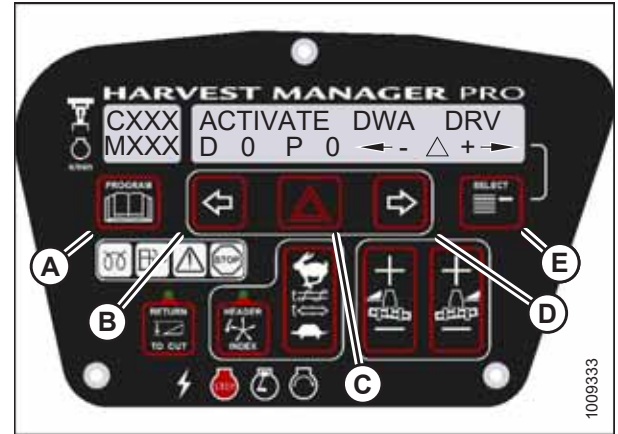


Figure 3.208: DWA Drive

Testing Reel Fore-Aft Activate Function Using Cab Display Module

The cab display module (CDM) can be used to test the reel fore-aft circuit, rather than using the controls on the operator's station.

NOTE:

- The windrower must be attached to a header to perform this procedure. For more information, refer to [5 Attaching and Detaching Headers, page 235](#).
- The engine must be running to perform this procedure.

DANGER

Ensure that all bystanders have cleared the area.

- Start the engine.
- Press PROGRAM (A) and SELECT (B) simultaneously on the CDM to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.



Figure 3.209: CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until DIAGNOSTIC MODE? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.210: Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? appears on the upper line.
 - NO/YES will appear on the lower line.
6. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.211: Functions

7. Press SELECT (D) until ACTIVATE REEL F/A appears on the upper line.
 - FORE/AFT will appear on the lower line.
8. Ensure that the reel fore-aft function is working properly.
 - a. Press and hold left arrow (B) to move the reel forward. Press and hold right arrow (C) to move the reel aftward.
 - b. Press PROGRAM (A) to exit programming mode or press SELECT (D) to proceed to the next header function option.



Figure 3.212: Reel Fore-Aft

Activating Hydraulic Purge Using Cab Display Module

The hydraulic purge removes air from the hydraulic pump system after it has been repaired or changed. A purge can be initiated by accessing the WINDROWER SETUP menu in the windrower's cab display module (CDM).

NOTE:

The engine must be running to perform this procedure.

⚠ DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Press PROGRAM (A) and SELECT (B) simultaneously on the cab display module (CDM) to enter programming mode.
 - WINDROWER SETUP? will appear on the upper line.



Figure 3.213: CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? appears on the upper line.
 - NO/YES will appear on the lower line.
4. Press right arrow (A) to select YES. Press SELECT (B).



Figure 3.214: Diagnostic Functions

OPERATOR'S STATION

5. Press SELECT (B) until ACTIVATE FUNCTIONS? appears on the upper line.
 - NO/YES will appear on the lower line.
6. Press right arrow (A) to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT will appear on the upper line.
 - DOWN/UP will appear on the lower line.



Figure 3.215: Functions

7. Press SELECT (B) until ACTIVATE HYD PURGE? appears on the upper line.
 - NO/YES will appear on the lower line.
8. Press right arrow (A) to select YES. Press SELECT (B).
 - TO ACTIVATE PURGE will appear on the upper line.
 - PRESS AND HOLD will appear on the lower line.

NOTE:

Holding right arrow (A) activates a timed purge cycle. The CDM will jump to the exit menu if the arrow is released before the end of the timed cycle.



Figure 3.216: Hydraulic Purge

9. Press and hold right arrow (A) to begin the purge cycle.
 - PURGE CYCLE STARTED will appear on the upper line.
10. When the message PURGE CYCLE ENDED appears, release right arrow (A).
 - NO EXIT YES will appear on the lower line.
11. Press the right arrow to select YES. Press SELECT.
12. Press PROGRAM to exit programming mode or press SELECT to proceed to the next header function option.



Figure 3.217: Hydraulic Purge Cycle

3.19.15 Engine Error Codes

To assist the Operator or Technician in diagnosing engine problems, the cab display module (CDM) displays error codes when there is a fault with one or more of the sensors which monitor engine operation parameters.

For an explanation of an engine error code, refer to [9.4 Engine Error Codes, page 534](#).

3.19.16 Cab Display Module and Windrower Control Module Fault Codes

To assist the Operator or Technician in locating a specific problem with the windrower, the cab display module (CDM) displays fault codes when there is a fault with one of the sensors which monitor windrower performance parameters.

For an explanation of a fault code, refer to [9.5 Cab Display Module Error Codes, page 545](#).

Chapter 4: Operation

Safely operating your machine requires familiarizing yourself with its capabilities.

4.1 Owner/Operator Responsibilities

Owning and operating heavy equipment comes with certain duties.



CAUTION

- It is your responsibility to read and understand this manual completely before operating the windrower. Contact your Dealer if an instruction is not clear to you.
- Follow all safety messages in this manual and on the safety signs on the windrower.
- Remember that YOU are the key to safety. Good safety practices protect you and the people around you.
- Before allowing anyone to operate the windrower, for however short a time or distance, ensure that they have been instructed in its safe and proper use.
- Review this manual and all other relevant safety information with all the windrower's Operators every year.
- Be alert for other Operators not using recommended procedures or not following safety precautions. Correct these mistakes immediately, before an accident occurs.
- Do NOT modify the windrower. Unauthorized modifications may impair the functionality or the safety of the machine, and may reduce the windrower's service life.
- The safety information provided in this manual does NOT replace the safety codes, insurance requirements, or laws applicable to the region in which you will be operating the windrower. Ensure that your machine complies with all relevant regulations.

4.2 Symbol Definitions


The symbols presented in this topic provide at-a-glance information on critical windrower performance parameters.

Ensure that you are familiar with the meaning of these symbols before operating the windrower.

4.2.1 Engine Functions

These symbols, found on the console, indicate that the button or indicator on which the symbol is found pertains to a particular windrower engine function.

Figure 4.1: Engine Function Symbols

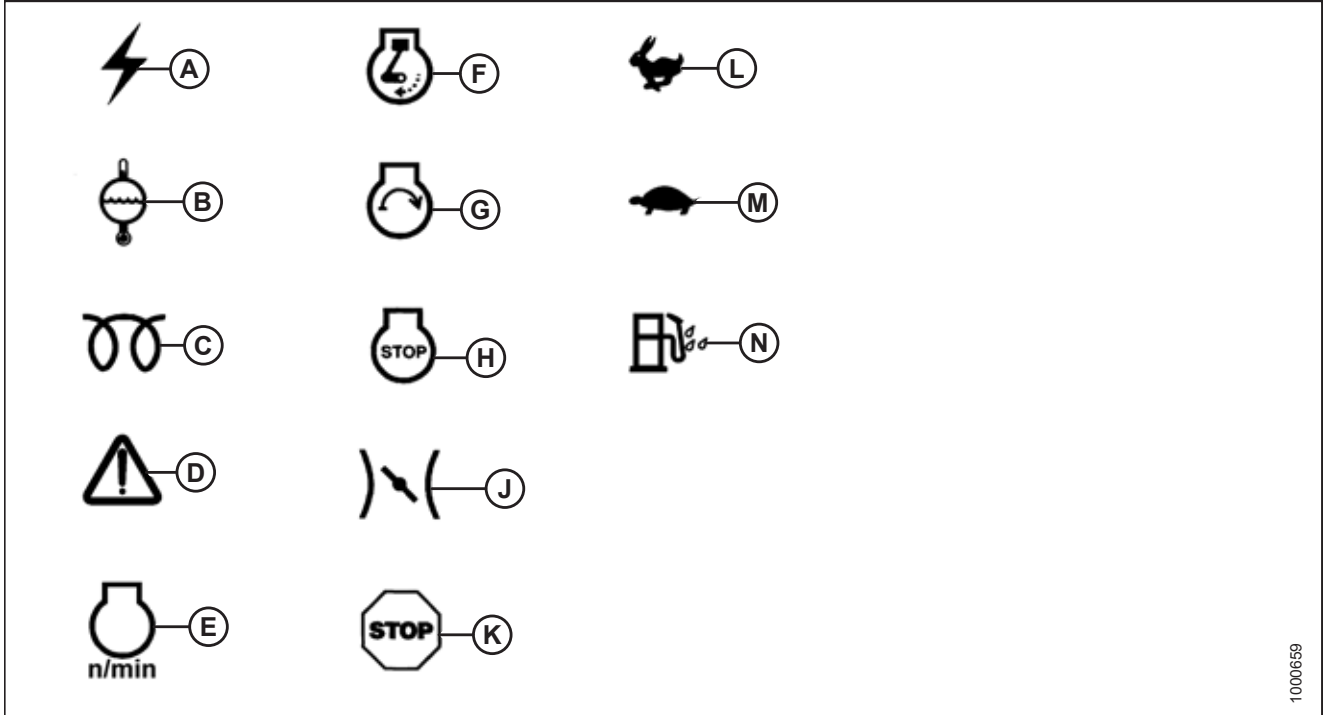

- A - Electrical Power – Accessories
- D - Engine Malfunction
- G - Engine Start
- K - Engine Urgent Stop
- N - Water in Fuel

- B - Engine Coolant Temperature
- E - Engine rpm
- H - Engine Stop
- L - Fast


- C - Engine Glow Plugs
- F - Engine Run
- J - Engine Throttle
- M - Slow

1000659

4.2.2 Windrower Operating Symbols

These symbols, found on the console, indicate that the button or indicator on which the symbol is found pertains to a particular windrower function.

Figure 4.2: Windrower Operating Symbols

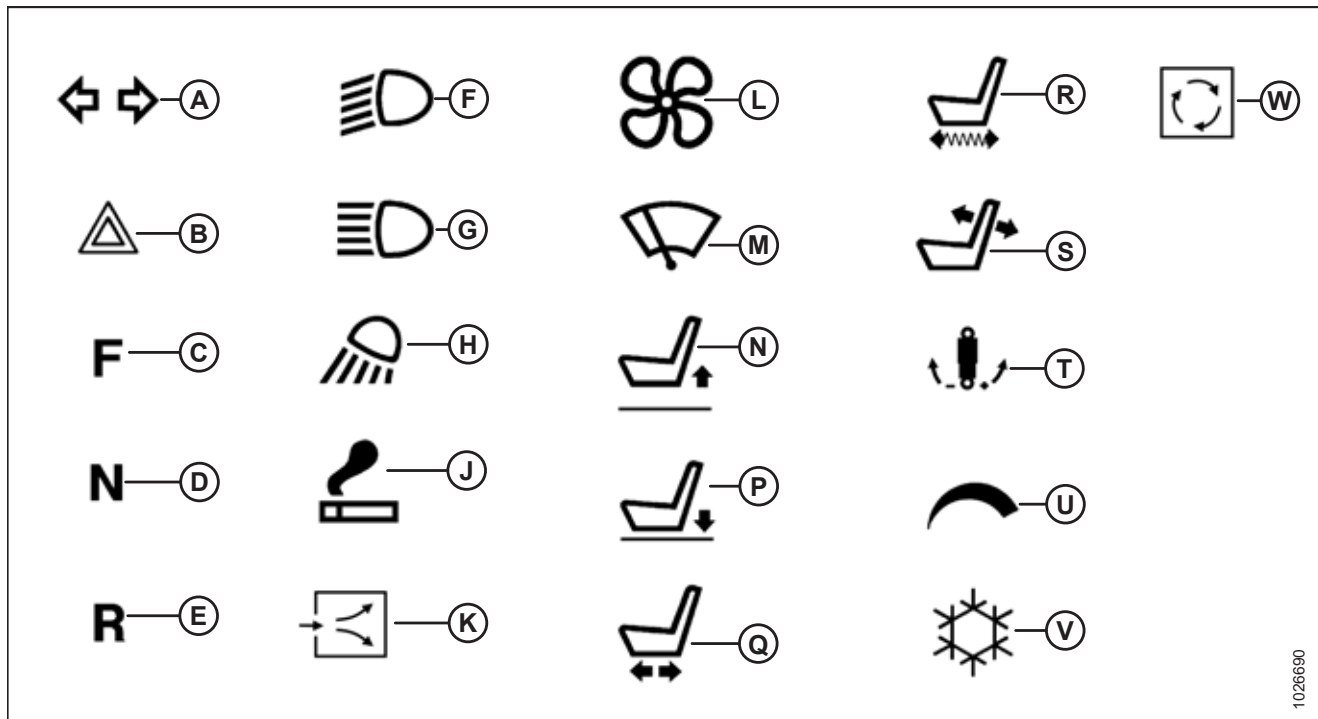

A - Turn Signals

D - Neutral

G - Headlights High Beam

K - Fresh Air

N - Seat Height Up

R - Seat Fore Aft Isolator

U - Cab Temperature Control

B - Hazard Warning Lights

E - Reverse

H - Work Light

L - Blower

P - Seat Height Down

S - Seat Back Fore and Aft

V - Air Conditioning

C - Forward

F - Headlights Low Beam

J - Lighter

M - Windshield Wiper

Q - Seat Fore and Aft

T - Seat Ride Damping

W - Recirculate

4.2.3 Header Functions

These symbols, found on the console, indicate that the button or indicator on which the symbol is found pertains to a particular header function.

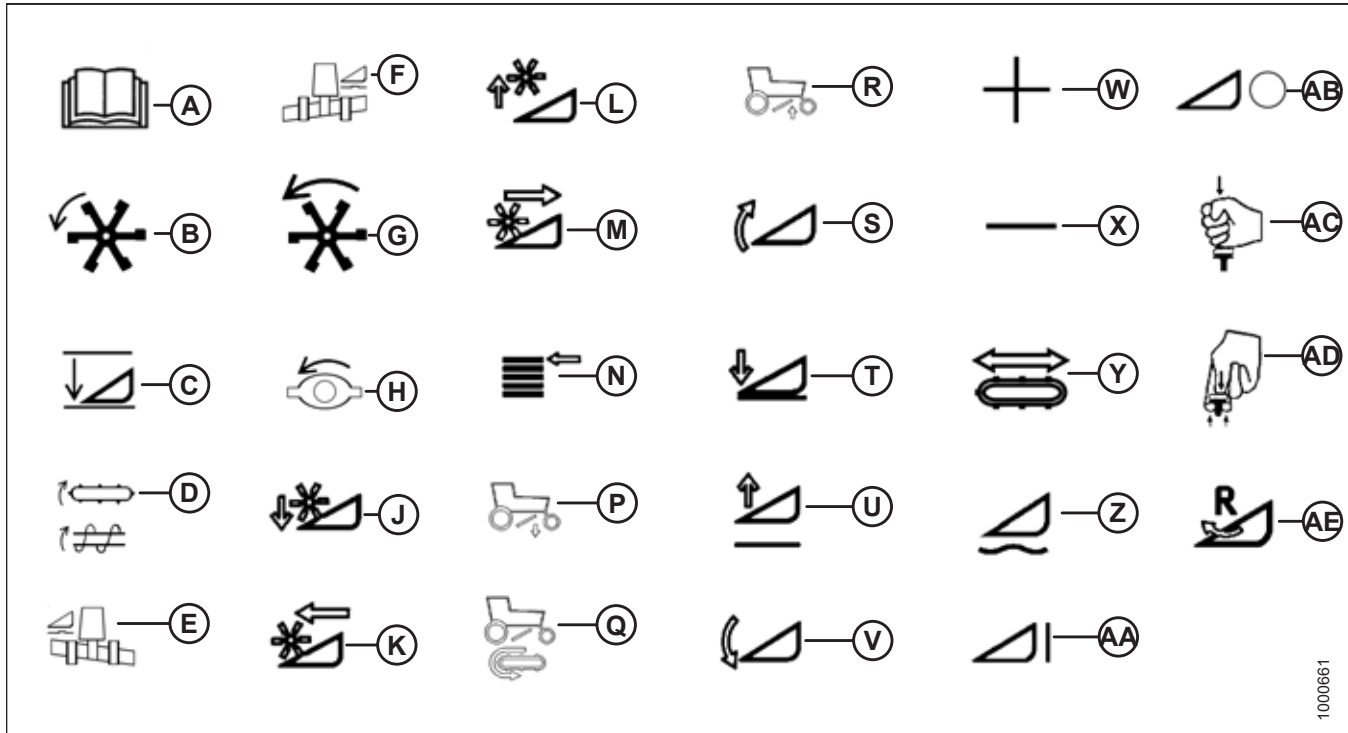


Figure 4.3: Header Function Symbols

- | | | |
|----------------------------|-----------------------|---------------------------------|
| A - Program | B - Header Index | C - Return to Cut |
| D - Conveyor/Auger Speed | E - Float Left | F - Float Right |
| G - Reel Speed | H - Disc Speed | I - Reel Down |
| K - Reel Forward | L - Reel Up | M - Reel Rearward |
| N - Display Select | P - DWA Down | Q - DWA Draper Speed |
| R - DWA Up | S - Header Tilt Up | T - Header Down |
| U - Header Up | V - Header Tilt Down | W - Increase |
| X - Decrease | Y - Deck Shift | Z - Float |
| AA - Header Engage | AB - Header Disengage | AC - Push Down Header Disengage |
| AD - Pull Up Header Engage | AE - Header Reverse | |

4.3 Operating Windrower

Safely operating your machine requires familiarizing yourself with its capabilities.

4.3.1 Operational Safety

There are several safety considerations for the Operator to take into account before operating the windrower.

CAUTION

Follow these safety precautions:

OPERATION

- Wear close-fitting clothing and protective shoes with slip resistant soles.
- Remove any foreign objects from the machine and from the surrounding area.
- Carry with you any protective clothing and personal safety devices that may be necessary through the day, such as a hard hat, protective glasses, goggles, heavy gloves, a respirator, and a dust mask. Don't take chances.



Figure 4.4: Safety Equipment

- Protect yourself against noise. Wear a suitable hearing protective device such as earmuffs or ear plugs to protect against objectionable or uncomfortable loud noises.
- Follow all safety and operational instructions provided in the operator's manuals. If you do not have a manual, get one from your Dealer and read it thoroughly.
- Never attempt to start the engine or operate the machine except from the operator's seat.
- Check the operation of all controls in a safe clear area before starting work.
- Check for excessive vibration and unusual noises. If there is any indication of trouble, shut down and inspect the machine. Follow proper shutdown procedure. Refer to [Stopping Engine, page 162](#).
- Operate the machine only in daylight or good artificial light.



Figure 4.5: Safety Equipment

4.3.2 Break-In Period

During the first 150 hours of windrower operation, certain windrower systems will require extra attention.

DANGER

Before investigating an unusual sound or attempting to correct a problem, place the ground speed lever (GSL) in the N-DETENT position, shut off the engine, and remove the key from the ignition.

- Operate the engine at moderate load and avoid extremely heavy or light loading for longer than 5 minutes.
- Avoid unnecessary idling. If the engine will be idling longer than 5 minutes after reaching operating temperature, shut off the engine.
- Check the engine oil level frequently. Watch for any signs of oil leakage. If you need to add oil to the windrower's engine, refer to [Checking Engine Oil Level, page 400](#).

NOTE:

During the break-in period, a higher-than-usual oil consumption should be expected.

OPERATION

NOTE:

If the windrower must be driven in cold weather (that is, when the ambient temperature is below freezing), let the engine idle for three minutes after starting the engine, and then operate the engine at moderate speed until the oil has warmed up.

- Monitor the coolant gauge in the cab to see if the engine coolant temperature rises beyond the normal operating range.
- Verify that the coolant level in the reserve tank (mounted next to radiator) stays between the HOT and COLD marks on the tank.

For more information about the cooling system, refer to [6.9.6 Engine Cooling System, page 422](#).

In addition to the above items, carry out regular maintenance procedures, as detailed in [6.1 Maintenance Schedule, page 365](#):

IMPORTANT:

Until you become familiar with the sound and feel of your new windrower, be extra alert and attentive.

NOTE:

Before taking the ground speed lever (GSL) out of the N-DETENT position, let the hydraulic oil warm up to 32°C (90°F).

4.3.3 Preseason Checks / Annual Service

These checks should be performed at the beginning of every harvest season, or annually, whichever comes first.



CAUTION

- Review this operator's manual annually to refresh your memory on safety and operating recommendations.
- Review all safety signs and other decals on the windrower and note any potential hazard areas.
- Ensure that all shields and guards are properly installed and secured. Never alter or remove safety equipment.
- Ensure that you understand and have practiced safe use of all the windrower's controls. Know the capacity and operating characteristics of the machine.
- Keep a properly stocked first aid kit and a charged fire extinguisher on the windrower.

To prepare the windrower for field work after storing it, do the following:

1. Perform the following tasks:
 - a. Drain off any excess hydraulic oil added for storage purposes. Refer to [6.11.3 Changing Hydraulic Oil, page 476](#).
 - b. Remove the plastic bags and/or tape from all sealed openings (for example: the air cleaner intake, the exhaust pipe, or the fuel tank).
 - c. Charge the windrower's battery and install it. Ensure that the terminals are clean and that the cables are connected securely.
 - d. Adjust the tension on the air conditioning (A/C) compressor belt. For instructions, refer to [Tensioning Air Conditioner Compressor Belt, page 439](#).
 - e. Distribute the A/C refrigerant by cycling the A/C switch. For instructions, refer to [Cycling Air Conditioning Compressor Coolant, page 159](#).
 - f. Check the entire A/C system for leaks.
2. Perform the annual maintenance procedures. For instructions, refer to [6.1 Maintenance Schedule, page 365](#).

OPERATION

Cycling Air Conditioning Compressor Coolant

If the windrower has been stored for more than week, the coolant in the air conditioning (A/C) compressor will need to be cycled before the cabin A/C system can be used.

1. Turn blower switch (A) to the first position, temperature control switch (D) to the maximum heating position, and air conditioning (A/C) control switch (B) to the OFF position.

DANGER

Ensure that all bystanders have cleared the area.

2. Start the engine. Allow the engine to operate at low idle until it is warm.
3. Move A/C switch (B) from the OFF position to the ON position for 1 second, then back to the OFF position for 5 – 10 seconds. Repeat this step ten times.

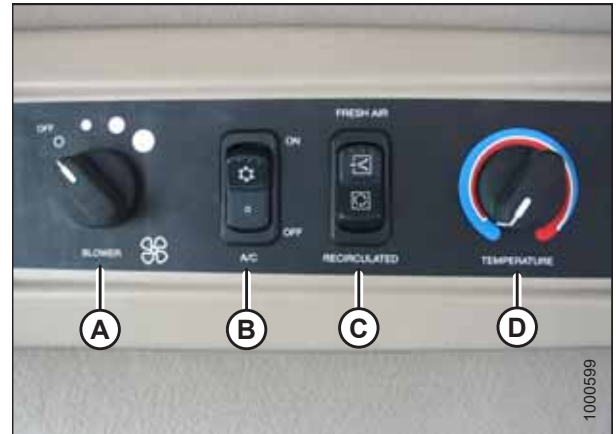


Figure 4.6: Climate Control

A - Blower Switch
C - Outside Air Switch

B - Air Conditioning Switch
D - Temperature Control

4.3.4 Daily Checks and Maintenance

Some quick checks and maintenance tasks will need to be performed daily on the windrower.

1. Check the machine for fluid leaks.

NOTE:

Use the proper procedure when searching for pressurized fluid leaks. For instructions, refer to [Hoses and Lines, page 480](#).

2. Check for any missing or broken parts.
3. Clean the windrower's windows and mirrors to ensure good visibility in all directions. Stand on the platform to access the rear window. Hold onto the handholds on the cab front corners and stand on the header's anti-slip strips to get access to the front window.
4. Clean all lights and reflective surfaces.
5. Perform the specified daily maintenance procedures. For instructions, refer to [6.1 Maintenance Schedule, page 365](#).

4.3.5 Engine Operation

To ensure the length of the windrower's service life, its engine needs to be started, operated, and shut down according to the provided procedures.

OPERATION

Starting Engine

To ensure its service life, start the windrower's engine by following the provided procedure.

DANGER

- This machine has safety devices which allow the engine to start only when the ground speed lever is in the N-DETENT position, the steering wheel is locked in the NEUTRAL position, and the header drive switch is in the OFF position. Under no circumstances are these devices to be deliberately rewired or misadjusted so that the engine can be started with the controls out of the NEUTRAL position.
- Do NOT start the engine by shorting across the starter or starter relay terminals. The windrower will start and might be able to move if the drive is engaged.
- Start the engine only from the operator's seat with the controls in the NEUTRAL position. NEVER start the engine while standing on the ground. Never try to start the engine with someone under or near the windrower.
- Before starting the engine, ensure that there is plenty of ventilation; the exhaust from the engine is dangerous to bystanders when emitted in an unventilated environment.

WARNING

If the starter is able to engage when the steering wheel is unlocked, or when the ground speed lever is out of the NEUTRAL position, or when the header clutch is engaged, DO NOT ATTEMPT TO OPERATE THE WINDROWER. Contact your Dealer immediately for more information.

IMPORTANT:

Do NOT tow the machine to start the engine; this will damage the hydrostatic drives.

1. Main battery disconnect switch (A) is located on the right frame rail, behind the maintenance platform, and can be accessed by moving the platform. Ensure that the switch is in the POWER ON position.

WARNING

Before starting the engine, fasten your seat belt and ensure that the trainer's seat belt is used if the seat is occupied.

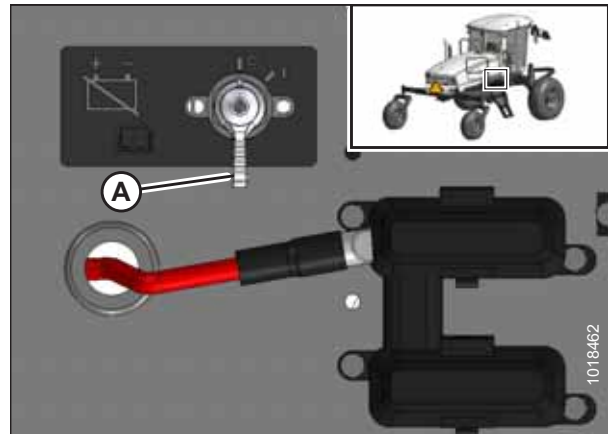


Figure 4.7: Battery Disconnect Switch

OPERATION

2. Ensure that lock (A) at the base of the steering column is engaged in either the cab-forward or the engine-forward position.
3. Move ground speed lever (GSL) (B) into the N-DETENT position.

4. Turn the steering wheel until it locks.

IMPORTANT:

Do **NOT** attempt to force the wheel out of the locked position; damage to the traction system may occur.

NOTE:

It may be possible to move the steering wheel slightly in the locked position.

5. Fasten your seat belt.
6. Push HEADER DRIVE switch (C) to ensure that it is OFF.

DANGER

Ensure that all bystanders have cleared the area.

7. Set throttle (A) to the START position (fully back).
8. Sound the horn three times.
9. Turn ignition key (B) to the RUN position. A single loud tone will sound, the engine warning lights will light up as the ignition self-test is performed, and the cab display module (CDM) will display the messages HEADER DISENGAGED and IN PARK.
10. Turn ignition key (B) to the START position until the engine starts, then release the key. The CDM will display programmed header data for five seconds (if a header is attached to the windrower), and then will resume displaying whatever was previously displayed.



Figure 4.8: Operator Controls



Figure 4.9: Operator Console

IMPORTANT:

The windrower's gauges and instruments provide important information about the windrower's operating status. Familiarize yourself with the gauges; monitor them carefully during when starting the windrower. Refer to [3.16 Engine Controls and Gauges, page 58](#) for more information.

IMPORTANT:

- Do **NOT** operate the starter for longer than 15 seconds at a time.
- If the engine does not start, wait at least 2 minutes before trying to start the engine again.
- After the third unsuccessful attempt to start the engine, allow the solenoid to cool for 10 minutes before trying again. If the engine still does not start, refer to [7.1 Engine Troubleshooting, page 503](#).
- Do **NOT** operate the engine above 1500 rpm until the engine temperature gauge indicates that the engine coolant temperature is above 40°C (100°F).

OPERATION

NOTE:

When the ambient temperature is below 5°C (40°F), follow the normal starting procedure. The engine will cycle through a period where it appears to labor until the engine warms up. The throttle will be unresponsive during this time, because the engine is now in WARM UP mode. This mode will last from 30 seconds to 3 minutes, depending on the ambient temperature. After the engine has stabilized and is idling normally, the throttle will become active again.

NOTE:

Before taking the GSL out of the N-DETENT position, warm the hydraulic oil up to 32°C (90°F).

Engine Warm-Up

The windrower's engine must be allowed to reach operating temperature before you begin doing field work.

Allow the engine to run with throttle lever (A) at or near the low-idle position until the reading on temperature gauge (B) reaches approximately 40°C (100°F). Before taking the ground speed lever (GSL) out of N-DETENT, let the hydraulic oil warm up to 32°C (90°F).

NOTE:

You can view the engine temperature reading in the cab display module (CDM). For more information, refer to [Engine Temperature](#), page 164.



Figure 4.10: Operator Console

Engine Intermediate Speed Control

The windrower's engine can be set so that it operates at a particular speed. This feature is useful when cutting a light crop, where maximum engine output is not needed; this allows for reduced fuel consumption, noise levels, and emissions, while also reducing wear on the engine.

The engine operating speed can be set to enable the windrower to operate at reduced rpm: 1800, 2000, or 2200 rpm. This can be done without significantly affecting the ground or header speeds. The default setting is 2200 rpm or the last selected speed setting.

NOTE:

Previous M Series Self-Propelled Windrower models included an OFF (full throttle) option; the option is **NOT** available on the M155 Self-Propelled Windrower.

The programmed engine speed is activated when the header is engaged.

For instructions on using engine intermediate speed control, refer to [Setting Engine Intermediate Speed Control](#), page 105.

Stopping Engine

Before turning the ignition key to the OFF position, ensure that the windrower has been idled for a sufficient amount of time.

CAUTION

Park on a flat, level surface with the header on the ground, the ground speed lever (GSL) in the N-DETENT position, and the steering wheel in the locked position (centered). To confirm that the parking brake is engaged, wait for the cab display module (CDM) to beep and display the message **IN PARK**.

OPERATION

IMPORTANT:

Before stopping the engine, allow the engine to run at low idle for approximately 5 minutes. This will allow heated engine parts to cool down, and will allow the turbocharger to slow down while engine oil pressure is available.

1. If there is a header attached to the windrower, then lower the header.
2. Place GSL (B) into the N-DETENT position.
3. Lock the steering wheel.
4. Turn ignition key (A) counterclockwise to the OFF position. The engine will stop.



Figure 4.11: Operator Console

Filling Fuel Tank

Diesel fuel is added to the windrower's fuel tank via the fuel filler neck.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

WARNING

- To prevent personal injury or death from an explosion or fire, do NOT allow open flames or sparks near the windrower when it is being refueled.
- Do NOT refuel the windrower when the engine is hot or running.
- Ensure that the fuel delivery system is properly bonded and grounded. A bonded fuel delivery system has an electrically conductive and unbroken connection between all components of the fuel delivery system. A wire connection from the fuel delivery system to the machine chassis will equalize the static potential between the two machines, further reducing the chance of a static electric discharge. A properly grounded fuel delivery system has an electrically conductive connection from the fuel delivery system tank to the ground.

CAUTION

Do NOT allow the tank to empty. Running out of fuel can cause air locks and/or contamination of the fuel system.

1. Shut down the engine, and remove the key from the ignition.
2. Stand on either platform to access the fuel tank filler pipe.

OPERATION

3. Clean the area around filler cap (A).
4. Turn cap handle (B) counterclockwise until it is loose. Remove the cap.
5. Fill the tank with approved fuel. Refer to the inside back cover of this manual for the recommended fuel.

IMPORTANT:

Do **NOT** fill the tank completely—space is needed for expansion. A filled tank could overflow if exposed to a rise in temperature, such as direct sunlight.

6. Replace fuel tank cap (A) and turn cap handle (B) clockwise until it is snug.

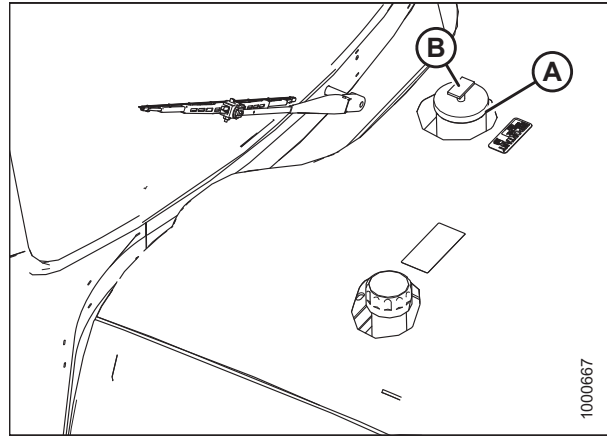


Figure 4.12: Fuel Filler Cap

Engine Temperature

The reported engine temperature tells the Operator how hot the coolant that circulates around the engine is. The windrower's engine is designed to work optimally at a specific coolant temperature, so the coolant temperature should be checked periodically during operation.

The normal engine operating temperature range is 82–104°C (180–220°F). The engine temperature is indicated by gauge (B) on the operator's console.

If the reported engine coolant temperature exceeds 104°C (220°F), the CDM will begin to emit a tone intermittently, and the flashing message ENGINE TEMP will appear on the display. Stop the engine **IMMEDIATELY** and determine the cause of the overheating condition before attempting to operate the windrower again. When the engine coolant temperature drops below 102°C (215°F), the CDM will stop emitting the tone and the ENGINE TEMP message will not appear on the display any longer.

NOTE:

Before taking the ground speed lever (GSL) out of the N-DETENT position, let the hydraulic oil warm up to 32°C (90°F).



Figure 4.13: Operator Console

Engine Oil Pressure

Oil pressure is a critical parameter of engine operation, since the quality of lubrication directly determines the efficiency and lifespan of the windrower's engine. If oil pressure is too low or too high, the engine's performance and longevity can be adversely affected. Oil pressure warnings may trigger the lighting up of the symbols on the operator's console and messages on the cab display module (CDM).

The nominal engine oil pressure is 69 kPa (10 psi) at low idle and 380 kPa (55.1 psi) at maximum rated speed.

If the oil pressure drops below 52 kPa (7.5 psi), an error code and error message will appear on the CDM.

If the STOP ENGINE symbol lights up, stop the engine **IMMEDIATELY** and investigate.

IMPORTANT:

Attempting to operate the engine when the STOP ENGINE symbol is lit can result in permanent damage to the engine.

If the yellow CAUTION symbol lights up, the windrower can continue to be operated safely; however, it is **STRONGLY** recommended that the Operator continue to monitor the engine carefully.

OPERATION

Cab Display Module Voltage Display

The electrical system's voltage is displayed on the cab display module (CDM) when this option is selected with the SELECT button on the ground speed lever (GSL) handle or the SELECT switch on the CDM.

Refer to the table below for information on what the various voltage readings might indicate about the status of the electrical system.

Table 4.1 Windrower Electrical System Voltage Readings and their Interpretations

Ignition State	Engine State	Reading (V)	Indicated Condition
ON	Running	13.8–15.0	The electrical system is working as expected
		> 16.0 ²⁵	The regulator is out of adjustment
		< 12.5 ²⁵	The alternator is not working, or the regulator is out of adjustment
	Shut down	12.0	The electrical system is working as expected

Engine Warning Lights

The engine warning light symbols on the operator's console are used to alert the Operator to abnormal engine operating states. Operators should familiarize themselves with the meanings of these symbols, as operating the engine when a symbol is active can lead to irreversible engine damage.

There are four engine warning lights on the operator's console. Any of these symbols may light up if the windrower's computer detects abnormalities while the engine is running. The engine warning lights should **NOT** be lit when the windrower is operating normally. For more information, refer to [Engine Warning Lights, page 78](#).

25. When the reading is above 16.0 volts, the voltage message on the CDM will begin flashing, and the CDM will emit a single loud tone. The CDM will emit another tone every 30 minutes, until the voltage reading drops below 16.0 volts.

4.3.6 Driving Windrower

Driving the windrower presents several safety risks, which can be mitigated or avoided by following the provided safety instructions.

DANGER

- NEVER move the ground speed lever (GSL) or the steering wheel until you are sure all bystanders have cleared the area.
- Ensure that the area is clear of bystanders and obstacles before making turns; the ends of an attached header travel in a wide arc.
- Check the operation of all controls in a safe area before starting work.
- Understand the capabilities and the operating characteristics of your machine.
- Do NOT allow riders in or on the machine.
- Do NOT operate the machine unless you are seated in the operator's position.
- Do NOT attempt to get on or off of a moving windrower.
- AVOID sudden starts and stops.
- AVOID inclines, ditches, and fences.
- Do NOT rapidly accelerate or decelerate when turning.
- REDUCE your speed before turning, crossing slopes, or travelling over rough ground.
- Do NOT allow anyone to stand behind the machine while it is operating, as objects may be forcibly ejected by the header and could injure bystanders.

WARNING

Seat belts can help ensure your safety when they are properly used and maintained.

- Before starting the engine, fasten your seat belt, and ensure that the training seat occupant's seat belt is securely fastened.
- Never wear a seat belt loosely or leave any slack in the belt system. Never wear the belt in a twisted condition or pinched between the seat structural members.

WARNING

Avoid driving the machine with the header removed. Removing the header decreases the weight on the drive wheels, reducing steering control. If you must drive the machine with the header removed and without a MacDon weight system:

- Use the windrower's low-speed range.
- Do NOT allow the engine to exceed 1500 rpm.
- Avoid loose gravel and slopes.
- Never use the windrower as a towing vehicle when the header is removed, except as instructed in *Towing Header with Windrower, page 179*. There is insufficient weight on the drive wheels to provide steering control.
- If control of the machine is lost, immediately pull the ground speed lever (GSL) to the NEUTRAL position.
- Be aware that the cab is NOT designed to withstand a rollover. Because of the windrower's operating characteristics, a reinforced cab capable of withstanding a rollover is not required.

 **WARNING**

When operating the windrower on an incline:

- Lower the header.
- Reduce the windrower's ground speed.
- Move the GROUND SPEED RANGE switch to L (low range).
- If the windrower's ground speed is greater than or equal to 40 km/h (25 mph), the CDM will display a warning message (SLOW DOWN) and will emit a tone. Move the GSL closer to NEUTRAL to reduce the windrower's ground speed.

 **CAUTION**

Hydrostatic steering control differs from mechanical steering in these respects:

- Hydrostatic steering is more sensitive than mechanical steering. Do NOT make abrupt changes in steering direction.
- When operating the windrower in reverse, take account of the fact that steering wheel will produce the opposite results, compared to operating in the forward direction.
- When the engine is running, moving the ground speed lever out of the N-DETENT position will unlock the steering wheel. Any movement of the steering wheel will then cause the machine to move, even if the ground speed lever is still in the NEUTRAL position.
- The parking brake is only applied when the GSL is in the N-DETENT position and the steering wheel is centered and locked.

Entering and Exiting Windrower

Safely exiting or entering the windrower's cab requires that you follow the proper procedure.

 **CAUTION**

To prevent slipping and possible injury, ALWAYS face the windrower and use the hand rail when dismounting or mounting. NEVER attempt to get on or off a moving windrower. Before leaving the operator's seat for any reason:

- Park the windrower on a flat, level surface. Put the ground speed lever into the N-DETENT position and center the steering wheel in the locked position. Wait for the cab display module (CDM) to emit a tone and display an "In Park" message to confirm that the parking brake is engaged.
- Fully lower the header and the reel (if applicable).
- Disengage the header drives.
- To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition.
- Turn off the lights, unless their being on is required for inspection purposes.
- Release the seat belt.
- Turn off the wipers.
- Raise the armrest and steering wheel for easier exit and re-entry.
- Lock the cab door if you are leaving the windrower unattended.

OPERATION

Swing-away platforms and stairs (A) are provided on both sides of the windrower to accommodate cab-forward and engine-forward access to the operator's station, as well as several maintenance tasks.

The left cab-forward side platform is shown in the rearward (cab-forward) position.

Two doors (B) are provided for cab entry and exit in either cab-forward mode or engine-forward mode. Enter the cab using whichever door is opposite the operator's console.

NOTE:

When the engine is shut down, the rear field lights will activate for 60 seconds. The rear field lights will illuminate the platform and the stairs, allowing for safe egress from the windrower.

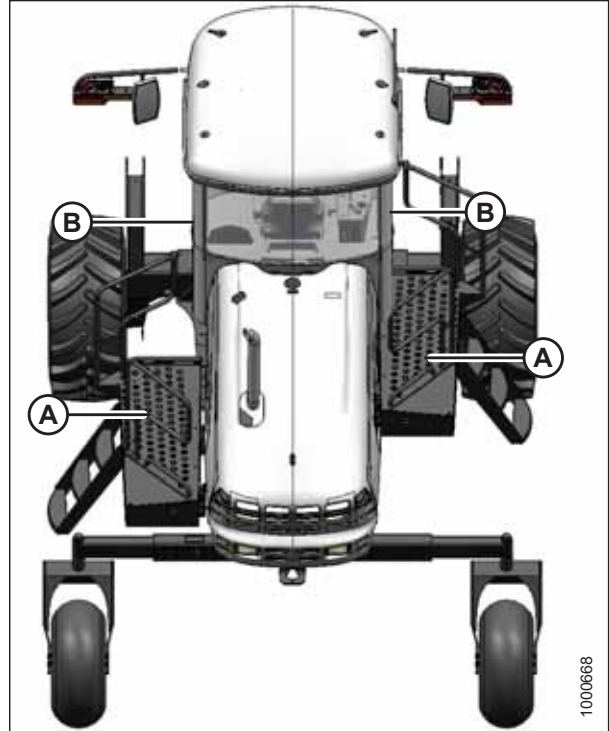


Figure 4.14: Platforms and Doors

Driving Forward in Cab-Forward Mode

The windrower can be operated in cab-forward mode when you want to attach the windrower to and operate a header. Be aware that the windrower will steer from the rear when in this mode; the windrower should be operated gently until you are comfortable with this mode.

CAUTION

Operate both the steering wheel and the ground speed lever (GSL) slowly until you are familiar with them. Avoid the common tendency of new Operators to oversteer (that is, to turn more sharply than necessary).

WARNING

Do NOT drive the windrower on the road when it is in cab-forward mode, unless it is equipped with the proper lighting and markings for cab-forward road travel.

In cab-forward mode, the operator's station is facing away from the engine. If necessary, swivel the operator's seat to the cab-forward position as follows:



Figure 4.15: Cab-Forward Mode

OPERATION

1. Move GSL (A) to the N-DETENT position. The engine can be running.

IMPORTANT:

If the GSL is **NOT** in the N-DETENT position, the GSL cable may be damaged when you swivel the operator's station.

2. Pull up and hold knob (B) to release latch (C) at the base of the steering column.
3. Turn the steering wheel counterclockwise to pivot the operator's station clockwise 180°. When the operator's station has turned fully, the pin will engage the latch, securing the operator's station in its position.
4. Ensure that the Operator's seat belt is fastened.



Figure 4.16: Operator Console

DANGER

Ensure that all bystanders have cleared the area.

5. If it is not already running, start the engine. For instructions, refer to [Starting Engine, page 160](#).
6. Raise the header just enough to clear common obstacles. Do not raise the header higher than is necessary, as this will upset the windrower's center of gravity. Ensure that the Operator has good visibility out of the cab and that motorists are able to see the header's lights.
7. There are two cab-forward speed ranges. Set GROUND SPEED RANGE switch (A) to either H (0–25.7 km/h [16 mph]), or L (0–17.7 km/h [11 mph]).
8. Slowly push throttle (B) to the fully forward position (that is, the operating speed position). The cab display module (CDM) should display 2320–2350 rpm on screen (C).
9. Slowly move GSL (E) out of the N-DETENT position to the desired speed setting. The selected speed setting will appear on screen (D).



Figure 4.17: Operator Console

Driving in Reverse in Cab-Forward Mode

The windrower's GROUND SPEED RANGE switch will need to be in the low position before the windrower can be operated in reverse. When reversing, the steering wheel will produce the opposite response in the direction of the windrower from that produced when it is operating in the forward direction.

WARNING

Back up slowly. Hold the steering wheel at the bottom and turn the wheel in the direction you want the rear (cab-forward) of the machine to travel.

OPERATION

1. Move GROUND SPEED RANGE switch (A) to L (the low-range position).
2. Move throttle lever (B) to a mid-range position.

NOTE:

Steering will be less sensitive when the windrower is operating in the low-speed range, and the engine speed will be reduced.

DANGER

Ensure that all bystanders have cleared the area.

3. Move the ground speed lever (GSL) rearward to the desired speed setting.
4. Steer the windrower as shown.



Figure 4.18: Operator's Console

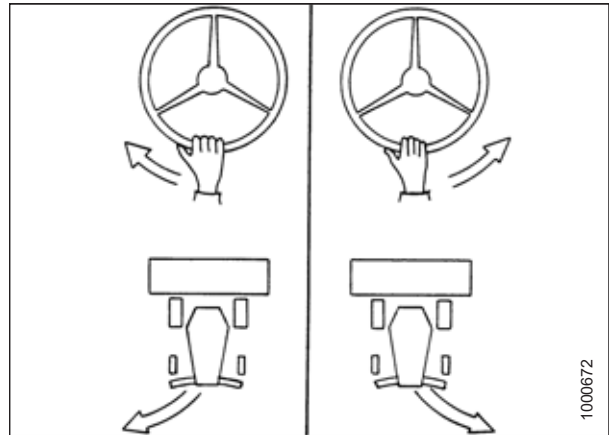


Figure 4.19: Operating in Reverse when the Windrower is in Cab-Forward Mode

Driving Forward in Engine-Forward Mode

In engine-forward mode, the operator's station will face the engine, and the header will be behind the Operator. Generally, this mode is used when operating the windrower on a roadway.

If necessary, swivel the operator's station to the engine-forward position:



Figure 4.20: Engine-Forward – Seat Faces Engine

OPERATION

1. Place ground speed lever (GSL) (A) in the N-DETENT position and lock the steering wheel. The engine can be running.

IMPORTANT:

If the GSL is **NOT** in the N-DETENT position, the GSL cable may be damaged when you swivel the operator's station.

2. Pull up on and hold knob (B) to release latch (C) at the base of the steering column.
3. Turn the steering wheel counterclockwise to pivot the operator's station clockwise 180°. When the operator's station has turned fully, the pin will engage the latch, securing the operator's station in its position.

DANGER

Ensure that all bystanders have cleared the area.

4. If it is not already running, start the engine. For instructions, refer to [Starting Engine, page 160](#).
5. Set GROUND SPEED RANGE switch (A) to the H position for road speed (0–37 km/h [23 mph]). The cab display module (CDM) will display ROAD GEAR at location (F) and will emit a tone.
6. Slowly push throttle (B) to the fully forward position (operating speed). The CDM will display 2320–2350 rpm at location (C).
7. Slowly move GSL (E) forward to the desired speed. The reported ground speed will appear at location (D).



Figure 4.21: Engine-Forward – Seat Faces Engine



Figure 4.22: Operator Console

CAUTION

Operate both the steering wheel and ground speed lever slowly while becoming familiar with the machine. Remember that the steering is more sensitive when the speed-range control is in high road speed position. Avoid the common tendency of new Operators to oversteer.

OPERATION

8. If more tractive power is required (for example, when driving up a ramp, up a hill, or out of a ditch)
 - a. Move GSL (E) closer to NEUTRAL.
 - b. Switch speed-range control (A) to the L (low range) position.
9. Once the windrower is on flat ground
 - a. Set GSL (E) to **NOT MORE THAN HALF** of the maximum forward speed.
 - b. Move speed-range switch (A) to **H** (high range).

NOTE:

The steering is more sensitive in this speed range.

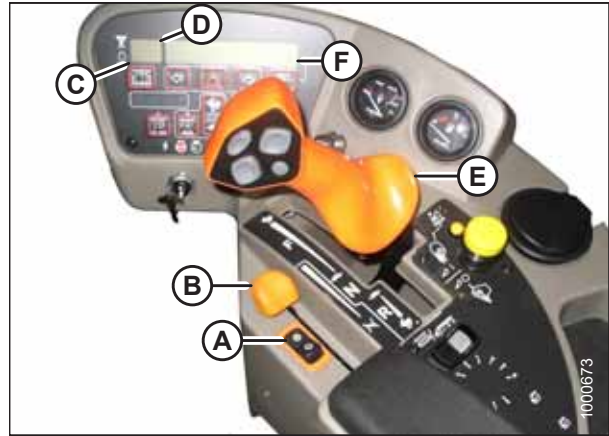


Figure 4.23: Operator Console

Driving in Reverse in Engine-Forward Mode

Ensure that the windrower's GROUND SPEED RANGE switch is in the low position before attempting to operate in reverse. Be aware that the steering wheel will produce the opposite response in the direction of the windrower from that produced when it is operating in the forward direction.

WARNING

Back up slowly. Hold the steering wheel at the bottom and turn the wheel in the direction you want the rear (cab-forward) of the machine to travel.

1. Move speed-range switch (A) to the L (low-range) position.
2. Move throttle lever (B) to a mid-range position.

NOTE:

Reversing in the low-speed range and at a reduced engine speed is recommended, since steering will be less sensitive than at higher speed settings.

DANGER

Ensure that all bystanders have cleared the area.

3. Move ground speed lever (GSL) (C) rearward to the desired speed.



Figure 4.24: Operator Console

OPERATION

4. Steer the windrower as shown.

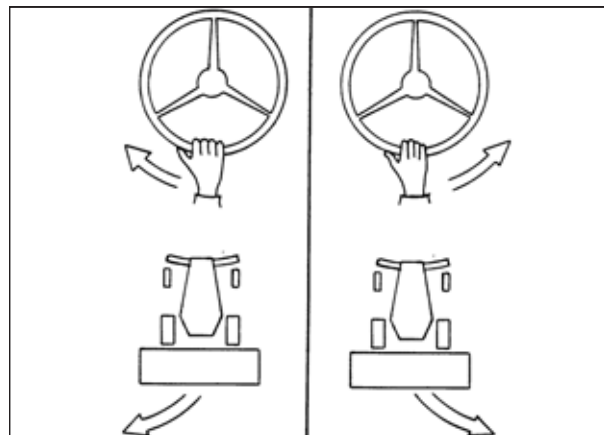


Figure 4.25: Operating in Reverse when Windrower is in Cab-Forward Mode

Spin Turning

The caster wheels on the windrower allow for turns with a very small radius. The faster the windrower is going, the larger the radius of the turn will be.

CAUTION

Be sure the area is clear before making turns. Although the windrower pivots on the spot, the ends of the header travel faster and in a large arc.

1. Move ground speed lever (GSL) (A) out of the N-DETENT position to a moderate setting.
2. Slowly turn the steering wheel in the direction in which you would like the windrower to turn. The windrower will pivot between the drive wheels.
3. To increase the radius of the turn, slowly move the GSL away from NEUTRAL.

NOTE:

The higher the ground speed, the wider the turn will be.

4. To stop the turn, slowly turn the steering wheel back to its centered position.



Figure 4.26: Operator Console

Stopping

Moving the ground speed lever to the N-DETENT position applies the windrower's wheel brakes. After the windrower has stopped, the engine will need to be allowed to idle for a sufficient amount of time before it can be shut off.

WARNING

Do NOT move the ground speed lever (GSL) rapidly back to NEUTRAL. You may be thrown forward by a sudden stop and the wheels may skid, reducing steering control. Always wear a seat belt when operating the windrower.

CAUTION

Park on a flat, level surface with the GSL in the N-DETENT position and the steering wheel centered in the locked position. Wait for the CDM to beep and display an “In Park” message to confirm the parking brake is active.

1. **SLOWLY** return GSL (A) to the NEUTRAL position and into the N-DETENT position.
2. Turn the steering wheel until it locks.
3. Move throttle lever (B) to the low idle position.

NOTE:

Avoid idling the engine unnecessarily. Stop the engine if it will be idling for longer than five minutes.

NOTE:

The brakes are automatically engaged when the steering wheel is locked in the NEUTRAL position.

IMPORTANT:

Before stopping the engine, allow the engine to run at low idle for approximately five minutes to allow hot engine parts to cool, and to allow the turbocharger fan to slow down while engine oil pressure is still available.

4. Turn the ignition key counterclockwise to the OFF position.



Figure 4.27: Operator Console

4.3.7 Adjusting Caster Tread Width

The windrower's rear casters can be moved closer together. This allows the windrower to be loaded onto a trailer and shipped without having to remove the casters entirely. A narrower tread width also suits windrowers paired with smaller headers, by allowing more space for the uncut crop. A narrower setting also makes it easier to maneuver around obstacles such as poles and irrigation inlets. Wider settings are more suitable for heavy crops, which can produce large windrows.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

CAUTION

Park on a flat, level surface with the header on the ground, the ground speed lever (GSL) in the N-DETENT position, and the steering wheel in the locked position (centered). To confirm that the parking brake is engaged, wait for the cab display module (CDM) to beep and display the message IN PARK.

OPERATION

1. Park the windrower on level ground, shut down the engine and remove the key from the ignition.
2. Position a jack or other lifting device under the frame at location (A). Raise the rear of the windrower slightly so that most of the weight is off of the casters.

IMPORTANT:

The lifting device should have a lifting capacity of at least 2270 kg (5000 lb.).

3. Remove six bolts and washers (B) (four on the backside, two on the underside) from the left and right ends of the walking beam.

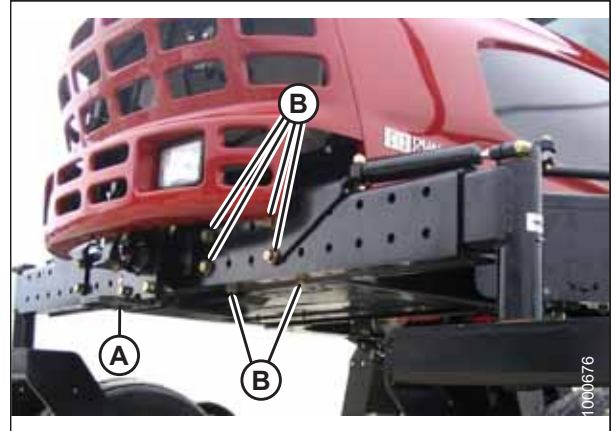


Figure 4.28: Caster Wheel Extensions

4. Slide the extensions inboard or outboard equally and align the holes at the desired locations.

NOTE:

Use the caster wheels to assist in moving the extensions: rotate the casters until the wheels are parallel to the walking beam.



Figure 4.29: Caster Wheel Extensions

IMPORTANT:

The caster wheels must be an equal distance (as indicated by [A]) from the center of the windrower.

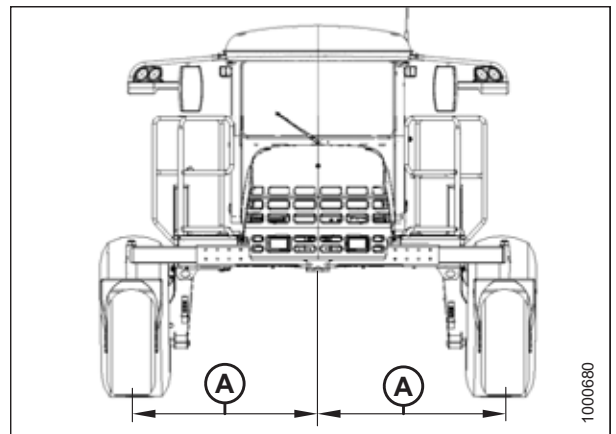


Figure 4.30: Adjustable Caster Wheels

OPERATION

5. Line up the holes in the walking beam. Install shorter bottom bolts (B).
6. Position bracket (A) and install back bolts (C).
7. Tighten the bolts as follows:
 - a. Snug bottom bolts (B), then snug back bolts (C).
 - b. Tighten and torque back bolts (C) to 447 Nm (330 lbf-ft).
 - c. Tighten and torque bottom bolts (B) to 447 Nm (330 lbf-ft).
8. Lower the windrower to the ground.

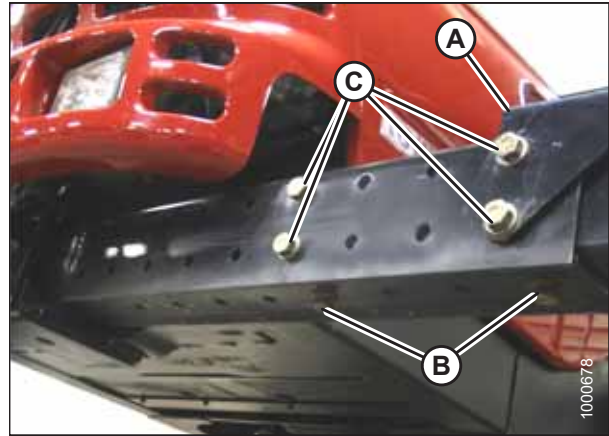


Figure 4.31: Caster Wheel Extensions

IMPORTANT:

Torque the bolts again after the first 5 and 10 hours of operation after changing the position of the casters.

4.3.8 Transporting

The windrower can be driven from one location to another. If correctly equipped, the windrower can also tow a header. The windrower should generally **NOT** be towed, however, as this can result in damage to the hydrostatic drives, though a procedure for emergency towing is provided.

Driving on Road

The windrower is designed to be driven on the road with the engine facing forward to provide better visibility for the Operator and improved stability for the machine. The windrower can also be driven on the road in cab-forward mode, but at a reduced speed and under restricted conditions.

WARNING

A collision between the windrower and other vehicles may result in injury or death.

WARNING

When driving the windrower on public roadways:

- Obey all highway traffic regulations in your area. Arrange to have pilot vehicles in the front and the rear of the windrower, if doing so is required by law.
- Display a slow-moving vehicle emblem and flashing warning lights, unless these actions are prohibited by law.
- If the width of the attached header impedes other vehicle traffic, remove the header and install a MacDon-approved weight box on the windrower. This will allow the windrower to be driven safely on roadways without an attached header.

WARNING

- Do **NOT** drive the windrower on the road when it is in cab-forward mode, unless the optional lighting and marking kit is installed; the marking and lighting on the windrower when it is in this mode are not compliant with most road regulations. For more information, refer to [8.4.1 Lighting and Marking for Cab-Forward Road Travel, page 519](#).
- Do **NOT** drive the windrower on a road or a highway at night or in conditions that reduce visibility, such as fog or rain. The width of the windrower may not be apparent to other drivers in these conditions.

CAUTION

Operate both the steering wheel and ground speed lever slowly while becoming familiar with the machine. Remember that the steering is more sensitive when the speed-range control is in high road speed position. Avoid the common tendency of new Operators to oversteer.

CAUTION

Familiarize yourself with the width regulations and lighting and marking requirements in your region before attempting to drive the windrower on a public road.

Before driving the windrower on a public roadway:

1. Ensure that HEADER DRIVE switch (A) is in the OFF position (down).
2. Clean the flashing amber lamps, red tail lamps, and head lamps, and ensure that they work properly.
3. Clean all reflective surfaces and slow moving vehicle emblems.
4. Clean the windows.
5. Adjust the interior rear view mirror so that you can see behind you.



Figure 4.32: Header Drive Switch

OPERATION

- Push the LIGHT switch to ROAD position (A) to activate the lamps. Always use these lamps when operating the windrower on public roads. For more information, refer to [3.7 Exterior Lighting, page 45](#).

NOTE:

If the auto-road light feature is activated (that is, when the windrower is in the engine- or cab-forward mode, is out of N-DETENT, is in high range switch position, and has the header disengaged), only the two front corner field lights will turn on; the other field lights will be inactive.

- Use HIGH/LOW LIGHTS (B) as needed to see farther. Turn the high beams off when other vehicles are approaching; refer to your local regulations to learn the legally required minimum distance at which the high beams must be turned off.
- Push BEACON switch (C) to the ON position to activate the beacons.

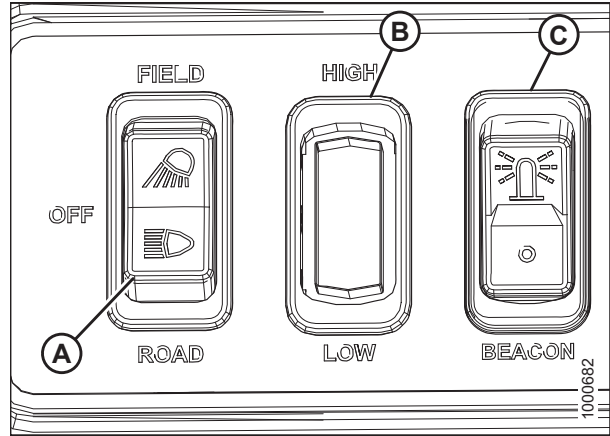


Figure 4.33: Light Switches

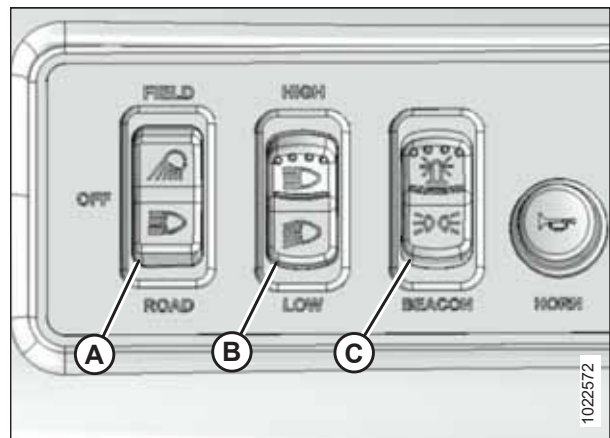


Figure 4.34: Light Switches – Russia

- Press switch (A) on the cab display module (CDM) to activate the hazard lights.

IMPORTANT:

Switch ON the beacon and hazard lights when travelling on the road with the transmission in the low range.



Figure 4.35: CDM

OPERATION

10. Set GROUND SPEED RANGE switch (A), the ROAD speed setting. The CDM will display ROAD GEAR at location (F) if the windrower is in engine-forward mode.

NOTE:

The GROUND SPEED RANGE switch can be moved to this position while the windrower is moving, but the windrower's ground speed must be less than 8 km/h (5 mph) for the road gear to successfully engage.

11. Slowly push throttle (B) to the fully forward position (operating speed). The CDM should display 2320–2350 rpm (C).
12. Slowly move ground speed lever (GSL) (E) forward to the desired speed. The reported ground speed will be displayed at location (F).
13. To slow the windrower, pull GSL (E) rearward to decrease the speed.
14. Move GSL (E) to N-DETENT to stop the windrower.
15. Lock the steering wheel.
16. Shut off the engine.
17. If you intend to drive on a public roadway while towing a header, refer to [Towing Header with Windrower, page 179](#) for more information.

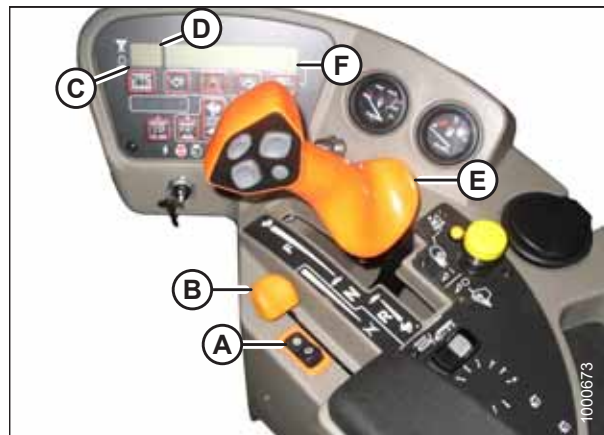


Figure 4.36: Operator Console

Towing Header with Windrower

The windrower can be used to tow a MacDon draper header that has the Slow Speed Transport option installed. Ensure that the optional weight box or an approved header transporter is installed on the windrower to transfer the windrower's weight to the lift arms.



WARNING

- A windrower without a header or weight box must NOT be used to tow a header, because the windrower will be unbalanced, which can cause the Operator to lose control of the machine.
- When towing equipment which lacks its own electric brakes, do NOT allow the windrower's ground speed to exceed 32 km/h (20 mph).



CAUTION

- To tow a header with an M155 Self-Propelled Windrower, the header must be equipped with the appropriate equipment to comply with local regulations.
- Before towing, conduct a pretrip inspection to verify that the relevant signal lighting and safety equipment is installed and functioning properly.
- Do NOT exceed the Combined Gross Vehicle Weight (CGVW) specified in Table 4.2, page 180.
- To prevent equipment damage or injury, ensure that the windrower and its attached equipment are within the following weight limits:



Figure 4.37: Towing a Header

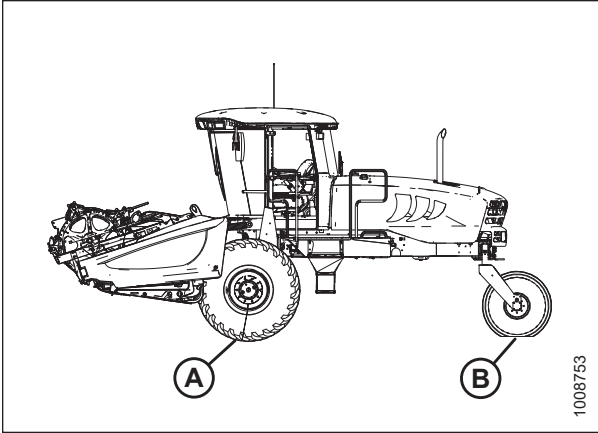


Figure 4.38: M Series Windrower

Table 4.2 Maximum Weight

		kg	lb.
Maximum GVW (includes mounted implements)		9750	21,500
Maximum CGVW (includes towed and mounted implements)		10,480	23,100
Weight on both drive wheels (A)	Maximum	8500	18,750
	Minimum	4570	10,070
Maximum weight on both caster tires (B)		2750	6050

Converting Windrower from Field to Transport Mode

To tow a header equipped with the Slow Speed Transport option, the windrower must be converted from field to transport mode. A weight box will be needed to ensure that the windrower remains balanced.

! DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator’s seat for any reason.

! DANGER

To prevent bodily injury from the fall of a raised header, always engage the safety props when working on or around a raised header, and before going under the header for any reason.

1. Lower the header.
2. Disconnect the following hydraulic and electrical connections:
 - a. **Left side:** Arrange the hydraulic hoses and electrical cable into the storage position. For instructions, refer to the header operator’s manual.
 - b. **Right side:** Release the multi-link and place it into the storage position on the windrower. For instructions, refer to the header operator’s manual.

OPERATION

- Retrieve the temporary lift pin from its storage location on the weight box and install it into rear hole (A) at the top of the lift arms. This provides additional lift height so that the transport wheels can easily be deployed.

DANGER

Ensure that all bystanders have cleared the area.

- Start the engine.
- Raise the header to its maximum height.
- Stop the engine, and remove the key from the ignition.
- Engage the safety props on the windrower's lift cylinders. Refer to [4.4.1 Engaging and Disengaging Header Safety Props](#), page 192 for instructions.
- Deploy the header's Slow Speed Transport system. For instructions, refer to the header operator's manual.

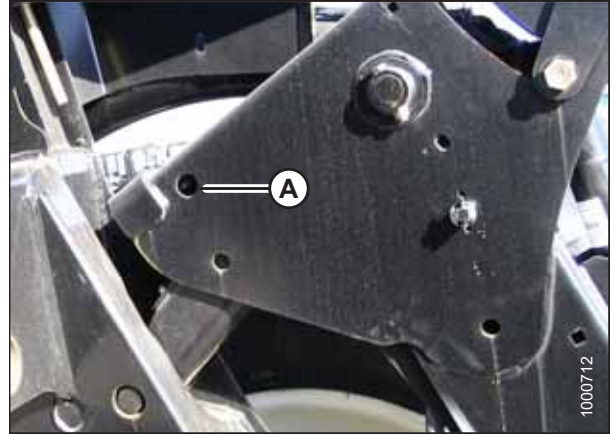


Figure 4.39: Lift Arms



Figure 4.40: Header in Transport Mode

- Remove the float pin from engaged position (A) and insert it in storage location (B). Secure the pin with a lynch pin.

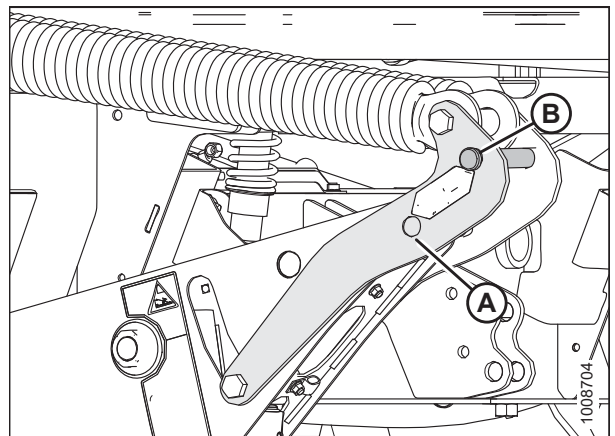


Figure 4.41: Lift Arms

OPERATION

10. Remove pins (A) from the lower end of the lift linkages.

NOTE:

Pins (A) are also used to secure the weight box to the windrower linkage.

11. Release the safety props on the header lift cylinders. For instructions, refer to [4.4.1 Engaging and Disengaging Header Safety Props](#), page 192.
12. Start the engine.
13. Lower the header until the weight is resting on the transport wheels.



Figure 4.42: Lift Arms

14. Use the HEADER TILT switches to release the load on the center-link, if necessary.
15. Shut down the engine and remove the key from the ignition.

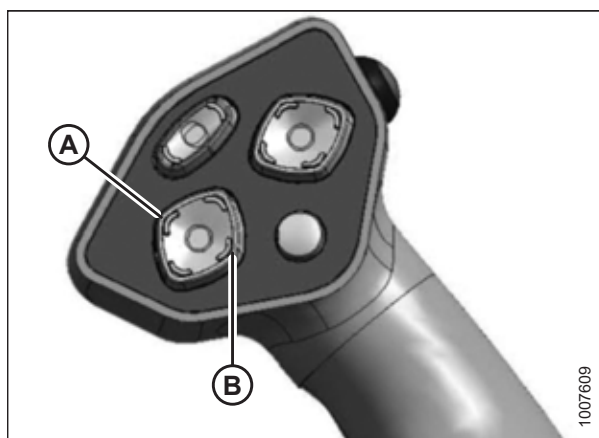


Figure 4.43: Ground Speed Lever (GSL)

A - Header Tilt Down

B - Header Tilt Up

16. If the windrower is equipped with a hydraulic center-link, disconnect the center-link:
 - a. Pull up on latch (A), and position the latch into notch (B) on the top of the hook.
 - b. Release the safety props on the header lift cylinders. For instructions, refer to [4.4.1 Engaging and Disengaging Header Safety Props](#), page 192.
 - c. Disengage the top-link from the header. If necessary, use the HEADER TILT switch to release load on the cylinder.
17. To unlock the center-link, pull up on latch (A) and position the latch into notch (B) on the top of the hook.
18. Lift the center-link off of the header pin.

NOTE:

If the center-link self-alignment kit is installed, start the engine and raise the center-link using the REEL UP switch on the ground speed lever (GSL).

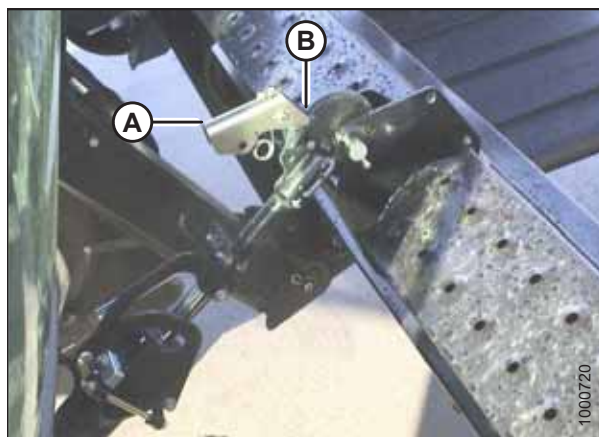


Figure 4.44: Hydraulic Link

OPERATION

19. Slowly back the windrower away from the header.
20. If the windrower is equipped with a mechanical link, disconnect the center-link:
 - a. Loosen nut (A) and rotate barrel (B) to relieve the load on the link.
 - b. Remove cotter pin (D) on pin (C), and remove the pin. Reinstall the pin in the header.

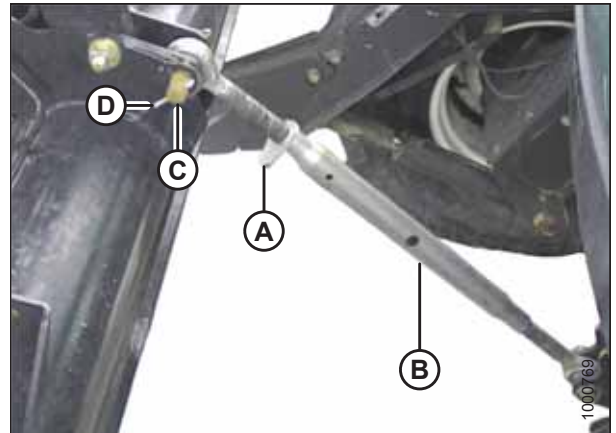


Figure 4.45: Mechanical Link

Converting from Transport Mode to Field Mode

Once the windrower and towed header have been moved to their new location, the windrower and header must be converted back to field mode before they can be used for field work.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine, and remove the key from the ignition.
2. Disconnect the electrical harness at connector (B) from the windrower. Store harness (A) on the weight box.



Figure 4.46: Electrical Harness

OPERATION

3. Disconnect wiring connector (A) at the front wheel.



Figure 4.47: Header Transport Wheel

4. Remove clevis pin (D).
5. Push latch (C) and lift tow-bar (A) from the hook. Release the latch and replace the clevis pin.
6. Unhook the tow-bar from the weight box.



Figure 4.48: Header Transport Wheel

DANGER

Ensure that all bystanders have cleared the area.

7. Start the engine.
8. Lower the lift arms until the rear of the lift arms floats up and away from the lift arm mechanism.
9. Stop the engine, and remove the key from the ignition.
10. Remove temporary lift pins (A) from the weight box. Install the pins into the holes at the rear of the lift arms.
11. Start the engine.
12. Raise the lift arms to their maximum height.
13. Stop the engine, and remove the key from the ignition.
14. Engage the lift cylinder safety props. For instructions, refer to [4.4.1 Engaging and Disengaging Header Safety Props](#), page 192.

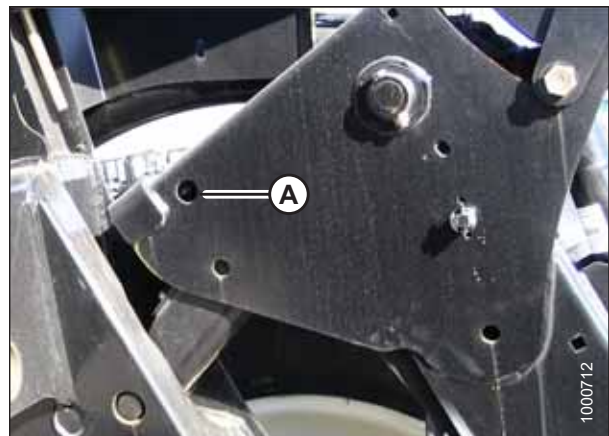


Figure 4.49: Lift Arms

OPERATION

15. Disengage the float. Store the pins at storage hole location (B). Move the float pins from working hole location (A).

IMPORTANT:

To prevent damage to the lift system when lowering the header lift linkages without a header or weight box attached to the windrower, ensure that the float engagement pin is installed in the storage hole location and **NOT** in the working hole location.

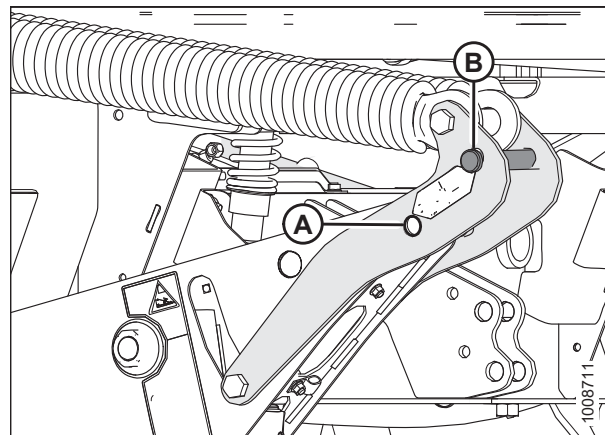


Figure 4.50: Float Pins

16. Remove pins (A) securing the lift linkages to the weight box. Retain the pins so they can be used to attach the header to the windrower.
17. Disengage the lift cylinder safety props. For instructions, refer to [4.4.1 Engaging and Disengaging Header Safety Props](#), page 192.
18. Start the engine.
19. Lower the weight box onto blocks, and back the windrower away.
20. Attach the header to the windrower. For instructions, refer to [5 Attaching and Detaching Headers](#), page 235.
21. Convert the header to field position. Refer to the header operator's manual for instructions.
22. Start the engine.
23. Lower the header to the ground. Continue to retract lift cylinders so that member (A) lifts off of link (B).
24. Remove temporary lift pins (C) from the lift arm. Install the pins into the storage holes in the weight box.
25. Before operating the windrower, double-check that all pins are secure and that all safety equipment is installed and fully functional.



Figure 4.51: Weight Box

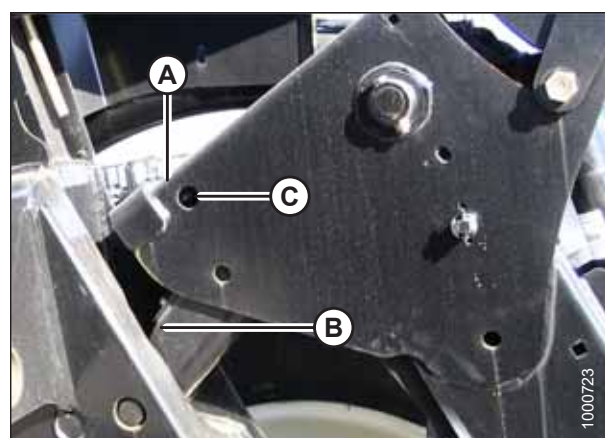


Figure 4.52: Lift Arms

OPERATION

Attaching Header in Transport Mode to Windrower

Once the windrower has been converted from the field position to the transport position, the weight box can be attached to the windrower, and the header's tow-bar can be attached to the weight box.

To attach the transport hitch to the header, follow these steps:

1. Position the end of aft section (A) onto front wheel hook (B).
2. Push down until latch (C) captures end (A).
3. Secure latch (C) with clevis pin (D).

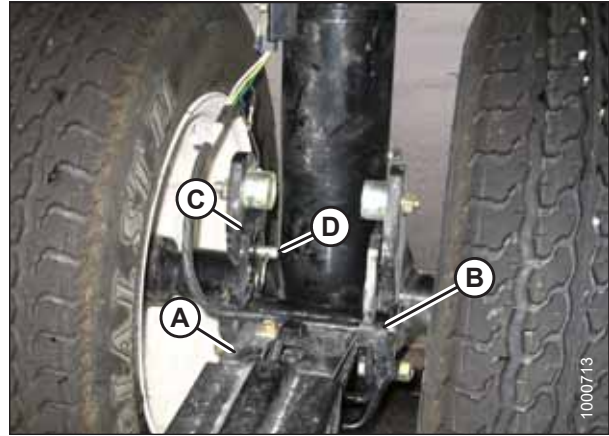


Figure 4.53: Transport Hitch

4. Remove the L-pin from end (A) of the aft section (if installed).

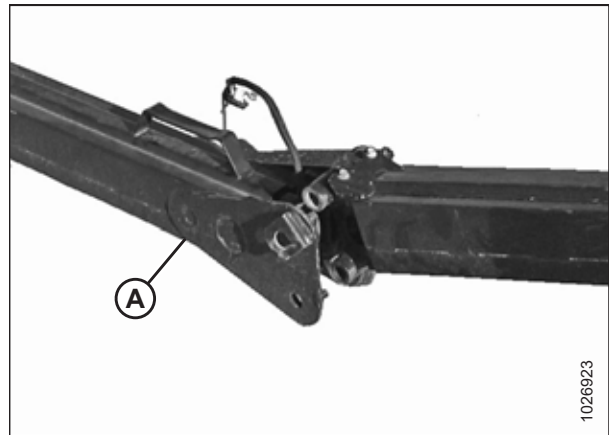


Figure 4.54: Transport Hitch

5. Position end (B) of the forward section into end (A) of the aft section. Lower the forward section into the aft section.

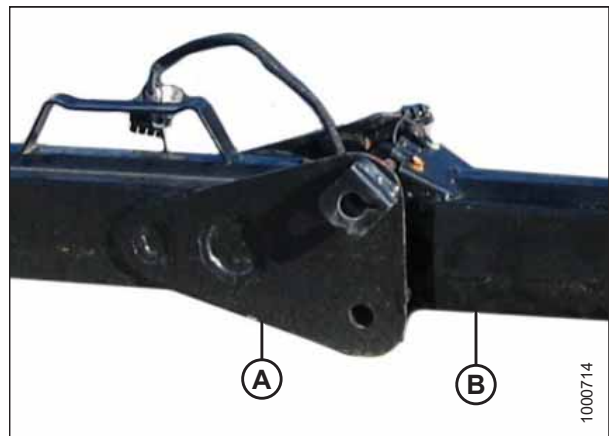


Figure 4.55: Transport Hitch

OPERATION

6. Fully insert L-pin (A) in the upper hole and turn the pin to lock it. Secure the pin with lynch pin (B).
7. Complete the electrical connection at joint (C).

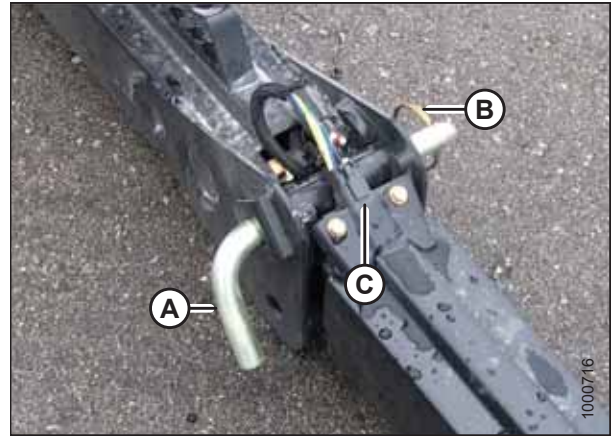


Figure 4.56: Transport Hitch

8. Complete the electrical connection at header wheel (A).



Figure 4.57: Header Transport Wheel

IMPORTANT:

To prevent damage to the lift system when lowering the lift linkages without a header or weight box attached to the windrower, ensure that the float engagement pin is installed in storage location (B) and is **NOT** installed in hole (A).

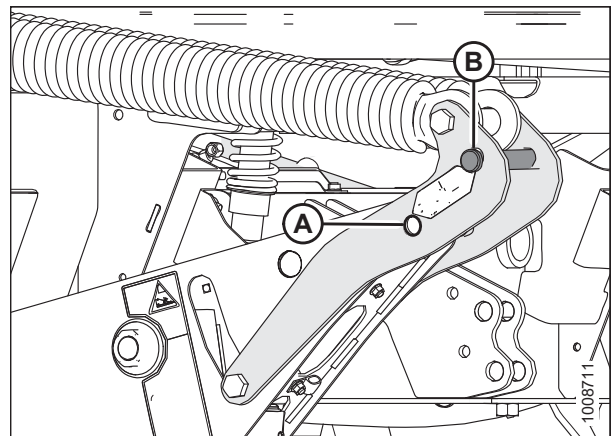


Figure 4.58: Lift Linkage

OPERATION

9. Drive the windrower forward so that the windrower's lift arms enter into the weight box's lift pockets.
10. Raise the lift arms slightly. Install locking pins (A) into the pockets through the windrower's lift linkages. Secure the locking pins with hairpins.

NOTE:

Pins (A) were previously removed from the header lift linkage's lower ends.



Figure 4.59: Windrower Lift Linkage

11. Route weight box harness (A) to the electrical connector on the left lift linkage. Connect the harness to connector (B) on the windrower.
12. Raise the lift arms fully.
13. Shut down the engine, and remove the key from the ignition.



Figure 4.60: Weight Box

14. Move the float pins from storage location (B) to engaged position (A).

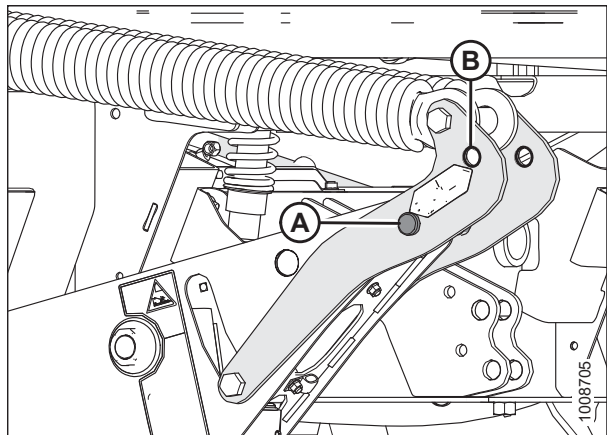


Figure 4.61: Lift Linkage

DANGER

Ensure that all bystanders have cleared the area.

OPERATION

15. Start the engine.
16. Press HEADER DOWN switch (A) on the ground speed lever (GSL) to lower the lift arms until the rear of the arms lift away from the linkage.



Figure 4.62: GSL

17. Attach the Slow Speed Transport hitch to the weight box tongue using the drawbar pin. Secure the hitch using lynch pin (A). Attach safety chain (B).
18. Connect hitch harness (C) to the electrical socket at the front of the weight box.

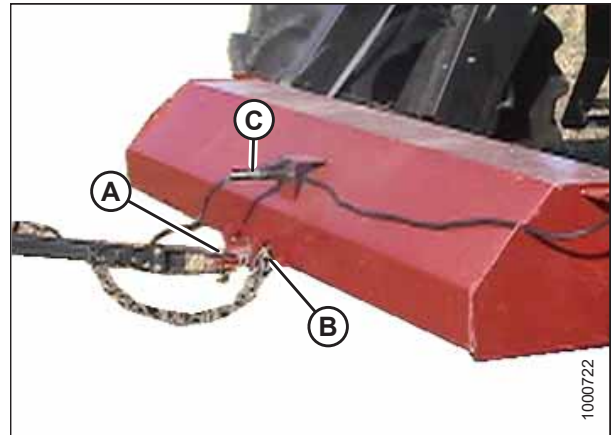


Figure 4.63: Weight Box

19. Remove temporary lift pins (A) (these should be sitting loose in the lift arms) and place them into the storage holes on the weight box.

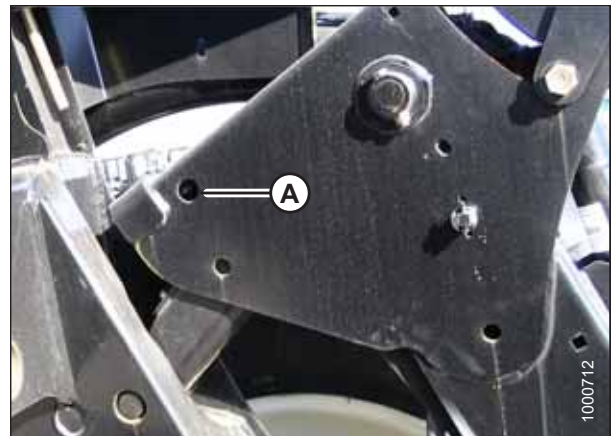


Figure 4.64: Lift Arms

OPERATION

Towing Windrower – Emergency

Towing the windrower is generally **NOT** recommended; however, it is important to be prepared for emergency situations if the windrower gets stuck, or must be hauled onto a truck or trailer.

IMPORTANT:

- **NEVER** attempt to start the windrower by towing it; damage to the wheel drives may occur.
- Failure to disengage the wheel drives before attempting to tow the header will result in transmission damage.
- Tow the windrower only for short distances, on level ground, and at slow speed.

⚠ DANGER

When the windrower's wheel drives are disengaged (turned inward), the windrower's brakes and steering will be nonfunctional, and the windrower will be able to roll away. After towing the windrower, place blocks under the front and rear wheels to prevent uncontrolled movement.

1. Disengage the wheel drives. For instructions, refer to [Engaging and Disengaging Wheel Drives, page 190](#).
2. Use attachment point (A) to tow the windrower if it gets stuck, or if it must be hauled onto a trailer for transport.
3. Place the blocks under the front and rear wheels to prevent uncontrolled movement.
4. Engage the windrower's wheel drives. For instructions, refer to [Engaging and Disengaging Wheel Drives, page 190](#).

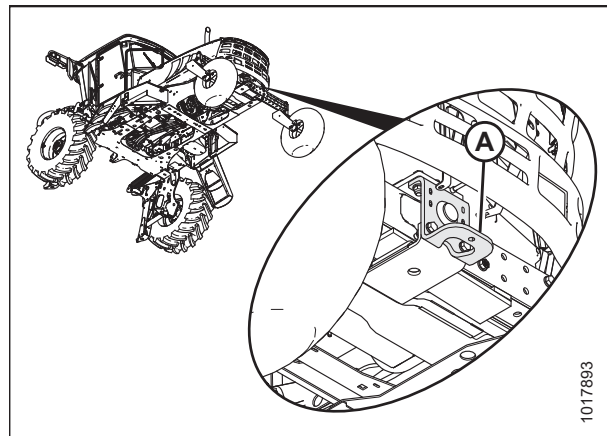


Figure 4.65: Emergency Towing

Engaging and Disengaging Wheel Drives

The wheel drives, along with the wheel drive motors, provide the motive force needed to turn the windrower's drive wheels. They may need to be disengaged for certain maintenance operations, or to tow the header.

⚠ WARNING

Park the windrower on a flat, level surface. Chock the wheels when disengaging the wheel drive to prevent the windrower from rolling away.

1. Park the windrower on a level surface.

OPERATION

2. Remove two bolts (A) at the center of the drive wheel.
3. Remove cap (B) and flip it over so that the convex side faces in.

NOTE:

The cap depresses a pin which disengages the wheel drive.

4. Reinstall bolts (A) to secure cap (B).
5. Repeat Step 2, page 191 to Step 4, page 191 on the other drive wheel.
6. To engage the wheel drives, reverse cap (B). Ensure that the pin at the center of the wheel pops out to engage the wheel drive.

NOTE:

Engaging the wheel drives may require rocking the wheels slightly.

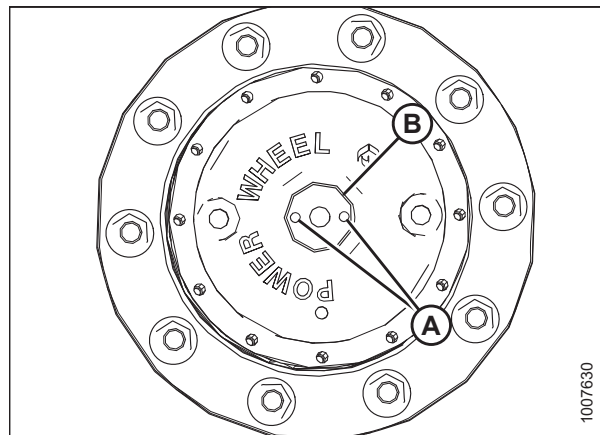


Figure 4.66: Wheel Drives – 10 Bolt

4.3.9 Storing Windrower

Several tasks must be performed before the windrower can be stored at the end of the season.



WARNING

Never use gasoline, naphtha, or any volatile material for cleaning purposes. These materials are toxic and can be flammable.



DANGER

Never operate the engine in an unventilated building. Proper ventilation is required to prevent exhaust gas hazards from occurring.



CAUTION

All of the exposed metal parts on a battery are electrically conductive. Never lay a metal object across the battery terminals; this will cause a short-circuit.

1. Clean the windrower thoroughly.
2. Store the windrower in a dry, protected place.
3. Remove and properly store the windrower's batteries. For instructions, refer to [Removing Batteries, page 447](#).
4. Charge the windrower's batteries and store them in a cool, dry area in an upright position. Do **NOT** stack one battery on top of another unless the batteries are both in cartons.
5. If the windrower is to be stored outside, cover the windrower with a waterproof tarpaulin or other protective material.
6. If no cover is available, seal the air cleaner intake and exhaust pipe with plastic bags and/or waterproof tape.
7. If possible, store the windrower on blocks to take the weight off of the tires. If blocking up the machine is not possible, increase the tire pressure by 25% over the recommended level. Be sure to adjust the tire pressure to the recommended operating value before the windrower is operated again.
8. Repaint all worn or chipped painted surfaces to prevent rust.

OPERATION

9. Lubricate the windrower thoroughly, leaving excess grease on the grease fittings. Apply grease to the exposed threads and the sliding surfaces of components.
10. Inspect the windrower for any worn or damaged components and repair them as needed. Tighten loose hardware. For the hardware torque values, refer to [9.1 Recommended Torque Values, page 521](#).
11. Check for any broken components and order replacements from your Dealer. Attending to these items right away will save time and effort at the beginning of the next season.
12. To protect the cylinder rods from rust and corrosion, retract the header lift cylinders, float cylinders, and header tilt cylinders.
13. Add an approved rust inhibitor to the engine oil in accordance with the manufacturer's instructions. Run the engine to operating temperature to mix the inhibitor with the oil, unless the product directs you to do otherwise.
14. To prevent condensation, fill the hydraulic oil reservoir to the top of the filler neck with an approved hydraulic system oil. For instructions, refer to [6.11.1 Checking and Filling Hydraulic Oil, page 474](#).
15. Test the engine coolant antifreeze concentration to ensure that it is sufficient to protect the engine against the lowest expected ambient temperature.

4.4 Operating with Header

This section describes the general operating instructions for a header attached to a MacDon M155 Self-Propelled Windrower.

The M155 Self-Propelled Windrower is designed to operate with the following MacDon headers:

- A Series Auger Header
- R and R1 Series Rotary Disc Header
- D and D1 Series Draper Header (with or without an attached Hay Conditioner)
- D2 Series Draper Header

NOTE:

The HC20 Hay Conditioner is **NOT** compatible with M Series Windrowers.

For the procedures for attaching the header to and detaching it from the windrower, refer to [5 Attaching and Detaching Headers, page 235](#).

4.4.1 Engaging and Disengaging Header Safety Props

Safety props are located on both header lift cylinders on the windrower. Engage the props any time you are going to work on or around the header when it is raised. When engaged, the safety props prevent a header from dropping suddenly if the lift system hydraulics lose pressure.

 **DANGER**

To prevent bodily injury from the fall of a raised header, always engage the safety props when working on or around a raised header, and before going under the header for any reason.

 **DANGER**

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

⚠ DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Press HEADER UP switch (A) to raise the header to its maximum height.
3. Rephase the cylinders if one end of the header does not rise fully:
 - a. Press and hold HEADER UP switch (A) until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.
4. Shut down the engine, and remove the key from the ignition.



Figure 4.67: Ground Speed Lever (GSL)

5. To engage the safety props on the lift cylinders:
 - a. Pull lever (A) and rotate it toward the header to lower safety prop (B) onto the cylinder.
 - b. Repeat the previous step for the opposite lift cylinder.

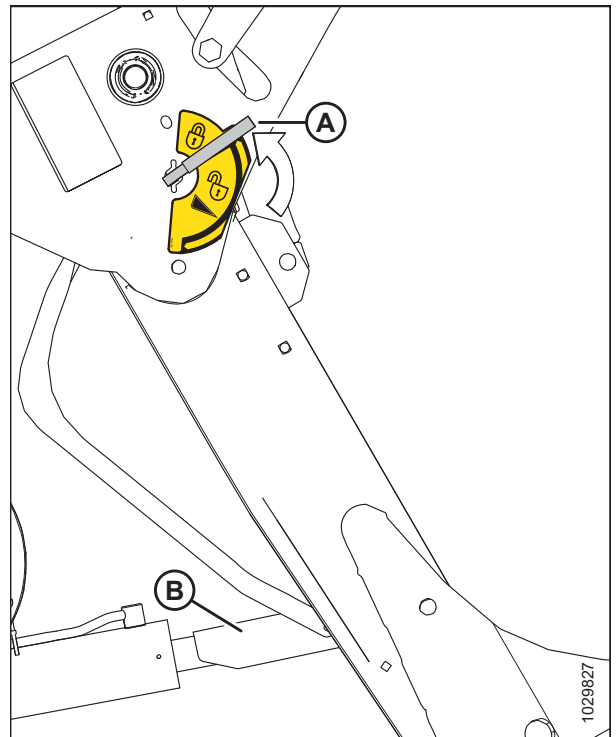


Figure 4.68: Safety Prop

OPERATION

6. To disengage the safety props on the lift cylinders:
 - a. Turn lever (A) away from the header to raise the safety prop until the lever locks into the vertical position.
 - b. Repeat the previous step for the opposite cylinder.
7. Start the engine.
8. Lower the header fully.
9. Shut down the engine, and remove the key from the ignition.

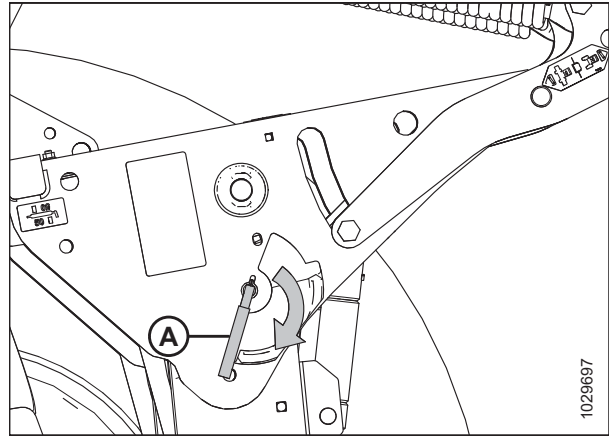


Figure 4.69: Safety Prop

4.4.2 Header Float M-Series

The header float feature allows the header to closely follow ground contours and to respond quickly to sudden changes and obstacles. The float setting is ideal when the cutterbar is on the ground with minimal bouncing, scooping, or pushing soil.

IMPORTANT:

- Configure the header float setting to be as light as possible, while limiting the amount of bouncing produced by the header. Doing so will reduce the amount of wear placed on knife components, and will prevent the header from scooping soil.
- Prevent the header from bouncing excessively by operating at a slower ground speed when the float setting is light. A bouncing header results in raggedly cut crop.
- Adjust the float when adding or removing optional attachments.

Float Operating Guidelines

Follow these instructions to get the best performance out of the header float system.

When working with the cutterbar on the ground:

- Set the center-link to the mid-range position (5.0 on cab display module [CDM]). For instructions, refer to [4.4.5 Adjusting Header Angle, page 202](#).
- When the header is level with the ground, minimize the scooping of rocks by adjusting the header skid shoes downward to raise the guards.
- To prevent the header from pushing soil, adjust the height or the angle of the header.

When cutting with a draper header's cutterbar off the ground:

- Set the center-link to the mid-range position (5.0 on CDM). For instructions, refer to [4.4.5 Adjusting Header Angle, page 202](#).
- Balance the amount of header weight carried by the float and by the stabilizer wheels. For instructions, refer to your draper header operator's manual.
- Use the CDM's controls to automatically maintain the proper cutting height. For instructions, refer to [4.4.6 Controlling Cutting Height, page 205](#).

Checking Float

The windrower is equipped with primary (coarse) and secondary (fine) float adjustment systems. The primary adjustment system allows the Operator to move the system's drawbolts to change the tension on the springs in the lift linkages. The secondary adjustment system allows the Operator to use hydraulic cylinders to change the spring tension.



Figure 4.70: Cab Display Module (CDM) Float Adjustment

A - CDM Display
D - Header Tilt Down

B - Left Float Adjustment
E - Header Lower

C - Right Float Adjustment
F - Header Tilt Up

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Set the left and right float fine adjustments on the CDM to approximately 5.0:
 - a. Using FLOAT SELECTOR switch (B), push + to increase the float or – to decrease the float on the left side of the header. CDM display (A) will show the selected float setting for the left side (for example: 5.0 L FLOAT R XX.X).
 - b. Repeat the previous step for the right side of the header float using switch (C). The display will show the float setting for both sides, (for example, 5.0 L FLOAT R 5.0).
2. Shut down the engine, and remove the key from the ignition.
3. Grasp each end of the header in turn and lift it. Use the amount of lifting force specified in the following table:

Header	Force Required to Lift Header at the Ends with Lift Cylinder Fully Retracted
Auger	335–380 N (75–85 lbf)
Rotary disc	426–471 N (95–105 lbf)
Draper	335–380 N (75–85 lbf) with stabilizer/transport wheels raised (if equipped)

OPERATION

Adjusting Float Using Drawbolts

Coarse float adjustment is done using the drawbolts located on both sides of the windrower.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

DANGER

Ensure that all bystanders have cleared the area.

1. Raise the header fully.
2. Shut down the engine, and remove the key from the ignition.
3. Turn drawbolt (A) clockwise to increase the float, or counterclockwise to decrease the float.
4. Recheck the header float. Refer to [Checking Float, page 195](#) for instructions.

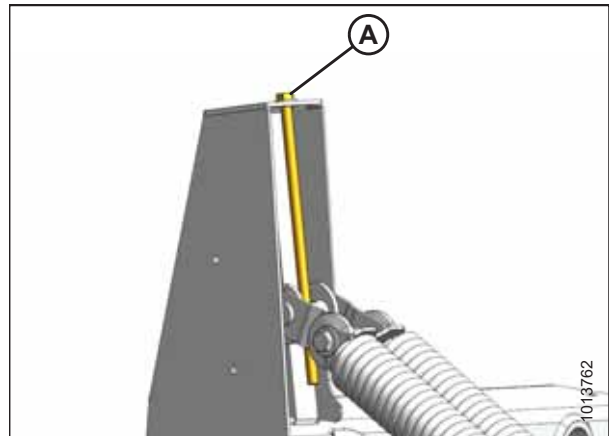


Figure 4.71: Header Float Adjustment

Float Options

The float system can be programmed for three types of windrowing conditions when using an attached draper header (without the deck shift option), an auger header, or a rotary disc header.

The Operator may choose to have different float settings available for different harvest conditions. For example, the Operator may choose to have a preset for normal conditions and a preset for rocky conditions.

To configure different float presets:

DANGER

Ensure that all bystanders have cleared the area.

OPERATION

1. Start the engine.
2. Engage the header.
3. Move FLOAT PRESET SWITCH (A) to position 1 (B).

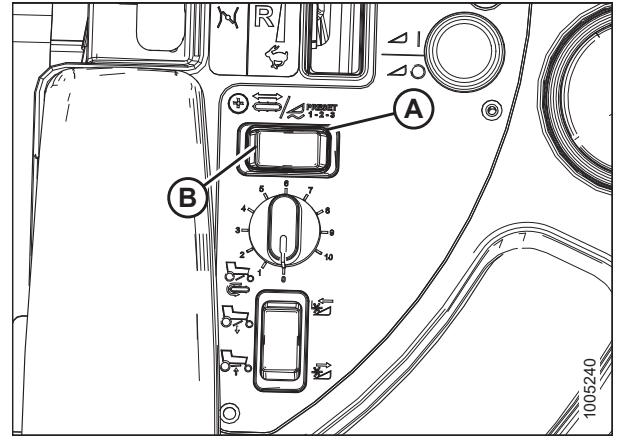


Figure 4.72: Float Preset Switch



Figure 4.73: Cab Display Module (CDM) Float Adjustment

- | | | |
|----------------------|---------------------------|----------------------------|
| A - CDM Display | B - Left Float Adjustment | C - Right Float Adjustment |
| D - Header Tilt Down | E - Header Lower | F - Header Tilt Up |

4. Using HEADER DOWN switch (E), lower the header fully, so that the lift cylinders are fully retracted.
5. Set the left and right float fine adjustments on the CDM to approximately 5.0:
 - a. Using FLOAT SELECTOR switch (B), push + to increase the float or – to decrease the float on the left side of the header. CDM display (A) will show the selected float setting for the left side (for example: 5.0 L FLOAT R XX.X).
 - b. Repeat the previous step for the right side of the header float using switch (C). The display will show the float setting for both sides, (for example, 5.0 L FLOAT R 5.0).

OPERATION

6. Select a second preset with FLOAT PRESET 2 SWITCH (C).
7. Repeat Step 2, [page 197](#) and Step 3, [page 197](#) to configure a second float preset.
8. Select a third preset with FLOAT PRESET 3 SWITCH (D).
9. Repeat Step 2, [page 197](#) and Step 3, [page 197](#) to configure a third float preset.

NOTE:

For draper headers with the deck shift option, the float can be programmed to compensate for the change in weight distribution when the decks are shifted. Refer to [Setting Float Options with Deck Shift, page 225](#).

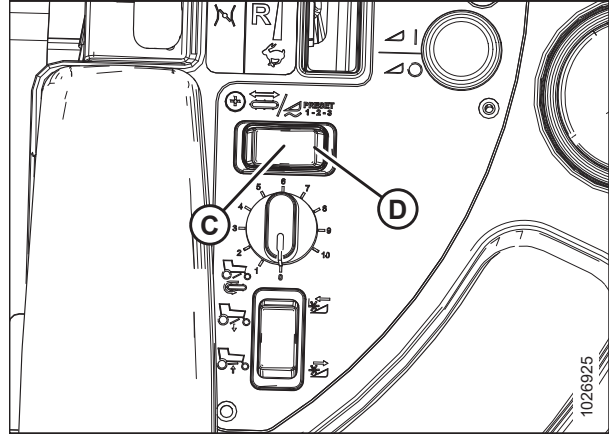


Figure 4.74: Float Preset Switch

4.4.3 Leveling Header

The windrower linkages are factory-set to provide the proper header level, and should not normally require adjustment.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

If the header is not level, check the pressure of the windrower's tires before adjusting the leveling linkages.

NOTE:

The float springs are **NOT** used to level the header.

To level the header:

1. Place the float pins in locked-out location (A).

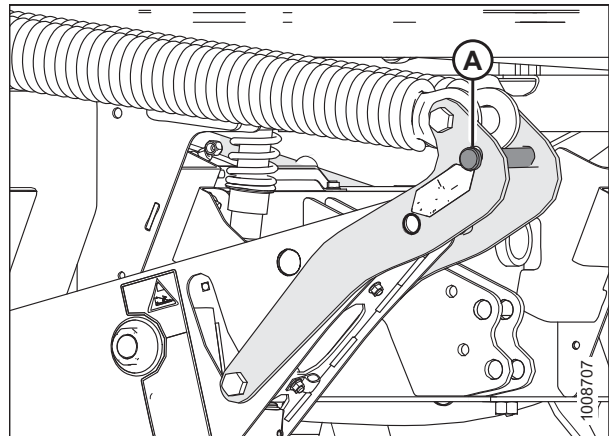


Figure 4.75: Float Pins – Disengaged

DANGER

Ensure that all bystanders have cleared the area.

OPERATION

2. Start the engine.
3. Park the windrower on level ground.
4. Raise the header fully using HEADER UP button (A). Hold the button momentarily to rephase the lift cylinders.



Figure 4.76: Ground Speed Lever (GSL)

5. Adjust the height of the header until it sits approximately 150 mm (6 in.) off of the ground. Ensure that member (A) rests against link (B).
6. Shut down the engine, and remove the key from the ignition.
7. Measure the distance to the ground from both ends of the header. If the values are the same, then no float adjustment is necessary. If they are different, then the end of the header with the greater distance to the ground will need to be adjusted.
8. If adjustment is necessary, start the engine and raise the header fully.
9. Shut down the engine, and remove the key from the ignition.
10. Move the float pins to engaged position (A).



Figure 4.77: Lift Linkage

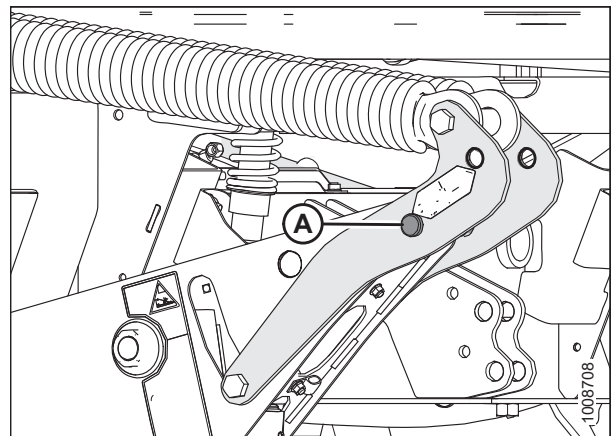


Figure 4.78: Float Pins – Engaged

OPERATION

11. Start the engine.
12. Lower the header onto the ground until member (A) lifts off of link (B) on both sides of the header.
13. Shut down the engine, and remove the key from the ignition.

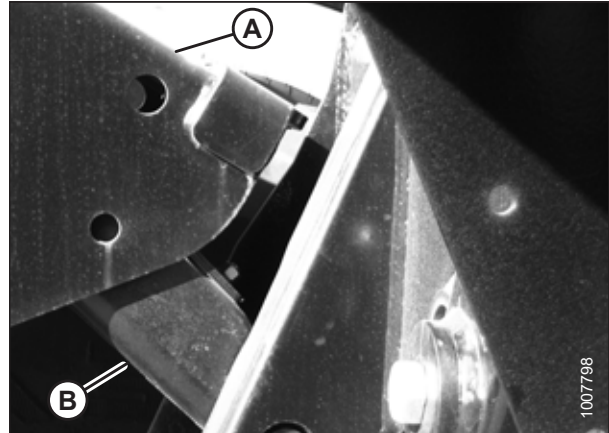


Figure 4.79: Lift Linkage

14. On the high side of the linkage, remove hardware (A) securing shims (B) to the link.
15. Remove one or both shims (B), and reinstall hardware (A).
16. Start the engine.
17. Raise the header fully.
18. Shut down the engine, and remove the key from the ignition.
19. Move the float pins to the disengaged position.

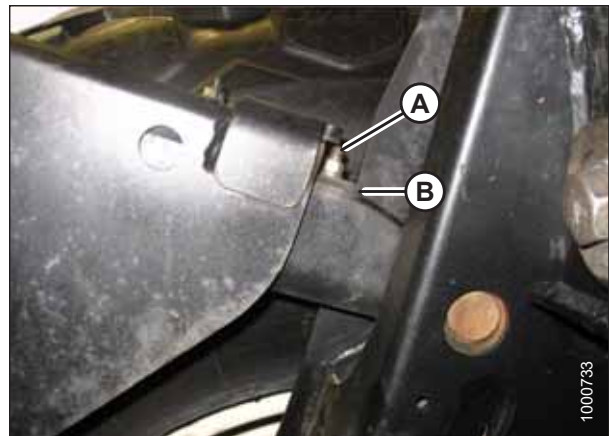


Figure 4.80: Lift Linkage

20. Start the engine.
21. Lower the header so that it sits approximately 150 mm (6 in.) off of the ground.
22. Check that member (A) is resting against link (B).
23. Shut down the engine, and remove the key from the ignition.
24. Measure the distance to the ground from both ends of the header. If the values are the same, then no float adjustment is necessary. If they are different, then the end of the header with the greater distance to the ground will need to be adjusted.
25. If more adjustment is needed, repeat Steps [8, page 199](#) to [13, page 200](#) and install the removed shim on the opposite linkage.



Figure 4.81: Lift Linkage

NOTE:

Additional shims are available from your Dealer.

OPERATION

26. Once the header is level, return the float pins to engaged position (A).

NOTE:

The float does **NOT** require adjustment after leveling the header.

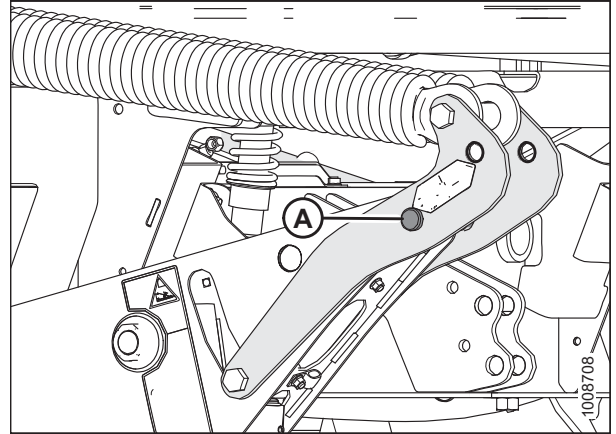


Figure 4.82: Float Pins – Engaged

4.4.4 Header Drive Controls

The header can be engaged, disengaged, and reversed using the controls on the operator's console.

NOTE:

Some controls described in this section are optional equipment and may not be installed on your unit. Some controls may be installed, but will be nonfunctional for certain header models.

Engaging and Disengaging Header

The header can be engaged and disengaged using a single switch on the operator's console. Ensure that the throttle is set to idle before engaging the header.

IMPORTANT:

Always move the throttle lever back to idle before engaging the header drive. Do **NOT** engage the header with the engine running at full throttle.

DANGER

Ensure that all bystanders have cleared the area.

1. To engage the header:
 - a. Set throttle (A) to idle.
 - b. Push down on the center of HEADER DRIVE switch (B). Pull the switch up to engage the header drive. A slight delay between the switch being activated and the header beginning operation is normal.
2. To disengage the header, push HEADER DRIVE switch (B) down.



Figure 4.83: Operator Console

OPERATION

Reversing Header

The header can be reversed using a switch on the operator's console. You may wish to reverse the header to help clear an obstruction. On D, D1, and D2 Series Draper Headers, the knife and conditioner can be reversed. On A Series Auger Headers, the reel, auger, knife, and conditioner can be reversed.

NOTE:

To reverse the header, the Header Drive Reverser kit must be installed on the windrower. The hydraulic plumbing connecting the windrower's reverser block to the header varies according to the type of header that the windrower is configured to work with. For more information, refer to [8.3.3 Header Drive Reverser, page 517](#).

IMPORTANT:

To prevent damage to the reel on D, D1, and D2 Series Draper Headers, follow the instructions provided with the Header Drive Reverser kit. For more information, refer to [8.3.3 Header Drive Reverser, page 517](#).

1. Push down and hold HEADER DRIVE REVERSE button (A) and pull up on HEADER DRIVE switch (B). The cab display module (CDM) will display the message HEADER REVERSE.
2. Release REVERSE button (A) to stop the header.
3. Push down HEADER DRIVE switch (B) to the OFF position. This will allow you to restart the header.

NOTE:

To engage the header drive, first push down, and then pull up on the HEADER DRIVE knob.



Figure 4.84: Operator Console

4.4.5 Adjusting Header Angle

Header angle is the term used to describe the position of the cutterbar relative to the ground. The angle of the header can be changed as needed to suit different harvesting conditions.

Refer to the header operator's manual for the recommended header angle settings for your particular header.

The header angle can be adjusted from the cab without shutting down the windrower when the windrower is equipped with the hydraulic center-link. The windrower's cab display module (CDM) allows you to establish preset header angle settings for a variety of crop conditions.

IMPORTANT:

- Changing the header angle will affect the float slightly, due to the changes in weight distribution. If the float setting is changed, the header angle setting may also need to be adjusted.
- To prevent damage to the knife guards when conditions are not suited to operating with a heavier float setting (for example, when harvesting in a rocky or a wet field), do **NOT** use the windrower's HEADER TILT CONTROL function. Instead, use the HEADER HEIGHT switch.



Figure 4.85: Operator Console

A - Program Button
D - Header Tilt Up

B - Display
E - Display Selector

C - Header Tilt Down

Adjusting header angle on windrowers equipped with hydraulic link

- To decrease the header angle, press HEADER TILT UP switch (D) on the ground speed lever (GSL) handle. The CDM will display a reading on the lower line, which should be a decreasing value ranging between 00.0 and 10.0.
- To increase the header angle, operate HEADER TILT DOWN switch (C) on the GSL handle. The CDM will display a reading on the lower line, which should be an increasing value ranging between 00.0 and 10.0.

NOTE:

The HEADER TILT switch can be locked out to prevent inadvertent changes to the header angle. For instructions, refer to [Activating Header Tilt Control Lockout, page 107](#).

Adjusting header angle on windrowers equipped with mechanical link

1. Lower the header to the ground.
2. Shut down the engine, and remove the key from the ignition.

OPERATION

3. Loosen nut (A) on the center-link.
 - To increase (steepen) the header angle, rotate barrel (B) to lengthen the center-link.
 - To decrease (flatten) the header angle, rotate barrel (B) to shorten the center-link.
4. Tighten plate nut (A) with a slight tap of a hammer.

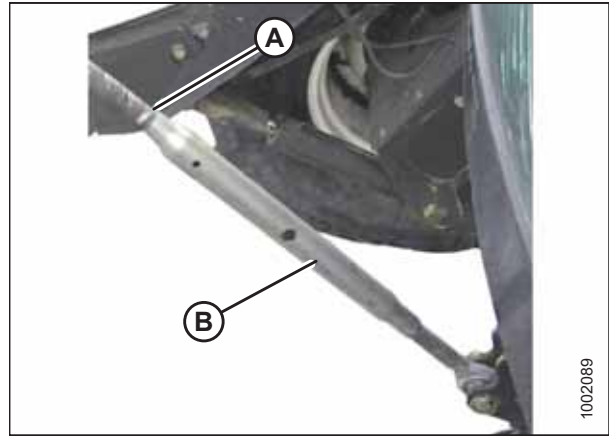


Figure 4.86: Mechanical Center-Link

Checking Self-Locking Center-Link Hook

The self-locking hook on the windrower's center-link will need to be inspected periodically to ensure that it is in good working order.

1. If the header is attached to the windrower, disconnect the center-link hook from the header by pulling up on handle (A) to release the locking device and then lifting the hook off of the header pin.

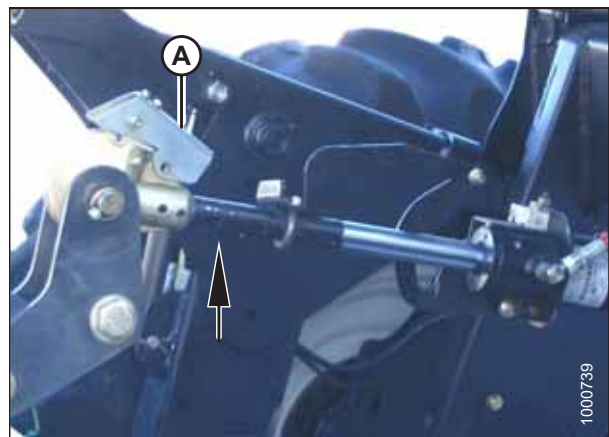


Figure 4.87: Center-Link

2. Lower handle (A) into the locked position.
3. Push up on lock pin (B). The handle should catch on the casting and the lock pin should **NOT** lift.

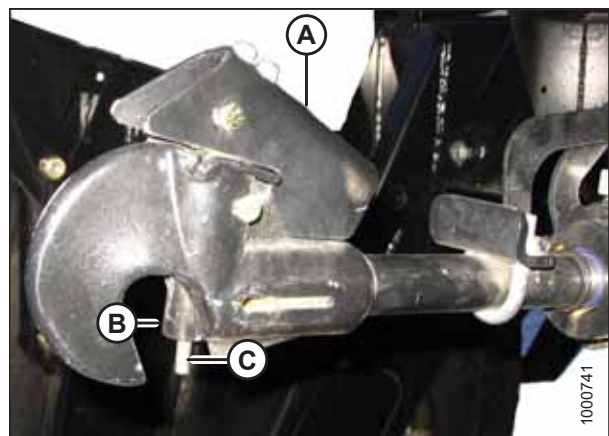


Figure 4.88: Center-Link Hook

A - Handle

B - Lock Pin

C - Actuator Rod

OPERATION

4. Ensure that the lock pin lifts with the handle by pushing up on the actuator rod as shown.



Figure 4.89: Center-Link Hook

4.4.6 Controlling Cutting Height

Cutting height can be adjusted by raising or lowering the header using the HEADER UP or HEADER DOWN switches on the ground speed lever (GSL).

Figure 4.90: Operator Console



The cab display module (CDM) displays the current header height setting on the lower line of DISPLAY (A). The reading will range between 00.0 and 10.0, with 00.0 representing the header sitting flush with the ground, and 10.0 indicating that the header is at its maximum height. Use HEADER UP button (B) and HEADER UP button (C) to change the height of the header.

Use DISPLAY SELECTOR switch (D) to display the current header height setting.

4.4.7 Return to Cut

The return to cut (RTC) feature provides preset cutting height and tilt angle settings for the header. This feature can be turned OFF or ON with a switch on the cab display module (CDM).

If desired, the CDM can be programmed so that only the cutting height feature is active.

The AUTO RAISE HEIGHT feature allows you to raise the header to a preselected height while in RETURN TO CUT mode. Refer to *Configuring Auto Raise Height Feature, page 208* for instructions.

Refer to the following for the RTC programming and operating procedures:

- *Configuring Return to Cut Feature, page 206*
- *Using Return to Cut Feature, page 207*

Configuring Return to Cut Feature

The return to cut (RTC) feature provides preset cutting height and tilt angle settings for the header. This feature can be configured on the operator's console.



Figure 4.91: Operator Console

DANGER

Ensure that all bystanders have cleared the area.

1. Start the windrower.
2. Engage the header.
3. Set RETURN TO CUT switch (A) to the OFF position. The indicator light will be dark.
4. Adjust the header to the desired cutting height using HEADER UP switch (B) and/or HEADER DOWN switch (C) on the ground speed lever (GSL). The cab display module (CDM) will display the header height setting at location (D), which will be a value ranging between 00.0 and 10.0.

OPERATION

- Adjust the header angle with HEADER TILT UP switch (E) and/or HEADER TILT DOWN switch (F) on the GSL. The CDM will display the header angle as a value between 00.0 and 10.0.

NOTE:

Performing this step is not necessary when you want to configure the RETURN TO CUT switch to change only the header height.

- Press RETURN TO CUT switch (A) on the CDM. Your settings will be stored in the windrower control module (WCM).

Using Return to Cut Feature

The return to cut (RTC) feature provides preset cutting height and tilt angle settings for the header. When return to cut mode is enabled, the HEADER UP and HEADER DOWN switches will change the height and angle of the header according to the stored RTC settings.



Figure 4.92: Operator Console

A - Return to Cut
D - Display

B - Header Up
E - Header Tilt Up

C - Header Down
F - Header Tilt Down

IMPORTANT:

Ensure that the header is engaged and that RETURN TO CUT switch (A) is lit up.

NOTE:

The header can be raised or lowered by pressing and holding HEADER UP switch (B) or HEADER DOWN switch (C) on the ground speed lever (GSL).

- If the header is above the preset cutting height, momentarily press HEADER DOWN switch (C) to cause the header to return to the preset height.
- If the header is below the preset height, press and hold HEADER UP switch (B) to raise the header. Release the switch when the header is at the desired height. The CDM will emit a tone when the header rises past the preset height setting.

OPERATION

3. If the header angle changes, double-press (two button presses occurring within 0.5 seconds) HEADER TILT UP switch (E) or HEADER TILT DOWN switch (F), and the header will return to the preset angle.

NOTE:

If the header cannot return to the preset height or angle within 30 seconds, the return to cut feature will deactivate to prevent the hydraulic oil from overheating. Push RETURN TO CUT switch (A) to reactivate RTC mode.

4.4.8 Auto Raise Height

The header can be raised to a preset height by enabling the auto raise height feature in the cab display module (CDM).

Refer to the following topics to learn how to use the auto raise height feature:

- [Configuring Auto Raise Height Feature, page 208](#)
- [Using Auto Raise Height Feature, page 209](#)

Configuring Auto Raise Height Feature

The header can be raised to a preset height by enabling the auto raise height feature in the cab display module (CDM). Auto raise height can be configured by accessing the CDM's WINDROWER SETUP menu.



Figure 4.93: Operator Console

A - Return to Cut
E - Left Arrow

B - Program
F - Header Up

C - Select
G - Header Down

D - Right Arrow

NOTE:

RETURN TO CUT switch (A) can be OFF or ON.

1. Turn the ignition key to the ON position, or start the engine.
2. Press PROGRAM (B) and SELECT (C) simultaneously on the CDM to enter programming mode.
3. Press SELECT (C). WINDROWER SETUP? will appear on the upper line.

OPERATION

4. Press right arrow (D), then SELECT (C). SET KNIFE SPEED? will appear.
5. Press SELECT (C) until AUTO RAISE HEIGHT appears.
6. Press left arrow (E) or right arrow (D) to change the auto raise height value on the lower line. The acceptable auto raise height values range between 4.0 to 9.5. At 10.0, the feature is disabled and OFF will be displayed.
7. Press PROGRAM (B) to exit programming mode.

Using Auto Raise Height Feature

The header can be raised to a preset height by enabling the auto raise height feature in the cab display module (CDM). Once this feature has been configured, the header can be raised to the preset height by rapidly double-pressing the HEADER UP switch (B) on the ground speed lever (GSL).

IMPORTANT:

To use the auto raise height feature, the windrower's engine must be running, the header must be engaged and sitting at the preset cutting height, and the return to cut feature must be active.

DANGER

Ensure that all bystanders have cleared the area.

1. To raise the header to the auto raise height set-point, double-press (press the button twice within 0.5 seconds) HEADER UP switch (B) on the ground speed lever (GSL).

NOTE:

When the AUTO RAISE HEIGHT switch is set to ON, the ACRE counter will be disabled when the header is raised higher than the preset cutting height.

2. If desired, press the HEADER UP switch while the header is being raised to disable auto raise height. The header will maintain its current height.

NOTE:

When the AUTO RAISE HEIGHT switch is set to OFF, the ACRE counter will be disabled when the header height value is greater than 9.5. OFF will be displayed on the cab display module (CDM).

3. To return the header to the preset cutting height, momentarily press HEADER DOWN switch (C).



Figure 4.94: Operator's Station

4.4.9 Header Drop Rate

The header should fall gradually when the HEADER DOWN switch is pressed. The header should be able to drop from the fully raised to the fully lowered position in 3–4 seconds.

If the drop rate requires adjustment, refer to [Adjusting Header Drop Rate, page 482](#).

4.4.10 Swath Compressor

The swath compressor is designed to shape the windrow and anchor it into the stubble behind the header to minimize shelling in ripe conditions. It is available as an optional attachment.

The swath compressor system is used with MacDon D Series, D1 Series, and D2 Series Draper Headers for cutting canola; it replaces the conventional roller-type system. The swath compressor has adjustments for shaping the windrow for optimal drying and protection from wind damage. The amount of windrow compression is monitored and can be controlled from the cab by the MacDon Harvest Manager Pro control and monitoring system.

Refer to the MacDon Swath Compressor for M Series Windrowers Setup, Operation, and Parts Manual for the complete operating and maintenance instructions. The manual is shipped with the Swath Compressor kit.

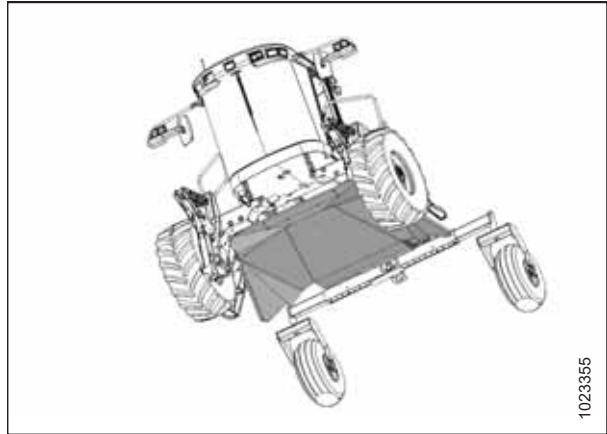


Figure 4.95: Swath Compressor

Using Swath Compressor

The swath compressor's height can be changed using the button on the operator's console. The height setting can be viewed on the cab display module (CDM).

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. To disengage the lock, rotate handle (A) on the left rear support counterclockwise.

IMPORTANT:

- The lock prevents the swath compressor from falling inadvertently when it is not in use.
- Engage the lock when operating the windrower in engine-forward mode.
- Disengage the lock before using the swath compressor for field work.

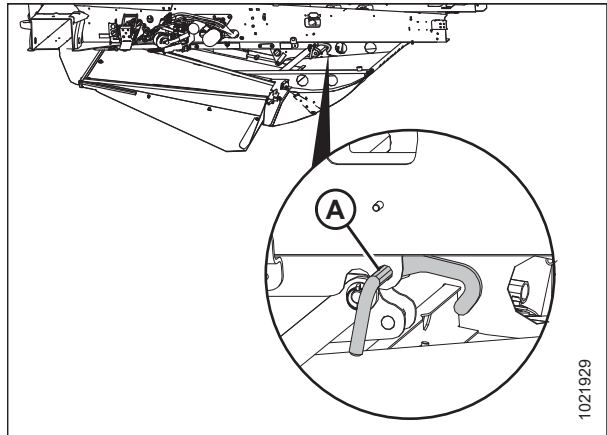


Figure 4.96: Swath Compressor Lock

DANGER

Ensure that all bystanders have cleared the area.

2. Start the windrower.
3. Ensure that the windrower is in cab-forward mode.

OPERATION

4. Press SELECT switch (B) on the cab display module (CDM) to show SWATH COMPR HT (A) on the display. The height is displayed using a scale from 0 to 10, where 0 indicates that the swath compressor is fully raised, and 10 indicates that it is fully lowered.

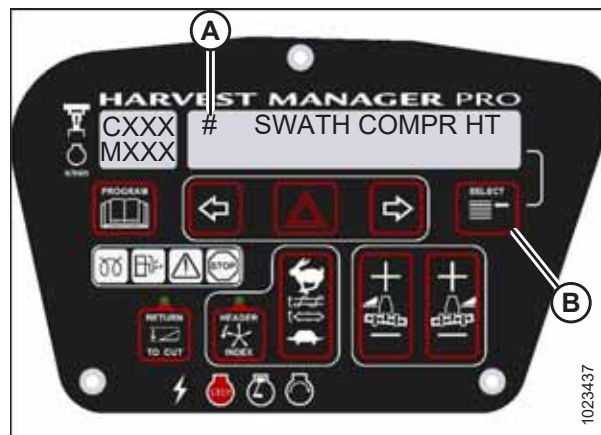


Figure 4.97: CDM Display

5. Lower the swath compressor by pressing button (A) on the operator's console; raise it by pressing button (B). The CDM display indicates the height of the swath compressor. When the swath compressor is at the desired height, release the switch to stop the swath compressor's movement.

NOTE:

When button (A) is pressed, the CDM will display the new target swath compressor height value for 5 seconds, after which the actual height of the swath compressor will be displayed again.

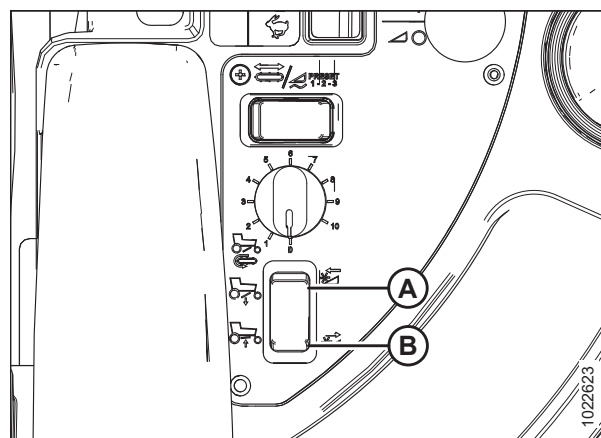


Figure 4.98: Operator's Console

The swath compressor system has several automated features:

- When the windrower's ground speed is greater than 2.5 km/h (1.6 mph), the swath compressor falls to the target height.
- When the windrower's speed falls below 1.6 km/h (1 mph), the swath compressor will rise to its maximum height.
- When the windrower's ground speed is greater than 1.6 km/h (1 mph) and the HEADER ENGAGE switch is OFF, the swath compressor will rise fully.
- The swath compressor will remain fully raised when the windrower is in engine-forward mode.

4.4.11 Double Windrow Attachment

The double windrow attachment (DWA) allows the windrower to deposit two windrows of cut material close together into a single large windrow. Using the DWA halves the number of passes needed to collect the crop once it has dried.

The DWA system is compatible with windrowers paired with an A Series Auger Header, R Series Rotary Disc Header, or with a D65 Draper Header HC10 Hay Conditioner installed.

Raising the side delivery system shuts off the draper and allows the crop to be deposited between the windrower wheels as it would be without the DWA installed.

Refer to the MacDon M Series Windrower Double Windrow Attachment Manual for the operating and maintenance instructions.

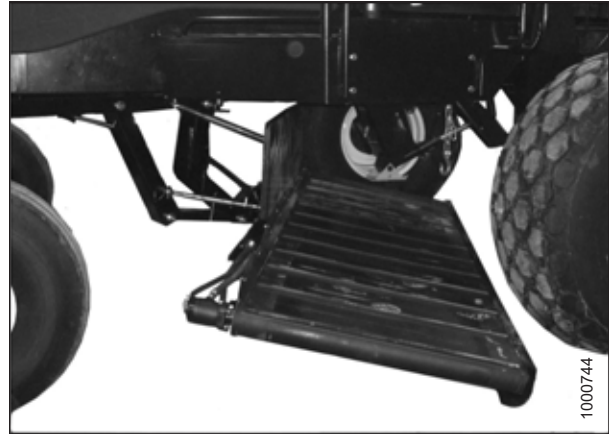


Figure 4.99: DWA Installed on Windrower

When the DWA is active, cut crop will be deposited onto the side delivery system draper and delivered to the side of the windrower, as shown. To feed into the same windrow, the second cutting pass must be made in the opposite direction of the first.

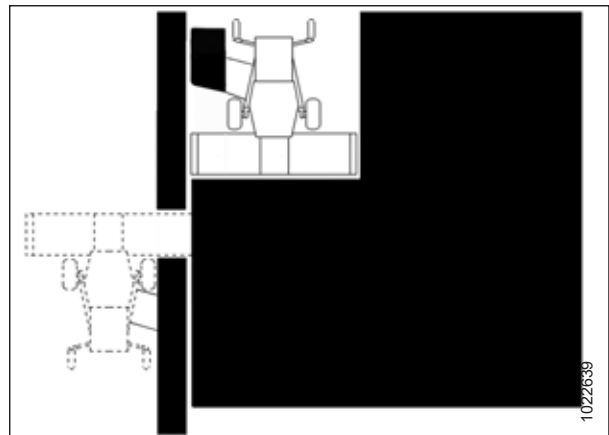


Figure 4.100: Double Windrowing Diagram

OPERATION

Engaging and Disengaging Double Windrow Attachment

The double windrow attachment (DWA) system can be engaged or disengaged using the DWA controls on the ground speed lever (GSL) or the DWA rocker switch on the operator's console.

The DWA is disengaged when it is fully raised, and engaged when it is fully lowered. You can raise or lower the DWA deck by pressing DWA DOWN button (B) or DWA UP button (A) on the ground speed lever (GSL) or by using the rocker switch on the operator's console. The DWA should have been configured to work with one or the other of these controls when it was installed, but the configuration can be changed at any time. Refer to [Configuring Double Windrow Attachment Controls, page 95](#) for instructions on how to change the DWA control configuration.

NOTE:

The same controls are used for raising and lowering the swath compressor, if it is installed.

The DWA can also be raised or lowered using the rocker switch on the operator's console, which should have been installed when the DWA was installed on the windrower. The DWA can be lowered by pressing rocker (A), and raised by pressing rocker (B).

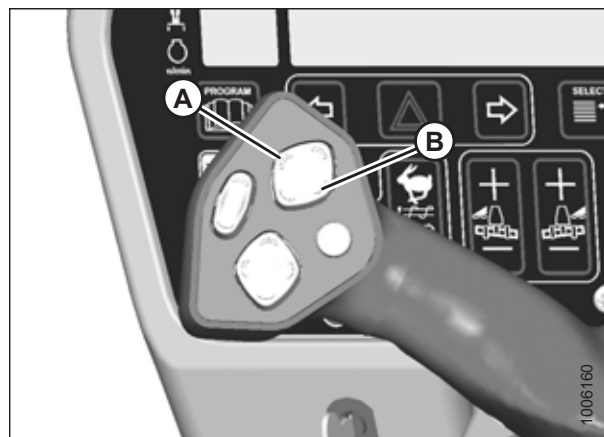


Figure 4.101: Ground Speed Lever (GSL)

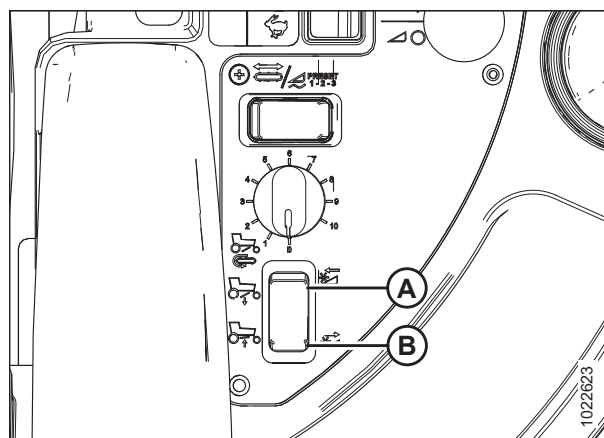


Figure 4.102: Operator's Console

OPERATION

Adjusting Double Windrow Attachment Draper Speed

The double windrow attachment's (DWA) draper speed can be changed by using the rotary switch on the operator's console. This switch should have been installed when the DWA was installed on the windrower.

The DWA's draper speed can be controlled using rotary switch (A) on the operator's console.

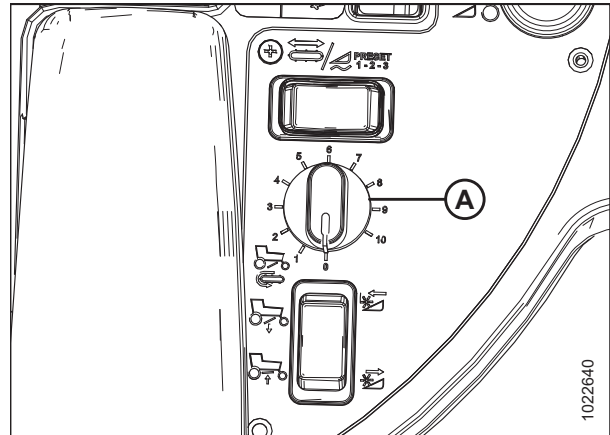


Figure 4.103: DWA Draper Speed Rotary Switch on Operator's Console

4.5 Operating with D, D1, or D2 Series Draper Header

Instructions for configuring the hydraulics, changing the reel settings, operating the draper and knives, and using the optional deck shift controls on a D, D1, or D2 Series Draper Header are provided.

The M155 Self-Propelled Windrower is factory-equipped to run a D, D1, or D2 Series Draper Header.

If an HC10 Hay Conditioner is to be installed on the header, installing a Header Drive Reverser kit on the windrower is recommended. Order the kit from your MacDon Dealer and install it according to the instructions supplied with the kit. For more information on the kit, refer to [8.3.3 Header Drive Reverser, page 517](#).

The procedure for attaching a draper header to the windrower varies depending on the type of center-link installed on the windrower. Refer to the relevant procedure:

D and D1 Series:

- [5.3.2 Attaching D or D1 SP Series Draper Header – Hydraulic Center-Link with Self-Alignment, page 261](#)
- [5.3.3 Attaching D or D1 SP Series Draper Header – Hydraulic Center-Link without Self-Alignment, page 268](#)
- [5.3.4 Attaching D or D1 SP Series Draper Header – Mechanical Center-Link, page 273](#)

D2 Series:

- [5.5.2 Attaching D2 SP Series Draper Header – Hydraulic Center-Link with Self-Alignment, page 289](#)
- [5.5.3 Attaching D2 SP Series Draper Header – Hydraulic Center-Link without Self-Alignment, page 296](#)
- [5.5.4 Attaching D2 SP Series Draper Header – Mechanical Center-Link, page 304](#)

4.5.1 Header Position

The header height, tilt angle, and float adjustments are used to optimize cutting characteristics for specific crops and conditions.

For procedures for controlling header height, header tilt, and float, refer to [4.4 Operating with Header, page 192](#).

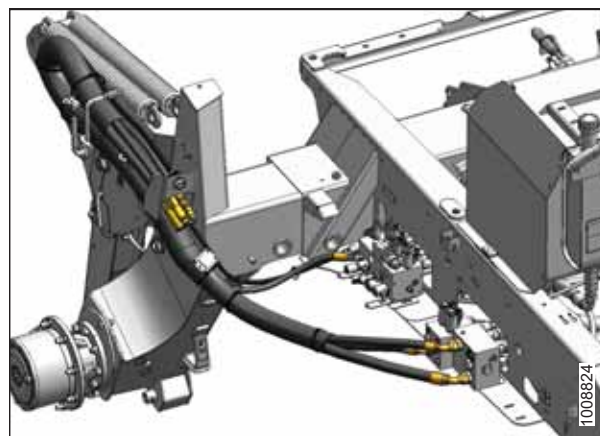


Figure 4.104: Draper Header Hydraulics

4.5.2 Adjusting Reel Fore-Aft Position

The reel fore-aft position can be changed using the controls on the ground speed lever (GSL).

Press FORWARD switch (A) or AFT switch (B) to move the reel in that direction.

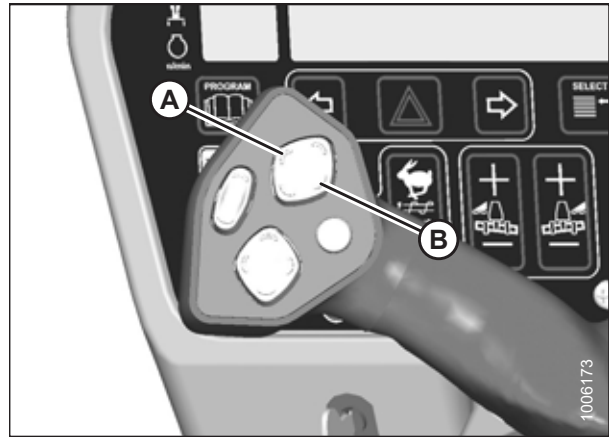


Figure 4.105: Ground Speed Lever

4.5.3 Adjusting Reel Height

The reel fore-aft position can be changed using the controls on the ground speed lever (GSL).

Press and hold REEL UP switch (A) or REEL DOWN switch (B) to move the reel in the desired direction.

IMPORTANT:

Under certain conditions, when the reel is raised to its full height, the reel tines may contact the cab roof. Exercise care to avoid damage to the windrower or the reel.

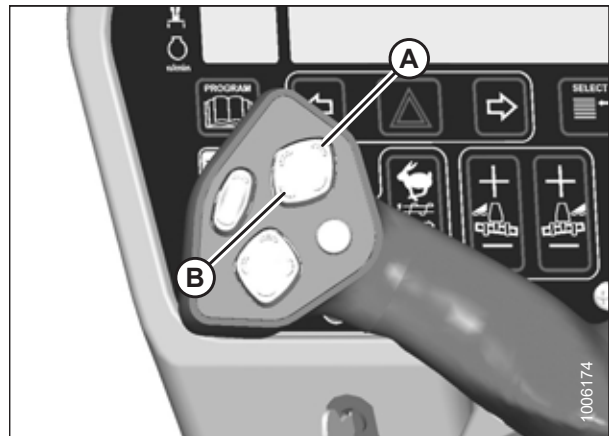


Figure 4.106: Ground Speed Lever (GSL)

4.5.4 Reel Speed

Reel speed can be controlled using the switches on the ground speed lever (GSL), or can be indexed to the ground speed of the header.

On draper headers, the reel speed can be set independently or can be set relative to the ground speed of the windrower. This can be done using the windrower's header index feature. Refer to [Setting Header Index Mode, page 92](#) for instructions on enabling header index mode. Refer to your header operator's manual for specific windrowing guidelines and recommended speeds.

Indexing Reel Speed to Ground Speed

The Operator can choose to link the speed of the reel to the ground speed of the windrower, rather than controlling it manually, by taking advantage of the windrower's header indexing feature.

Setting the speed of the reel relative to the windrower's ground speed using the header index function allows you to run the engine at a lower speed while maintaining the desired header performance.

Indexing the reel speed to the windrower's ground speed requires setting the minimum reel speed and the reel index speed:



Figure 4.107: Operator Console

A - Display
D - Slow Button

B - Header Index
E - Display Selector

C - Fast Button

DANGER

Ensure that all bystanders have cleared the area.

1. Set the minimum reel speed as follows:

IMPORTANT:

Set the minimum reel speed while the windrower is stationary (that is, with the ground speed lever [GSL] in the N-DETENT position).

- a. Start the engine.
- b. Engage the header.
- c. Set HEADER INDEX switch (B) to ON.
- d. Press DISPLAY SELECTOR button (E) on the GSL or press FAST button (C) or SLOW button (D) to display the message ###.## MIN REEL at location (A). The displayed value represents the minimum reel speed in terms of rpm or mph or km/h, depending on how the cab display module (CDM) is configured.
- e. Press FAST switch (C) or SLOW switch (D) until the desired minimum reel speed is achieved.

OPERATION

2. Set the reel index as follows:

IMPORTANT:

The reel index setting can only be adjusted while operating at a ground speed faster than the configured minimum reel speed plus the configured header index value.

- a. Set HEADER INDEX switch (B) to ON.
- b. Press DISPLAY SELECTOR button (E) on the GSL or press FAST button (C) or SLOW button (D). The CDM will display the message **##.## ##.# REEL IND.**²⁶
 - The first term displayed on the CDM, **##.##**, represents the reel speed in terms of rpm or mph or km/h, depending on how the CDM is configured.)
 - The second term displayed on the CDM, **##.#**, represents the reel index setting.
- c. Press FAST button (C) or SLOW button (D) until the desired reel index setting is achieved.

NOTE:

The reel will continue operating at the minimum reel speed setting when the ground speed drops below the set value. CDM screen (A) may display the message **##.## MIN REEL (RPM or MPH or KPH)**. This message indicates that the Operator should change the minimum reel speed or should increase the windrower's ground speed. This message will appear if the sum of the ground speed and the index value is less than the minimum reel speed set-point.

Examples:

- Windrower is operating at 13 km/h (8 mph) with header index ON and set at -1.0.
Display shows 7.0 -1.0 REEL IND where 7.0 (8.0-1.0) is the reel speed in mph and -1.0 is the HEADER INDEX setting.
- Windrower speed drops to 12 km/h (7.5 mph) at same header index setting.
Display shows 6.5 -1.0 REEL IND where 6.5 (7.5-1.0) is the reel speed in mph and -1.0 is the HEADER INDEX setting.
- Windrower is operating at 13 km/h (8 mph) with header index ON and set at 2.0.
Display shows: 10.0 2.0 REEL IND where 10.0 (8+2.0) is the reel speed in mph and 2.0 is the HEADER INDEX setting.

26. The message REEL IND will only be displayed when the windrower is operating at a ground speed faster than minimum reel speed plus the header index speed.

Adjusting Reel Speed without Indexing

The Operator can set their preferred reel speed without using the windrower's indexing system by using the reel speed controls on the ground speed lever (GSL).



Figure 4.108: Operator Console

A - Display
D - Reel Slow

B - Header Index
E - Display Selector

C - Reel Fast

! DANGER

Ensure that all bystanders have cleared the area.

1. Set HEADER INDEX (B) to OFF.
2. Press REEL FAST button (C) or REEL SLOW button (D) on the ground speed lever (GSL) until CDM (A) displays the message ###.## REEL MPH. Adjust the reel speed value until your preferred setting appears.²⁷

4.5.5 Draper Speed

The speed at which the header's draper belts turn can be controlled from the windrower's cab. The draper speed can be set to run independently, or relative to the ground speed of the windrower by taking advantage of the windrower's header indexing function.

For information on the recommended draper speed settings, refer to your header operator's manual.

27. The reel speed can also be displayed in km/h or rpm, depending on the CDM's display settings.

OPERATION

Indexing Draper Speed to Ground Speed

Linking the draper speed to the windrower's ground speed using the header index function allows the Operator to operate the engine at a lower speed while maintaining the desired ground and draper speeds. Reducing engine speed saves fuel and reduces the noise level in the cab.

Indexing the draper speed to the ground speed requires setting both the minimum draper speed and the draper index value in the windrower's cab display module (CDM).

Refer to the following:

- [Setting Minimum Draper Speed, page 220](#)
- [Setting Draper Index, page 221](#)

Setting Minimum Draper Speed

In order to index the speed of the draper to the windrower's ground speed, the minimum draper speed setting must be set in the cab display module (CDM).



Figure 4.109: Operator Console

! DANGER

Ensure that all bystanders have cleared the area.

IMPORTANT:

Set the minimum draper speed while the windrower is stationary (that is, while the ground speed lever [GSL] is in the N-DETENT position).

1. Start the engine.
2. Engage the header.
3. Set HEADER INDEX switch (B) to ON.

OPERATION

4. Press DISPLAY SELECTOR button (E) until CDM (A) displays the message ##.## DRAPER MIN.²⁸
5. Use FAST button (C) or SLOW button (D) to set the desired minimum draper speed.

Setting Draper Index

In order to index the speed of the draper to the windrower's ground speed, the draper index setting must be configured in the cab display module (CDM).



Figure 4.110: Operator Console

DANGER

Ensure that all bystanders have cleared the area.

IMPORTANT:

The draper index can only be adjusted while the windrower is traveling at a ground speed greater than the sum of the minimum draper speed and the draper index value.

1. Start the engine.
2. Engage the header.
3. Set HEADER INDEX switch (B) to ON.
4. Press DISPLAY SELECTOR (E) on the ground speed lever (GSL). The message DRAPER INDX will appear²⁹ at location (A) on the cab display module (CDM).

28. The draper speed can also be displayed in km/h or rpm, depending on the CDM's display settings.

29. DRAPER INDX will only appear when the windrower is traveling at a ground speed greater than the sum of the minimum draper speed and the draper index value.

OPERATION

5. Press DRAPER FAST (C) or SLOW (D) on the CDM until CDM (A) shows the message **##.## #.# DRAP IND**. Adjust the value as needed.
 - The first term displayed on the CDM, **##.##**, represents the draper speed in terms of rpm or mph or km/h, depending on how the CDM is configured.
 - The second term displayed on the CDM, **#.##**, represents the draper index value.

Examples:

- The windrower is traveling at 13 km/h (8 mph) with the HEADER INDEX switch set to ON and the draper index value set at 1.5.
The CDM will display: 9.5 1.5 DRAP INDX, where 9.5 (8 + 1.5) is the draper speed in mph and 1.5 is the header index setting.
- The windrower's speed drops to 12 km/h (7.5 mph), while the header index value remains the same.
The CDM will display: 9.0 1.5 DRAP INDX, where 9.0 (7.5 + 1.5) is the draper speed in mph and 1.5 is the header index setting.
- The windrower is traveling at 13 km/h (8 mph) with the HEADER INDEX switch set to ON and the draper index value set at 0.9.
The CDM will display: 8.9 0.9 DRAP INDX, where 8.9 (8 + 0.9) is the draper speed in mph and 0.9 is the header index setting.

Adjusting Draper Speed without Indexing

The Operator can set their preferred draper speed without using the windrower's indexing system by using the draper speed controls on the cab display module (CDM).



Figure 4.111: Operator Console

NOTE:

This procedure can also be followed to change the draper speed while the windrower is in motion.

 **DANGER**

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Engage the header.
3. Set HEADER INDEX switch (B) to OFF.
4. Press DISPLAY SELECTOR button (E) until the message ##.# DRAPER SPEED appears on cab display module (CDM) (A).³⁰
5. Press FAST button (C) or SLOW button (D) on the CDM until the desired draper speed appears at location (A).

4.5.6 Knife Speeds

The windrower’s knife speed should be set so that the crop is cut cleanly. The Operator should choose a knife speed which suits the type of crop being cut and the operating conditions.

When the header is first attached to the windrower, the windrower control module (WCM) receives a code from the header that determines the knife speed range and the minimum speed. However, Operators can configure their own speed settings in the cab display module (CDM). Knife speed settings are stored in the WCM’s memory, so that the knife will operate at the specified setting each time a header is detached and reattached to the windrower.

If no header code is detected, the CDM displays NO HEADER and the knife speed reverts to the operator’s selection. That selection can range from 800 to 1000 strokes per minute.

Refer to the header operator’s manual for the suggested knife speed for different crops and cutting conditions.

NOTE:

The knife speed cannot be programmed outside the range specified for each model of header.

NOTE:

The knife speed can be adjusted without shutting down the windrower; however, the windrower should be stopped before adjusting CDM settings.

Refer to the following table for the minimum and maximum knife speed settings on various types of draper header.

Table 4.3 Draper Header Knife Speed Ranges for M Series Self-Propelled Windrowers

Header		Knife Speed			
Type	Width	Minimum Speed		Maximum Speed	
		rpm ³¹	spm ³²	rpm ³¹	spm ³²
Draper with double knife	4.6 m (15 ft.)	750	1500	950	1900
Draper with double knife	6.1 and 7.6 m (20 and 25 ft.)	700	1400	850	1700
Draper with double knife	9.1 m (30 ft.)	600	1200	800	1600
Draper with double knife	10.6 m (35 ft.)	600	1200	700	1400
Draper with double knife	12.2 m (40 ft.)	550	1100	700	1400

30. The draper speed can also be displayed in km/h or rpm, depending on the CDM’s display settings.

31. The values specified in this column refer to the speed of the knife drive box’s pulley.

32. Knife strokes per minute (rpm x 2)

OPERATION

Table 4.3 Draper Header Knife Speed Ranges for M Series Self-Propelled Windrowers (continued)

Header		Knife Speed			
Type	Width	Minimum Speed		Maximum Speed	
		rpm ³³	spm ³⁴	rpm ³³	spm ³⁴
Draper with single knife	6.1 and 7.6 m (20 and 25 ft.)	600	1200	750	1500
Draper with single knife	9.1 m (30 ft.)	600	1200	700	1400
Draper with single knife	10.6 m (35 ft.)	550	1100	700	1400
Draper with single knife	12.2 m (40 ft.)	525	1050	600	1200

To adjust the knife speed, refer to *Setting Header Knife Speed, page 88*.

4.5.7 Deck Shift Control

Windrowers attached to a draper header equipped with the deck shift option, can control whether crop is delivered between the windrower legs or to either side of the header.

Engaging Deck Shift

Engaging the deck shift option allows the Operator to choose to deliver crop to the left or right side of the header, in addition to being able to deliver the crop between the legs of the windrower. The deck shift controls can be found on the operator's console.

DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Engage the header by pushing down on HEADER DRIVE button (A) while pulling up on black ring (B) at the base of the switch.

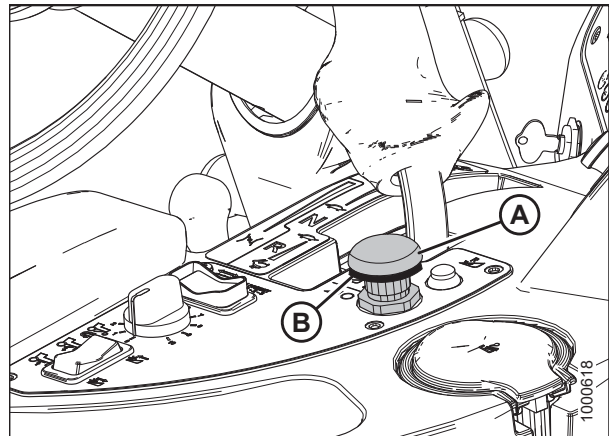


Figure 4.112: Header Drive Button

33. The values specified in this column refer to the speed of the knife drive box's pulley.

34. Knife strokes per minute (rpm x 2)

OPERATION

3. Move switch (A) to the desired delivery position. The draper deck(s) will move and the direction of drapers will change accordingly.

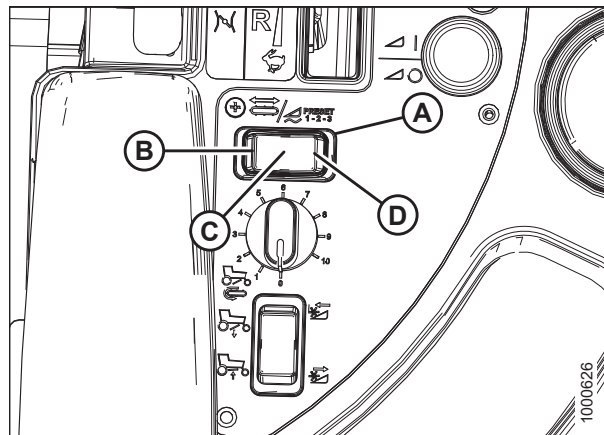


Figure 4.113: Deck Shift Switch

A - Deck Shift Switch
B - Left-Side Delivery
C - Center Delivery
D - Right-Side Delivery

Setting Float Options with Deck Shift

For draper headers equipped with the deck shift option, the header float can be set for each deck position. The float setting is maintained when the deck shift is engaged.

DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Engage the header.
3. Using HEADER TILT SWITCHES (A) and (B) on the ground speed lever (GSL), set the center-link to the mid-range position (05.0 on display [C]).

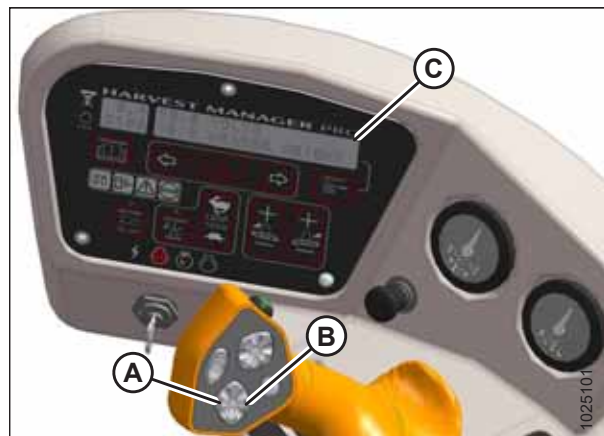


Figure 4.114: Operator Console

OPERATION

4. Select a deck position using DECK SHIFT switch (A) from one of the following delivery options:

- B - Left-side delivery
- C - Center delivery
- D - Right-side delivery

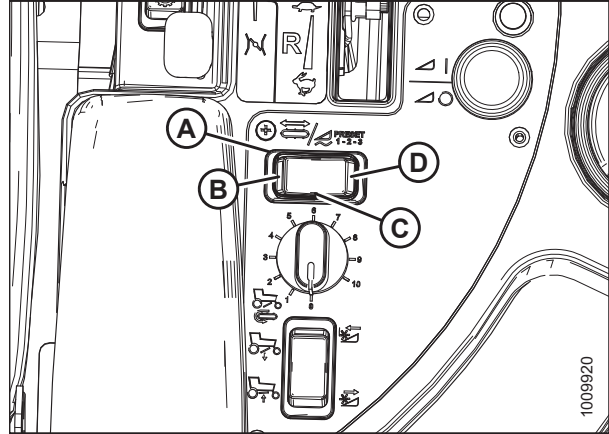


Figure 4.115: Deck Shift Switch

5. Using HEADER DOWN switch (A) on the GSL, lower the header fully until the lift cylinders are fully retracted.
6. Using LEFT FLOAT SWITCH (B), push + to increase the float or – to decrease the float on the left side of the header. Screen (D) will display the selected float value for the left side. For example: 8.0 L FLOAT R ##.#
7. Repeat this procedure to set the float on the right side of the header by using RIGHT switch (C). Screen (D) will display the selected float value for both sides. For example: 8.0 L FLOAT R 3.0

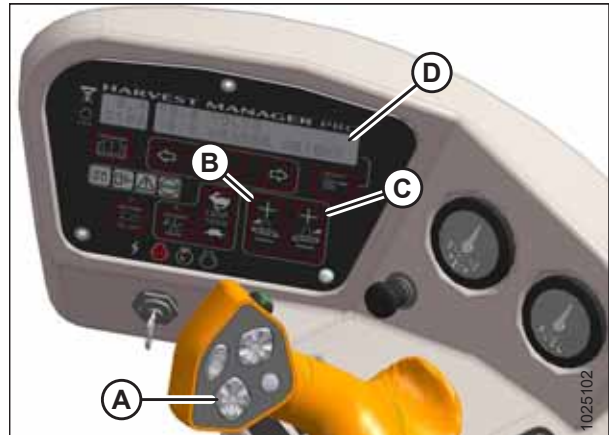


Figure 4.116: Operator Console

8. Select a second deck position using DECK SHIFT switch (A).
9. Repeat Step 6, page 226 and Step 7, page 226 to set the float for the second deck position.
10. Select a third deck position with DECK SHIFT switch (A).
11. Repeat Step 6, page 226 and Step 7, page 226 to set the float for the third deck position.

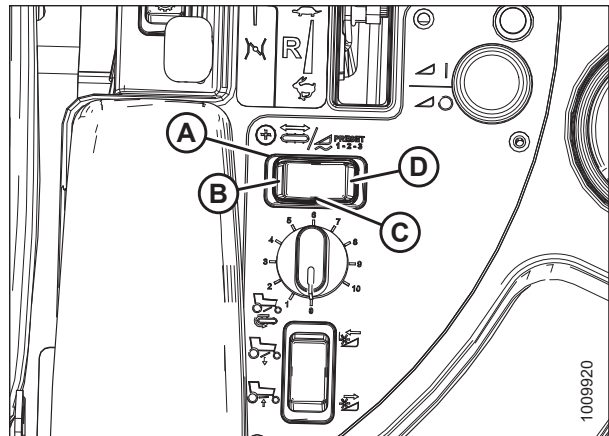


Figure 4.117: Deck Shift Switch

- | | |
|-----------------------|-------------------------|
| A - Deck Shift Switch | B - Left-Side Delivery |
| C - Center Delivery | D - Right-Side Delivery |

4.6 Operating with A Series Auger Header

Instructions for setting the knife speed and the reel speed on A Series Auger Headers are provided.

4.6.1 Auger Speed

The options for setting the header's auger speed differ depending on the model of the header.

Setting Auger Speed on A30D Auger Headers

On A30D Auger Headers, the auger speed is fixed to the knife speed. The cab display module (CDM) cannot display the auger speed.

Setting Auger Speed on A40D Auger Headers

The speed of the auger on A40D Auger Headers is directly related to the speed of the reel. However, the auger speed can be controlled independently of the reel.



Figure 4.118: Operator Console

! DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Engage the header.
3. Set HEADER INDEX switch (B) to OFF.
4. Set the REEL SPEED setting to the minimum possible value. For instructions, refer to [Reel and Disc Speed Switches](#), page 64.

OPERATION

5. Press DISPLAY SELECTOR switch (E) on the ground speed lever (GSL) or press FAST button (C) or SLOW button (D) on the cab display module (CDM) until the message ###.# AUGER SPEED appears at location (A). The displayed value represents the speed of the auger.

NOTE:

Changes to the reel speed will directly affect the speed of the auger. However, when the reel speed is adjusted, the auger speed value displayed on the CDM will not change.

6. Press FAST button (C) or SLOW button (D) on the CDM until the desired auger speed is achieved.

4.6.2 Reel Speed

The ability to control or monitor the header's reel speed differs depending on the particular model of auger header attached to the windrower.

Reel Speed – A30D Auger Headers

On A30D Auger Headers, the reel is driven by the auger, which means that both the reel speed and the auger speed are dependent on the main header drive speed. The auger and reel speeds can only be changed by installing a different size auger drive sprocket, or by varying the windrower engine rpm. A30D Auger Headers are not equipped with a reel speed sensor; therefore no reel or auger speed information is displayed on the cab display module (CDM).

Reel Speed – A40D Auger Headers

The A40D Auger Header features a hydraulic direct drive reel with an operating speed range of 15–85 rpm. The Operator can control the reel speed using the cab display module (CDM) and the ground speed lever (GSL).

The reel drive motor and the auger drive motor are connected in series but a separate line to the auger allows the reel speed to change independently from the auger speed. Switches on the GSL are used to adjust the reel speed which is displayed on the CDM display. The reel speed can be set by three methods:

- Reel Only (only reel speed changes)
- Reel On-the-Go (reel and auger speeds change)
- Reel to Ground (indexed)

NOTE:

Adjusting the reel speed will result in a change to the auger speed unless the auger speed has been preset.

OPERATION

Adjusting Reel Speed

The A40D Auger Header's reel is hydraulically driven. Adjusting the reel speed also changes the auger speed, unless the auger speed is initially set to a predetermined value. Follow this procedure to set the auger speed so that subsequent reel speed adjustments will only affect the reel.



Figure 4.119: Operator Console

A - Display
D - Auger Slow
G - Display Selector

B - Header Index
E - Fast

C - Auger Fast
F - Slow

NOTE:

Once the reel speed has been configured, subsequent adjustments to the reel speed will **NOT** affect the auger speed.

1. Start the engine.
2. Engage the header.
3. Set HEADER INDEX SWITCH (B) to OFF.
4. On the ground speed lever (GSL), press REEL SLOW switch (F) until a beep is heard. The message ###.### REEL RPM will appear at location (A).
5. Press AUGER SLOW button (D) or FAST button (C) to set the desired auger speed. The message ##.# AUGER SPEED will appear at location (A).
6. On the GSL, press REEL SLOW button (F) or FAST button (E) to set the desired reel speed. The message ##.### REEL RPM. will appear at location (A).

OPERATION

Adjusting Reel Speed while Windrower is in Motion

The reel speed on an A40D Auger Header can be adjusted by using the reel speed controls on the ground speed lever (GSL). The reel speed can range from 15 to 85 rpm.

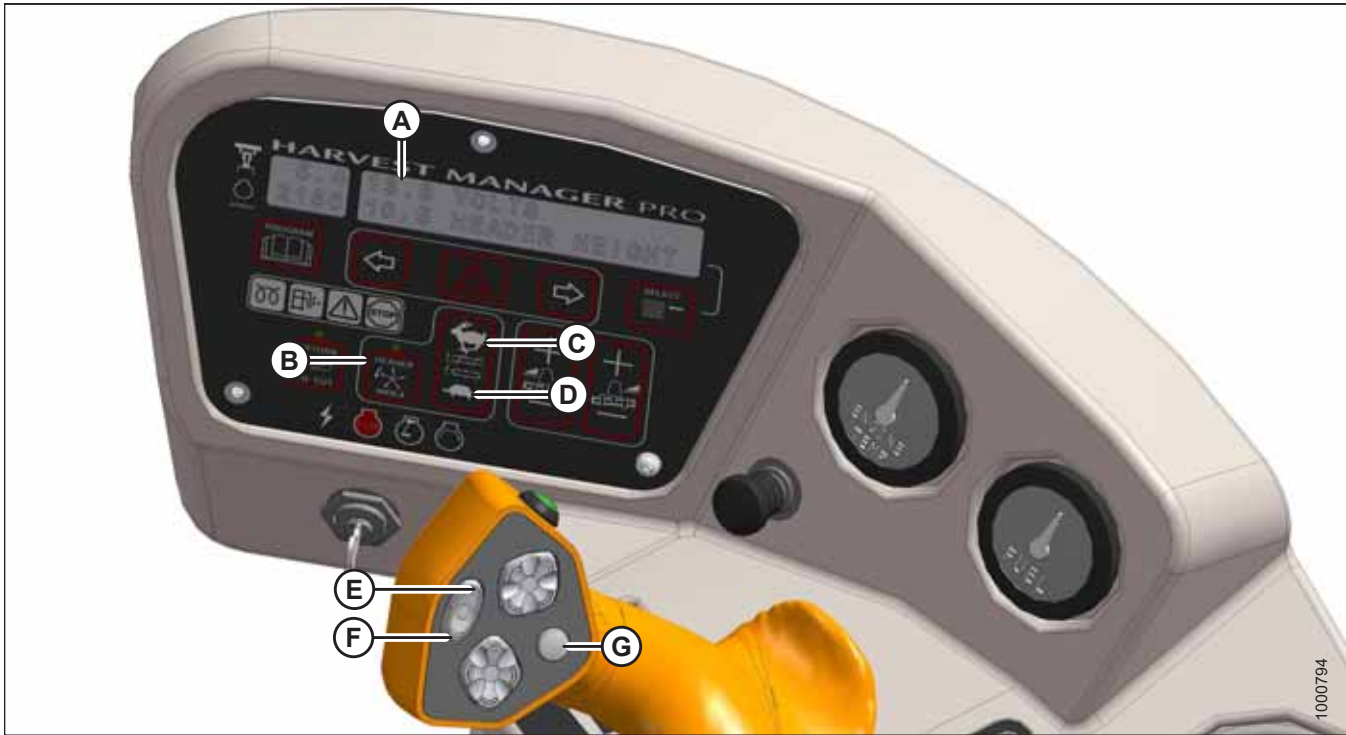


Figure 4.120: Operator Console

A - Display
E - Reel Fast

B - Header Index
F - Reel Slow

C - Auger Fast
G - Display Selector

D - Auger Slow

1. Set HEADER INDEX switch (B) to OFF.
2. Press REEL SLOW button (F) or REEL FAST button (E) on the ground speed lever (GSL) until the message ###.### REEL RPM appears at location (A). The displayed value (###.###) represents the reel speed in terms of rpm, mph, or km/h, depending on how the cab display module (CDM) has been configured.

NOTE:

Adjusting the reel speed will directly affect the auger speed, unless the auger speed has been preset.

Indexing Reel Speed to Ground Speed

The reel speed on an A40D Auger Header can be configured so that it varies directly with the speed of the auger using the header index function. Indexing the reel speed to the ground speed requires setting the minimum reel speed and configuring the reel index setting.



Figure 4.121: Operator Console

DANGER

Ensure that all bystanders have cleared the area.

1. Set the minimum reel speed as follows:

IMPORTANT:

Set the minimum reel speed while the windrower is stationary (that is, while the ground speed lever [GSL] is in the N-DETENT position).

- a. Start the engine.
- b. Engage the header.
- c. Set HEADER INDEX switch (B) to ON.
- d. Press DISPLAY SELECTOR button (E) on the GSL, or press the FAST button (C) or SLOW button (D). The message ###.## MIN REEL will appear at location (A). The displayed value (##.##) represents the reel speed in rpm, mph, or km/h, depending on how the cab display module (CDM) has been configured.
- e. Press FAST button (C) or SLOW button (D) until the desired minimum reel speed is achieved.



Figure 4.122: Operator Console

2. Configure the reel index setting as follows:

IMPORTANT:

The reel index setting can only be adjusted while the windrower is traveling at a ground speed greater than the sum of the minimum reel speed and the header index value.

NOTE:

The reel will continue operating at the minimum reel speed setting when the windrower's ground speed drops below the set value. If this occurs, the message `##.## MIN REEL` will appear at location (A). To prevent this message from appearing, raise the minimum reel speed, or increase the windrower's ground speed.

- a. Set HEADER INDEX switch (B) to ON.
- b. Press DISPLAY SELECTOR button (E) on the GSL or press FAST button (C) or SLOW button (D). The message `##.## ##.# REEL IND` will appear at location (A). The first term, `##.##`, represents the reel speed in rpm, mph, or km/h, depending on how the cab display module (CDM) is configured. The second term, `##.#`, represents the reel index setting.
- c. Press FAST button (C) or SLOW button (D) until the desired reel index value is achieved.

Examples:

- The windrower is traveling at 8 mph with the HEADER INDEX switch set to the ON state, and the header index value set to -1.0. The CDM will display the message `7.0 -1.0 REEL IND`, where 7.0 (8.0-1.0) is the reel speed in mph and -1.0 is the header index setting.
- The windrower speed drops to 7.5 mph, while the header index value remains the same. The CDM will display the message `6.5 -1.0 REEL IND`, where 6.5 (7.5-1.0) is the reel speed in mph and -1.0 is the header index setting.
- The windrower is traveling at 8 mph, and the header index value is set to 2.0. The CDM will display the message `10.0 2.0 REEL IND`, where 10.0 (8+2.0) is the reel speed in mph and 2.0 is the header index setting.

4.6.3 Knife Speed

The header's knife speed should be configured so that a clean cut is achieved. The type of crop and the cutting conditions are important factors to consider when setting the knife speed.

When the header is first attached to the windrower, the windrower control module (WCM) receives a code from the header that determines the knife speed range and the minimum speed. The desired speed can be programmed on the cab display module (CDM) and stored in the WCM memory so the knife will operate at the original set-point after the header is detached and reattached to the windrower. If no header code is detected, the CDM displays NO HEADER and the knife speed reverts to the operator's selection from a range of 800–1000 strokes per minute. Refer to the header operator's manual for the suggested knife speed for a variety of crops and conditions.

NOTE:

The knife speed cannot be programmed outside the range specified for each header.

NOTE:

The knife speed can be adjusted without shutting down the machine; however, the windrower should be stopped before adjusting CDM settings.

To adjust the knife speed, refer to [Setting Header Knife Speed, page 88](#).

4.7 Operating with R, R1, or R2 Series Rotary Disc Header

Instructions for setting the disc speed on R and R1 Series Rotary Disc Headers are provided.

R80 and R85 4.0 m (13 ft.) Rotary Disc Headers are shipped without the hydraulic motor or hydraulic hoses installed. These must be installed before the header can be operated.

If necessary, obtain the Hydraulic Motor kit (MD #B5510) from your MacDon Dealer and install it according to the instructions supplied with the kit.

R1 Series Rotary Disc Headers come from the Dealer with the required Hydraulic Completion package (MD #B6272) already installed. A Disc Drive kit (MD #B4657) is also required in order for the windrower to engage with the header.

R2 Series Rotary Disc Headers require the installation of the Disc Drive kit (MD #B4657) and the M155E4 Hydraulic Drive kit (MD #B7310) in order for the windrower to engage with the header.

NOTE:

A Hydraulic Coupler kit (MD #B5497) is also available. This kit allows for the quick attachment and removal of multiple header models.

4.7.1 Disc Speed

The disc speed should be set according to the crop type and the cutting conditions.

Refer to the header operator's manual for information on setting the disc speed.



Figure 4.123: Kit MD #B5510

OPERATION

Setting Disc Speed

The disc speed can be set by using the controls on the ground speed lever (GSL).



Figure 4.124: Operator Console

A - Display
D - Slow Button

B - Header Index
E - Display Selector

C - Fast Button

DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Engage the header.
3. Set HEADER INDEX switch (B) to OFF.
4. Press FAST button (C) or SLOW button (D) on the ground speed lever (GSL). The message ##### DISC RPM will appear. The displayed value (#####) represents the disc speed in rpm.
5. Press FAST button (C) or SLOW button (D) until the desired disc speed is achieved.

Chapter 5: Attaching and Detaching Headers

There are specific procedures for safely attaching and detaching each model of header to and from the windrower.

5.1 Attaching A Series Auger Header

Attaching a header to the windrower involves physically connecting the header to the header and completing the hydraulic and electrical connections.

The procedure for detaching an A Series Auger Header from the windrower differs slightly depending on the configuration of the windrower. Proceed to the relevant topic:

- [5.1.1 Attaching A Series Auger Header – Hydraulic Center-Link with Self-Alignment, page 235](#)
- [5.1.2 Attaching A Series Auger Header – Hydraulic Center-Link without Self-Alignment, page 241](#)
- [5.1.3 Attaching A Series Auger Header – Mechanical Center-Link, page 246](#)

5.1.1 Attaching A Series Auger Header – Hydraulic Center-Link with Self-Alignment

The header will need to be physically attached to the windrower, and the hydraulic and electrical connections completed. The windrower may be equipped with an optional self-aligning hydraulic center-link, which allows the Operator to control the vertical position of the center-link from the cab.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Remove hairpin (A) from clevis pin (B) and remove the clevis pin from header boots (C) on both sides of the header.

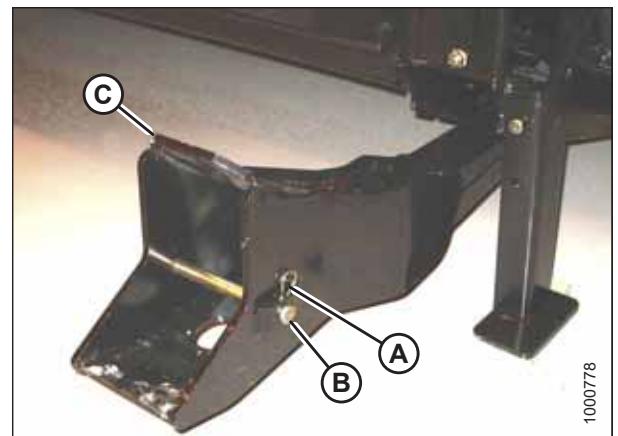


Figure 5.1: Header Boot

ATTACHING AND DETACHING HEADERS

3. Check that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

IMPORTANT:

To prevent damage to the lift system when lowering the header lift linkages without a header or a weight box attached to the windrower, ensure that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

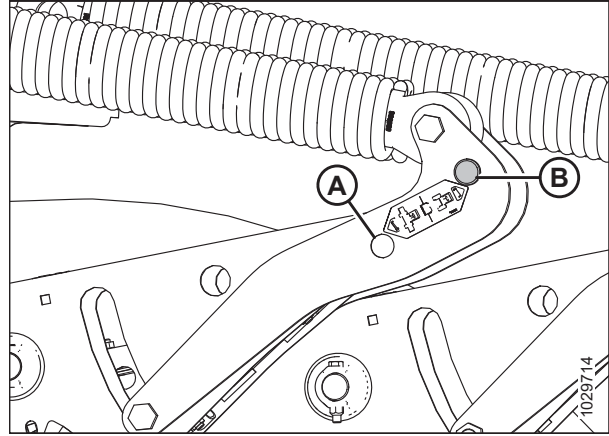


Figure 5.2: Header Float Linkage

4. Activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

If the protective cover is installed on the exhaust stack, remove it before starting the engine.

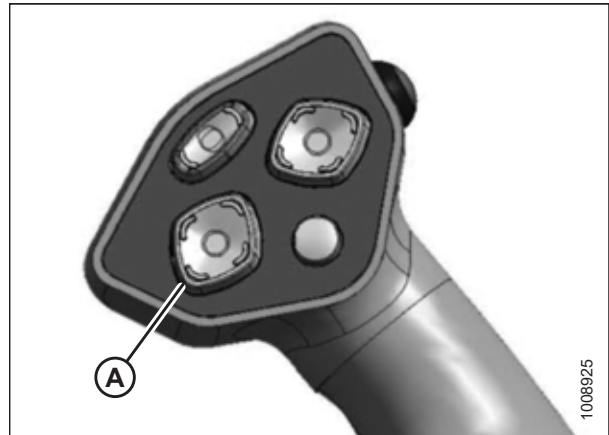


Figure 5.3: Ground Speed Lever

5. Press REEL UP switch (A) on the GSL to raise the center-link until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.



Figure 5.4: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

6. Drive the windrower slowly forward until windrower feet (A) enter header supports (B). Continue driving slowly forward until the feet engage the supports and the header is nudged forward.

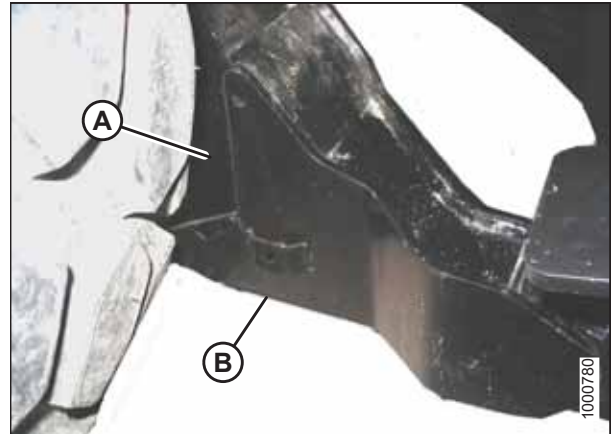


Figure 5.5: Header Support

7. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - REEL UP (A) to raise the center-link
 - REEL DOWN (B) to lower the center-link
 - HEADER TILT UP (C) to retract the center-link
 - HEADER TILT DOWN (D) to extend the center-link

IMPORTANT:

The hook release must be down to enable the self-locking mechanism. If the release is open (up), manually push it down after the hook engages the header pin.

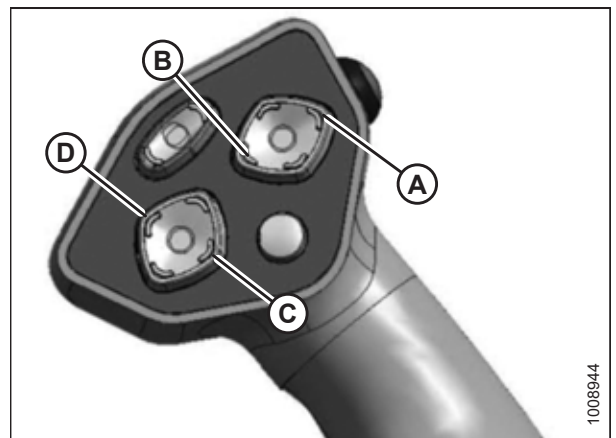


Figure 5.6: Ground Speed Lever

8. Adjust the position of center-link cylinder (A) with the REEL UP and REEL DOWN switches on the GSL until the hook is positioned above the header attachment pin.

IMPORTANT:

Hook release (B) must be down to enable the self-locking mechanism. If the release is open (up), manually push it down after the hook engages the header pin.

9. Lower center-link (A) onto the header using the REEL DOWN switch on the GSL until the center-link locks into position and hook release (B) is down.
10. Check that the center-link is locked onto the header by pressing the REEL UP switch on the GSL.

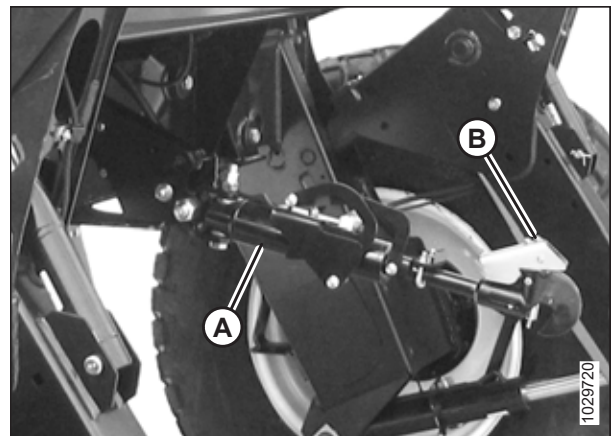


Figure 5.7: Hydraulic Center-Link

ATTACHING AND DETACHING HEADERS

11. Press HEADER UP switch (A) to raise the header to its maximum height.
12. If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds to fully phase the cylinders.

NOTE:

It may be necessary to repeat this procedure if there is air in the hydraulic system.

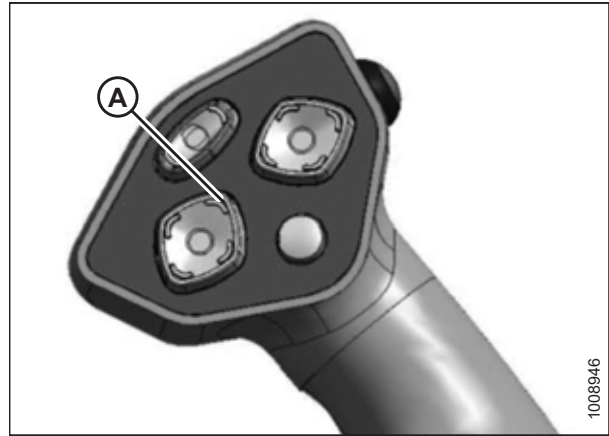


Figure 5.8: Ground Speed Lever

13. Engage the safety props on both lift cylinders:
 - a. Shut down the engine, and remove the key from the ignition.
 - b. Pull lever (A) and rotate it towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat the previous steps for the opposite lift cylinder.

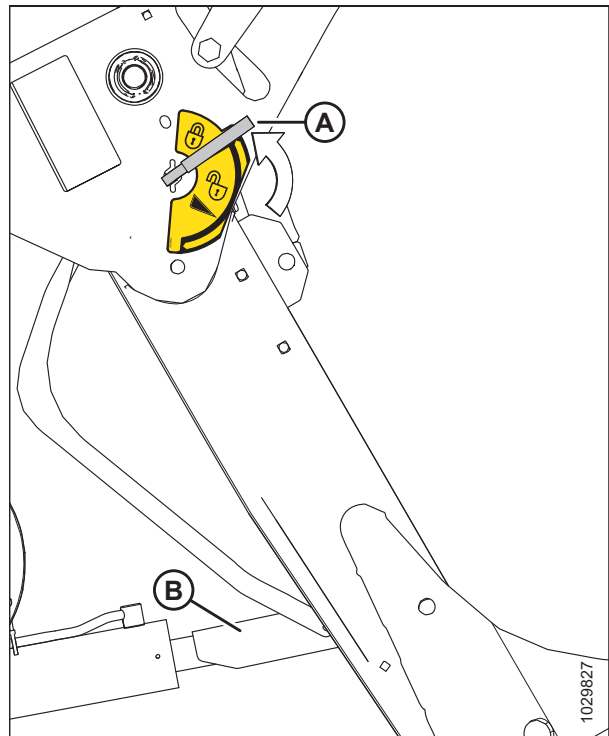


Figure 5.9: Safety Prop

ATTACHING AND DETACHING HEADERS

14. Install clevis pin (A) through the support and the foot and secure it with the hairpin.

IMPORTANT:

Ensure that clevis pin (A) is fully inserted and the hairpin is installed behind the bracket.

15. Repeat the previous step to secure the support on the other side of the header.



Figure 5.10: Header Support

16. Remove the lynch pin from clevis pin (A) in stand (B).
17. Hold stand (B) and remove pin (A).
18. Move stand (B) to the storage position by inverting it and relocating it onto the bracket as shown. Reinsert clevis pin (A) and secure it with the lynch pin.

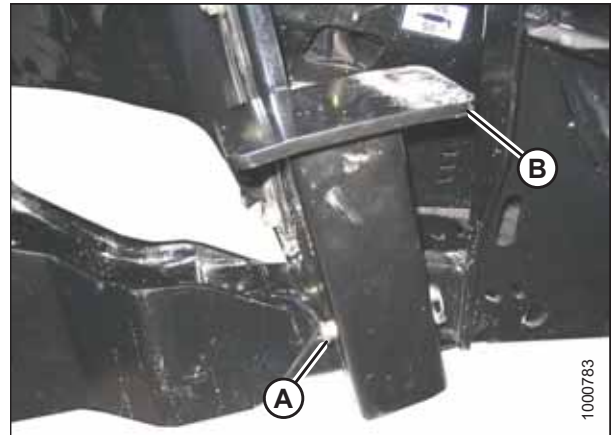


Figure 5.11: Header Stand

19. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Secure it with the hairpin. Repeat this step on the opposite float linkage.

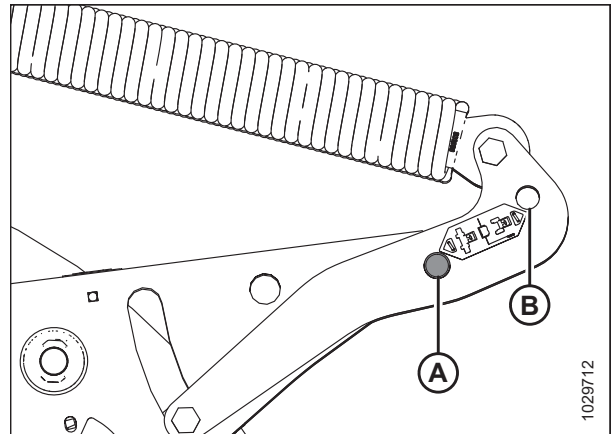


Figure 5.12: Header Float Linkage

ATTACHING AND DETACHING HEADERS

20. Disengage the safety prop by turning lever (A) downwards until the lever locks into the vertical position.
21. Repeat the previous step to disengage the other safety prop.

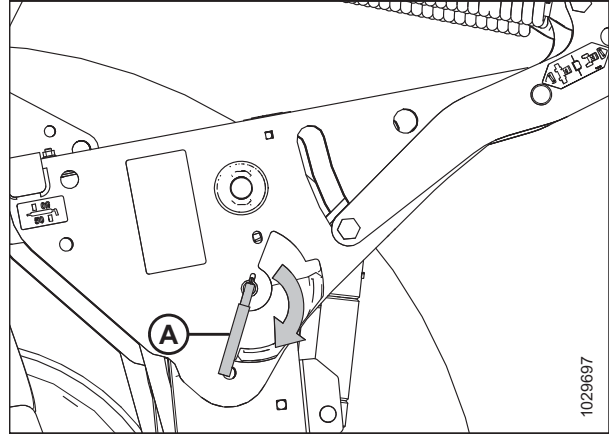


Figure 5.13: Safety Prop Lever

22. Press HEADER DOWN switch (A) on the GSL to fully lower the header.
23. Shut down the engine, and remove the key from the ignition.

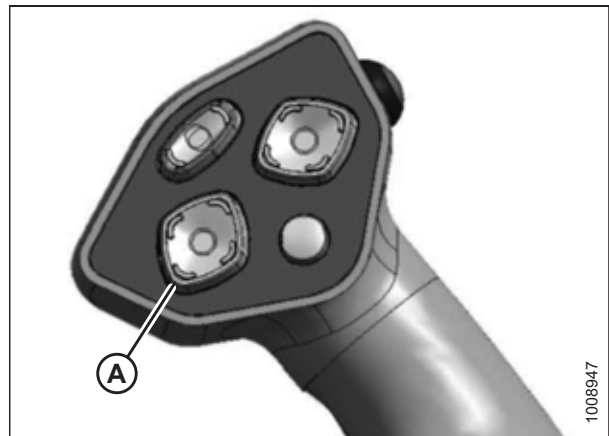


Figure 5.14: Ground Speed Lever

24. Connect header drive hoses (A) and electrical harness (B) to the header. For instructions, refer to the header operator's manual.

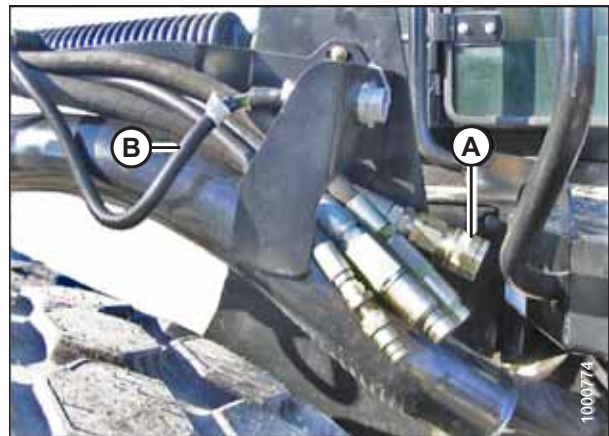


Figure 5.15: Header Drive Hoses and Harness

5.1.2 Attaching A Series Auger Header – Hydraulic Center-Link without Self-Alignment

The header will need to be physically attached to the windrower, and the hydraulic and electrical connections completed. If the windrower is equipped with a hydraulic center-link that lacks the self-alignment capability, the Operator will have to manually attach the hydraulic center-link's hook to the header's center pin.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Remove hairpin (A) from clevis pin (B) and remove the clevis pin from header boots (C) on both sides of the header.

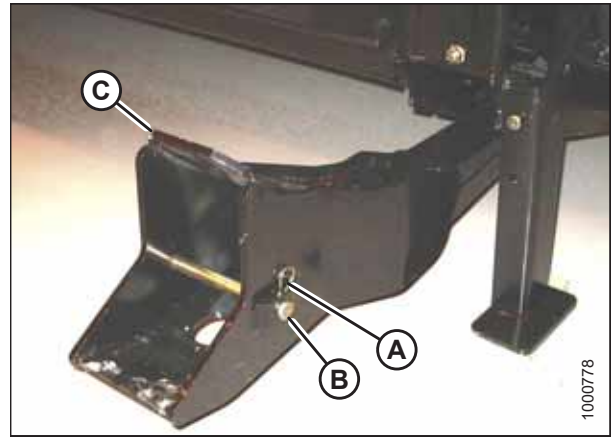


Figure 5.16: Header Boot

3. Check that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

IMPORTANT:

To prevent damage to the lift system when lowering the header lift linkages without a header or a weight box attached to the windrower, ensure that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

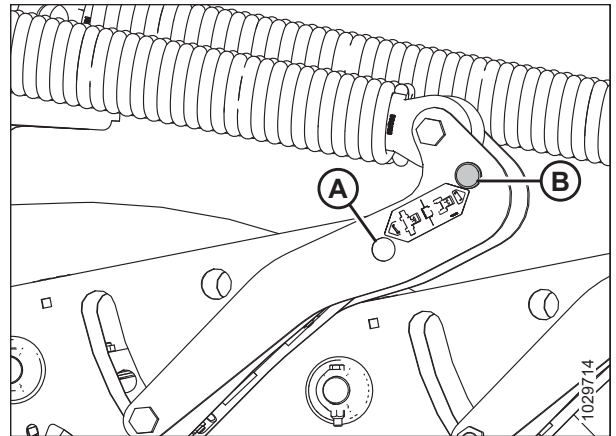


Figure 5.17: Header Float Linkage

ATTACHING AND DETACHING HEADERS

4. Activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

If the protective cover is installed on the exhaust stack, remove it before starting the engine.

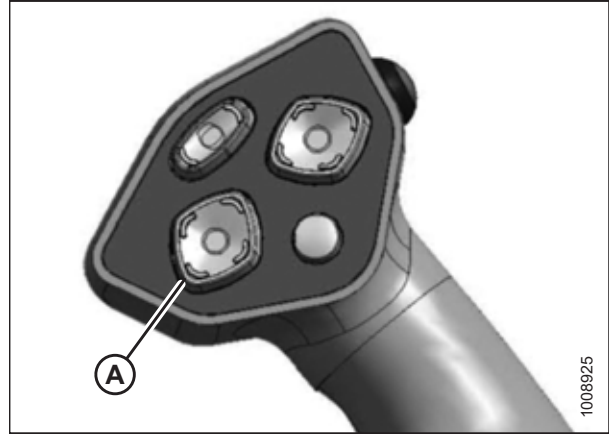


Figure 5.18: Ground Speed Lever

5. Remove pin (A) from the frame linkage and raise center-link (B) until the hook is above the attachment pin on the header. Replace pin (A) to hold the center-link in place.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

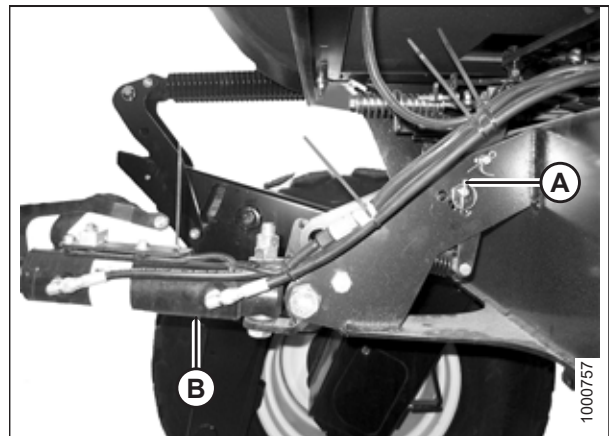


Figure 5.19: Hydraulic Center-Link without Self-Alignment Kit

6. Drive the windrower slowly forward until windrower feet (A) enter header supports (B). Continue driving slowly forward until the feet engage the supports and the header is nudged forward.

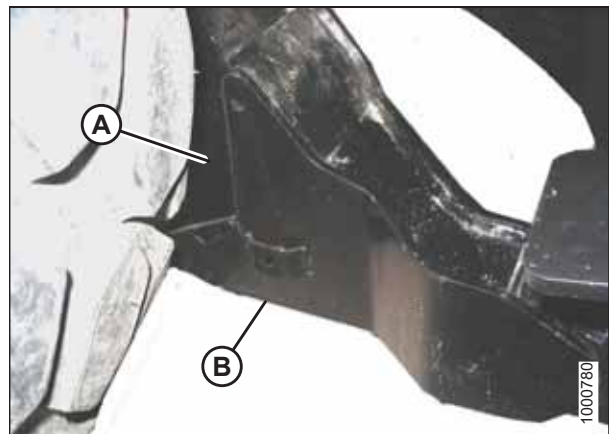


Figure 5.20: Header Support

ATTACHING AND DETACHING HEADERS

7. Use the following ground speed lever functions to position the center-link hook above the header attachment pin:
 - HEADER TILT UP (A) to retract the center-link
 - HEADER TILT DOWN (B) to extend the center-link
8. Shut down the engine, and remove the key from the ignition.

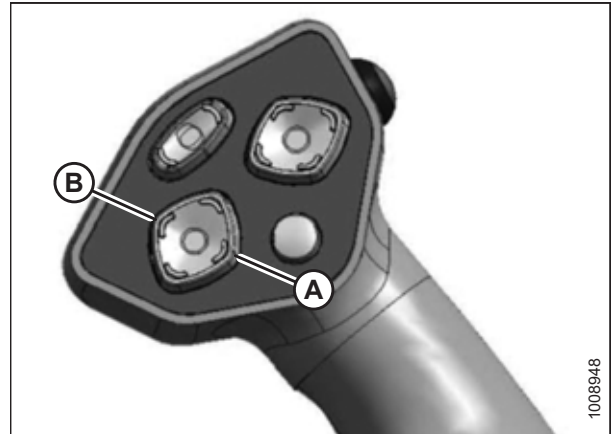


Figure 5.21: Ground Speed Lever

9. Push down on the rod end of link cylinder (A) until hook (B) engages and locks onto the header pin.

IMPORTANT:

The hook release must be down to enable the self-locking mechanism. If the release is open (up), manually push it down after the hook engages the header pin.

10. Check that center-link (A) is locked onto the header by pulling upward on the rod end of the cylinder.

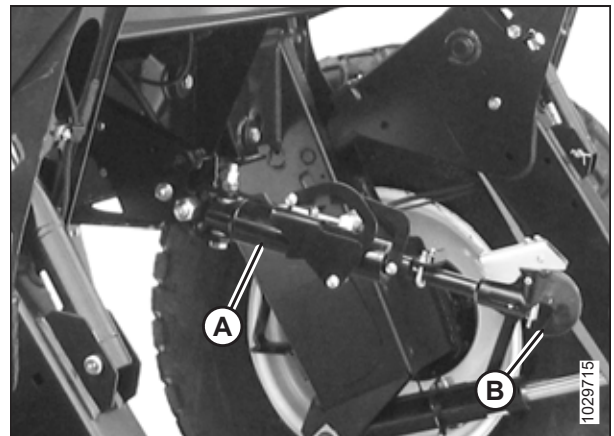


Figure 5.22: Hydraulic Center-Link

DANGER

Ensure that all bystanders have cleared the area.

11. Start the engine.
12. Press HEADER UP switch (A) to raise the header to its maximum height.
13. If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the hydraulic system.



Figure 5.23: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

14. Engage the safety props on both lift cylinders:
 - a. Shut down the engine, and remove the key from the ignition.
 - b. Pull lever (A) and rotate it towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat the previous steps for the opposite lift cylinder.

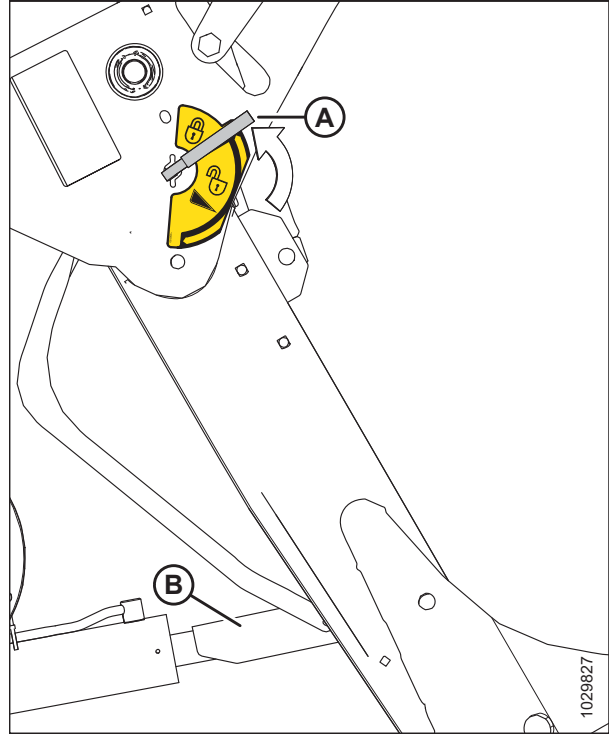


Figure 5.24: Safety Prop

15. Install clevis pin (A) through the support and the foot and secure it with the hairpin.

IMPORTANT:

Ensure that clevis pin (A) is fully inserted and the hairpin is installed behind the bracket.

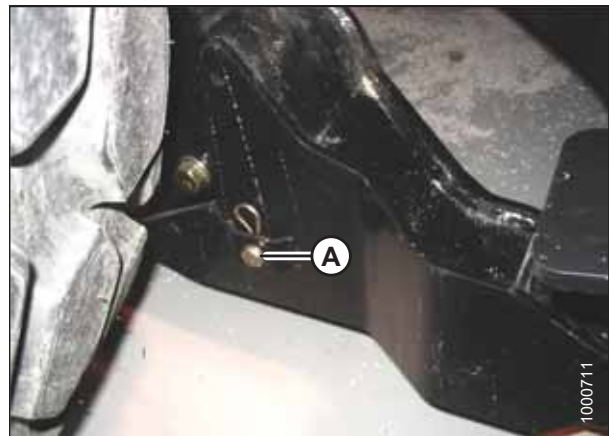


Figure 5.25: Header Support

ATTACHING AND DETACHING HEADERS

16. Remove the lynch pin from clevis pin (A) in stand (B).
17. Hold stand (B) and remove pin (A).
18. Move stand (B) to the storage position by inverting it and relocating it onto the bracket as shown. Reinsert clevis pin (A) and secure it with the lynch pin.

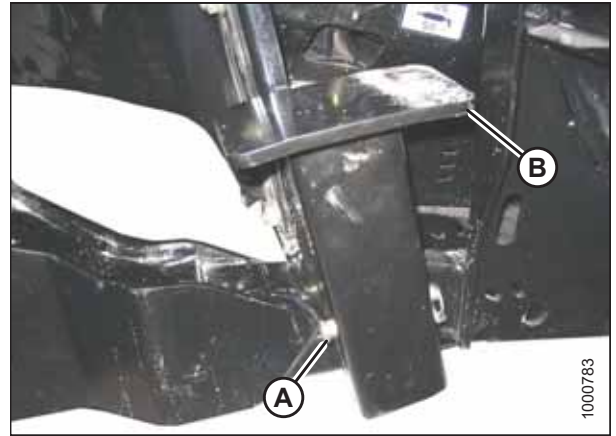


Figure 5.26: Header Stand

19. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Secure it with the hairpin. Repeat this step on the opposite float linkage.

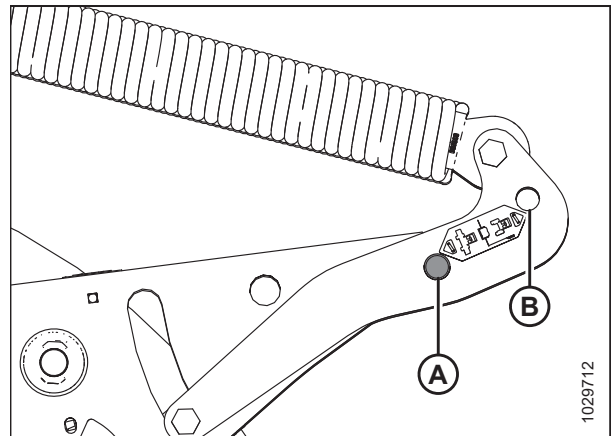


Figure 5.27: Header Float Linkage

20. Disengage the safety prop by turning lever (A) downwards until the lever locks into the vertical position.
21. Repeat the previous step to disengage the other safety prop.

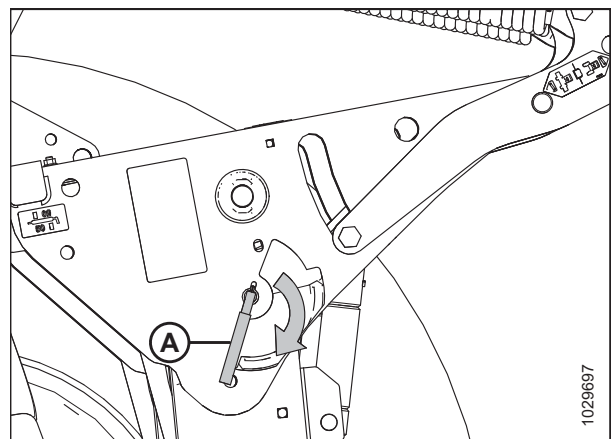


Figure 5.28: Safety Prop Lever

ATTACHING AND DETACHING HEADERS

22. Press HEADER DOWN switch (A) on the GSL to fully lower the header.
23. Shut down the engine, and remove the key from the ignition.

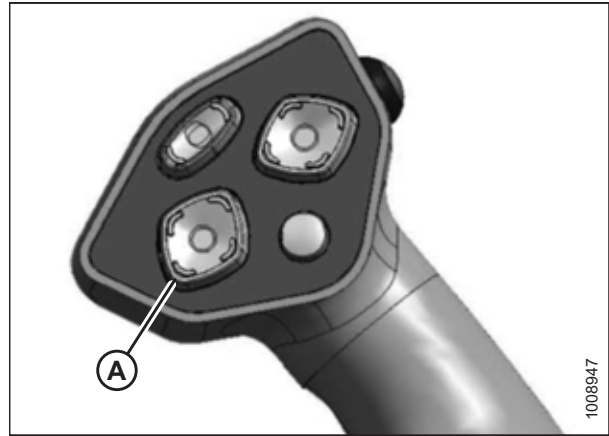


Figure 5.29: Ground Speed Lever

24. Connect header drive hoses (A) and electrical harness (B) to the header. For instructions, refer to the header operator's manual.

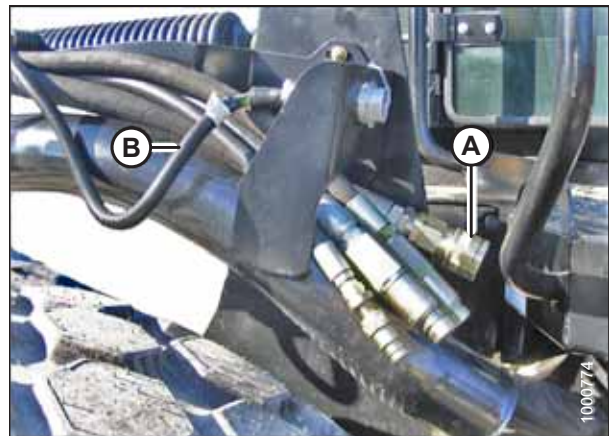


Figure 5.30: Header Drive Hoses and Harness

5.1.3 Attaching A Series Auger Header – Mechanical Center-Link

The header will need to be physically attached to the windrower, and the hydraulic and electrical connections completed. On windrowers with a mechanical center-link, the center-link will need to be manually connected to the header's center pin.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

1. Shut down the engine, and remove the key from the ignition.

ATTACHING AND DETACHING HEADERS

2. Remove hairpin (A) from clevis pin (B) and remove the clevis pin from header boots (C) on both sides of the header.

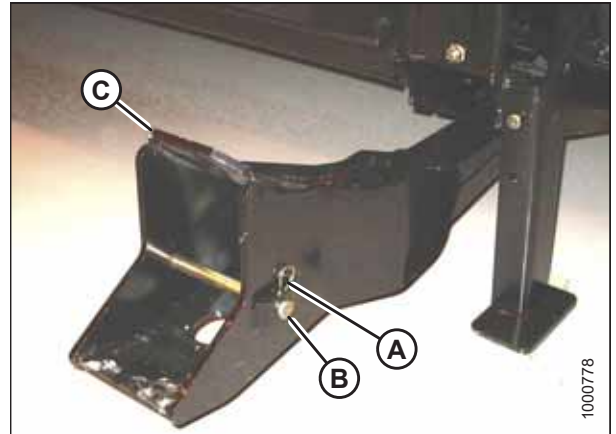


Figure 5.31: Header Boot

3. Check that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

IMPORTANT:

To prevent damage to the lift system when lowering the header lift linkages without a header or a weight box attached to the windrower, ensure that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

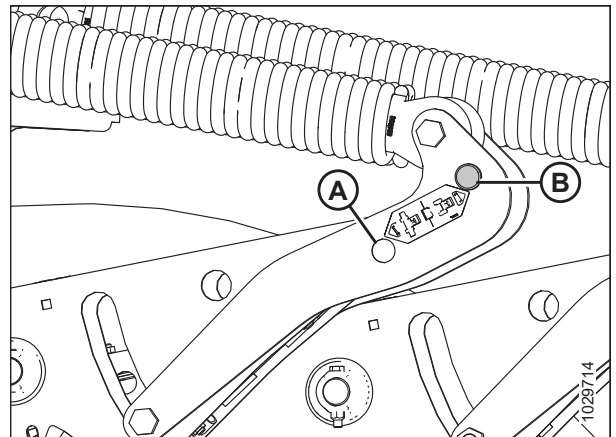


Figure 5.32: Header Float Linkage

4. Activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

If the protective cover is installed on the exhaust stack, remove it before starting the engine.

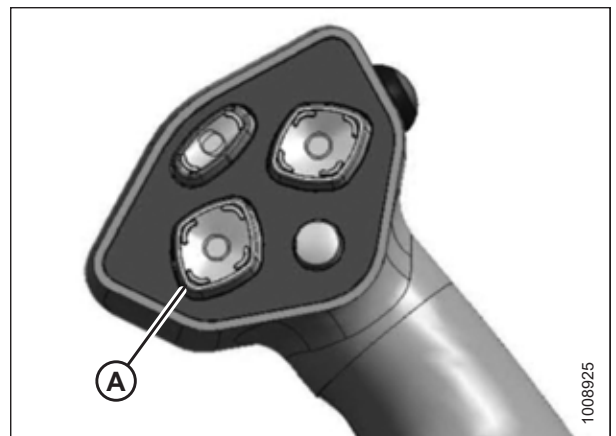


Figure 5.33: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

5. Drive the windrower slowly forward until boots (A) enter header legs (B). Continue driving slowly forward until the lift linkages contact the support plates in the header legs and the header is nudged forward.
6. Ensure that the lift linkages are properly engaged in the header legs and are contacting the support plates.

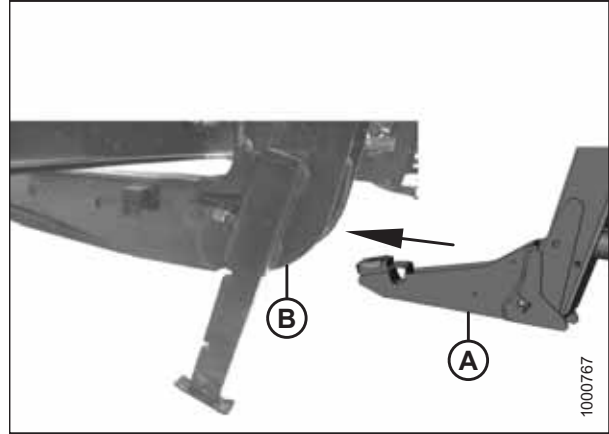


Figure 5.34: Header Leg and Boot

7. Shut down the engine, and remove the key from the ignition.
8. Loosen nut (A) and rotate barrel (B) to adjust the barrel's length until the link is aligned with the header bracket.
9. Install clevis pin (C) and secure it with cotter pin (D).
10. Adjust the length of the link to achieve the proper header angle by rotating barrel (B). Tighten nut (A) against the barrel (a slight tap with a hammer is sufficient).

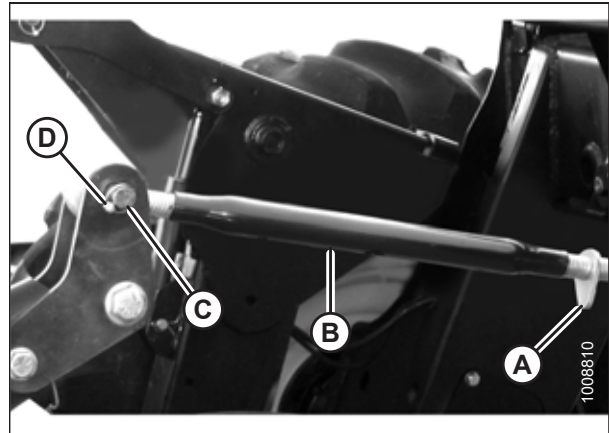


Figure 5.35: Mechanical Center Link

11. Start the engine.
12. Press HEADER UP switch (A) to raise the header to its maximum height.
13. If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the hydraulic system.



Figure 5.36: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

14. Engage the safety props on both lift cylinders:
 - a. Shut down the engine, and remove the key from the ignition.
 - b. Pull lever (A) and rotate it towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat the previous steps for the opposite lift cylinder.

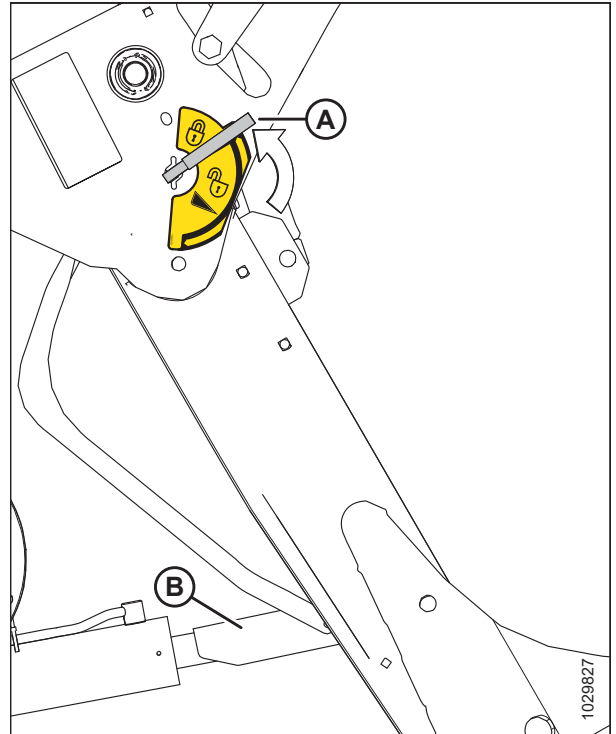


Figure 5.37: Safety Prop

15. Install clevis pin (A) through the support and the foot and secure it with the hairpin.

IMPORTANT:

Ensure that clevis pin (A) is fully inserted and the hairpin is installed behind the bracket.

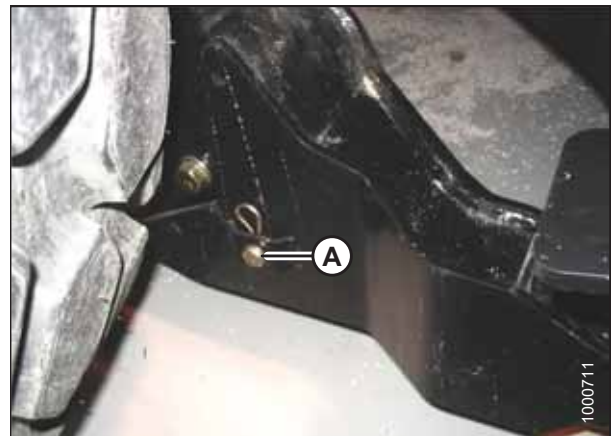


Figure 5.38: Header Support

ATTACHING AND DETACHING HEADERS

16. Remove the lynch pin from clevis pin (A) in stand (B).
17. Hold stand (B) and remove pin (A).
18. Move stand (B) to the storage position by inverting it and relocating it onto the bracket as shown. Reinsert clevis pin (A) and secure it with the lynch pin.

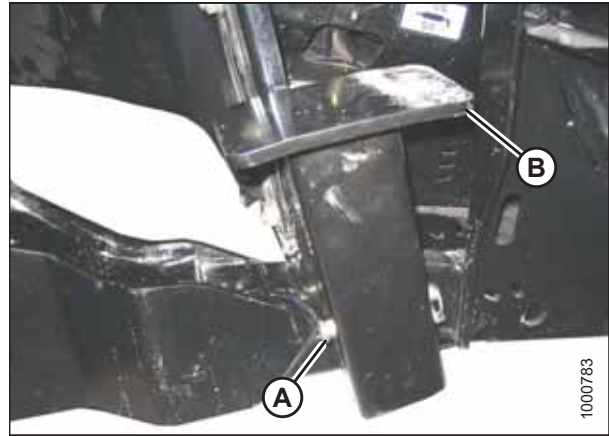


Figure 5.39: Header Stand

19. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Secure it with the hairpin. Repeat this step on the opposite float linkage.

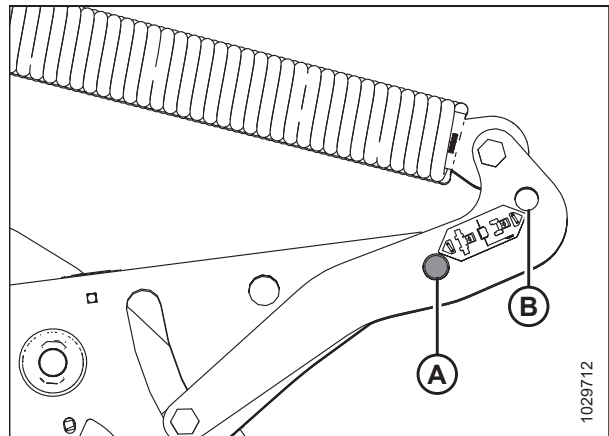


Figure 5.40: Header Float Linkage

20. Disengage the safety prop by turning lever (A) downwards until the lever locks into the vertical position.
21. Repeat the previous step to disengage the other safety prop.

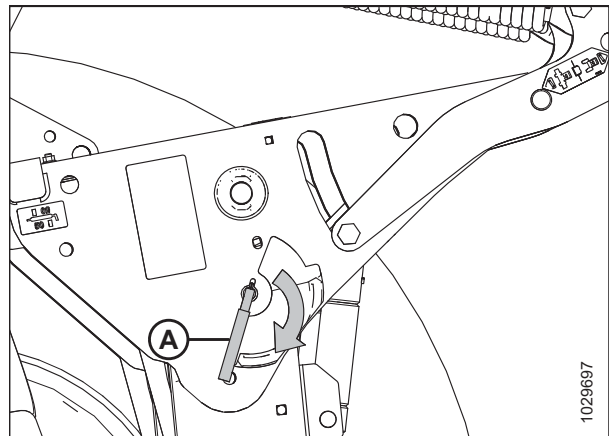


Figure 5.41: Safety Prop Lever

ATTACHING AND DETACHING HEADERS

22. Press HEADER DOWN switch (A) on the GSL to fully lower the header.
23. Shut down the engine, and remove the key from the ignition.

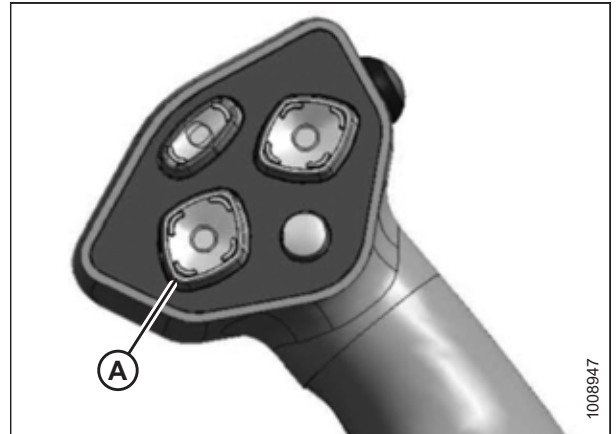


Figure 5.42: Ground Speed Lever

24. Connect header drive hoses (A) and electrical harness (B) to the header. For instructions, refer to the header operator's manual.

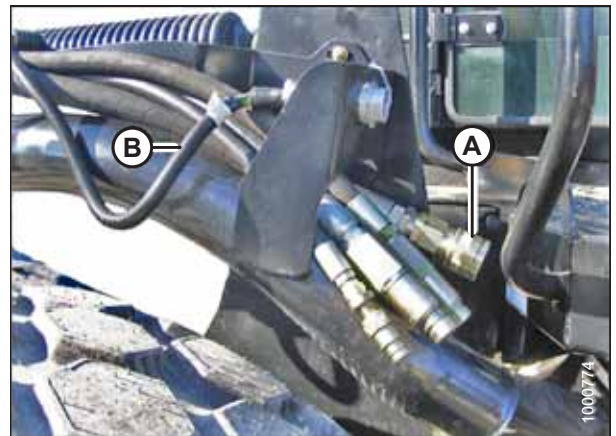


Figure 5.43: Header Drive Hoses and Harness

25. Connect reel hydraulics (A) to the corresponding connections at the right cab-forward side of the windrower. For instructions, refer to the header operator's manual.

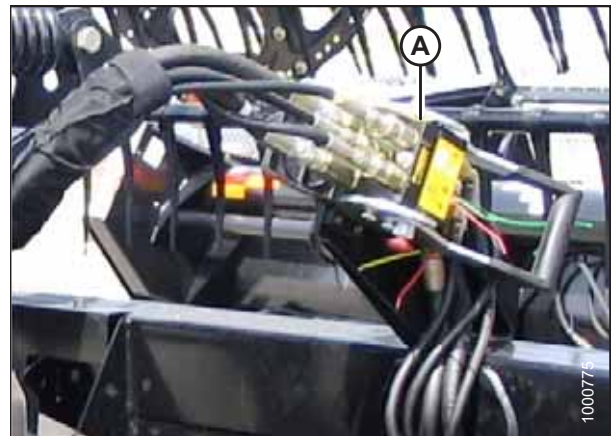


Figure 5.44: Reel Hydraulics

5.2 Detaching A Series Auger Header

Detaching a header from the windrower involves removing the header's mechanical connection to the windrower and disconnecting the hydraulic and electrical connections.

Refer to the procedure applicable to the center-link installed on the windrower:

ATTACHING AND DETACHING HEADERS

- [5.2.1 Detaching A Series Auger Header – Hydraulic Center-Link, page 252](#)
- [5.2.2 Detaching A Series Auger Header – Mechanical Center-Link, page 256](#)

5.2.1 Detaching A Series Auger Header – Hydraulic Center-Link

Detaching an A Series Auger Header from the windrower requires lowering the header stand, removing the leg pins, disengaging the float springs, and disconnecting the electrical and hydraulic connectors.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Press HEADER UP switch (A) on the ground speed lever (GSL) to raise the header to its maximum height.
3. Rephase the cylinders if one end of the header does not rise fully:
 - a. Press and hold HEADER UP switch (A) until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.
4. Shut down the engine, and remove the key from the ignition.



Figure 5.45: Ground Speed Lever

DANGER

To prevent bodily injury from the fall of a raised header, always engage the safety props when working on or around a raised header, and before going under the header for any reason.

ATTACHING AND DETACHING HEADERS

5. To engage the safety props on the lift cylinders:
 - a. Pull lever (A) and rotate it toward the header to lower safety prop (B) onto the cylinder.
 - b. Repeat the previous step for the opposite lift cylinder.

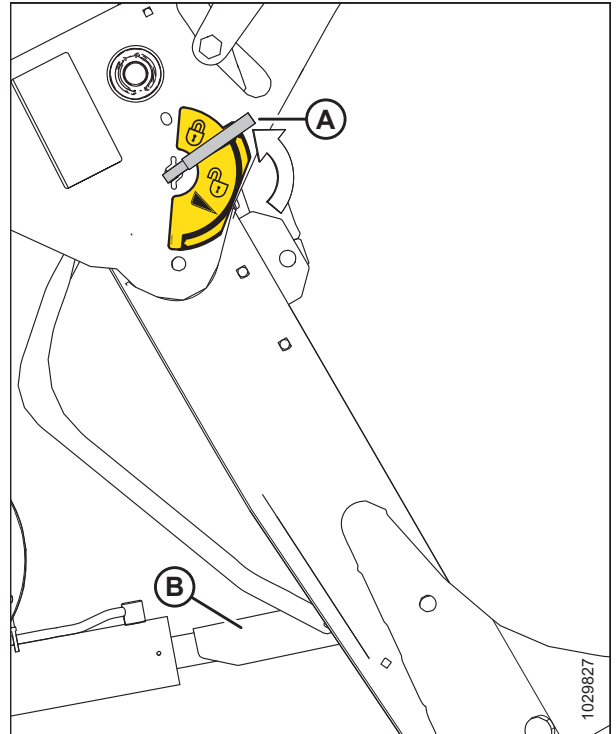


Figure 5.46: Safety Prop

6. Remove the hairpin from clevis pin (A), and remove the clevis pin from header boots (B).
7. Repeat the previous step on the other side of the header.

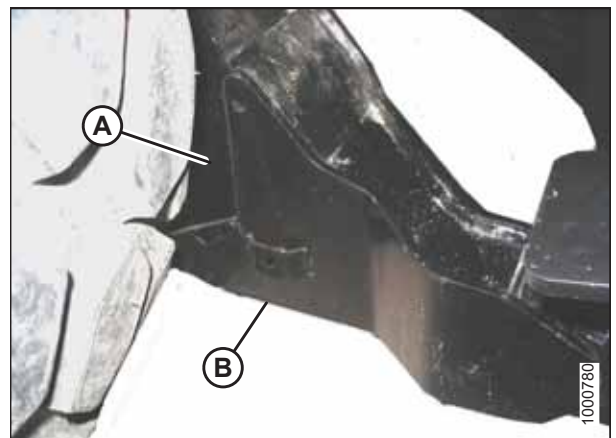


Figure 5.47: Header Boot

ATTACHING AND DETACHING HEADERS

- Lower stand (A) by pulling clevis pin (B), inverting the stand, and positioning the stand on the bracket. Reinsert pin (B) and secure it with a hairpin.

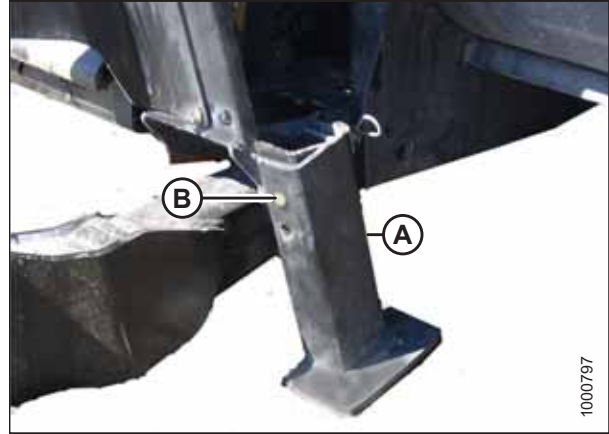


Figure 5.48: Header Stand

- Check that the float engagement pin is installed in storage position (B) and **NOT** in the engaged position.

IMPORTANT:

To prevent damage to the lift system when lowering the header lift linkages without a header or a weight box attached to the windrower, ensure that the float engagement pin is installed in storage position (B) and **NOT** in the engaged position.

Remove the lynch pin from the clevis pin, and remove the clevis pin from engaged position (A) in the linkage to disengage the float springs.

- Insert the clevis pin into storage hole (B). Secure it with a lynch pin.
- Repeat the previous step on the other side of the header.
- Disengage the safety props by turning lever (A) away from the header to raise the safety prop until the lever locks into the vertical position.
- Repeat the previous step to release the safety prop on the opposite cylinder.
- Start the engine, choose a level area, and lower the header to the ground.

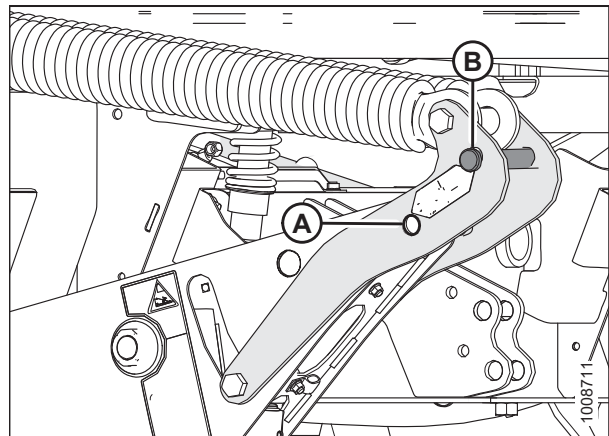


Figure 5.49: Header Float Linkage

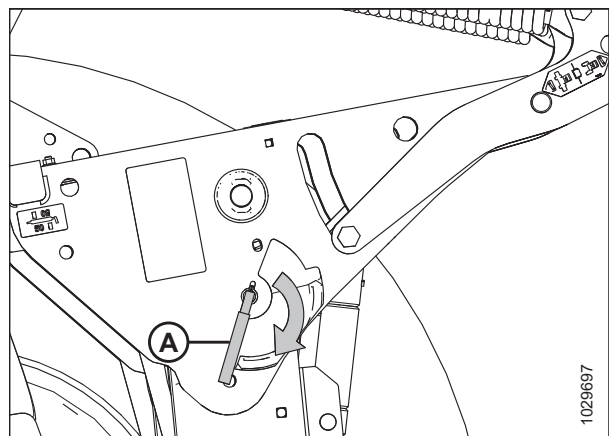


Figure 5.50: Safety Props

ATTACHING AND DETACHING HEADERS

15. Press HEADER TILT UP switch (A) or HEADER TILT DOWN switch (B) on the GSL to relieve the load on the center-link cylinder.

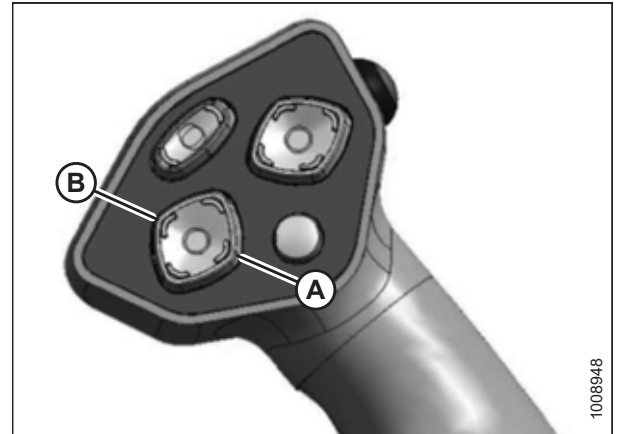


Figure 5.51: Ground Speed Lever

16. Shut down the engine, and remove the key from the ignition.
17. Lift hook release (C) and lift hook (B) off of the header pin.

NOTE:

If the optional center-link self-alignment kit is installed, lift release (C) and then operate link lift cylinder (A) using the REEL UP switch on the GSL to disengage the center-link from the header.

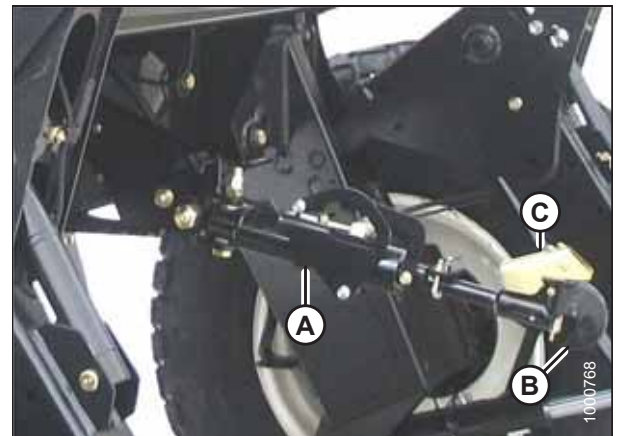


Figure 5.52: Hydraulic Center-Link

18. Disconnect header drive hydraulics (A) and electrical harness (B). Refer to the auger header operator's manual.
19. Back the windrower slowly away from the header.

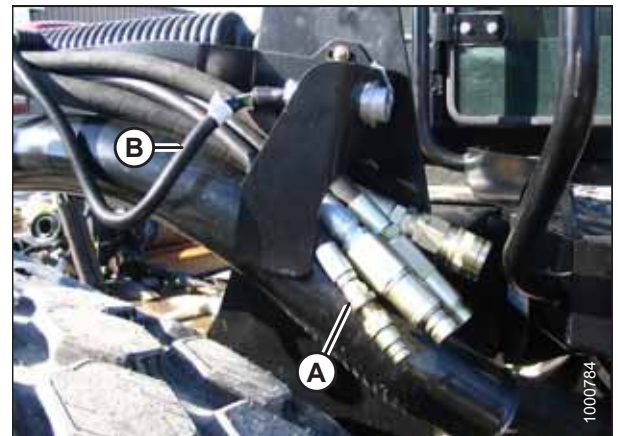


Figure 5.53: Header Drive Hydraulics

ATTACHING AND DETACHING HEADERS

20. Reinstall clevis pin (B) into header boot (C) and secure it with hairpin (A).
21. Repeat the previous step on the opposite side of the header.

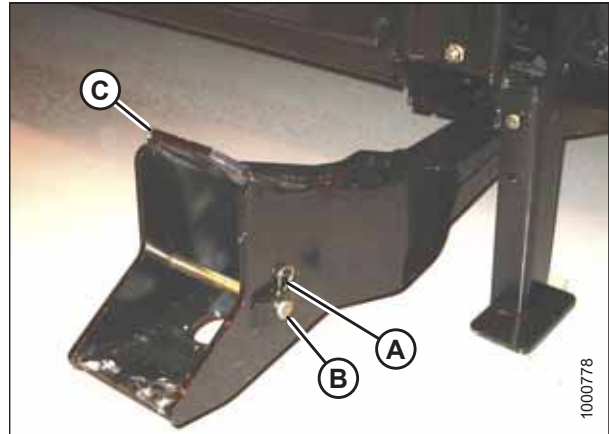


Figure 5.54: Header Boots

5.2.2 Detaching A Series Auger Header – Mechanical Center-Link

Detaching an A Series Auger Header from the windrower requires lowering the header stand, removing the leg pins, disengaging the float springs, and disconnecting the electrical and hydraulic connectors.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Start engine and press HEADER UP switch (A) on ground speed lever (GSL) to raise header to maximum height.
2. If one end of the header does **NOT** rise fully, follow these steps to rephase the cylinders:
 - a. Press and hold the HEADER UP (A) switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.
3. Shut down the engine, and remove the key from the ignition.



Figure 5.55: Ground Speed Lever

DANGER

To prevent bodily injury from the fall of a raised header, always engage the safety props when working on or around a raised header, and before going under the header for any reason.

ATTACHING AND DETACHING HEADERS

4. To engage the safety props on the lift cylinders:
 - a. Pull lever (A) and rotate it toward the header to lower safety prop (B) onto the cylinder.
 - b. Repeat the previous step for the opposite lift cylinder.

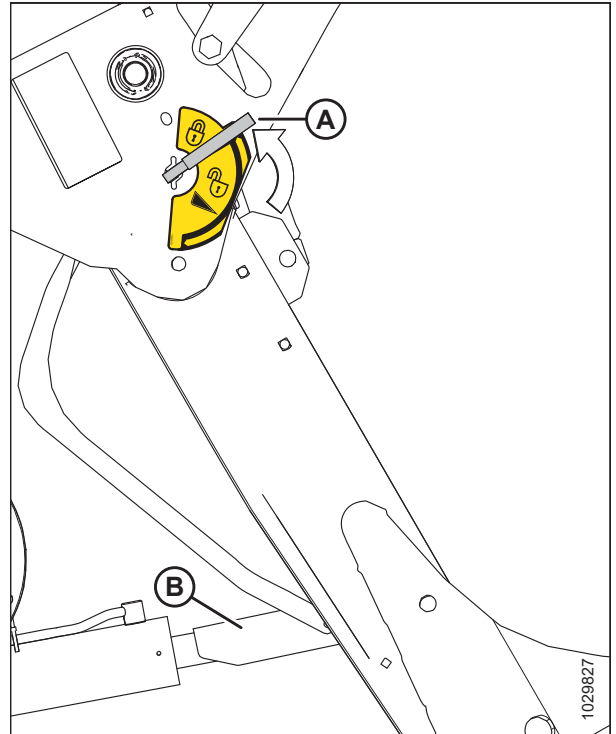


Figure 5.56: Safety Prop

5. Remove the hairpin from clevis pin (A) and remove the clevis pin from the left and right header boots (B).

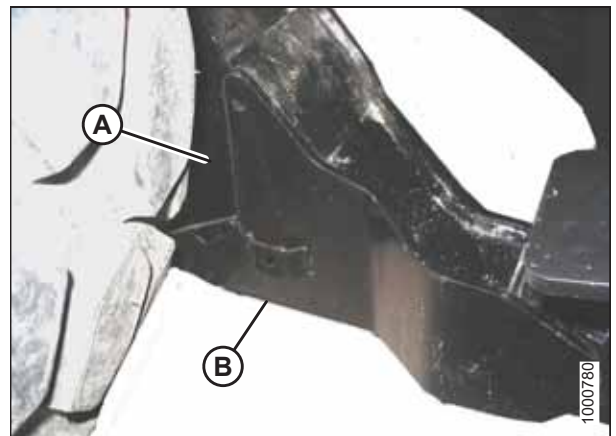


Figure 5.57: Header Boot

ATTACHING AND DETACHING HEADERS

- Lower header stand (A) by pulling clevis pin (B), inverting the stand, and relocating it on the bracket. Reinsert clevis pin (B) and secure it with the hairpin.

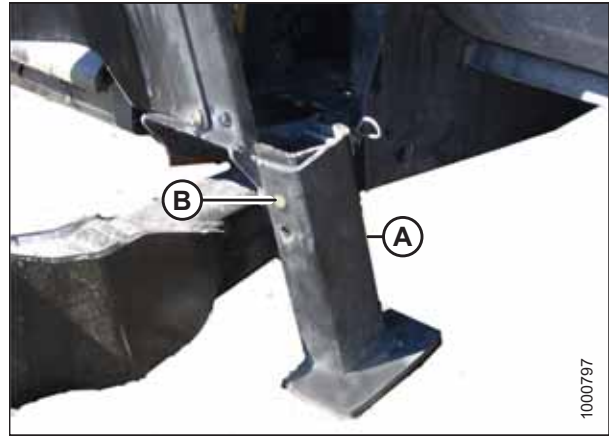


Figure 5.58: Header Stand

- Remove the clevis pin from linkage (A) to disengage the float springs and insert it in storage hole (B). Secure the pin with the lynch pin. Repeat this step for the opposite linkage.

IMPORTANT:

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

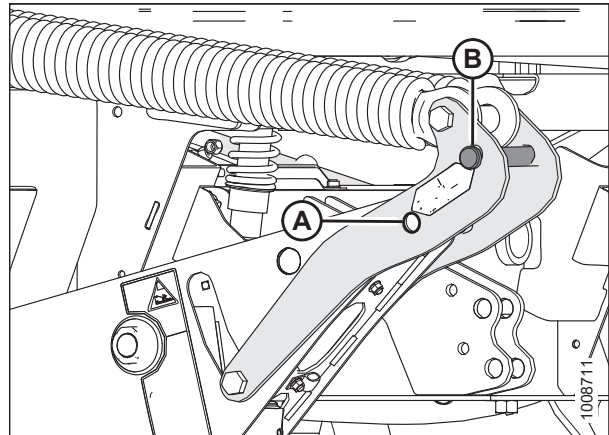


Figure 5.59: Header Float Linkage

- To disengage the safety props on the lift cylinders:
 - Turn lever (A) away from the header to raise the safety prop until the lever locks into the vertical position.
 - Repeat the previous step for the opposite cylinder.
- Start the engine, choose a level area, and lower the header to the ground.
- Shut down the engine, and remove the key from the ignition.

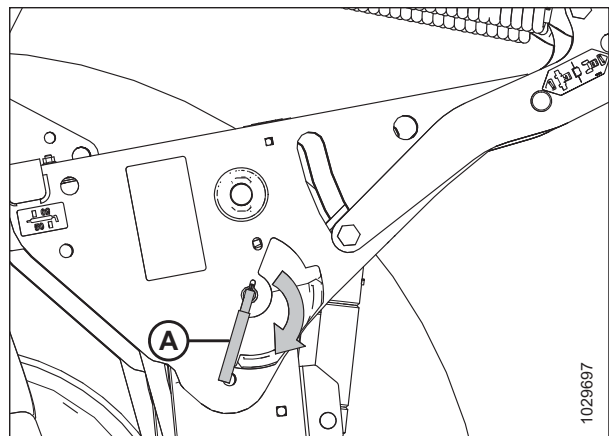


Figure 5.60: Safety Prop

ATTACHING AND DETACHING HEADERS

11. Loosen nut (A) and rotate barrel (B) to relieve the load on the link.
12. Remove cotter pin (D) on clevis pin (C) and remove the pin to disconnect from the header.
13. Reinstall the clevis pin in the header.

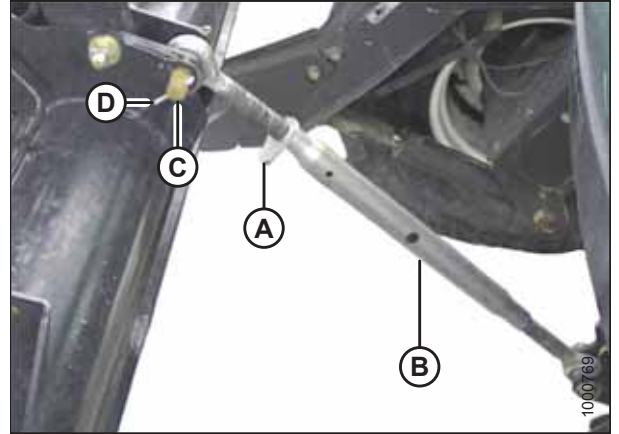


Figure 5.61: Mechanical Center-Link

14. Disconnect header drive hydraulics (A) and electrical harness (B).
15. Slowly back the windrower away from the header.

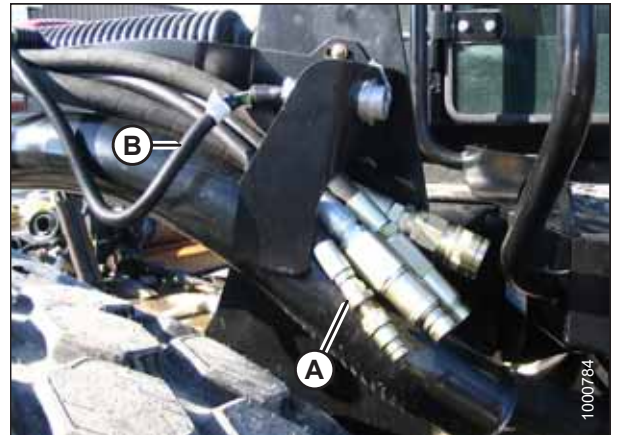


Figure 5.62: Header Drive Hydraulics

16. Reinstall clevis pin (B) and secure it with hairpin (A) in header boot (C).
17. Repeat this the previous step for the opposite side of the header.

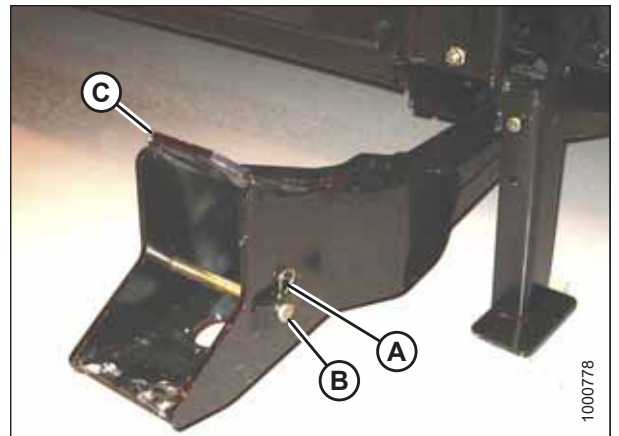


Figure 5.63: Header Boot

5.3 Attaching D or D1 SP Series Draper Header

Attaching a header to the windrower involves physically connecting the header to the header and completing the hydraulic and electrical connections.

The procedure for attaching a D or D1 SP Series Draper Header to the windrower differs slightly depending on the configuration of the windrower. Proceed to the relevant topic:

- [5.3.2 Attaching D or D1 SP Series Draper Header – Hydraulic Center-Link with Self-Alignment, page 261](#)
- [5.3.3 Attaching D or D1 SP Series Draper Header – Hydraulic Center-Link without Self-Alignment, page 268](#)
- [5.3.4 Attaching D or D1 SP Series Draper Header – Mechanical Center-Link, page 273](#)

5.3.1 Attaching Draper Header Supports

Header supports are required to attach a D Series or D1 SP Series Draper Header to the windrower. Attach header supports to the windrower's lift linkage if they are not already installed. Header supports are supplied with the header.

DANGER

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

IMPORTANT:

Ensure that the correct header supports are used:

- D1 SP Series Draper Headers can use header supports (A) or (D).
- D Series Draper Headers must use header supports (D).
- A feature that distinguishes support (A) from all other types is that rubber block (B) is attached to the support using two nuts (C).
- A feature that distinguishes support (D) from all other types is that metal support (E) covers the rubber block.
- To order header supports, refer to the header parts catalog.

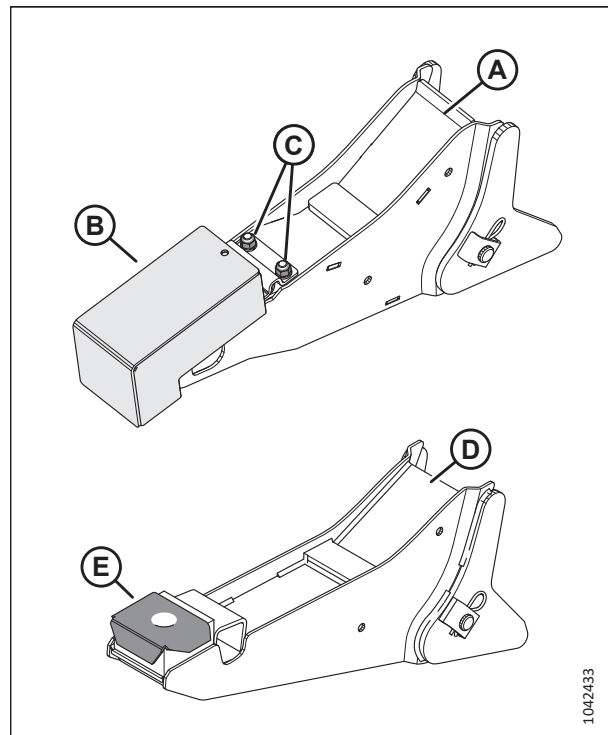


Figure 5.64: Draper Header Supports

1. Shut down the engine, and remove the key from the ignition.

ATTACHING AND DETACHING HEADERS

2. Remove pin (B) from support (A).

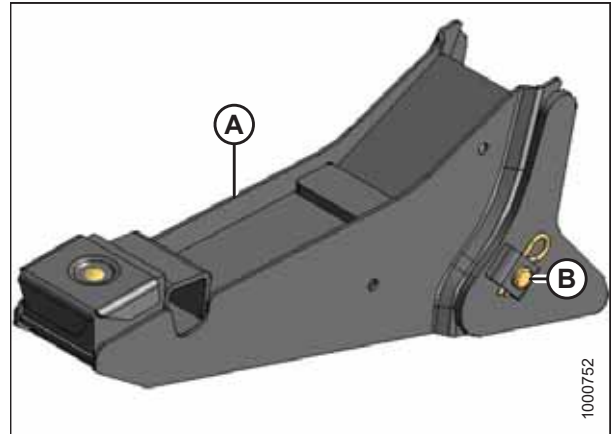


Figure 5.65: Header Support

3. Position support (B) onto lift linkage (A) and reinstall pin (C). The pin may be installed from either side of the support.
4. Secure pin (C) with hairpin (D).
5. Repeat Step 2, page 261 to Step 4, page 261 to install the support on the opposite side of the windrower.

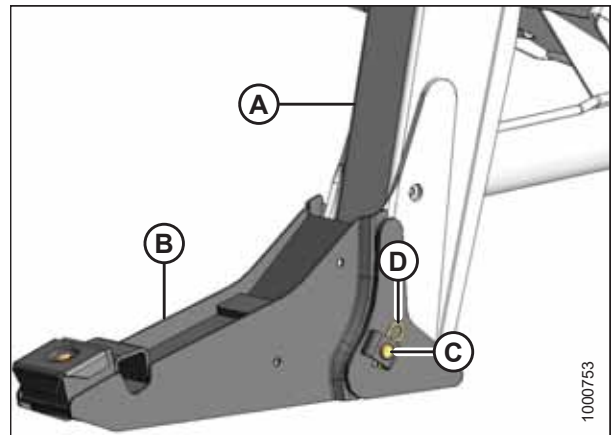


Figure 5.66: Header Support

5.3.2 Attaching D or D1 SP Series Draper Header – Hydraulic Center-Link with Self-Alignment

The header will need to be physically attached to the windrower, and the hydraulic connections completed. The windrower may be equipped with an optional self-aligning hydraulic center-link, which allows the Operator to control the vertical position of the center-link from the cab.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

DANGER

Ensure that all bystanders have cleared the area.

1. Shut down the engine, and remove the key from the ignition.

ATTACHING AND DETACHING HEADERS

2. If the windrower was previously attached to an R Series Rotary Disc Header, make sure to remove the forming shield (not shown), including forming shield support brackets (A) and hardware (B) from both legs. You can store the brackets and hardware in the windrower tool box.
 - For more information about the forming shield, refer to the header operator's manual.

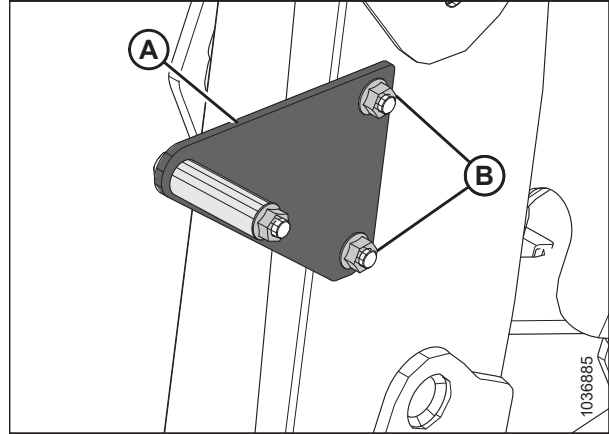


Figure 5.67: Forming Shield bracket – R Series

3. Before beginning this procedure, ensure that both draper header supports (A) are installed onto the windrower's lift linkage, and that the supports are compatible with the header. For instructions on installing the header supports onto the windrower, refer to [5.3.1 Attaching Draper Header Supports](#), page 260.

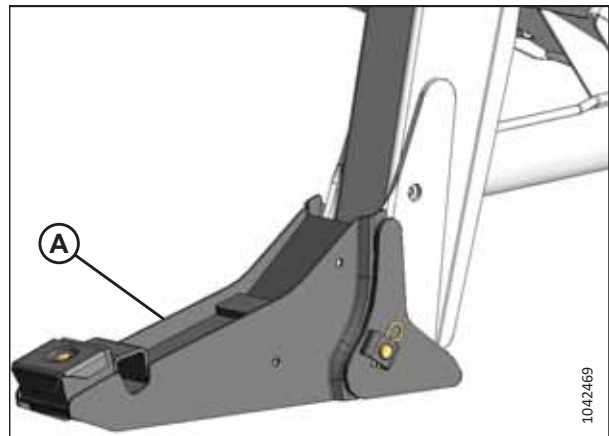


Figure 5.68: Header Supports Installed

4. Remove hairpin (A) from pin (B), and remove the pin from the header leg. Repeat this step on the other side of the header.

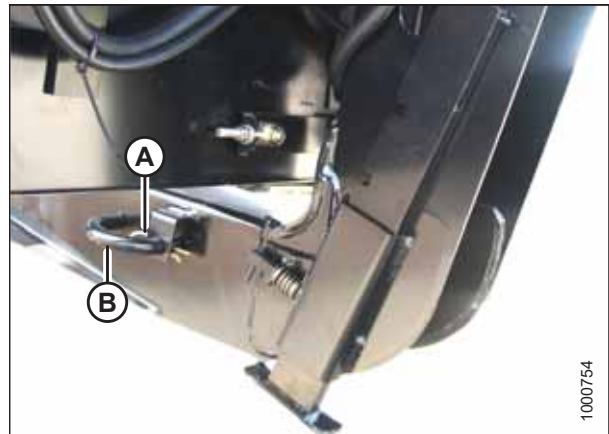


Figure 5.69: Header Leg

ATTACHING AND DETACHING HEADERS

5. Ensure that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

IMPORTANT:

Removing the float will release the tension in the float springs. This will prevent damage to the header lift linkages when lowering the legs without a header or weight box attached to the windrower.

6. Start the engine.

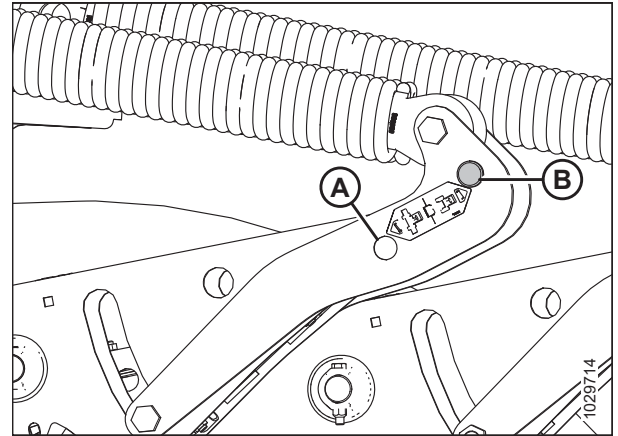


Figure 5.70: Header Float Linkage

7. Activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

If the protective cover is installed on the exhaust stack, remove it before starting the engine.

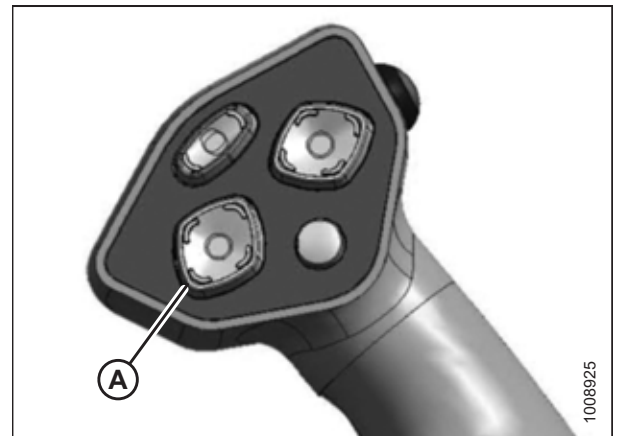


Figure 5.71: Ground Speed Lever

8. Press REEL UP switch (A) on the GSL to raise the center-link until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.



Figure 5.72: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

9. Drive the windrower slowly forward until boots (A) enter header legs (B). Continue driving slowly forward until the lift linkages contact the support plates in the header legs and the header is nudged forward.
10. Ensure that the lift linkages are properly engaged in the header legs and are contacting the support plates.

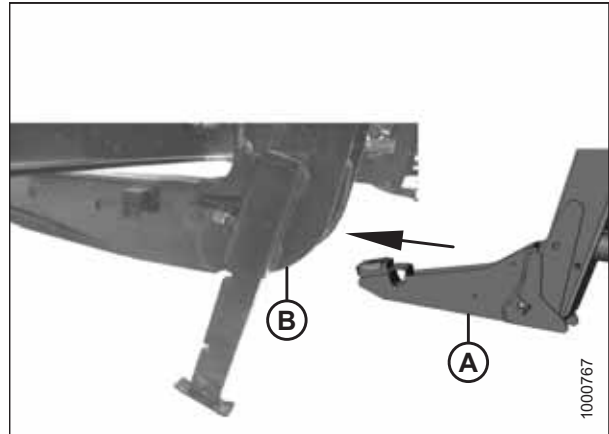


Figure 5.73: Header Leg and Boot

11. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - REEL UP (A) to raise the center-link
 - REEL DOWN (B) to lower the center-link
 - HEADER TILT UP (C) to retract the center-link
 - HEADER TILT DOWN (D) to extend the center-link

IMPORTANT:

The hook release must be down to enable the self-locking mechanism. If the release is open (up), manually push it down after the hook engages the header pin.

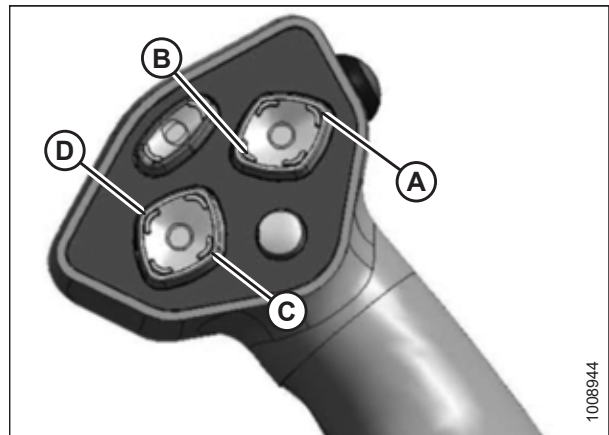


Figure 5.74: Ground Speed Lever

12. Lower center-link (A) onto the header with the REEL DOWN switch on the GSL until it locks into position (hook release [B] is down).
13. Press the REEL UP switch on the GSL to ensure that center-link (A) is securely attached to the header.

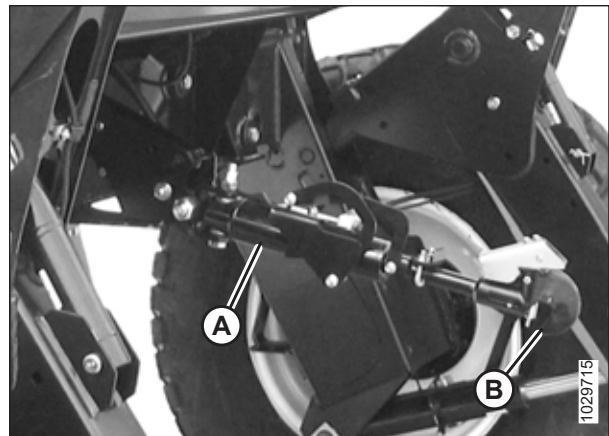


Figure 5.75: Hydraulic Center-Link

ATTACHING AND DETACHING HEADERS

14. Press HEADER UP switch (A) to raise the header to its maximum height.
15. If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds to fully phase the cylinders.

NOTE:

It may be necessary to repeat this procedure if there is air in the hydraulic system.

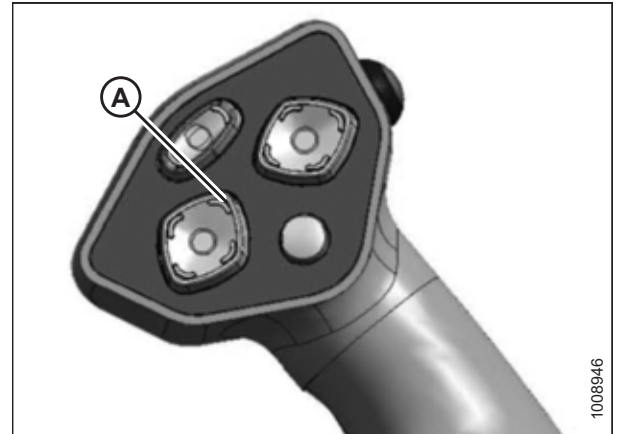


Figure 5.76: Ground Speed Lever

16. Engage the safety props on both lift cylinders:
 - a. Shut down the engine, and remove the key from the ignition.
 - b. Pull lever (A) and rotate it towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat the previous steps for the opposite lift cylinder.

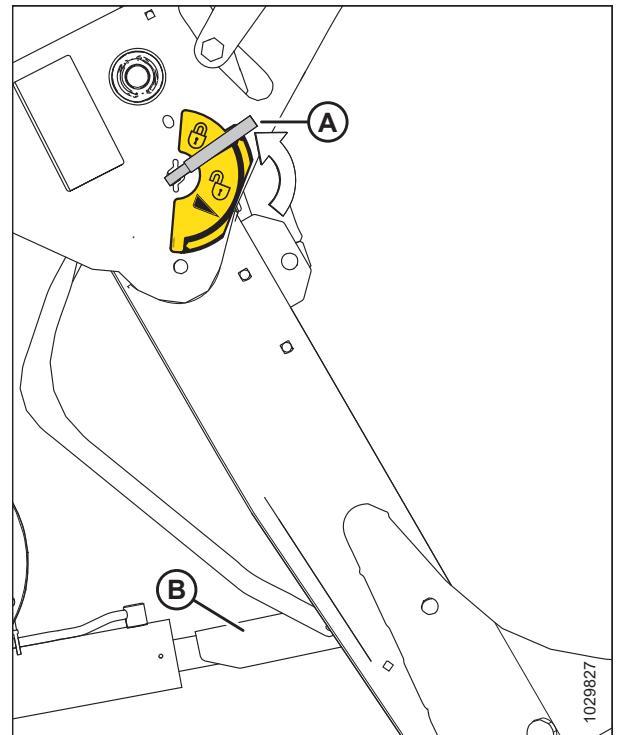


Figure 5.77: Safety Prop

ATTACHING AND DETACHING HEADERS

17. Install pin (B) through the header leg, engaging the U-bracket in the lift linkage. Secure the pin with hairpin (A).
18. Repeat the previous step on the other side of the header.
19. Raise header stand (D) to its storage position by pulling spring pin (C) and lifting the stand into the uppermost position. Release the spring pin.

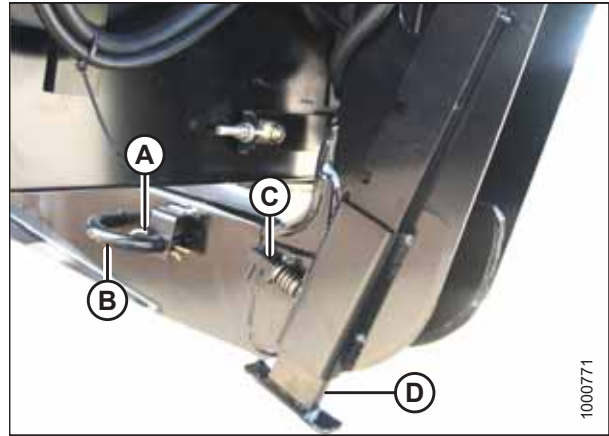


Figure 5.78: Header Leg

20. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Repeat this step on the opposite float linkage.

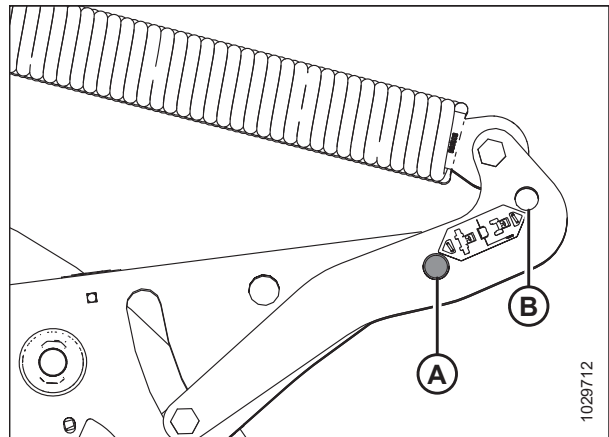


Figure 5.79: Header Float Linkage

21. Disengage the safety prop by turning lever (A) downwards until the lever locks into the vertical position.
22. Repeat the previous step to disengage the other safety prop.

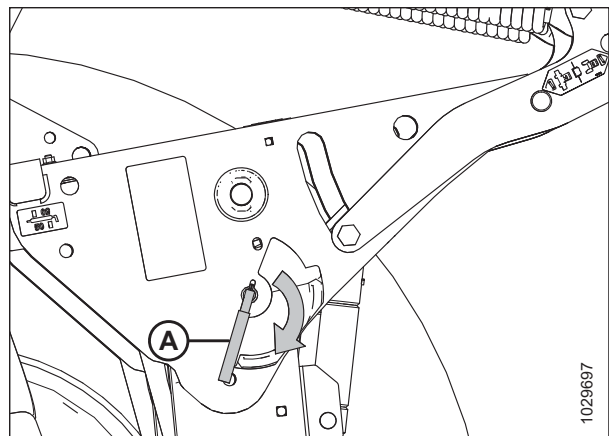


Figure 5.80: Safety Prop Lever

ATTACHING AND DETACHING HEADERS

23. Start the engine.
24. Press HEADER DOWN switch (A) on the GSL to fully lower the header.
25. Shut down the engine, and remove the key from the ignition.

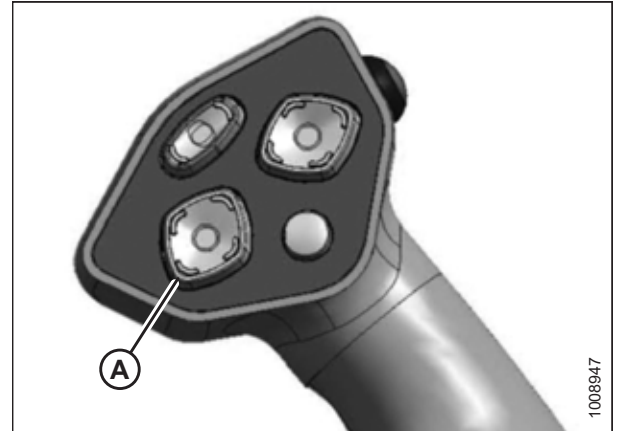


Figure 5.81: Ground Speed Lever

26. Connect header drive hoses (A) and electrical harness (B) to the header. For instructions, refer to the header operator's manual.

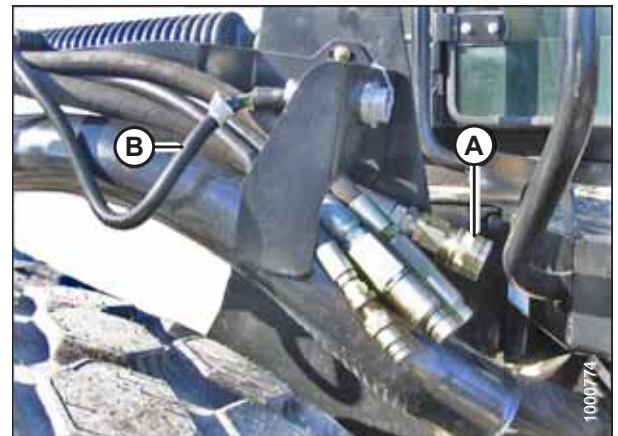


Figure 5.82: Header Drive Hoses and Harness

27. Connect reel hydraulics (A) to the corresponding connections at the right cab-forward side of the windrower. For instructions, refer to the header operator's manual.

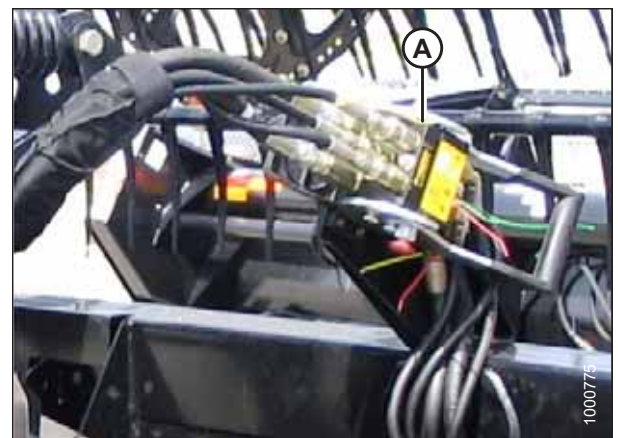


Figure 5.83: Reel Hydraulics

5.3.3 Attaching D or D1 SP Series Draper Header – Hydraulic Center-Link without Self-Alignment

The header will need to be physically attached to the windrower, and the hydraulic connections completed. If the windrower is equipped with a hydraulic center-link that lacks the self-alignment capability, the Operator will have to manually attach the hydraulic center-link's hook to the header's center pin.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. If the windrower was previously attached to an R Series Rotary Disc Header, make sure to remove the forming shield (not shown), including forming shield support brackets (A) and hardware (B) from both legs. You can store the brackets and hardware in the windrower tool box.
 - For more information about the forming shield, refer to the header operator's manual.

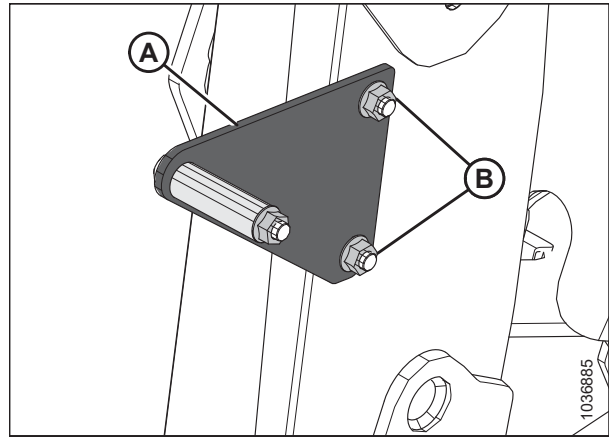


Figure 5.84: Forming Shield bracket – R Series

3. Before beginning this procedure, ensure that both draper header supports (A) are installed onto the windrower's lift linkage, and that the supports are compatible with the header. For instructions on installing the header supports onto the windrower, refer to [5.3.1 Attaching Draper Header Supports, page 260](#).

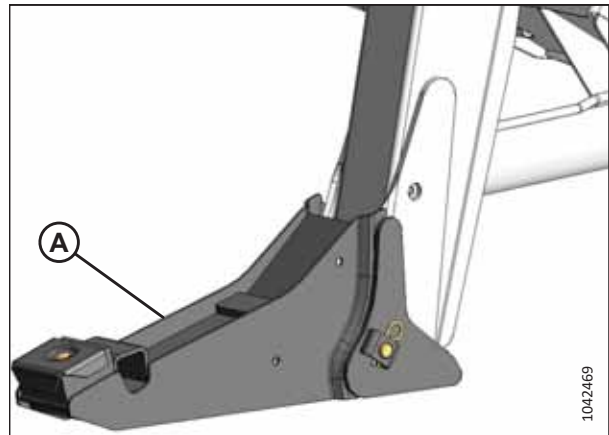


Figure 5.85: Header Supports Installed

ATTACHING AND DETACHING HEADERS

4. Ensure that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

IMPORTANT:

Removing the float will release the tension in the float springs. This will prevent damage to the header lift linkages when lowering the legs without a header or weight box attached to the windrower.

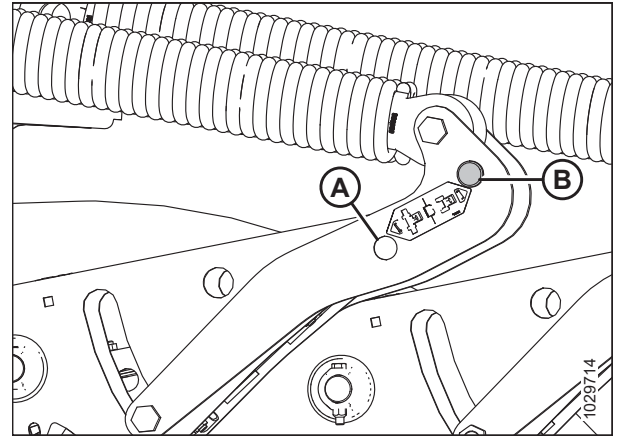


Figure 5.86: Header Float Linkage

5. Activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

If the protective cover is installed on the exhaust stack, remove it before starting the engine.

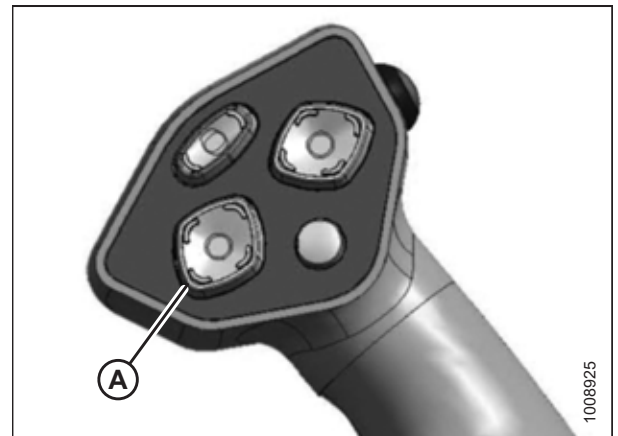


Figure 5.87: Ground Speed Lever

6. Remove pin (A) from the frame linkage and raise center-link (B) until the hook is above the attachment pin on the header. Replace pin (A) to hold the center-link in place.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

7. Ensure that the lift linkages are properly engaged in the header legs and are contacting the support plates.

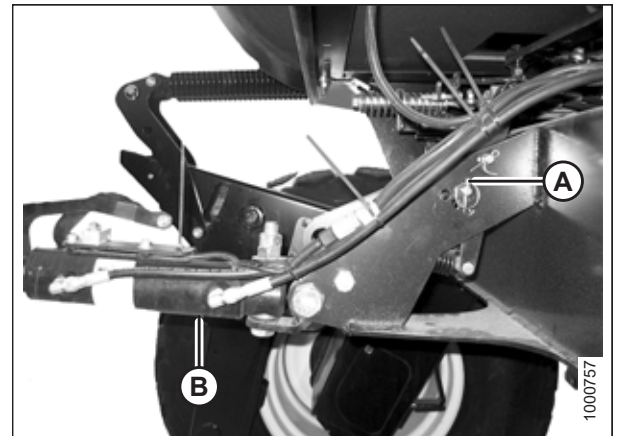


Figure 5.88: Hydraulic Center-Link without Self-Alignment Kit

ATTACHING AND DETACHING HEADERS

8. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - HEADER TILT UP (A) to retract the center-link
 - HEADER TILT DOWN (B) to extend the center-link
9. Shut down the engine, and remove the key from the ignition.

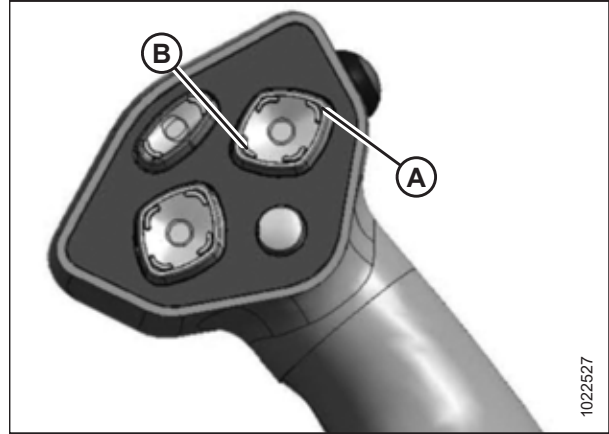


Figure 5.89: Ground Speed Lever

10. Push down on the rod end of link cylinder (A) until hook (B) engages and locks onto the header pin.

IMPORTANT:

The hook release must be down to enable the self-locking mechanism. If the release is open (up), manually push it down after the hook engages the header pin.

11. Check that center-link (A) is locked onto the header by pulling upward on the rod end of the cylinder.

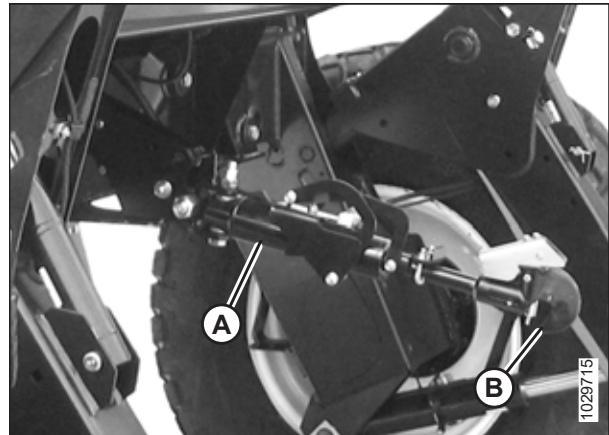


Figure 5.90: Hydraulic Center-Link

DANGER

Ensure that all bystanders have cleared the area.

12. Start the engine.
13. Press HEADER UP switch (A) to raise the header to its maximum height.
14. If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the hydraulic system.



Figure 5.91: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

15. Engage the safety props on both lift cylinders:
 - a. Shut down the engine, and remove the key from the ignition.
 - b. Pull lever (A) and rotate it towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat the previous steps for the opposite lift cylinder.

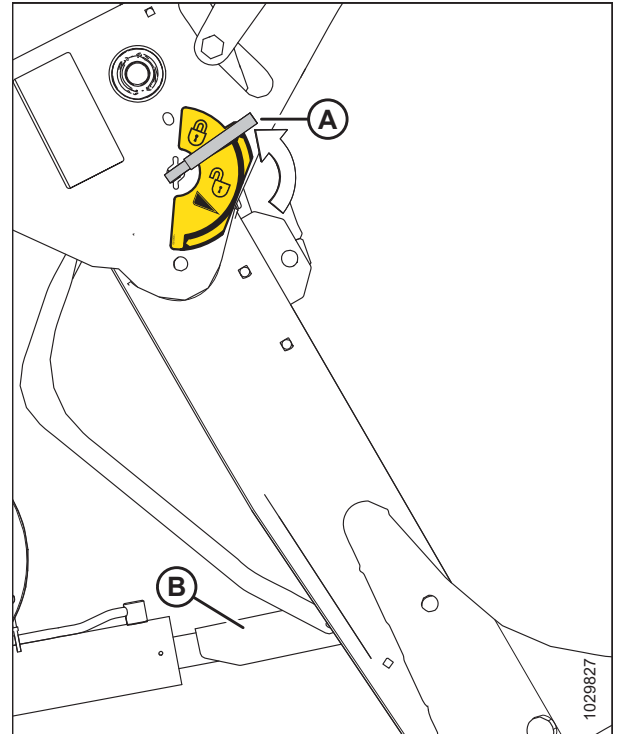


Figure 5.92: Safety Prop

16. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Secure it with the hairpin. Repeat this step on the opposite float linkage.

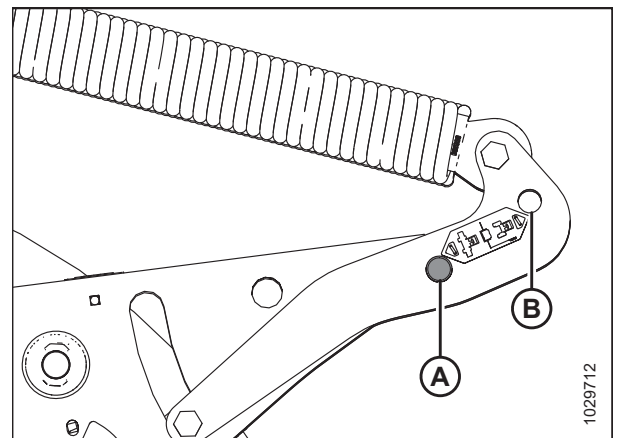


Figure 5.93: Header Float Linkage

ATTACHING AND DETACHING HEADERS

17. Disengage the safety prop by turning lever (A) downwards until the lever locks into the vertical position.
18. Repeat the previous step to disengage the other safety prop.

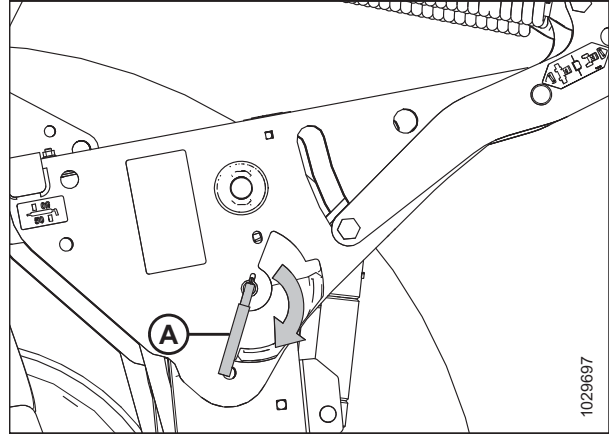


Figure 5.94: Safety Prop Lever

19. Press HEADER DOWN switch (A) on the GSL to fully lower the header.
20. Shut down the engine, and remove the key from the ignition.

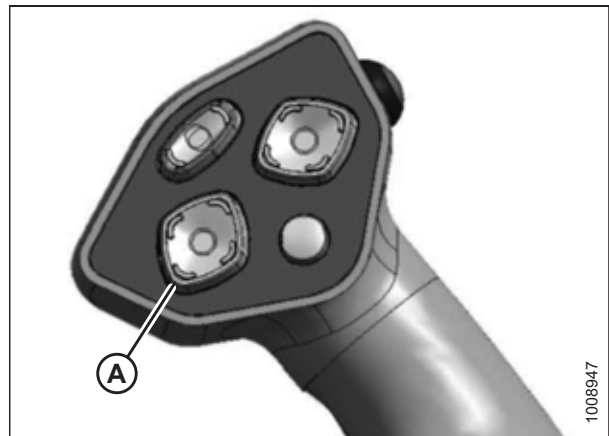


Figure 5.95: Ground Speed Lever

21. Connect header drive hoses (A) and electrical harness (B) to the header. For instructions, refer to the header operator's manual.

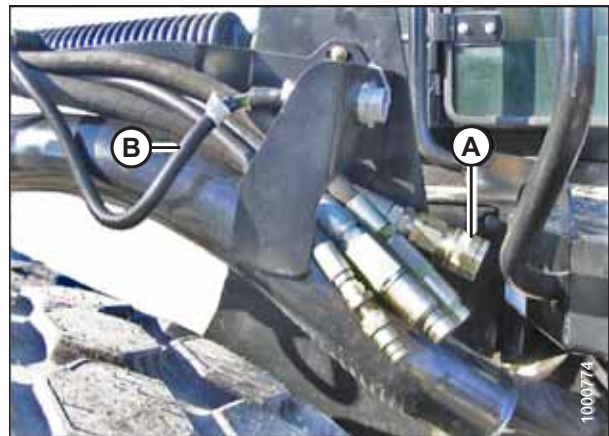


Figure 5.96: Header Drive Hoses and Harness

22. Connect reel hydraulics (A) to the corresponding connections at the right cab-forward side of the windrower. For instructions, refer to the header operator's manual.

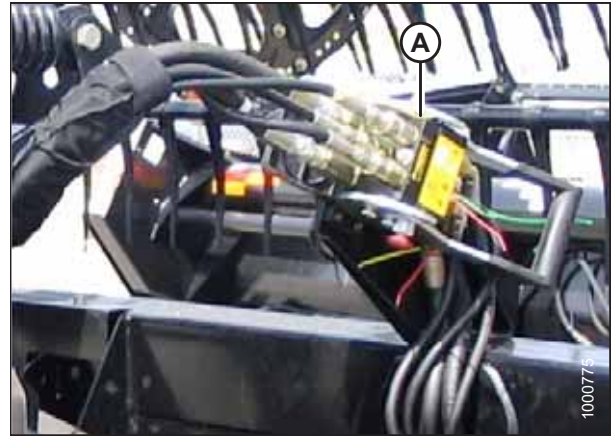


Figure 5.97: Reel Hydraulics

5.3.4 Attaching D or D1 SP Series Draper Header – Mechanical Center-Link

The header will need to be physically attached to the windrower, and the hydraulic and electrical connections completed. To attach a D or D1 SP Series header to an M Series windrower equipped with a mechanical center-link, the center-link will need to be manually connected to the header's center pin.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. If the windrower was previously attached to an R Series Rotary Disc Header, make sure to remove the forming shield (not shown), including forming shield support brackets (A) and hardware (B) from both legs. You can store the brackets and hardware in the windrower tool box.
 - For more information about the forming shield, refer to the header operator's manual.

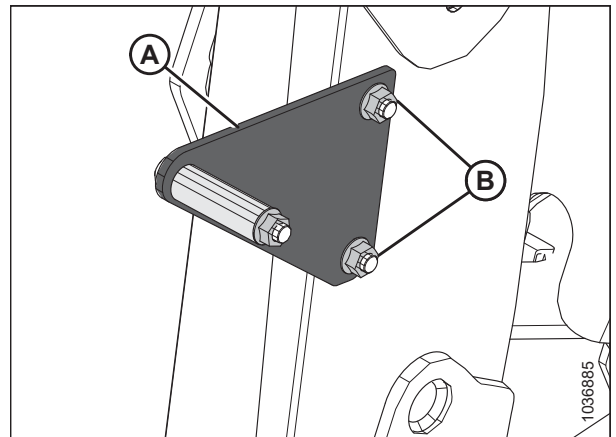


Figure 5.98: Forming Shield bracket – R Series

ATTACHING AND DETACHING HEADERS

3. Before beginning this procedure, ensure that both draper header supports (A) are installed onto the windrower's lift linkage, and that the supports are compatible with the header. For instructions on installing the header supports onto the windrower, refer to [5.3.1 Attaching Draper Header Supports](#), page 260.

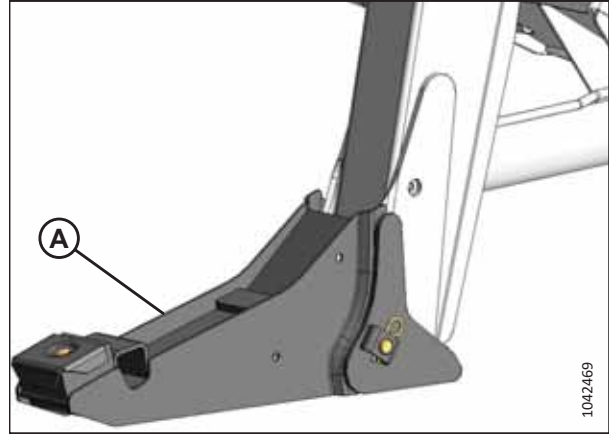


Figure 5.99: Header Supports Installed

4. Remove hairpin (A) from pin (B), and remove the pin from the header leg. Repeat this step on the other side of the header.

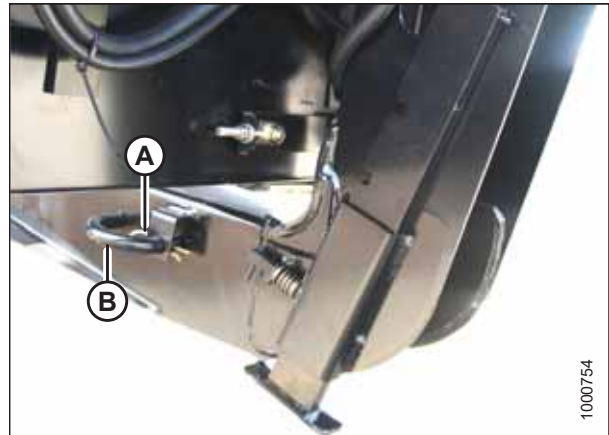


Figure 5.100: Header Leg

5. Ensure that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

IMPORTANT:

Removing the float will release the tension in the float springs. This will prevent damage to the header lift linkages when lowering the legs without a header or weight box attached to the windrower.

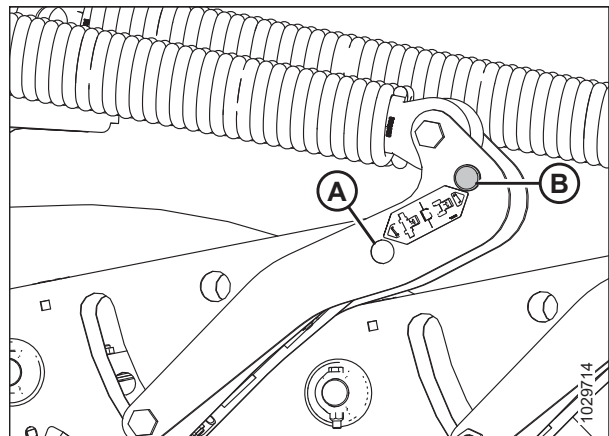


Figure 5.101: Header Float Linkage

ATTACHING AND DETACHING HEADERS

6. Activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

If the protective cover is installed on the exhaust stack, remove it before starting the engine.

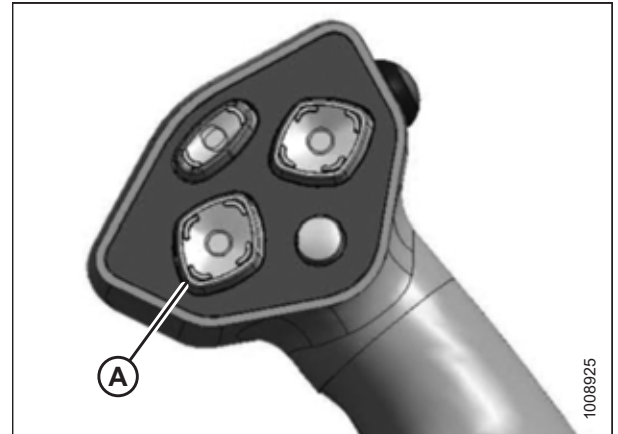


Figure 5.102: Ground Speed Lever

7. Drive the windrower slowly forward until boots (A) enter header legs (B). Continue driving slowly forward until the lift linkages contact the support plates in the header legs and the header is nudged forward.
8. Ensure that the lift linkages are properly engaged in the header legs and are contacting the support plates.

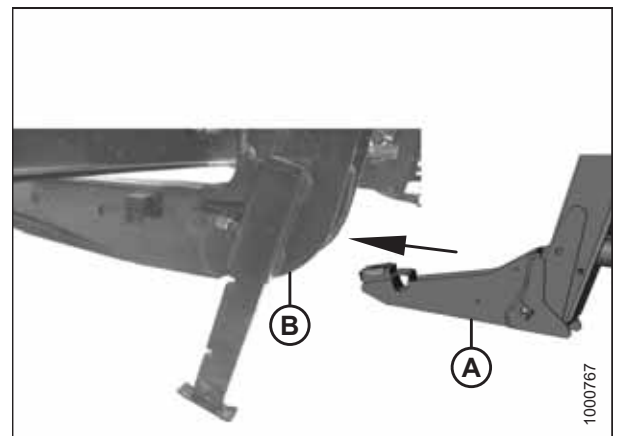


Figure 5.103: Header Leg and Boot

9. Shut down the engine, and remove the key from the ignition.
10. Loosen nut (A) and rotate barrel (B) to adjust length until the link is aligned with the header bracket.
11. Install clevis pin (C) and secure it with cotter pin (D).
12. Adjust the length of the link to achieve the proper header angle by rotating barrel (B). Tighten nut (A) against the barrel (a slight tap with a hammer is sufficient).

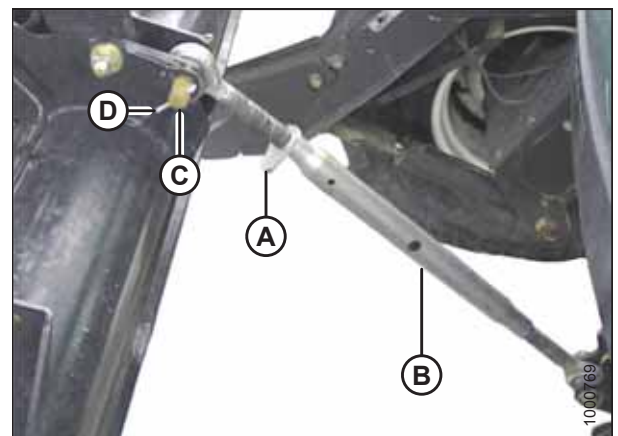


Figure 5.104: Mechanical Center-Link

ATTACHING AND DETACHING HEADERS

DANGER

Ensure that all bystanders have cleared the area.

13. Start the engine.
14. Press HEADER UP switch (A) to raise the header to its maximum height.
15. If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the hydraulic system.

16. Engage the safety props on both lift cylinders:
 - a. Shut down the engine, and remove the key from the ignition.
 - b. Pull lever (A) and rotate it towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat the previous steps for the opposite lift cylinder.



Figure 5.105: Ground Speed Lever

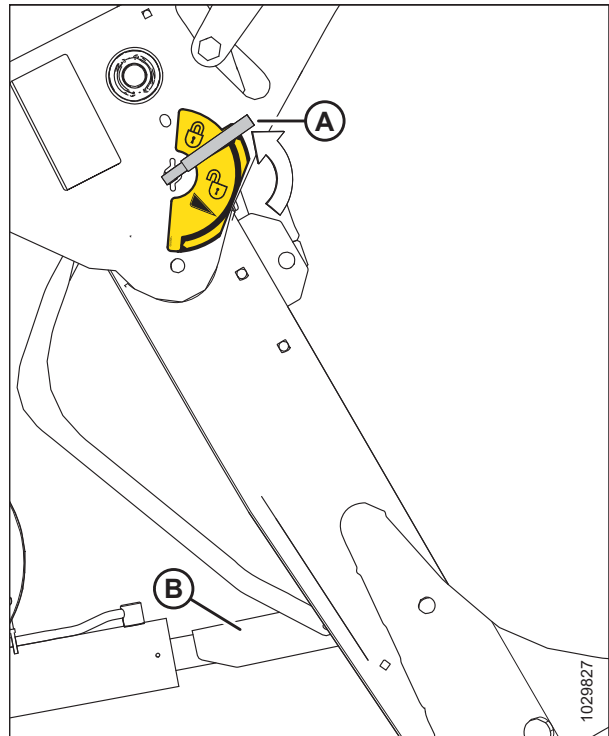


Figure 5.106: Safety Prop

ATTACHING AND DETACHING HEADERS

17. Install pin (B) through the header leg, engaging the U-bracket in the lift linkage. Secure the pin with hairpin (A).

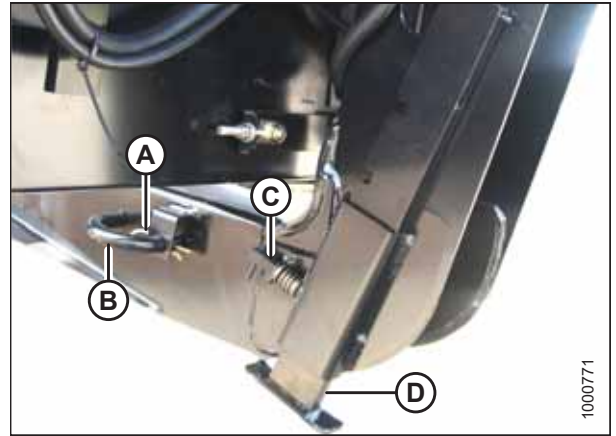


Figure 5.107: Header Leg

18. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Repeat this step on the opposite float linkage.

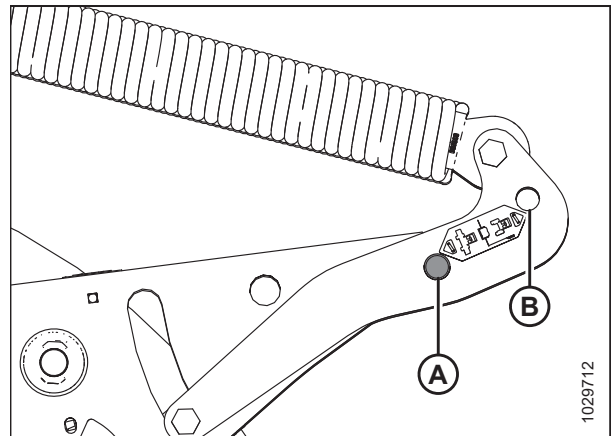


Figure 5.108: Header Float Linkage

19. Disengage the safety prop by turning lever (A) downwards until the lever locks into the vertical position.
20. Repeat the previous step to disengage the other safety prop.

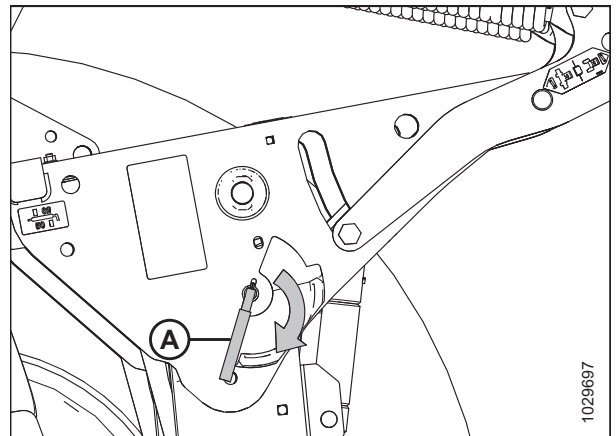


Figure 5.109: Safety Prop Lever

ATTACHING AND DETACHING HEADERS

21. Press HEADER DOWN switch (A) on the GSL to fully lower the header.
22. Shut down the engine, and remove the key from the ignition.

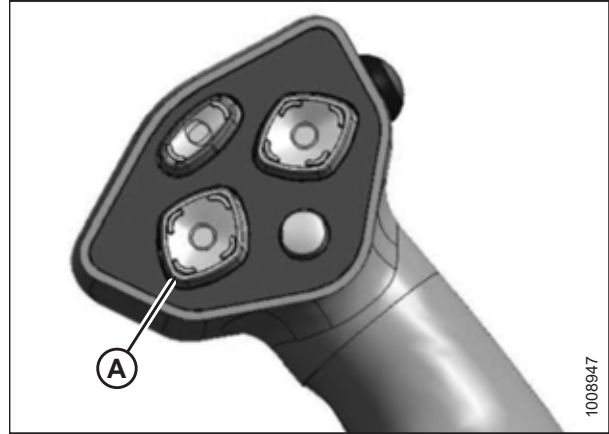


Figure 5.110: Ground Speed Lever

23. Connect header drive hoses (A) and electrical harness (B) to the header. For instructions, refer to the header operator's manual.

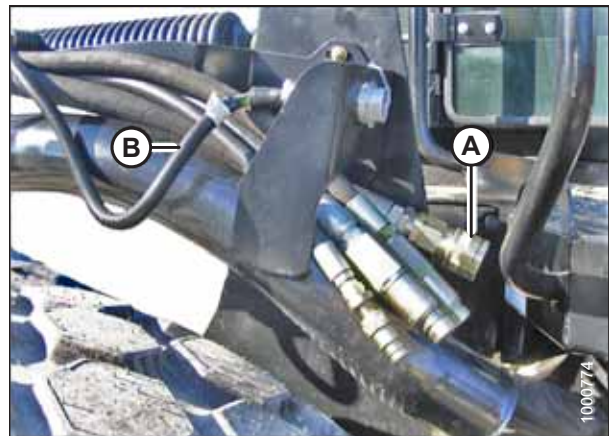


Figure 5.111: Header Drive Hoses and Harness

24. Connect reel hydraulics (A) to the corresponding connections at the right cab-forward side of the windrower. For instructions, refer to the header operator's manual.

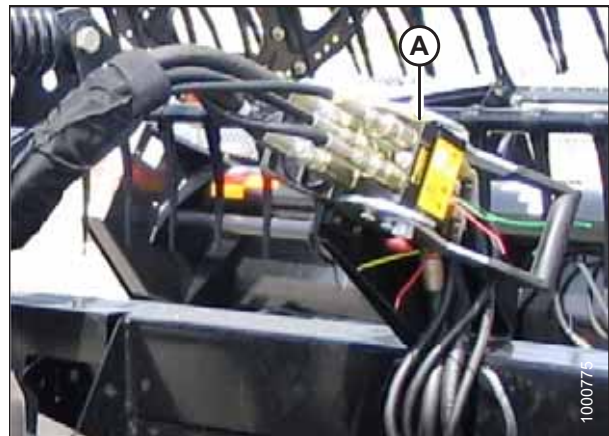


Figure 5.112: Reel Hydraulics

5.4 Detaching D or D1 SP Series Draper Header

Detaching a header from the windrower involves removing the header's mechanical connection to the windrower and disconnecting the hydraulic and electrical connections.

The procedure for detaching a D or D1 SP Series Draper Header from the windrower differs slightly depending on the configuration of the windrower. Proceed to the relevant topic:

- [5.4.1 Detaching D or D1 SP Series Draper Header – Hydraulic Center-Link, page 279](#)
- [5.4.2 Detaching D or D1 SP Series Draper Header – Mechanical Center-Link, page 284](#)

5.4.1 Detaching D or D1 SP Series Draper Header – Hydraulic Center-Link

Detaching a header from the windrower requires lowering the header stand, removing the leg pins, disengaging the float springs, and disconnecting the electrical and hydraulic connectors.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Press HEADER UP switch (A) to raise the header to its maximum height.
3. Rephase the cylinders if one end of the header does not rise fully:
 - a. Press and hold HEADER UP switch (A) until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.
4. Shut down the engine, and remove the key from the ignition.



Figure 5.113: Ground Speed Lever (GSL)

ATTACHING AND DETACHING HEADERS

5. To engage the safety props on the lift cylinders:
 - a. Pull lever (A) and rotate it toward the header to lower safety prop (B) onto the cylinder.
 - b. Repeat the previous step for the opposite lift cylinder.

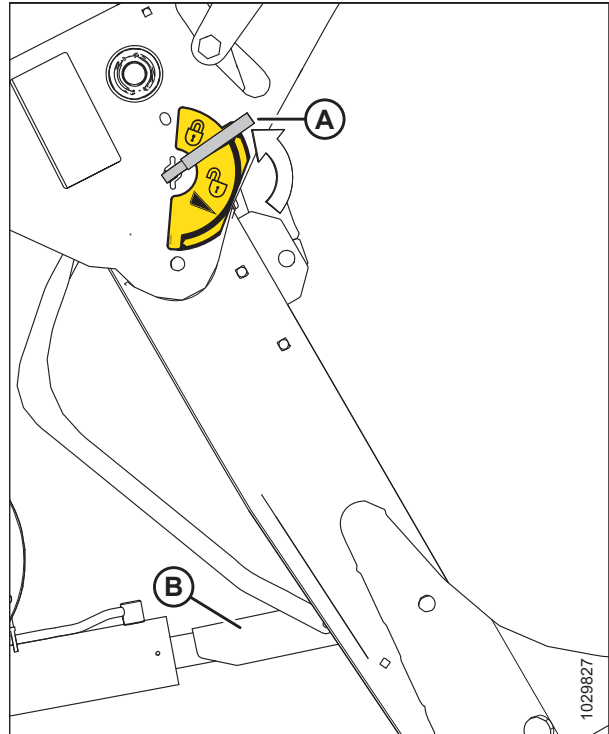


Figure 5.114: Safety Prop

6. Remove pin (B) by removing hairpin (A) from the header leg. Repeat this step on the opposite side.
7. Lower header stand (D) by pulling spring loaded pin (C). Release the spring pin to lock the stand.

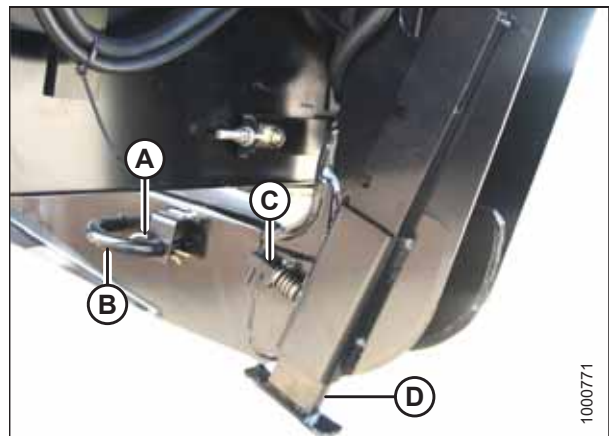


Figure 5.115: Header Stand

ATTACHING AND DETACHING HEADERS

8. **Windrowers with self-aligning center-link:** Release center-link latch (A).

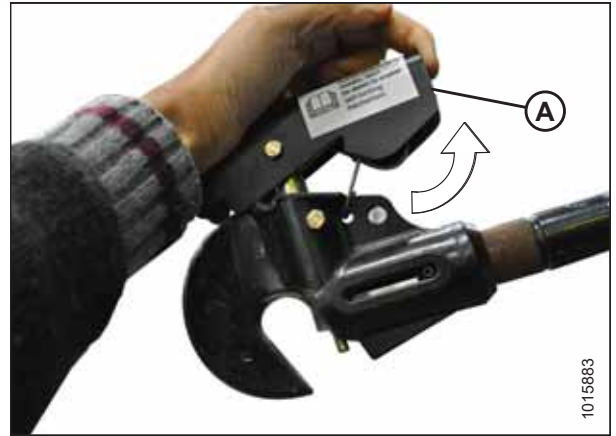


Figure 5.116: Center-Link

9. Remove the clevis pin from location (A) to disengage the float springs.
10. Insert the clevis pin in storage hole (B).
11. Secure the clevis with a lynch pin.

IMPORTANT:

To prevent damage to the lift system when lowering the header lift linkages without a header or a weight box attached to the windrower, ensure that the float engagement pin is installed in storage position (B) and **NOT** in engagement position (A).

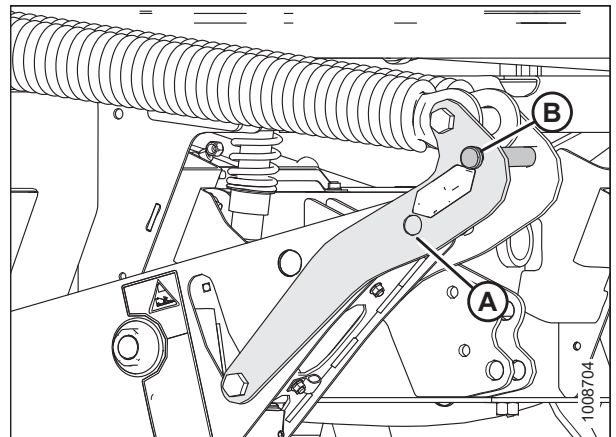


Figure 5.117: Header Float Linkage

12. To disengage the safety props on the lift cylinders:
 - a. Turn lever (A) away from the header to raise the safety prop until the lever locks into the vertical position.
 - b. Repeat the previous step for the opposite cylinder.

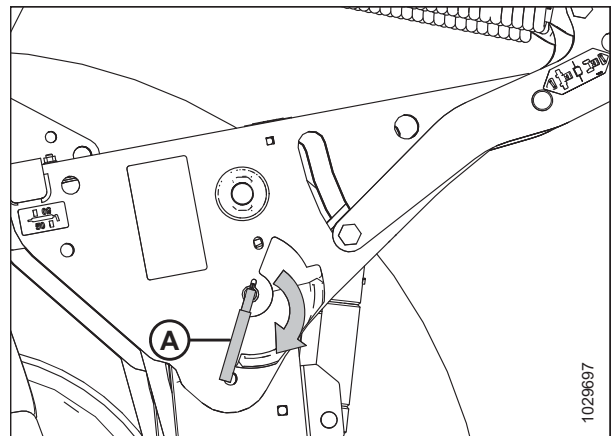


Figure 5.118: Safety Prop

ATTACHING AND DETACHING HEADERS

13. Start the engine.
14. Lower the header fully using HEADER DOWN switch (A).
15. Activate HEADER TILT UP switch (B) or HEADER TILT DOWN switch (C) on the ground speed lever (GSL) to relieve the load on the center-link cylinder.

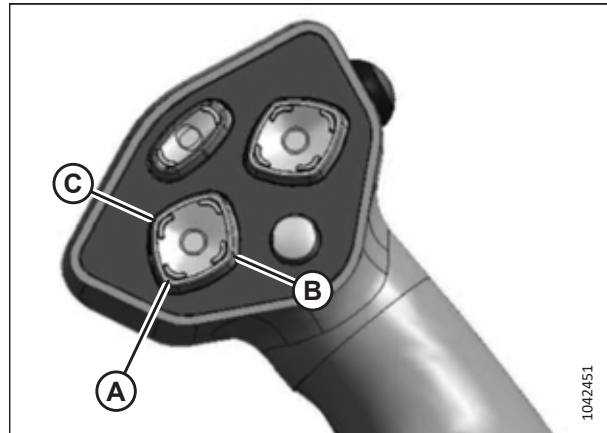


Figure 5.119: Ground Speed Lever

16. **Windrowers with self-aligning center-link:**
 - a. Press REEL UP switch (A) to disengage the center-link from the header.
 - b. Shut down the engine, and remove the key from the ignition.

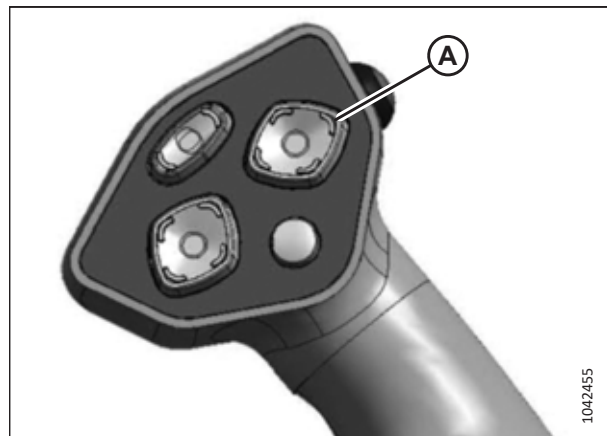


Figure 5.120: GSL

17. **Windrowers without self-aligning center-link:**
 - a. Shut down the engine, and remove the key from the ignition.
 - b. Disconnect the center-link by lifting release (B) and lift hook (A) off the header.

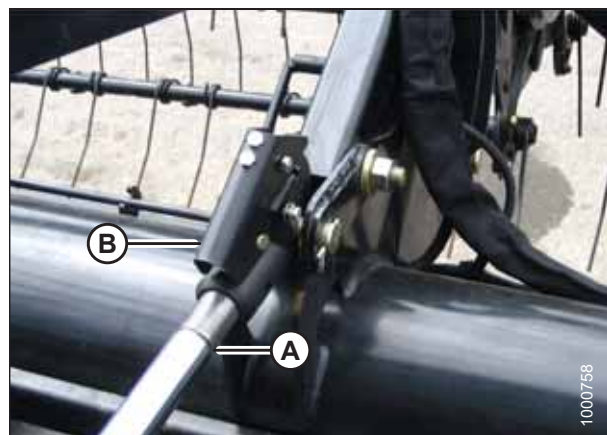


Figure 5.121: Hydraulic Center-Link

ATTACHING AND DETACHING HEADERS

18. Disconnect header drive hydraulics (A) and electrical harness (B) from the header and store them in the support on the windrower's left cab-forward side. Refer to the draper header operator's manual for further information.

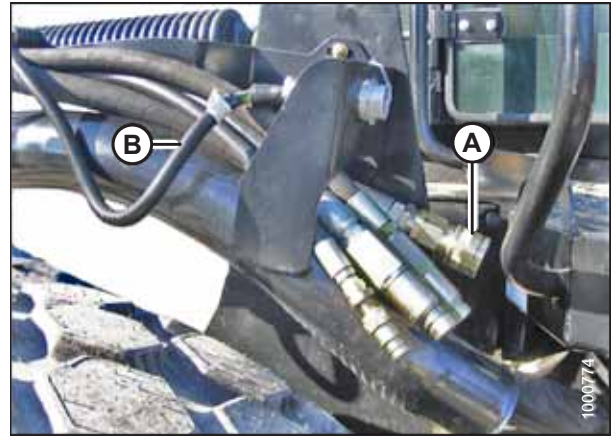


Figure 5.122: Header Drive Hydraulics

19. Disconnect reel hydraulics (A) from the header and store the connector on the bracket on the windrower's left cab-forward side. Refer to the draper header operator's manual for further information.
20. If a hay conditioner is installed, ensure that it clears the windrower legs when the windrower is reversed.
21. Back the windrower away from the header.
22. Shut down the engine, and remove the key from the ignition.

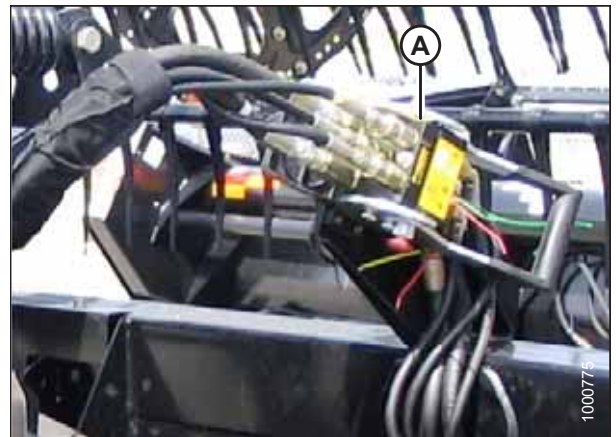


Figure 5.123: Reel Hydraulics

23. Reinstall pin (A) into the header leg. Secure the pin with hairpin (B). Repeat this step on the opposite side.

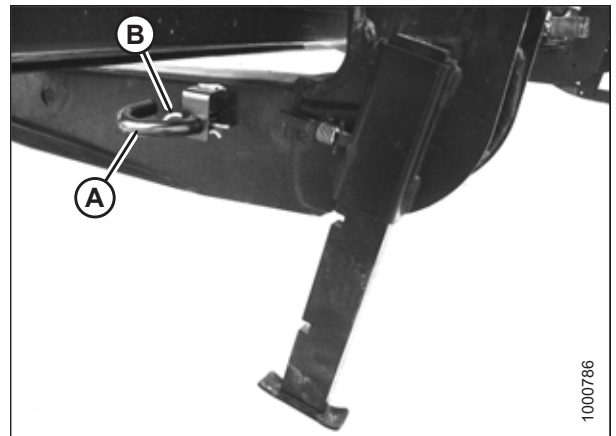


Figure 5.124: Header Stand

5.4.2 Detaching D or D1 SP Series Draper Header – Mechanical Center-Link

Detaching a header equipped with a mechanical center-link from the windrower requires lowering the header stand, removing the leg pins, disengaging the float springs, and disconnecting the electrical and hydraulic connectors.

⚠ DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator’s seat, and always engage the safety props before going under the machine for any reason.

⚠ DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Press HEADER UP (A) switch to raise the header to its maximum height.
3. If one end of the header does **NOT** raise completely, rephase the cylinders as follows:
 - a. Press and hold the HEADER UP (A) switch on the ground speed lever (GSL) until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.
4. Shut down the engine, and remove the key from the ignition.
5. To engage the safety props on the lift cylinders:
 - a. Pull lever (A) and rotate it toward the header to lower safety prop (B) onto the cylinder.
 - b. Repeat the previous step for the opposite lift cylinder.



Figure 5.125: Ground Speed Lever

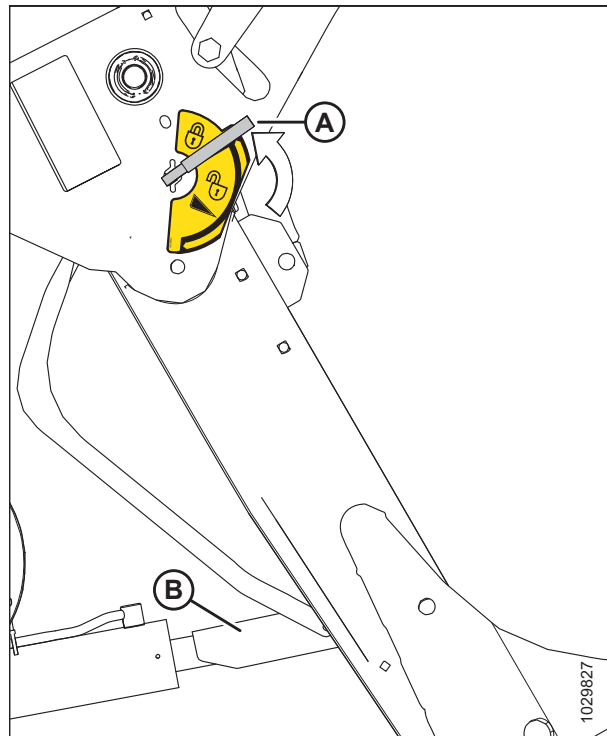


Figure 5.126: Safety Prop

ATTACHING AND DETACHING HEADERS

6. Remove clevis pin (B) by removing hairpin (A) from the header leg on both sides.
7. Lower header stand (D) by pulling spring loaded pin (C). Release the pin to lock the stand.

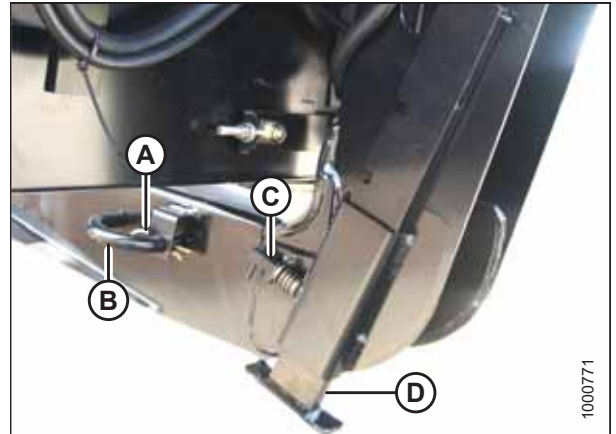


Figure 5.127: Header Stand

8. Remove the clevis pin from location (A) to disengage the float springs, and insert the clevis pin in storage hole (B). Secure the clevis pin with the lynch pin.

IMPORTANT:

To prevent damage to the lift system when lowering the header lift linkages without a header or weight box attached to the windrower, ensure that the float engagement pin is installed in storage position (B) and **NOT** in engagement position (A).

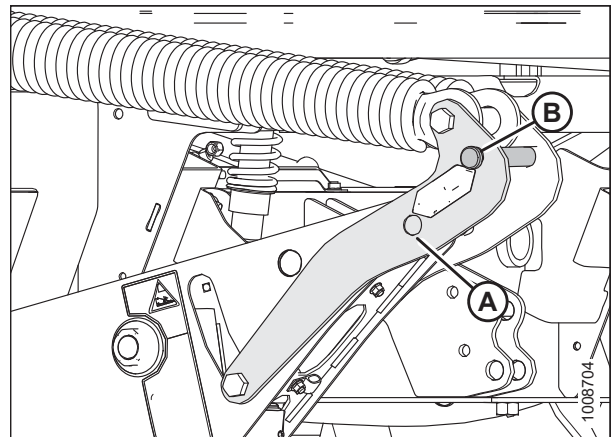


Figure 5.128: Header Float Linkage

9. To disengage the safety props on the lift cylinders:
 - a. Turn lever (A) away from the header to raise the safety prop until the lever locks into the vertical position.
 - b. Repeat the previous step for the opposite cylinder.

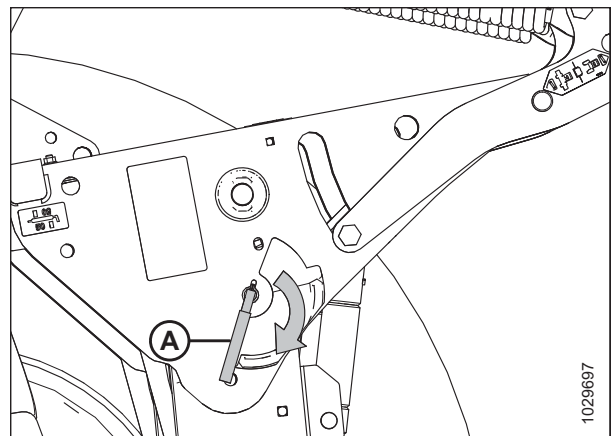


Figure 5.129: Safety Prop

ATTACHING AND DETACHING HEADERS

10. Start the engine.
11. Lower the header fully using HEADER DOWN switch (A).
12. Shut down the engine, and remove the key from the ignition.

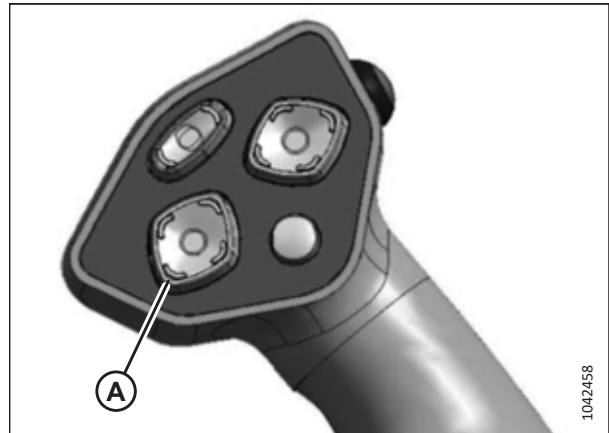


Figure 5.130: Ground Speed Lever

13. Loosen nut (A) and rotate barrel (B) to relieve the load on the link.
14. Remove cotter pin (D) and clevis pin (C).
15. Disconnect the mechanical center-link.
16. Reinstall clevis pin (C) in the center-link and secure the clevis pin with the cotter pin.
17. Tighten nut (A) against the barrel. A slight tap with a hammer should be sufficient.

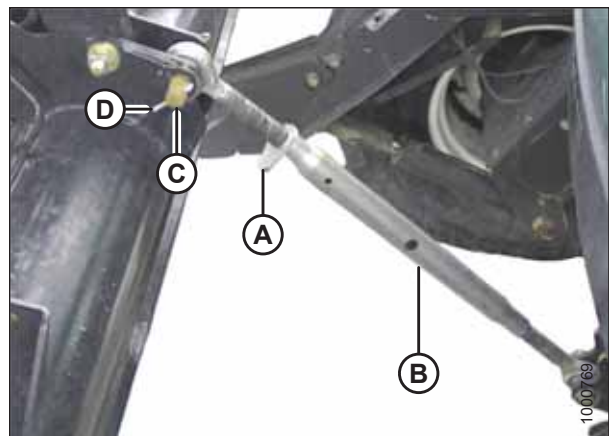


Figure 5.131: Mechanical Center-Link

18. Disconnect header drive hydraulics (A) and electrical harness (B). Store the hydraulics and the harness in the support on the windrower's left cab-forward side.

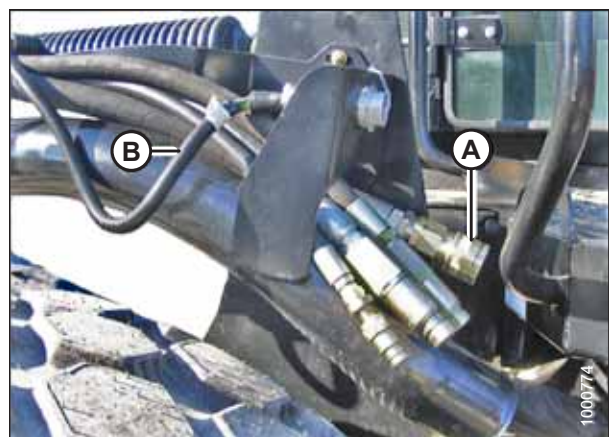


Figure 5.132: Header Drive Hydraulics

ATTACHING AND DETACHING HEADERS

19. Disconnect reel hydraulics (A). Store the hydraulics on the bracket on the windrower's left cab-forward side.

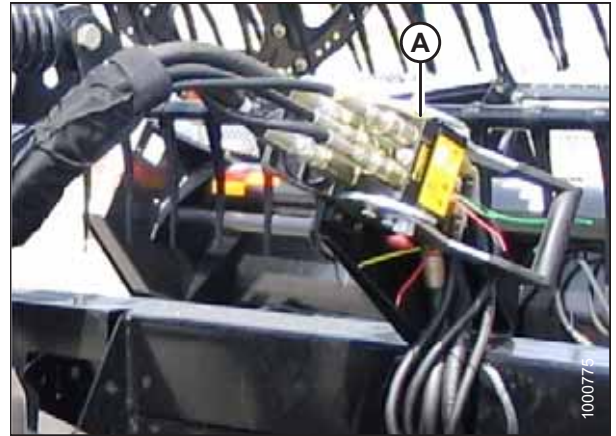


Figure 5.133: Reel Hydraulics

20. If a hay conditioner is installed, ensure that it clears the windrower legs when the windrower is reversed.
21. Back the windrower away from the header.
22. Shut down the engine, and remove the key from the ignition.
23. Reinstall pin (A) into the header leg. Secure the pin with hairpin (B). Repeat this step on the opposite side.

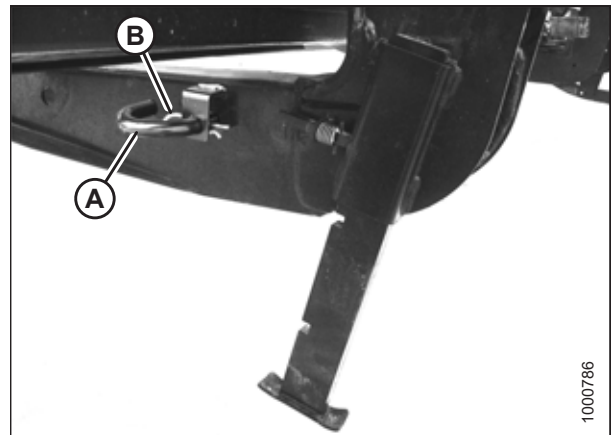


Figure 5.134: Header Stand

5.5 Attaching D2 SP Series Draper Header

This section details the procedures necessary to physically attach a D2 SP Series Draper Header to an M155 Windrower and to attach its hydraulic and electrical connections.

5.5.1 Attaching Draper Header Supports

The draper header supports are required to attach the header to a windrower.

NOTE:

For headers that were previously attached to a combine, order draper header supports bundle B7266.



DANGER

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

ATTACHING AND DETACHING HEADERS

IMPORTANT:

Ensure that the correct header supports are used:

- D2 Series Draper Headers must use RHS pin supports (A) and LHS pin supports (D).
- A feature that distinguishes these supports from all other types is that rubber block (B) is attached to the supports using pin (C).
- To order the draper header supports, refer to the header parts catalog.

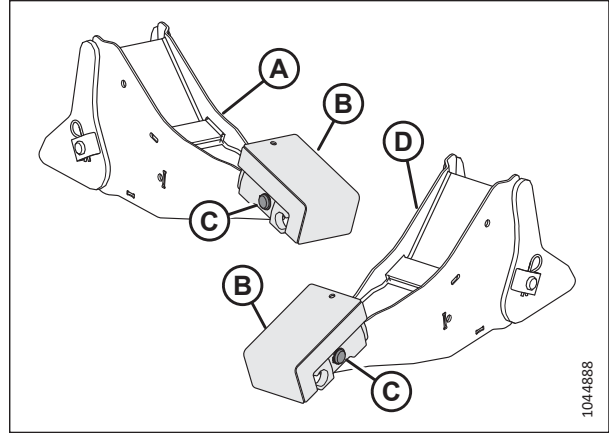


Figure 5.135: Draper Header Supports – RHS Pin (A) and LHS Pin (D) Supports Shown

1. Shut down the engine, and remove the key from the ignition.
2. Remove hairpin (A) from clevis pin (B) on draper header support (C). Remove clevis pin (B).

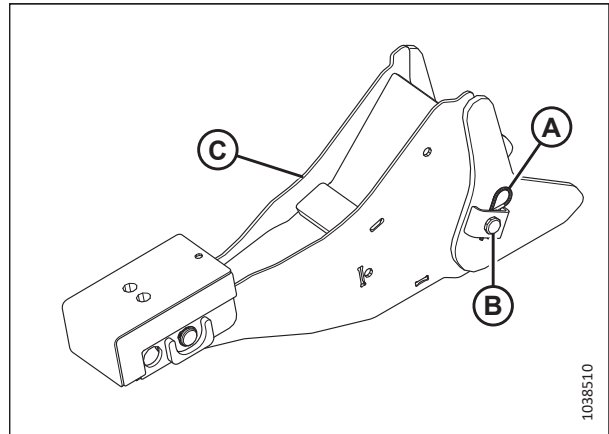


Figure 5.136: Draper Header Support – LHS Pin Support Shown

3. Position draper header support (B) on windrower lift linkage (A). Reinstall clevis pin (C).

NOTE:

To ensure that the pin does **NOT** snag the windrow, install the clevis pin on the outboard side of the draper header support.

NOTE:

The header supports can remain on the windrower lift linkages after installation.

4. Secure clevis pin (C) with hairpin (D).
5. Repeat Step 2, page 288 to Step 4, page 288 to install the other draper header support.

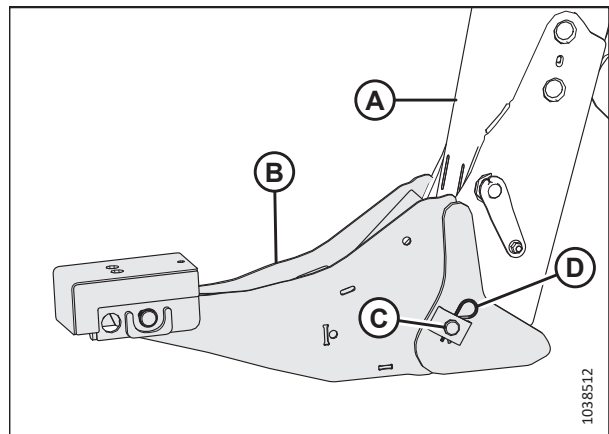


Figure 5.137: Draper Header Support – LHS Pin Support Shown

5.5.2 Attaching D2 SP Series Draper Header – Hydraulic Center-Link with Self-Alignment

The header will need to be physically attached to the windrower, and the hydraulic connections completed.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

DANGER

Ensure that all bystanders have cleared the area.

1. Shut down the engine, and remove the key from the ignition.
2. If the windrower was previously attached to an R Series Rotary Disc Header, make sure to remove the forming shield (not shown), including forming shield support brackets (A) and hardware (B) from both legs. You can store the brackets and hardware in the windrower tool box.
 - For more information about the forming shield, refer to the header operator's manual.

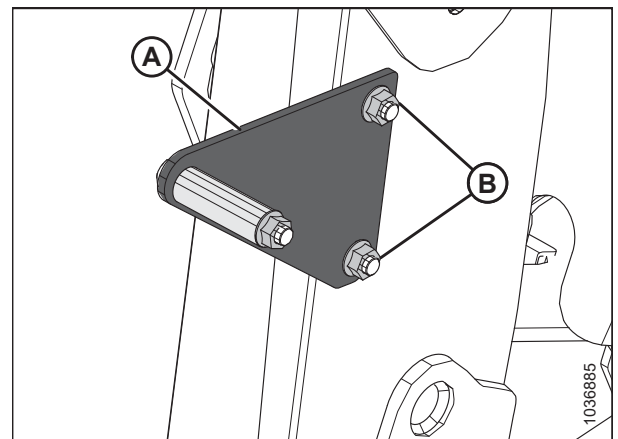


Figure 5.138: Forming Shield bracket – R Series

ATTACHING AND DETACHING HEADERS

3. Before beginning this procedure, ensure that draper header supports (A) are either:

- (B) Installed on the windrower lift linkages, or
- (C) Installed in the header legs

For instructions on installing the header supports onto the windrower, refer to [5.5.1 Attaching Draper Header Supports](#), page 287. Header supports are typically left installed in the header legs when the header is detached from the windrower.

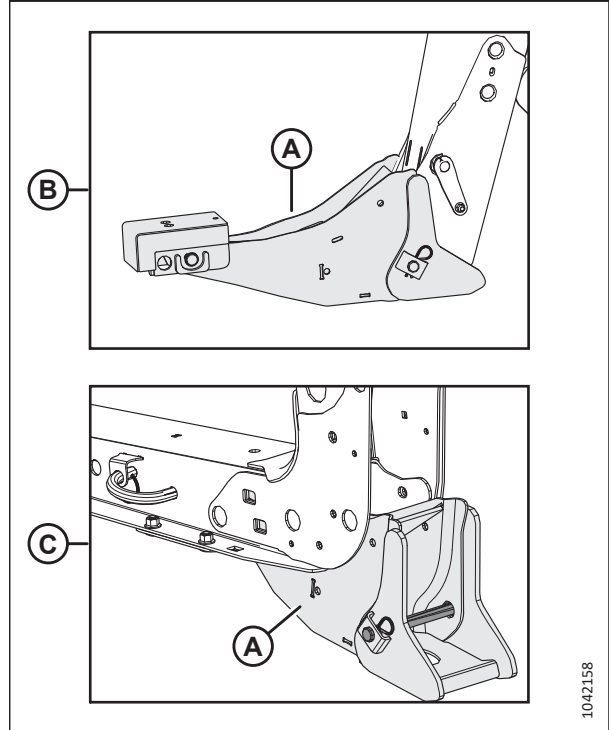


Figure 5.139: Header Supports Installed

4. Prepare the header as follows:

- **If the header supports are installed on the windrower:**
Remove ring (A) and pin (B) from the header leg.
- **If the header supports are installed in the header:**
Remove hairpin (C) and clevis pin (D) from the header support.

Repeat this step on the other header leg.

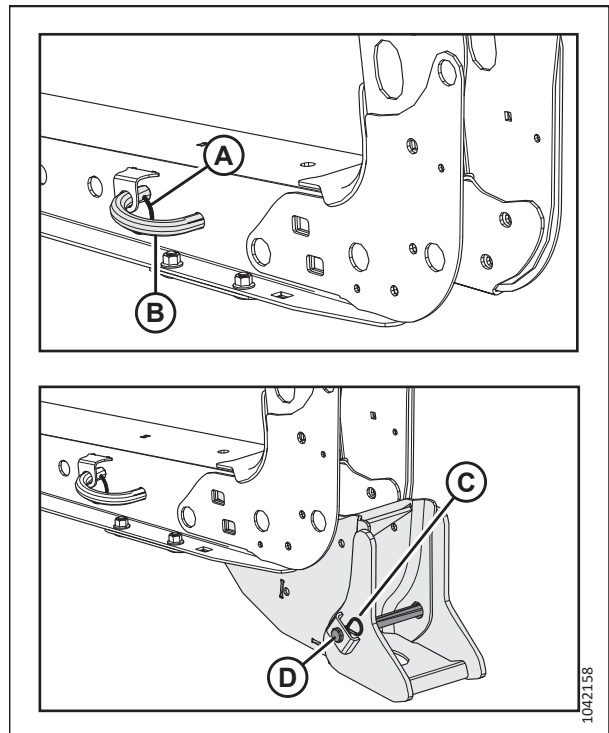


Figure 5.140: Header Leg – Left Side Shown

ATTACHING AND DETACHING HEADERS

5. Ensure that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

IMPORTANT:

Removing the float will release the tension in the float springs. This will prevent damage to the header lift linkages when lowering the legs without a header or weight box attached to the windrower.

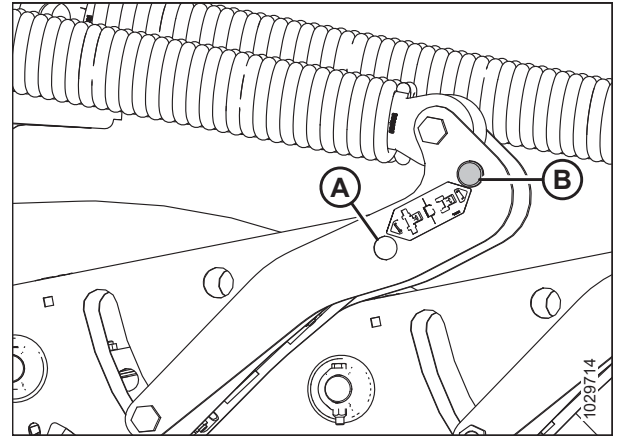


Figure 5.141: Header Float Linkage

6. Start the engine and activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

Before starting the engine for the first time the windrower is operated in a season, remove the protective cover from the exhaust stack.

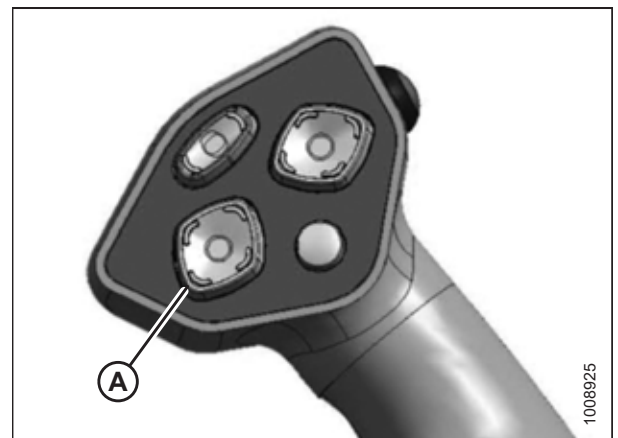


Figure 5.142: Ground Speed Lever

7. Press REEL UP switch (A) on the GSL to raise the center-link until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.



Figure 5.143: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

8. Proceed as follows:

- **If the header supports are installed on the windrower:**
Drive the windrower slowly forward until header supports (A) enter header legs (B).
- **If the header supports are installed in the header:**
Drive the windrower slowly forward until windrower lift linkages (C) enter header supports (D) in the header legs.

Continue driving slowly forward until the header is nudged forward.

9. Ensure that the lift linkages are properly engaged in the header legs and are in contact with the support plates.

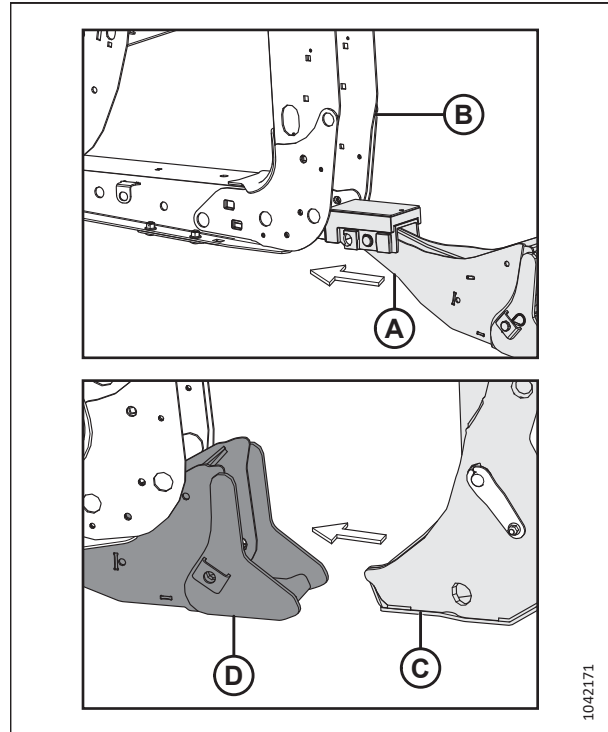


Figure 5.144: Header Leg and Support

10. Use the following GSL functions to position the center-link hook above the header attachment pin:

- REEL UP (A) to raise the center-link
- REEL DOWN (B) to lower the center-link
- HEADER TILT UP (C) to retract the center-link
- HEADER TILT DOWN (D) to extend the center-link

IMPORTANT:

The hook release must be down to enable the self-locking mechanism. If the release is open (up), manually push it down after the hook engages the header pin.

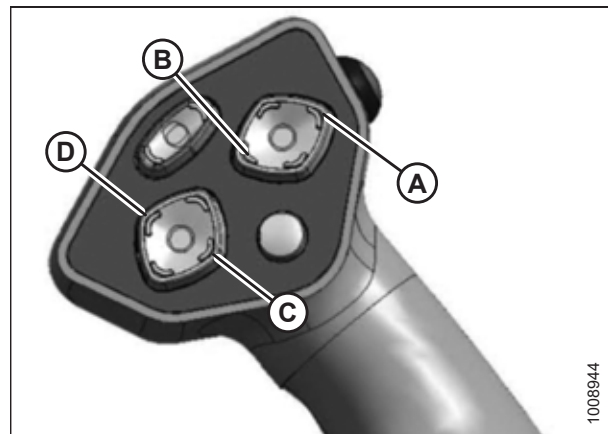


Figure 5.145: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

11. Lower center-link (A) onto the header with the REEL DOWN switch on the GSL until it locks into position (hook release [B] is down).
12. Check that center-link (A) is locked onto the header by pressing the REEL UP switch on the GSL.

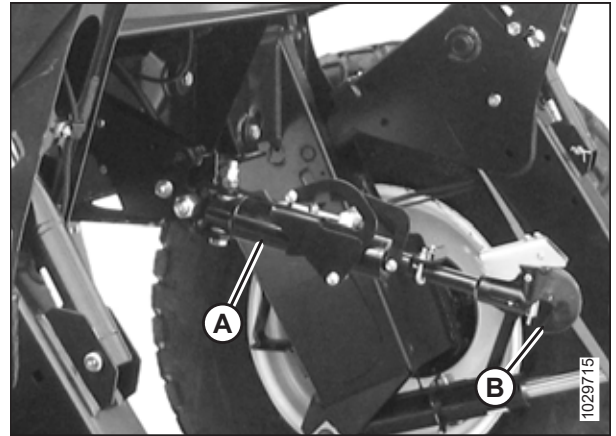


Figure 5.146: Hydraulic Center-Link

13. Press HEADER UP switch (A) to raise the header to its maximum height.
14. If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds to fully phase the cylinders.

NOTE:

It may be necessary to repeat this procedure if there is air in the hydraulic system.



Figure 5.147: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

15. Engage the safety props on both lift cylinders:
 - a. Shut down the engine, and remove the key from the ignition.
 - b. Pull lever (A) and rotate it towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat the previous steps for the opposite lift cylinder.

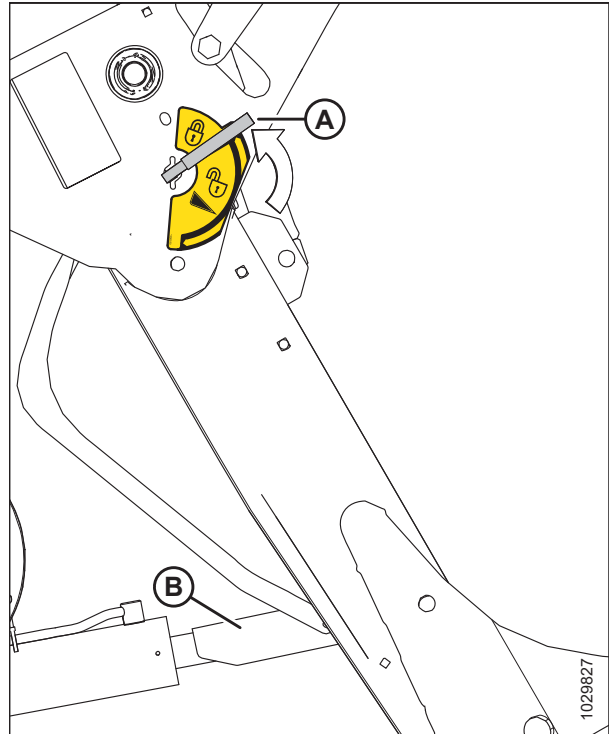


Figure 5.148: Safety Prop

16. Proceed as follows:

- **If the header supports are installed on the windrower:** Install pin (B) through the header leg, engaging the header support in the lift linkage. Secure the pin with ring (A).
- **If the header supports are installed in the header:** Secure windrower lift linkage (C) to header supports (D) using clevis pin (E) and hairpin (F).

NOTE:

To ensure that the pin does **NOT** snag the windrow, install the clevis pin on the outboard side of the draper header support.

Repeat this step on the other header leg.

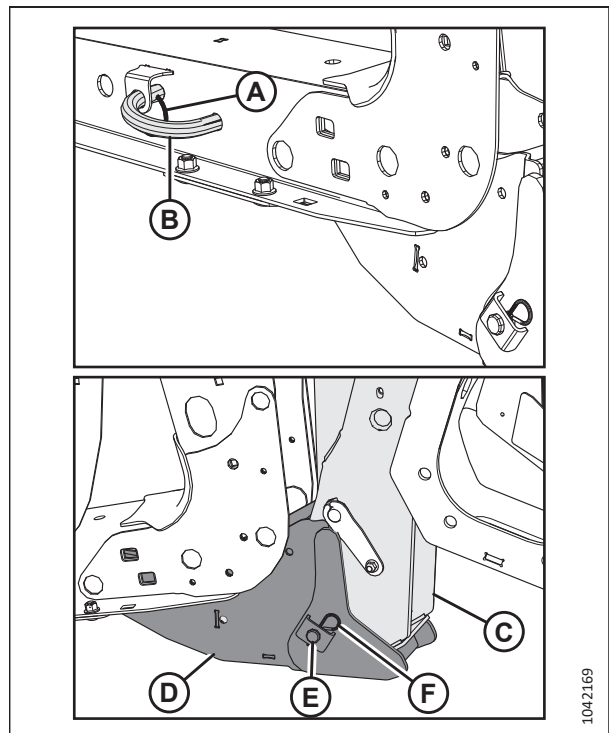


Figure 5.149: Windrower Lift Linkage and Header Leg

ATTACHING AND DETACHING HEADERS

17. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Secure it with the hairpin. Repeat this step on the opposite float linkage.

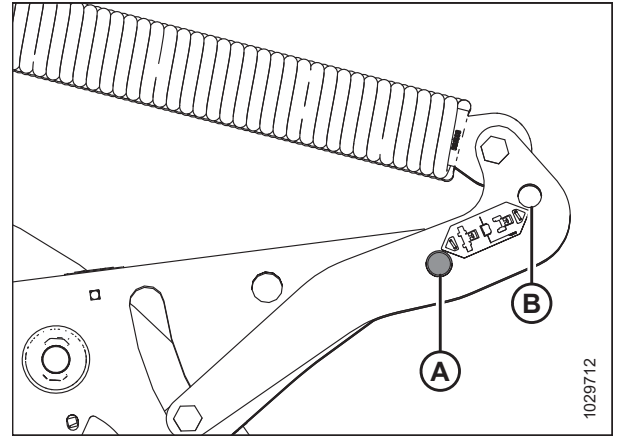


Figure 5.150: Header Float Linkage

18. Disengage the safety prop by turning lever (A) downwards until the lever locks into the vertical position.
19. Repeat the previous step to disengage the other safety prop.

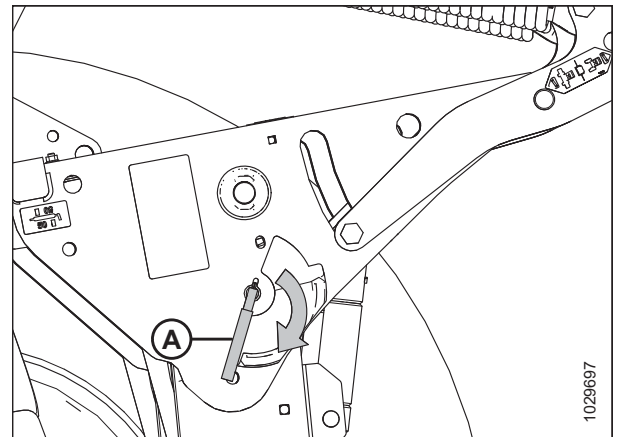


Figure 5.151: Safety Prop Lever

20. Start the engine, and press HEADER DOWN switch (A) on the GSL to fully lower the header.
21. Shut down the engine, and remove the key from the ignition.

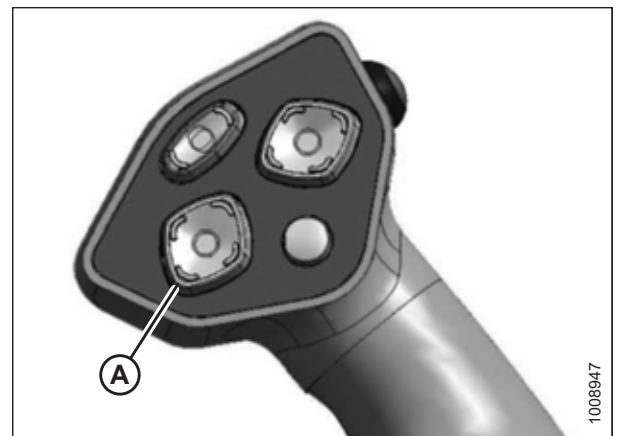


Figure 5.152: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

22. Connect header drive hoses (A) and electrical harness (B) to the header. For instructions, refer to the header operator's manual.

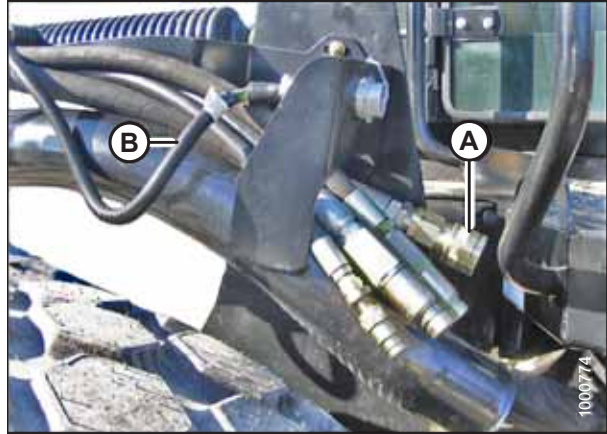


Figure 5.153: Header Drive Hoses and Harness

23. Connect reel hydraulics (A) to the corresponding connections at the right cab-forward side of the windrower. For instructions, refer to the header operator's manual.
24. Start the engine. Raise and lower the header and the reel a few times to remove any trapped air from the hydraulic system.

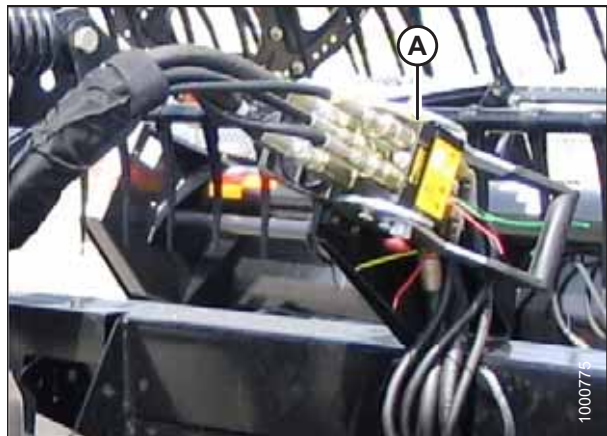


Figure 5.154: Reel Hydraulics

5.5.3 Attaching D2 SP Series Draper Header – Hydraulic Center-Link without Self-Alignment

The header will need to be physically attached to the windrower, and the hydraulic connections completed.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

DANGER

Ensure that all bystanders have cleared the area.

1. Shut down the engine, and remove the key from the ignition.

ATTACHING AND DETACHING HEADERS

2. If the windrower was previously attached to an R Series Rotary Disc Header, make sure to remove the forming shield (not shown), including forming shield support brackets (A) and hardware (B) from both legs. You can store the brackets and hardware in the windrower tool box.
 - For more information about the forming shield, refer to the header operator's manual.

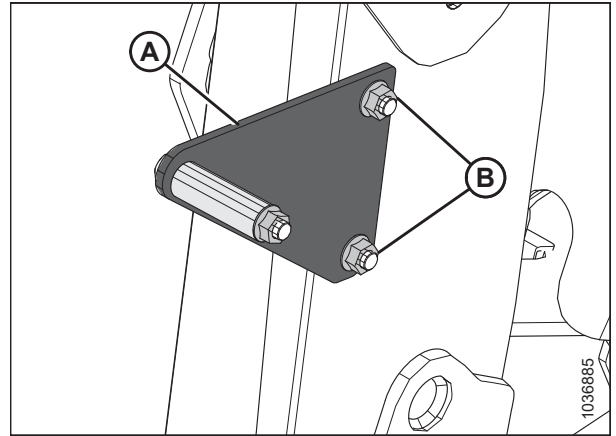


Figure 5.155: Forming Shield bracket – R Series

3. Before beginning this procedure, ensure that draper header supports (A) are either:
 - (B) Installed on the windrower lift linkages, or
 - (C) Installed in the header legs

For instructions on installing the header supports onto the windrower, refer to [5.5.1 Attaching Draper Header Supports](#), page 287. Header supports are typically left installed in the header legs when the header is detached from the windrower.

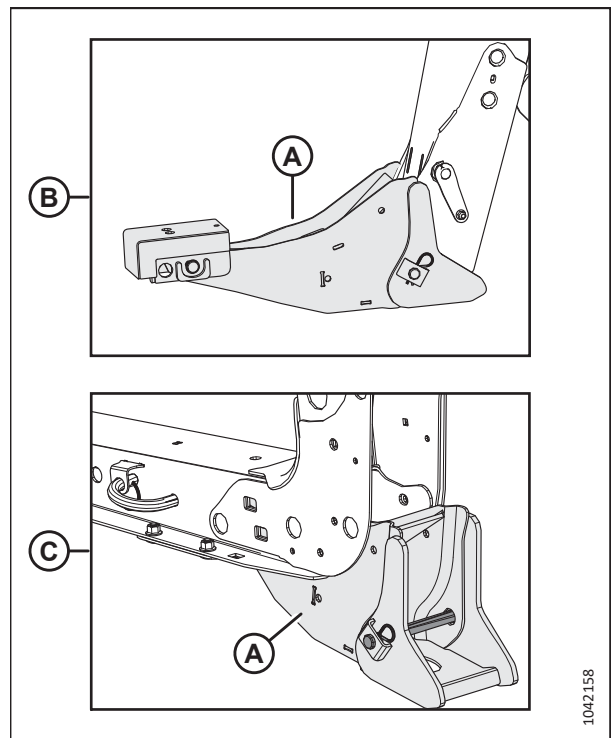


Figure 5.156: Header Supports Installed

ATTACHING AND DETACHING HEADERS

4. Prepare the header as follows:

- **If the header supports are installed on the windrower:**
Remove ring (A) and pin (B) from the header leg.
- **If the header supports are installed in the header:**
Remove hairpin (C) and clevis pin (D) from the header support.

Repeat this step on the other header leg.

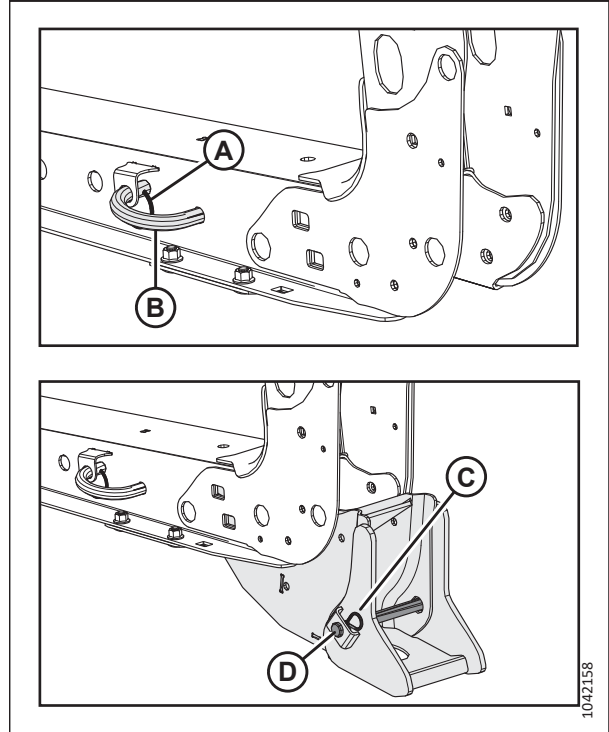


Figure 5.157: Header Leg – Left Side Shown

5. Ensure that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

IMPORTANT:

Removing the float will release the tension in the float springs. This will prevent damage to the header lift linkages when lowering the legs without a header or weight box attached to the windrower.

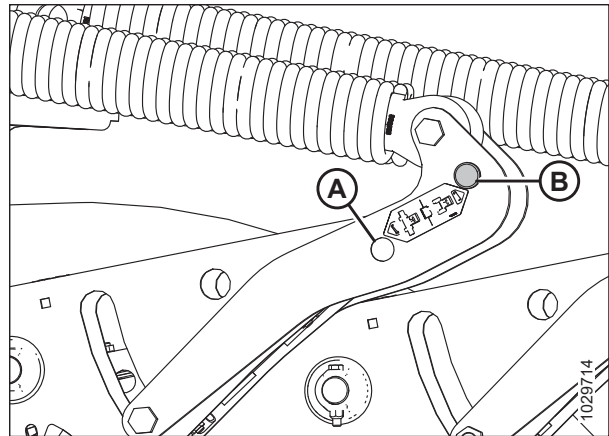


Figure 5.158: Header Float Linkage

ATTACHING AND DETACHING HEADERS

6. Start the engine and activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

Before starting the engine for the first time the windrower is operated in a season, remove the protective cover from the exhaust stack.

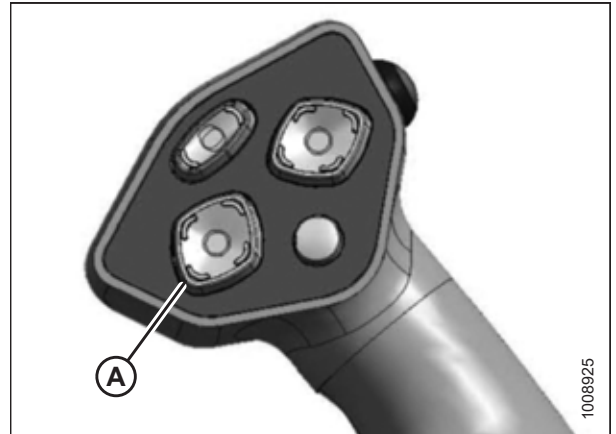


Figure 5.159: Ground Speed Lever

7. Remove pin (A) from the frame linkage and raise center-link (B) until the hook is above the attachment pin on the header. Reinstall pin (A) to hold the center-link in place.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

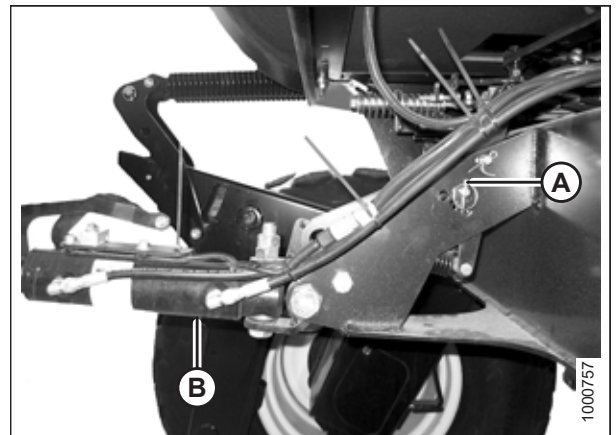


Figure 5.160: Hydraulic Center-Link without Self-Alignment Kit

ATTACHING AND DETACHING HEADERS

8. Proceed as follows:

- **If the header supports are installed on the windrower:**
Drive the windrower slowly forward until header supports (A) enter header legs (B).
- **If the header supports are installed in the header:**
Drive the windrower slowly forward until windrower lift linkages (C) enter header supports (D) in the header legs.

Continue driving slowly forward until the header is nudged forward.

9. Ensure that the lift linkages are properly engaged in the header legs and are in contact with the support plates.

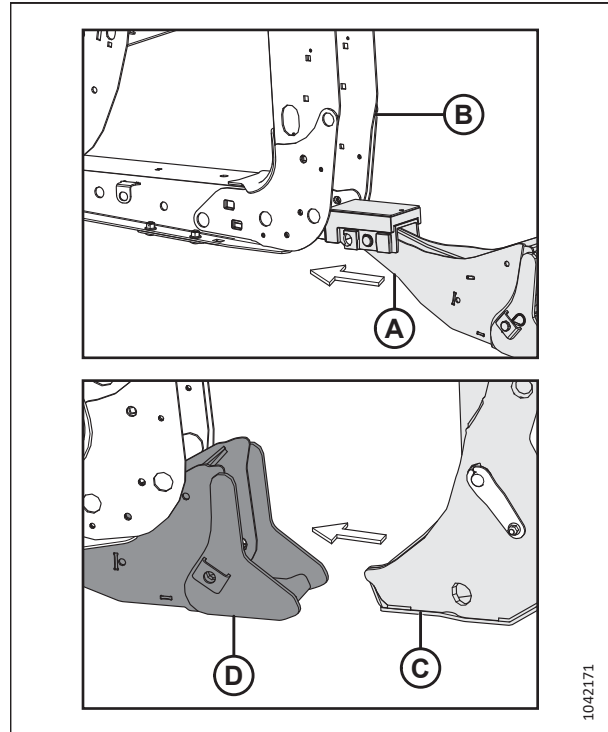


Figure 5.161: Header Leg and Support

10. Use the following GSL functions to position the center-link hook above the header attachment pin:

- HEADER TILT UP (A) to retract the center-link
- HEADER TILT DOWN (B) to extend the center-link

11. Shut down the engine, and remove the key from the ignition.

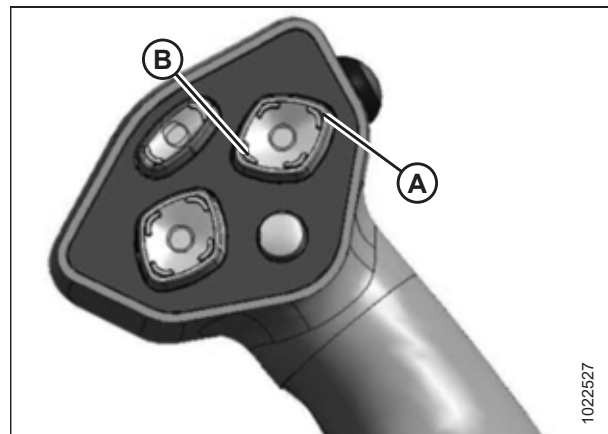


Figure 5.162: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

12. Push down on the rod end of link cylinder (A) until hook (B) engages and locks onto the header pin.

IMPORTANT:

The hook release must be down to enable the self-locking mechanism. If the release is open (up), manually push it down after the hook engages the header pin.

13. Check that center-link (A) is locked onto the header by pulling upward on the rod end of the cylinder.

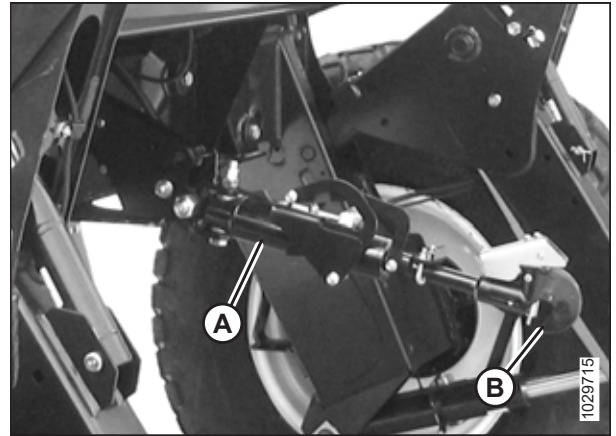


Figure 5.163: Hydraulic Center-Link

14. Start the engine.
15. Press HEADER UP switch (A) to raise the header to its maximum height.
16. If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds to fully phase the cylinders.

NOTE:

It may be necessary to repeat this procedure if there is air in the hydraulic system.



Figure 5.164: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

17. Engage the safety props on both lift cylinders:
 - a. Shut down the engine, and remove the key from the ignition.
 - b. Pull lever (A) and rotate it towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat the previous steps for the opposite lift cylinder.

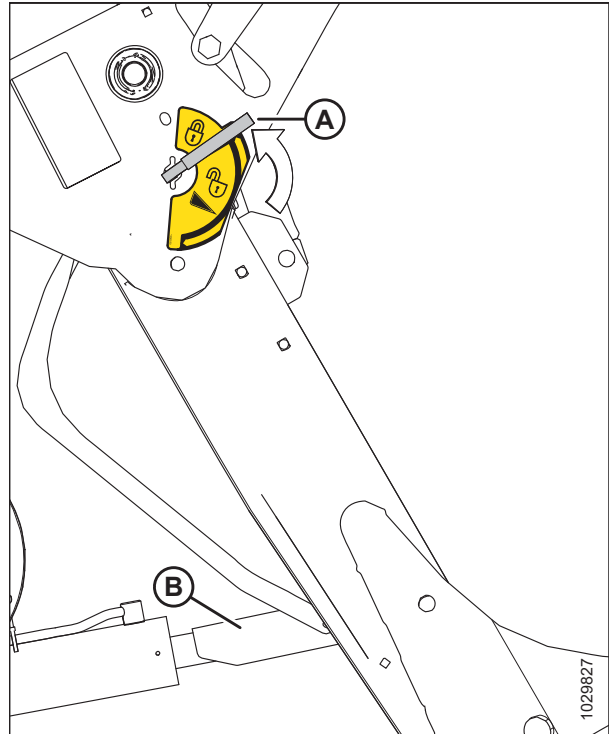


Figure 5.165: Safety Prop

18. Proceed as follows:

- **If the header supports are installed on the windrower:** Install pin (B) through the header leg, engaging the header support in the lift linkage. Secure the pin with ring (A).
- **If the header supports are installed in the header:** Secure windrower lift linkage (C) to header supports (D) using clevis pin (E) and hairpin (F).

NOTE:

To ensure that the pin does **NOT** snag the windrow, install the clevis pin on the outboard side of the draper header support.

Repeat this step on the other header leg.

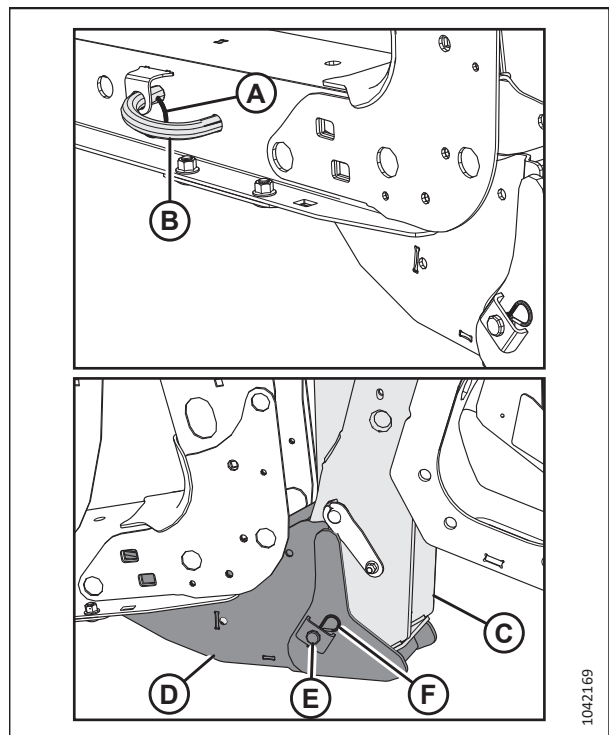


Figure 5.166: Windrower Lift Linkage and Header Leg

ATTACHING AND DETACHING HEADERS

19. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Secure it with the hairpin. Repeat this step on the opposite float linkage.

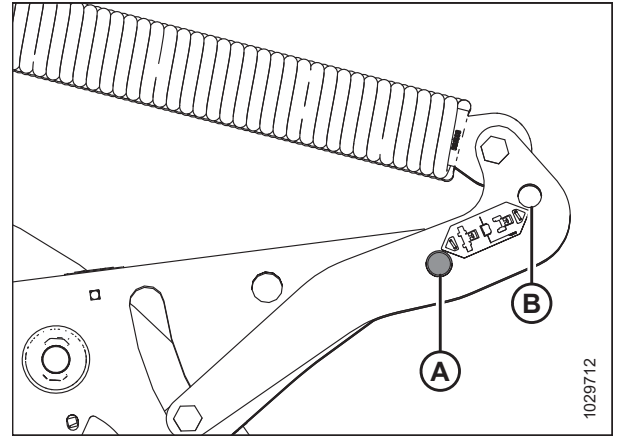


Figure 5.167: Header Float Linkage

20. Disengage the safety prop by turning lever (A) downwards until the lever locks into the vertical position.
21. Repeat the previous step to disengage the other safety prop.

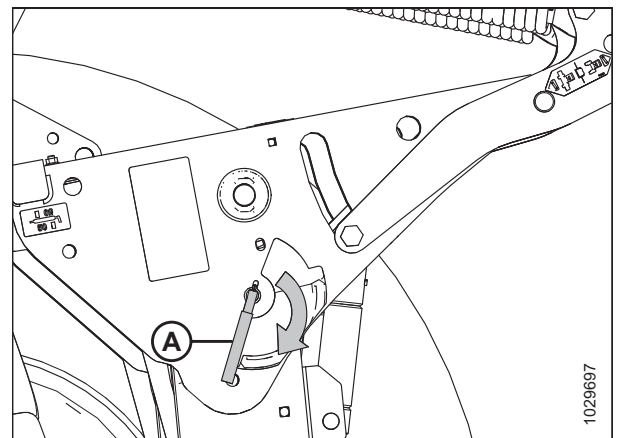


Figure 5.168: Safety Prop Lever

22. Start the engine, and press HEADER DOWN switch (A) on the GSL to fully lower the header.
23. Shut down the engine, and remove the key from the ignition.

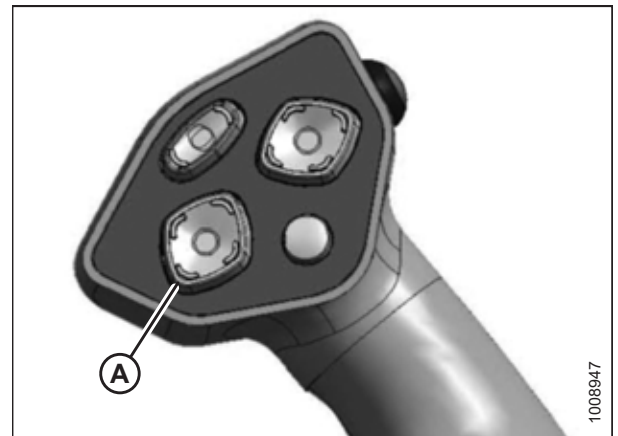


Figure 5.169: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

24. Connect header drive hoses (A) and electrical harness (B) to the header. For instructions, refer to the header operator's manual.

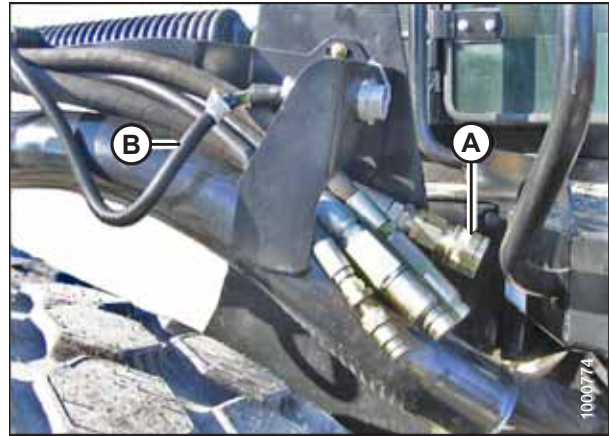


Figure 5.170: Header Drive Hoses and Harness

25. Connect reel hydraulics (A) to the corresponding connections at the right cab-forward side of the windrower. For instructions, refer to the header operator's manual.
26. Start the engine. Raise and lower the header and the reel a few times to remove any trapped air from the hydraulic system.

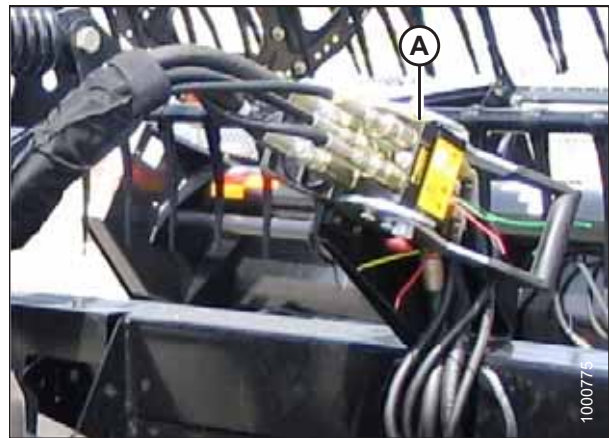


Figure 5.171: Reel Hydraulics

5.5.4 Attaching D2 SP Series Draper Header – Mechanical Center-Link

The header will need to be physically attached to the windrower, and the hydraulic and electrical connections completed.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

DANGER

Ensure that all bystanders have cleared the area.

1. Shut down the engine, and remove the key from the ignition.

ATTACHING AND DETACHING HEADERS

2. If the windrower was previously attached to an R Series Rotary Disc Header, make sure to remove the forming shield (not shown), including forming shield support brackets (A) and hardware (B) from both legs. You can store the brackets and hardware in the windrower tool box.
 - For more information about the forming shield, refer to the header operator's manual.

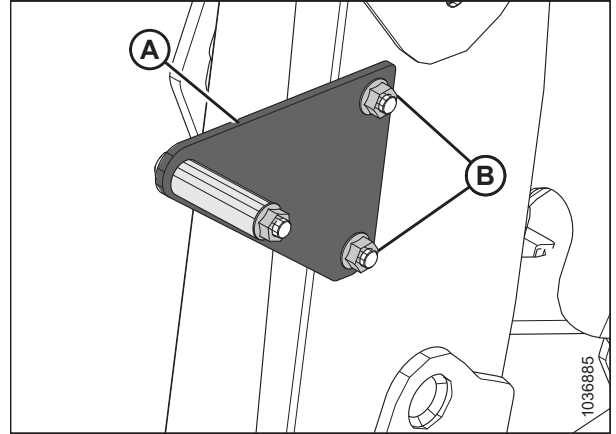


Figure 5.172: Forming Shield bracket – R Series

3. Before beginning this procedure, ensure that draper header supports (A) are either:
 - (B) Installed on the windrower lift linkages, or
 - (C) Installed in the header legs

For instructions on installing the header supports onto the windrower, refer to [5.5.1 Attaching Draper Header Supports](#), page 287. Header supports are typically left installed in the header legs when the header is detached from the windrower.

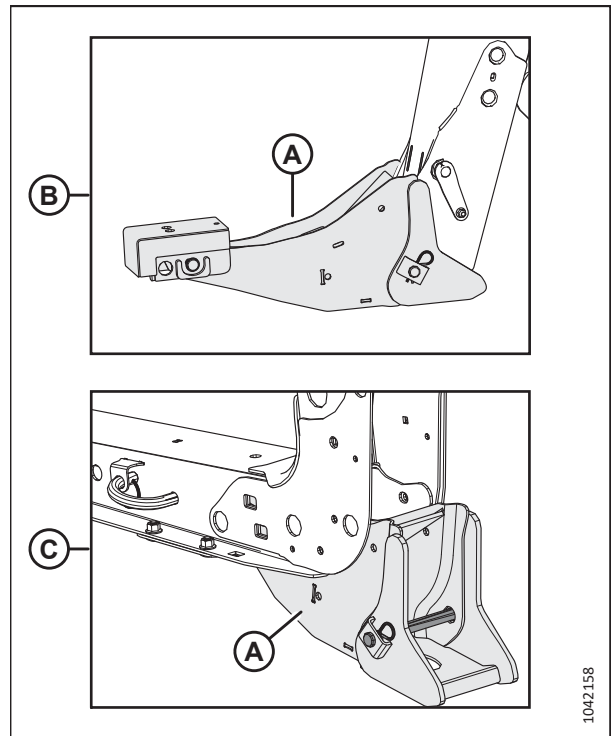


Figure 5.173: Header Supports Installed

ATTACHING AND DETACHING HEADERS

4. Prepare the header as follows:

- **If the header supports are installed on the windrower:**
Remove ring (A) and pin (B) from the header leg.
- **If the header supports are installed in the header:**
Remove hairpin (C) and clevis pin (D) from the header support.

Repeat this step on the other header leg.

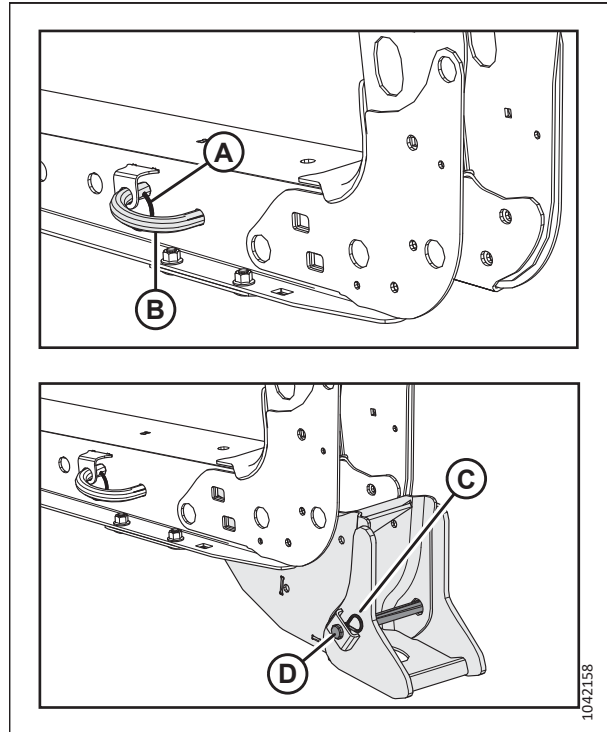


Figure 5.174: Header Leg – Left Side Shown

5. Ensure that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

IMPORTANT:

Removing the float will release the tension in the float springs. This will prevent damage to the header lift linkages when lowering the legs without a header or weight box attached to the windrower.

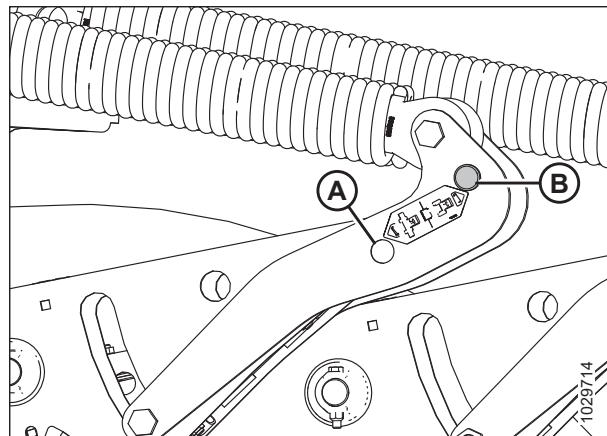


Figure 5.175: Header Float Linkage

ATTACHING AND DETACHING HEADERS

6. Start the engine and activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

Before starting the engine for the first time the windrower is operated in a season, remove the protective cover from the exhaust stack.

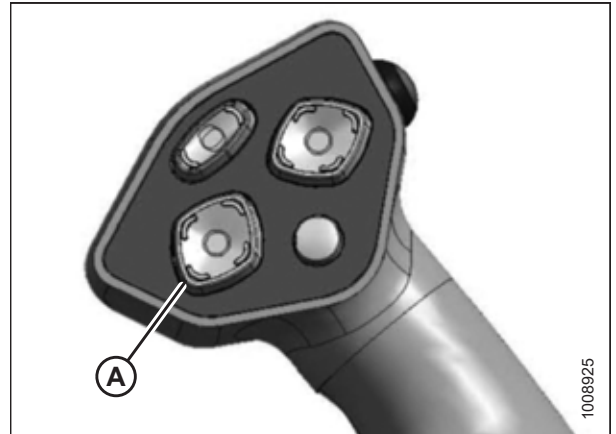


Figure 5.176: Ground Speed Lever

7. Proceed as follows:
 - **If the header supports are installed on the windrower:** Drive the windrower slowly forward until header supports (A) enter header legs (B).
 - **If the header supports are installed in the header:** Drive the windrower slowly forward until windrower lift linkages (C) enter header supports (D) in the header legs.

Continue driving slowly forward until the header is nudged forward.

8. Ensure that the lift linkages are properly engaged in the header legs and are in contact with the support plates.
9. Shut down the engine, and remove the key from the ignition.

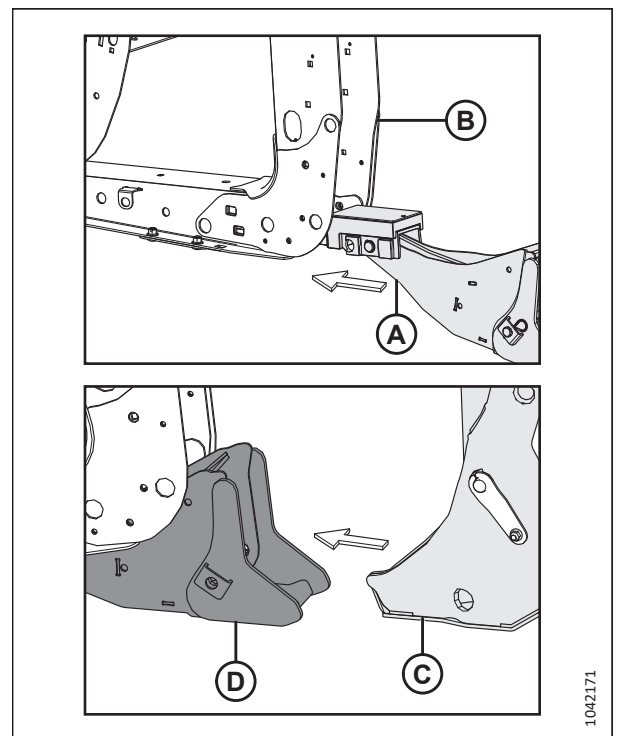


Figure 5.177: Header Leg and Support

ATTACHING AND DETACHING HEADERS

10. Loosen nut (A) and rotate barrel (B) to adjust length until the link is aligned with the header bracket.
11. Install clevis pin (C) and secure it with cotter pin (D).
12. Adjust the length of the link to achieve the proper header angle by rotating barrel (B). Tighten nut (A) against the barrel (a slight tap with a hammer is sufficient).
13. Start the engine.

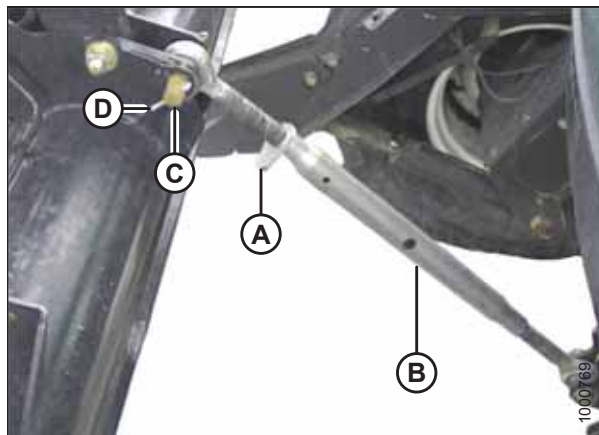


Figure 5.178: Mechanical Center-Link

14. Press HEADER UP switch (A) to raise the header to its maximum height.
15. If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds to fully phase the cylinders.

NOTE:

It may be necessary to repeat this procedure if there is air in the hydraulic system.



Figure 5.179: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

16. Engage the safety props on both lift cylinders:
 - a. Shut down the engine, and remove the key from the ignition.
 - b. Pull lever (A) and rotate it towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat the previous steps for the opposite lift cylinder.

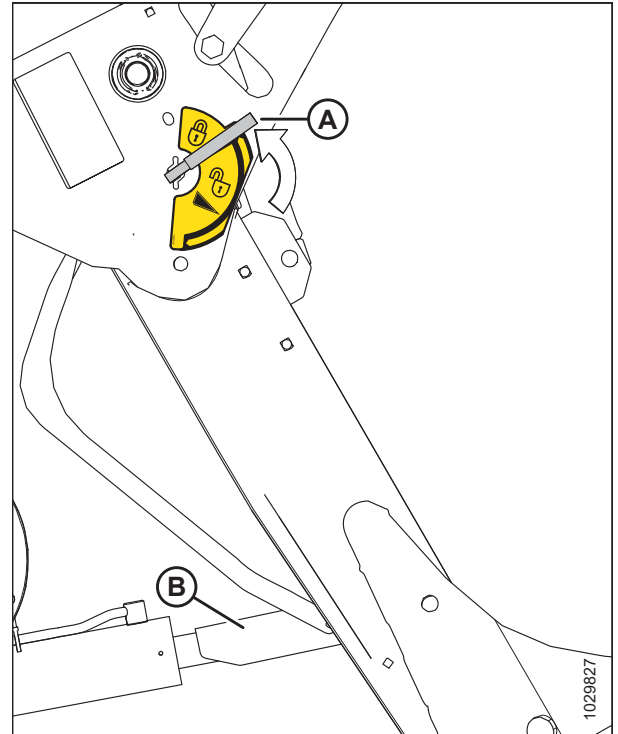


Figure 5.180: Safety Prop

17. Proceed as follows:

- **If the header supports are installed on the windrower:**
Install pin (B) through the header leg, engaging the header support in the lift linkage. Secure the pin with ring (A).
- **If the header supports are installed in the header:**
Secure windrower lift linkage (C) to header supports (D) using clevis pin (E) and hairpin (F).

NOTE:

To ensure that the pin does **NOT** snag the windrow, install the clevis pin on the outboard side of the draper header support.

Repeat this step on the other header leg.

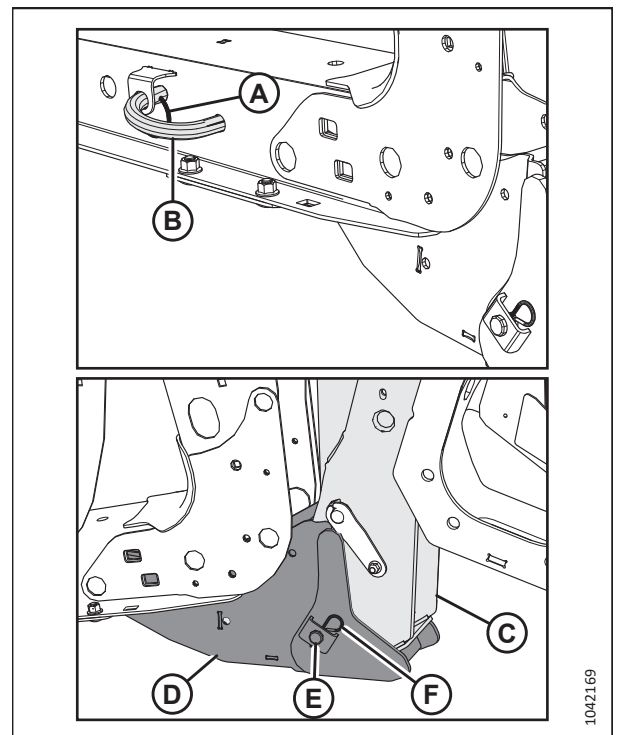


Figure 5.181: Windrower Lift Linkage and Header Leg

ATTACHING AND DETACHING HEADERS

18. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Secure it with the hairpin. Repeat this step on the opposite float linkage.

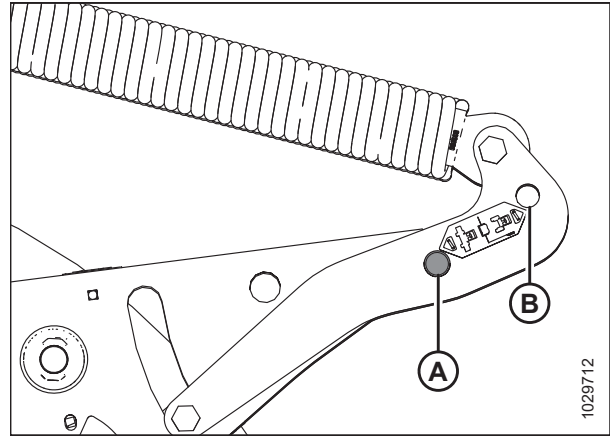


Figure 5.182: Header Float Linkage

19. Disengage the safety prop by turning lever (A) downwards until the lever locks into the vertical position.
20. Repeat the previous step to disengage the other safety prop.

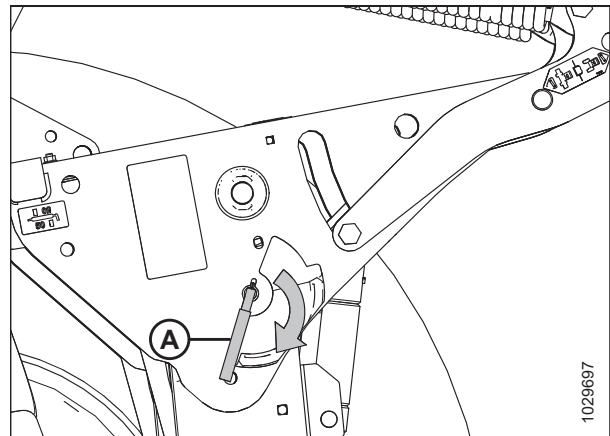


Figure 5.183: Safety Prop Lever

21. Start the engine, and press HEADER DOWN switch (A) on the GSL to fully lower the header.
22. Shut down the engine, and remove the key from the ignition.

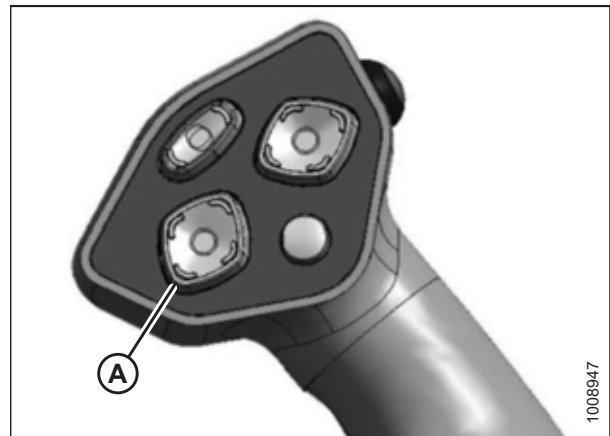


Figure 5.184: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

23. Connect header drive hoses (A) and electrical harness (B) to the header. For instructions, refer to the header operator's manual.

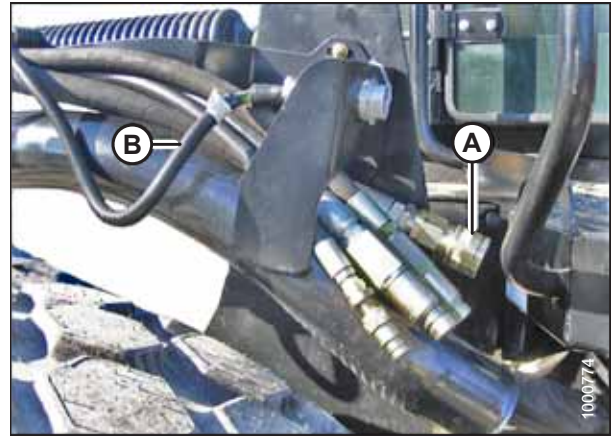


Figure 5.185: Header Drive Hoses and Harness

24. Connect reel hydraulics (A) to the corresponding connections at the right cab-forward side of the windrower. For instructions, refer to the header operator's manual.
25. Start the engine. Raise and lower the header and the reel a few times to remove any trapped air from the hydraulic system.

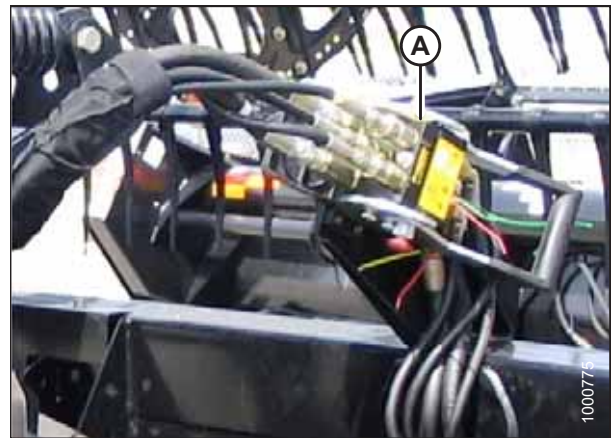


Figure 5.186: Reel Hydraulics

5.6 Detaching D2 SP Series Draper Header

This section details the procedures necessary to detach a D2 SP Series Draper Header from the windrower.

5.6.1 Detaching D2 SP Series Draper Header – Hydraulic Center-Link

Detaching a header from the windrower requires removing the header support pins, disengaging the float springs, and disconnecting the electrical and hydraulic connectors.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

DANGER

Ensure that all bystanders have cleared the area.

ATTACHING AND DETACHING HEADERS

1. Start the engine.
2. Press HEADER UP switch (A) to raise the header to its maximum height.
3. Rephase the cylinders if one end of the header does not rise fully:
 - a. Press and hold HEADER UP switch (A) until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.
4. Shut down the engine, and remove the key from the ignition.



Figure 5.187: Ground Speed Lever (GSL)

5. To engage the safety props on the lift cylinders:
 - a. Pull lever (A) and rotate it toward the header to lower safety prop (B) onto the cylinder.
 - b. Repeat the previous step for the opposite lift cylinder.

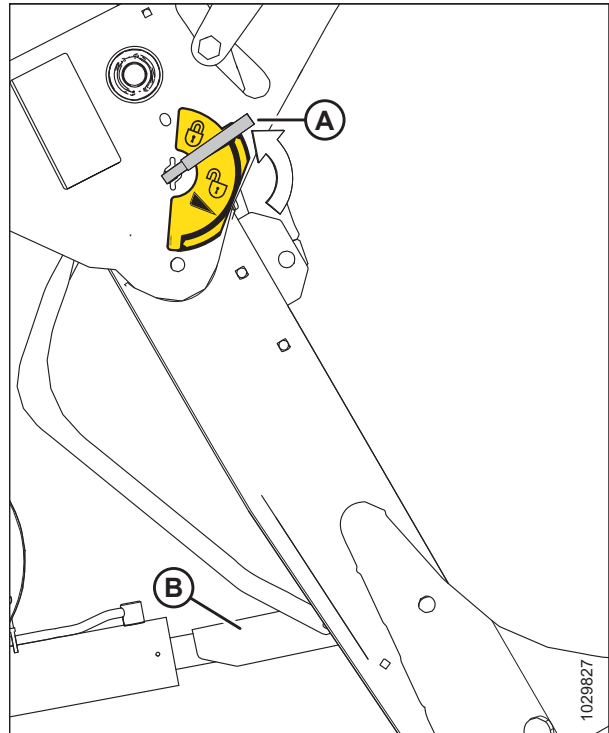


Figure 5.188: Safety Prop

ATTACHING AND DETACHING HEADERS

6. Remove and retain hairpin (D) and clevis pin (C) from header support (B) and windrower lift linkage (A). Repeat this step on the opposite side of the machine.

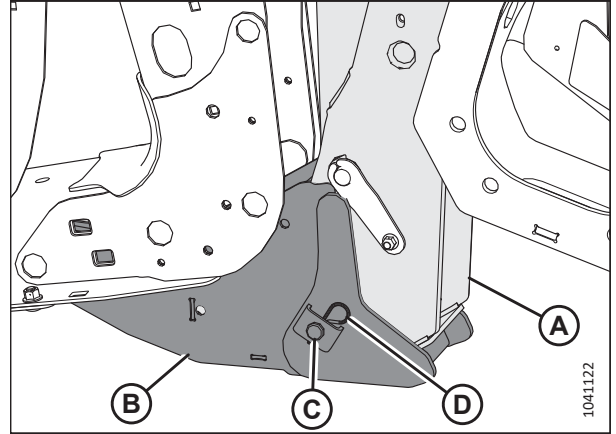


Figure 5.189: Header Leg and Windrower Lift Linkage Connected by Header Support

7. **Windrowers with self-aligning center-link:** Release center-link latch (A).

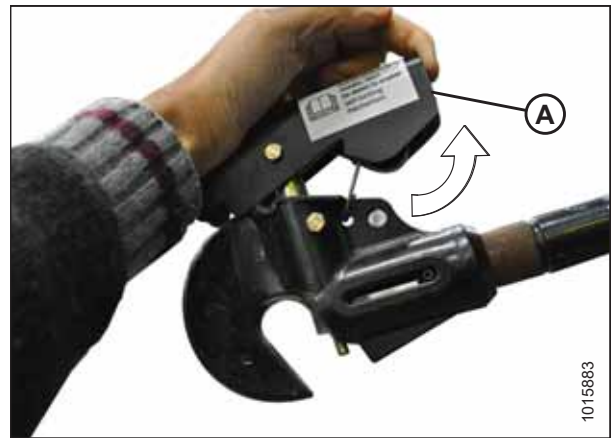


Figure 5.190: Center-Link

8. Remove the clevis pin from location (A) to disengage the float springs. Insert the pin in storage hole (B). Secure it with the lynch pin.

IMPORTANT:

Removing the float will release the tension in the float springs. This will prevent damage to the header lift linkages when lowering the legs without a header or weight box attached to the windrower.

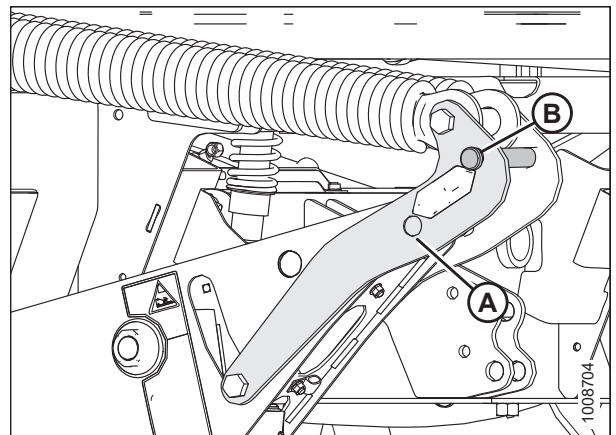


Figure 5.191: Header Float Linkage

ATTACHING AND DETACHING HEADERS

9. To disengage the safety props on the lift cylinders:
 - a. Turn lever (A) away from the header to raise the safety prop until the lever locks into the vertical position.
 - b. Repeat the previous step for the opposite cylinder.
10. Start the engine.

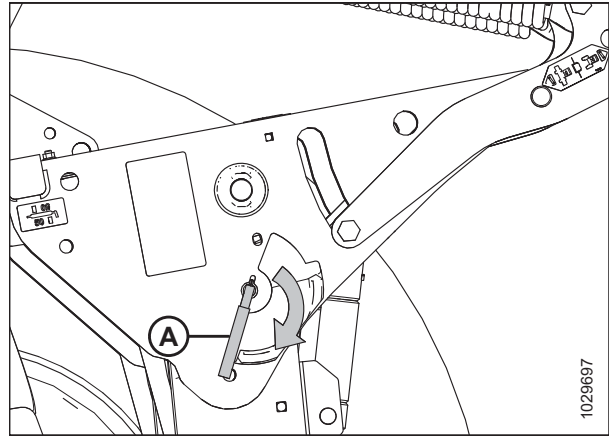


Figure 5.192: Safety Prop

11. Lower the header fully using HEADER DOWN switch (A).
12. Activate HEADER TILT UP switch (B) or HEADER TILT DOWN switch (C) on the ground speed lever (GSL) to relieve the load on the center-link cylinder.

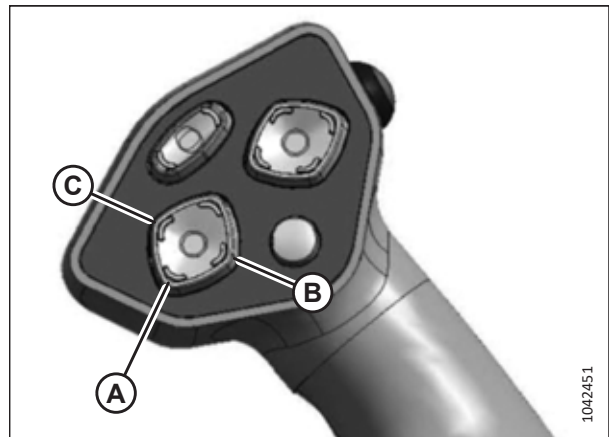


Figure 5.193: Ground Speed Lever

13. **Windrowers with self-aligning center-link:**
 - a. Press REEL UP switch (A) to disengage the center-link from the header.
 - b. Shut down the engine, and remove the key from the ignition.

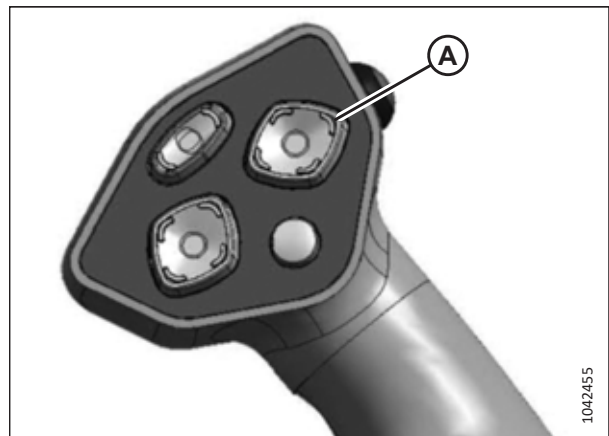


Figure 5.194: GSL

ATTACHING AND DETACHING HEADERS

14. Windrowers without self-aligning center-link:

- a. Shut down the engine, and remove the key from the ignition.
- b. Disconnect the center-link by lifting release (B) and lift hook (A) off the header.

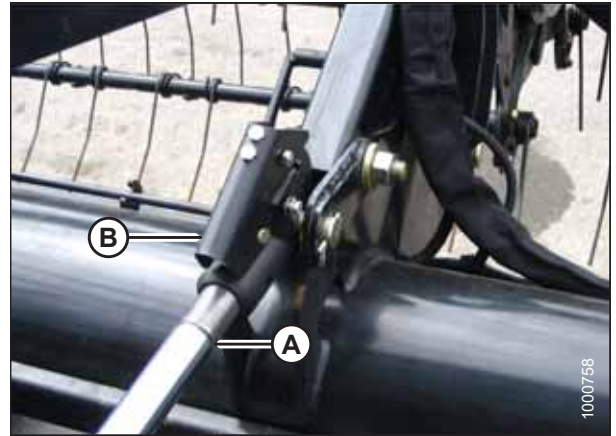


Figure 5.195: Hydraulic Center-Link

15. Disconnect header drive hydraulics (A) and electrical harness (B) from the header and store them in the support on the windrower's left cab-forward side. Refer to the draper header operator's manual for further information.

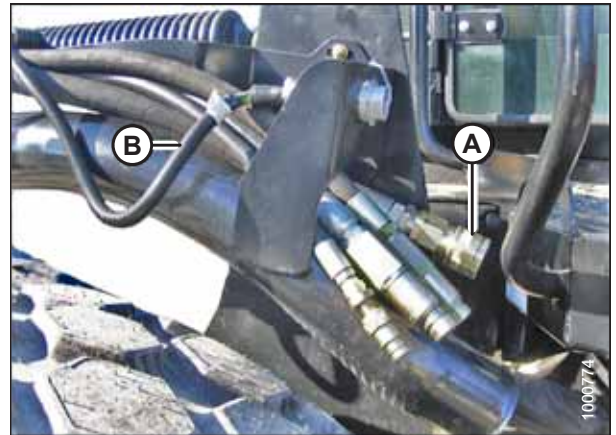


Figure 5.196: Header Drive Hydraulics

16. Disconnect reel hydraulics (A) from the header and store the connector on the bracket on the windrower's left cab-forward side. Refer to the draper header operator's manual for further information.
17. Back the windrower away from the header.
18. Shut down the engine, and remove the key from the ignition.

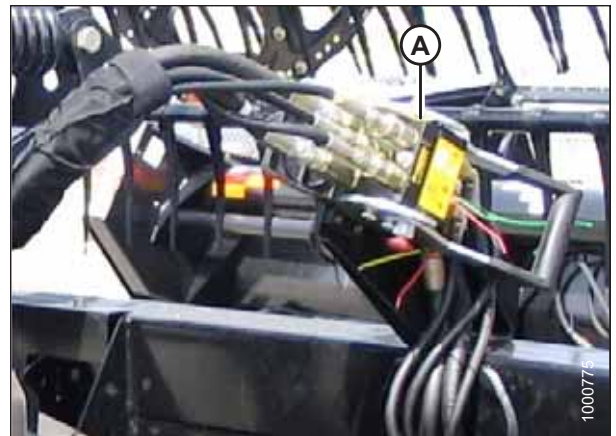


Figure 5.197: Reel Hydraulics

ATTACHING AND DETACHING HEADERS

19. Reinstall clevis pin (B) into header support (C) and secure it with hairpin (A). Repeat this step on the other header leg.

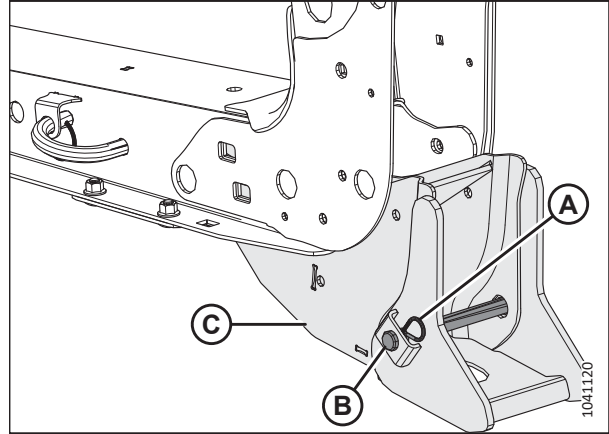


Figure 5.198: Header Stand

5.6.2 Detaching D2 SP Series Draper Header – Mechanical Center-Link

Detaching a header from the windrower requires removing the header support pins, disengaging the float springs, and disconnecting the electrical and hydraulic connectors.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

DANGER

Ensure that all bystanders have cleared the area.

1. Start the engine.
2. Press HEADER UP switch (A) to raise the header to its maximum height.
3. Rephase the cylinders if one end of the header does not rise fully:
 - a. Press and hold HEADER UP switch (A) until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.
4. Shut down the engine, and remove the key from the ignition.



Figure 5.199: Ground Speed Lever (GSL)

ATTACHING AND DETACHING HEADERS

5. To engage the safety props on the lift cylinders:
 - a. Pull lever (A) and rotate it toward the header to lower safety prop (B) onto the cylinder.
 - b. Repeat the previous step for the opposite lift cylinder.

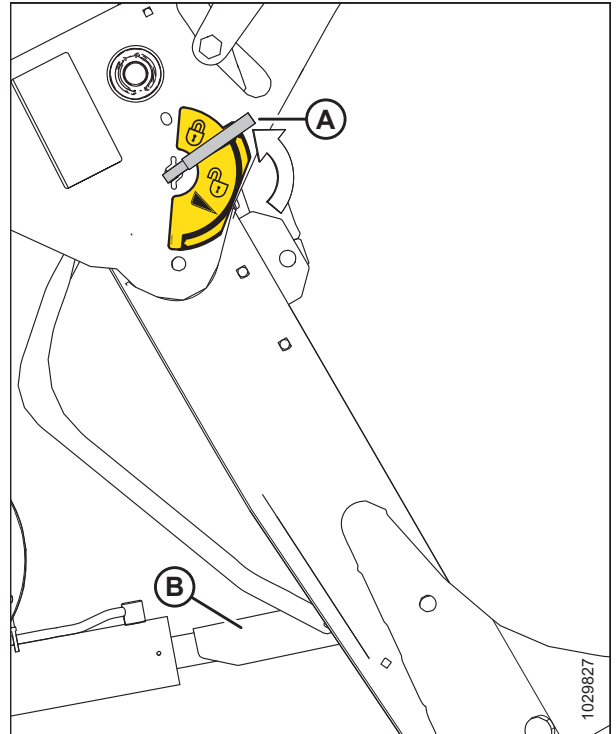


Figure 5.200: Safety Prop

6. Remove and retain hairpin (D) and clevis pin (C) from header support (B) and windrower lift linkage (A). Repeat this step on the opposite side of the machine.

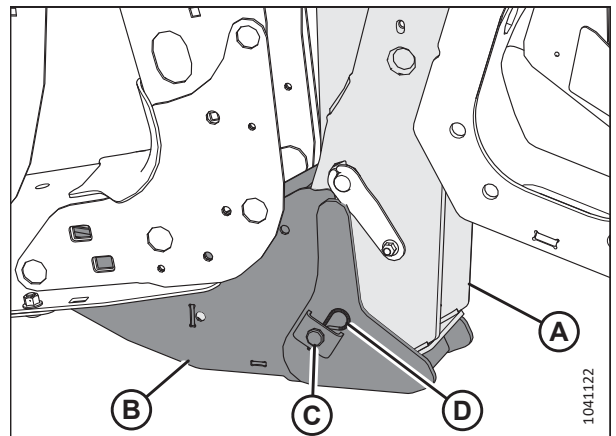


Figure 5.201: Header Leg and Windrower Lift Linkage Connected by Header Support

ATTACHING AND DETACHING HEADERS

7. Remove the clevis pin from location (A) to disengage the float springs. Insert the pin in storage hole (B). Secure it with the lynch pin.

IMPORTANT:

Removing the float will release the tension in the float springs. This will prevent damage to the header lift linkages when lowering the legs without a header or weight box attached to the windrower.

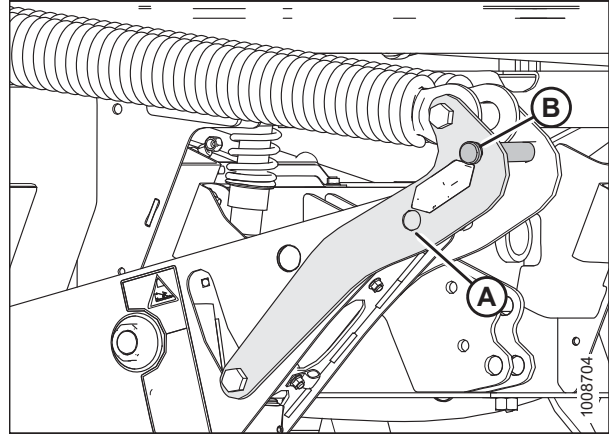


Figure 5.202: Header Float Linkage

8. To disengage the safety props on the lift cylinders:
 - a. Turn lever (A) away from the header to raise the safety prop until the lever locks into the vertical position.
 - b. Repeat the previous step for the opposite cylinder.
9. Start the engine.

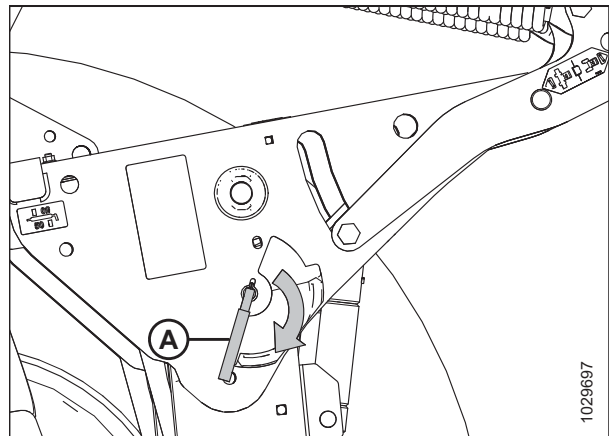


Figure 5.203: Safety Prop

10. Lower the header fully using HEADER DOWN switch (A).
11. Shut down the engine, and remove the key from the ignition.

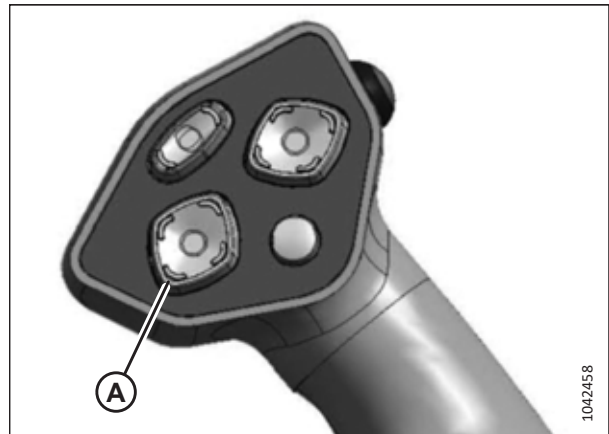


Figure 5.204: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

12. Loosen nut (A) and rotate barrel (B) to relieve the load on the link.
13. Remove cotter pin (D) and clevis pin (C). Disconnect the mechanical center-link. Reinstall clevis pin (C) in the center-link and secure it with the cotter pin.
14. Tighten nut (A) against the barrel. A slight tap with a hammer is sufficient.

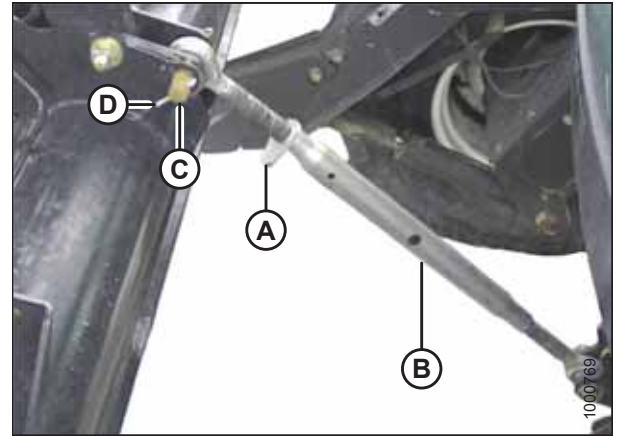


Figure 5.205: Mechanical Center-Link

15. Disconnect header drive hydraulics (A) and electrical harness (B) from the header and store them in the support on the windrower's left cab-forward side. Refer to the draper header operator's manual for further information.

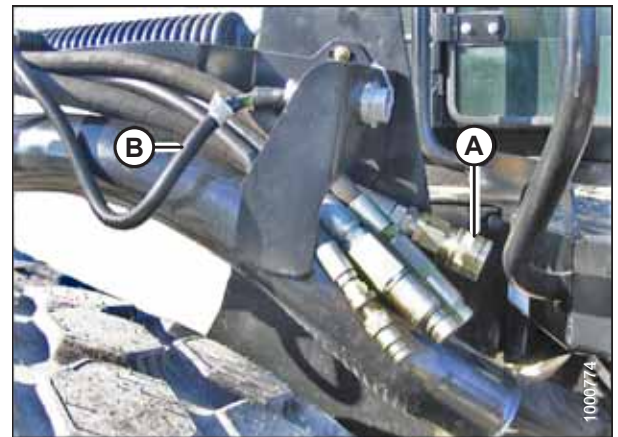


Figure 5.206: Header Drive Hydraulics

16. Disconnect reel hydraulics (A) from the header and store the connector on the bracket on the windrower's left cab-forward side. Refer to the draper header operator's manual for further information.
17. Back the windrower away from the header.
18. Shut down the engine, and remove the key from the ignition.

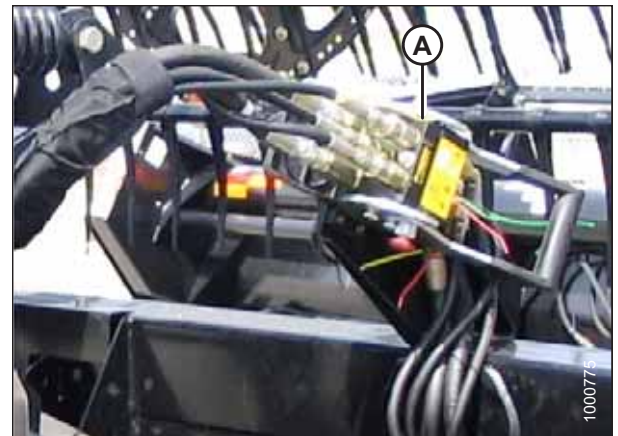


Figure 5.207: Reel Hydraulics

ATTACHING AND DETACHING HEADERS

19. Reinstall clevis pin (B) into header support (C) and secure it with hairpin (A). Repeat this step on the other header leg.

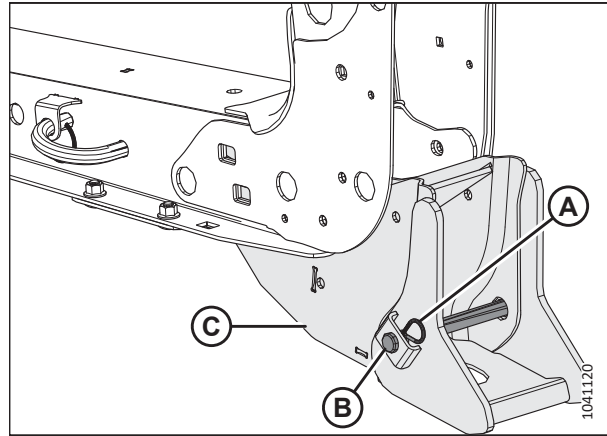


Figure 5.208: Header Stand

5.7 Attaching R80 or R1 Series Rotary Disc Header

Attaching a header to the windrower involves physically connecting the header to the header and completing the hydraulic and electrical connections.

NOTE:

Install 18.4 x 26 tires on the drive wheels when operating an M155 Self-Propelled Windrower with an attached 4 m (13 ft.) R or R1 Series Rotary Disc Header. These drive tires are reversible and should be mounted inset at 3792 mm (149.3 in.) to provide the greatest amount of clearance to uncut crop. Mounting these tires outset or mounting any other drive tire option will result in the drive tires being slightly wider than the header. This may cause some uncut crop to be trampled by the tires when turning the windrower, and may leave some uncut strips of crop in the windrower's next pass.

The procedure for attaching an R or R1 Series Rotary Disc Header to the windrower differs slightly depending on the configuration of the windrower. Proceed to the relevant topic:

- [5.7.1 Attaching R or R1 Series Rotary Disc Header – Hydraulic Center-Link with Self-Alignment, page 320](#)
- [5.7.2 Attaching R or R1 Series Header – Hydraulic Center-Link without Self-Alignment, page 326](#)

5.7.1 Attaching R or R1 Series Rotary Disc Header – Hydraulic Center-Link with Self-Alignment

The header will need to be physically attached to the windrower, and the hydraulic and electrical connections completed. The windrower may be equipped with an optional self-aligning hydraulic center-link, which allows the Operator to control the vertical position of the center-link from the cab.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

DANGER

Ensure that all bystanders have cleared the area.

1. Shut down the engine, and remove the key from the ignition.

ATTACHING AND DETACHING HEADERS

2. Locate header supports (A) on the rear of the header.

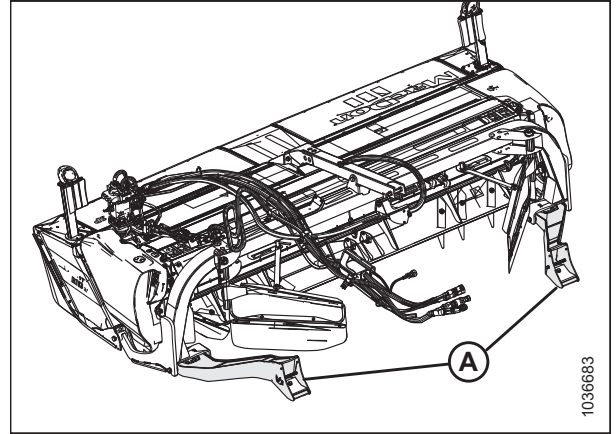


Figure 5.209: Header Supports

3. Remove hairpin (B) from clevis pin (A) and remove the clevis pin from header support (C) on both sides of the header.

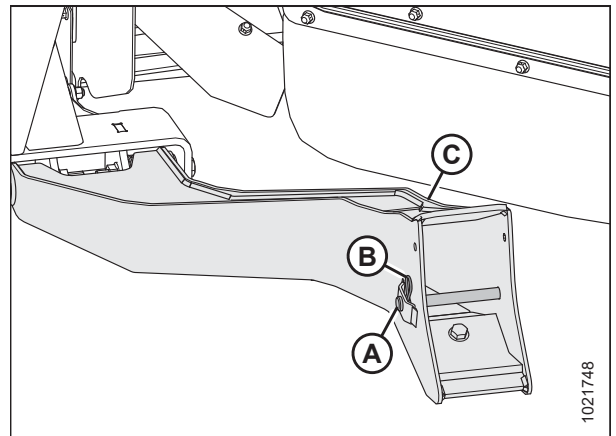


Figure 5.210: Header Support

4. Remove the float engagement pin from hole (A) to disengage the float springs, and insert the float engagement pin into storage hole (B). Secure the pin with the lynch pin. Repeat this step for the opposite linkage.

IMPORTANT:

To prevent damage to the lift system when lowering the header lift linkages without a header or a weight box attached to the windrower, ensure that the float engagement pin is installed in storage hole (B) and **NOT** in engaged position (A).

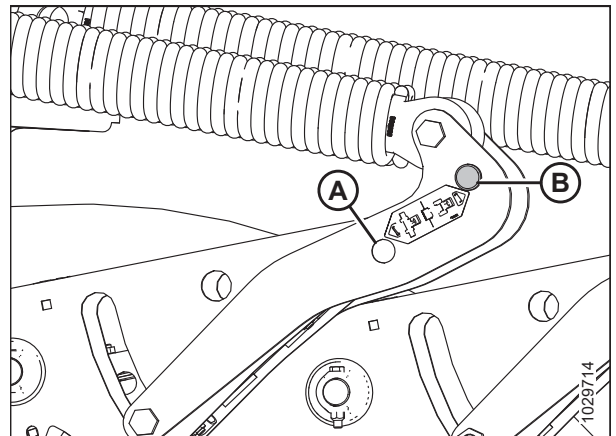


Figure 5.211: Float Linkage

ATTACHING AND DETACHING HEADERS

5. Activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

If the protective cover is installed on the exhaust stack, remove it before starting the engine.

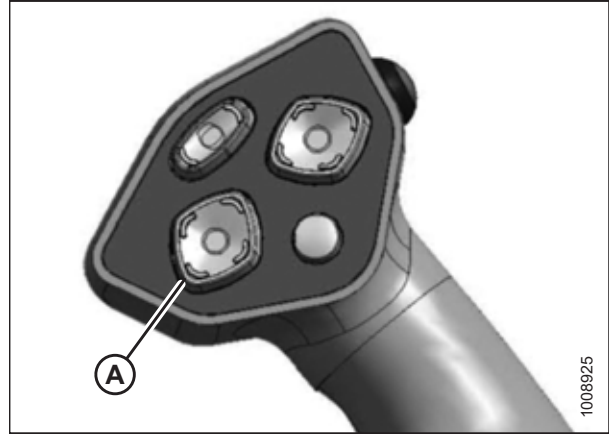


Figure 5.212: Ground Speed Lever

6. Press REEL UP switch (A) on the GSL to raise the center-link until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.



Figure 5.213: Ground Speed Lever

7. Slowly drive the windrower forward until windrower feet (A) enter header supports (B). Continue driving slowly forward until the feet engage the supports and the header is nudged forward.

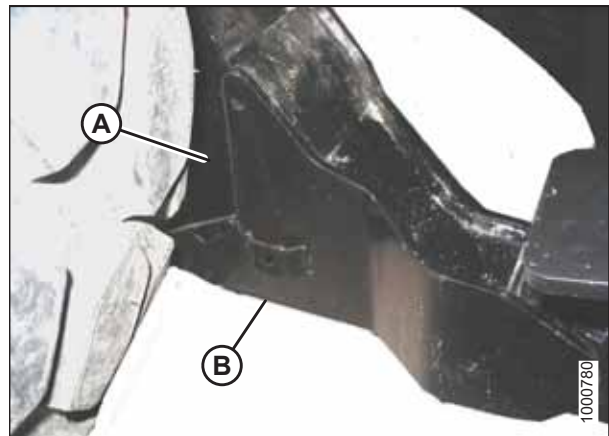


Figure 5.214: Header Support

ATTACHING AND DETACHING HEADERS

8. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - REEL UP (A) to raise the center-link
 - REEL DOWN (B) to lower the center-link
 - HEADER TILT UP (C) to retract the center-link
 - HEADER TILT DOWN (D) to extend the center-link

IMPORTANT:

The hook release must be down to enable the self-locking mechanism. If the release is open (up), manually push it down after the hook engages the header pin.

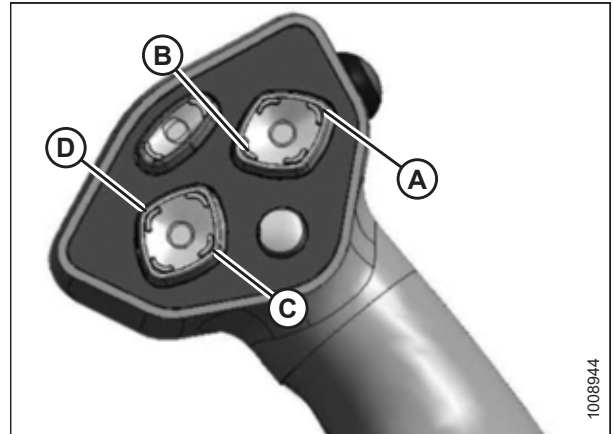


Figure 5.215: Ground Speed Lever

9. Adjust the position of center-link cylinder (A) with the REEL UP and REEL DOWN switches on the GSL until the hook is positioned above the header attachment pin.

IMPORTANT:

Hook release (B) must be down to enable the self-locking mechanism. If the release is open (up), manually push it down after the hook engages the header pin.

10. Lower center-link (A) onto the header using the REEL DOWN switch on the GSL until the center-link locks into position and hook release (B) is down.
11. Check that the center-link is locked onto the header by pressing the REEL UP switch on the GSL.

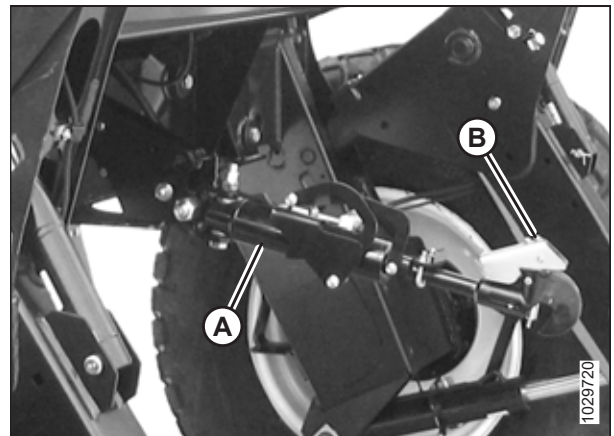


Figure 5.216: Hydraulic Center-Link

12. Press HEADER UP switch (A) to raise the header to its maximum height.
13. If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds to fully phase the cylinders.

NOTE:

It may be necessary to repeat this procedure if there is air in the hydraulic system.

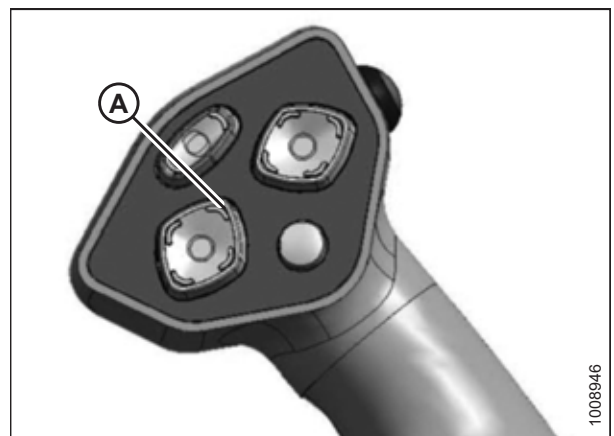


Figure 5.217: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

14. Engage the safety props on both lift cylinders:
 - a. Shut down the engine, and remove the key from the ignition.
 - b. Pull lever (A) and rotate it towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat the previous steps for the opposite lift cylinder.

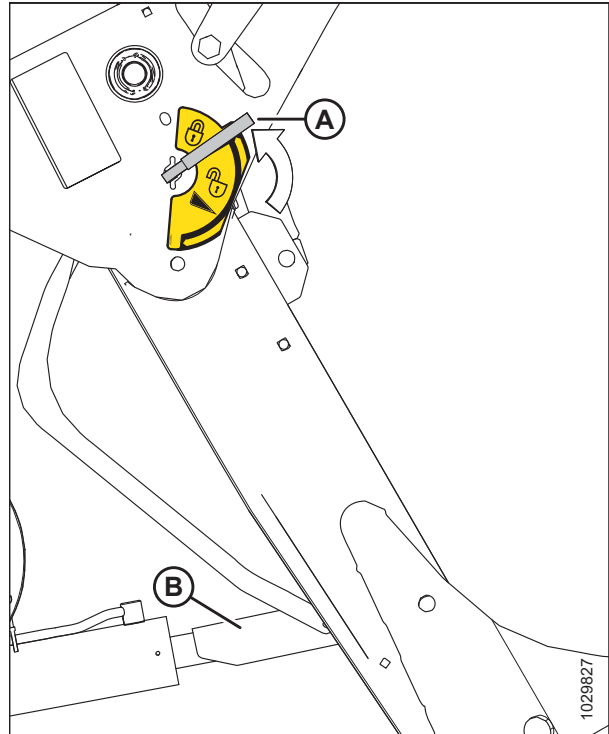


Figure 5.218: Safety Prop

15. Install clevis pin (A) through the support and the windrower lift member, and secure it with hairpin (B). Repeat this step for the opposite side of the machine.

IMPORTANT:

Ensure that clevis pin (A) is fully inserted and that the hairpin is installed behind the bracket.

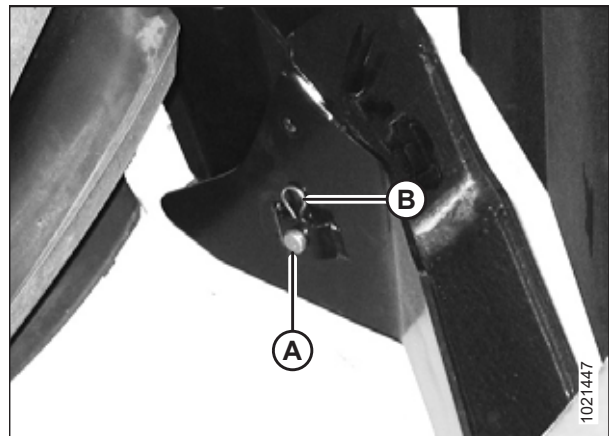


Figure 5.219: Header Support

ATTACHING AND DETACHING HEADERS

16. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Secure it with the hairpin. Repeat this step on the opposite float linkage.

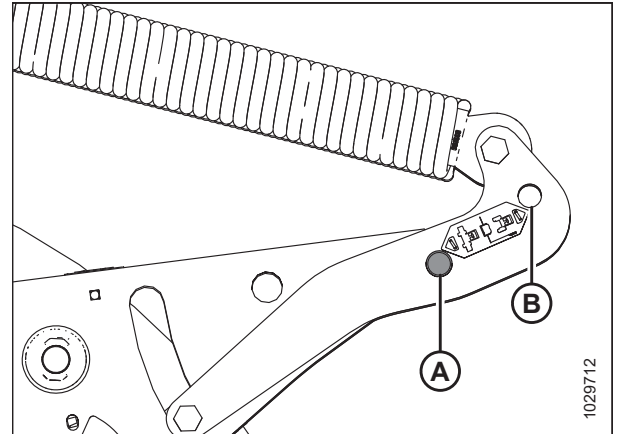


Figure 5.220: Header Float Linkage

17. Disengage the safety prop by turning lever (A) downwards until the lever locks into the vertical position.
18. Repeat the previous step to disengage the other safety prop.

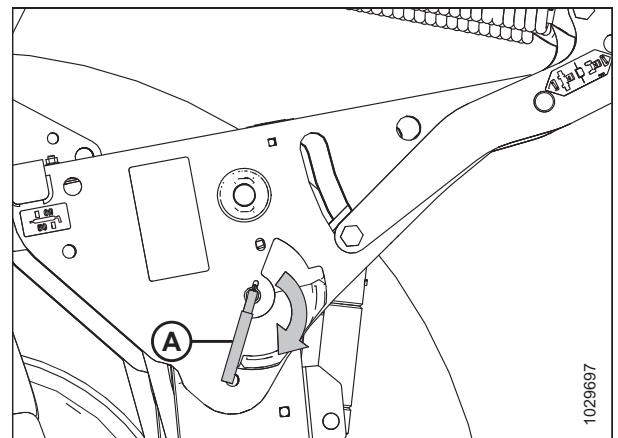


Figure 5.221: Safety Prop Lever

19. Press HEADER DOWN switch (A) on the GSL to fully lower the header.
20. Shut down the engine, and remove the key from the ignition.

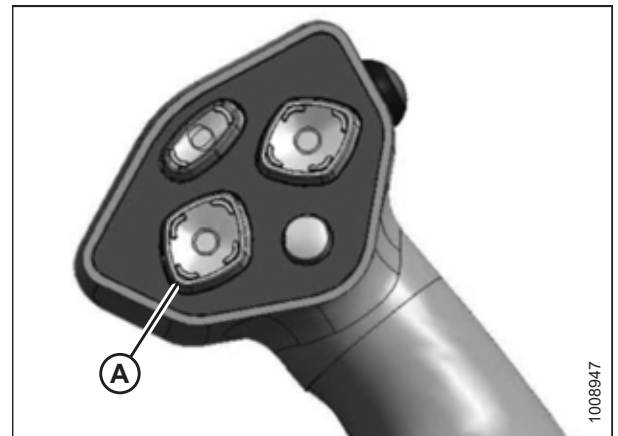


Figure 5.222: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

21. Connect header drive hoses (A) and electrical harness (B) to the header. For instructions, refer to the header operator's manual.

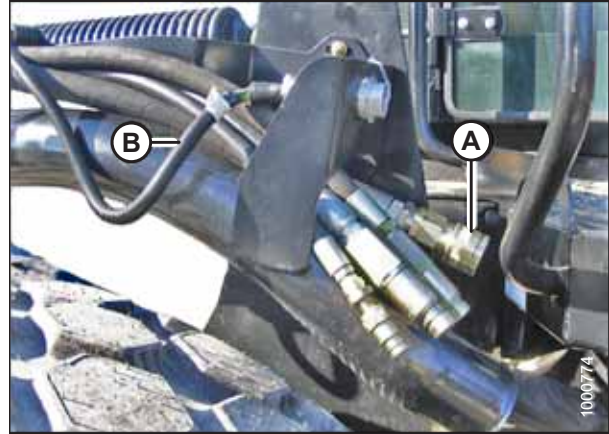


Figure 5.223: Header Drive Hoses and Harness

5.7.2 Attaching R or R1 Series Header – Hydraulic Center-Link without Self-Alignment

The header will need to be physically attached to the windrower, and the hydraulic and electrical connections completed. If the windrower is equipped with a hydraulic center-link that lacks the self-alignment capability, the Operator will have to manually attach the hydraulic center-link's hook to the header's center pin.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

DANGER

Ensure that all bystanders have cleared the area.

1. Shut down the engine, and remove the key from the ignition.
2. Locate header supports (A) on the rear of the header.

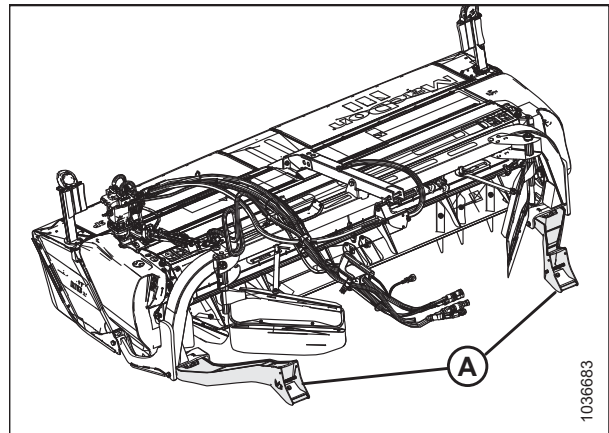


Figure 5.224: Header Supports

ATTACHING AND DETACHING HEADERS

3. Remove hairpin (B) and clevis pin (A) from header support (C) on both sides of the header.

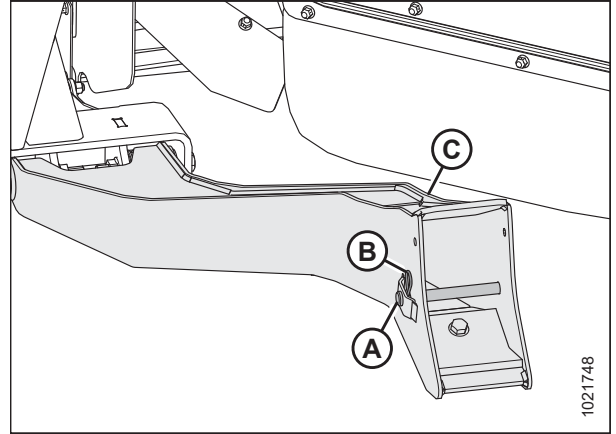


Figure 5.225: Header Support

4. To disengage the float springs, move the float engagement pin from engaged position (A) and insert the pin into storage hole (B). Secure the float engagement pin with a lynch pin. Repeat this step for the opposite linkage.

IMPORTANT:

To avoid damaging the lift system when lowering the header lift linkages without a header or a weight box attached, ensure that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

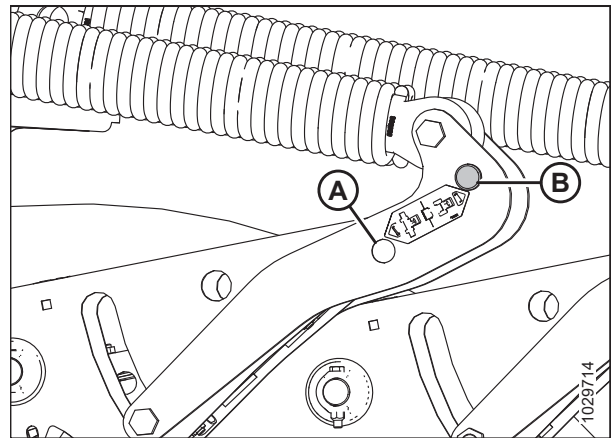


Figure 5.226: Header Float Linkage

5. Activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

If the protective cover is installed on the exhaust stack, remove it before starting the engine.

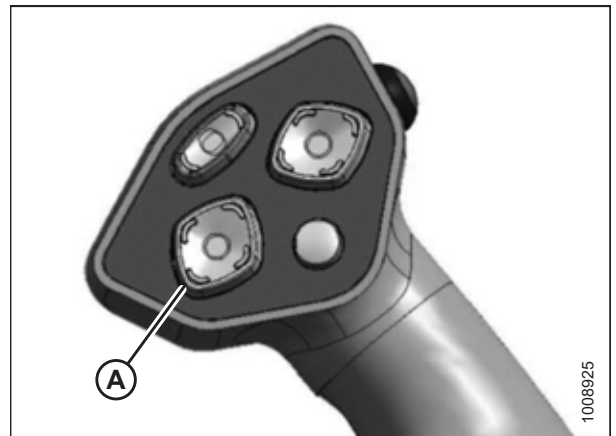


Figure 5.227: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

- Remove pin (A) from the frame linkage and raise center-link (B) until the hook is above the attachment pin on the header. Replace pin (A) to hold the center-link in place.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

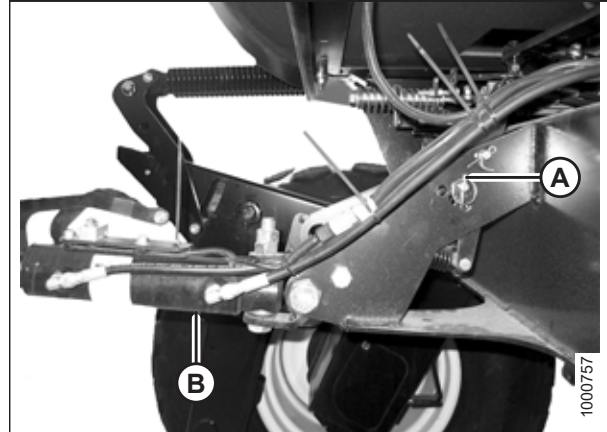


Figure 5.228: Hydraulic Center-Link without Self-Alignment Kit

- Slowly drive the windrower forward until windrower feet (A) enter header supports (B). Continue driving slowly forward until the feet engage the supports and the header nudges forward.

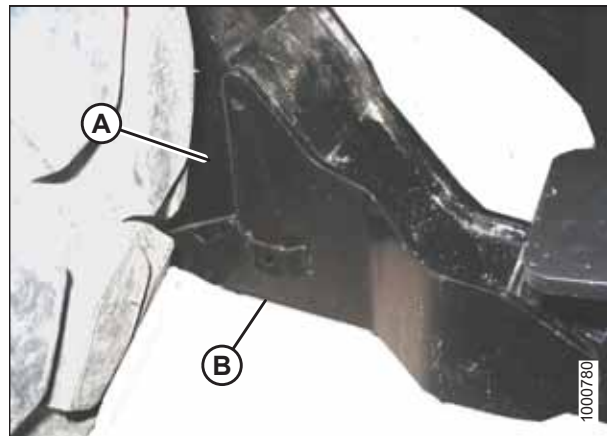


Figure 5.229: Header Support

- Use the following GSL functions to position the center-link hook above the header attachment pin:
 - HEADER TILT UP (A) to retract the center-link
 - HEADER TILT DOWN (B) to extend the center-link
- Shut down the engine, and remove the key from the ignition.

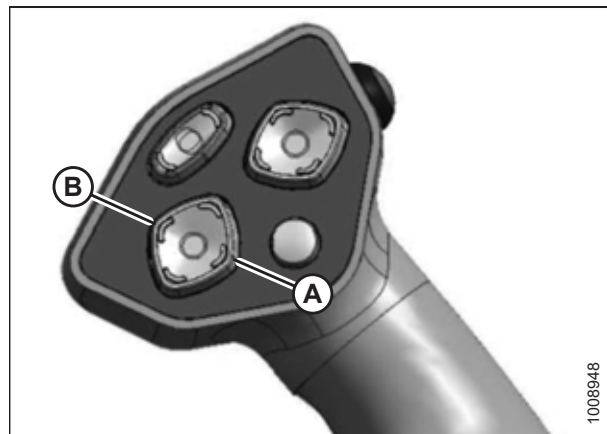


Figure 5.230: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

10. Push down on the rod end of link cylinder (A) until hook (B) engages and locks onto the header pin.

IMPORTANT:

The hook release must be down to enable the self-locking mechanism. If the release is open (up), manually push it down after the hook engages the header pin.

11. Check that center-link (A) is locked onto the header by pulling upward on the rod end of the cylinder.

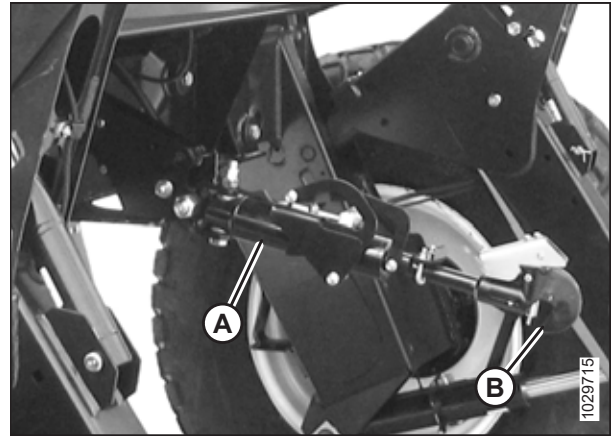


Figure 5.231: Hydraulic Center-Link

12. Press HEADER UP switch (A) to fully raise the header.
13. If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.

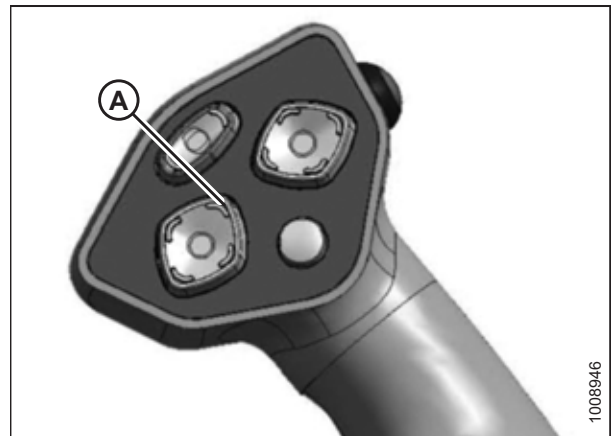


Figure 5.232: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

14. Engage the safety props on both lift cylinders:
 - a. Shut down the engine, and remove the key from the ignition.
 - b. Pull lever (A) and rotate it towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat the previous steps for the opposite lift cylinder.

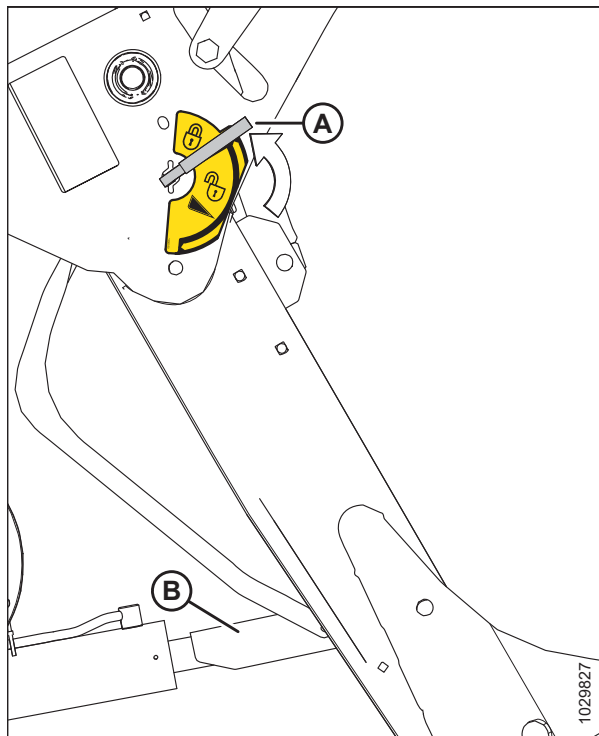


Figure 5.233: Safety Prop

15. Install clevis pin (A) through the header support and the windrower lift member, and secure the clevis pin with hairpin (B). Repeat this step on the opposite side of the machine.

IMPORTANT:

Ensure that clevis pin (A) is fully inserted and that the hairpin is behind the bracket.

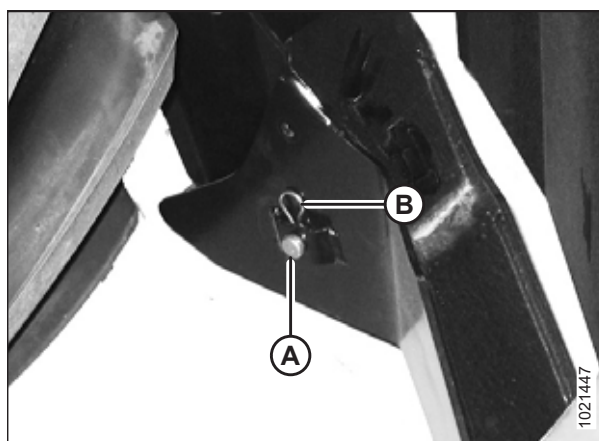


Figure 5.234: Header Support

ATTACHING AND DETACHING HEADERS

16. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Secure it with the hairpin. Repeat this step on the opposite float linkage.

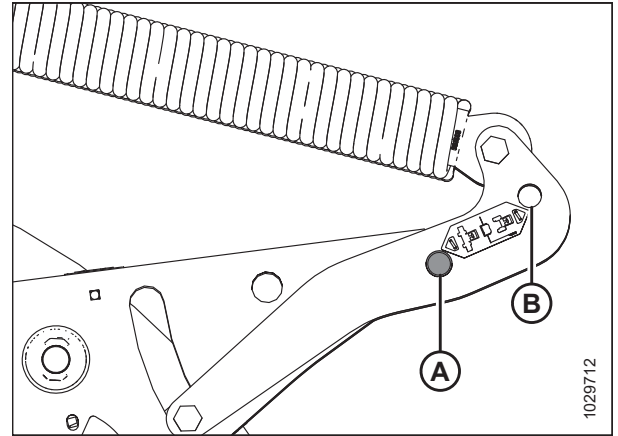


Figure 5.235: Header Float Linkage

17. Disengage the safety prop by turning lever (A) downwards until the lever locks into the vertical position.
18. Repeat the previous step to disengage the other safety prop.

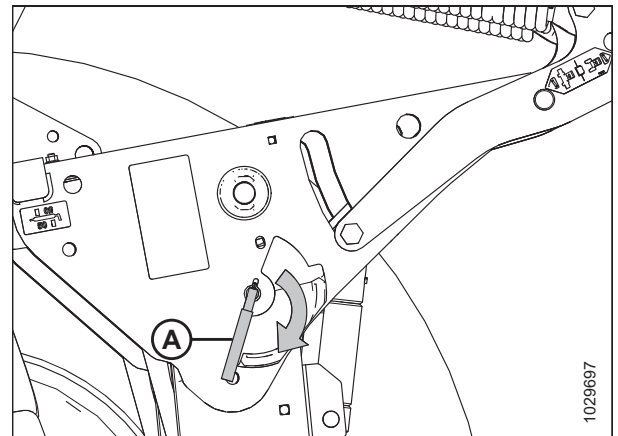


Figure 5.236: Safety Prop Lever

19. Press HEADER DOWN switch (A) on the GSL to fully lower the header.
20. Shut down the engine, and remove the key from the ignition.

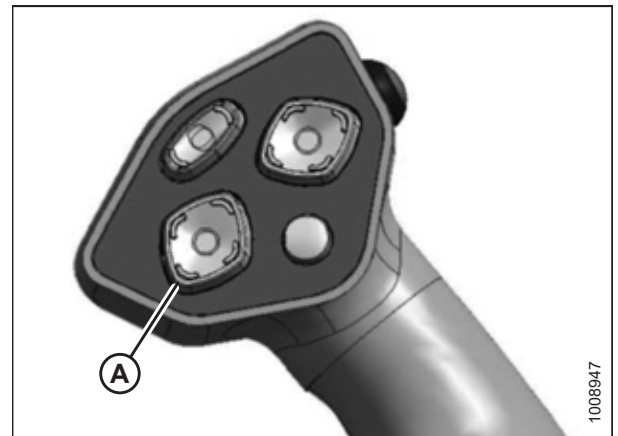


Figure 5.237: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

21. Connect header drive hoses (A) and electrical harness (B) to the header. For instructions, refer to the header operator's manual.

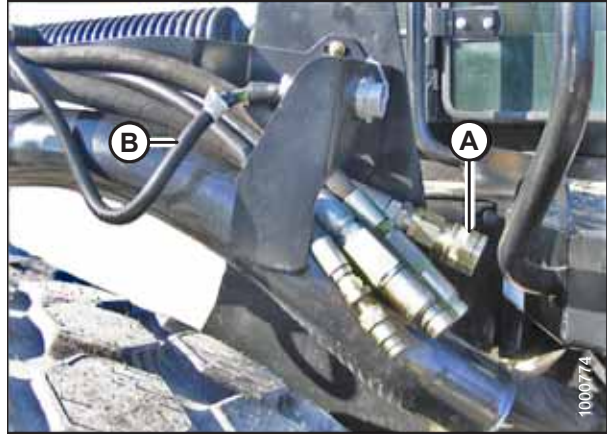


Figure 5.238: Header Drive Hoses and Harness

5.7.3 Attaching R or R1 Series Rotary Disc Header – Mechanical Center-Link

The header will need to be physically attached to the windrower, and the hydraulic and electrical connections completed. On windrowers with a mechanical center-link, the center-link will need to be manually connected to the header's center pin.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Remove hairpin (B) from clevis pin (A) and remove the clevis pin from header supports (C) on both sides of the header.

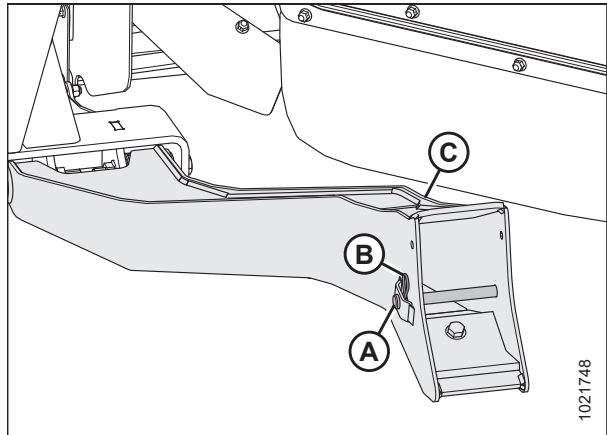


Figure 5.239: Header Support

ATTACHING AND DETACHING HEADERS

3. Check that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

IMPORTANT:

To prevent damage to the lift system when lowering the header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

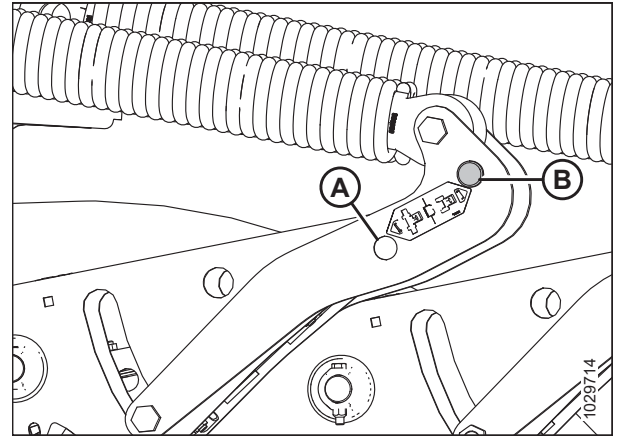


Figure 5.240: Header Float Linkage

4. Activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

If the protective cover is installed on the exhaust stack, remove it before starting the engine.

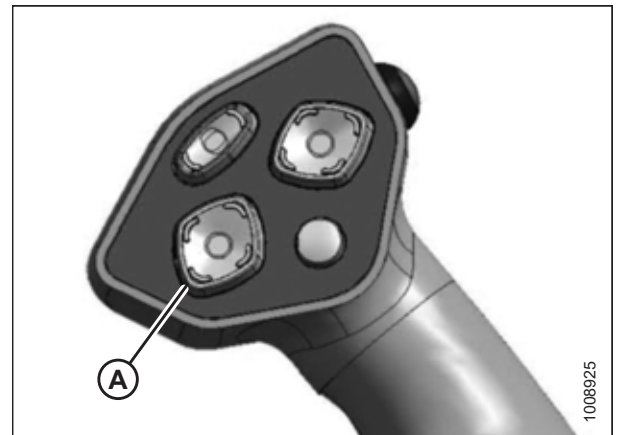


Figure 5.241: Ground Speed Lever

5. Drive the windrower slowly forward until windrower feet (A) enter header supports (B). Continue driving slowly forward until the feet engage the supports and the header is nudged forward.

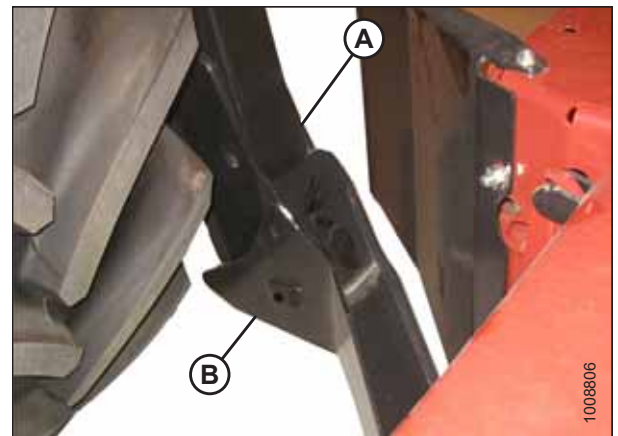


Figure 5.242: Header Support

ATTACHING AND DETACHING HEADERS

6. Shut down the engine, and remove the key from the ignition.
7. Loosen nut (A) and rotate barrel (B) to adjust its length until the link is aligned with the header bracket.
8. Install clevis pin (C) and secure it with cotter pin (D).
9. Adjust the length of the link to achieve the proper header angle by rotating barrel (B). Tighten nut (A) against the barrel (a slight tap with a hammer is sufficient).

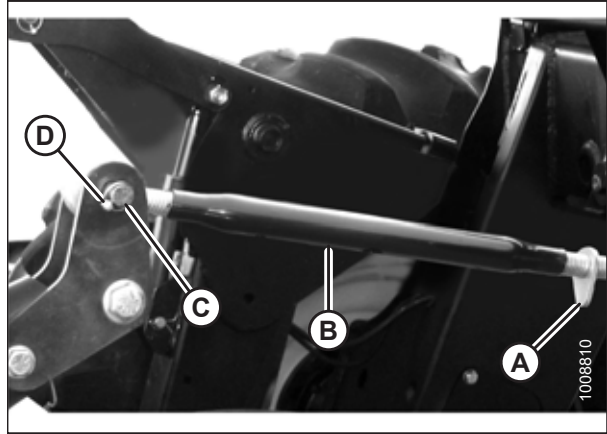


Figure 5.243: Mechanical Center-Link

DANGER

Ensure that all bystanders have cleared the area.

10. Start the engine.
11. Press HEADER UP switch (A) to raise the header to its maximum height.
12. If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.



Figure 5.244: Ground Speed Lever

NOTE:

It may be necessary to repeat this procedure if there is air in the hydraulic system.

ATTACHING AND DETACHING HEADERS

13. Engage the safety props on both lift cylinders:
 - a. Shut down the engine, and remove the key from the ignition.
 - b. Pull lever (A) and rotate it towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat the previous steps for the opposite lift cylinder.

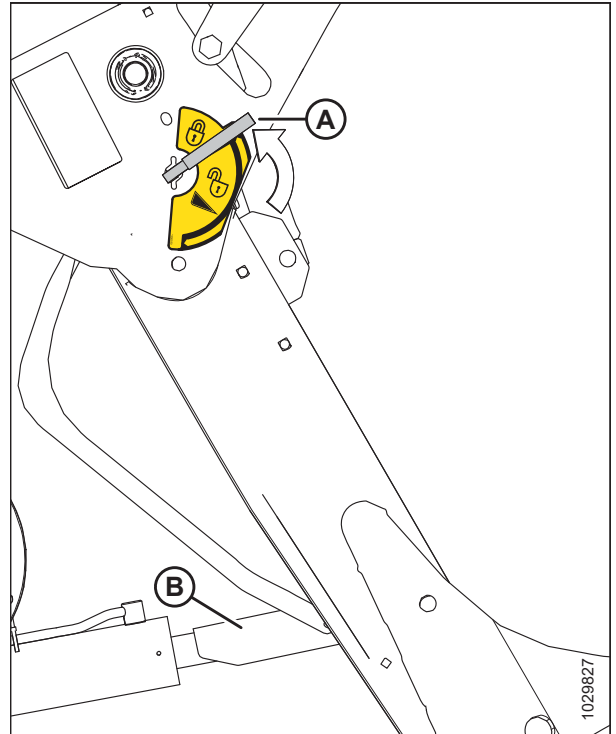


Figure 5.245: Safety Prop

14. Install clevis pin (A) through the support and the windrower lift member, and secure it with hairpin (B). Repeat this step on the opposite side of the header.

IMPORTANT:

Ensure that clevis pin (A) is fully inserted and that the hairpin is installed behind the bracket.

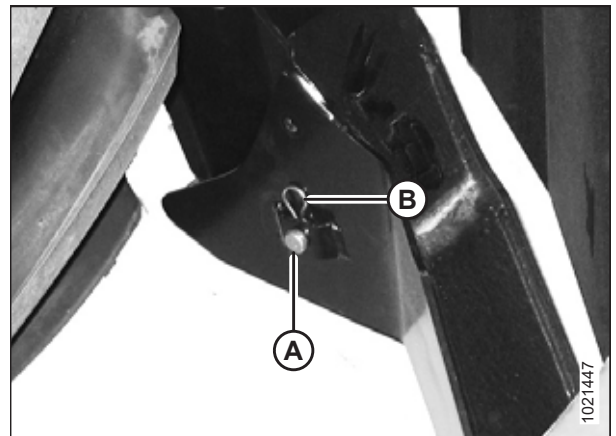


Figure 5.246: Header Support

ATTACHING AND DETACHING HEADERS

15. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Secure it with the hairpin. Repeat this step on the opposite float linkage.

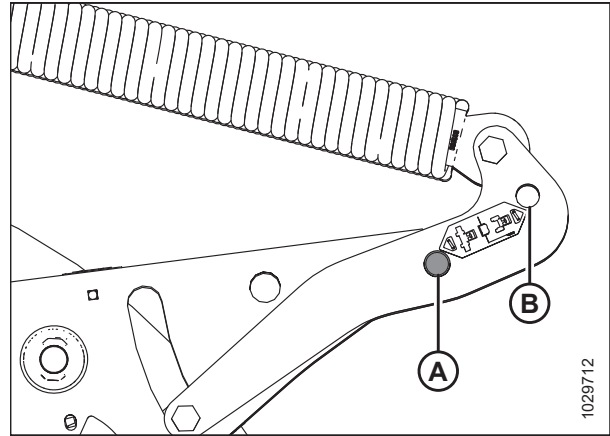


Figure 5.247: Header Float Linkage

16. Disengage the safety prop by turning lever (A) downwards until the lever locks into the vertical position.
17. Repeat the previous step to disengage the other safety prop.

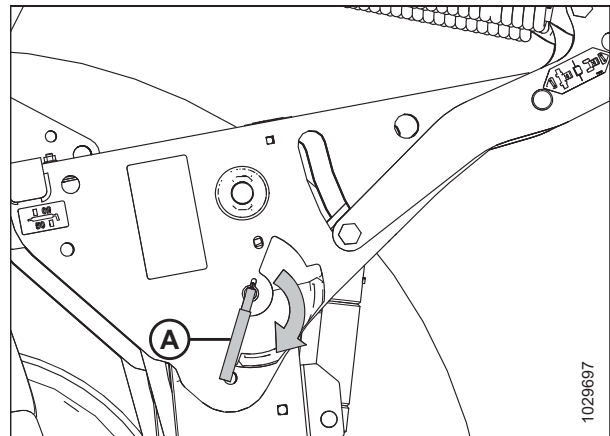


Figure 5.248: Safety Prop Lever

18. Press HEADER DOWN switch (A) on the GSL to fully lower the header.
19. Shut down the engine, and remove the key from the ignition.

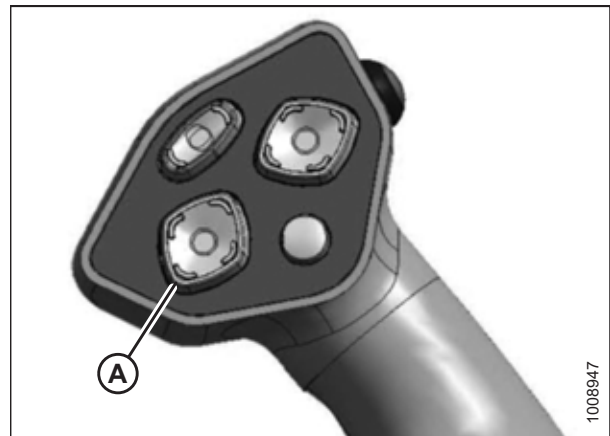


Figure 5.249: Ground Speed Lever

20. Connect header drive hoses (A) and electrical harness (B) to the header. For instructions, refer to the header operator's manual.

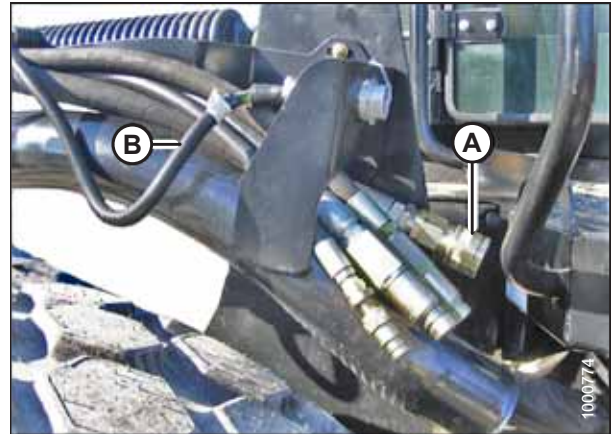


Figure 5.250: Header Drive Hoses and Harness

5.8 Detaching R or R1 Series Rotary Disc Header

Detaching a header from the windrower involves removing the header's mechanical connection to the windrower and disconnecting the hydraulic and electrical connections.

Refer to the relevant procedure:

- [5.8.1 Detaching R or R1 Series Rotary Disc Header – Hydraulic Center-Link, page 337](#)
- [5.8.2 Detaching R or R1 Series Rotary Disc Header – Mechanical Center-Link, page 341](#)

5.8.1 Detaching R or R1 Series Rotary Disc Header – Hydraulic Center-Link

Detaching an R or R1 Series Rotary Disc Header from the windrower requires lowering the header stand, removing the leg pins, disengaging the float springs, and disconnecting the electrical and hydraulic connectors.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Press HEADER UP switch (A) to raise the header to its maximum height.
2. Rephase the cylinders if one end of the header does not rise fully:
 - a. Press and hold HEADER UP switch (A) until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.

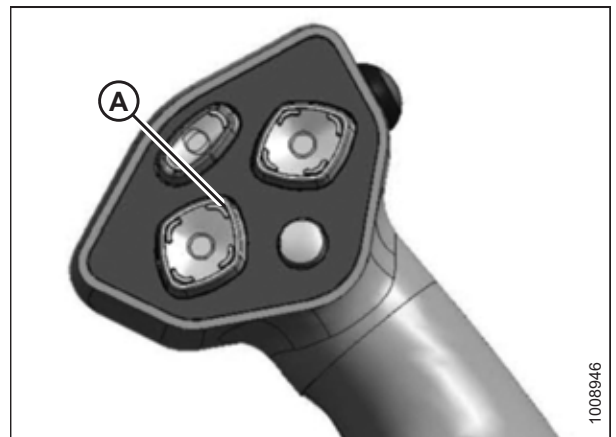


Figure 5.251: Ground Speed Lever (GSL)

ATTACHING AND DETACHING HEADERS

3. Shut down the engine, and remove the key from the ignition.
4. To engage the safety props on the lift cylinders:
 - a. Pull lever (A) and rotate it toward the header to lower safety prop (B) onto the cylinder.
 - b. Repeat the previous step for the opposite lift cylinder.

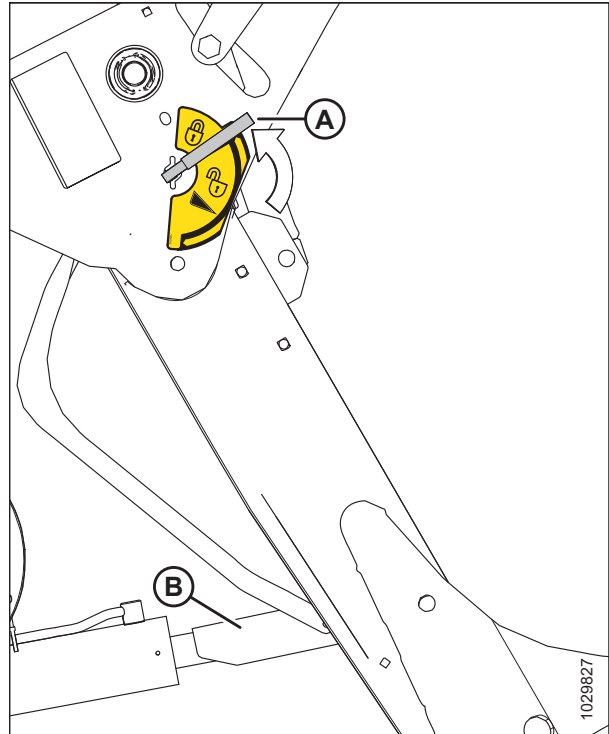


Figure 5.252: Safety Prop

5. Remove hairpin (B) from clevis pin (A) and remove the clevis pin from header boot (C) on both sides of the header.

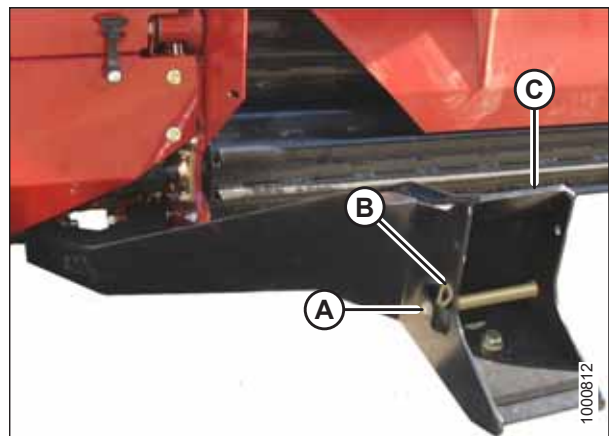


Figure 5.253: Header Boots

ATTACHING AND DETACHING HEADERS

- Remove the hairpin and the clevis pin from location (A) to disengage the float springs. Insert the clevis pin into storage hole (B). Secure it with the hairpin.

IMPORTANT:

To prevent damage to the lift system when lowering the header lift linkages without a header or weight box attached to the windrower, ensure that the float engagement pin is installed in storage position (B), **NOT** in engaged position (A).

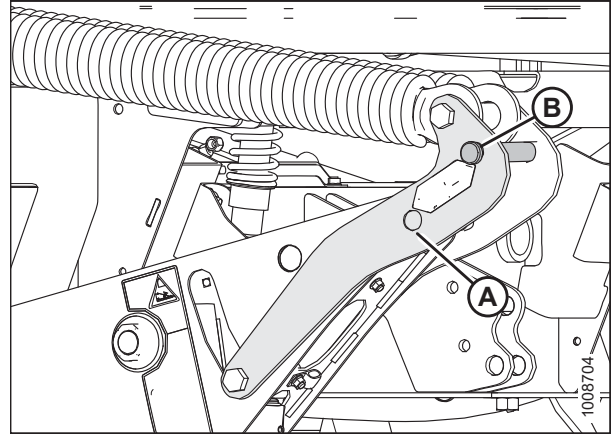


Figure 5.254: Header Float Linkage

DANGER

Ensure that all bystanders have cleared the area.

- Disengage the safety props by turning lever (A) away from the header to raise the safety prop until the lever locks into vertical position. Repeat this step to secure the opposite cylinder.
- Start the engine, choose a level area, and lower the header to the ground.
- Press HEADER TILT UP (A) and HEADER TILT DOWN (B) cylinder switches on the GSL to release the load on the center-link cylinder.

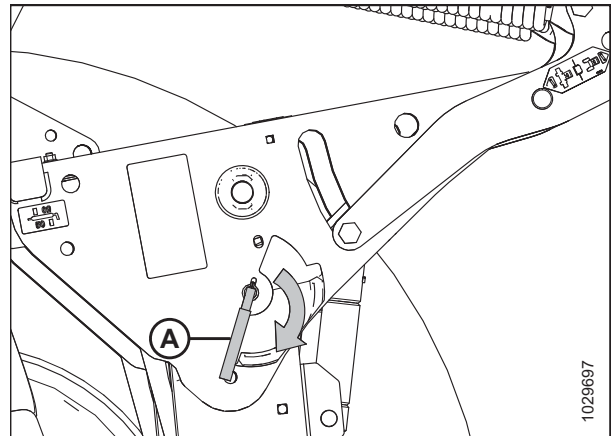


Figure 5.255: Safety Props

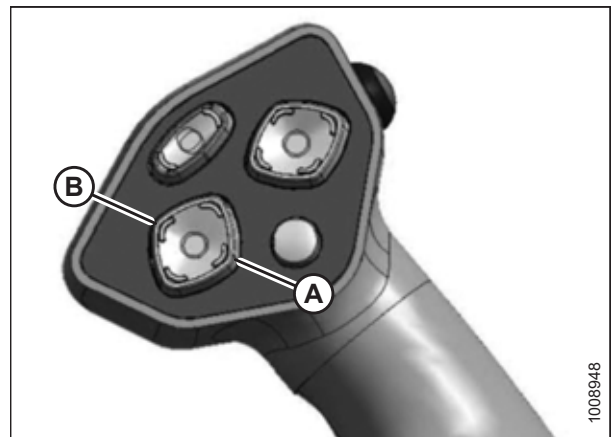


Figure 5.256: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

10. Shut down the engine, and remove the key from the ignition.
11. Lift hook release (C) and lift hook (B) off the header pin.

NOTE:

If the optional center-link lift cylinder is installed, lift release (C) and then operate the link lift cylinder from the cab to disengage center-link (A) from the header.



Figure 5.257: Hydraulic Center-Link

12. Disconnect header drive hydraulics (A) and electrical harness (B). Refer to the header operator's manual.
13. Back the windrower slowly away from the header.

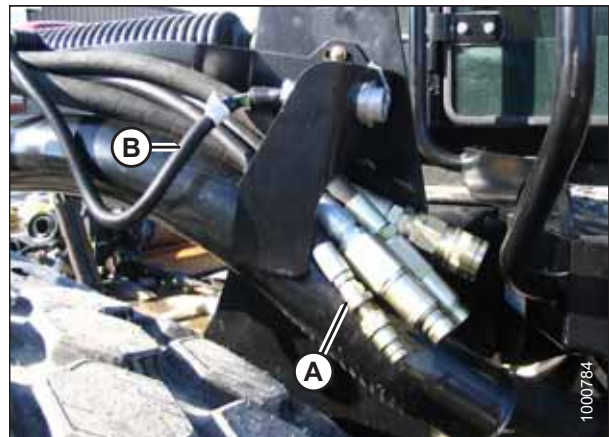


Figure 5.258: Header Drive Hydraulics

14. Reinstall clevis pin (A) through boot (C) and secure it with hairpin (B). Repeat this step on the opposite side of the header.

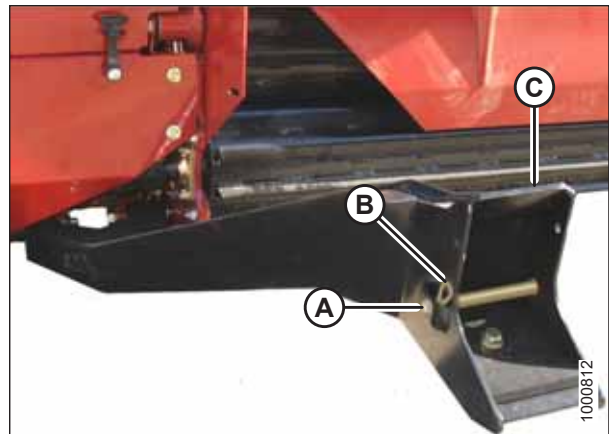


Figure 5.259: Header Boot

5.8.2 Detaching R or R1 Series Rotary Disc Header – Mechanical Center-Link

Detaching an R or R1 Series Rotary Disc Header from the windrower requires lowering the header stand, removing the leg pins, disengaging the float springs, and disconnecting the electrical and hydraulic connectors.

⚠ DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator’s seat for any reason.

1. Press HEADER UP switch (A) to raise the header to its maximum height.
2. Rephase the cylinders if one end of the header does not rise fully:
 - a. Press and hold HEADER UP switch (A) until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.



Figure 5.260: Ground Speed Lever (GSL)

3. Shut down the engine, and remove the key from the ignition.
4. Pull lever (A) and rotate it toward the header to lower safety prop (B) onto the cylinder. Repeat this step to secure the opposite cylinder.

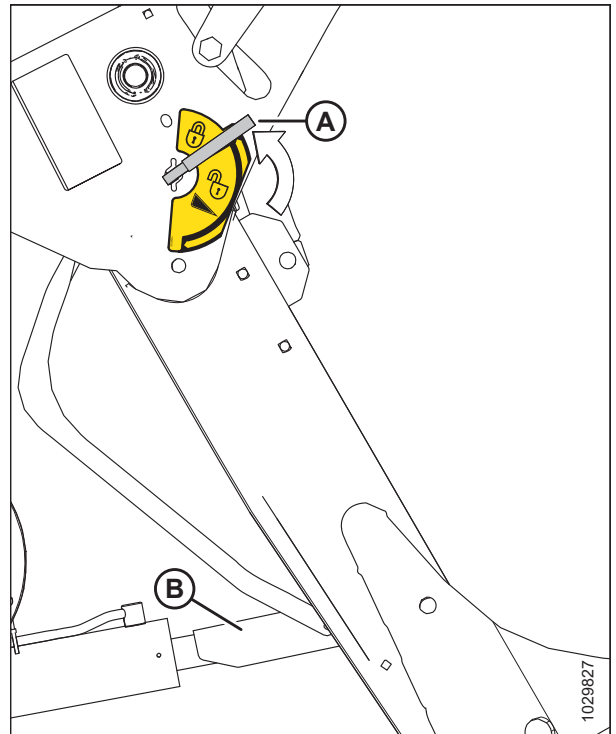


Figure 5.261: Safety Prop

ATTACHING AND DETACHING HEADERS

- Remove hairpin (B) from clevis pin (A) and remove the pin from left and right header boots (C) on the header.

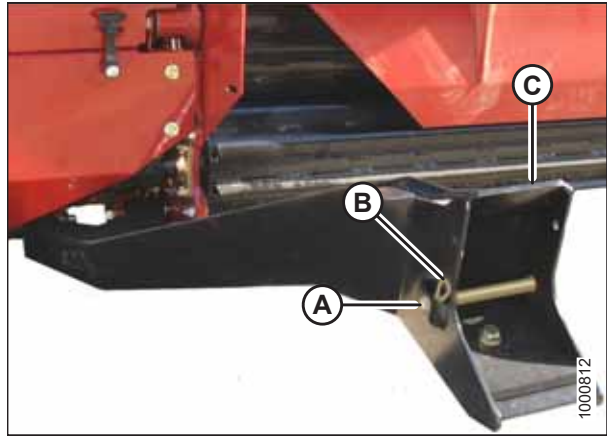


Figure 5.262: Header Boots

- Remove the clevis pin from location (A) to disengage the float springs. Insert the pin into storage hole (B). Secure it with the hairpin.

IMPORTANT:

To prevent damage to the lift system when lowering the header lift linkages without a header or weight box attached to the windrower, ensure that the float engagement pin is installed in storage position (B) and **NOT** in engaged position (A).

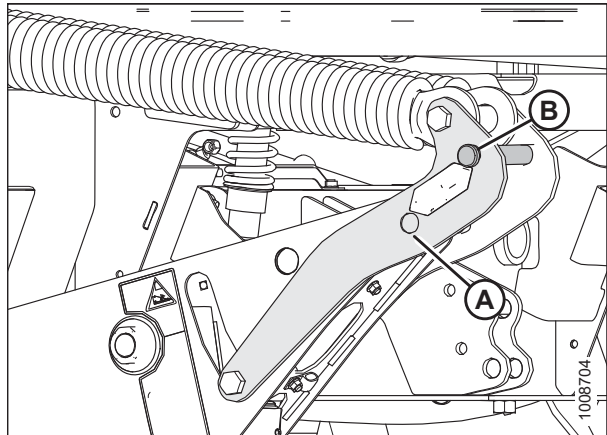


Figure 5.263: Header Float Linkage

- To disengage the safety props on the lift cylinders:
 - Turn lever (A) away from the header to raise the safety prop until the lever locks into the vertical position.
 - Repeat the previous step for the opposite cylinder.

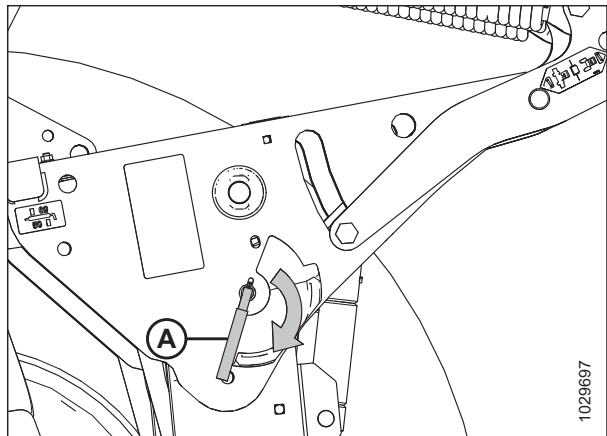


Figure 5.264: Safety Prop

ATTACHING AND DETACHING HEADERS

- Loosen nut (B) and rotate barrel (A) to relieve the load on the link.

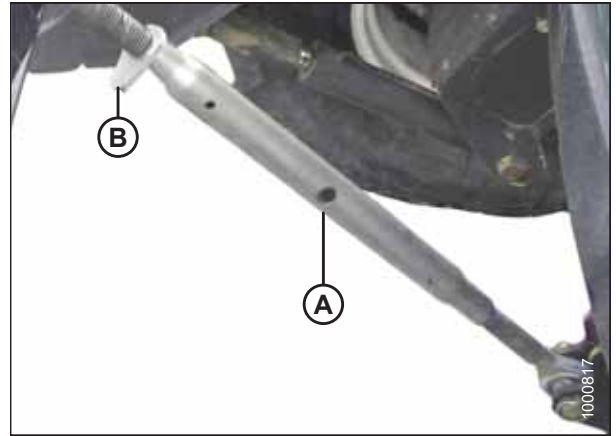


Figure 5.265: Mechanical Center-Link

- Remove the cotter pin from clevis pin (B) and remove pin (B). Reinstall the clevis pin in the header.
- Tighten the nut against barrel (A). A slight tap with a hammer is sufficient.

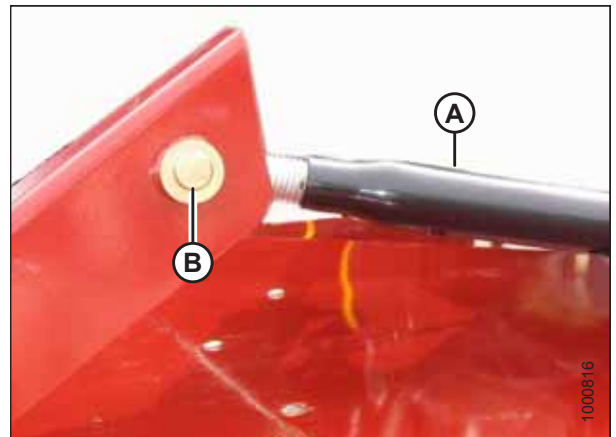


Figure 5.266: Mechanical Center-Link

- Disconnect header drive hydraulics (A) and electrical harness (B). Refer to the header operator's manual.
- Start the engine and slowly back the windrower away from the header.

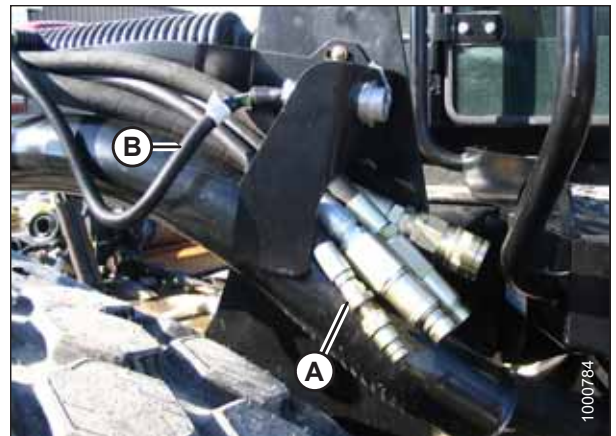


Figure 5.267: Header Drive Hydraulics

ATTACHING AND DETACHING HEADERS

13. Shut down the engine, and remove the key from the ignition.
14. Reinstall clevis pin (A) through each boot (C) and secure with hairpin (B). Repeat this step on the opposite side of the header.

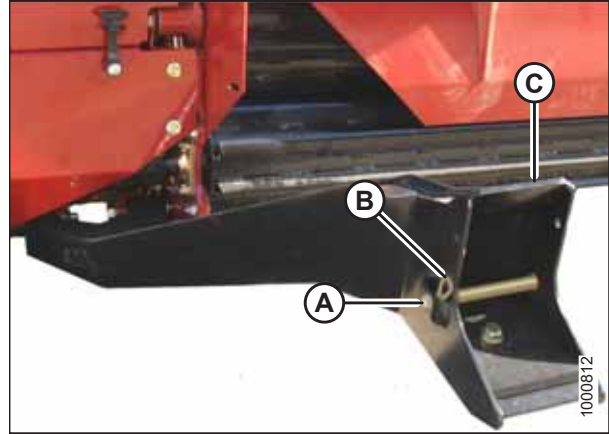


Figure 5.268: Header Boots

5.9 Attaching R2 Series Rotary Disc Header

Follow the procedures below to safely attach the R216 Rotary Disc Header to an M155 Self-Propelled Windrower. The procedures differ somewhat depending on whether or not the windrower is equipped with a self-aligning hydraulic center-link.

Proceed to the relevant topic:

- To connect the header to an M155 Self-Propelled Windrower equipped with a self-aligning hydraulic center-link, proceed to [5.9.1 Attaching R2 Series Rotary Disc Header – Hydraulic Center-Link with Self-Alignment, page 344](#).
- To connect the header to an M155 Self-Propelled Windrower equipped with a non-self-aligning hydraulic center-link, proceed to [5.9.2 Attaching R2 Series Rotary Disc Header – Hydraulic Center-Link without Self-Alignment, page 351](#).

5.9.1 Attaching R2 Series Rotary Disc Header – Hydraulic Center-Link with Self-Alignment

The M155 Self-Propelled Windrower may be equipped with an optional self-aligning hydraulic center-link, which allows the Operator to control the vertical position of the center-link from the cab. This simplifies the process of attaching the R216 Rotary Disc Header to the windrower.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

DANGER

Ensure that all bystanders have cleared the area.

1. Shut down the engine, and remove the key from the ignition.

ATTACHING AND DETACHING HEADERS

2. Remove hairpin (A) from clevis pin (B), and remove the pin from header support (C).
3. Repeat the previous step on the other side of the header.

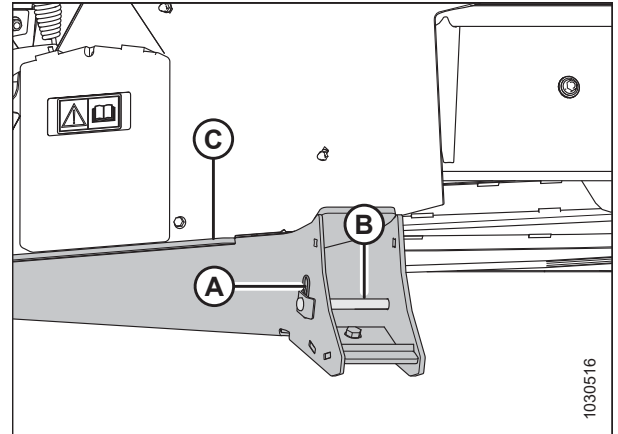


Figure 5.269: Header Support

4. Lift header support (A) and place 2 x 4 in. blocks (B) under the header support. A total of four 2 x 4 in. blocks (B) will be necessary to raise the boot up into field position. Ensure that the boot's bottom edge (C) is parallel with the ground. Repeat this step for the opposite side.

NOTE:

Stack blocks (B) so that the edges of the blocks are flush with each other. Do **NOT** stack blocks (B) crosswise; doing so can make the header unstable.

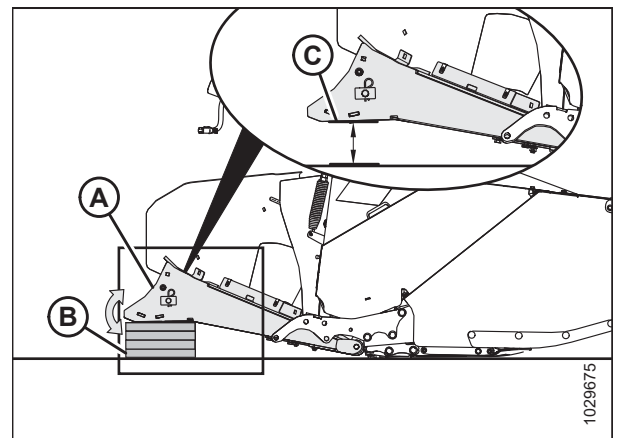


Figure 5.270: Header Support

5. Remove the float engagement pin from hole (A) to disengage the float springs. Insert the float engagement pin into storage hole (B). Secure the engagement pin with the lynch pin.

IMPORTANT:

To prevent damage to the lift system when lowering the header lift linkages without a header or a weight box attached to the windrower, ensure that the float engagement pin is installed in storage hole (B) and **NOT** in engaged position (A).

6. Repeat the previous step for the other float engagement pin.

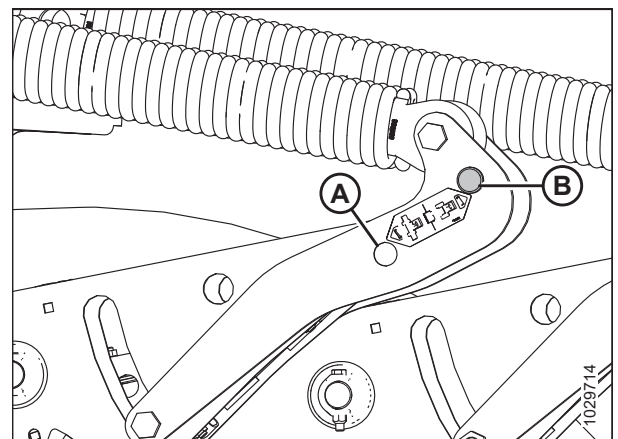


Figure 5.271: Float Linkage

ATTACHING AND DETACHING HEADERS

7. Activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

If the protective cover is installed on the exhaust stack, remove it before starting the engine.

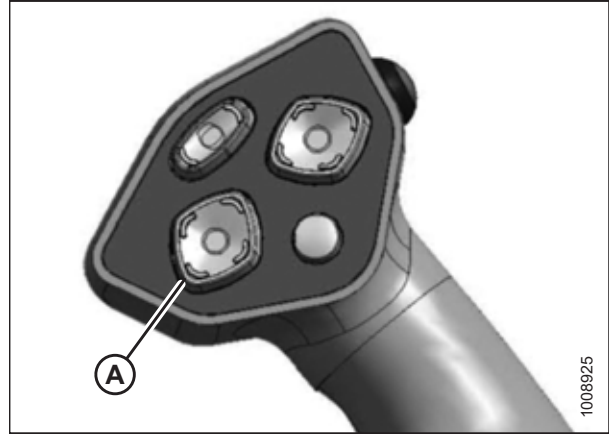


Figure 5.272: Ground Speed Lever

8. Press REEL UP switch (A) on the GSL to raise the center-link until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.



Figure 5.273: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

9. Slowly drive the windrower forward until windrower feet (A) enter header supports (B). Continue driving slowly forward until the feet engage the supports and the header is nudged forward.

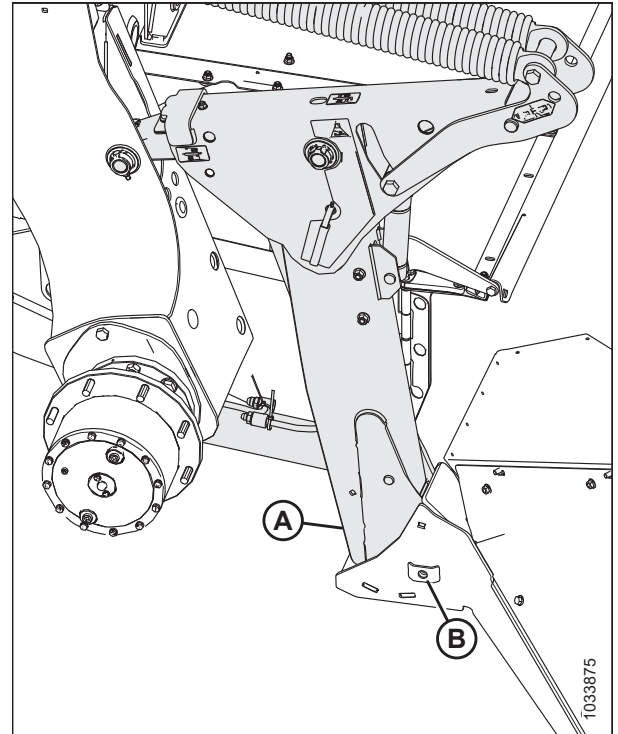


Figure 5.274: Header Support

10. Use the following GSL functions to position the center-link hook above the header attachment pin:

- REEL UP (A) to raise the center-link
- REEL DOWN (B) to lower the center-link
- HEADER TILT UP (C) to retract the center-link
- HEADER TILT DOWN (D) to extend the center-link

IMPORTANT:

The hook release must be down to enable the self-locking mechanism. If the release is open (up), manually push it down after the hook engages the header pin.

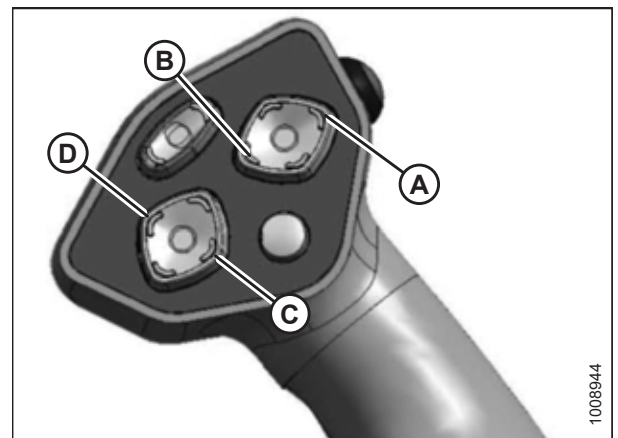


Figure 5.275: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

- Adjust the position of center-link cylinder (A) with the REEL UP and REEL DOWN switches on the GSL until the hook is positioned above the header attachment pin.

IMPORTANT:

Hook release (B) must be down to enable the self-locking mechanism. If the release is open (up), manually push it down after the hook engages the header pin.

- Lower center-link (A) onto the header using the REEL DOWN switch on the GSL until the center-link locks into position and hook release (B) is down.
- Check that the center-link is locked onto the header by pressing the REEL UP switch on the GSL.

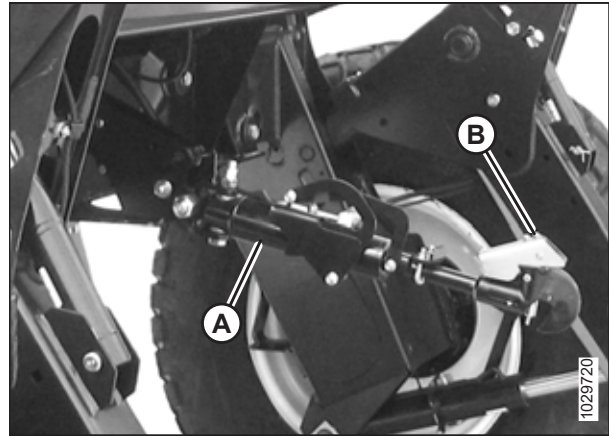


Figure 5.276: Hydraulic Center-Link

- Press HEADER UP switch (A) to raise the header to its maximum height.
- If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:
 - Press and hold the HEADER UP switch until both cylinders stop moving.
 - Continue to hold the switch for 3–4 seconds to fully phase the cylinders.

NOTE:

It may be necessary to repeat this procedure if there is air in the hydraulic system.



Figure 5.277: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

16. To lower the safety props:
 - a. Pull lever (A) outward and rotate it toward the header to lower safety prop (B) onto the cylinder.
 - b. Repeat the previous step for the other safety prop.
 - c. Shut down the engine, and remove the key from the ignition.

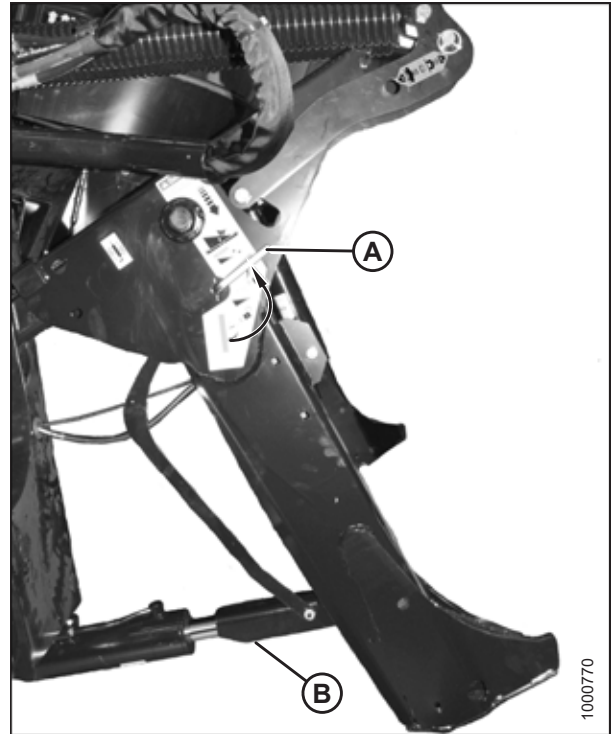


Figure 5.278: Safety Prop

17. Install clevis pin (A) through the support and the windrower foot. Secure the clevis pin with hairpin (B).

IMPORTANT:

Ensure that clevis pin (A) is fully inserted and that the hairpin is installed behind the bracket.

18. Repeat the previous step on the other side of the header.

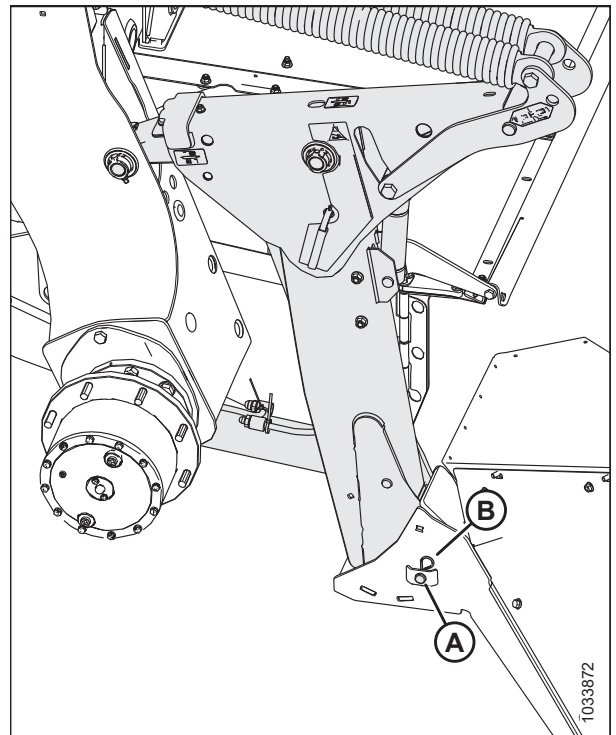


Figure 5.279: Header Support

ATTACHING AND DETACHING HEADERS

19. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Secure it with the hairpin. Repeat this step on the opposite float linkage.

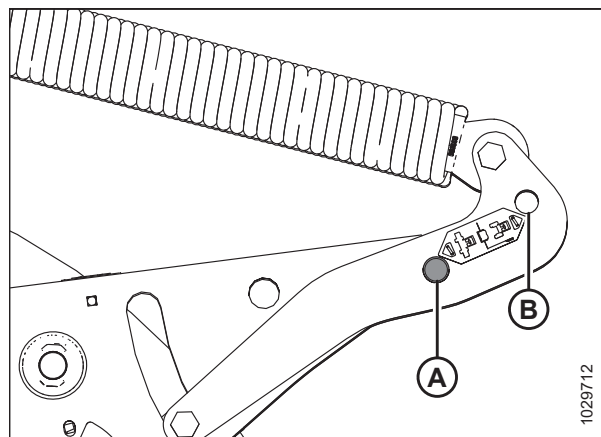


Figure 5.280: Header Float Linkage

20. Disengage the safety prop by turning lever (A) downwards until the lever locks into vertical position.
21. Repeat the previous step to disengage the other safety prop.

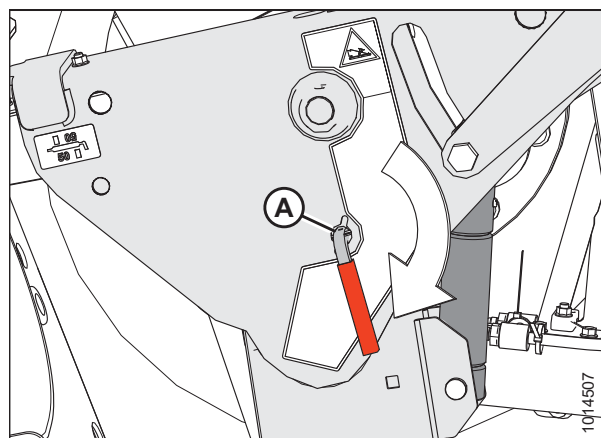


Figure 5.281: Safety Prop

22. Press HEADER DOWN switch (A) on the GSL to fully lower the header.
23. Shut down the engine, and remove the key from the ignition.
24. Proceed to [5.9.3 Attaching R2 Series Rotary Disc Header – Completing Hydraulic and Electrical Connections, page 357](#).

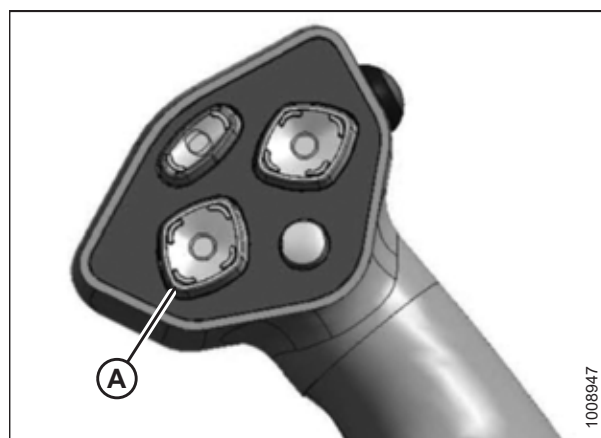


Figure 5.282: Ground Speed Lever

5.9.2 Attaching R2 Series Rotary Disc Header – Hydraulic Center-Link without Self-Alignment

If the M155 Self-Propelled Windrower is equipped with a hydraulic center-link that lacks self-alignment capability, the Operator will have to manually attach the hydraulic center-link's hook to the R216 Rotary Disc Header's center pin.

⚠ DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

⚠ DANGER

Ensure that all bystanders have cleared the area.

1. Shut down the engine, and remove the key from the ignition.
2. Remove hairpin (A) from clevis pin (B), and remove the pin from header support (C).
3. Repeat the previous step on the other side of the header.

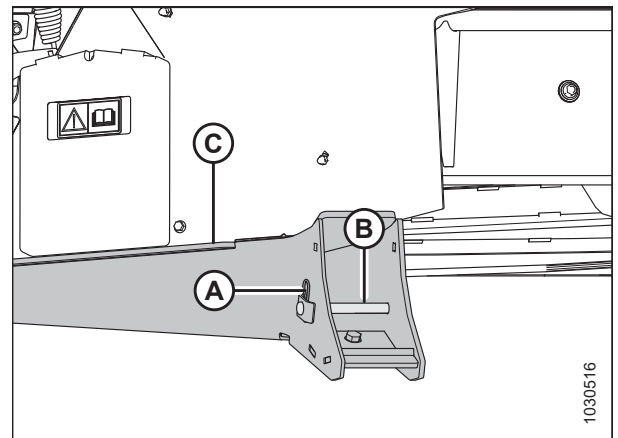


Figure 5.283: Header Support

4. Lift header support (A) and place 2 x 4 in. blocks (B) under the header support. A total of four 2 x 4 in. blocks (B) will be necessary to raise the boot up into field position. Ensure the boot's bottom edge (C) is parallel with the ground. Repeat this step for the opposite side.

NOTE:

Stack blocks (B) so that the edges of the blocks are flush with each other. Do **NOT** stack blocks (B) crosswise; doing so can make the header unstable.

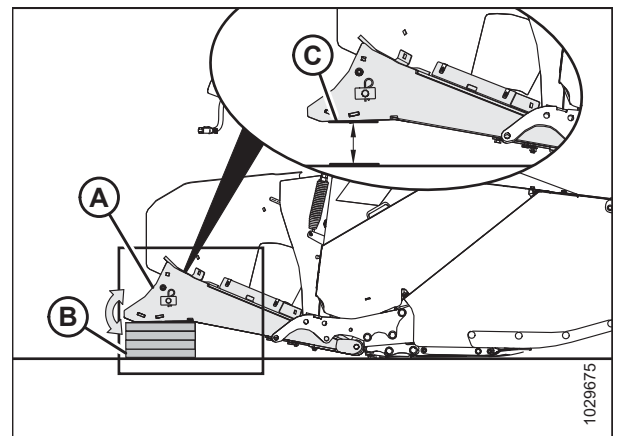


Figure 5.284: Header Support

ATTACHING AND DETACHING HEADERS

5. Remove the float engagement pin from hole (A) to disengage the float springs. Insert the float engagement pin into storage hole (B). Secure the engagement pin with the lynch pin.

IMPORTANT:

To prevent damage to the lift system when lowering the header lift linkages without a header or a weight box attached to the windrower, ensure that the float engagement pin is installed in storage hole (B) and **NOT** in engaged position (A).

6. Repeat the previous step for the other float engagement pin.

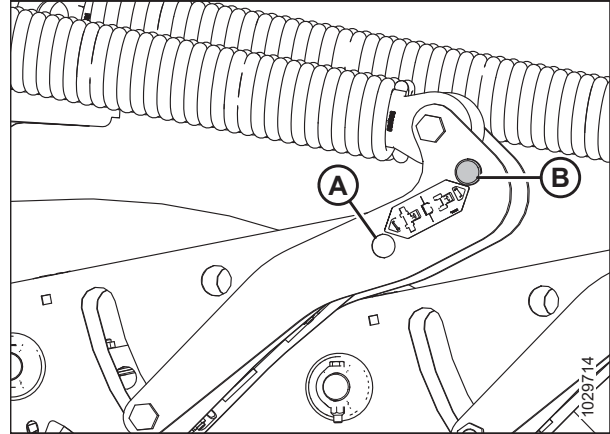


Figure 5.285: Float Linkage

7. Activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract the header lift cylinders.

IMPORTANT:

If the protective cover is installed on the exhaust stack, remove it before starting the engine.

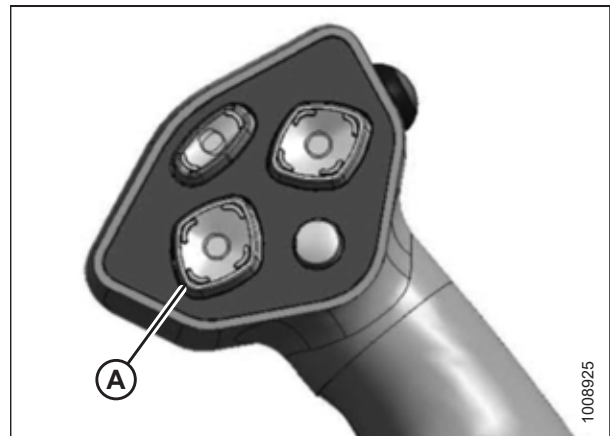


Figure 5.286: Ground Speed Lever

8. Remove pin (A) from the frame linkage and raise center-link (B) until the hook is above the attachment pin on the header. Replace pin (A) to hold the center-link in place.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

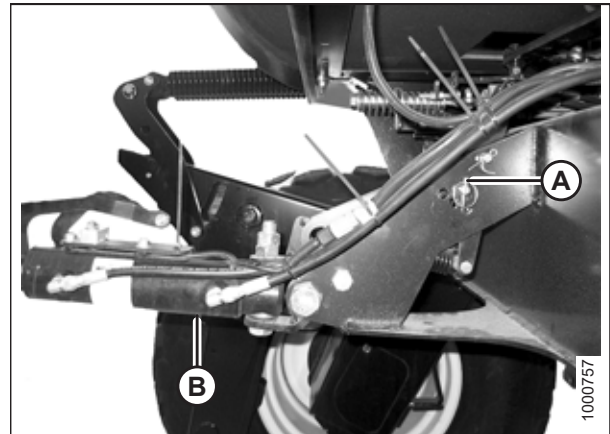


Figure 5.287: Hydraulic Center-Link without Self-Alignment Kit

ATTACHING AND DETACHING HEADERS

9. Slowly drive the windrower forward until windrower feet (A) enter header supports (B). Continue driving slowly forward until the feet engage the supports and the header is nudged forward.

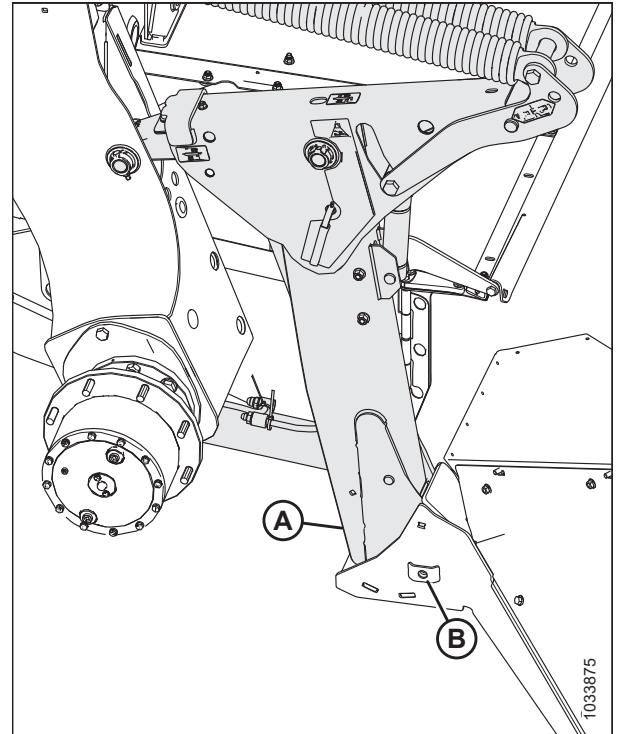


Figure 5.288: Header Support

10. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - HEADER TILT UP (A) to retract the center-link
 - HEADER TILT DOWN (B) to extend the center-link
11. Stop the engine, and remove the key from the ignition.

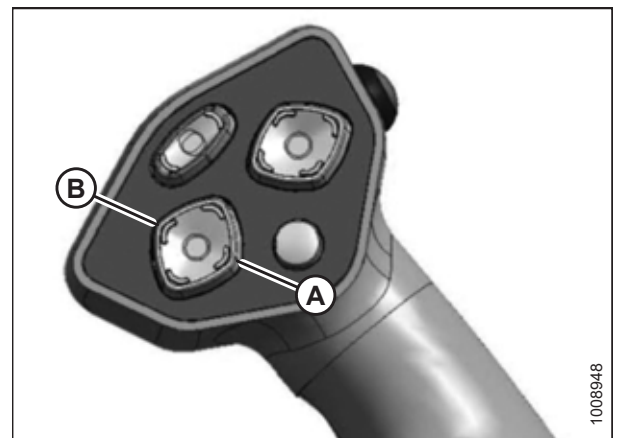


Figure 5.289: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

12. Push down on the rod end of link cylinder (A) until hook (B) engages and locks onto the header pin.

IMPORTANT:

The hook release must be down to enable the self-locking mechanism. If the release is open (up), manually push it down after the hook engages the header pin.

13. Check that center-link (A) is locked onto the header by pulling upward on the rod end of the cylinder.
14. Start the engine.

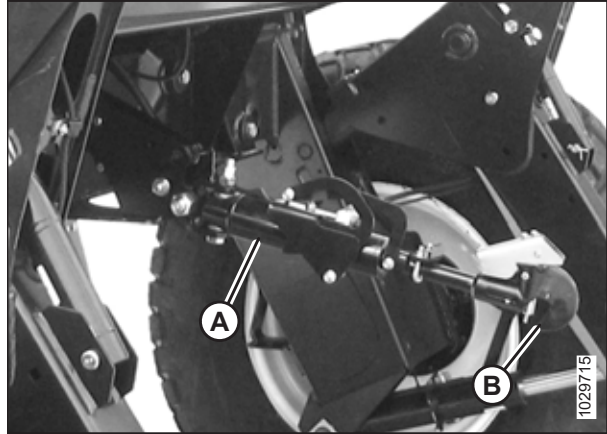


Figure 5.290: Hydraulic Center-Link

15. Press HEADER UP switch (A) to raise the header to its maximum height.
16. If one end of the header does **NOT** fully rise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds to fully phase the cylinders.

NOTE:

It may be necessary to repeat this procedure if there is air in the hydraulic system.



Figure 5.291: Ground Speed Lever

ATTACHING AND DETACHING HEADERS

17. To lower the safety props:
 - a. Pull lever (A) outward and rotate it toward the header to lower safety prop (B) onto the cylinder.
 - b. Repeat the previous step for the other safety prop.
 - c. Shut down the engine, and remove the key from the ignition.

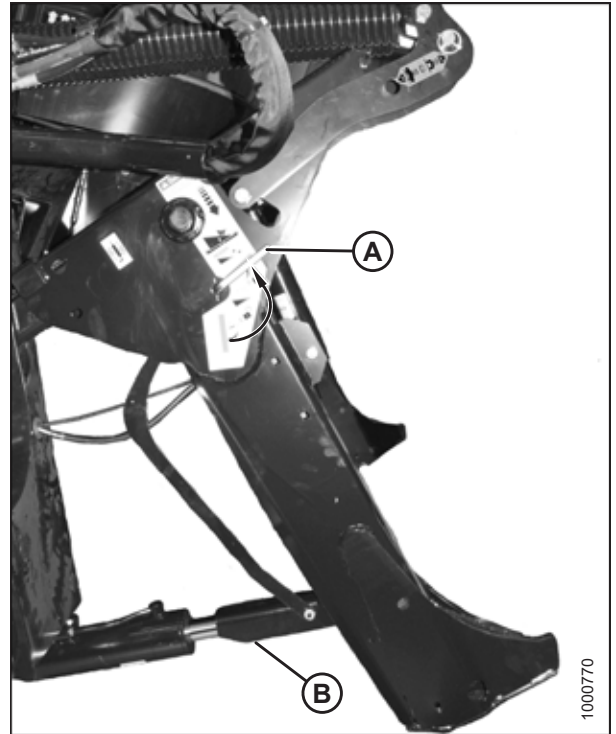


Figure 5.292: Safety Prop

18. Install clevis pin (A) through the support and the windrower foot. Secure the clevis pin with hairpin (B).

IMPORTANT:

Ensure that clevis pin (A) is fully inserted and that the hairpin is installed behind the bracket.

19. Repeat the previous step on the other side of the header.

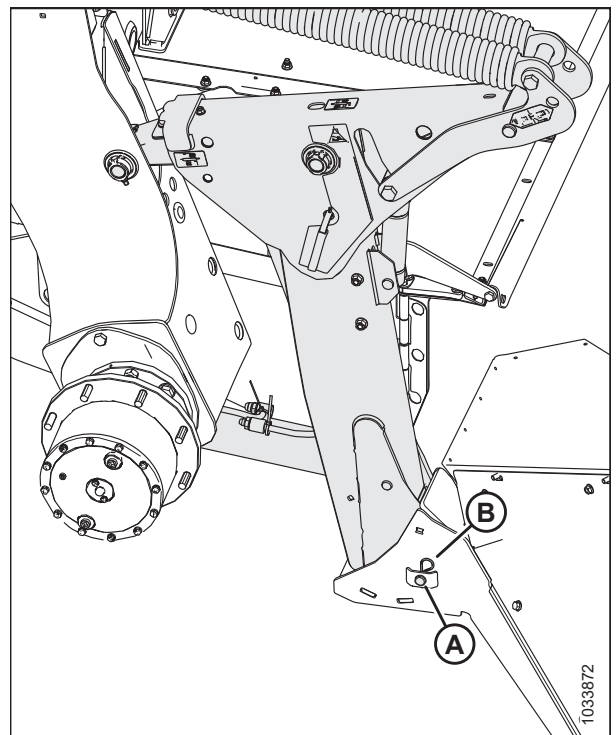


Figure 5.293: Header Support

ATTACHING AND DETACHING HEADERS

20. Remove the clevis pin from storage position (B) in the linkage and insert it into hole (A) to engage the float springs. Secure it with the hairpin. Repeat this step on the opposite float linkage.

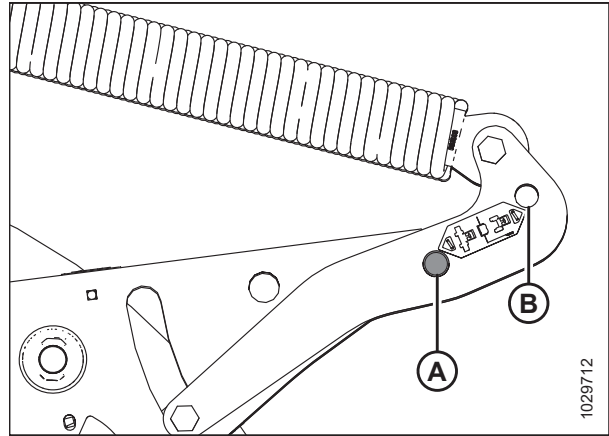


Figure 5.294: Header Float Linkage

21. Disengage the safety prop by turning lever (A) downwards until the lever locks into vertical position.
22. Repeat the previous step to disengage the other safety prop.

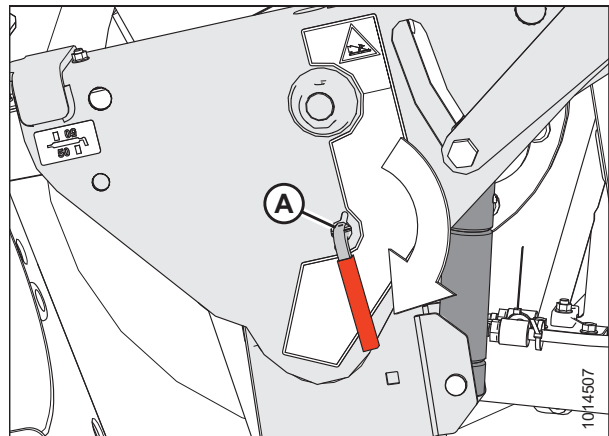


Figure 5.295: Safety Prop

23. Press HEADER DOWN switch (A) on the GSL to fully lower the header.
24. Shut down the engine, and remove the key from the ignition.

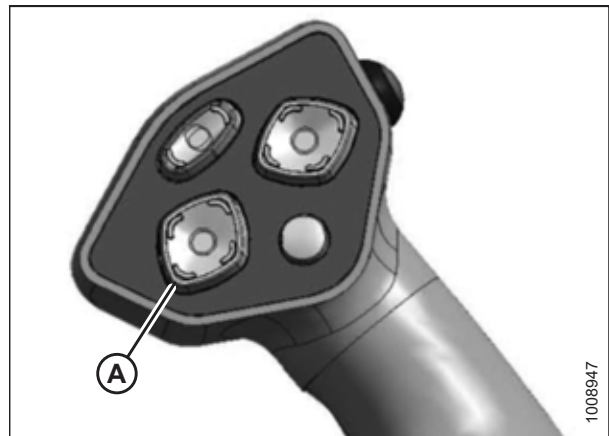


Figure 5.296: Ground Speed Lever

5.9.3 Attaching R2 Series Rotary Disc Header – Completing Hydraulic and Electrical Connections

Once the R216 Rotary Disc Header is attached to the M155 Self-Propelled Windrower, the hydraulic and electrical connections must be completed.

1. Connect the windrower's hydraulic hoses to the header's hydraulic hoses. Refer to the illustrations provided for guidance. The callout letters in the first illustration correspond to those in the second; (i.e: upper pressure hose [A] in the first illustration corresponds to upper pressure hose [A] in the second illustration):

- (A) Upper pressure hose
- (B) Lower pressure hose
- (C) Return hose
- (D) Case drain hose

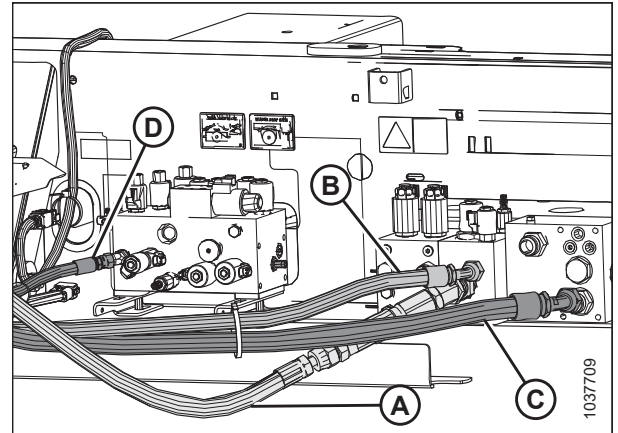


Figure 5.297: Windrower Hydraulic Hoses Connected to Hydraulic Block

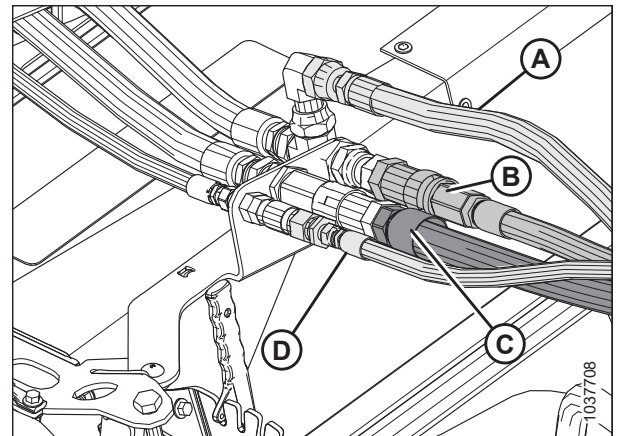


Figure 5.298: Windrower Hydraulic Hoses Connected to Header – View from Rear of Header

ATTACHING AND DETACHING HEADERS

2. Locate windrower adapter harness (A) on the windrower's center-link. Remove windrower adapter harness (A) from its storage location on center-link (B).
3. Connect harness (A) to header harness (C).

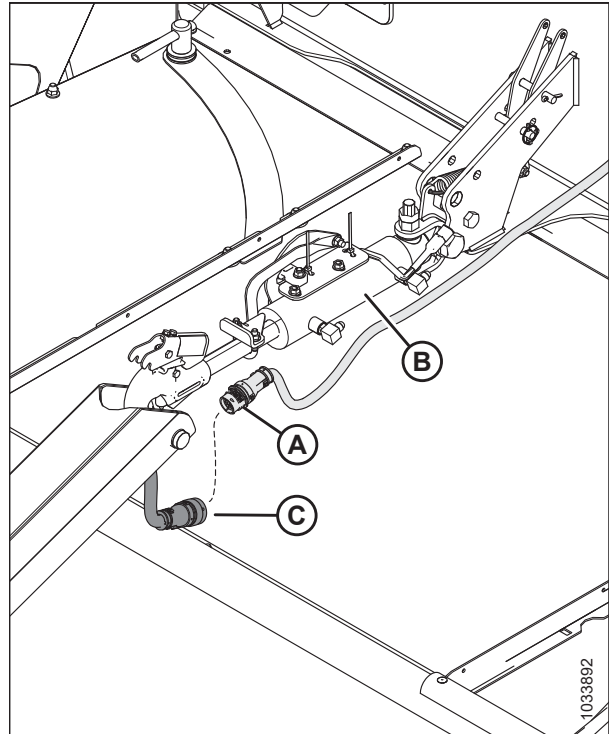


Figure 5.299: Windrower Adapter Harness

NOTE:

When the harness is not in use, secure harness (A) to the center-link tilt cylinder using strap (B).

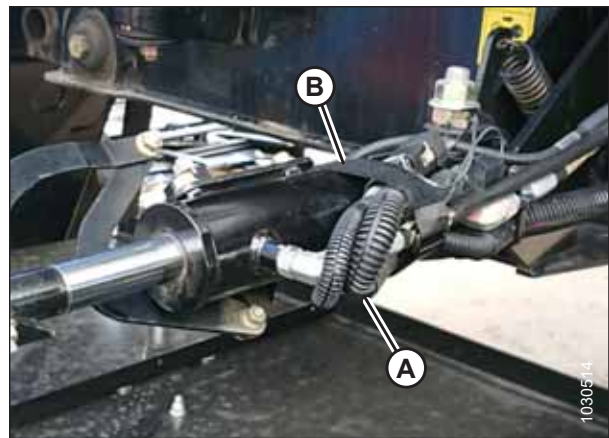


Figure 5.300: Adapter Harness Secured to Center-Link

5.10 Detaching R2 Series Rotary Disc Header

Follow the procedures below to safely detach the R216 Rotary Disc Header from an M155 Self-Propelled Windrower.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

ATTACHING AND DETACHING HEADERS

1. Press HEADER UP switch (A) to raise the header to its maximum height.
2. Rephase the cylinders if one end of the header does not rise fully:
 - a. Press and hold HEADER UP switch (A) until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. The cylinders are now phased.

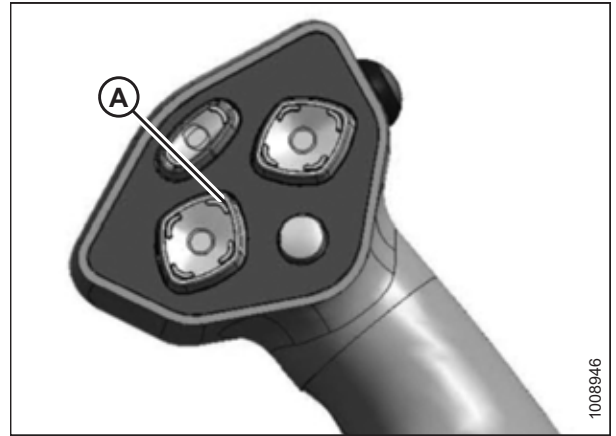


Figure 5.301: Ground Speed Lever (GSL)

3. Shut down the engine, and remove the key from the ignition.
4. To engage the safety props on the lift cylinders:
 - a. Pull lever (A) and rotate it toward the header to lower safety prop (B) onto the cylinder.
 - b. Repeat the previous step for the opposite lift cylinder.

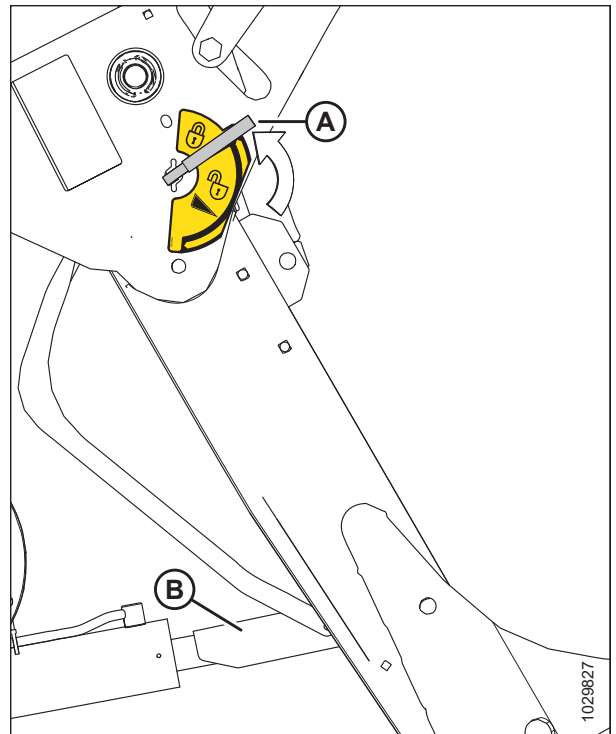


Figure 5.302: Safety Prop

ATTACHING AND DETACHING HEADERS

5. Remove the hairpin from the float spring clevis pin. Remove the clevis pin from hole (B) and insert it into storage hole (A) to disengage the float springs. Secure the clevis pin with the hairpin.
6. Repeat the previous step for the other float engagement pin.

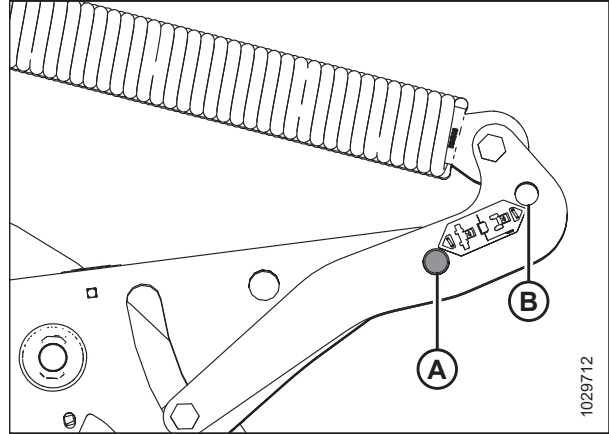


Figure 5.303: Header Float Linkage

7. Remove hairpin (B) from clevis pin (A). Remove clevis pin (B). Retain the pins.
8. Repeat the previous step on the other side of the header.

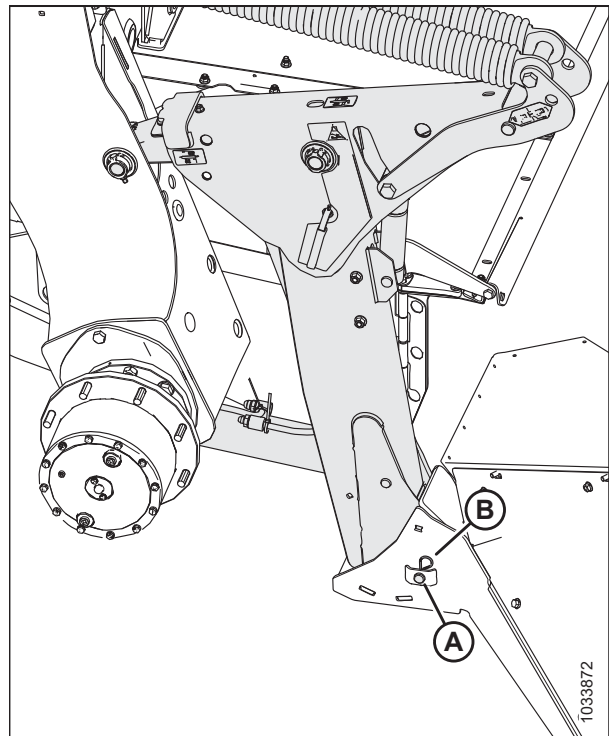


Figure 5.304: Header Support

ATTACHING AND DETACHING HEADERS

9. Disengage the safety props by turning lever (A) away from the header to raise the safety prop until the lever locks into vertical position. Repeat for the opposite cylinder.
10. Start the engine, choose a level area, and lower the header to the ground.

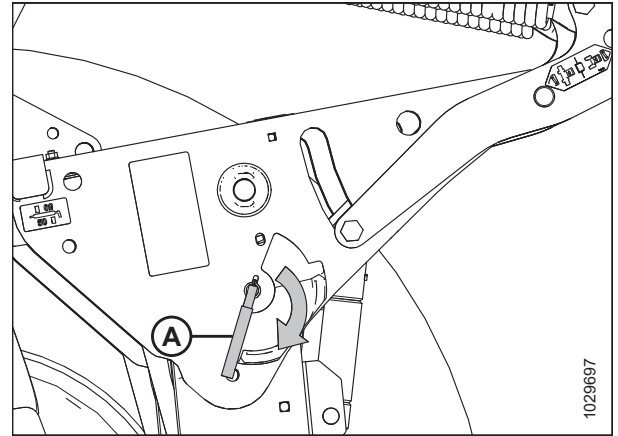


Figure 5.305: Safety Props

11. Press HEADER TILT UP (A) and HEADER TILT DOWN (B) cylinder switches on the GSL to release the load on the center-link cylinder.

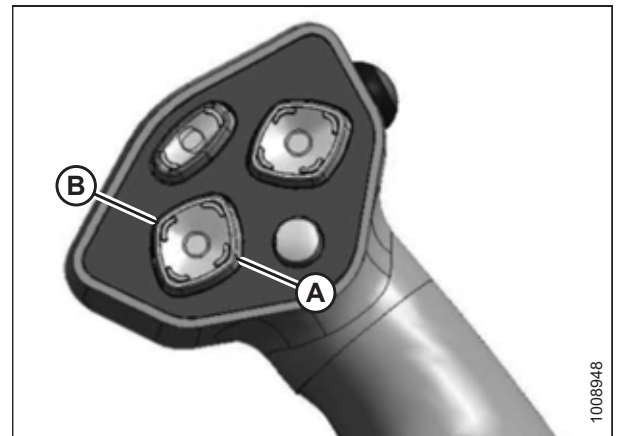


Figure 5.306: Ground Speed Lever

12. Shut down the engine, and remove the key from the ignition.
13. Lift hook release (C) and lift hook (B) off of the header pin.

NOTE:

If the optional center-link lift cylinder is installed, lift release (C) and then operate the link lift cylinder from the cab to disengage center-link (A) from the header.



Figure 5.307: Hydraulic Center-Link

ATTACHING AND DETACHING HEADERS

14. Disconnect upper pressure hose (A), lower pressure hose (B), return hose (C), and case drain hose (D) from the header.

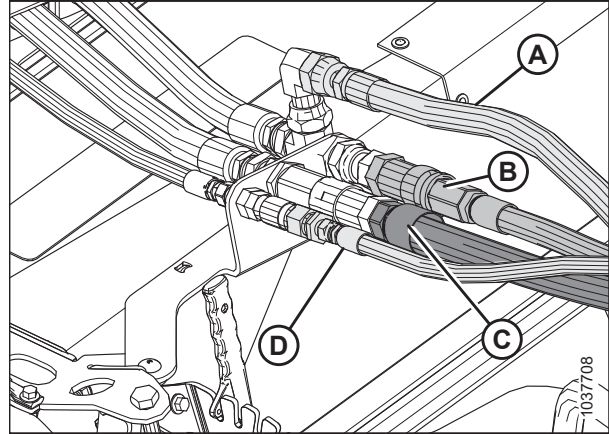


Figure 5.308: Windrower Hydraulic Hoses Connected to Header — View from Rear of Header

15. Pull hydraulic hose bundle (A) and the upper hydraulic pressure hose through the hose guide.
16. Open latch (B).
17. Fold hose bundle (A) and the upper hydraulic pressure hose (not shown) back as shown and secure them with latch (B).

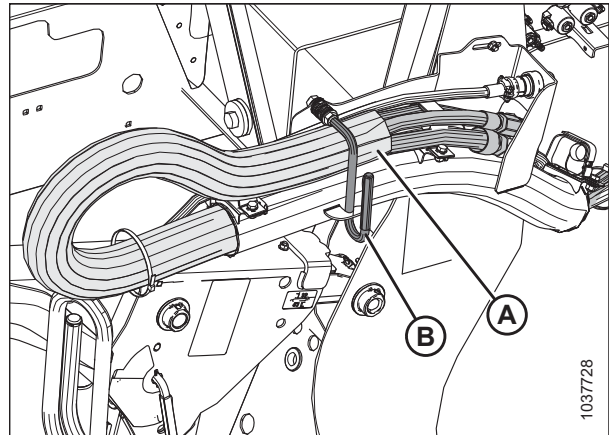


Figure 5.309: Hydraulic Hoses in Storage Position

ATTACHING AND DETACHING HEADERS

18. Disconnect windrower harness (A) from header harness (C). Install the protective caps on each connector.
19. Store harness (A) on center-link (B) with the attached straps (not shown).
20. Slowly back the windrower away from the header.

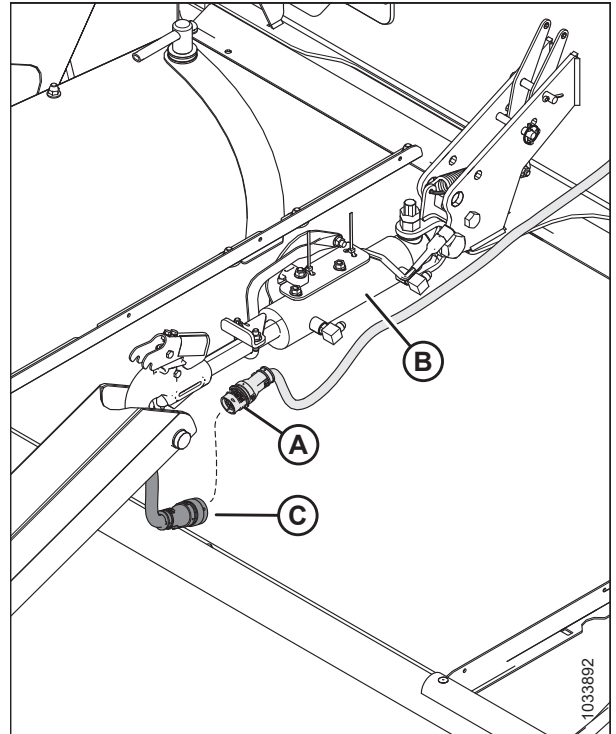


Figure 5.310: Windrower Harness

21. Insert clevis pin (B) into boot (C) as shown. Secure the clevis pin with hairpin (A).
22. Repeat the previous step on the other side of the header.

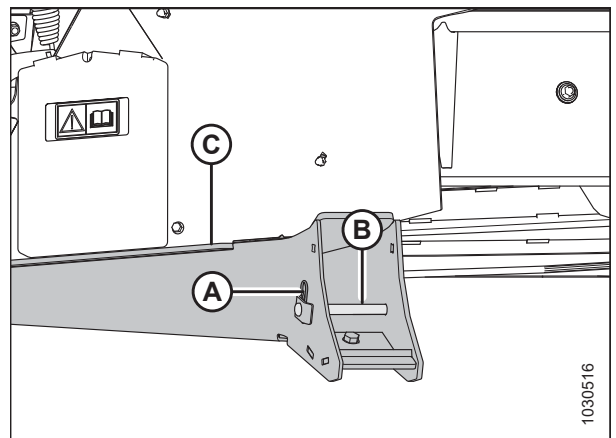


Figure 5.311: Header Support

Chapter 6: Maintenance and Servicing

This chapter contains the information necessary to perform routine maintenance and occasional servicing tasks on the windrower. The word “maintenance” refers to scheduled tasks that help the windrower operate safely and effectively; “service” refers to tasks that must be performed when a part needs to be repaired or replaced. For advanced service procedures, contact your Dealer.

6.1 Maintenance Schedule

The maintenance schedule specifies the maintenance procedures needed to keep the windrower in excellent operating condition, and the operating hours at which those procedures should be performed.

Regular maintenance is the best insurance against early wear and untimely breakdowns. Follow the provided maintenance schedule to maximize the service life of the windrower.

Record the windrower’s serial number here for future copies of this record:

Windrower Serial Number: _____

Combine this record with the record in the header operator’s manual. Make copies of this page to continue the record.

For detailed instructions, refer to the various procedures in this chapter. Use the fluids and lubricants specified in [9.2 Recommended Fuel, Fluids, and Lubricants, page 531](#).

Service intervals: The recommended service intervals are specified in terms of the windrower’s hours of operation or as a period of elapsed time; service the windrower at whichever interval occurs first.




IMPORTANT:

The recommended intervals are based on typical operating conditions. Service the machine more often if it is being operated under adverse conditions (for example: severe dust, or handling extra-heavy loads).

MAINTENANCE AND SERVICING

 **CAUTION**

When performing maintenance procedures, follow all of the safety instructions provided in *1 Safety, page 1*.

	Hour meter reading																			
	Service date																			
	Serviced by																			
First use	Preseason or Annual. For instructions, refer to <i>4.3.3 Preseason Checks / Annual Service, page 158</i> .																			
Action	✓ Check	⬇ Lubricate	▲ Change	☼ Clean																
First Hour³⁵																				
✓	Check drive wheel nuts torque. For instructions, refer to <i>Tightening Drive Wheel Nuts, page 487</i> .																			
First 5 Hours³⁵																				
✓	Check A/C compressor belt tension. For instructions, refer to <i>Tensioning Air Conditioner Compressor Belt, page 439</i> .																			
✓	Check caster wheel nuts torque. For instructions, refer to <i>Tightening Caster Wheel Hardware, page 494</i> .																			
✓	Check caster wheel anti-shimmy dampener bolts torque. For instructions, refer to <i>Tightening Caster Wheel Anti-Shimmy Dampeners, page 500</i> .																			
✓	Check walking beam width adjustment bolts torque. For instructions, refer to <i>4.3.7 Adjusting Caster Tread Width, page 174</i> .																			
First 10 Hours³⁵																				
✓	Check walking beam width adjustment bolts torque. For instructions, refer to <i>4.3.7 Adjusting Caster Tread Width, page 174</i> .																			
✓	Check neutral adjustment ³⁶ .																			

35. Begins from the first use of the machine.

36. Dealer-adjusted.

MAINTENANCE AND SERVICING

Every 10 Hours or Daily ³⁵												
✱	Clean A/C condenser ³⁷ . For instructions, refer to <i>Cleaning Cooler Box Components, page 432</i> .											
✱	Clean charge air cooler. For instructions, refer to <i>Cleaning Cooler Box Components, page 432</i> .											
✓	Check engine oil level ³⁷ . For instructions, refer to <i>Checking Engine Oil Level, page 400</i> .											
✓	Check engine coolant level. For instructions, refer to ³⁷ <i>Checking Coolant Level, page 424</i> .											
✓	Add fuel to fuel tank ³⁷ . For instructions, refer to <i>Filling Fuel Tank, page 163</i> .											
✓	Check fuel filter water trap ³⁷ . For instructions, refer to <i>Removing Water from Fuel System, page 421</i> .											
✱	Clean hydraulic oil cooler ³⁷ . For instructions, refer to <i>6.11.2 Hydraulic Oil Cooler, page 476</i> .											
✓	Check hydraulic oil level ³⁷ . For instructions, refer to <i>6.11.1 Checking and Filling Hydraulic Oil, page 474</i> .											
✱	Clean radiator ³⁷ . For instructions, refer to <i>Maintaining Engine Cooling Box, page 429</i> .											
✓	Check tire inflation pressure ³⁷ . For instructions, refer to <i>Inflating Drive Wheel Tire, page 486</i> .											

37. Records of daily maintenance are not required for warranty purposes. However, these records can be maintained, if desired.

MAINTENANCE AND SERVICING

First 50 Hours ³⁸													
✓	Inspect hose clamps: intake/radiator/heater/hydraulic ³⁹ . Refer to specific hose clamp section for instructions.												
✓	Check walking beam, with adjustment bolts. For instructions, refer to <i>4.3.7 Adjusting Caster Tread Width, page 174</i> .												
✓	Check caster wheel anti-shimmy dampener bolts (if installed). For instructions, refer to <i>Tightening Caster Wheel Anti-Shimmy Dampeners, page 500</i> .												
▲	Change main gearbox oil. For instructions, refer to <i>Changing Lubricant, page 436</i> .												
▲	Change wheel drive lubricant. For instructions, refer to <i>Changing Wheel Drive Lubricant, page 489</i> .												
▲	Change charge system oil filter. For instructions, refer to <i>Change Oil Filter, page 477</i> .												
▲	Change return oil filter. For instructions, refer to <i>Return Oil Filter, page 478</i> .												
Every 50 Hours													
✱	Clean cab fresh air intake filter. For instructions, refer to <i>Inspecting and Cleaning Fresh Air Intake Filter Element, page 391</i> .												
●	Lubricate caster pivots. For instructions, refer to <i>6.5.2 Lubrication Points, page 380</i> .												
●	Lubricate forked caster spindle bearings. For instructions, refer to <i>6.5.2 Lubrication Points, page 380</i> .												
✓	Check gearbox oil level. For instructions, refer to <i>Checking Lubricant Level and Adding Lubricant, page 435</i> .												
●	Lubricate top lift link pivots. For instructions, refer to <i>6.5.2 Lubrication Points, page 380</i> .												

38. Begins from first use of machine.

39. Hand-tighten these clamps unless otherwise noted.

MAINTENANCE AND SERVICING

Annually ^{40 41}												
✓	Check A/C blower. For instructions, refer to <i>Cycling Air Conditioning Compressor Coolant, page 159.</i>											
✓	Check antifreeze concentration. For instructions, refer to <i>Checking Engine Coolant Strength, page 423.</i>											
✓	Check battery charge. For instructions, refer to <i>Maintaining Batteries, page 442.</i>											
✓	Check battery fluid level. For instructions, refer to <i>Charging Batteries, page 443.</i>											
▲	Change fuel tank vent line filter. For instructions, refer to <i>Replacing Fuel Tank Vent Filter, page 411.</i>											
✓	Check steering linkages. For instructions, refer to <i>Checking Steering Link Pivots, page 384.</i>											
✓	Test the parking brake. For instructions, refer to <i>Testing Parking Brake, page 387.</i>											
Every 100 Hours or Annually ⁴¹												
*	Clean cab air return filter. For instructions, refer to <i>Cleaning Return Air Cleaner/Filter, page 394.</i>											
✓	Check cab suspension limit straps. For instructions, refer to <i>6.7 Cab Suspension Limit Straps, page 390.</i>											
Every 250 Hours or Annually ⁴¹												
▲	Change engine oil and filter. For instructions, refer to <i>Changing Engine Oil, page 401.</i>											
▲	Change engine air cleaner primary filter element. For instructions, refer to <i>Removing Primary Air Filter, page 405</i> and <i>Installing Primary Air Filter, page 407.</i>											
◆	Lubricate formed caster wheel hub bearings. For instructions, refer to <i>6.5.2 Lubrication Points, page 380.</i>											
✓	Check drive wheel lubricant. For instructions, refer to <i>Checking Wheel Drive Lubricant Level, page 487.</i>											

40. Begins from the first use of the machine.

41. It is recommended that annual maintenance be done prior to the start of the operating season.

MAINTENANCE AND SERVICING

Every 500 Hours or Annually ^{42 43}												
▲	Change fuel filters. For instructions, refer to <i>Maintaining Fuel Filters, page 412.</i>											
▲	Change gearbox lubricant. For instructions, refer to <i>Changing Lubricant, page 436.</i>											
▲	Change charge system and return oil filters. For instructions, refer to <i>6.11.4 Changing Hydraulic Oil Filters, page 477.</i>											
✓	Inspect safety systems. For instructions, refer to <i>6.6.2 Safety Systems, page 381.</i>											
Every 1000 Hours												
▲	Change wheel drive lubricant. For instructions, refer to <i>Changing Wheel Drive Lubricant, page 489.</i>											
1500 Hours or Every Two Years ⁴²												
▲	Change hydraulic oil. For instructions, refer to <i>6.11.3 Changing Hydraulic Oil, page 476.</i>											
▲	Change engine crank case filter. For instructions, refer to <i>Replacing Engine Oil Filter, page 402.</i>											
5000 hours or every two years ⁴²												
✓	Check engine valve tappet clearance.											

6.2 Preparing for Servicing

Several preliminary tasks must be performed before the windrower can be safely maintained or serviced.

WARNING

To prevent injury, before servicing the windrower or opening the drive covers:

- Fully lower the header. If you intend to service the windrower with the header in the raised position, engage the header lift cylinder safety props.
- Disengage the header drive.
- Stop the engine, and remove the key from the ignition.
- Wait for all moving parts to come to rest.

42. Begins from the first use of the machine.

43. It is recommended that annual maintenance be done prior to start of operating season.

6.3 Engine Compartment Hood

The engine compartment hood has two open positions. The lowest is for general maintenance such as checking and adding fluid and servicing the cooling box. The highest position provides full access to the engine compartment.

6.3.1 Opening Hood – Lower Position

Moving the windrower's hood to the lower open position allows you to perform general maintenance tasks.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Locate latch (A) behind the grill. Lift the latch to release the hood.
3. Raise the hood until strap (B), which should be looped under hooks (C) and (D), stops at approximately a 40° angle.
4. Remove strap (B) from hook (C) and allow the hood to rise slightly farther.

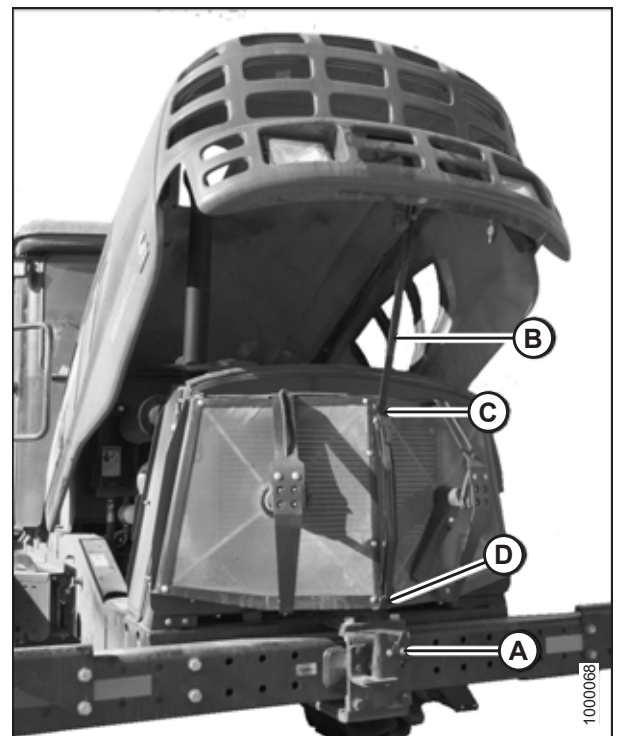


Figure 6.1: Hood Open – Lower Position

6.3.2 Closing Hood – Lower Position

Once your maintenance tasks are complete, close the hood again before operating the windrower.

1. Grasp the strap at location (B). Loop the strap under upper hook (C).

IMPORTANT:

Failure to hook the strap may result in it becoming entangled with the screen cleaners or the latch.

2. Pull down on the strap, grasp the hood when it comes within reach, and then lower it until the hood engages latch (A).

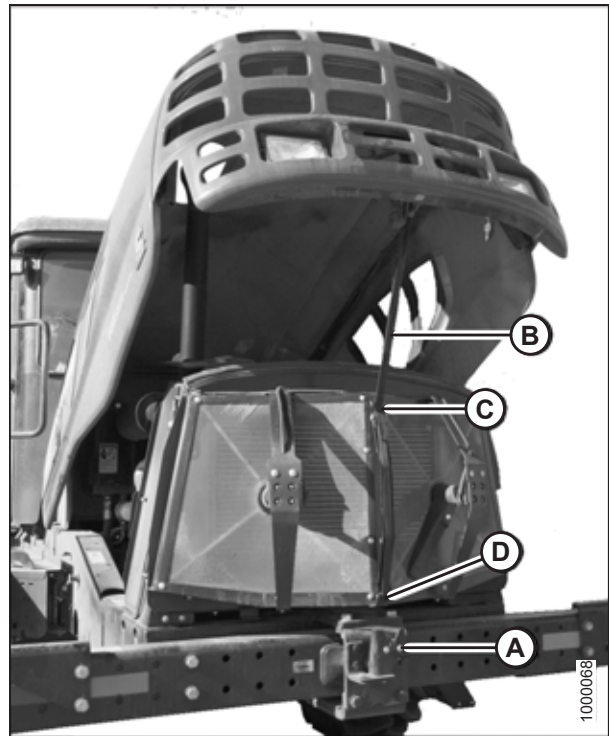


Figure 6.2: Hood Open (Lower Position)

6.3.3 Opening Hood – Highest Position

To perform extended maintenance or service procedures, the hood should be at its highest position.

⚠ DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.

MAINTENANCE AND SERVICING

2. Locate latch (A) behind the grill and lift the latch to release the hood.
3. Raise the hood until strap (B), which should be looped under hooks (C) and (D), stops.
4. Remove strap (B) from hook (C) and allow the hood to rise slightly farther.
5. Remove the strap from hook (D) and allow the hood to rise fully.

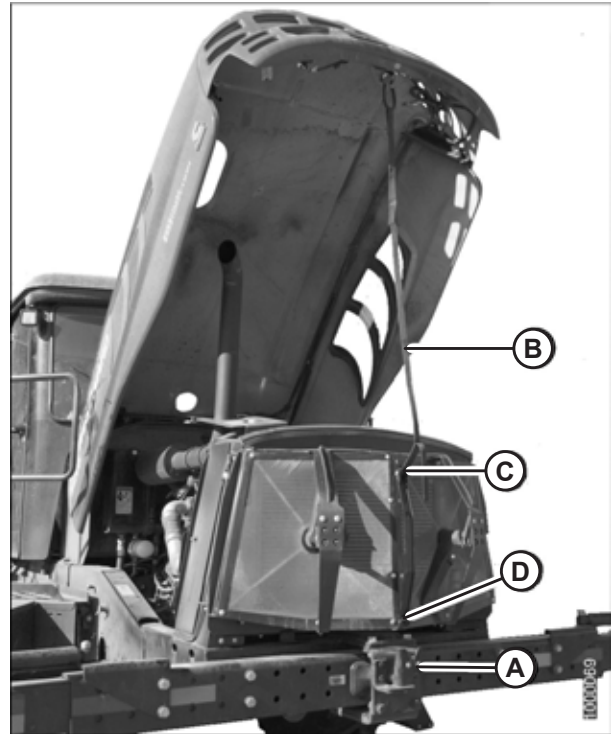


Figure 6.3: Hood Open – Highest Position

6.3.4 Closing Hood – Highest Position

Once your maintenance or service tasks are complete, close the hood again before operating the windrower.

1. Pull down on strap (B) and loop it under lower hook (D).
2. Grasp strap (B) and loop it under upper hook (C).

IMPORTANT:

Failure to hook the strap may result in it becoming entangled with the screen cleaners or the latch.

3. Pull down on strap (B), grasp the hood when it is within reach, and lower it until the hood engages latch (A).

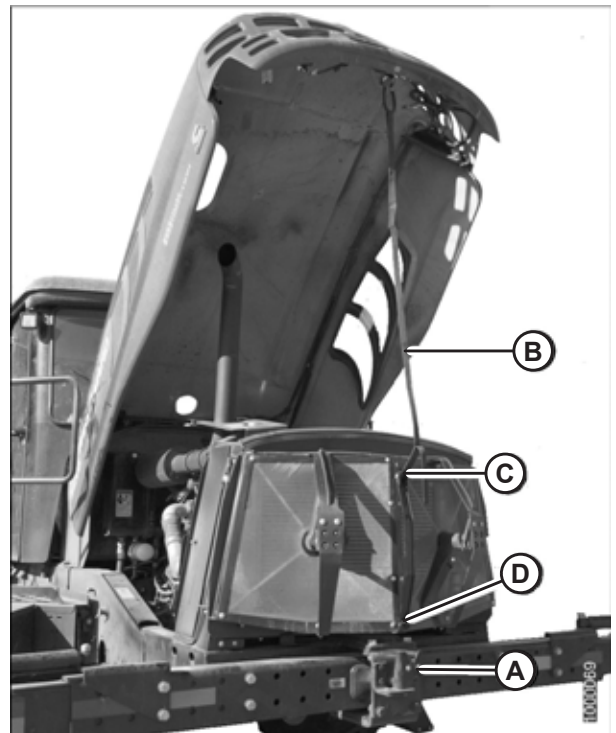


Figure 6.4: Hood Open – Highest Position

6.4 Maintenance Platforms

Swing-away platforms and stairs are provided on both sides of the windrower. These allow access to the operator's station and the engine bay. The platforms can be swung away from the windrower to allow access to the hydraulic system and the batteries.

The maintenance platforms have three positions:

- Closed position
- Open – standard position
- Open – major servicing position

6.4.1 Opening Platforms – Standard Position

The windrower platforms can be opened to access windrower components such as batteries and hydraulic components. This procedure describes how to open the cab-forward left platform to the standard position. Follow the same procedure to open the right platform.

The platforms can also be opened to a wider, major service position. For instructions on opening the platform to the major service position, refer to [6.4.3 Opening Platforms – Major Service Position, page 376](#).

CAUTION

Do NOT stand on an unlocked platform. It is unstable and may cause you to fall.

- Left cab-forward platform (A)
- Right cab-forward platform (B)

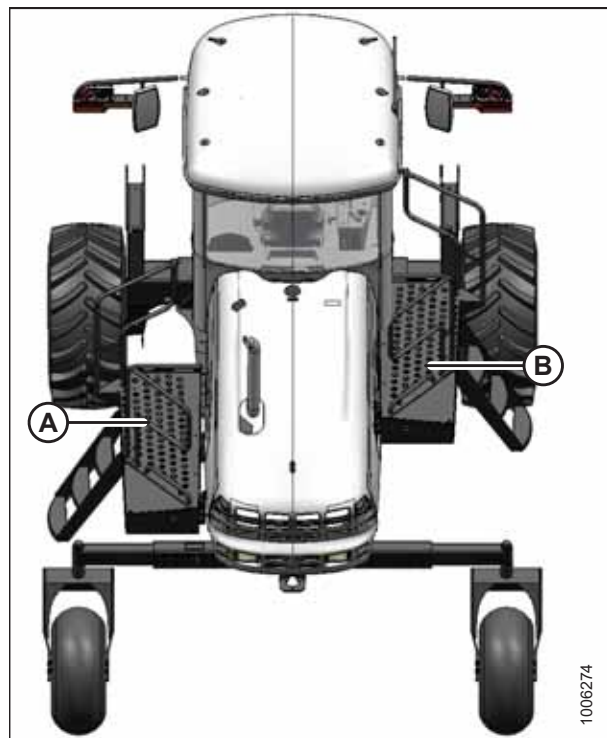


Figure 6.5: Platforms

MAINTENANCE AND SERVICING

1. Push latch (A) and pull platform (B) toward the walking beam until it stops and the latch is engaged in the open position.

NOTE:

Ensure that the platform is latched before standing on it.

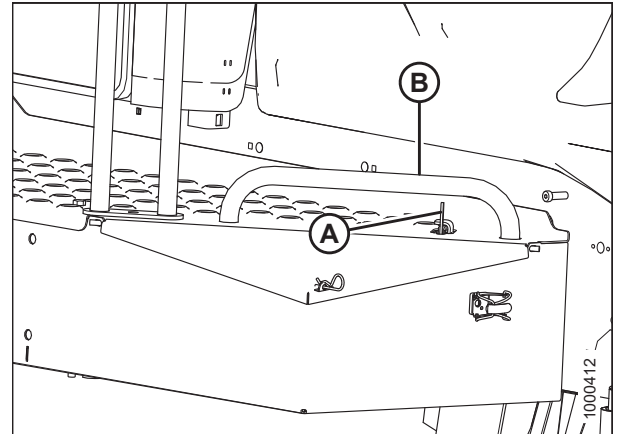


Figure 6.6: Platform Latch

6.4.2 Closing Platforms – Standard Position

Once your maintenance or service tasks are complete, the windrower's platform will need to be closed.

CAUTION

Do NOT stand on an unlocked platform. It is unstable and may cause you to fall.

- Left cab-forward platform (A)
- Right cab-forward platform (B)

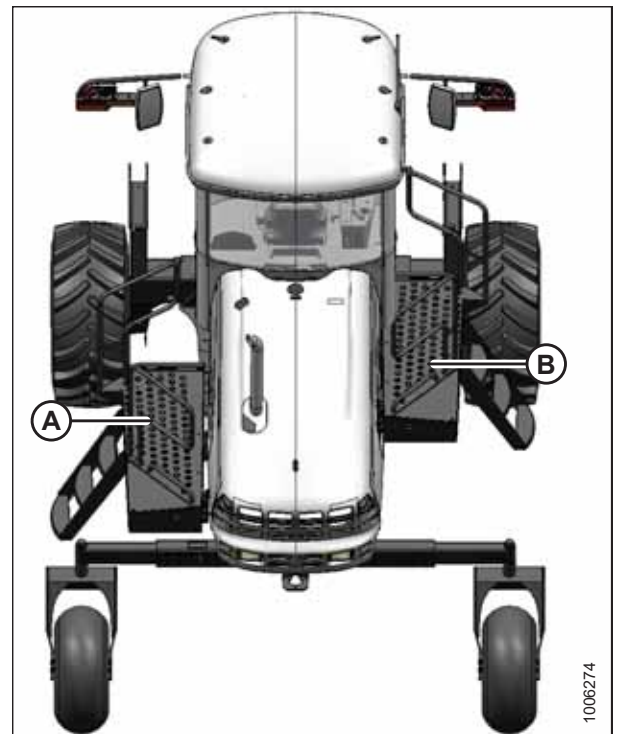


Figure 6.7: Platforms

MAINTENANCE AND SERVICING

1. If the platform is latched in the open position, push latch (A) to unlock it.
2. Grasp handle (B) on the platform and push it forward until it stops and latch (A) is engaged.

NOTE:

Ensure that the platform is latched properly before standing on it.

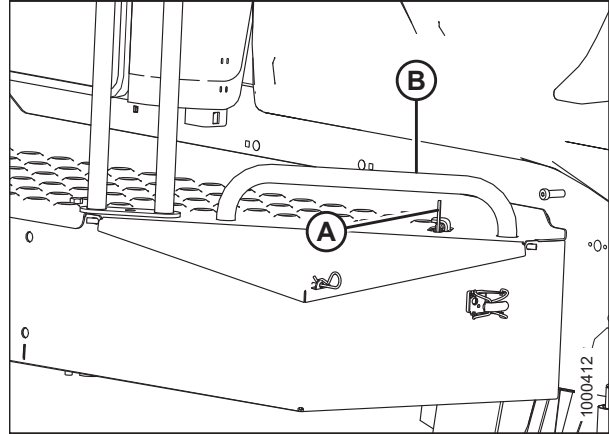


Figure 6.8: Platform Latch

6.4.3 Opening Platforms – Major Service Position

To improve access to the hydraulic system and the battery, the platforms can be swung away from the windrower into the major service position. This procedure applies to both platforms.

CAUTION

Do NOT stand on an unlocked platform. It is unstable and may cause you to fall.

- Left cab-forward platform (A)
- Right cab-forward platform (B)

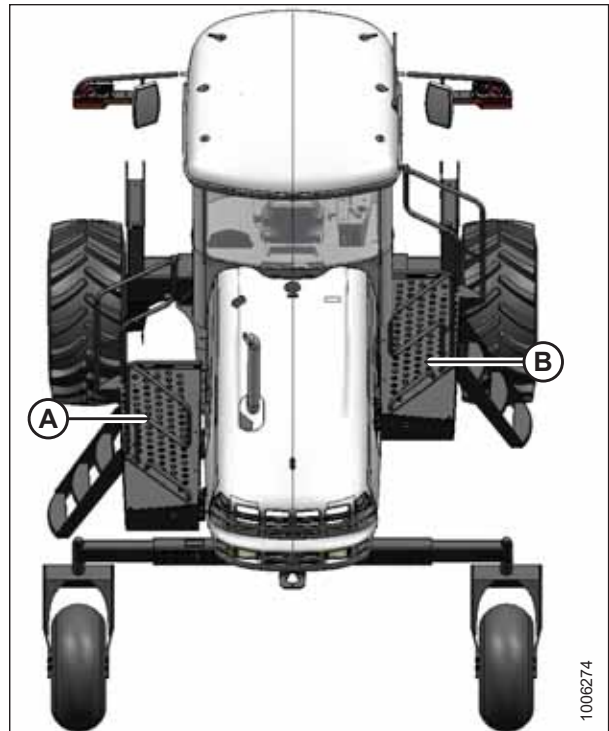


Figure 6.9: Platforms

1. Open the hood. For instructions, refer to [6.3.1 Opening Hood – Lower Position, page 371](#).

IMPORTANT:

If you do not open the hood, it will be damaged when the platform is moved.

MAINTENANCE AND SERVICING

2. Unlock latch (A) and move platform (B) toward the open position. Do **NOT** lock the platform in the fully aft position.

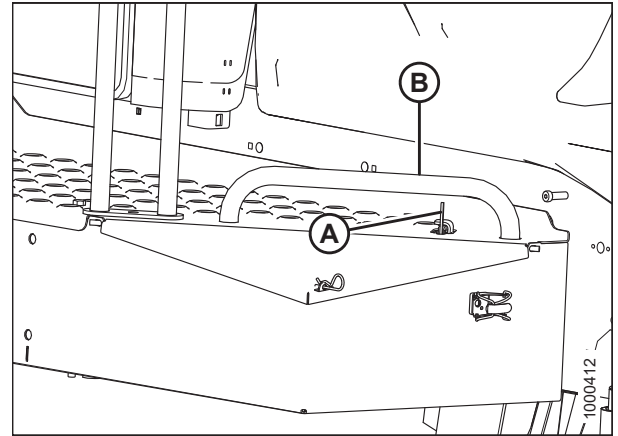


Figure 6.10: Platform Latch

3. Remove the nut and bolt securing link (A) to the frame. Swing link (A) out of the way.
4. Pull the front cab-forward end of the platform away from the frame while moving it toward the walking beam. The aft corner of platform (B) should project slightly into the engine bay when the platform is in place.

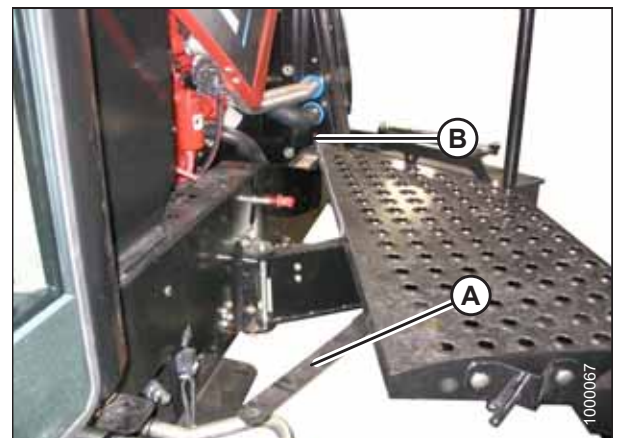


Figure 6.11: Platform

6.4.4 Closing Platforms – Major Service Position

Once your maintenance or service tasks are complete, the windrower's platform will need to be closed.

CAUTION

Do **NOT** stand on an unlocked platform. It is unstable and may cause you to fall.

MAINTENANCE AND SERVICING

1. Swing link (A) all the way forward.
2. Push front cab-forward end (B) of the platform towards the frame while moving the platform forward.
3. Position link (A) on the bracket and install the bolt and nut. Tighten the hardware just enough, while still allowing the link to swivel on the bracket.

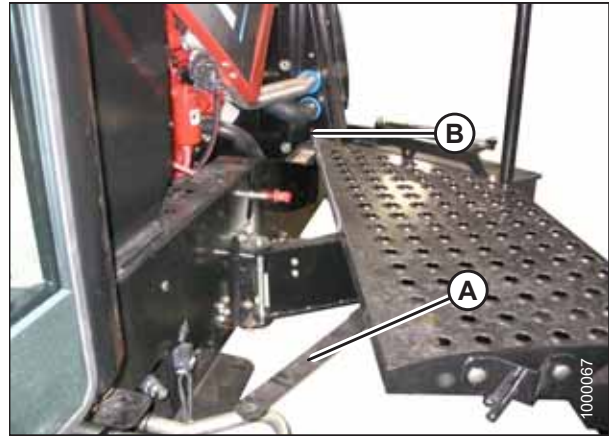


Figure 6.12: Platform

4. Move platform (B) cab-forward until it stops and engages latch (A).
5. Close the hood. For instructions, refer to [6.3.2 Closing Hood – Lower Position, page 372](#).

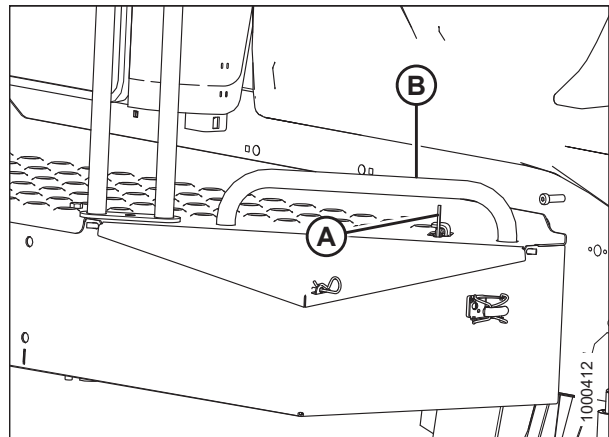


Figure 6.13: Platform Latch

6.5 Windrower Lubrication

Grease point decals can be recognized by the presence of a grease gun silhouette and a number. The numbers indicate how frequently in terms of windrower operating hours the grease points should receive lubrication.

WARNING

Before servicing the windrower or opening the drive covers, familiarize yourself with the procedures provided in [1 Safety, page 1](#).

Log the windrower's hours of operation and use the Maintenance Checklist provided in this manual to keep a record of performed maintenance. Refer to [6.1 Maintenance Schedule, page 365](#) for more information.

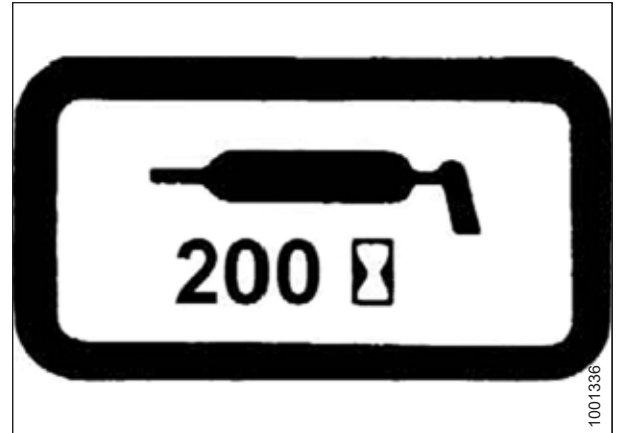


Figure 6.14: Lubrication Interval Decal

6.5.1 Lubricating Windrower

Whenever windrower components receive grease, this procedure should be followed.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. To learn what type of grease to inject into a fitting, refer to [9.2.3 Lubricants, Fluids, and System Capacities, page 532](#).
2. To avoid injecting dirt and grit, wipe the grease fitting with a clean cloth before injecting grease.
3. Inject grease through the fitting using a grease gun until grease overflows the fitting, except where advised to do otherwise.
4. Leave a blob of excess grease on the fitting. This will help keep contamination from entering the fitting.
5. Replace any loose or broken fittings immediately.
6. If a grease fitting will **NOT** take grease, remove the fitting and clean it thoroughly. Replace the fitting if necessary.

6.5.2 Lubrication Points

These are the points on the windrower which will need to receive regular lubrication. Refer to the Maintenance Schedule to learn how often to apply grease to these areas.

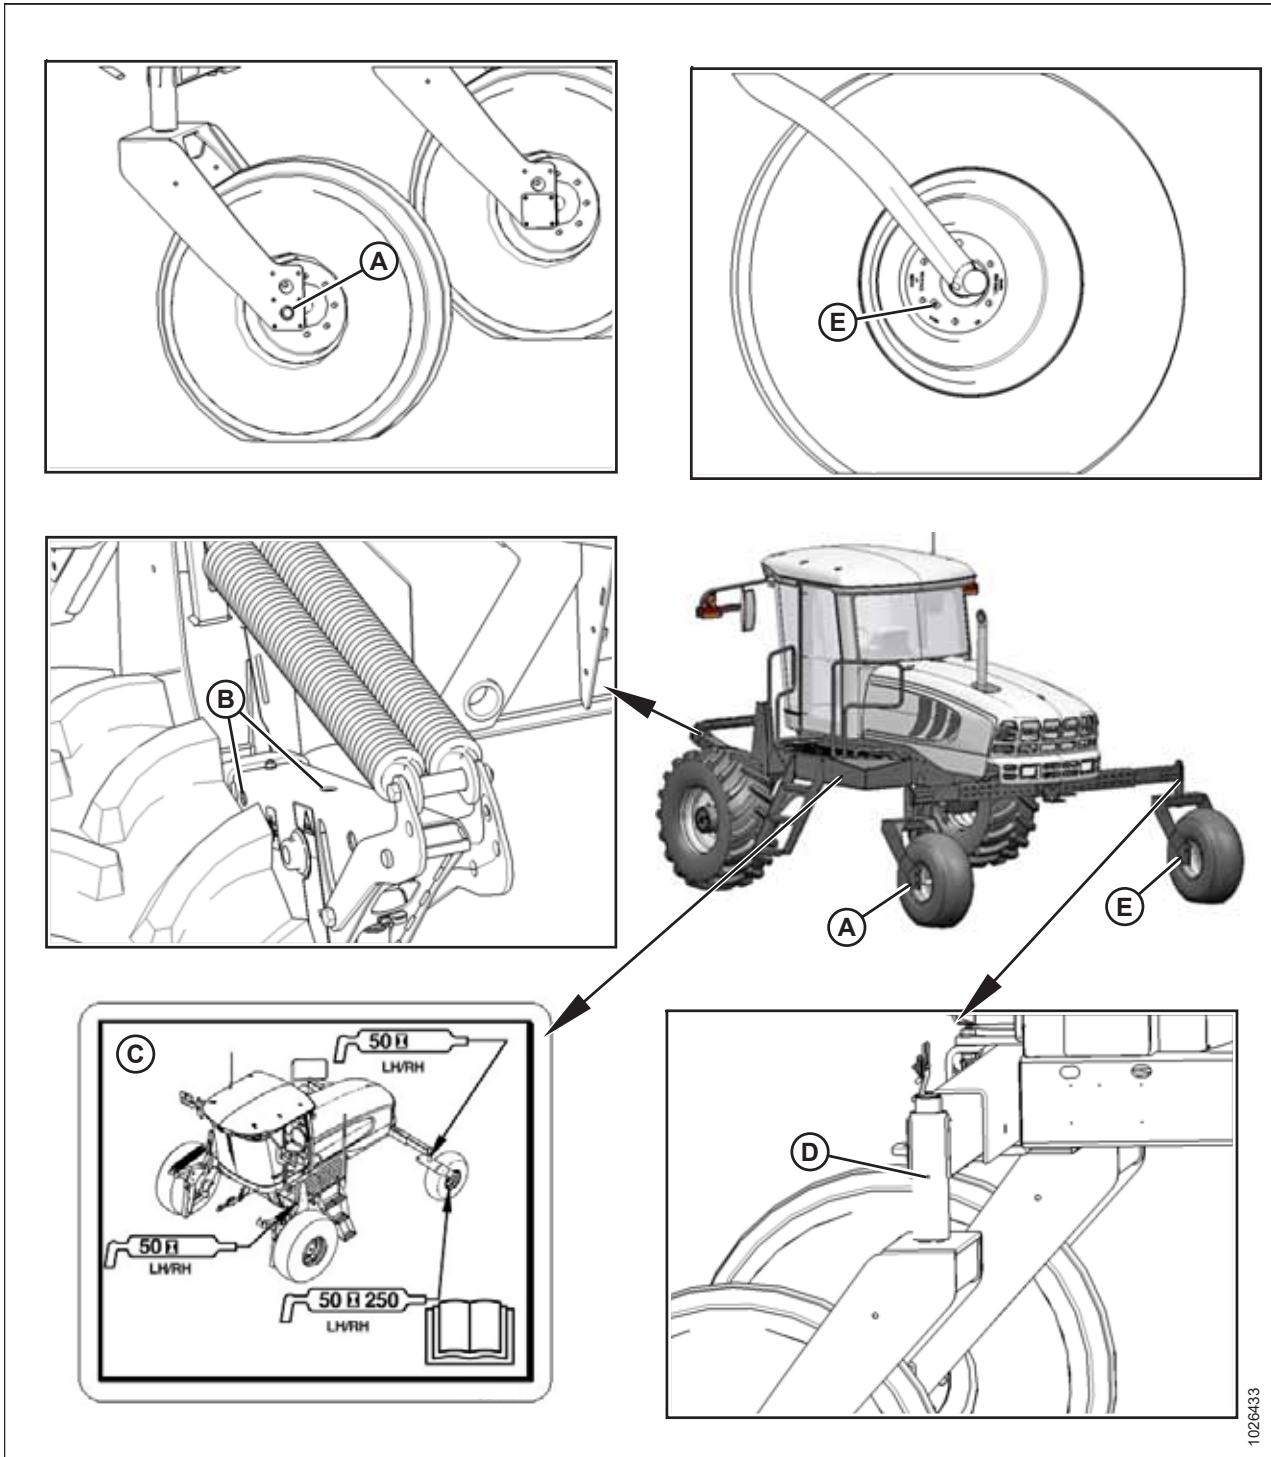


Figure 6.15: Lubrication Points

- A - Forked Caster Wheel Bearing (Two Places) (Outer – Both Wheels)
- B - Top-Link (Two Places) (Both Sides)
- C - Lubrication Decal (MD #183411)
- D - Caster Pivot (Both Sides)
- E - Forked/Formed Caster Wheel Bearing (Two Places) (Inner – Both Wheels) (50 Hrs/250 Hrs)

6.6 Operator's Station

Several of the safety features in the windrower operator's station require maintenance from time to time.

6.6.1 Seat Belts

Seat belts are an important component of the windrower's operator safety system. Follow this procedure to ensure that the seat belts are functioning properly.

- Keep sharp objects and other potential sources of damage away from the safety belts.
- Regularly inspect the belts, buckles, retractors, tethers, slack take-up system, and mounting bolts for damage.
- Ensure that the bolts on the seat bracket and mounting plate are secure.
- Replace any damaged or worn part immediately.
- If the belt has a cut, replace it: a damaged belt may not be able to safely restrain the operator.
- Keep the seat belts clean and dry. Clean the belts with a solution of soap and warm water only. Do **NOT** use bleach or dye on the belts, as these may weaken the material.

6.6.2 Safety Systems

Perform these checks on the operator presence and engine lock-out systems according to the interval specified in the maintenance schedule.

Checking Operator Presence System

The operator presence system is a safety feature designed to deactivate or alert selected windrower systems when the Operator is not seated at the operator's station. Perform these checks to ensure that the operator presence system is functioning correctly. Repairs to this system must be performed by a MacDon Dealer.



DANGER

Ensure that all bystanders have cleared the area.



CAUTION

Park the windrower on a flat, level surface. Lower the header to the ground, put the ground speed lever into the N - DETENT position, and center the steering wheel in the locked position. Wait for the cab display module (CDM) to beep and display an "In Park" message to confirm that the parking brake is engaged.

1. While the windrower engine is running, place the ground speed lever (GSL) in the NEUTRAL position and turn the steering wheel until it locks.
2. Engage the header drive.
3. Stand up. After approximately 5 seconds, the header should shut down. If the header does **NOT** shut down, the operator presence system requires adjustment. Contact your MacDon Dealer for more information.
4. To restart the header, move the HEADER DRIVE switch to the OFF position and then back to the ON position.
5. While the engine is running, put the GSL into the N-DETENT position. For instructions, refer to [3.17 Windrower Controls, page 59](#).
6. Swivel the operator's station, but do **NOT** lock it into position.
7. Move the GSL out of the N-DETENT position. The engine should shut down and the message LOCK SEAT BASE → CENTER STEERING WHEEL → NOT IN NEUTRAL will appear on the cab display module (CDM).

MAINTENANCE AND SERVICING

- Swivel the operator's station and lock it in place. The CDM display should return to normal. If the engine does **NOT** shut down, the seat position switches require adjustment. Contact your MacDon Dealer for more information.
- While the windrower is traveling at a speed less than 8 km/h (5 mph), stand up. The CDM will display the message NO OPERATOR on the upper line and ENGINE SHUT DOWN 5...4...3...2...1...0 on the lower line, and will emit a steady tone. When the count reaches 0, the engine should shut down. If the engine does **NOT** shut down, the operator presence system requires adjustment. Contact your MacDon Dealer for more information.
- While the windrower is traveling at a speed greater than 8 km/h (5 mph), stand up. The CDM should beep once and display the message NO OPERATOR on the lower line. If this does **NOT** occur, the operator presence system requires adjustment. Contact your MacDon Dealer for more information.

Checking Engine Interlock

The windrower's engine interlock ensures that the engine cannot be started while the header drive is engaged. Follow these steps to ensure that the engine interlock is working correctly.

DANGER

Ensure that all bystanders have cleared the area.

- With the engine shut down and the header drive switch in the ON position, try to start the engine. If the engine turns over, the system requires adjustment. Contact your MacDon Dealer for more information.
- With the engine shut down, the steering wheel **NOT** locked in the center position, and the ground speed lever (GSL) in the NEUTRAL position, but **NOT** in the N-DETENT position, try to start the engine. The cab display module (CDM) will display the message NOT IN NEUTRAL on the upper line and the message CENTER STEERING WHEEL on the lower line, and will emit a repeating beep; the engine should **NOT** start. If the engine starts, the system requires adjustment. Contact your MacDon Dealer for more information.

A properly functioning system should operate as follows:

- The engine should start **ONLY** when the GSL is in the N-DETENT position, the steering wheel is centered in the locked position, the seat base is latched in either the engine-forward or the cab-forward direction, and the header drive switch is in the OFF position. The parking brake should remain engaged and the machine should **NOT** move after the engine starts.
- When the engine is running and the GSL is out of the N-DETENT position, the steering wheel should **NOT** lock.
- If the engine is running and the steering wheel is centered, the windrower should **NOT** move when the GSL is pulled straight out of the N-DETENT position, either in forward or reverse.

6.6.3 Ground Speed Lever Adjustments

The windrower's ground speed lever (GSL) may require adjustments from time to time to ensure that the force required to move it into various positions is acceptable.

Adjusting Ground Speed Lever Lateral Movement

It should require little force to move the ground speed lever (GSL) into the N-DETENT position. If this is not the case, follow this procedure to adjust the GSL.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, stop the engine and remove the key from the ignition before leaving the operator's seat.

In the cab, adjust the lateral pivot resistance as follows:

MAINTENANCE AND SERVICING

1. Remove five screws (A) securing control panel (B) to the console. Remove the control panel.

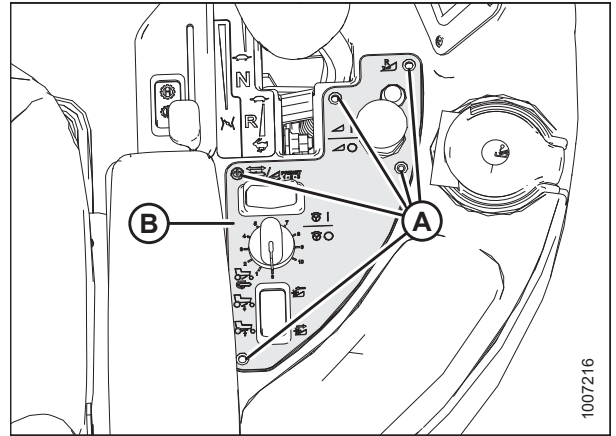


Figure 6.16: Control Panel

2. Loosen jam nut (A).
3. Turn nut (B) to either tighten or loosen the pivot. The nut should be tightened until snug and then loosened by half a turn.
4. Tighten jam nut (A).
5. Test the movement of the GSL. Repeat this procedure as needed.

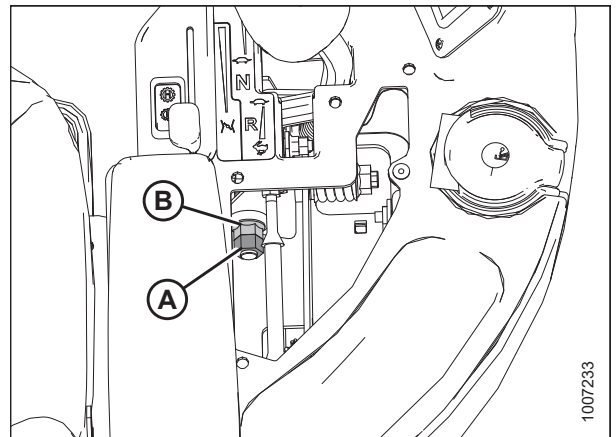


Figure 6.17: Control Panel Removed

6. Reinstall control panel (B) and secure it with five screws (A).

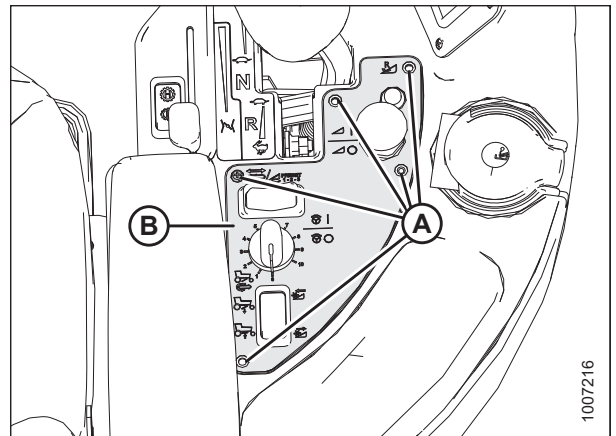


Figure 6.18: Control Panel

Adjusting Ground Speed Lever Fore-Aft Movement

The ground speed lever (GSL) should remain as positioned by the Operator yet be movable without excessive force.

1. Pull handle (A) toward the operator's seat and move the console fully forward to gain access to the underside of the console.

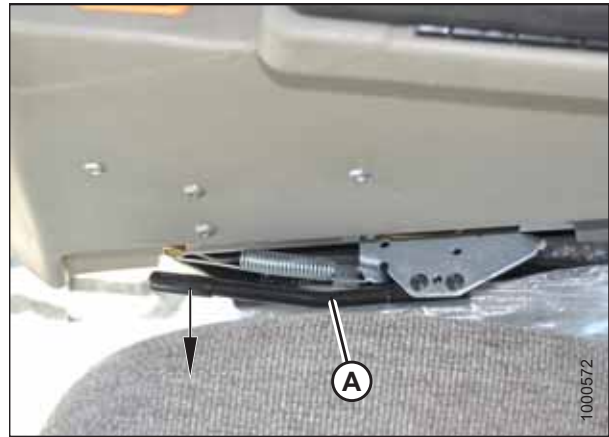


Figure 6.19: Seat Adjustment Handle

2. Set spring dimension (B) to 32 mm (1 1/4 in.).
3. To increase the pivot resistance, turn nut (A) clockwise to compress the spring.
4. To decrease the resistance, turn nut (A) counterclockwise to release the spring tension.

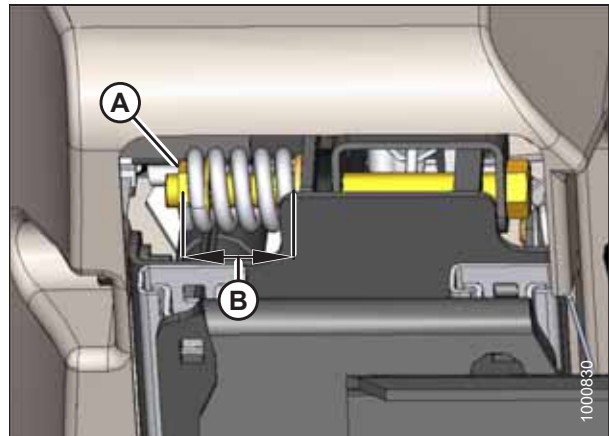


Figure 6.20: GSL Adjustment Spring

6.6.4 Steering Adjustments

The windrower's steering link pivots and steering chain tension may need adjustment from time to time.

Checking Steering Link Pivots

If the windrower's steering feels vague or sloppy, the steering link pivots may need tightening, or the ball joints may need replacement. Perform these checks annually.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

1. Place ground speed lever (GSL) (A) in the N-DETENT position.
2. Shut down the engine, and remove the key from the ignition.



Figure 6.21: Operator Console

3. Check steering rod bolts (A) for looseness and ball joints (B) for any perceptible movement.

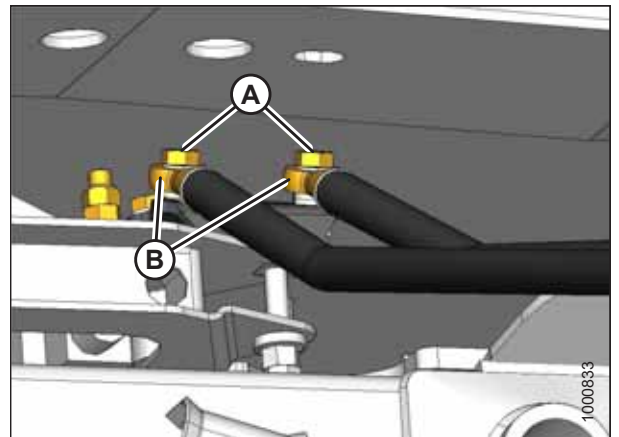


Figure 6.22: Steering Rods

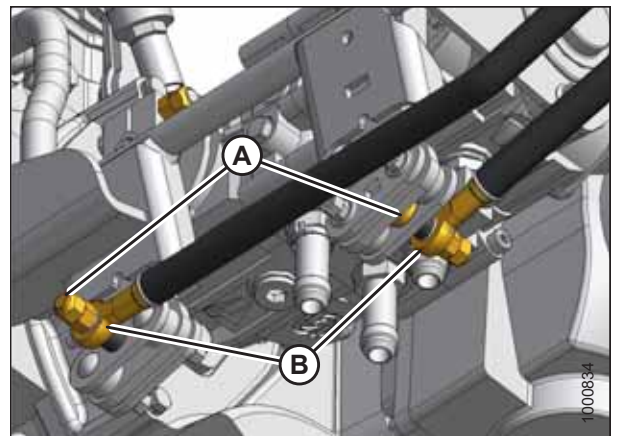


Figure 6.23: Steering Rods – Pump End

MAINTENANCE AND SERVICING

4. Check steering link bolts (A) for looseness and ball joints (B) for any perceptible movement.

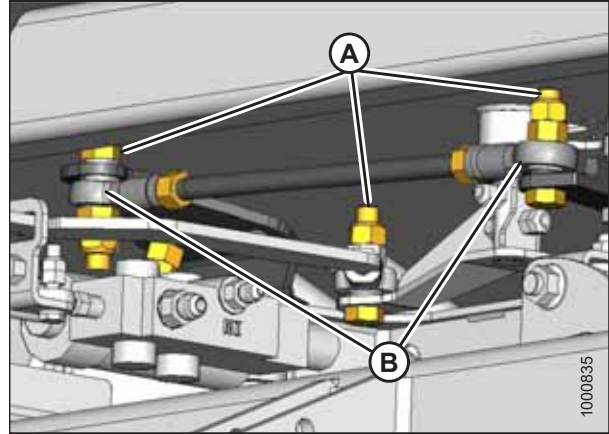


Figure 6.24: Steering Link

5. If the bolts are loose:
 - a. Loosen jam nut (A).
 - b. Tighten inside nut (B) to 95–108 Nm (70–80 lbf·ft).
 - c. Hold inside nut (B) and tighten jam nut (A) to 81–95 Nm (60–70 lbf·ft).

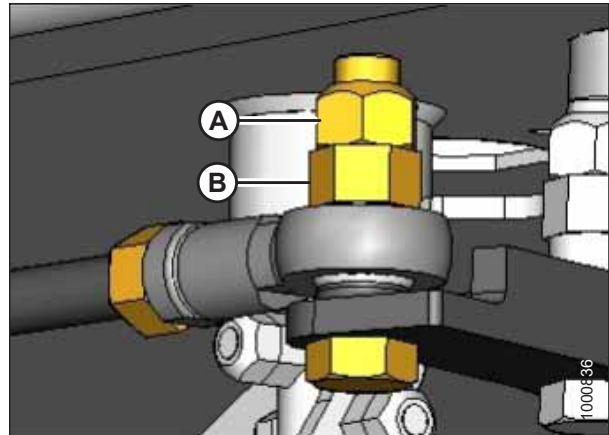


Figure 6.25: Steering Link

6. To replace loose steering link ball joints or steering rod ball joints, contact your MacDon Dealer.
7. After replacing parts or making adjustments, ensure that the steering lock and neutral interlock are functioning correctly. For instructions, refer to [6.6.2 Safety Systems, page 381](#).

Checking and Adjusting Steering Chain Tension

If the windrower's steering feels vague or sloppy, the steering chain tension may require adjustment.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Check the steering for binding or excessive play, which may be the result of the steering chain being too tight or too loose. If the steering is satisfactory, then this procedure does not need to be performed.
2. If the chain tension requires adjustment, swivel the operator's station to position the steering column close to the door.

3. At the base of the steering column, measure the spring length (dimension [C]). It should be 16 mm (5/8 in.).
4. If the spring length requires adjustment:
 - a. Loosen nut (A) and turn nut (B) until the spring length is 16 mm (5/8 in.).
 - b. Tighten nut (A) against nut (B).
 - c. Verify that the steering chain is taut and that the steering shaft is free to rotate.

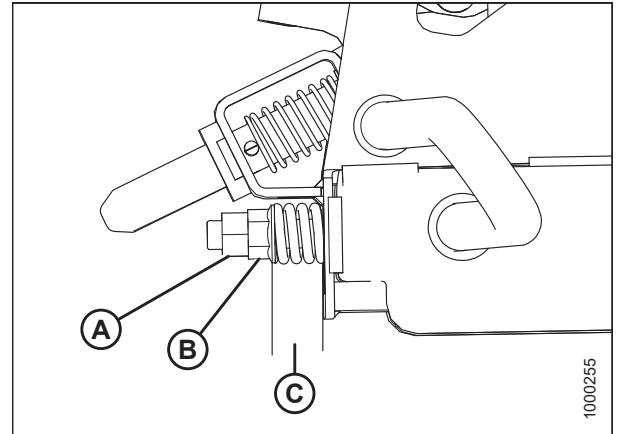


Figure 6.26: Steering Tension Adjuster

6.6.5 Park Brake

The brake is applied when the neutral interlock is fully engaged. To engage the interlock and the brake, the ground speed lever (GSL) must be in the N-DETENT position and the steering wheel centered.

Testing Parking Brake

A properly functioning parking brake system is important for ensuring the safe operation of the windrower.

NOTE:

This procedure involves disconnecting the brake solenoid connector and giving control of the brakes to the header raise button on the GSL instead of setting the GSL in the N-DETENT position.

WARNING

Ensure that brake solenoid connector P44 is reconnected to brake solenoid 3B after the test is complete. If P44 is NOT connected to solenoid 3B, the parking brakes will not engage.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Park the windrower on a level surface.
2. Configure the windrower for cab forward operation. For instructions, refer to *Driving Forward in Cab-Forward Mode, page 168*.
3. Raise the drive wheels onto jack stands. For instructions, refer to *Raising Drive Wheel – Jack Method, page 490*.

MAINTENANCE AND SERVICING

- Set ground speed range switch (A) to the low range.

DANGER

Ensure that all bystanders have cleared the area.

- Start the engine.
- Set throttle (B) to low idle, and move the ground speed lever out of N-DETENT (C) and into the neutral position.
- Watch the drive wheels: if the neutral setting is correct, the wheels will not move. If the wheels move, contact your MacDon Dealer.
- When the neutral setting check is complete, turn the machine off.
- Open the left cab-forward side platform to access multifunction manifold (A).



Figure 6.27: Operator's Console

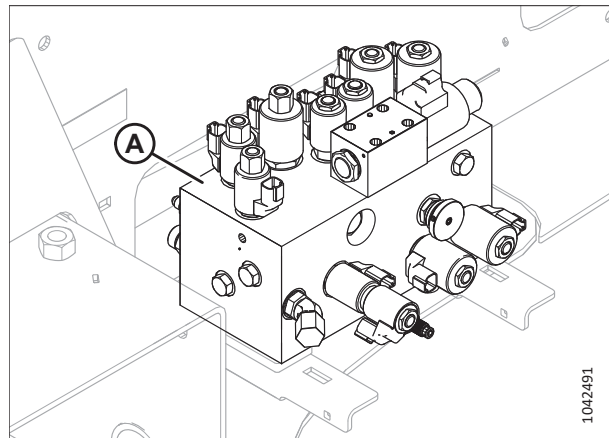


Figure 6.28: Multifunction Manifold

- Disconnect brake connector P44 from the brake solenoid 3B.
- Disconnect connector P52 from solenoid 1.

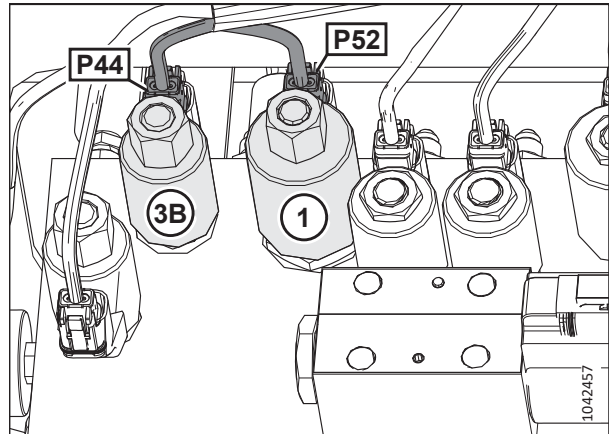


Figure 6.29: Hydraulic Manifold

MAINTENANCE AND SERVICING

12. Connect P52 to the brake solenoid 3B. Leave connector P44 and solenoid 1 disconnected.

Now that P52 is connected to the brake solenoid 3B, pressing the header lift button on the GSL will activate the parking brakes.

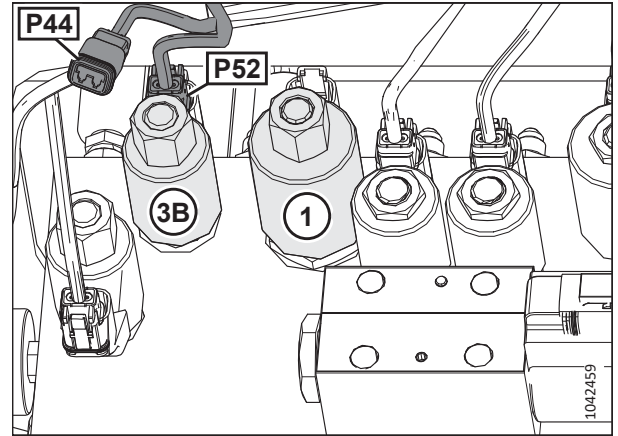


Figure 6.30: Hydraulic Manifold

13. Ensure that the windrower is in cab forward configuration and ground speed range switch (A) is set to the low range.
14. Start the engine and set throttle (B) to achieve an engine speed of 1500 rpm.
15. Move the GSL out of N-DETENT (C) and into the neutral position.
16. Press and hold the header raise button on the GSL to engage the brakes.
17. Keeping the header raise button pressed, move the GSL forward in the slot until it is approximately 25 mm (1 in.) from neutral and then observe the drive wheels for movement:
 - If the drive tires do not move, the parking brakes are working properly.
 - If the drive tires move, the parking brakes require replacement. Contact your MacDon Dealer.
18. Move the GSL back into the N-DETENT position, and shut down the windrower.
19. Remove connector P52 from the brake solenoid 3B, and plug P52 back into solenoid 1.
20. Locate connector P44 and plug it back into the brake solenoid 3B.



Figure 6.31: Operator's Console

WARNING

Ensure that brake solenoid connector P44 is reconnected to brake solenoid 3B after the test is complete. If P44 is NOT connected to solenoid 3B, the parking brakes will not engage.

21. Close the left cab-forward side platform.
22. Lower the drive tires to the ground. For instructions, refer to [Lowering Drive Wheel – Jack Method, page 493](#).

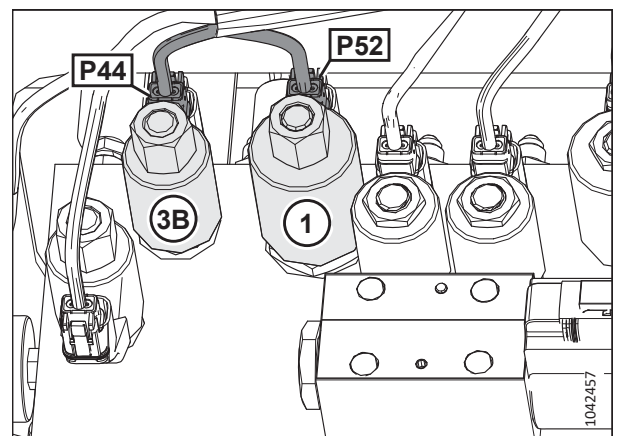


Figure 6.32: Hydraulic Manifold

6.7 Cab Suspension Limit Straps

The cab suspension limit straps are located next to the front suspension on both sides of the cab. These straps protect the cab suspension components by preventing the cab shocks from fully extending. The straps do not require regular maintenance, but they should be inspected every 100 hours.

1. Inspect the material on straps (A) for evidence of fraying or tearing.
2. If material is torn or frayed, contact your MacDon Dealer for replacement straps.

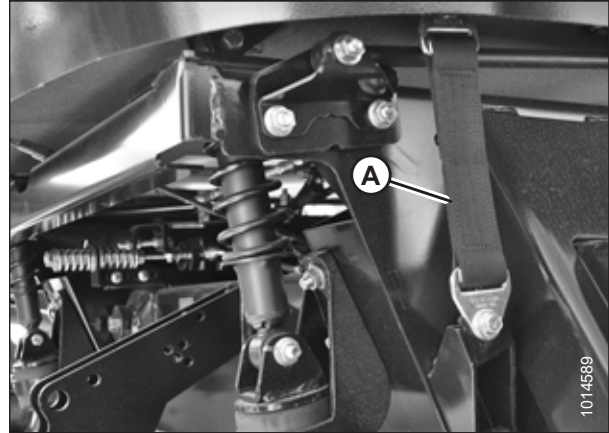


Figure 6.33: Cab Suspension

6.8 Heating, Ventilating, and Air Conditioning System

The windrower's heating, ventilating, and air conditioning (HVAC) system should be inspected from time to time. The cabin air filter, air conditioning condenser, and air conditioning evaporator core will need periodic attention.

6.8.1 Fresh Air Intake Filter

The fresh air filter is located outside the right rear of the cab and should be serviced according to the interval specified in the maintenance schedule.

Removing Fresh Air Intake Filter

The windrower's fresh air intake filter should be replaced according to the interval specified in the windrower's maintenance schedule.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

1. From outside the cab, locate filter tray (B) at the lower-back corner of the right side of the cab.
2. Rotate latch (A) and slide filter tray (B) out of the housing.

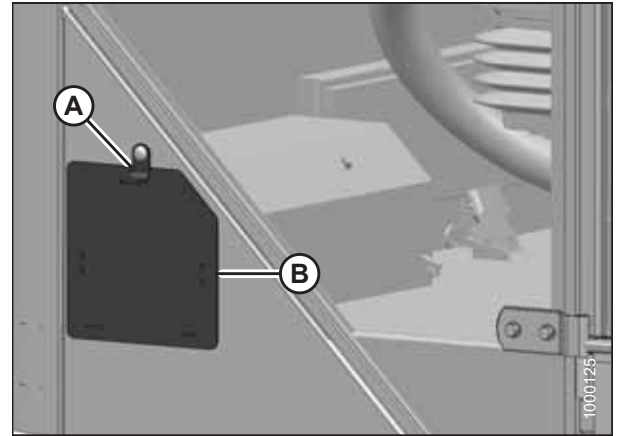


Figure 6.34: Filter Tray

3. Remove filter (A) from tray (B).

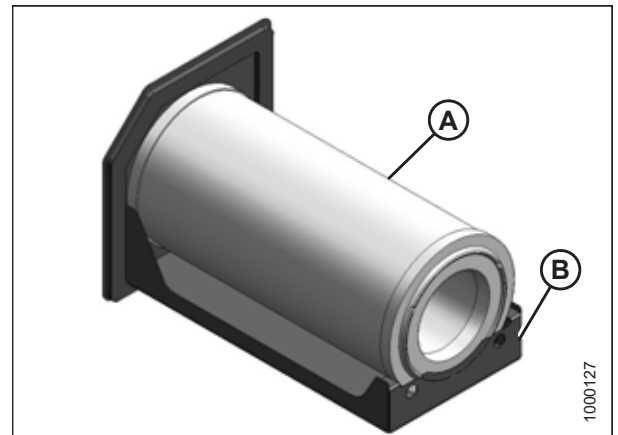


Figure 6.35: Fresh Air Filter

Inspecting and Cleaning Fresh Air Intake Filter Element

Once the filter element has been removed, it can be cleaned with compressed air and inspected for damage. Replace damaged filter elements.

1. Tap the sides of filter element (A) gently to loosen the accumulated debris. Do **NOT** tap the element against a hard surface.
2. Using a dry element cleaner gun, clean the element with compressed air.

IMPORTANT:

The air pressure used to clean the filter must **NOT** exceed 414 kPa (60 psi). Do **NOT** direct air against the outside of the element, as dirt might be forced through the filter to the inside.

3. Hold the air nozzle next to the filter element's inner surface and move the nozzle up and down the pleats.
4. Repeat Step 1, page 391 to Step 3, page 391 as needed.

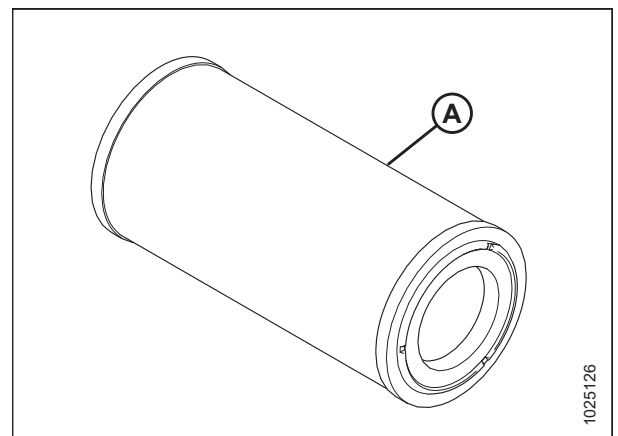


Figure 6.36: Fresh Air Filter Element

MAINTENANCE AND SERVICING

5. Hold a bright light inside the element and check carefully for holes. Discard any element that shows even a small hole.
6. Check the outer screen for dents.
7. Check the filter gasket for cracks, tears, or other signs of damage. If the gasket is damaged or is missing, replace the element.

Installing Fresh Air Intake Filter

Once the filter has been cleaned, or if a new filter is to be installed, it can be placed onto the element tray and installed in the windrower.

Refer to [9.2.4 Filter Part Numbers, page 533](#) for the appropriate part number.

1. Clean tray (B) and the interior of the filter housing.
2. Place filter (A) onto tray (B).

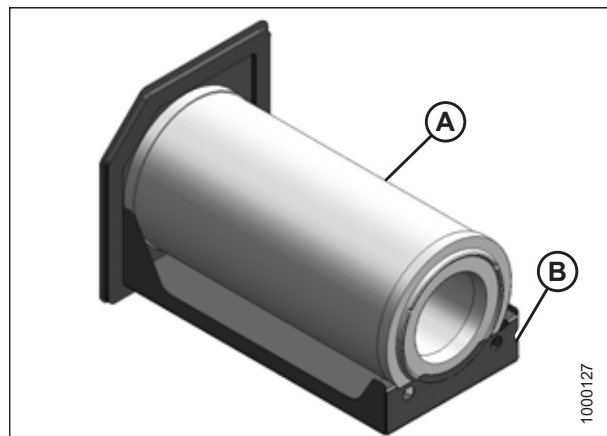


Figure 6.37: Fresh Air Filter

3. Slide filter tray (B) into the housing.

NOTE:

If necessary, move the Global Positioning System (GPS) wiring harnesses to the left engine-forward side of the housing before inserting the filter tray.

4. Close and latch housing door (A).

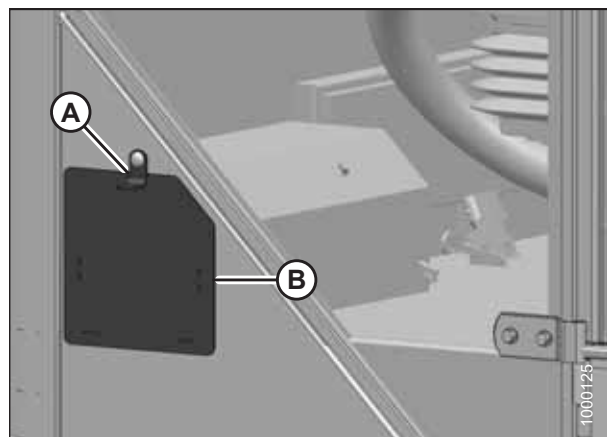


Figure 6.38: Cab Fresh Air Filter Access

6.8.2 Servicing Return Air Cleaner/Filter

Before the return air filter can be cleaned and inspected, it must be removed from the windrower's cab.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

If you intend to replace the return air filter, refer to [9.2.4 Filter Part Numbers, page 533](#) for the appropriate part number.

1. Unscrew two knobs (A) attaching the cover and the filter to the cab wall. Remove the cover and remove filter assembly (B).

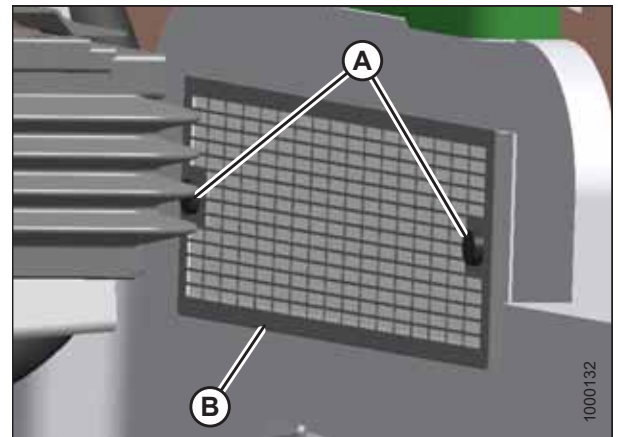


Figure 6.39: Return Air Filter

2. Separate filter (B) from cover (A).
3. Clean or replace the filter. If you intend to clean the filter, refer to [Cleaning Return Air Cleaner/Filter, page 394](#).
4. Assemble filter (B) and cover (A). Position the assembly over the air return opening on the wall of the cab.

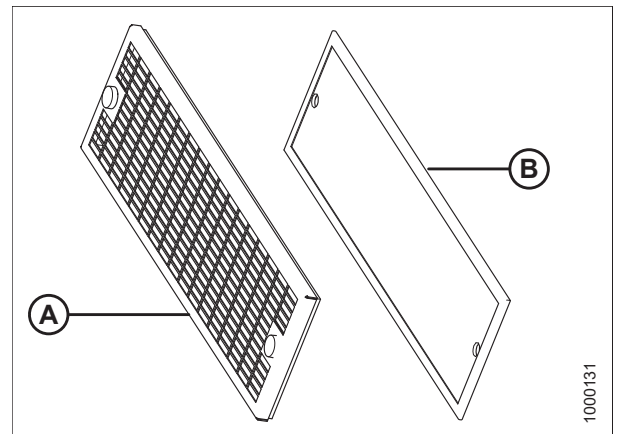


Figure 6.40: Return Air Filter

- Secure filter assembly (B) to the cab wall with knobs (A).

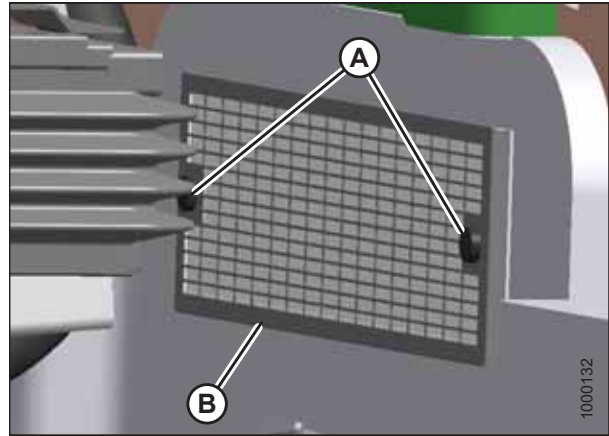


Figure 6.41: Return Air Filter

Cleaning Return Air Cleaner/Filter

If the filter is in good condition, it may be cleaned instead of replaced.

- Mix a solution of warm water and detergent in a suitable container. Soak filter (A) in the solution for a few minutes.
- Agitate the solution to flush dirt out of the filter.
- Rinse filter (A) with clean water. Dry the filter using compressed air.
- Inspect filter (A) for damage, separation, or holes. Replace the filter if it is damaged.

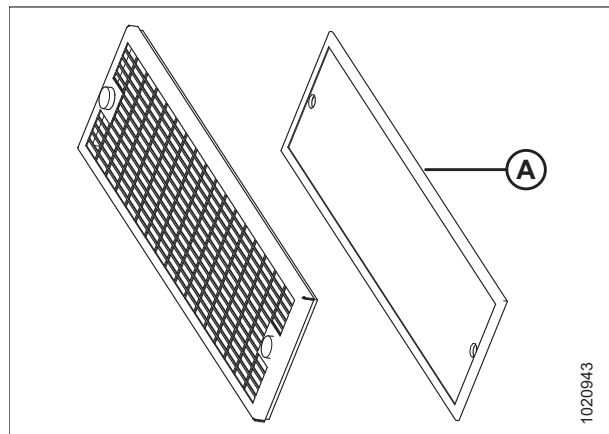


Figure 6.42: Return Air Filter

6.8.3 Air Conditioning Condenser

Clean the air conditioning condenser daily with compressed air. More frequent cleaning may be necessary in severe conditions.

Cleaning the condenser can be done at the same time as the radiator, oil cooler, and charge air cooler. For instructions, refer to *Maintaining Engine Cooling Box, page 429*.

6.8.4 Air Conditioning Evaporator Core

Check the air conditioning (A/C) evaporator annually for cleanliness. If the A/C system produces insufficient cooling, a possible cause is clogged evaporator fins. The fins may become clogged with dirt on the side opposite the blowers. The evaporator is located inside the heating air conditioning unit under the windrower's cab.

Removing Air Conditioner Cover

To access the air conditioning evaporator core, the air conditioner (A/C) cover must be removed.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Loosen clamps (A) on the two drain hoses connected to the A/C drain tubes, and pull the hoses off of the A/C drain tubes.

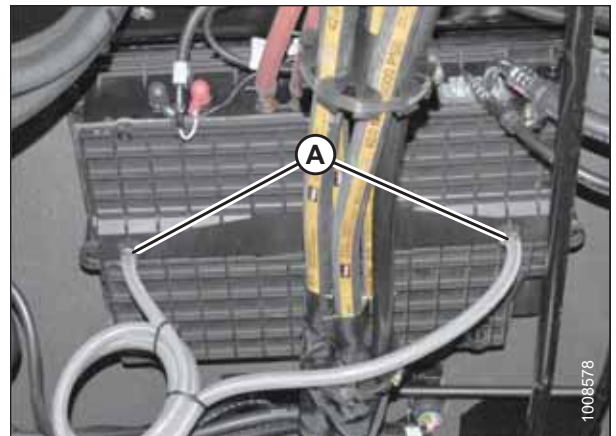


Figure 6.43: HVAC System – 2015 and Later

3. Remove eight screws (A) securing cover (B) to the housing, and remove the cover.

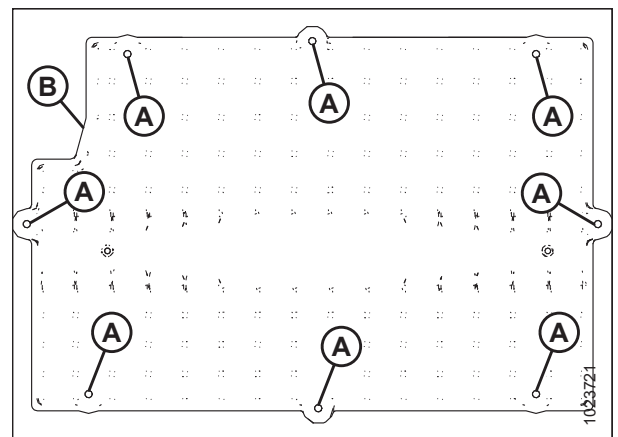


Figure 6.44: A/C Cover

Cleaning Air Conditioning Evaporator Core

Once the air conditioning cover has been removed, the evaporator core can be accessed. The core must be cleaned sufficiently so that blown air is able to penetrate through the core.

WARNING

To avoid injury, do NOT attempt to clean the evaporator fins with your bare hands; the edges are sharp.

1. Remove the air conditioning cover. For instructions, refer to *Removing Air Conditioner Cover, page 395*.
2. Use a vacuum cleaner or compressed air to remove any dirt inside the A/C unit.
3. Blow compressed air through the evaporator fins from blower side (A) first. Direct the air straight into the evaporator to prevent fin damage. Using a nozzle extension makes this procedure easier.
4. Repeat Step 3, page 396 at side (B) opposite the blowers.

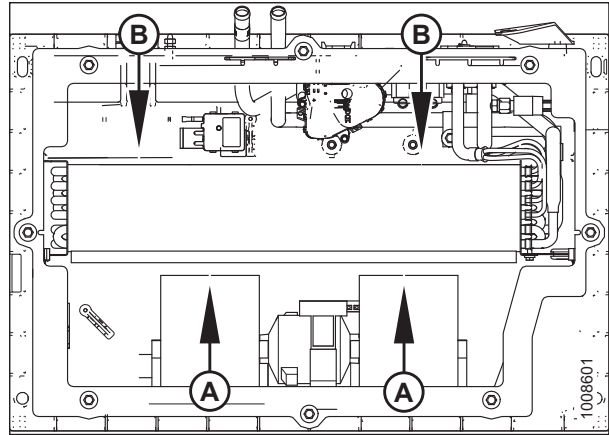


Figure 6.45: HVAC System

5. If you cannot feel the compressed air blowing through the evaporator core, proceed as follows:
 - a. Cover blower motor (A) and insure it does not get wet from overspray.
 - b. Soak evaporator core (B) with warm water using a low-pressure hose. Wait for at least 5 minutes before proceeding with the next step.
 - c. Blow compressed air through the core from blower side (C).
 - d. Repeat the soaking procedure until air blows freely through the evaporator.
6. Reinstall the air conditioning cover. For instructions, refer to *Installing Air Conditioning Cover, page 397*.

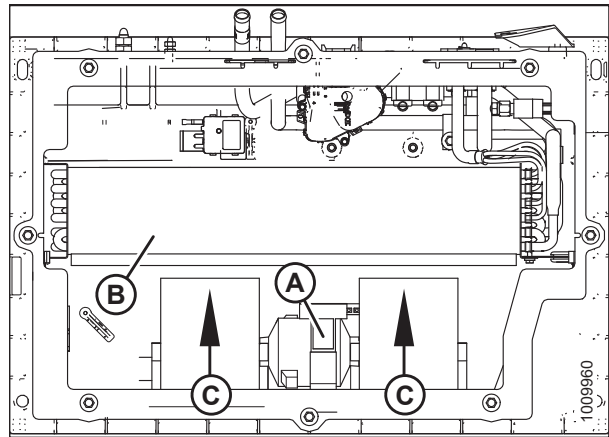


Figure 6.46: HVAC System

Installing Air Conditioning Cover

Once the air conditioning evaporator core has been serviced, the cover can be replaced.

1. Straighten any bent fins.
2. Position cover (B) onto the A/C unit, and secure it with eight screws (A).

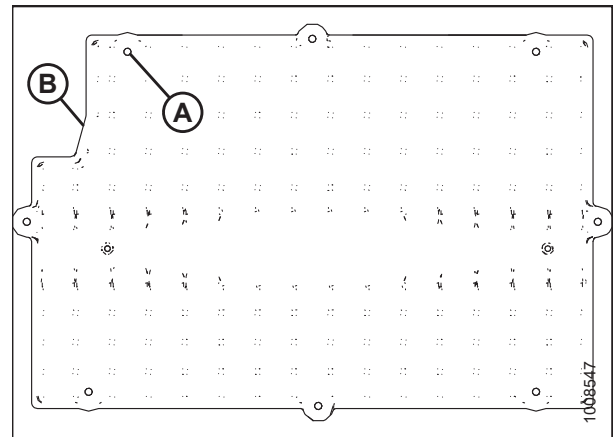


Figure 6.47: A/C Cover

3. Reattach the drain hoses to the drain tubes and secure them with hose clamps (A).

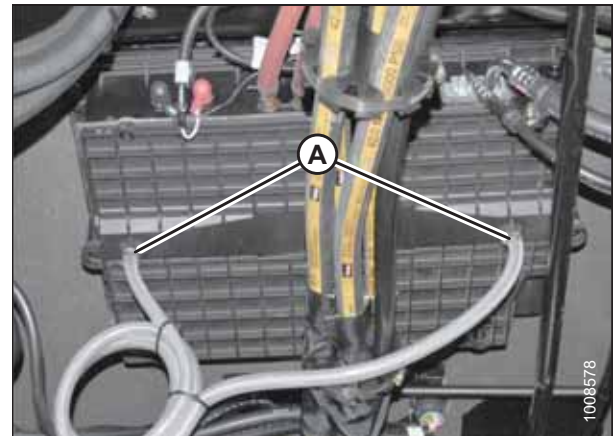


Figure 6.48: A/C Drains

6.8.5 Air Conditioning Compressor

The air conditioning (A/C) compressor is protected from excessively low suction and high discharge pressures by two switches that shut down the compressor to prevent damage to the system. These switches do not require regular maintenance. Contact your MacDon Dealer if you suspect a problem with the switches.

Low-pressure switch

The low-pressure switch is closed when there is sufficient refrigerant in the system and the pressure is above 234 kPa (34 psi). The system remains pressurized at about 414–483 kPa (60–70 psi) with the compressor off.

When the A/C system is turned on, the compressor starts because the system pressure is above 234 kPa (34 psi). As the system gets colder, the suction pressure (low side) drops. At 24–86 kPa (3.5–12.5 psi) (for 2014 and prior: 14–55 kPa [2–8 psi]), the switch opens and stops the compressor.

When the pressure rises above 172 kPa (25 psi), the switch closes and the compressor restarts. The low-pressure switch is located at the outlet of the evaporator (under the cab in the A/C box).

High-pressure switch

The high-pressure switch is closed when there is sufficient refrigerant in the system. The system remains pressurized at about 414–483 kPa (60–70 psi) with the compressor off.

If the pressure exceeds 2482–2620 kPa (360–380 psi) during operation, the valve opens. It will close when pressure falls below 1517–1931 kPa (220–280 psi). The high-pressure switch is located on the receiver drier (right cab-forward frame rail, behind the fuse panel).

If the compressor cycles rapidly due to rapid changes in pressure, the cab display module (CDM) will display the message CHECK A/C SYSTEM. Contact your MacDon Dealer for more information.

Servicing Air Conditioning Compressor

Beyond replacing the air conditioner compressor belt, most service procedures will have to be performed by a MacDon Dealership.

To replace the air conditioner compressor's belt, refer to [Replacing Air Conditioner Compressor Belt, page 439](#).

6.9 Engine

Refer to this section to learn how to inspect and maintain the engine system, including the fuel, lubrication, air intake, and exhaust systems.

CAUTION

- **NEVER operate the engine in a closed building. Proper ventilation is required to prevent exhaust gas hazards.**
- **Keep the engine clean. Straw and chaff on a hot engine, for example, present a fire hazard.**
- **NEVER use gasoline, naphtha, or any other volatile material for cleaning purposes. These materials are toxic and/or flammable.**

6.9.1 General Engine Inspection

It is recommended that detailed engine inspections be performed by your MacDon Dealer.

Refer to the engine owner's manual for further information.

NOTE:

QSB 4.5 and QSB 6.7 Cummins Engine #4021531 are supplied with your machine.

6.9.2 Turning Engine Manually

To manually turn the engine with the flywheel, an access hole is provided on the left cab-forward side of the engine for a barring tool, which can be obtained from the engine manufacturer.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to the lower position. For instructions, refer to [6.3.1 Opening Hood – Lower Position, page 371](#).
3. Move the platform on the left cab-forward side of the machine to the open position. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).

MAINTENANCE AND SERVICING

4. Remove positive (red) cables (A) from the battery posts first, then remove negative (black) cables (B) from the remaining battery posts.



Figure 6.49: Batteries

5. At the left cab-forward side of the engine, clean the area around the plastic cap on access hole (A). Remove the cap.

IMPORTANT:

Ensure that nothing falls into the gearbox oil reservoir.

NOTE:

The cap is siliconed in place, and may be difficult to remove.

6. Insert barring tool (B) into the flywheel housing until it engages the ring gear.
7. Attach a 1/2 in. square-drive ratchet or breaker bar to the barring tool and turn it.
8. Remove barring tool (B), and then clean the oil from around access hole (A).
9. Clean the plastic cap. Apply silicone sealant to the cap and reinstall it in access hole (A).

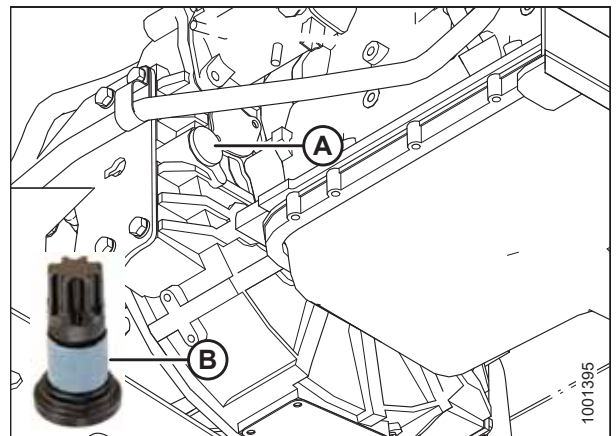


Figure 6.50: Access Hole Location for Barring Tool

IMPORTANT:

The batteries are negative-grounded. Ensure that the starter cable is connected to the positive (+) terminal of the battery and the battery ground cable is connected to the negative (-) terminal of the battery. Connecting a cable to the wrong post can result in permanent damage to the electrical system.

10. Attach negative (black) cables (B) to the negative posts on the batteries, and tighten the clamps. Then attach positive (red) cables (A) to the positive posts on the batteries and tighten the clamps.
11. Position the plastic covers onto the clamps.
12. Close the hood. For instructions, refer to [6.3.2 Closing Hood – Lower Position, page 372](#).
13. Close the platform. For instructions, refer to [6.4.2 Closing Platforms – Standard Position, page 375](#).

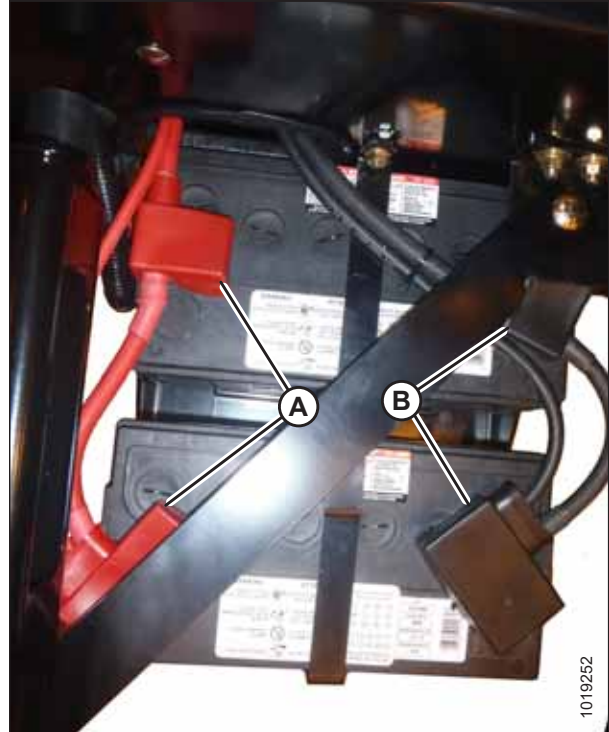


Figure 6.51: Batteries

6.9.3 Engine Oil

The engine oil will need to be inspected, added to, and changed according to the intervals specified in the windrower's maintenance schedule.

For engine oil specifications, refer to the inside back cover of this book.

Checking Engine Oil Level

Check the engine oil level daily (that is, after every 10 hours of operation). Monitor the engine for signs of fluid leakage.

⚠ DANGER

To prevent bodily injury or death from the unexpected startup of the machine, stop the engine and remove the key from the ignition before leaving the operator's seat.

NOTE:

During the break-in period, a higher than usual oil consumption is normal.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to the lower position. For instructions, refer to [6.3.1 Opening Hood – Lower Position, page 371](#).
3. Operate the engine at low idle and check for leaks at the filter and drain plug.
4. Shut down the engine, and remove the key from the ignition.

MAINTENANCE AND SERVICING

5. Remove dipstick (A) by turning it counterclockwise to unlock it.
6. Wipe the dipstick clean and reinsert it into the engine.
7. Remove the dipstick again and check the oil level.

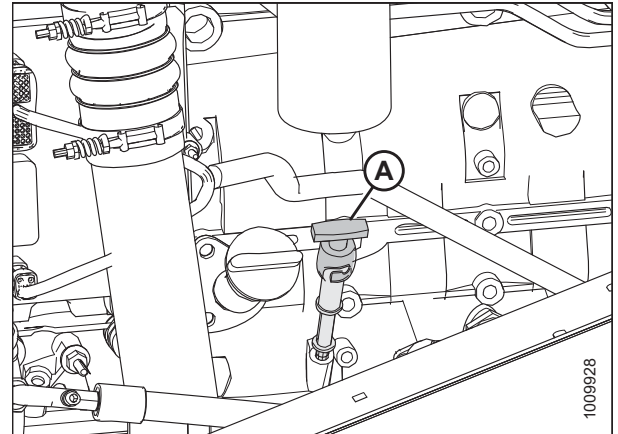


Figure 6.52: Engine Oil Dipstick

8. Add oil if the level is below the low (L) mark. For instructions, refer to [Adding Engine Oil, page 403](#).

IMPORTANT:

Keep the oil level between the low (L) and high (H) marks on the dipstick.

NOTE:

For information on the oil specifications, refer to the inside back cover.

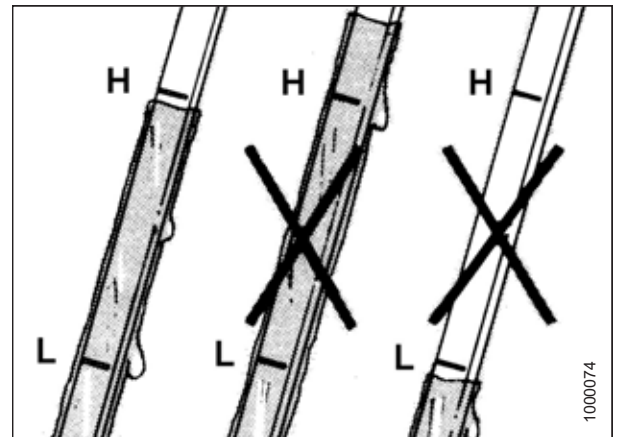


Figure 6.53: Engine Oil Level

9. Replace dipstick (A) and turn it clockwise to lock it.
10. Close the hood. For instructions, refer to [6.3.2 Closing Hood – Lower Position, page 372](#).

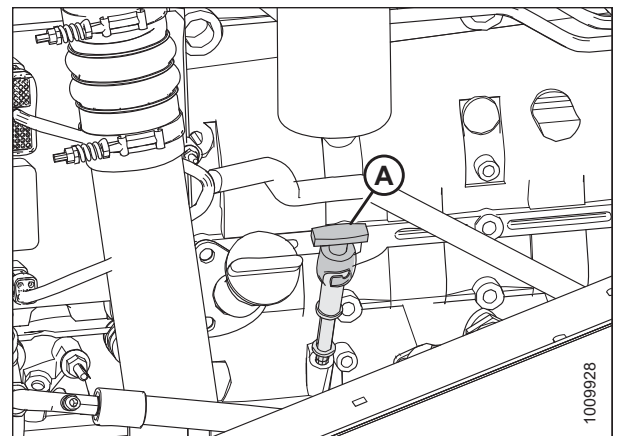


Figure 6.54: Engine Oil Dipstick

Changing Engine Oil

Changing the oil in the windrower's engine involve draining the oil, replacing the filter, and filling the engine with fresh oil.

For instructions on changing the engine oil, refer to the following procedures:

- [Checking Engine Oil Level, page 400](#)

- [Draining Engine Oil, page 402](#)
- [Replacing Engine Oil Filter, page 402](#)
- [Adding Engine Oil, page 403](#)

Draining Engine Oil

Before new engine oil can be added to the crankcase, the old oil must be thoroughly drained. Allow sufficient time for the oil to drain before replacing the drain plug.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

The engine should be warm when you change the oil.

1. Shut down the engine, and remove the key from the ignition.
2. Place a drain pan with a capacity of at least 24 liters (6 US gallons) under the engine oil drain.
3. Remove oil drain plug (A) and allow the oil to drain completely.
4. When all of the oil has drained out of the tank, inspect drain plug (A) for contaminants, and clean the drain plug if necessary, before replacing drain plug (A).
5. Check the condition of the used oil. If either of the following is evident, have your Dealer correct the problem before starting the engine:
 - Thin black oil indicates fuel dilution.
 - Milky discoloration indicates coolant dilution.
6. Properly dispose of the used oil.

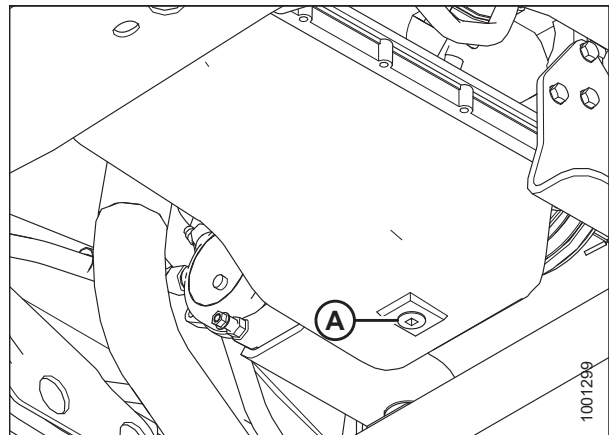


Figure 6.55: Engine Oil Drain Plug

IMPORTANT:

Do **NOT** run the engine without oil in the crankcase, or permanent damage to the engine may result. For instructions, refer to [Adding Engine Oil, page 403](#).

NOTE:

Replace the oil filter each time the engine oil is changed. For instructions, refer to [Replacing Engine Oil Filter, page 402](#).

Replacing Engine Oil Filter

Replace the engine oil filter any time the engine oil is replaced. Be sure not to overtighten the filter when installing it.

NOTE:

Replace the oil filter each time the engine oil is changed. Refer to [9.2.4 Filter Part Numbers, page 533](#) for the recommended oil filter to use.

1. Open the hood. For instructions, refer to [6.3.1 Opening Hood – Lower Position, page 371](#).

MAINTENANCE AND SERVICING

2. Clean around filter head (A).
3. Remove filter (B).
4. Clean the gasket mating surface.
5. Apply a thin film of clean oil to the gasket on the new filter.
6. Screw the new filter onto the filter mount until the gasket contacts the filter head.
7. Tighten the filter an additional 1/2 to 3/4 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install the oil filter. Overtightening can damage the gasket and filter.

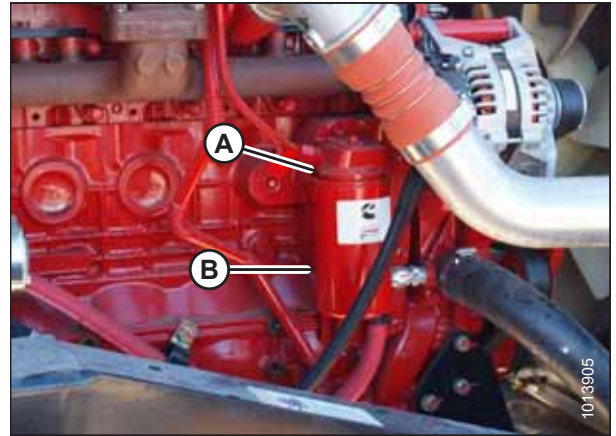


Figure 6.56: Engine Oil Filter

8. Properly dispose of the used filter.

Adding Engine Oil

If the engine oil's dipstick shows that the engine oil level is low, or if the oil has been drained, more oil will need to be added.

Refer to [9.2.3 Lubricants, Fluids, and System Capacities, page 532](#) for information on the recommended lubricants.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to the lower position. For instructions, refer to [6.3.1 Opening Hood – Lower Position, page 371](#).
3. Remove filler cap (A) by turning it counterclockwise.
4. Carefully pour in the new oil. Use a funnel to avoid spillage. Clean any spills immediately.

CAUTION

Do **NOT** fill above the **HIGH** mark.

5. Replace oil filler cap (A) and turn it clockwise until it is snug.
6. Check the oil level. For instructions, refer to [Checking Engine Oil Level, page 400](#).
7. Close the hood. For instructions, refer to [6.3.2 Closing Hood – Lower Position, page 372](#).

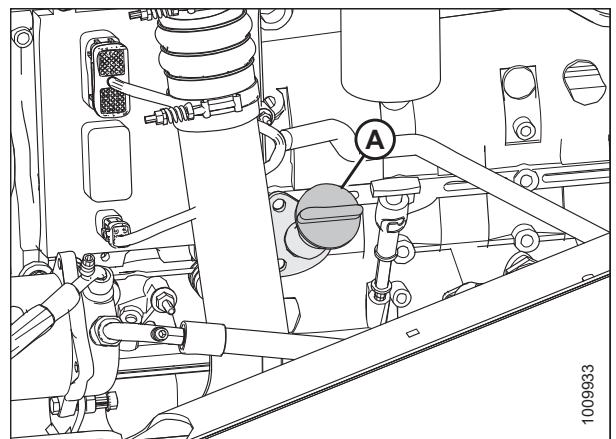


Figure 6.57: Oil Filler Cap

6.9.4 Air Intake System

The engine requires the continuous intake of filtered air for combustion to occur.

North American models only: Engine intake air is drawn through duct (A) from the cooling box, which pre-cleans the air, and then through dual element filter (B). The air cleaner canister is equipped with aspirator (C), which continuously removes dust from the air cleaner housing. The air cleaner is also equipped with restriction switch (D), which activates a warning light on the cab display module (CDM) and an alarm when the primary filter element requires cleaning.

IMPORTANT:

Do **NOT** run the engine when the air cleaner is disconnected or disassembled.

If you need to replace the air filters, refer to [9.2.4 Filter Part Numbers, page 533](#).

Models sold outside of North America only: Engine intake air is drawn through duct (A) from the hood-mounted pre-cleaner, and then through dual element filter (B). The air cleaner canister is equipped with aspirator (C), which continuously removes dust from the air cleaner housing. The air cleaner is also equipped with restriction switch (D), which activates a warning light and an alarm on the cab display module (CDM) when the primary filter element requires cleaning.

IMPORTANT:

Do **NOT** run the engine with the air cleaner disconnected or disassembled.

If you need to replace the filters, refer to [9.2.4 Filter Part Numbers, page 533](#).

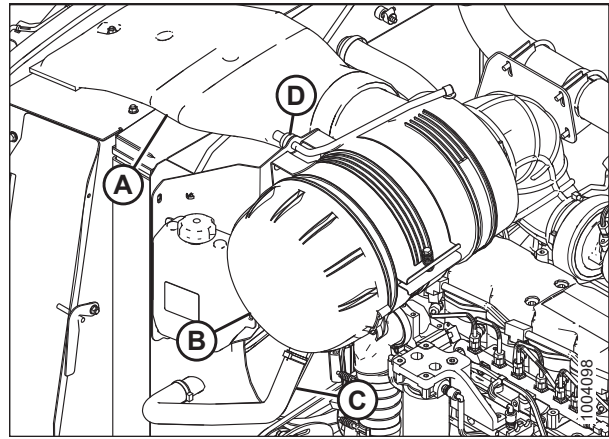


Figure 6.58: Engine Air Intake – North America

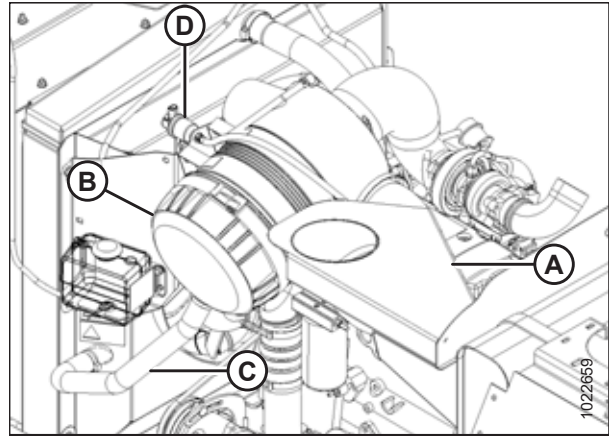


Figure 6.59: Engine Air Intake – Export

Air Filter Restriction Indicator

The air filter restriction indicator detects changes in vacuum pressure in the air intake system and signals if the air filter needs cleaning.

During engine operation, the indicator shows the vacuum pressure, which is specified in terms of inches of H₂O and kPa. As dirt accumulates in the filter, the vacuum pressure increases.

When the indicator gauge reaches the CHANGE FILTER mark (A), 25 in. of H₂O (6.20 kPa), a warning tone will sound and the cab display module (CDM) will indicate that the filter requires servicing.

IMPORTANT:

Excessive servicing of the filter element increases the risk of dirt entering the air intake system, which can cause severe engine damage.

Service the air filter **ONLY IF** the indicator reaches the CHANGE FILTER mark (A) or registers a reading of 25 in. H₂O (6.20 kPa).

IMPORTANT:

After servicing the filters, press the RESET button on the end of indicator (B).



Figure 6.60: Air Filter Restriction Indicator

Removing Primary Air Filter

The windrower's cab display module (CDM) will alert the Operator when the engine air filter requires service. The air filter must first be removed before it can be replaced.

1. Open the hood. For instructions, refer to [6.3.1 Opening Hood – Lower Position, page 371](#).
2. Open the maintenance platform on right cab-forward side. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).
3. Slightly lift catch (A) at the side of end cap (B) and rotate the end cap counterclockwise.

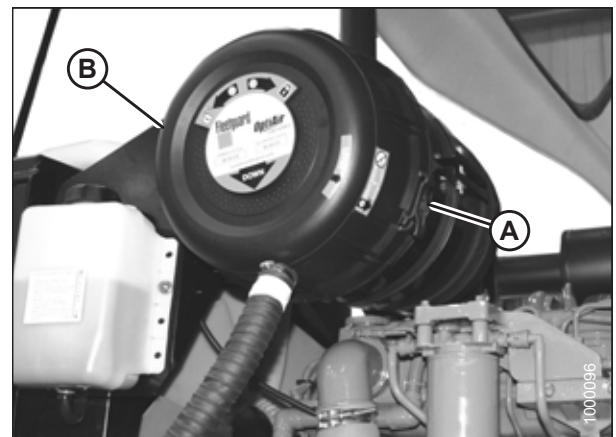


Figure 6.61: Engine Air Cleaner

MAINTENANCE AND SERVICING

4. Ensure that arrow (A) on the end cap lines up with the UNLOCK symbol on the end cap.
5. Remove the end cap.



Figure 6.62: Engine Air Cleaner

6. Inspect aspirator duct opening (A), looking for obstructions or damage. Clean the opening as needed.

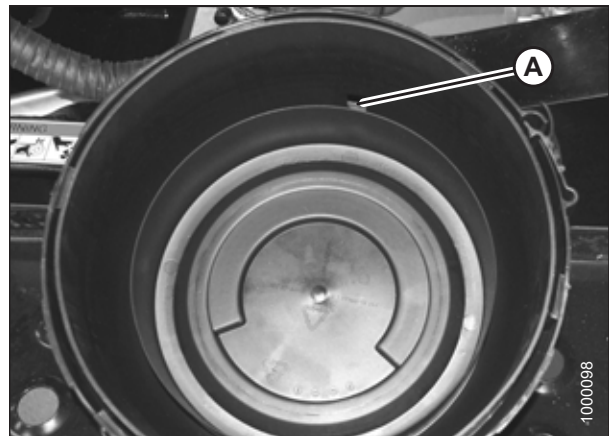


Figure 6.63: Engine Air Cleaner Housing

7. Pull out primary filter element (A).

IMPORTANT:

Handle the filter element carefully. Rough handling of the filter element can knock dirt and debris loose, which will contaminate the clean side of the housing. Do **NOT** allow the primary filter to damage the secondary filter upon removal.

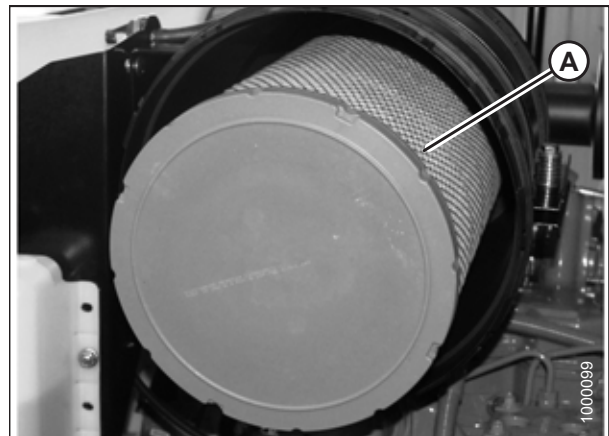


Figure 6.64: Engine Air Cleaner Primary Filter Element

IMPORTANT:

Replace secondary air filter (A) every year or after every third primary filter change (even if the secondary filter appears clean).

8. If the secondary air filter is dirty, inspect the primary filter and the filter canister as follows to determine the reason for contamination:
 - Examine the filter canister for cracks, and replace it if necessary.
 - Ensure that the filter sealing surfaces are soft, flexible, and sealing properly. Hard seals may allow debris through to the secondary filter.
 - Ensure that the canister retaining latches are secure.

IMPORTANT:

- Do **NOT** remove the secondary filter element unless it needs replacing.
- Do **NOT** attempt to clean the secondary element. The secondary element **MUST** be replaced, **NOT** cleaned and reused.

9. If needed, replace the secondary filter. For instructions, refer to [Removing and Installing Secondary Air Filter, page 410](#).
10. Clean the inside of the canister housing and the end cap carefully. Dirt left in the air cleaner housing can damage the engine.
 - Remove hardened dirt ridges wherever filter gaskets contact the cleaner housing.
 - Clean the gasket sealing surfaces of the housing. An improper gasket seal is one of the most common causes of engine contamination.
 - Wipe every surface with a clean, water-dampened cloth.
 - Check the housing visually to make sure it is clean before putting in a new filter element.
11. Check for uneven dirt patterns on the old element. These patterns are a valuable clue to potential dust leakage or gasket sealing problems. A pattern on the element's clean side is a sign that the old element was **NOT** firmly sealed, or that a dust leak exists.
 - Press on the fresh gasket to see if it springs back.
 - Check the gasket for correct sizing. On a radial seal element, the gasket surface is the inside diameter of the open end cap.
 - Make sure the gasket is seating evenly. If the gasket is not forming a perfect seal, the engine will **NOT** have complete protection.
 - Ensure that the sealing surface in the housing is clean, and that the filter element is the correct model number.
 - Identify and rectify the cause of any leaks before replacing the filter element.

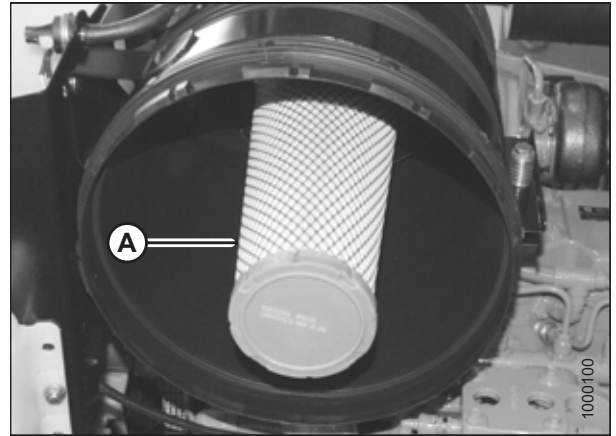


Figure 6.65: Engine Air Cleaner Secondary Filter Element

Installing Primary Air Filter

Once the primary air filter has been removed and inspected, it can be replaced.

NOTE:

For the primary air filter replacement part number, refer to [9.2.4 Filter Part Numbers, page 533](#).

MAINTENANCE AND SERVICING

1. Insert new primary filter element (A) into the canister over the secondary element. Push the primary filter element into place, ensuring that the element is firmly seated in the canister.

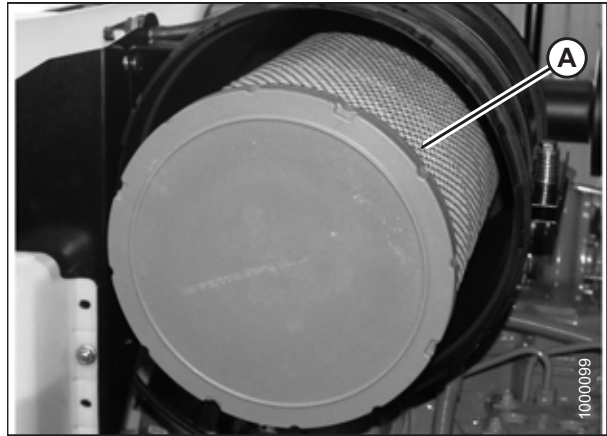


Figure 6.66: Primary Filter Element

2. Align arrow (A) with the UNLOCK symbol on the end cap, and push the end cap fully onto the housing.
3. Rotate the end cap clockwise until catch (A) engages with the housing and you are unable to turn the cap further clockwise.

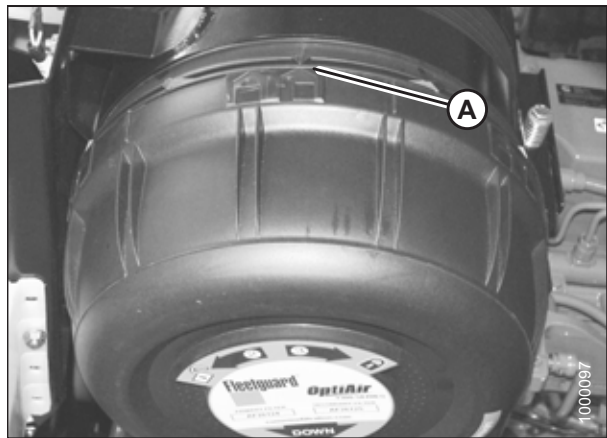


Figure 6.67: Engine Air Cleaner

4. Position end cap (B) onto the filter housing so that the aspirator points approximately down.
5. Secure the end cap onto the filter housing by closing catch (A).

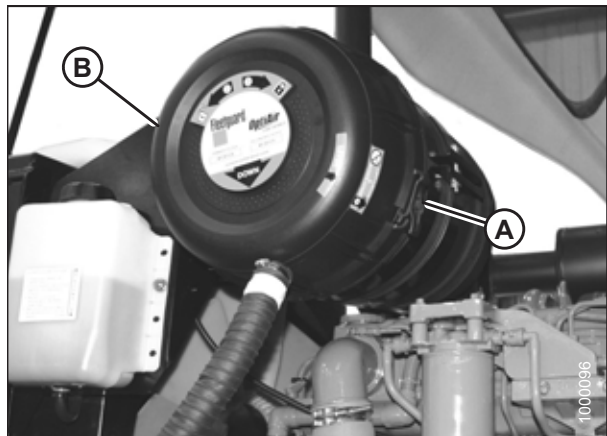


Figure 6.68: Engine Air Cleaner

MAINTENANCE AND SERVICING

6. After servicing the filter, reset restriction switch (A) by pushing the button on the end of the switch.
7. Close the hood. For instructions, refer to [6.3.2 Closing Hood – Lower Position, page 372](#).
8. Close the maintenance platform. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).

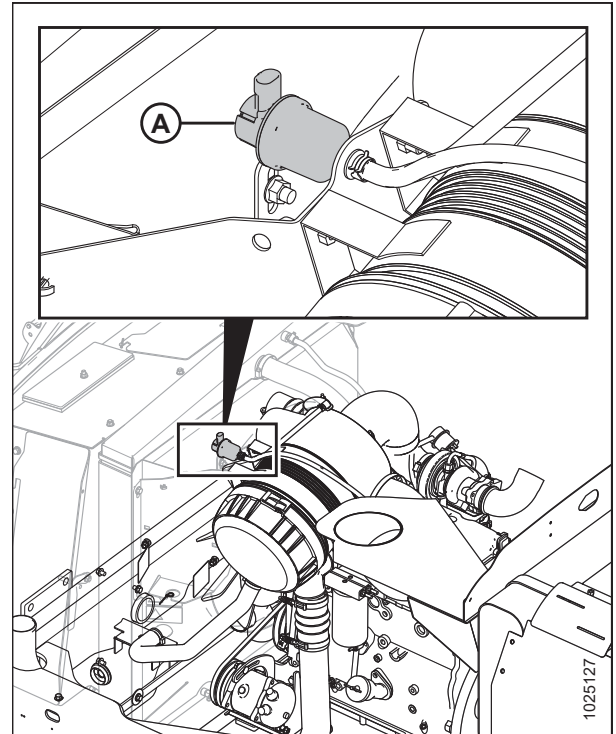


Figure 6.69: Engine Air Cleaner

Cleaning Engine Air Filter Primary Element

The air cleaner's primary filter should be replaced after every three cleanings or at the interval specified in the maintenance schedule. The secondary element should be replaced every third time the primary element is changed.

IMPORTANT:

The secondary (inner) element should NEVER be cleaned, only replaced.

IMPORTANT:

Air filter element cleaning is **NOT** recommended due to the possible degradation of the element material. If cleaning is performed, there are several risks involved and the following procedure should be followed. If any of the following conditions are found, the filter element **MUST** be replaced.

1. Use a bright light to inspect the inside of the element, looking carefully for holes in the element's fabric.
2. Check the outer screen for dents.
3. Inspect the filter gasket for cracks, tears, or other signs of damage.
4. Inspect the element for oil or soot contamination.
5. Inspect the secondary element for cleanliness. If there is visible dirt on the secondary element, replace both the primary and secondary elements. Do **NOT** attempt to clean and reuse the elements.

IMPORTANT:

The air cleaner's primary (outer) filter element should be replaced after three cleanings or at the specified interval. The secondary (inner) element should be replaced every third time the primary element is changed. Refer to [6.1 Maintenance Schedule, page 365](#) for the required interval.

MAINTENANCE AND SERVICING

6. If the secondary element passes inspection, clean the primary element as follows:
 - a. Use compressed air **NOT** exceeding 400 kPa (60 psi), and a dry element cleaner gun.
 - b. Holding the nozzle next to the inner surface only, move the nozzle up and down the element's pleats.
 - c. After three cleanings (or at the specified interval), replace the primary element.
7. Repeat the inspection procedure before reinstalling the primary filter element.

Removing and Installing Secondary Air Filter

Replace the secondary air filter annually or after every third primary filter change, even if it appears clean.

NOTE:

Refer to [9.2.4 Filter Part Numbers, page 533](#) for the replacement filter part number.

If secondary air filter (A) is dirty, inspect the primary filter and the filter canister to determine the reason for the contamination.

- Examine the filter canister for cracks. Replace the canister if necessary.
- Ensure that the filter sealing surfaces are soft, flexible, and are sealing properly. Hard seals may allow debris through to the secondary filter.
- Ensure that the canister retaining latches are secure.

IMPORTANT:

- Do **NOT** remove the secondary filter element unless it needs replacing. For the secondary filter part number, refer to [9.2.4 Filter Part Numbers, page 533](#).
- Do **NOT** attempt to clean the secondary element. The secondary element must be replaced.

1. Remove the primary filter. For instructions, refer to [Removing Primary Air Filter, page 405](#).

IMPORTANT:

When replacing the secondary filter, reinsert the new filter as soon as possible to prevent dust and dirt from entering the air intake. Do **NOT** remove the secondary filter unless a replacement is available for installation.

2. Remove secondary element (A) from the canister.
3. Insert new secondary filter element (A) into the canister, oriented seal-first. Push the secondary element until the seal is seated inside the canister.
4. Reinstall the primary filter element. For instructions, refer to [Installing Primary Air Filter, page 407](#).

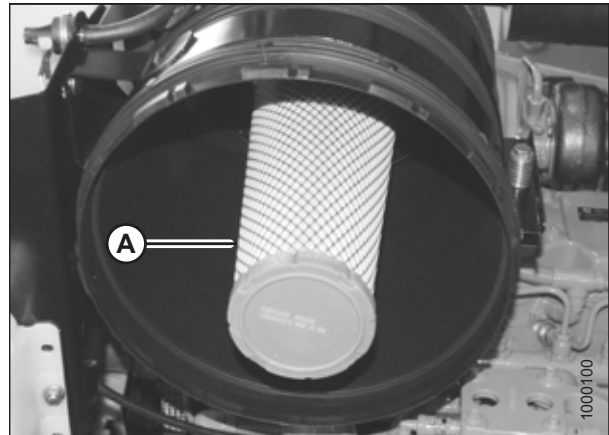


Figure 6.70: Secondary Filter Element

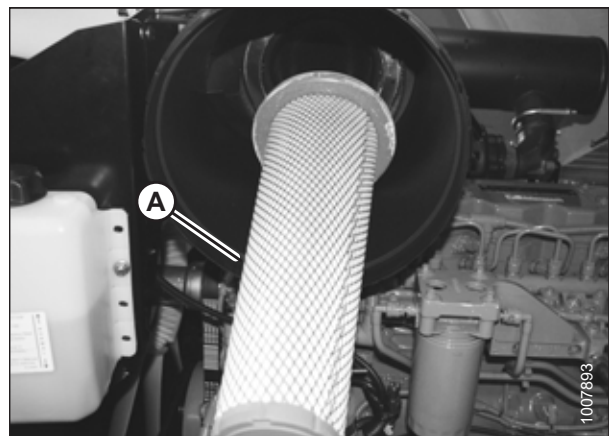


Figure 6.71: Secondary Filter Element

Air Precleaner

The engine air precleaner is attached to the engine compartment hood. When it is in the closed position, the engine air intake duct in the engine compartment can not take in fresh air.

Engine air precleaner (A) has no scheduled servicing requirements. Inspect the precleaner regularly to ensure that it is not obstructed.

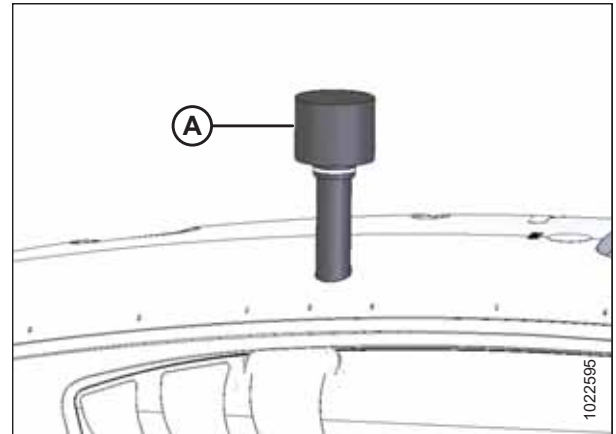


Figure 6.72: Engine Air Precleaner

6.9.5 Fuel System

The fuel system feeds the engine a continuous pressurized supply of diesel fuel. A filtering and water separation system ensures the purity of the fuel reaching the engine.

Replacing Fuel Tank Vent Filter

The windrower's fuel tank is vented by a hose connected to the filler tube. The hose is connected to a filter that should be changed according to the interval specified in the maintenance schedule.

For the fuel tank vent filter replacement part number, refer to [9.2.4 Filter Part Numbers, page 533](#).



DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.



WARNING

To prevent personal injury or death from an explosion or fire, do NOT allow flame or sparks near the windrower when the fuel system is being serviced.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to its highest position. For instructions, refer to [6.3.3 Opening Hood – Highest Position, page 372](#).
3. Open the right cab-forward side maintenance platform. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).

MAINTENANCE AND SERVICING

4. Locate filter (A) on the vent line against the hydraulic oil reservoir.
5. Release hose tension clamps (B) and slide them away from the filter. Pull the hoses off of the filter, and discard the filter.
6. Insert the new filter through the hole in the frame and attach the top hose to the filter. The IN marking on the filter should face down.

NOTE:

If the filter has an arrow instead of an IN marking, the arrow should point up.

7. Attach the lower hose to the filter and secure both of the hoses using tension clamps (B).
8. Close the hood. For instructions, refer to [6.3.4 Closing Hood – Highest Position, page 373](#).
9. Close the platform. For instructions, refer to [6.4.2 Closing Platforms – Standard Position, page 375](#).

Maintaining Fuel Filters

The windrower's fuel system is equipped with two threaded cartridge filters: a primary and a secondary. The primary filter is equipped with a separator that separates sediment and water from the fuel. The primary fuel filter will need to be changed once the filter element is completely covered by fuel.

Primary fuel filter (A)

Secondary fuel filter (B)

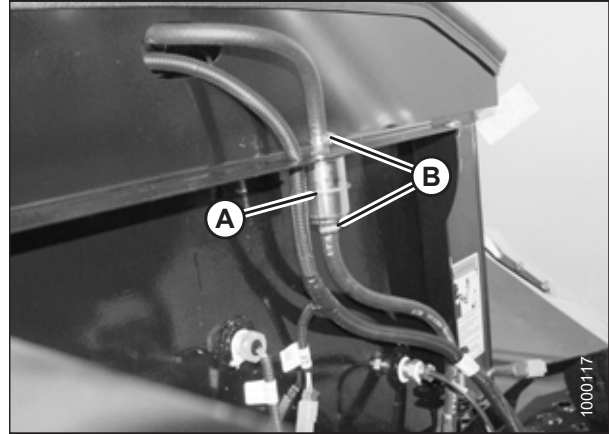


Figure 6.73: Fuel Tank Vent

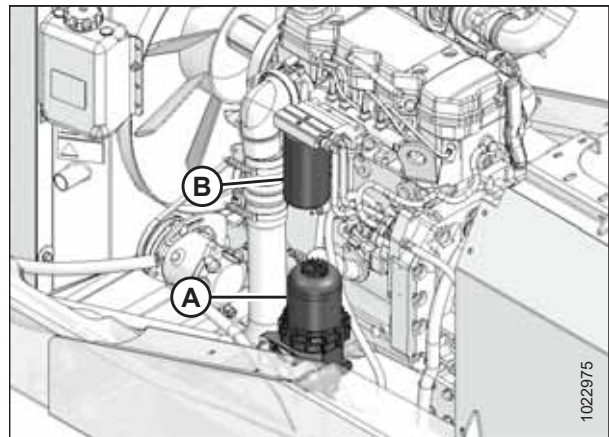


Figure 6.74: Fuel System Filters

MAINTENANCE AND SERVICING

The primary filter is filled with fuel by stages:

1. In a new filter, the fuel level will be very low, and the fuel can flow freely through the filter. Over time, contaminants will collect on the filter from the bottom up. The fuel level in the filter will rise as the filter element is obstructed.
2. The fuel level in the filter begins to rise. As contaminants collect on the filter, the fuel rises to a non-contaminated section of the filter.
3. The fuel filter is now more than half full. At this point, fuel can still flow freely through the uncontaminated portion of the filter element. The filter still has significant service life remaining.
4. The filter element is now completely covered by fuel. At this point, all of the filter element's surface area is contaminated. Fuel is not able to flow freely. At this point, the fuel filter should be changed.

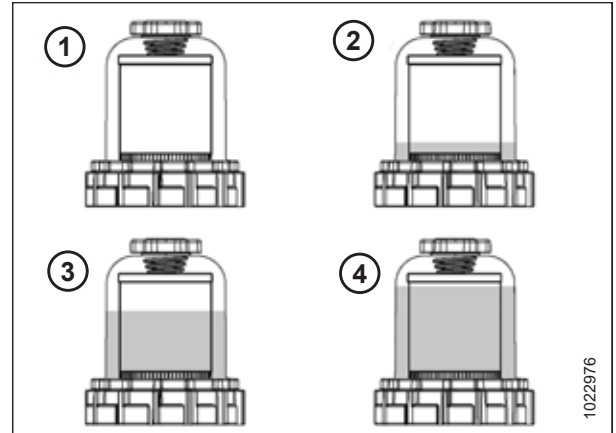


Figure 6.75: Primary Fuel Filter — Fuel Level

To remove or install a fuel filter, refer to the relevant procedure:

- [Removing Primary Fuel Filter, page 413](#)
- [Installing Primary Fuel Filter, page 415](#)
- [Removing Secondary Fuel Filter, page 418](#)
- [Installing Secondary Fuel Filter, page 418](#)

Removing Primary Fuel Filter

Removing the primary fuel filter requires disconnecting the filter from the water separation system and the fuel system.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to the highest position. For instructions, refer to [6.3.3 Opening Hood – Highest Position, page 372](#).
3. On the bottom of the fuel tank, locate fuel shut-off valve (A) and move it to the closed position.

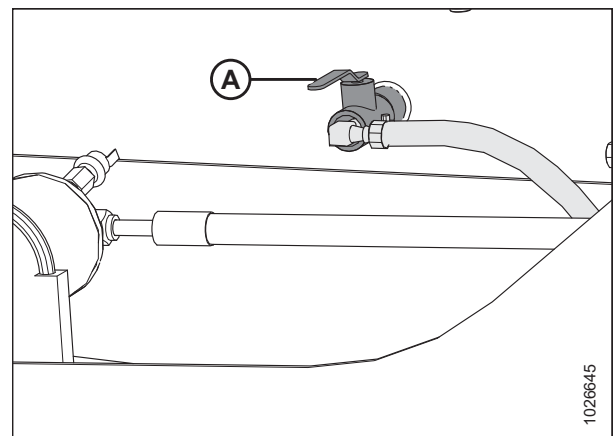


Figure 6.76: Fuel Shut-off Valve

MAINTENANCE AND SERVICING

4. Locate primary fuel filter (A) on the right cab-forward side of the windrower.

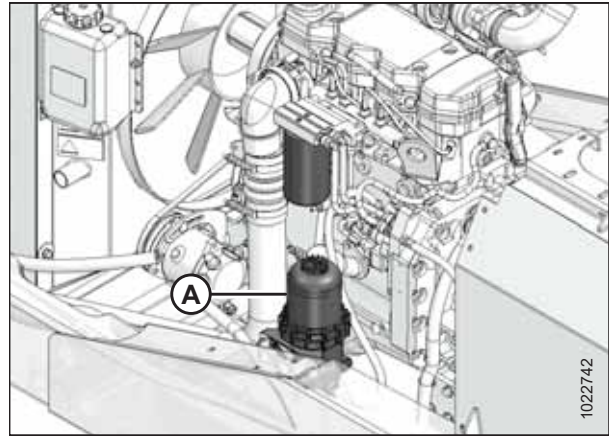


Figure 6.77: Primary Fuel Filter Location

5. Clean around the head of primary filter (A).
6. Disconnect the water in fuel (WIF) sensor from the bottom of the filter housing.
7. Remove vent cap (B) and turn valve (C) by hand counterclockwise and drain the filter into a container.
8. Close valve (C).
9. Remove collar (D) with a filter wrench⁴⁴.
10. Remove clear cover (E).

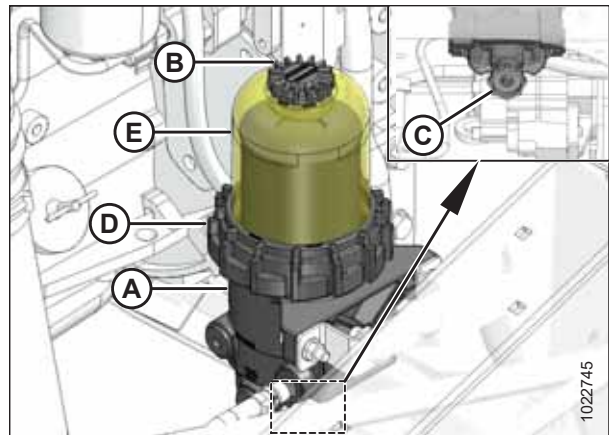


Figure 6.78: Primary Fuel Filter

⁴⁴. Available from Cummins 3944458 S.

11. Remove filter (A), cover O-ring (B)⁴⁵, and vent cap O-ring (C)⁴⁵. Discard the filter and the O-rings.

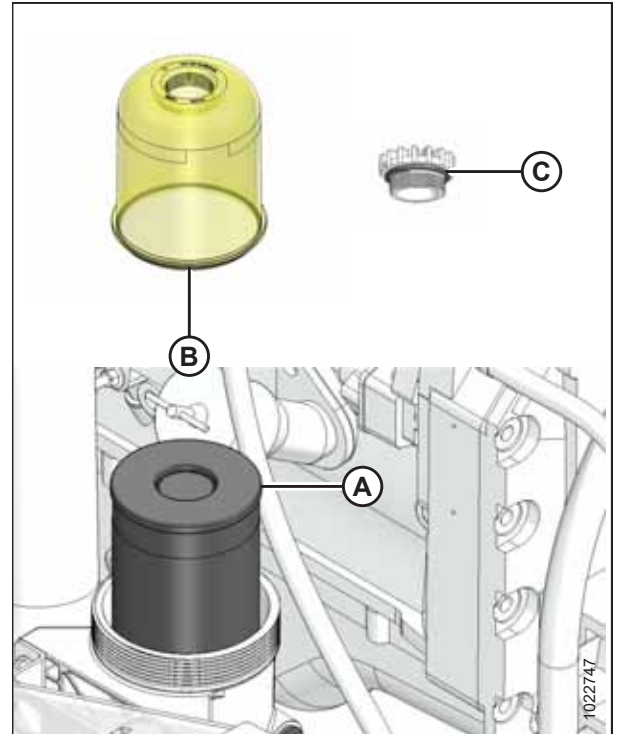


Figure 6.79: Primary Fuel Filter

Installing Primary Fuel Filter

Install the new primary fuel filter after removing the old filter.

For the primary fuel filter replacement part number, refer to [9.2.4 Filter Part Numbers, page 533](#).

45. Only if using greater than B5 fuel.

MAINTENANCE AND SERVICING

1. Clean cover (A), collar (B), and threads (C) on the filter body.
2. Install new filter (D).

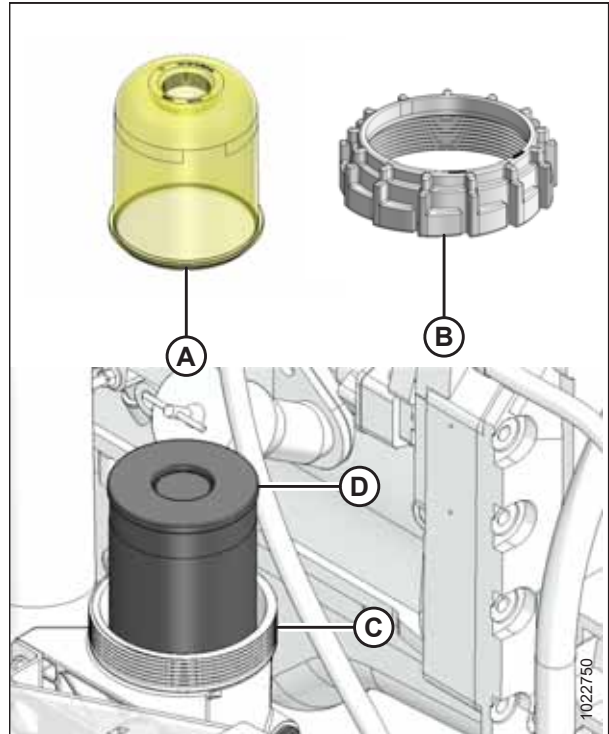


Figure 6.80: Primary Fuel Filter

3. Install new O-rings (A) and (B) onto the cover and the vent cap⁴⁶. Lubricate the O-rings with fuel or clean oil.

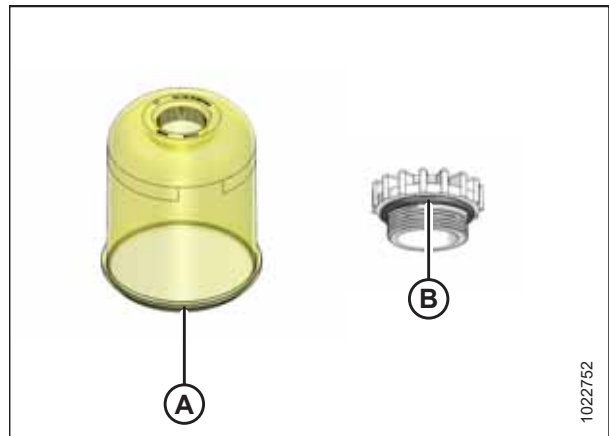


Figure 6.81: Cover and Vent Cap

46. Only if using greater than B5 fuel.

MAINTENANCE AND SERVICING

4. Install spring (A), cover (B), and collar (C). Hand tighten the collar.
5. Add clean fuel to the filter until the fuel is level with the top of filter element (D).

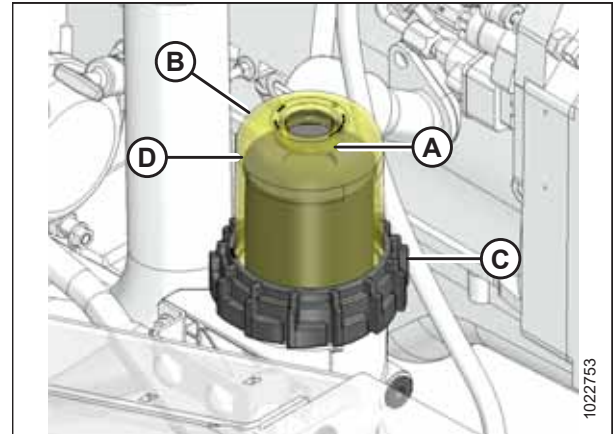


Figure 6.82: Primary Fuel Filter

6. Install vent cap (A). Hand tighten the vent cap.
7. Reconnect the water in fuel (WIF) sensor (not shown).
8. Start the engine. Allow the engine to idle for 1 minute. Open the fuel valve.
9. While the engine is running, slowly open vent cap (A) and allow the fuel level to drop to about 25 mm (1 in.) above collar (B).
10. Close vent cap (A) and hand tighten the vent cap.

NOTE:

It is normal for the fuel level to fluctuate briefly after the engine is started, and while it is operating.

11. Open valve (A) under the fuel tank.

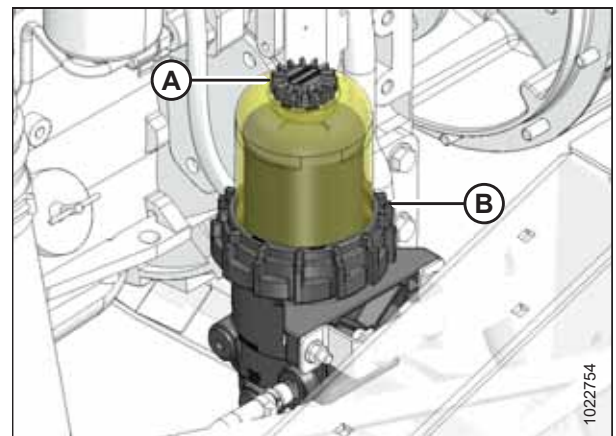


Figure 6.83: Primary Fuel Filter

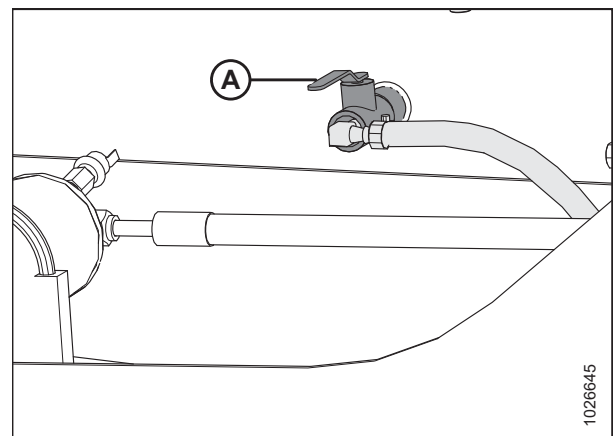


Figure 6.84: Fuel Shut-off valve

Removing Secondary Fuel Filter

Removing the secondary fuel filter involves disconnecting it from the fuel system and draining it of fuel. The secondary filter does not have a water separator.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to the highest position. For instructions, refer to [6.3.3 Opening Hood – Highest Position, page 372](#).
3. Clean around secondary filter head (A).
4. Place a container under the filter to catch spilled fluid.
5. Remove filter (B) with a filter wrench.
6. Clean the gasket mating surface.

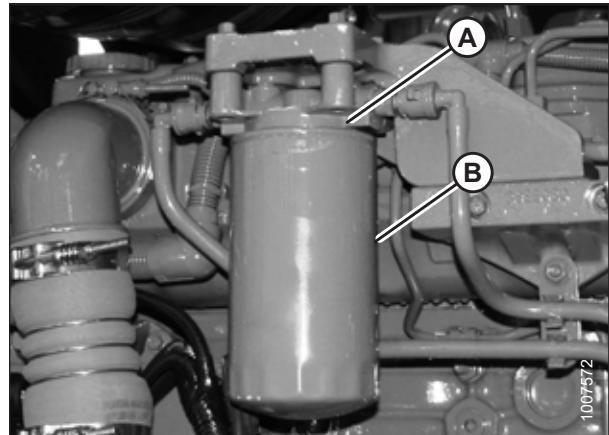


Figure 6.85: Secondary Fuel Filter

Installing Secondary Fuel Filter

The secondary fuel filter does not have a water separator.

For the secondary fuel filter replacement part number, refer to [9.2.4 Filter Part Numbers, page 533](#).

1. Screw new secondary filter (A) onto the filter mount until the gasket contacts the filter head.
2. Tighten the filter an additional 1/2 to 3/4 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install the filter. Overtightening can damage the gasket and filter.

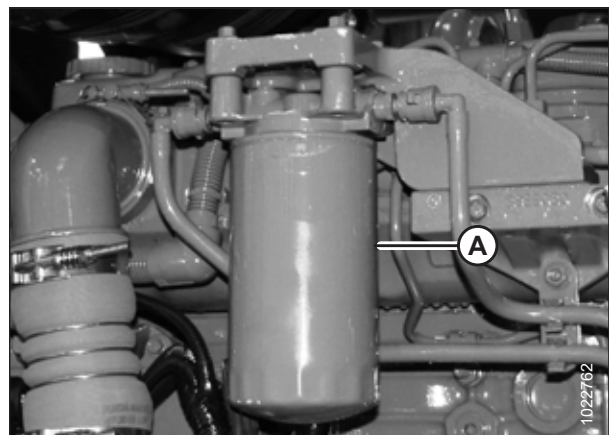


Figure 6.86: Secondary Fuel Filter

MAINTENANCE AND SERVICING

3. Open fuel valve (A) under the fuel tank.
4. Prime the fuel system. For instructions, refer to [Priming Fuel System, page 421](#).

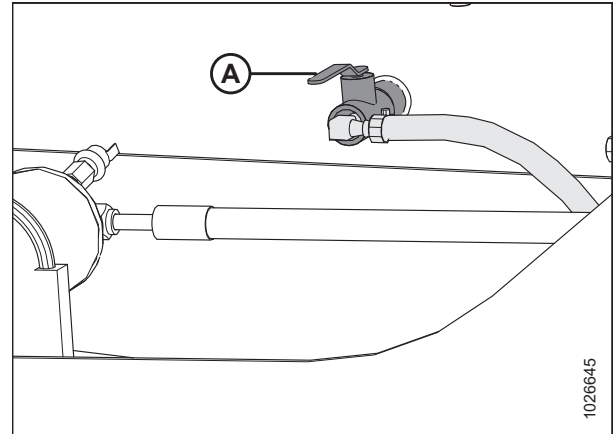


Figure 6.87: Fuel Shut-off Valve

Draining Fuel Tank

Draining the fuel tank is necessary to remove old or contaminated fuel, or if the fuel tank requires service.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

WARNING

- To prevent personal injury or death from an explosion or fire, do NOT allow open flames or sparks near the windrower when it is being refueled.
 - Do NOT refuel the windrower when the engine is hot or running.
 - Ensure that the fuel delivery system is properly bonded and grounded. A bonded fuel delivery system has an electrically conductive and unbroken connection between all components of the fuel delivery system. A wire connection from the fuel delivery system to the machine chassis will equalize the static potential between the two machines, further reducing the chance of a static electric discharge. A properly grounded fuel delivery system has an electrically conductive connection from the fuel delivery system tank to the ground.
1. Shut down the engine, and remove the key from the ignition.
 2. Open the hood to its lowest position. For instructions, refer to [6.3.1 Opening Hood – Lower Position, page 371](#).
 3. Close fuel shut-off valve (A) located on the bottom of the fuel tank.

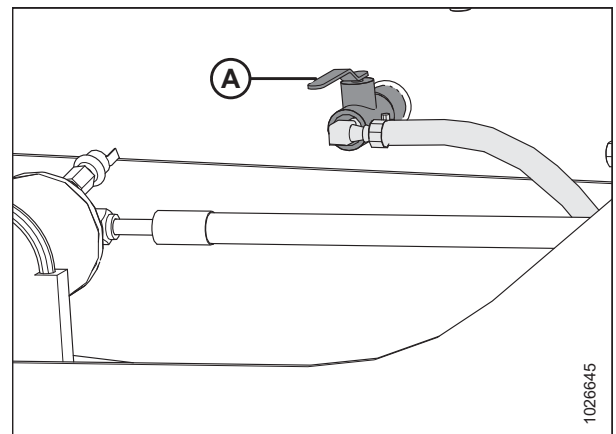


Figure 6.88: Fuel Shut-off Valve

MAINTENANCE AND SERVICING

4. Place a 20 liter (5 US gallon) drain pan under fuel supply hose (A) at the primary filter.
5. Loosen clamp (B) and pull fuel supply hose (A) off of its fitting.

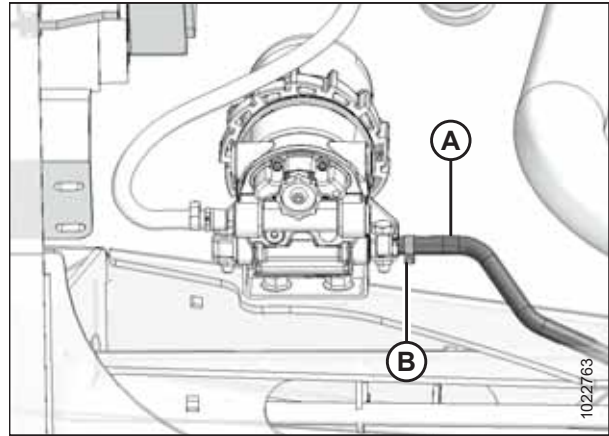


Figure 6.89: Fuel System

6. Route the hose to the drain pan, and then open valve (A) to drain the fuel tank.

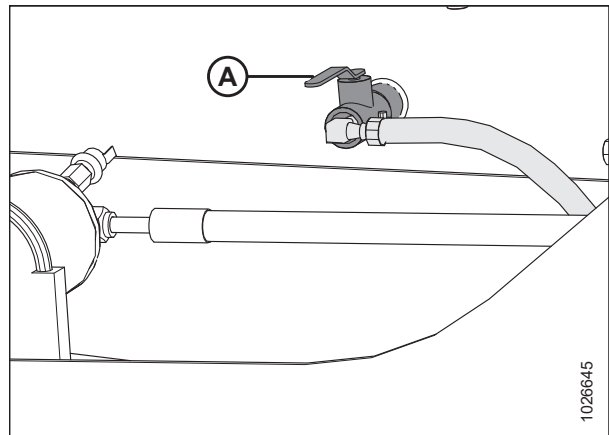


Figure 6.90: Fuel Shut-off Valve

7. Add some clean fuel to the tank to flush out any remaining contaminants.
8. Reattach fuel supply hose (A) to the fitting. Install clamp (B) and tighten it.

NOTE:

Do **NOT** refill the fuel tank immediately if you intend to perform additional maintenance on the fuel system. Refill it once your tasks are completed. For instructions, refer to [Filling Fuel Tank, page 163](#).

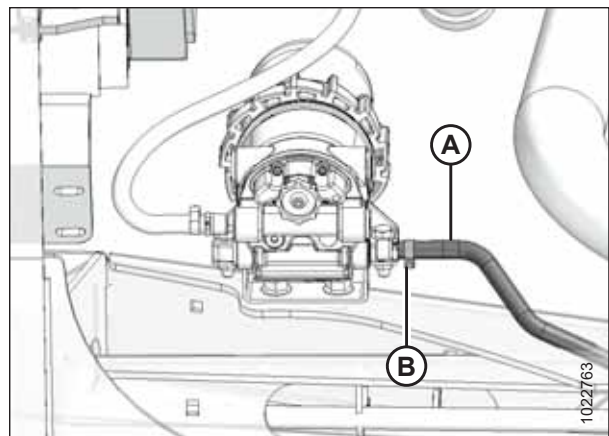


Figure 6.91: Fuel System

Fuel/Water Separator

A fuel/water separator is incorporated into the primary fuel filter. The separator is equipped with a drain and a sensor that triggers a warning on the cab display module (CDM) if water is detected in the fuel. Drain the water and sediment from the separator daily and whenever the water in fuel (WIF) light on the CDM is active.

Removing Water from Fuel System

Water in the fuel system can result in damage to the windrower's engine. If water is detected in the fuel system, it must be removed immediately.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to the lower position. For instructions, refer to [6.3.1 Opening Hood – Lower Position, page 371](#).
3. Place a container under filter (A) to catch any spilled fluid.
4. Turn drain valve (B) by hand 1 1/2 to 2 turns counterclockwise until fluid begins flowing out of the filter.
5. Drain the filter sump of water and sediment until a stream of clear fuel is visible.
6. Turn the valve clockwise to close the drain.
7. Dispose of the collected fluid safely.
8. Close the hood. For instructions, refer to [6.3.2 Closing Hood – Lower Position, page 372](#).

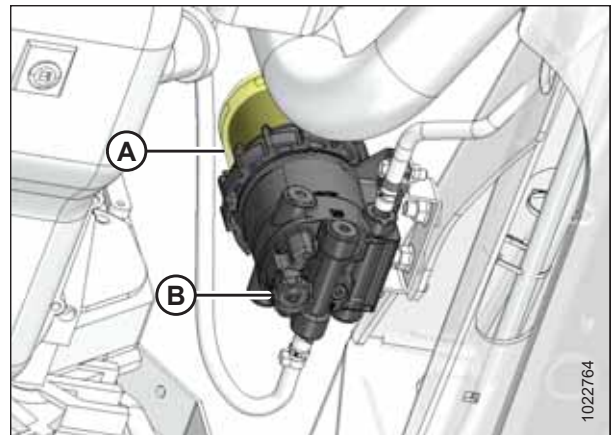


Figure 6.92: Primary Fuel Filter

Priming Fuel System

Controlled venting of air is provided at the injection pump through the fuel drain manifold. Small amounts of air, introduced by changing filters or injection pump supply line, will be vented automatically if the fuel filters are changed according to the intervals specified in the windrower's maintenance schedule. However, service procedures such as changing the fuel filter can result in the loss of the fuel system's prime. If the continuous flow of fuel to the fuel injector is interrupted, the fuel system will need to be re-primed manually.

IMPORTANT:

Bleeding the fuel system is **NOT** recommended or required at any time. Manual priming will be needed if:

- The fuel filter is replaced
- The fuel injection pump is replaced
- The high-pressure fuel lines are replaced
- The engine is run until the fuel tank is empty

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

WARNING

The fuel pump high-pressure fuel lines and fuel rail contain extremely high pressure fuel. Never loosen any fittings. Personal injury and property damage can result.

1. Remove the key from the ignition.
2. Open the hood to the lower position. For instructions, refer to *6.3.1 Opening Hood – Lower Position, page 371*.
3. Ensure that drain valve (A) at the base of the filter is closed.
4. Remove vent cap (B) and fill bowl (C) with clean fuel.
5. Reinstall vent cap (B) and hand tighten it.
6. Start the engine and wait until the lubrication system reaches normal operating pressure, then increase the engine rpm to high idle for 1 to 2 minutes.
7. After the air is purged, loosen vent cap (B) until the fuel level lowers to just above collar (D), then hand tighten vent cap (B).

NOTE:

The bowl will not fill completely during engine operation but will gradually fill over time. The fuel level will rise as the filter becomes plugged.

8. Close the hood. For instructions, refer to *6.3.2 Closing Hood – Lower Position, page 372*.

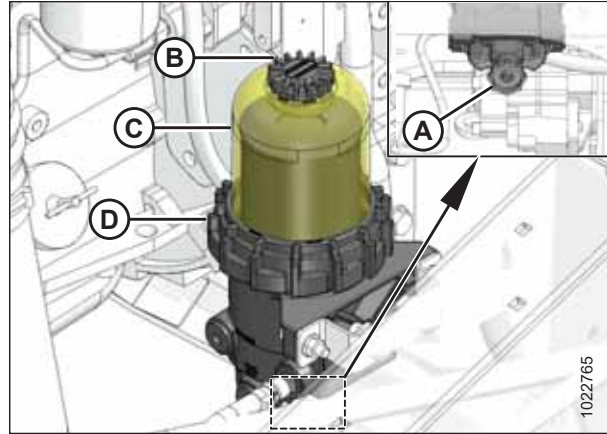


Figure 6.93: Primary Fuel Filter

6.9.6 Engine Cooling System

The engine cooling system is designed to maintain the engine operating temperature within the recommended operating range.

NOTE:

Using coolant with antifreeze is essential in any climate. Antifreeze allows the windrower to be operated in a broader range of ambient temperatures by lowering the coolant's freezing point and by raising its boiling point. Antifreeze also contains rust inhibitors and other additives which extend the service life of the windrower.

IMPORTANT:

If the strength of the antifreeze in the coolant currently in the windrower's cooling system is insufficient, do **NOT** drain the cooling system. The cooling system may not drain completely, and damage from freezing may still result.

Refer to *9.2 Recommended Fuel, Fluids, and Lubricants, page 531* for information on the recommended coolant for the windrower.

Inspecting Radiator Cap

The radiator cap must fit tightly and the cap gasket must be in good condition in order to maintain the cooling system's pressure level, which should be 97–124 kPa (14–18 psi). Inspect the cap whenever you measure the engine coolant's antifreeze strength.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

CAUTION

To avoid personal injury from hot coolant, do NOT attempt to open the radiator cap until the engine cools.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to the highest position. For instructions, refer to [6.3.3 Opening Hood – Highest Position, page 372](#).
3. Move the platform on the left cab-forward side of the machine to the open position. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).
4. Push down and turn cap (A) counterclockwise to the first notch to relieve the pressure in the cooling system before removing the cap completely.
5. Push down and turn cap (A) again and remove it.
6. Check the gasket for cracks or deterioration. Replace the cap if it appears worn.
7. Check that the spring in the cap moves freely.
8. Replace the cap if the spring is stuck.
9. Close the platform. For instructions, refer to [6.4.2 Closing Platforms – Standard Position, page 375](#).
10. Close the hood. For instructions, refer to [6.3.4 Closing Hood – Highest Position, page 373](#).

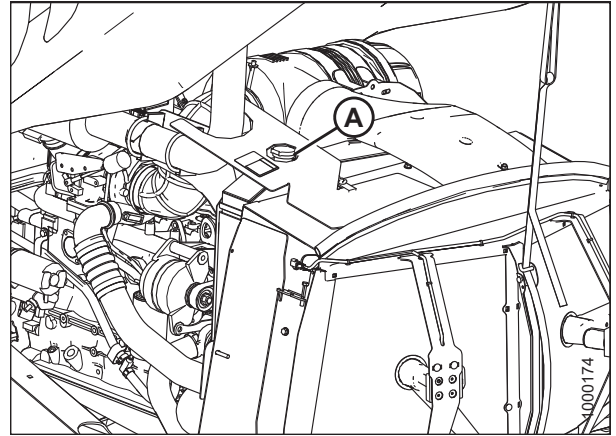


Figure 6.94: Engine Cooling System

Checking Engine Coolant Strength

The strength of the antifreeze in the coolant in the radiator will need to be tested according to the interval specified in the maintenance schedule.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

CAUTION

To avoid personal injury from hot coolant, do NOT attempt to open the radiator cap until the engine cools.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to the highest position. For instructions, refer to [6.3.3 Opening Hood – Highest Position, page 372](#).
3. Move the platform on the left cab-forward side of the machine to the open position. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).

MAINTENANCE AND SERVICING

4. Push down and turn radiator cap (A) counterclockwise to the first notch to relieve pressure before removing the cap completely.
5. Push down and turn cap (A) again and remove it.
6. Check the coolant in the radiator using an antifreeze tester. The tester should indicate that the antifreeze in the coolant will protect the engine at temperatures equal to or greater than -34°C (-30°F).

IMPORTANT:

Use a tester that is specifically designed for the type of antifreeze used in the windrower. Using an inappropriate antifreeze tester can result in an incorrect antifreeze strength reading.

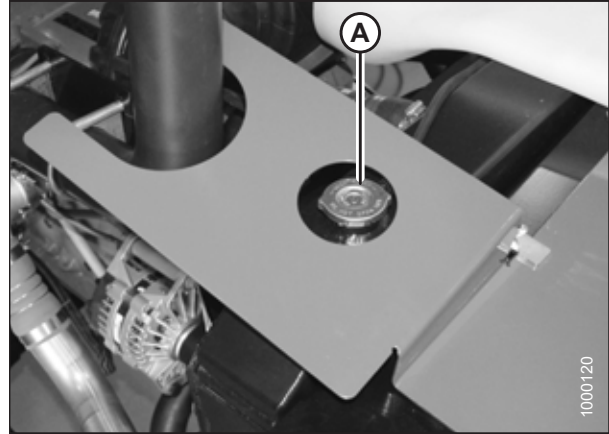


Figure 6.95: Engine Cooling System

7. Inspect the radiator cap before reinstalling it. For instructions, refer to *Inspecting Radiator Cap, page 422*.
8. Reinstall radiator cap (A).
9. Close the platform. For instructions, refer to *6.4.2 Closing Platforms – Standard Position, page 375*.
10. Close the hood. For instructions, refer to *6.3.4 Closing Hood – Highest Position, page 373*.

Checking Coolant Level

Inspect the the coolant recovery tank to check the coolant level.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to the highest position. For instructions, refer to *6.3.3 Opening Hood – Highest Position, page 372*.
3. Move the platform on the left cab-forward side of the machine to the open position. For instructions, refer to *6.4.1 Opening Platforms – Standard Position, page 374*.

MAINTENANCE AND SERVICING

4. Ensure that coolant recovery tank (A) is within the indicated range on the decal. To add coolant, refer to [Adding Coolant, page 428](#).
5. Close the platform. For instructions, refer to [6.4.2 Closing Platforms – Standard Position, page 375](#).
6. Close the hood. For instructions, refer to [6.3.4 Closing Hood – Highest Position, page 373](#).

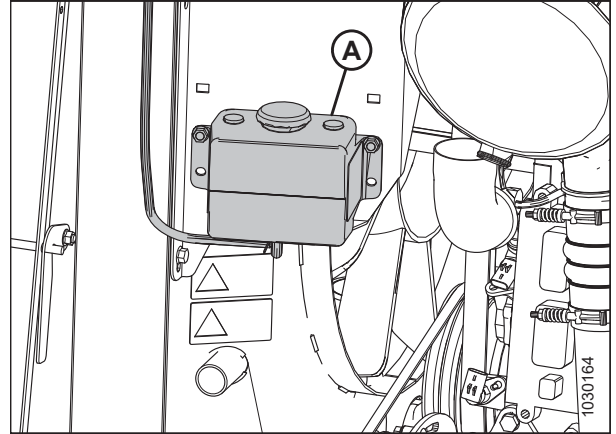


Figure 6.96: Engine Coolant Tank

Changing Coolant

The windrower's coolant should be drained and the cooling system flushed and filled with new coolant according to the interval specified in the maintenance schedule.

To change the coolant, refer to the following procedures:

- [Draining and Cleaning Cooling System, page 425](#)
- [Adding Coolant, page 428](#)

Draining and Cleaning Cooling System

Once the coolant has been drained from the cooling system, the system should be flushed and cleaned before being refilled with coolant.



DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.



CAUTION

To avoid personal injury from hot coolant, do NOT attempt to open the radiator cap until the engine cools.

1. Shut down the engine, and remove the key from the ignition.
2. Ensure that the cooling system is cold.
3. Open the hood to the highest position. For instructions, refer to [6.3.3 Opening Hood – Highest Position, page 372](#).
4. Move the platform on the left cab-forward side of the machine to the open position. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).

MAINTENANCE AND SERVICING

5. Push down and turn radiator cap (A) to the first notch to relieve the pressure in the cooling system. Remove the cap.

IMPORTANT:

Place a drain pan of a capacity of at least 30 liters (8 US gallons) under the engine and the radiator. Use a deflector or hose to prevent coolant from running onto the windrower's frame.

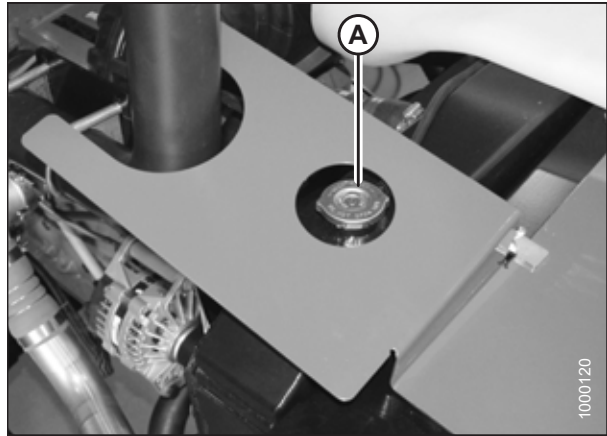


Figure 6.97: Radiator Cap

6. Locate radiator drain valve (A) at the bottom of the engine side of the radiator lower tank. Open the drain valve.

NOTE:

The frame has been removed from the illustration for the sake of clarity.

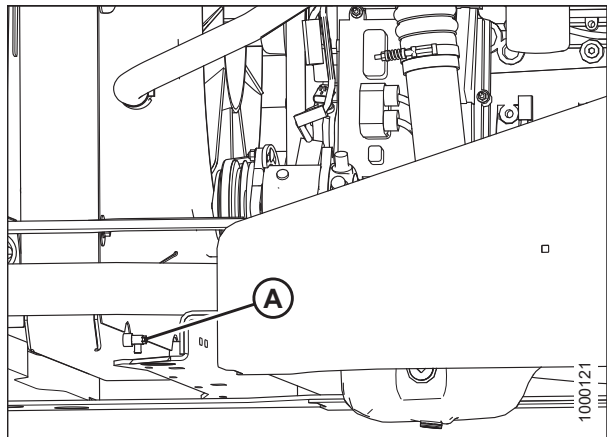


Figure 6.98: Radiator Drain Valve

7. Close heater shut-off valve (A). Disconnect the hose on the heater side of the valve.

NOTE:

Be careful when removing the hose as the system will be drained.

8. Open the valve to drain the block.
9. Reattach the hose to valve (A).

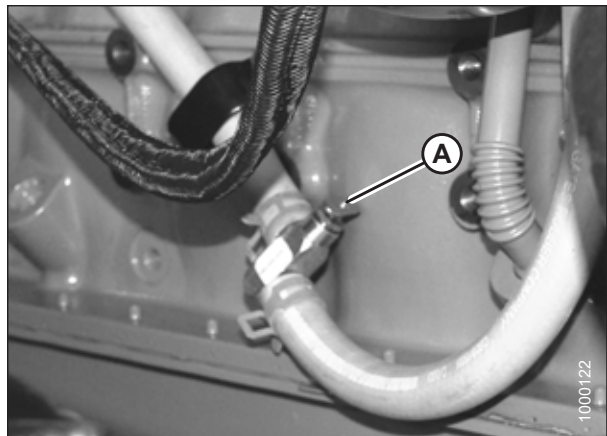


Figure 6.99: Heater Shut-Off Valve

MAINTENANCE AND SERVICING

10. Close radiator drain valve (A) at the bottom of the radiator's lower tank.

NOTE:

The frame has been removed from the illustration for the sake of clarity.

11. Fill the system with clean water through the radiator and replace the radiator cap.

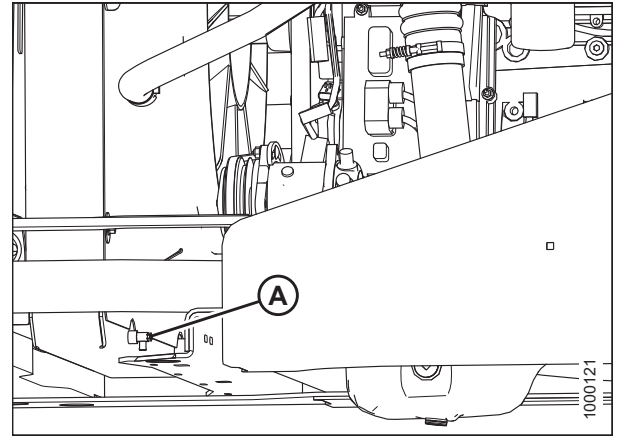


Figure 6.100: Radiator Drain Valve

12. Open heater shut-off valve (A).
13. Start the engine.
14. Turn the temperature control knob to the HIGH position. Allow the engine to run until it reaches operating temperature.
15. Stop the engine, and remove the key from the ignition.



CAUTION

Be careful when draining the water from the cooling system, as the water will be at the engine operating temperature of 82–104°C (180–220°F).

16. Drain the water from the cooling system quickly. This procedure is identical to the coolant removal procedure.

NOTE:

Drain the water from the cooling system as quickly as possible after the engine has been turned off to prevent rust flakes or other sediment from settling.

17. Close the drain valves.
18. Fill the cooling system with a solution of clean water and a heavy-duty radiator cleaner. Follow the instructions provided with the cleaner.
19. After using the cleaner solution, flush the system with clean water again. Inspect the radiator, hoses, and fittings for leaks.
20. Close the drain valves.
21. Fill the cooling system with coolant. For instructions, refer to [Adding Coolant, page 428](#).

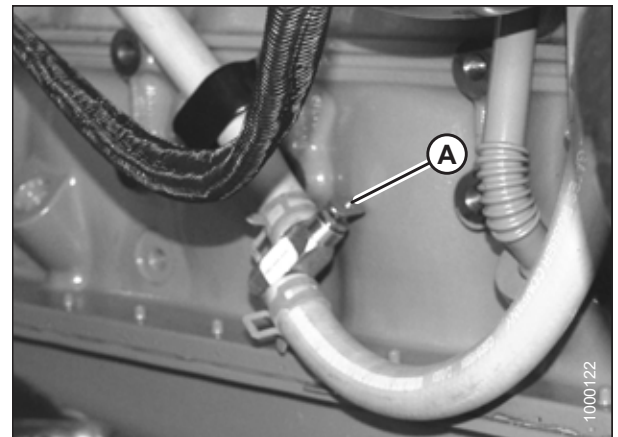


Figure 6.101: Heater Shut-Off Valve

MAINTENANCE AND SERVICING

22. Replace cap (A) on coolant recovery tank (B).
23. Close the platform. For instructions, refer to [6.4.2 Closing Platforms – Standard Position, page 375](#).
24. Close the hood. For instructions, refer to [6.3.4 Closing Hood – Highest Position, page 373](#).

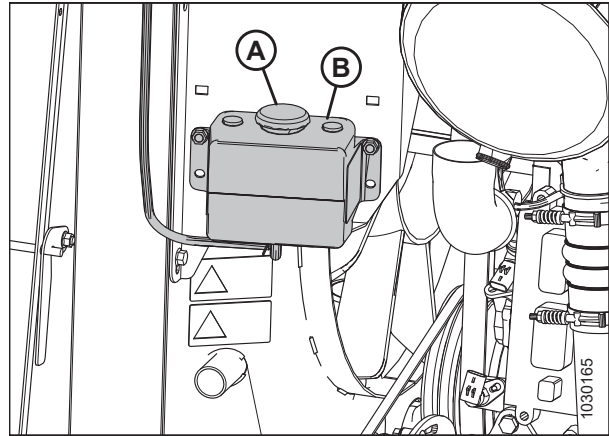


Figure 6.102: Coolant Recovery Tank

Adding Coolant

Check the coolant level in the coolant recovery tank daily. Add coolant if the level is below the range indicated on the tank decal.

NOTE:

For coolant specifications, refer to the inside back cover.

⚠ DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

⚠ CAUTION

To avoid personal injury from hot coolant, do **NOT** attempt to open the radiator cap until the engine cools.

NOTE:

Do **NOT** add coolant directly into the radiator except when changing coolant.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to the highest position. For instructions, refer to [6.3.3 Opening Hood – Highest Position, page 372](#).
3. Move the platform on the left cab-forward side of the machine to the open position. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).

4. Remove cap (A) from coolant recovery tank (B).
5. Add coolant at a rate not exceeding 3 gallons per minute until the coolant level is within the range on the decal.

! DANGER

Ensure that all bystanders have cleared the area.

6. Start the engine. Allow the engine to run at high idle for approximately 20 minutes or until the engine temperature reaches 85°C (185°F).
7. Check the coolant level again. Add coolant until the coolant level is within the range on the decal.

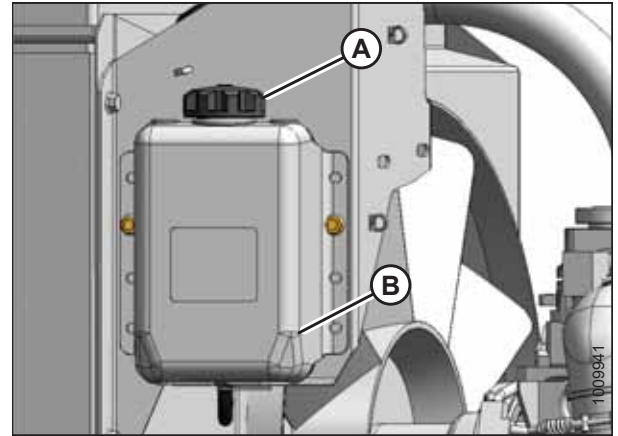


Figure 6.103: Coolant Recovery Tank

8. Replace cap (A).
9. Close the platform. For instructions, refer to [6.4.2 Closing Platforms – Standard Position, page 375](#).
10. Close the hood. For instructions, refer to [6.3.4 Closing Hood – Highest Position, page 373](#).

Maintaining Engine Cooling Box

The windrower engine cooling box components should be cleaned daily, and more frequently in severe dust conditions.

Refer to the following list of procedures before attempting to perform maintenance on the engine cooling box components:

- [Opening Cooler Box Screen, page 429](#)
- [Charge Air Cooling, page 430](#)
- [Cleaning Screens and Coolers, page 430](#)
- [Cleaning Cooler Box Components, page 432](#)
- [Adjusting Screen Cleaner Rotor to Screen Clearance, page 433](#)
- [Closing Cooler Box Screen, page 434](#)

Opening Cooler Box Screen

The cooler box screen will need to be opened in for the cooler box to be cleaned.

! DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood. For instructions, refer to [6.3.3 Opening Hood – Highest Position, page 372](#).

MAINTENANCE AND SERVICING

3. Push latch (A) and open screen assembly access door (B). Secure the access door using the rod, which is stored inside the screen door.

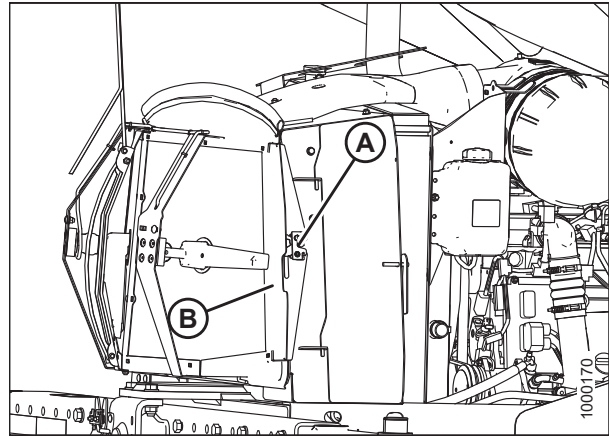


Figure 6.104: Engine Cooling System

Charge Air Cooling

Charge air is routed through a cooler located in the cooling box, prior to entering the engine intake. The cooler should be cleaned daily using compressed air.

For instructions on cleaning charge air cooler (A) and the rest of the air cooling system, refer to [Cleaning Screens and Coolers](#), page 430 and [Cleaning Cooler Box Components](#), page 432.

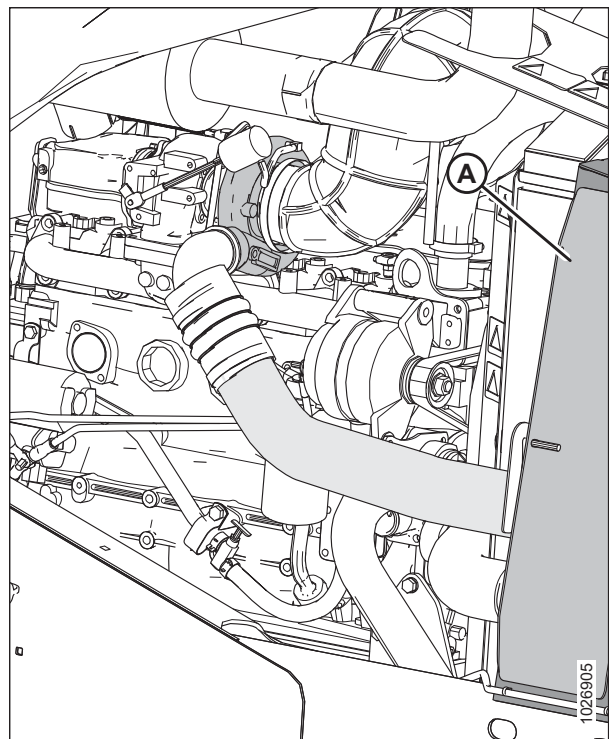


Figure 6.105: Engine Air Intake System

Cleaning Screens and Coolers

When the engine is running, two electrically-driven rotors and suction from the engine's cooling fan sweep and vacuum debris away from the cooling box screen. If the screen is not being cleaned, the rotors or ducts may be plugged.

NOTE:

The following procedure demonstrates how to clean the screens on one side of the engine bay. The procedure for cleaning the other side is similar.

MAINTENANCE AND SERVICING

1. Open the hood. For instructions, refer to [6.3.3 Opening Hood – Highest Position, page 372](#).
2. Remove nuts (B).
3. Pivot screen cleaner assembly (C) away from the screen.
4. Blow debris away from cleaner duct (A) using compressed air.
5. If the duct is plugged, open the cooler box screen. For instructions, refer to [Opening Cooler Box Screen, page 429](#).

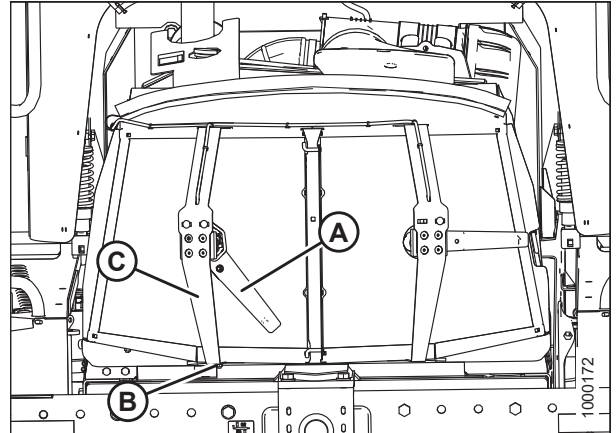


Figure 6.106: Screen Cleaner Assembly

6. Blow debris out of duct (A) using compressed air.
7. Clean the screen using compressed air.

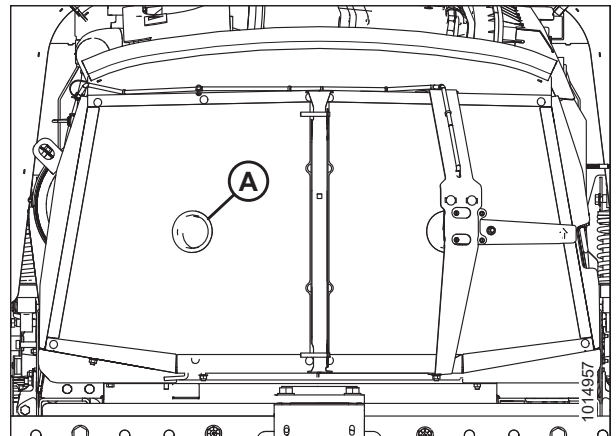


Figure 6.107: Cooler Box Screen

8. Move screen cleaner assembly (C) back into position. Secure it with bolts and nuts (B).
9. Check the clearance between duct (A) and the screen. For instructions, refer to [Adjusting Screen Cleaner Rotor to Screen Clearance, page 433](#).
10. Close the cooler box screen. For instructions, refer to [Closing Cooler Box Screen, page 434](#).
11. Close the hood. For instructions, refer to [6.3.4 Closing Hood – Highest Position, page 373](#).

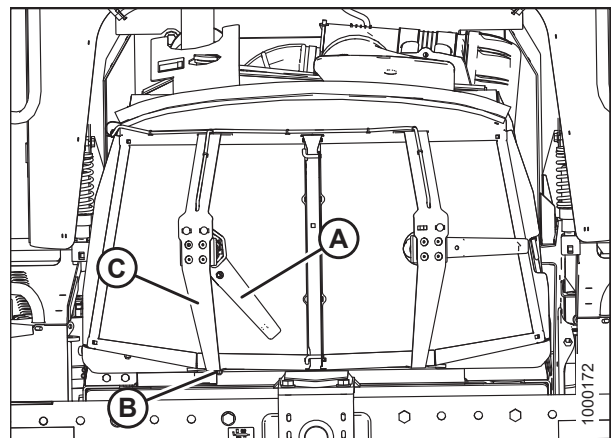


Figure 6.108: Screen Cleaner Assembly

MAINTENANCE AND SERVICING

Cleaning Cooler Box Components

The radiator and oil cooler should be cleaned daily with compressed air. More frequent cleaning may be necessary in severe conditions. The charge air cooler and air conditioning (A/C) condenser may also be cleaned at the same time.

1. Open the cooler box screen. For instructions, refer to [Opening Cooler Box Screen, page 429](#).
2. Lift latch (A) and open right access door (B).

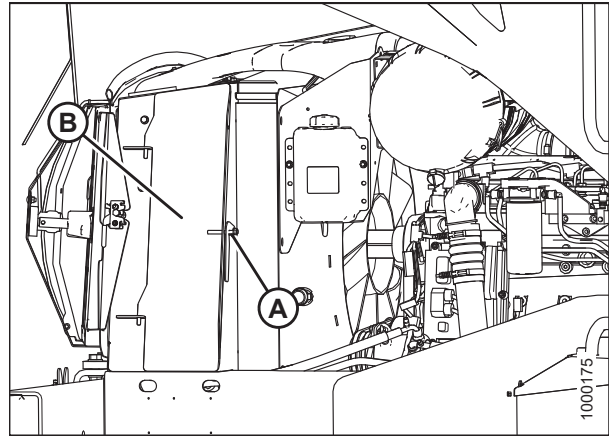


Figure 6.109: Right Cooler Access Door

3. Slide out oil cooler / air conditioning condenser assembly (A).

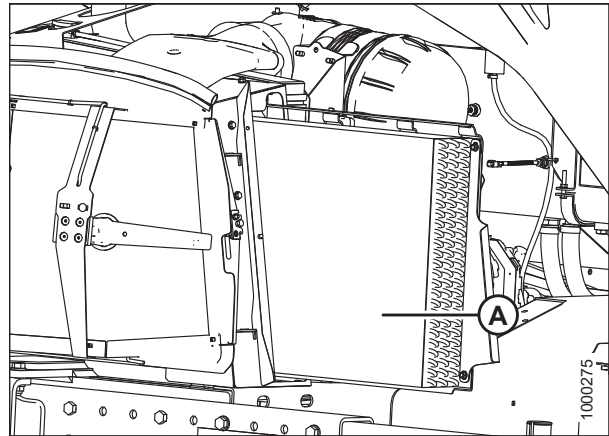


Figure 6.110: A/C Condenser Assembly

4. Lift latch (A) and open left access door (B).

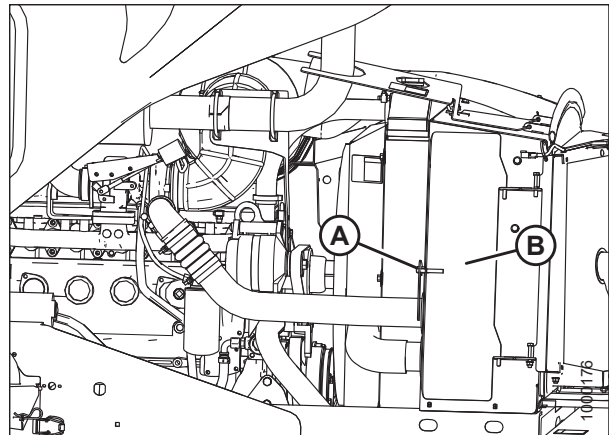


Figure 6.111: Left Cooler Access Door

MAINTENANCE AND SERVICING

5. Remove wing nut (A) and open access door (B) on the top of the cooling box.

IMPORTANT:

Avoid bending the cooler fins when performing this procedure. Bent fins cool less efficiently.

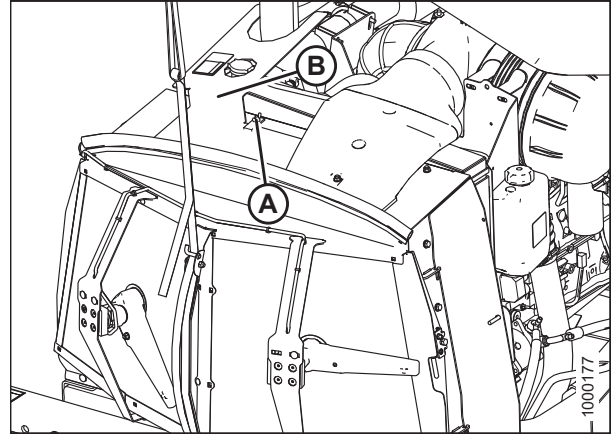


Figure 6.112: Cooling Box Access Door

6. Clean radiator (D) through the access hole in the cooling box using compressed air.

IMPORTANT:

Do **NOT** use a hose or pressure washer to clean the radiator. Water from a hose can plug the cooler and prevent cooling; a pressure washer can bend the fins and damage the coolers.

7. Clean oil cooler / air conditioning condenser (A), charge air cooler (E), cooling box (C), and fuel cooler (B) using compressed air.
8. Inspect all lines and coolers for evidence of leaks or damage.
9. Slide oil cooler / air conditioning condenser (A) back into cooling box (C).
10. Close the side access door. Lock the door with the lever.
11. Close the access door on top of the cooling box. Secure it with the wing nut.
12. Close the cooler box screen. For instructions, refer to [Closing Cooler Box Screen, page 434](#).

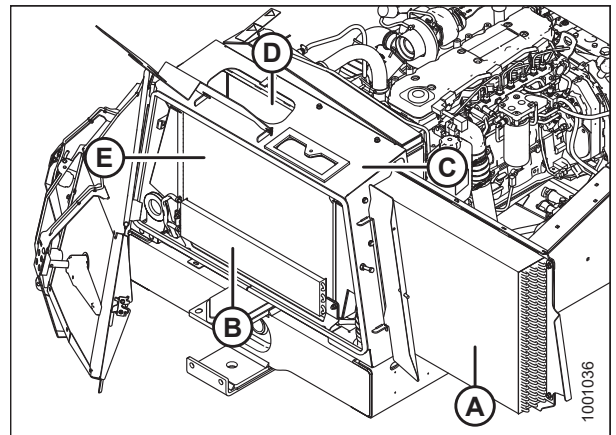


Figure 6.113: Engine Cooling System

Adjusting Screen Cleaner Rotor to Screen Clearance

For the cooler box's screen cleaners to work effectively, the proper clearance between the trailing edge of the screen cleaner rotor and the screen must be maintained.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to the lower position. For instructions, refer to [6.3.1 Opening Hood – Lower Position, page 371](#).

MAINTENANCE AND SERVICING

NOTE:

The screen cleaner rotors rotate counterclockwise. It is acceptable for the rotors to touch the screen, so long as their rotation is not slowed or obstructed.

- Loosen nut (B) on motor support (C).
- Move the support in or out until duct (A) is 2–6 mm (0.079–0.236 in.) from the screen near the center.
- Tighten nut (B).
- Loosen two motor mount bolts (D).
- Move motor/duct assembly (E) until there is a gap of 1–8 mm (0.039–0.314 in.) between the screen and the rotor when it is fully rotated.
- Tighten nuts (D) on the motor mount.
- Close the hood. For instructions, refer to [6.3.2 Closing Hood – Lower Position, page 372](#).

Closing Cooler Box Screen

Once you are finished maintaining or servicing the cooler box, close the cooler box screen.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- Shut down the engine, and remove the key from the ignition.
- Unhook the support rod and store it in the screen door. Close screen access door (B) and engage latch (A).
- Close the hood. For instructions, refer to [6.3.4 Closing Hood – Highest Position, page 373](#).

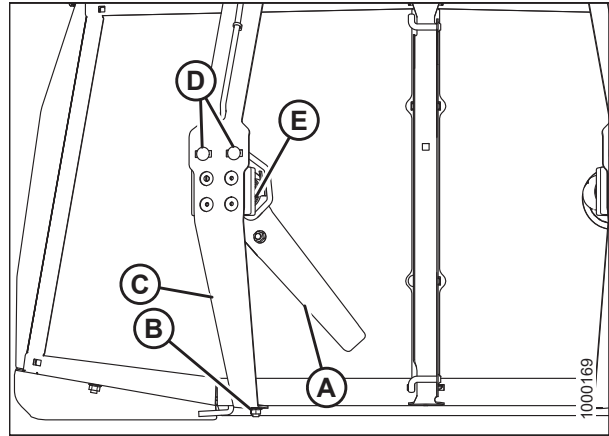


Figure 6.114: Screen Cleaner

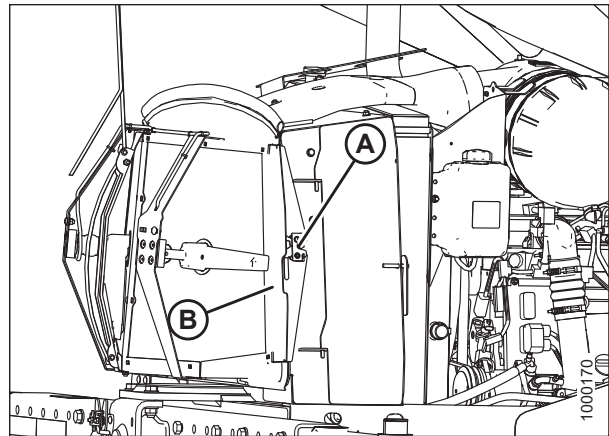


Figure 6.115: Engine Cooling System

6.9.7 Gearbox

The gearbox's lubricant will need to be inspected and changed from time to time, according to the intervals specified in the maintenance schedule.

Checking Lubricant Level and Adding Lubricant

The gearbox's lubricant level can be inspected through the check plug port. Lubricant can also be added through this port.

CAUTION

Park on a flat, level surface with the header on the ground, the ground speed lever (GSL) in the N-DETENT position, and the steering wheel in the locked position (centered). To confirm that the parking brake is engaged, wait for the cab display module (CDM) to beep and display the message IN PARK.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Check the lubricant level every 50 hours as follows:

1. Park the windrower on level ground.
2. Shut down the engine, and remove the key from the ignition.
3. Remove check plug (A). The lubricant should be visible through the hole.

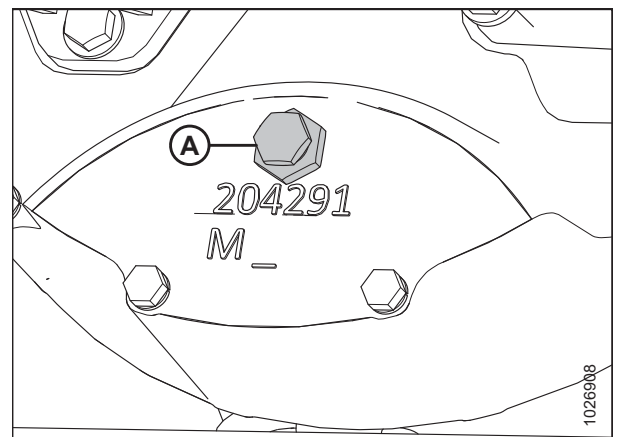


Figure 6.116: Gearbox Lubricant Check Plug

4. To add lubricant:
 - a. Remove breather cap (A). Pour lubricant through the filler neck until it runs out of the check port. To refill the gearbox completely, add approximately 2.1 liters (2.2 US quarts) of lubricant.
 - b. Replace the check plug and the breather cap and tighten them.
 - c. Start the engine.
 - d. Allow the engine to operate at low idle while you inspect the gearbox for potential lubricant leaks.
 - e. Shut down the engine, and remove the key from the ignition.

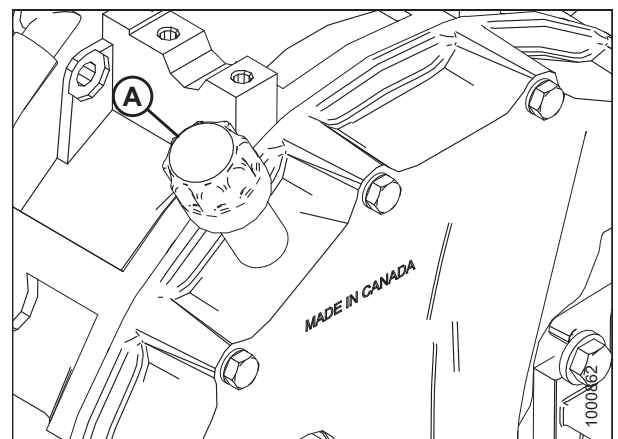


Figure 6.117: Gearbox Breather Cap

Changing Lubricant

The gearbox lubricant will need to be changed according to the interval specified in the maintenance schedule.

CAUTION

Park the windrower on a flat, level surface. Lower the header to the ground, put the ground speed lever (GSL) into the N-DETENT position, and center the steering wheel in the locked position. Wait for the cab display module (CDM) to beep and display an “In Park” message to confirm that the parking brake is engaged.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator’s seat for any reason.

NOTE:

The engine should be warm when changing the gearbox lubricant.

1. Shut down the engine, and remove the key from the ignition.
2. Place a drain pan with a capacity of at least 4 liters (1 US gallon) under the gearbox.
3. Remove drain plug (B) and let the oil drain completely.
4. Install drain plug (B) and remove check plug (A).

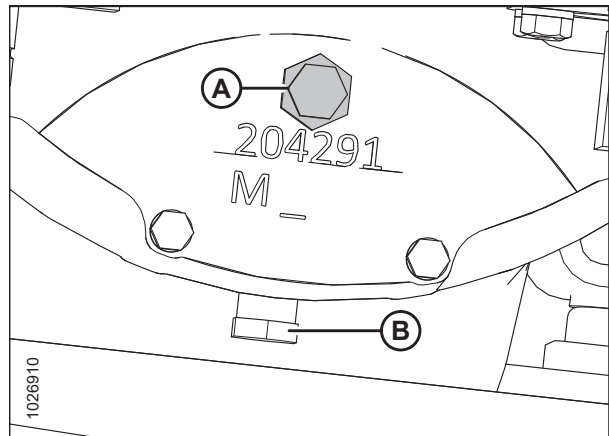


Figure 6.118: Gearbox Lubricant Drain Plug

5. Add lubricant as follows:
 - a. Remove breather cap (A) and add lubricant until it runs out the check port. If refilling, add approximately 2.1 liters (2.2 US quarts).
 - b. Replace the check plug and the breather cap and tighten them.
 - c. Operate the engine at low idle and check for leaks at the check plug and drain plug.

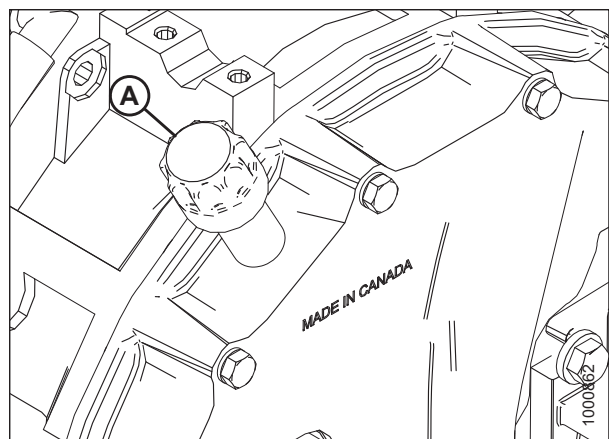


Figure 6.119: Gearbox Breather Cap

6.9.8 Inspecting Exhaust System

The exhaust system requires no regular maintenance, but should be inspected periodically.

CAUTION

The engine exhaust stack may be hot. To avoid burns, do **NOT** touch the exhaust canister while the engine is running. Allow the exhaust stack to cool before attempting to service it.

1. Open the hood to its highest position. For instructions, refer to [6.3.3 Opening Hood – Highest Position, page 372](#).
2. Inspect the area around clamps (A) for breakage, cracks, and rust-through. In addition to being noisy, a leaky exhaust system may allow exhaust gases to escape to the cab, which presents an air quality hazard for the Operator.
3. Check the exhaust tubing for dents or crushed areas. Dents or crushed portions of any tubing create exhaust flow restriction and increase back pressure. Even relatively small dents will cause decreased fuel economy and increased wear on the turbocharger. If the dents are relatively large, increased bearing and cylinder wear will occur due to increased exhaust temperatures.
4. Ensure that both clamps (A) and (B) are tight.

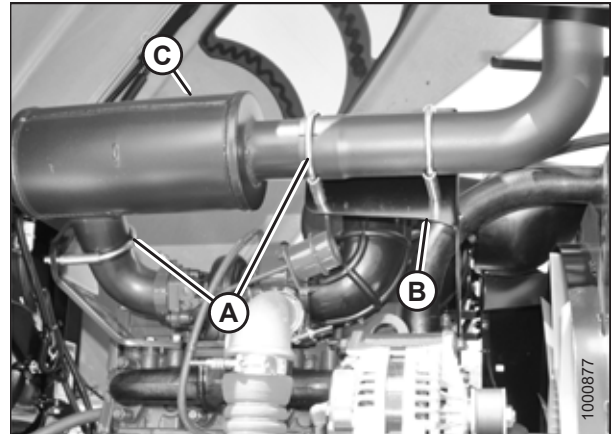


Figure 6.120: Exhaust System

IMPORTANT:

Position clamp (A) on the slot in stack (C) as shown. Ensure that gap (D) between the clamp and the round edge of the slot is 3–10 mm.

IMPORTANT:

Do **NOT** change the muffler type, piping sizes, or the exhaust configuration. See your Dealer for any needed replacement parts.

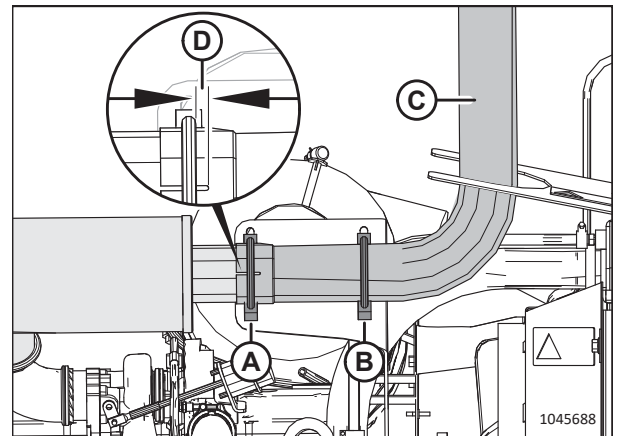


Figure 6.121: Exhaust Stack under Hood

6.9.9 Belts

The fan belt and the air conditioner compressor belt will need to be inspected and replaced from time to time.

Tensioning Fan Belt

The engine fan drive belt is automatically tensioned. Manual adjustment is **NOT** needed.

Replacing Fan Belt

The fan belt drives the radiator cooling fan. If it is worn or damaged, it should be replaced.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Open the left cab-forward platform. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).
3. Open the hood. For instructions, refer to [6.3.1 Opening Hood – Lower Position, page 371](#).
4. Loosen compressor mounting hardware (B). Push the compressor toward the engine to release the tension on the A/C compressor belt.
5. Remove belt (A) from the compressor.

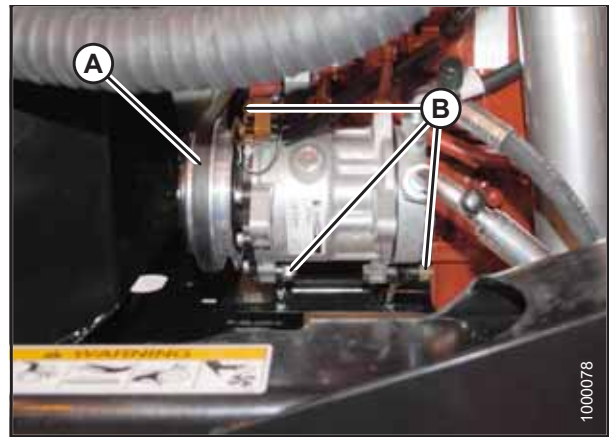


Figure 6.122: A/C Compressor

6. Insert the drive end of a 1/2 in.-drive ratchet wrench into belt tensioner (B).
7. Rotate the tensioner counterclockwise until fan belt (A) can be slipped off of pulley (C). Release the tensioner and remove the wrench.
8. Remove the belt in the order 1–2–3, as shown. Route the fan belt around the fan and remove the belt.
9. Install new belt (A) around the fan and onto the pulleys in the order 3–2–1, as shown.
10. Insert the drive end of a 1/2 in.-drive ratchet wrench into belt tensioner (B).
11. Rotate the tensioner counterclockwise until belt (A) can be slipped onto pulley (C). Release the tensioner and remove the wrench.

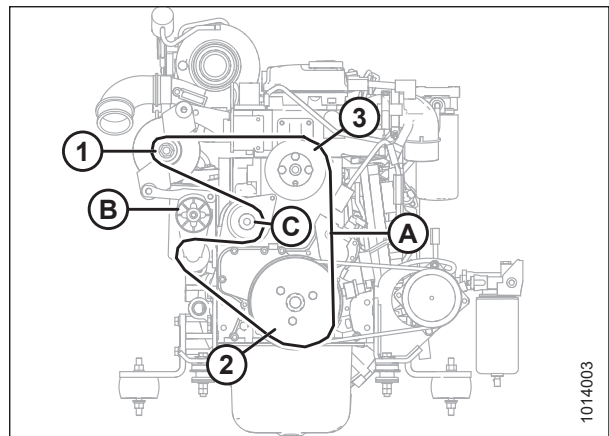


Figure 6.123: Engine Belts

12. Ensure that the belt is properly seated in all pulley grooves.
13. Reinstall compressor belt (A).
14. Tension the compressor belt. For instructions, refer to [Tensioning Air Conditioner Compressor Belt, page 439](#).
15. Close the hood. For instructions, refer to [6.3.2 Closing Hood – Lower Position, page 372](#).
16. Close the platform. For instructions, refer to [6.4.2 Closing Platforms – Standard Position, page 375](#).

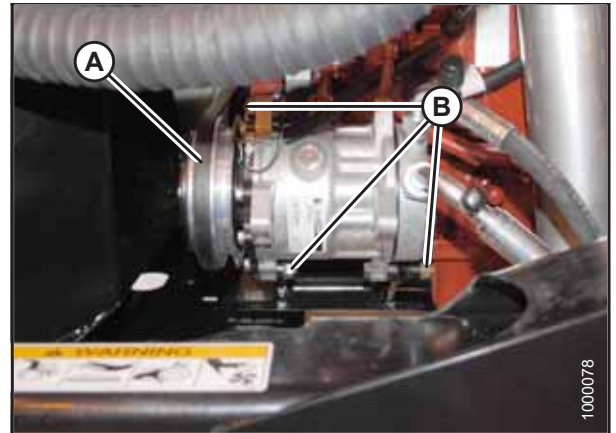


Figure 6.124: A/C Compressor

Tensioning Air Conditioner Compressor Belt

During the first few hours of windrower operation, and after being replaced, the air conditioner compressor belt will need to be tensioned.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to the lower position. For instructions, refer to [6.3.1 Opening Hood – Lower Position, page 371](#).
3. Loosen compressor mounting hardware (B).
4. Pry the compressor away from the engine so that a force of 35–55 N (8–12 lbf) applied to the midspan of belt (A) causes a deflection of 5 mm (3/16 in.).
5. Tighten compressor mounting hardware (B).
6. Recheck the belt tension. Repeat this procedure as needed.
7. Close the hood from the lower position. For instructions, refer to [6.3.2 Closing Hood – Lower Position, page 372](#).

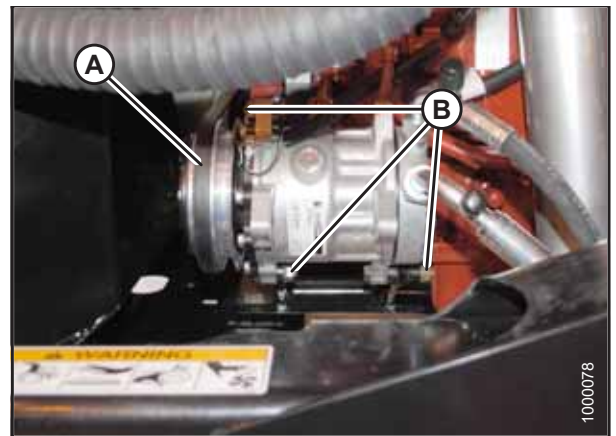


Figure 6.125: A/C Compressor

Replacing Air Conditioner Compressor Belt

If the air conditioner compressor belt shows evidence of wear or damage, it will need to be replaced.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

1. Shut down the engine, and remove the key from the ignition.
2. Open the hood to the lower position. For instructions, refer to [6.3.1 Opening Hood – Lower Position, page 371](#).
3. Loosen compressor mounting hardware (B). Push the compressor toward the engine to release the tension on the A/C compressor belt.
4. Remove belt (A) from the compressor.
5. Install new compressor belt (A).
6. Tension the compressor belt. For instructions, refer to [Tensioning Air Conditioner Compressor Belt, page 439](#).
7. Close the hood. For instructions, refer to [6.3.2 Closing Hood – Lower Position, page 372](#).

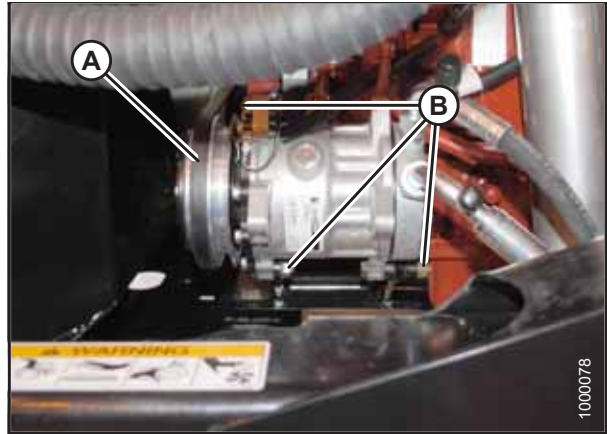


Figure 6.126: A/C Compressor

6.9.10 Engine Speed

The engine's idle and maximum speeds are factory set.

Refer to [2.2 Specifications, page 28](#) for detailed information. If specified speeds cannot be maintained, see your MacDon Dealer.

IMPORTANT:

Do **NOT** remove any seals from the injector pump. Removal of seals will void the engine's warranty.

To configure the engine's intermediate speed control function, refer to [Engine Intermediate Speed Control, page 162](#).

Throttle Adjustment

The engine speed is controlled by a throttle lever connected to an electronic sensor inside the console.

The throttle lever in the cab should be able to move the throttle sensor through its full range without contacting the console at any point.

If the throttle lever is contacting the console and interferes with the specified engine speeds, the sensor position may need adjustment. Contact your MacDon Dealer for more information.

6.10 Electrical System

Refer to this section for information on maintaining the windrower's battery, lights, and the circuit breaker and fuses.

6.10.1 Preventing Electrical System Damage

The windrower's electrical system can be damaged if the correct procedures are not followed when the windrower is serviced.

To prevent damage to the electrical system, take the following precautions:

- When connecting a booster battery to the windrower's battery, ensure that the leads are connected to the proper terminals and grounding points.
- Do **NOT** short across the battery or the alternator terminals, or allow the battery's positive (+) cable or alternator wire to become grounded.
- Ensure that the connections from the alternator to the battery are correct before connecting the battery to the windrower.
- When welding on any part of the machine, disconnect the battery cables and alternator wire. For instructions, refer to [1.8 Welding Precautions, page 8](#).
- Always disconnect the battery's ground cable when working with the alternator or the regulator.
- Do **NOT** attempt to polarize the alternator or regulator.
- If wires are disconnected from the alternator, ensure that terminals (A) and (B) are reconnected properly.
- Do **NOT** ground the alternator's field terminal or the field.
- Do **NOT** connect or disconnect the alternator or the regulator wires when the battery is connected or when the alternator is operating.
- Always disconnect the battery's connection to the windrower when using a charger to charge the battery.
- Ensure that all cables are securely connected before operating the engine.
- To prevent damage to the windrower's circuitry, disconnect the negative battery terminal when replacing an electronic control module. Additionally, when handling an electronic control module, avoid touching the connector pins directly.

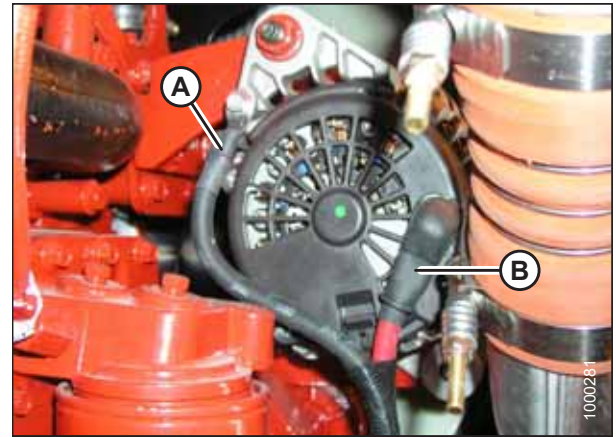


Figure 6.127: Alternator

A - Negative Terminal

B - Positive Terminal

6.10.2 Battery

The windrower is equipped with a pair of batteries, which are used to start the windrower and to power its electrical system. Follow these recommendations to ensure the service life of the batteries.

Maintaining Batteries

To ensure the service life of the windrower's batteries, follow these recommendations.

CAUTION

Do NOT attempt to service the battery unless you have the proper equipment and the training necessary to perform the task. Contact your MacDon Dealer if the electrical system requires service.

- Measure the battery's charge once a year, or more often if the windrower regularly operates in cold weather. Hydrometer readings should range between 1.260 and 1.300. Readings below 1.250 indicate that charging is required. For instructions, refer to [Charging Batteries, page 443](#). The battery may also require additional electrolyte fluid. For instructions, refer to [Adding Electrolyte to Batteries, page 446](#).
- Keep the battery case clean. To clean the case, wipe it with a damp cloth.
- Keep all connections to the battery clean. If there is corrosion on the battery terminals, apply a paste of baking soda and water to the terminals and scrub them with a brush. A light coating of grease applied to the terminals after the cables are attached will reduce the future occurrence of corrosion.
- To safely store a battery: store it in an upright position, fully charged, in a dry area, at a temperature between -7° and +26°C (+20° to +80°F).
- Do **NOT** stack batteries on top of each other, unless the batteries are placed in cartons first.
- Test batteries every 4–6 months. Recharge them if necessary.

Battery Main Disconnect Switch

The battery's main disconnect switch is located on the right cab-forward side frame rail, just behind the batteries. It can be accessed by moving the maintenance platform.

Move switch (A) to the POWER OFF position when servicing electrical components. Doing so will help prevent the loss of battery charge when the windrower will not be used for periods longer than 1 week.

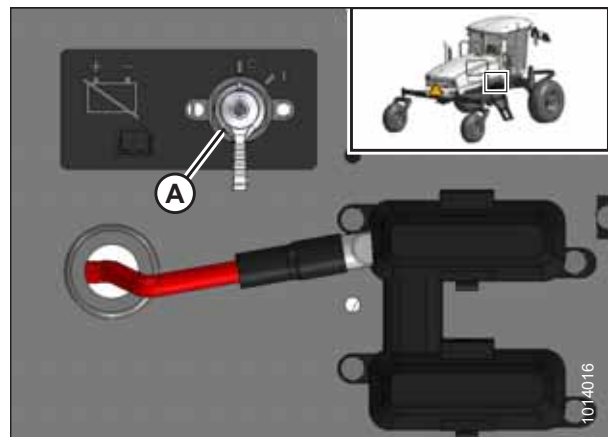


Figure 6.128: Battery Main Disconnect Switch

Charging Batteries

Charging a battery can be dangerous, if the proper procedures are not followed. Familiarize yourself with this information before attempting to charge a battery.

CAUTION

- Ventilate the area where the batteries will be charged.
- Do NOT charge a frozen battery. Warm the battery to 16°C (60°F) before attempting to charge it.
- Do NOT connect or disconnect live circuits.
- To prevent sparks, turn off the charger before attempting to connect the leads to the battery. Connect the positive cable first.
- Wear safety glasses when working with batteries.
- If charging the battery in the windrower, disconnect the positive battery cable before connecting the charger cable. Connect the ground cable last.
- Stop charging the battery, or reduce the charging rate, if the battery feels hot or is venting electrolyte fluid. The battery's temperature must NOT exceed 52°C (125°F).
- The maximum charge rate in amperes should be NO MORE than 1/3 of the battery's reserve capacity rating. If the terminal voltage exceeds 16.0 volts while the battery is being charged, reduce the charging rate. Continue charging the battery. Reduce the charging rate as needed until the voltage does not increase and the current does not decrease in a two-hour period.

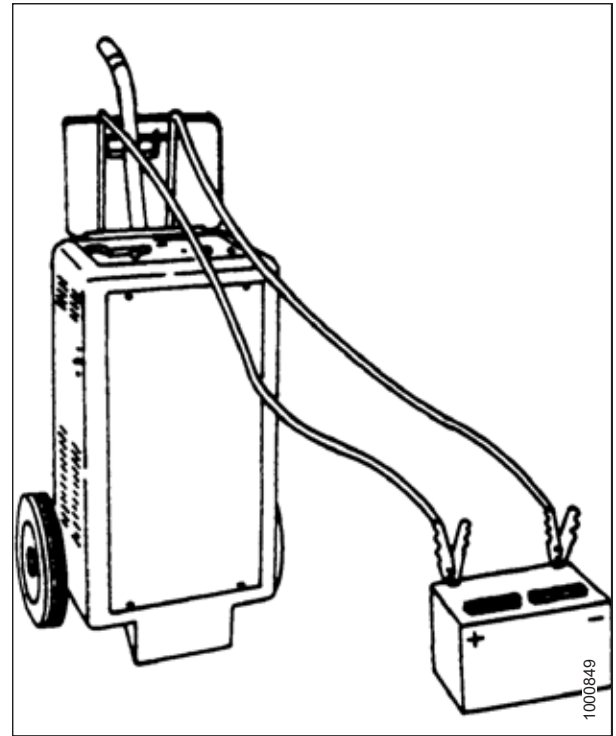


Figure 6.129: Charging a Battery

Table 6.1 Voltage Chart

Voltage	State of Charge (%)	Approximate Battery Charging Time ⁴⁷ to Full Charge at 27°C/80°F (Minutes)			
		Maximum Rate at (Amps)			
50		30	20	10	
Standard Battery					
12 Volts					
12.6	100	— FULL CHARGE —			
12.4	75	20	35	48	90
12.2	50	45	75	95	180
12.0	25	65	115	145	280
11.8	0	85	150	195	370

47. The charging time depends upon the's battery capacity, condition, age, temperature, and on the efficiency of the charger.

WARNING

- Gel and absorbent glass mat (AGM) batteries require a voltage-limited charger. Charging a gel or AGM battery on a typical shop charger—even one time—may shorten its service life.
- If the electrolyte fluid is accessible, verify that the plates are covered before attempting to charge the battery. At the end of the charge, add distilled water as needed. If fluid is added, charge the battery for an additional 30 minutes. If the electrolyte levels are low, but the battery is sealed, discard the battery.

CAUTION

Follow all instructions and precautions provided by the battery charger’s manufacturer, in addition to the following precautions:

- Charge the battery at the recommended rates and times.
- Turn off the charger prior to attaching it to the battery.
- Wear safety glasses when working with batteries.
- The maximum charge rate in amperes should be **NO MORE** than 1/3 of the battery’s reserve capacity rating. If the terminal voltage exceeds 16.0 V while the battery is being charged, reduce the charging rate. Continue charging the battery. Reduce the charging rate as needed until the voltage does not increase and the current does not decrease in a two-hour period.
- If the battery case gets hot during charging or emits large amount of gasses, stop charging the battery and investigate.

IMPORTANT:

NEVER overcharge batteries. Excessive charging will shorten battery life.

To charge the windrower’s batteries while they are connected to the windrower’s electrical system, follow these steps:

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator’s seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Move the platform on the right cab-forward side of machine to the open position. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).
3. Remove red plastic covers (A) from the positive cable clamps.

NOTE:

If you were charging the batteries while they were **NOT** connected to the windrower electrical system, you would also need to remove black plastic covers (B) from the negative terminals.



Figure 6.130: Battery Terminal Location

MAINTENANCE AND SERVICING

4. Charge each battery separately. Disconnect the **POSITIVE** battery cable, connect the charger cable to the positive post (A) of one of the batteries, and then connect the charger's ground cable to the engine block, away from the battery.
5. Charge the battery in accordance with the charger manufacturer's instructions.
6. Once charging is completed, remove the charger ground cable from the engine block first, then remove the charger cable from battery post (A).
7. Repeat Steps 4, [page 445](#) to 6, [page 445](#) on the second battery.
8. Replace the plastic covers.
9. Close the platform. For instructions, refer to [6.4.2 Closing Platforms – Standard Position, page 375](#).

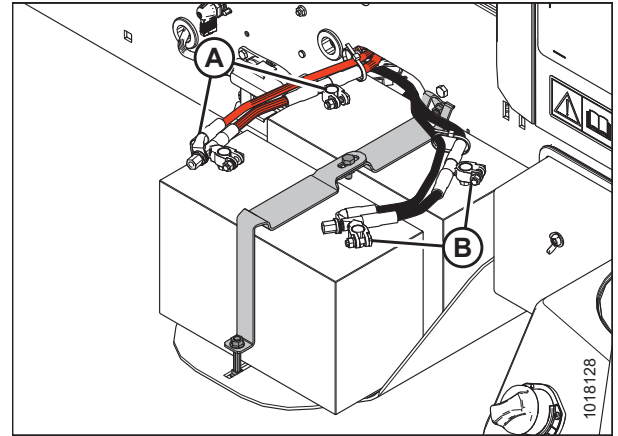


Figure 6.131: Batteries

A - Positive Posts

B - Negative Posts

Boosting Battery

Boosting the windrower's batteries involves connecting the batteries to another vehicle's battery system.

DANGER

- The gas emitted by batteries is explosive. Keep sparks and flames away from batteries.
 - Wear protective eyewear when using a booster battery.
 - Ensure that bystanders are clear of the machine before starting the engine. Start the engine from the operator's station.
1. Remove the red rubber cover from boost post (A) on the windrower frame.
 2. Attach one end of the battery cable to the positive (+) terminal of the booster battery, and the other end to positive boost post (A) on the windrower frame.
 3. Attach one end of the second cable to the negative (-) terminal of the booster battery, and the other end to ground post (B) on the windrower frame.
 4. Start the engine.
 5. After the engine starts, disconnect the cable from windrower ground post (B) first, and then disconnect the other end of the cable from the negative (-) terminal of the booster battery.
 6. Disconnect the cable from the positive (+) terminal of the booster battery, and then disconnect the other end of the cable from positive boost post (A) on the windrower frame.
 7. Replace the rubber cover on boost post (A).
 8. Close the hood. For instructions, refer to [6.3.2 Closing Hood – Lower Position, page 372](#).

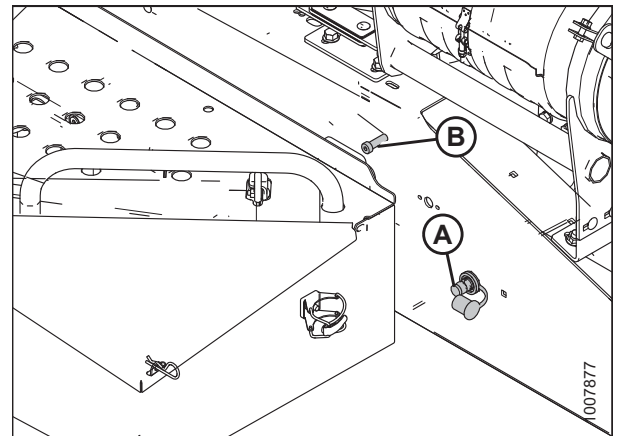


Figure 6.132: Battery Boost Posts

Adding Electrolyte to Batteries

Electrolyte fluid can be added to the battery's cells, if needed.

CAUTION

Do NOT attempt to service a battery unless you have the proper equipment and training for the task. Have the windrower's batteries serviced by a MacDon Dealer.

WARNING

Keep all smoking materials, sparks, and flames away from the electrolyte container and the battery. The gas emitted by a battery represents an explosion hazard.



Figure 6.133: Battery Safety Hazard

WARNING

- Battery electrolyte causes severe burns. Avoid contact with your skin, eyes, or clothing. Wear protective eyewear and heavy gloves when handling electrolyte fluid.
- If electrolyte is spilled or splashed on clothing or on the body, neutralize it immediately with a solution of baking soda and water, then rinse the contaminated area with clean water.
- Electrolyte splashed into the eyes is extremely dangerous. Should this occur, force the eye open and flood it with cool, clean water for five minutes. Call a doctor immediately.

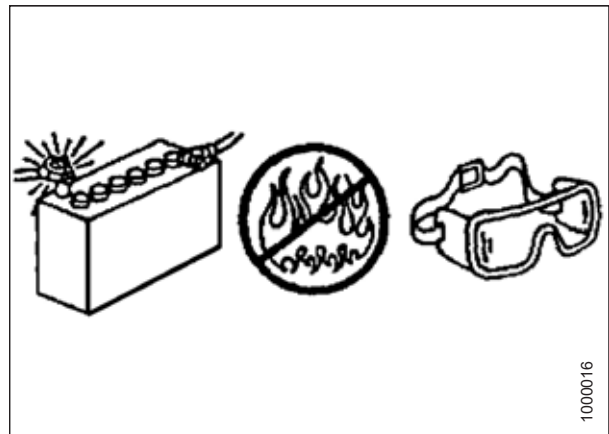


Figure 6.134: Battery Safety

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Move the platform on the left cab-forward side of the machine to the open position. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).
3. Add the electrolyte in accordance with the battery manufacturer's instructions.
4. Close the platform. For instructions, refer to [6.4.2 Closing Platforms – Standard Position, page 375](#).

Removing Batteries

The windrower's batteries may need to be removed for service, storage, or replacement.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

CAUTION

Do NOT attempt to service a battery unless you have the proper equipment and training for the task. Have the windrower's batteries serviced by a MacDon Dealer.

1. Shut down the engine, and remove the key from the ignition.
2. Move the platform on the right cab-forward side of the machine to the open position. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).
3. Ensure that battery main disconnect switch (A) is turned to the POWER OFF position.

NOTE:

The battery main disconnect switch is located on the right frame rail beside the batteries.

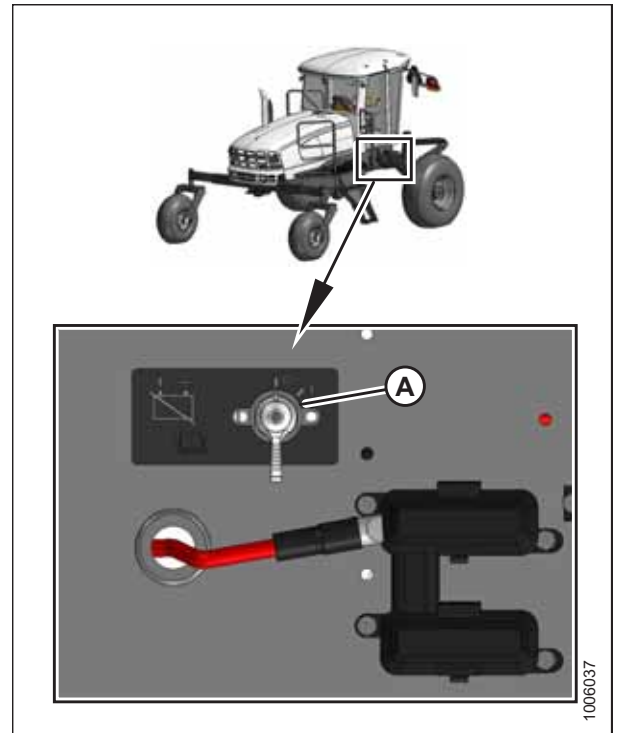


Figure 6.135: Battery Main Disconnect Switch

MAINTENANCE AND SERVICING

4. Remove bolt (A) securing the platform arm to the platform. Swing arm (B) out of the way.
5. Remove the black plastic covers from negative cable clamps (D). Loosen the clamps and disconnect the cable from the batteries.
6. Remove the red plastic covers from positive cable clamps (C). Loosen the clamps and disconnect the cable from the batteries.
7. Remove bolts (E) securing strap (F) to the frame, and remove the strap.

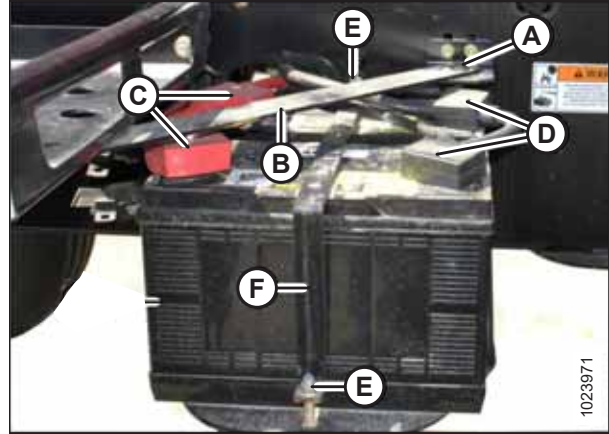


Figure 6.136: Batteries

8. Lift the batteries off of holder (A).

IMPORTANT:

- Store the batteries in a cool, dry area in an upright position.
- Do **NOT** stack batteries on top of each other unless they are in cartons.
- Test wet batteries every 4–6 months. Recharge them if necessary.

NOTE:

The dual battery support can be removed from the frame by simply lifting the support, and pulling it away from the frame.



Figure 6.137: Battery Holder

Installing Batteries

The batteries must be placed in the windrower's dual battery support tray and connected to the windrower's electrical system.

Replacement batteries must meet the specifications shown in the following table:

Table 6.2 Battery Specification

Rating	Group	CCA (min)	Voltage (V)	Maximum Dimension
Heavy duty, off-road, vibration resistant	BCI 29H or 31A	650	12	334 x 188 x 232 mm (13.25 x 7.37 x 9.44 in.)

MAINTENANCE AND SERVICING

1. Ensure that battery main disconnect switch (A) is turned to the POWER OFF position.

NOTE:

The battery main disconnect switch is located on the right frame rail beside the batteries.

2. Open the right cab-forward platform to access the batteries. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).
3. Remove the cable ties securing the battery cables to the battery clamp.

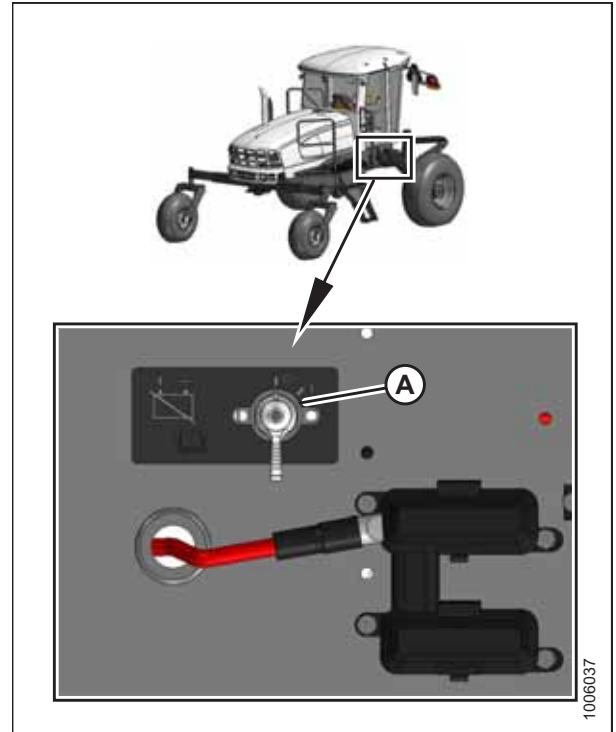


Figure 6.138: Battery Main Disconnect Switch

4. Position new batteries (G) on the dual battery support.

NOTE:

Ensure that the batteries are positioned so that positive posts (C) face aft.

5. Secure strap (F) with bolts (E).
6. Rotate platform support bar (B) into position and secure it with bolt (A).
7. Connect the battery cables to positive post (C) and negative post (D). For instructions, refer to [Connecting Batteries, page 449](#).
8. Close the platform. For instructions, refer to [6.4.2 Closing Platforms – Standard Position, page 375](#).

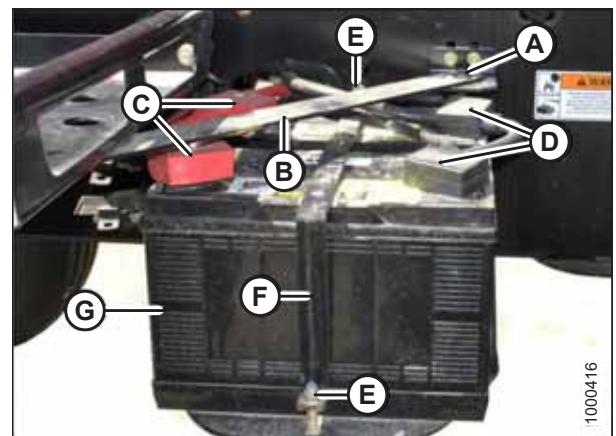


Figure 6.139: Batteries

Connecting Batteries

Once the batteries have been secured in the windrower's dual support tray, they can be connected to the windrower's electrical system.



DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Open the right cab-forward maintenance platform. For instructions, refer to [6.4.1 Opening Platforms \(Standard Position\), page 374](#).

MAINTENANCE AND SERVICING

2. Ensure that battery main disconnect switch (A) is turned to the POWER OFF position.

NOTE:

The battery main disconnect switch is located on the right frame rail beside the batteries.

3. Remove the cable ties securing the battery cables to the battery clamps.

IMPORTANT:

The batteries are negative grounded. Always connect the red starter cables to the positive (+) terminals of the batteries and the black ground cables to the negative (-) terminals of the batteries. Reversed polarity in the batteries or alternator may result in permanent damage to the electrical system.

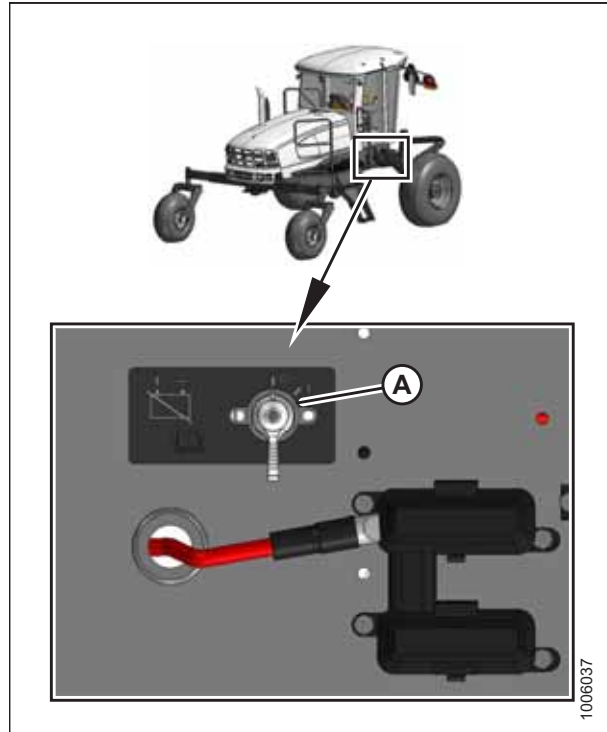


Figure 6.140: Battery Main Disconnect Switch

4. Remove the plastic caps from the battery posts.
5. Attach the red positive (+) cable terminals to positive posts (A) on the batteries and tighten the clamps. Reposition the plastic covers onto the clamps.
6. Attach the black negative (-) cable terminals to negative posts (B) on the batteries and tighten the clamps. Reposition the plastic covers onto the clamps.
7. Turn the battery main disconnect switch to the POWER ON position.
8. Close the platform. For instructions, refer to [6.4.2 Closing Platforms – Standard Position, page 375](#).

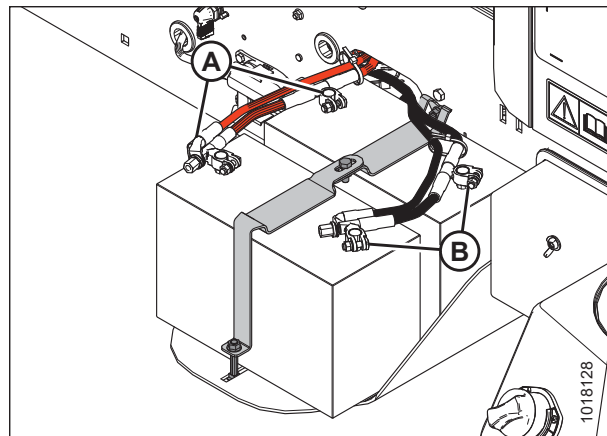


Figure 6.141: Batteries

6.10.3 Headlights – Engine-Forward

These lights sit at the end of the engine compartment. They are used as headlights when the windrower is operating in engine-forward mode.

Replacing Headlight Bulb

If a headlight bulb is burnt out or damaged, it will need to be replaced.

Use part MD #110267 to replace burnt out or damaged headlight bulbs.

MAINTENANCE AND SERVICING

1. Remove two screws (A). Remove the headlight assembly from the hood.



Figure 6.142: Headlight

2. Detach the wiring harness connector from the headlight assembly. Remove rubber insulator boot (A).

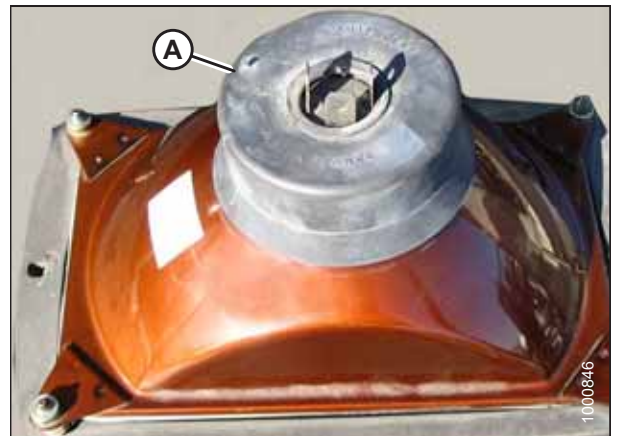


Figure 6.143: Headlight Assembly

3. Pinch wire retainer (A) and lift it away from the hooks.
4. Remove bulb (B) from the headlight body.

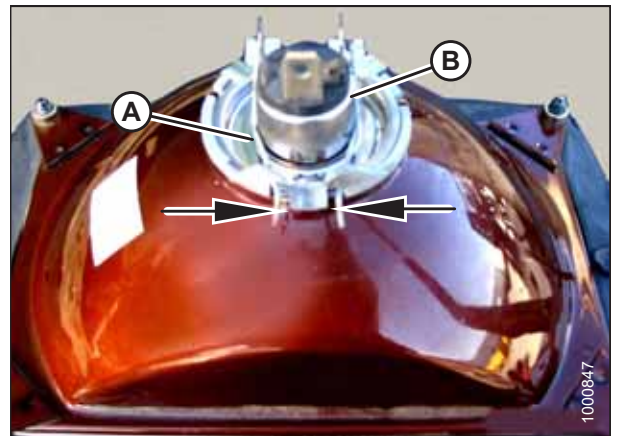


Figure 6.144: Headlight Assembly

MAINTENANCE AND SERVICING

- Retrieve the new headlight. Align lugs (B) on the new bulb with slots (C) in the body, and push the new headlight into place.

IMPORTANT:

Do **NOT** touch the glass of the new light bulb when installing it into the headlight body. Contaminants on the surface of the bulb can cause hot spots, which can cause the bulb to fail prematurely. Use a cloth or gloves when installing the new bulb.

- Secure the bulb with wire retainer (A).

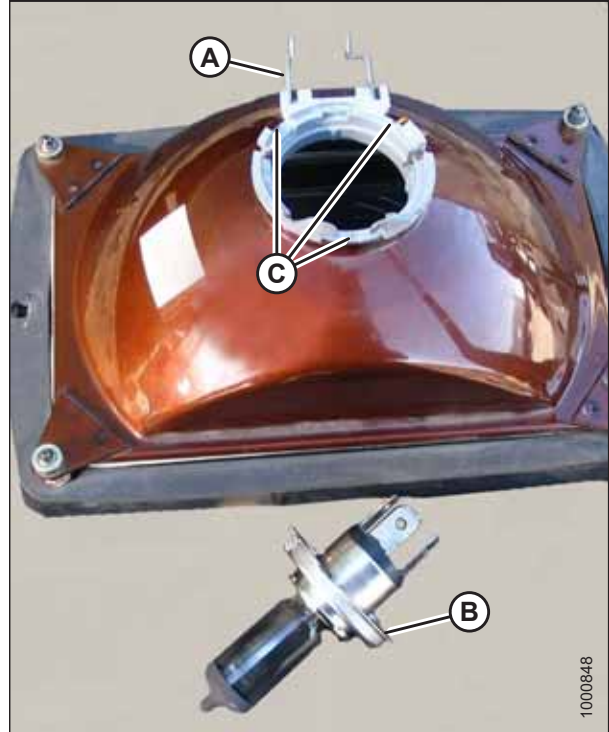


Figure 6.145: Headlight Assembly

- Replace rubber insulator boot (A).
- Push the connector onto the light bulb.

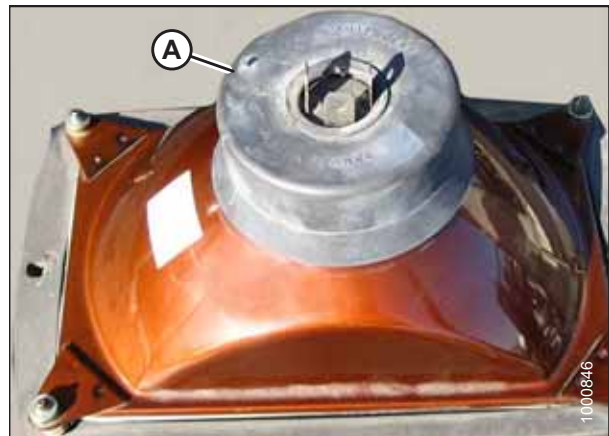


Figure 6.146: Headlight Assembly

9. Position the headlight into the light receptacle, ensuring that the housing is oriented correctly. Secure the housing with screws (A). To align the headlights, refer to *Aligning Headlights*, page 453.



Figure 6.147: Headlight

Aligning Headlights

The headlights should be positioned so that they illuminate the area in front of the windrower without impairing the vision of those facing the headlights.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

When aligning the headlights, a header should be attached to the windrower and raised. This will ensure that the headlights are aligned for operating conditions.

1. Park the windrower on level ground in front of a vertical surface such as a wall, so that the headlights sit 7.5 m (25 ft.) away from the surface.
2. Shut down the engine, and remove the key from the ignition.

MAINTENANCE AND SERVICING

3. Turn on ROAD lights (A) and set HIGH-LOW switch (B) to LOW BEAM.

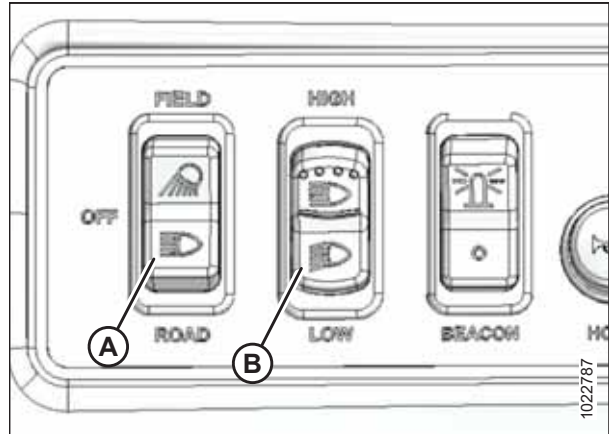


Figure 6.148: Road Light Switch – All Countries Except Russia

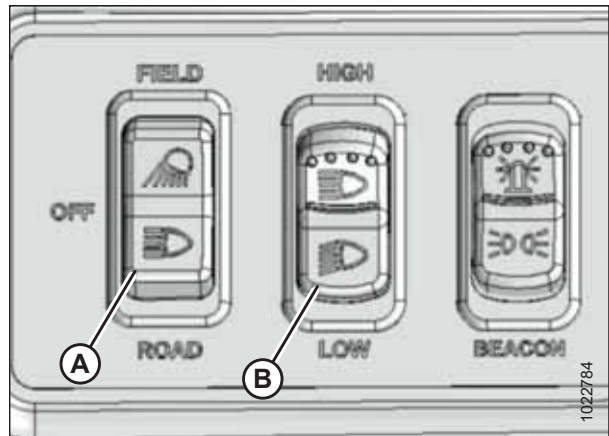


Figure 6.149: Road Light Switch – Russia Only

4. To align the headlights, you will need to tighten or loosen any or all of adjusting screws (A). Ensure that the beam remains centered when making adjustments.

NOTE:

The adjustments made apply only to the headlights when they are in low-beam mode.



Figure 6.150: Headlights

- Adjust the headlight so that upper edge (C) of the light beam does not rise higher than 1263 mm (49 3/4 in.) (dimension [A]) above the ground (indicated by [E]). Refer to the illustration for details. Ensure that center line (D) is maintained as shown.

NOTE:

This measurement is only applicable while the headlight sits 7.5 m (25 ft.) from a vertical surface such as a wall (dimension [B]).

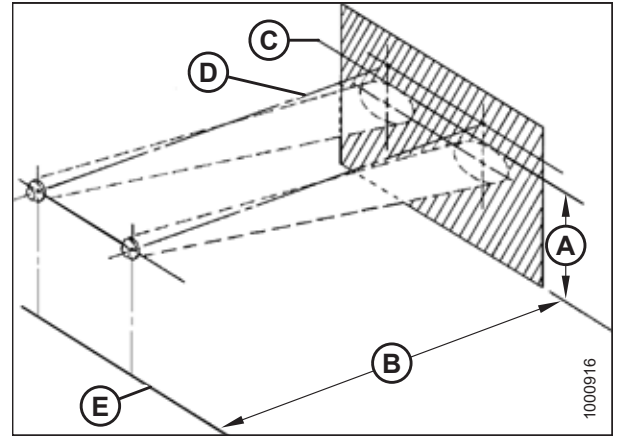


Figure 6.151: Headlight Beam Positioning

- A - 1263 mm (49 3/4 in.) – distance between top of light beam and ground
- B - 7.5 m (25 ft.) – distance between the headlight and the vertical surface
- C - Upper edge of beam
- D - Center line, projected outward from headlight
- E - Ground

6.10.4 Field Lights – Cab-Forward

The field lights allow the Operator to see the header and the area immediately around the windrower when the windrower is operating in cab-forward mode.

Adjusting Field Lights

The field lights should be adjusted in conditions which resemble the windrower’s real-world operating conditions.

 **DANGER**

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator’s seat for any reason.

- Shut down the engine, and remove the key from the ignition.
- Holding onto handholds (A) on the cab’s front corners, stand on the header’s anti-slip strips.

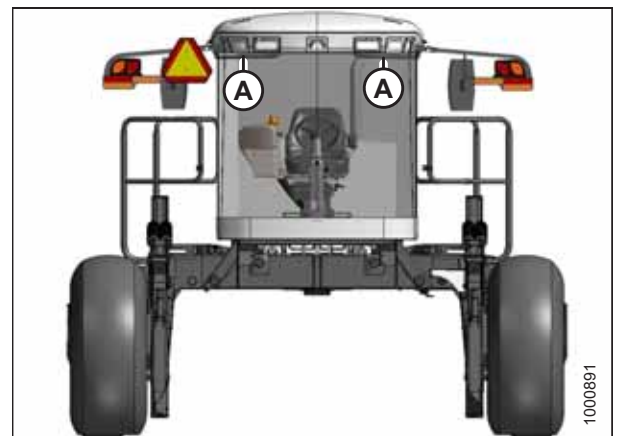


Figure 6.152: Windrower Cab-Forward

3. Adjust the lights by tightening or loosening screws (A), as needed.



Figure 6.153: Field Lights

Replacing Field Light Bulb

If a field bulb is burnt out or damaged, it will need to be replaced.

Use part MD #109113 to replace burnt out or damaged headlight bulbs.

1. Remove two screws (A). Remove the light assembly.
2. Replace the bulb using the procedure described in [Replacing Headlight Bulb, page 450](#); the procedure for the field lights is similar.



Figure 6.154: Field Lights

6.10.5 Floodlights – Cab-Forward

The windrower's floodlights illuminate the left and right sides of the windrower's operating area when the windrower is operating in cab-forward mode.

Adjusting Forward Floodlights

The forward floodlights cannot be adjusted.

Replacing Bulb in Cab-Forward Floodlight

If a floodlight bulb is burnt out or damaged, it will need to be replaced.

Use part MD #109113 to replace a burnt out or damaged floodlight bulb.

⚠ DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Turn the lights OFF.
2. Shut down the engine, and remove the key from the ignition.
3. Holding onto handholds (A) on the cab's front corners, stand on the header's anti-slip strips.
4. Remove two screws (B).
5. Remove light bezel (C).
6. Remove the floodlight body from its receptacle.

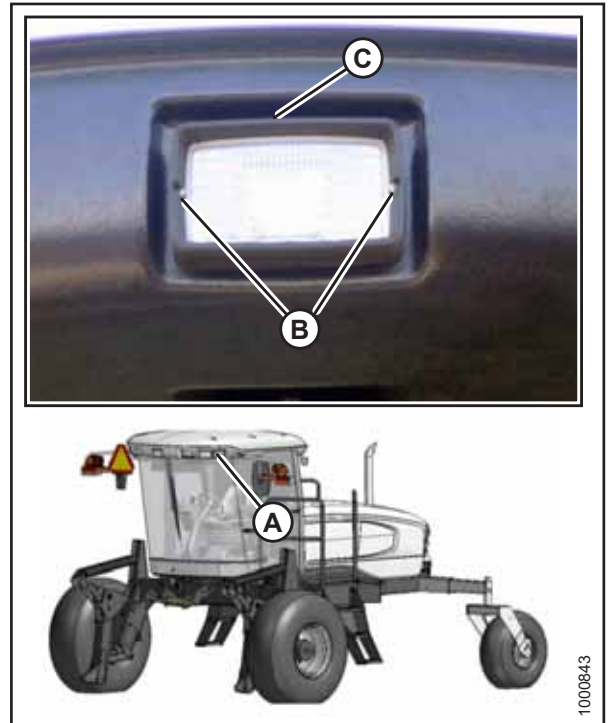


Figure 6.155: Forward Floodlights

7. Pinch wire retainer (A) and lift it away from the hooks.
8. Remove bulb (B) from the floodlight body. Remove the wire from connector (C).

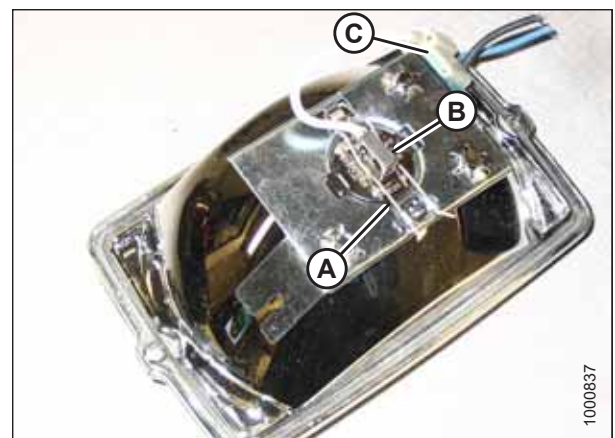


Figure 6.156: Floodlight Assembly

MAINTENANCE AND SERVICING

- Match the slots on new bulb (B) with lugs (D) and insert the new bulb into the receptacle.

IMPORTANT:

Do **NOT** touch the glass of the new light bulb when installing it into the headlight body. Contaminants on the surface of the bulb can cause hot spots, which can cause the bulb to fail prematurely. Use a cloth or gloves when installing the new bulb.

- Secure the bulb with wire retainer (A).
- Push the wire into connector (C).

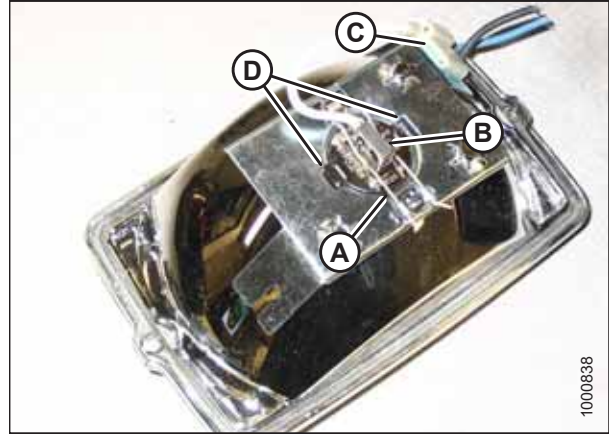


Figure 6.157: Floodlight Assembly

- Position the floodlight body into its receptacle, ensuring that the body is oriented correctly. Secure the floodlight with bezel (C) and screws (B).

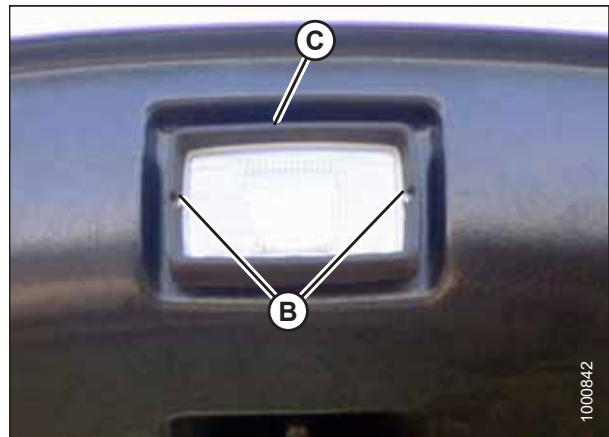


Figure 6.158: Forward Floodlight

6.10.6 High-Intensity Discharge Auxiliary Lighting – Option

Two optional high-intensity discharge (HID) lights installed on the windrower's mirrors provide additional lighting during field operation. They are usable only when the windrower is operating in cab-forward mode.

Replacing High Intensity Discharge Floodlights

Model year 2012 and newer M155 Self-Propelled Windrowers may have a set of high-intensity discharge (HID) lights installed on the mirrors. These lights are wired into the windrower's field/work light circuit. If an HID light is damaged, follow this procedure to replace it.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

The HID lights can be found in kit B5596.

MAINTENANCE AND SERVICING

1. Turn the lights OFF.
2. Shut down the engine, and then remove the key from the ignition.
3. Holding onto handholds (A) on the cab's front corners, stand on the header's anti-slip strips, or else stand on the maintenance platform.

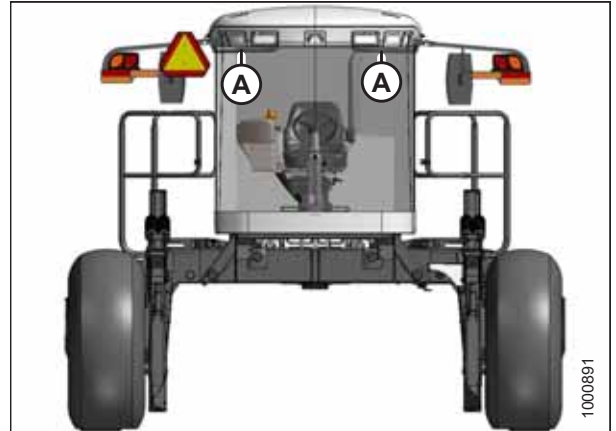


Figure 6.159: Cab-Forward Lights

4. Locate the lamp electrical harness connector on the bottom of the mirror assembly. Disconnect lamp harness connector (A).

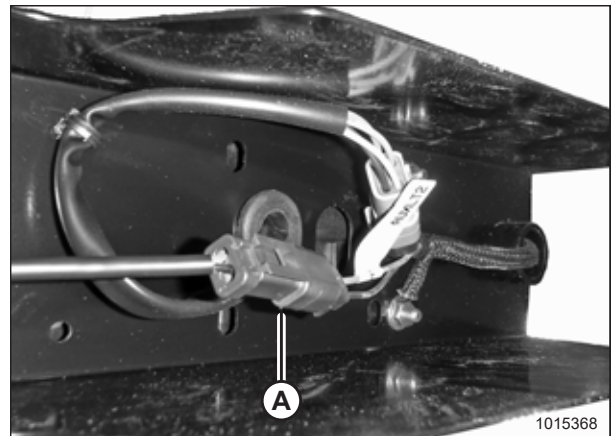


Figure 6.160: Lamp Harness Connector – View from Underside of Mirror

5. Feed the lamp electrical harness through grommet (B).
6. Remove nut (A).
7. Remove the old HID lamp from the mirror assembly and discard it.

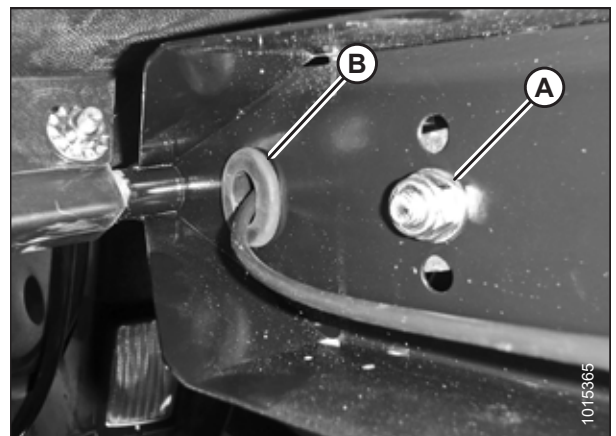


Figure 6.161: Hardware and Light Harness Grommet – View from Underside of Mirror

MAINTENANCE AND SERVICING

- Retrieve new HID lamp (A) and place it on the mirror assembly as shown.



Figure 6.162: New HID Lamp in Place

- From the underside of the mirror, feed the electrical connector through grommet (B).
- Secure the HID lamp with retained nut (A).

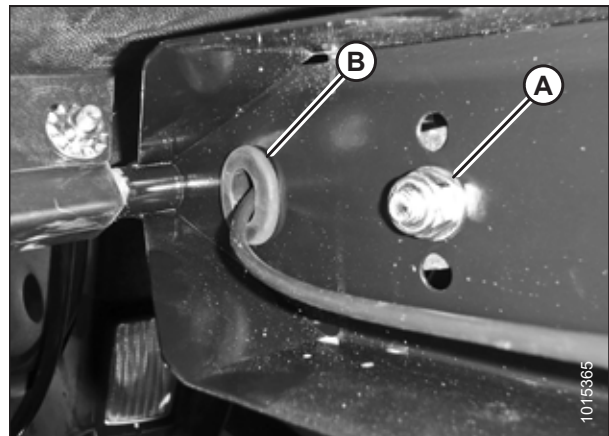


Figure 6.163: Hardware and Light Harness Grommet – View from Underside of Mirror

- Connect lamp harness connector (A).

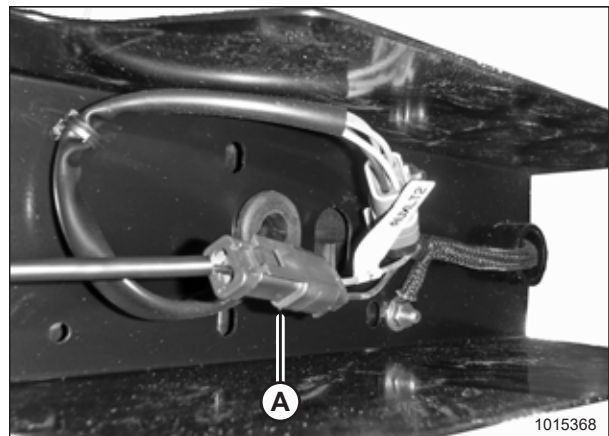


Figure 6.164: Lamp Harness Connector – View from Underside of Mirror

12. Loosen bolt (A) in bracket (C).
13. Adjust lamp (B) to the desired position. Tighten bolt (A).

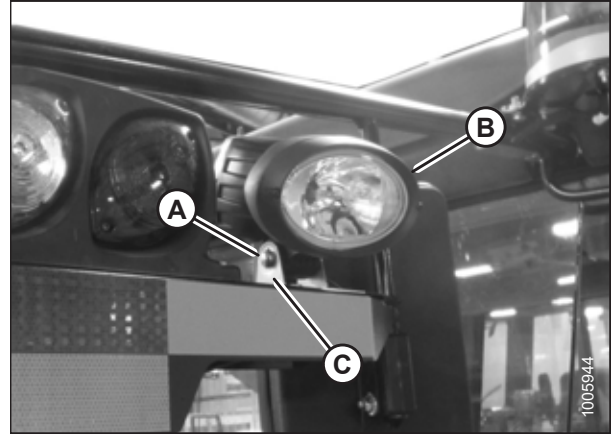


Figure 6.165: HID Lamp Installed

Adjusting High-Intensity Discharge Auxiliary Lights

The optional high-intensity discharge (HID) lights should be adjusted according to actual operating conditions.

⚠ DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Loosen bolt (A) and nut (C) inside the light/mirror support.
3. Move light (B) to the desired position.
4. Tighten bolt (A) and nut (C).

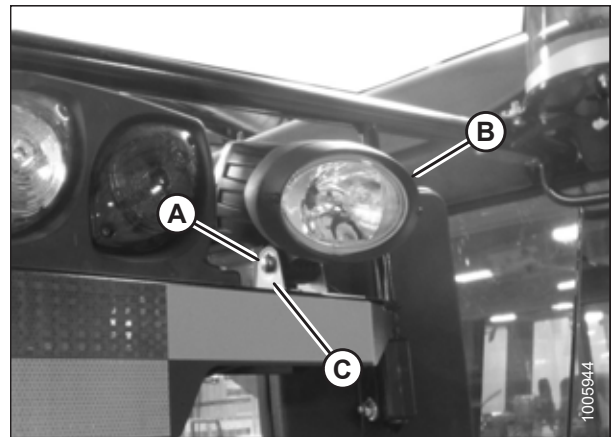


Figure 6.166: HID Auxiliary Lights

6.10.7 Floodlights – Rear

The rear floodlights illuminate the working area behind the windrower.

Adjusting Rear Floodlights

The rear floodlights should be adjusted according to actual operating conditions.

⚠ DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

1. Shut down the engine, and remove the key from the ignition.
2. Loosen bolts (A) and (B).
3. Move the light to the desired position.
4. Tighten bolts (A) and (B).



Figure 6.167: Rear Floodlight

Replacing Bulb in Rear Floodlight

If a rear floodlight bulb is burnt out or damaged, it will need to be replaced.

⚠ DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Replace a burnt out or damaged rear floodlight bulb with part MD #109113.

1. Shut down the engine, and remove the key from the ignition.
2. Turn the lights OFF.
3. Remove two screws (A). Remove light bezel (B).
4. Remove the light from its receptacle.

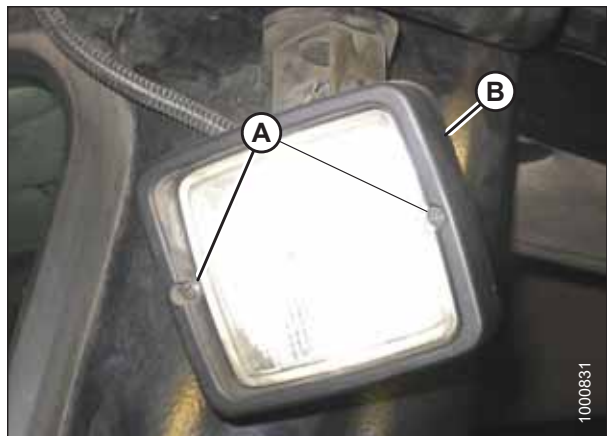


Figure 6.168: Rear Floodlight

MAINTENANCE AND SERVICING

- Pinch wire retainer (A) and lift it away from the hooks.

IMPORTANT:

Do **NOT** touch the glass of the halogen bulb as the oils or other chemicals from your skin will cause the bulb to fail prematurely.

- Remove bulb (B) from the floodlight body. Remove the wire from connector (D).
- Insert new bulb (B) into the floodlight body, matching the slots on new bulb (B) with lugs (C).
- Secure the bulb with wire retainer (A).
- Push the wire into connector (D).
- Position the floodlight body in its receptacle, ensuring that the body is correctly oriented.
- Secure the floodlight body with bezel (B) and screws (A).

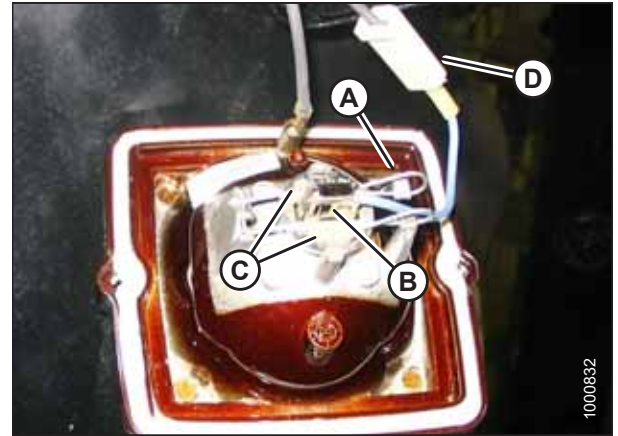


Figure 6.169: Rear Floodlight Assembly

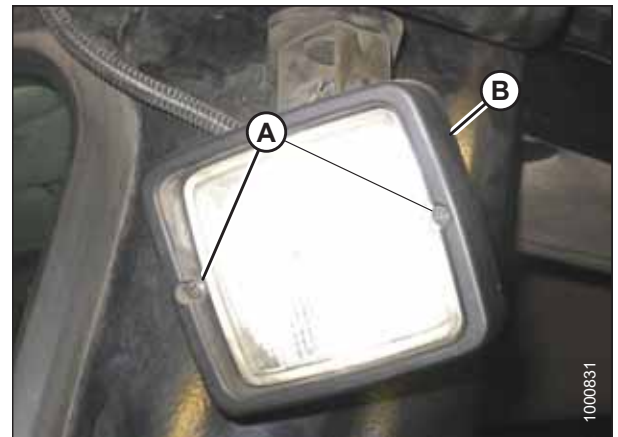


Figure 6.170: Rear Floodlight

6.10.8 Replacing Bulbs in Red and Amber Lights

If a bulb in a red or amber light is damaged or burnt out, it will need to be replaced.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- Shut down the engine, and remove the key from the ignition.

MAINTENANCE AND SERVICING

2. Turn the lights OFF.
3. Holding onto handholds (A) on the cab's front corners, stand on the header anti-slip strips, or stand on the maintenance platform.

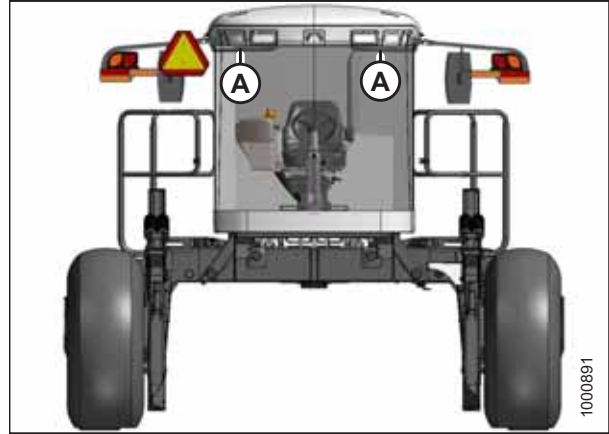


Figure 6.171: Windrower Cab-Forward

4. Remove two screws (A) from the lens. Remove the lens.
5. Push and twist the light bulb to remove it from its socket.
6. Install the new bulb in its socket, ensuring that the base of the bulb is properly engaged in its socket.
 - Replace the bulb in a red light with trade #1157.
 - Replace the bulb in an amber light with trade #1156.
7. Reinstall the lens and secure it with screws (A).

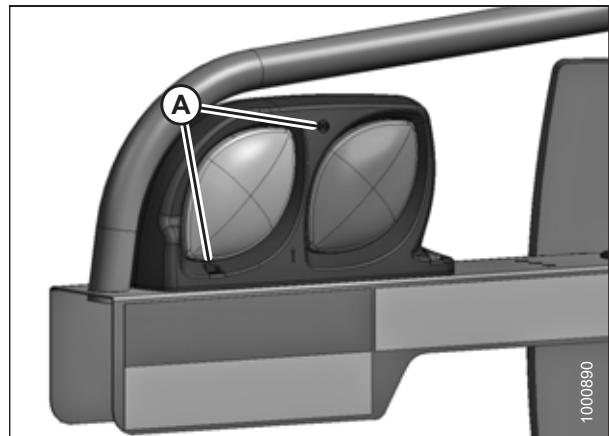


Figure 6.172: Red and Amber Lights

6.10.9 Replacing Red Taillights

If a red taillight is damaged, it will need to be replaced.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Red taillights are included with the lighting and marking for cab-forward road travel kit (B5412).

MAINTENANCE AND SERVICING

1. Shut down the engine and remove the key from the ignition.
2. Turn the lights OFF.
3. In the grille of the hood, remove two screws (A) from light (B). Remove the light.
4. Remove the connector from the light.
5. Connect the wiring harness to new light (B). Install the light and secure it with screws (A).

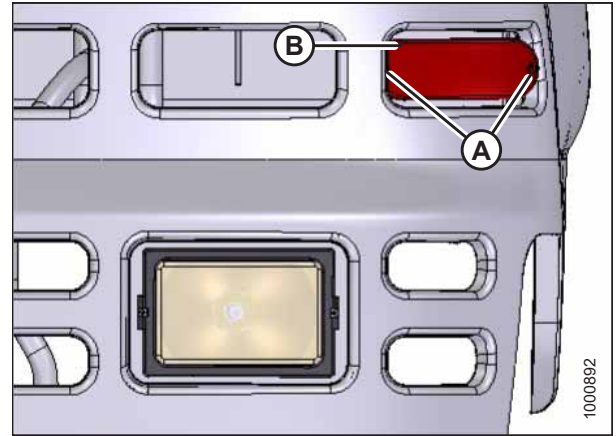


Figure 6.173: Red Taillights

6.10.10 Replacing Beacon Lights

If a beacon is damaged or defective, the entire unit will need to be replaced.

1. Disconnect wiring (A) from harness.
2. Remove nuts (B) and remove beacon (C) from support (D). Discard the beacon and the attachment hardware.
3. Clean the residue from support (D).
4. Install new beacon (C) with gasket (E) onto the support. Secure the beacon with bolts (F), washers (G), and nuts (B).
5. Torque the nuts to 0.65 Nm (0.48 lbf-ft [5.75 lbf-in]).

IMPORTANT:

Do **NOT** exceed a torque value of 2 Nm (1.48 lbf-ft [17.7 lbf-in]).

6. Connect wiring (A).
7. Ensure that the beacons operate correctly. For instructions, refer to [3.7 Exterior Lighting, page 45](#).

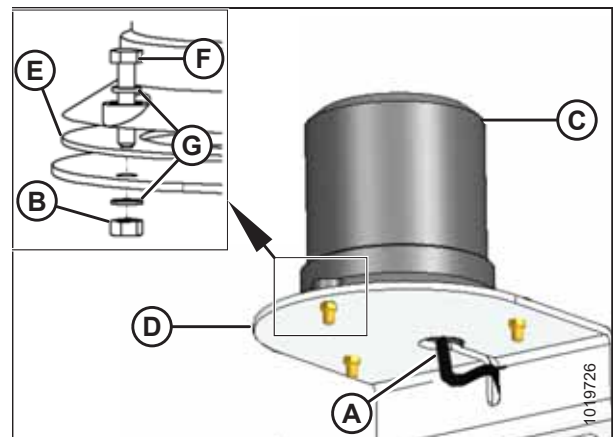


Figure 6.174: Replacing Beacons

6.10.11 Replacing Console Gauge Light

If a console gauge light is burned out or damaged, it will need to be replaced.



DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Turn the lights OFF.

MAINTENANCE AND SERVICING

3. Remove gauge access hole decal (A) (whichever one is needed) behind the operator's console.

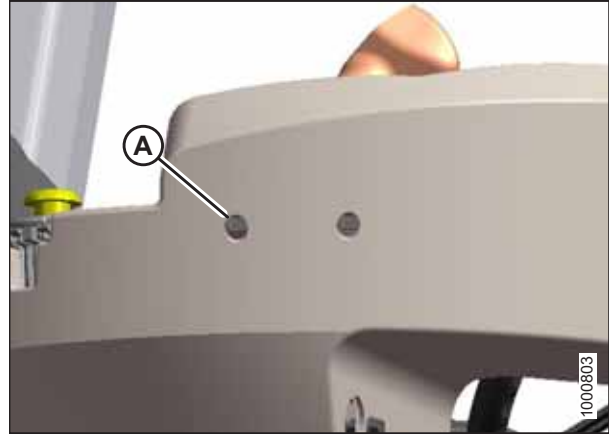


Figure 6.175: Operator Console

4. Remove nut (B) securing mounting bracket (C) to the gauge inside the console.
5. Pull the gauge out of the console.

NOTE:

The wiring harness does not need to be disconnected from the gauge.

6. Twist bulb holder (A) counterclockwise until it is loose. Pull the bulb holder from the back of the gauge.
7. Insert the new bulb into the gauge. Turn the bulb clockwise until it is locked in place.
8. Push the gauge into the console.
9. Attach bracket (C) to the back of the gauge. Secure the bracket with nut (B).
10. Replace the gauge access hole decal.

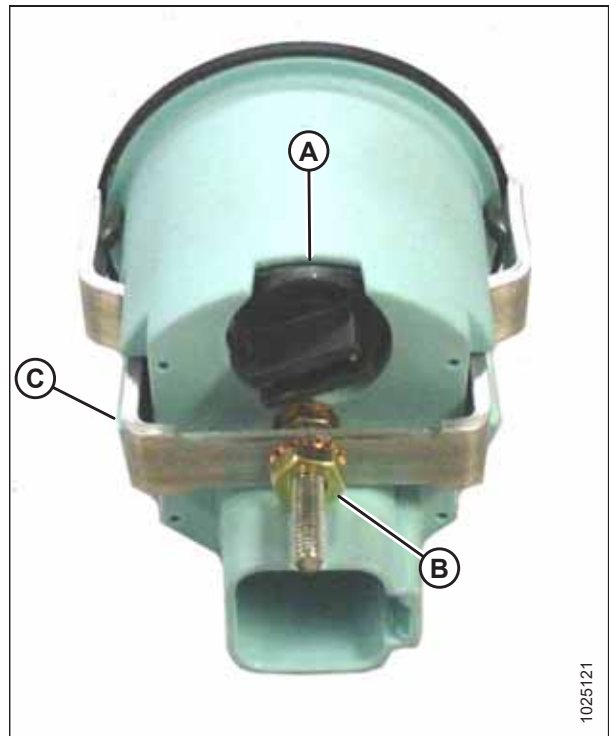


Figure 6.176: Back of Console Gauge

6.10.12 Replacing Cabin Dome Light

The cabin dome light improves visibility inside the cab. If the dome light is burnt out or damaged, it will need to be replaced.

1. Remove two screws (A) from the dome light assembly. Remove the assembly.
2. Disconnect the old dome light assembly from the wiring harness.
3. Connect the new dome light (MD #183413) to the wiring harness.
4. Install the new dome light assembly and secure it with two screws (A).

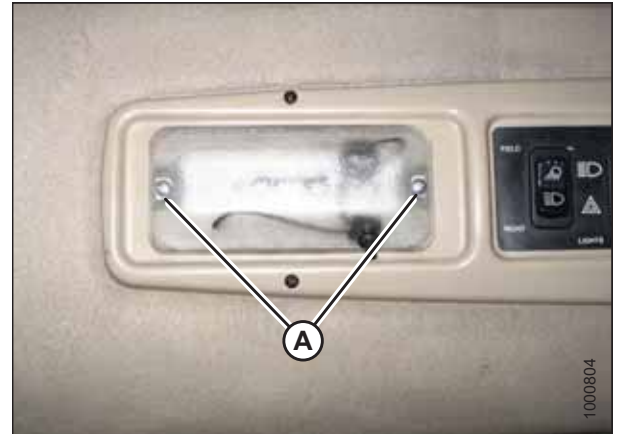


Figure 6.177: Cabin Dome Light

6.10.13 Replacing Ambient Light Fixture

The ambient light fixture improves visibility inside the cab. If the ambient light is burnt out or damaged, it will need to be replaced.

1. Locate ambient light fixture (A) in the roof liner.



Figure 6.178: Ambient Light Fixture

MAINTENANCE AND SERVICING

2. Pressing on flexible tabs (A) with a screwdriver, pull the ambient light fixture out of the cab headliner.
3. Remove the wires from connectors (B).
4. Retrieve the new ambient light fixture. Attach the wire connectors to the new light fixture.
5. Push the new light fixture into the slot in the cab roof, until the flexible tabs hold the fixture in place.

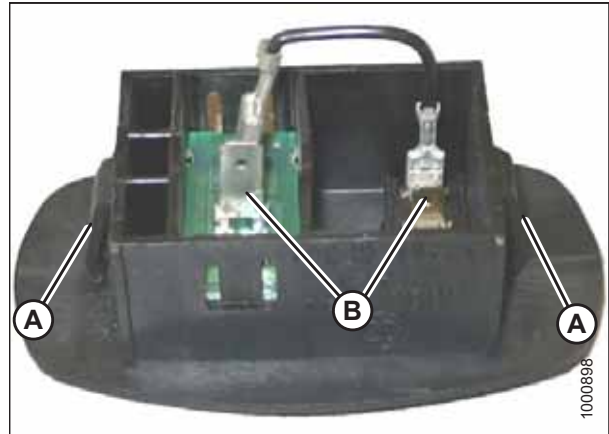


Figure 6.179: Ambient Light Fixture

6.10.14 Turn Signal Indicators

The turn signal indicator lights can be found on the operator's console. If the turn signal indicators are not working correctly, contact your MacDon Dealer for more information.

6.10.15 Circuit Breakers and Fuses

The circuit breakers and fuses are located inside a fuse box mounted on the right cab-forward side of the frame under the platform.

Accessing Main Fuse Box

The main fuse box can be found on the windrower's frame, under the right cab-forward platform.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine, and remove the key from the ignition.
2. Move the right (cab-forward) platform aftward. For instructions, refer to [6.4.1 Opening Platforms – Standard Position](#), page 374.
3. Remove wing nut (A). Remove fuse box cover (B).
4. A cover may be installed over the circuit breaker. Remove it to access the breaker.

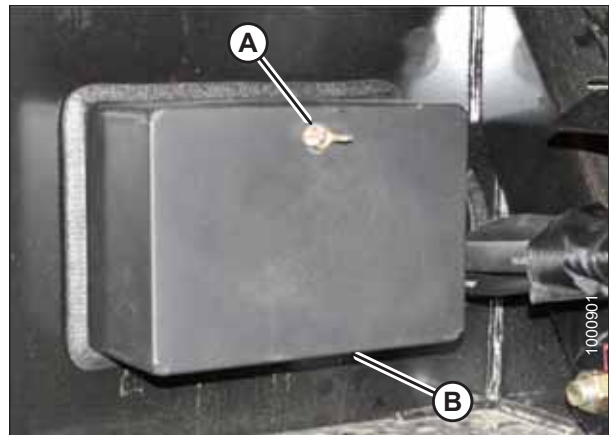


Figure 6.180: Fuse Box

Checking and Replacing Fuses

If you suspect that a fuse needs replacement, you will need to open the fuse box and examine the fuse in question. The decal inside the fuse box aids the Operator in identifying the function of a given fuse.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine, and remove the key from the ignition.
2. Open the right cab-forward platform. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).
3. Remove the fuse box cover. For instructions, refer to [Accessing Main Fuse Box, page 468](#).
4. Refer to the decal on the inside of the fuse box cover for information on the function of each fuse.
5. To check a fuse: pull the fuse out of its receptacle and hold it up to a light source. If the fuse is damaged, the wire inside will be broken. If you see a broken wire, the fuse must be replaced.
6. If the fuse is damaged, insert a new fuse into the receptacle. If the fuse is undamaged, insert the removed fuse back into its receptacle.

IMPORTANT:

Replacement fuses should match the current rating on the decal. Refer to [Fuse Box Decal, page 471](#) for more information.

7. Reinstall the fuse box cover. Secure it with the wing nut.

Replacing Circuit Breakers and Relays

If a circuit breaker or relay in the windrower's main fuse box is nonfunctional, it must be replaced.

Replace breakers and relays as follows:

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine, and remove the key from the ignition.
2. Move the right cab-forward platform rearward.
3. Remove the fuse box cover. For instructions, refer to [Accessing Main Fuse Box, page 468](#).

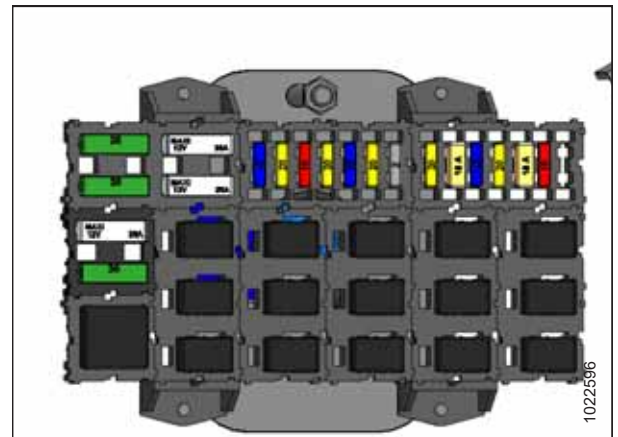


Figure 6.181: Fuses and Circuit Breakers

MAINTENANCE AND SERVICING

4. To replace circuit breaker (A), pull the breaker out of its receptacle. Replace the removed circuit breaker with the new circuit breaker.
5. To replace relay (B), pull the relay out of its receptacle. Replace the removed relay with the new relay.
6. Reinstall the fuse box cover. Secure it with the wing nut.

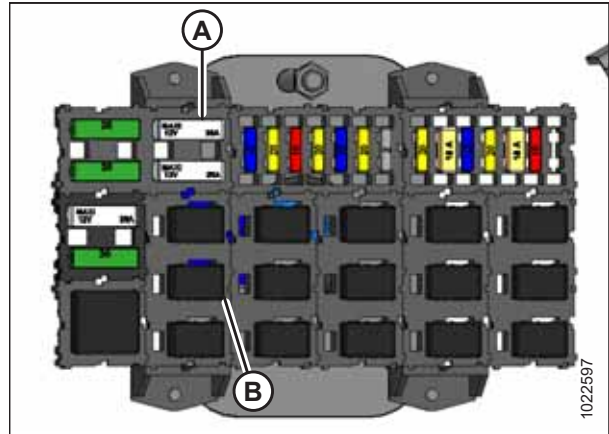


Figure 6.182: Relays and Breakers

MAINTENANCE AND SERVICING

Fuse Box Decal

Refer to this diagram to learn the function and specifications for the fuses, circuit breakers, and relays in the windrower's main fuse box.

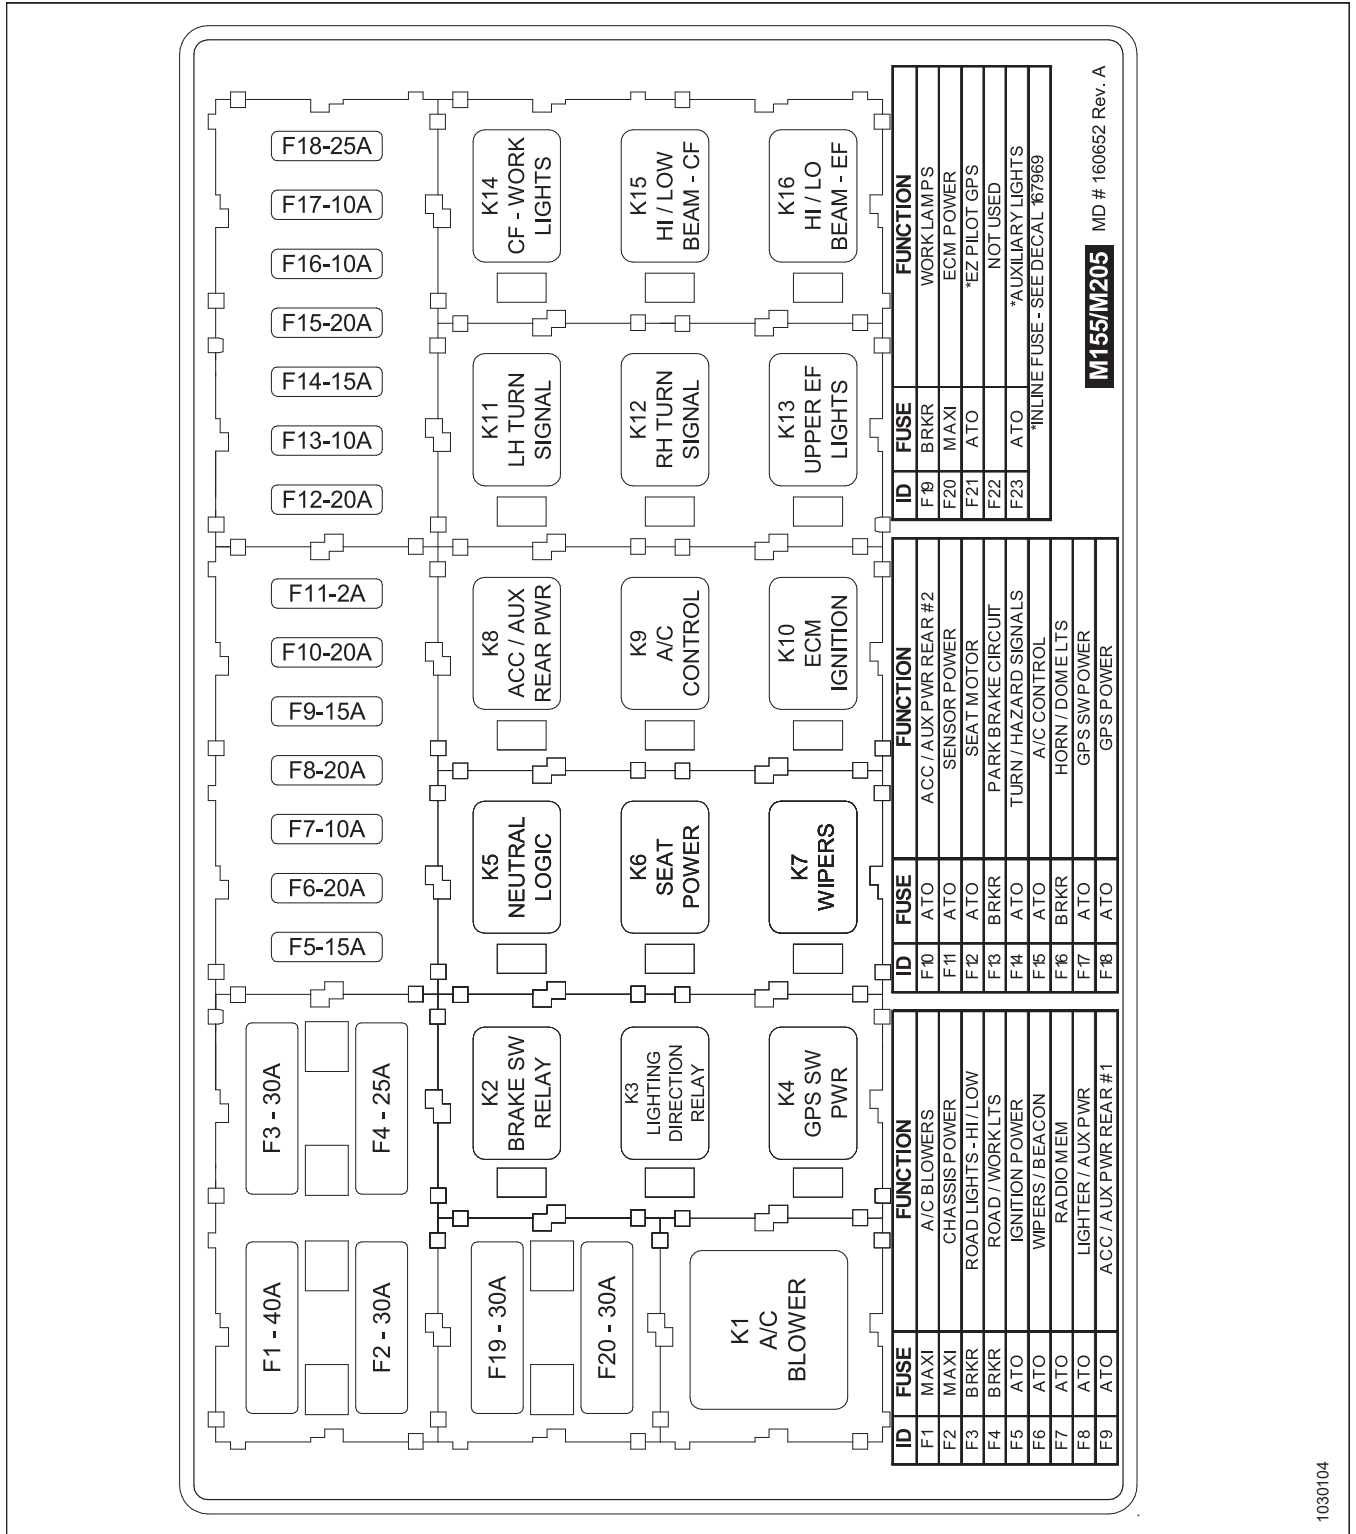


Figure 6.183: Fuse Decal

1030104

Inspecting and Replacing 125A Main Fuses

The 125A main fuse holders are located on the frame under the right cab-forward platform beside the battery.

⚠ DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine, and remove the key from the ignition.
2. Move the right cab-forward platform aftward.
3. To check the condition of a fuse, pull tab (A) and open cover (B).

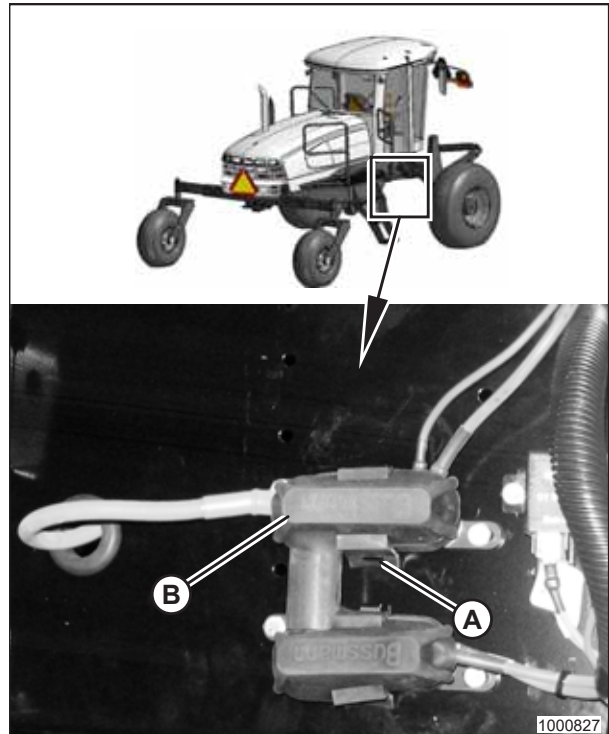


Figure 6.184: 125A Main Fuses

4. Inspect fuse (A) for evidence of damage.
5. If the fuse is damaged, it will need to be removed. To remove fuse (A), remove two nuts (B) and pull the fuse free from its holder.

NOTE:

The existing wiring may need to be pulled off of the stud first.

6. Install the new fuse, along with any wiring that was removed to access the fuse.
7. Secure the fuse with nuts (B).



Figure 6.185: 125A Main Fuse

8. Close cover (B) and secure it with tab (A).
9. Return the platform to the operating position. Ensure that the lock is engaged.

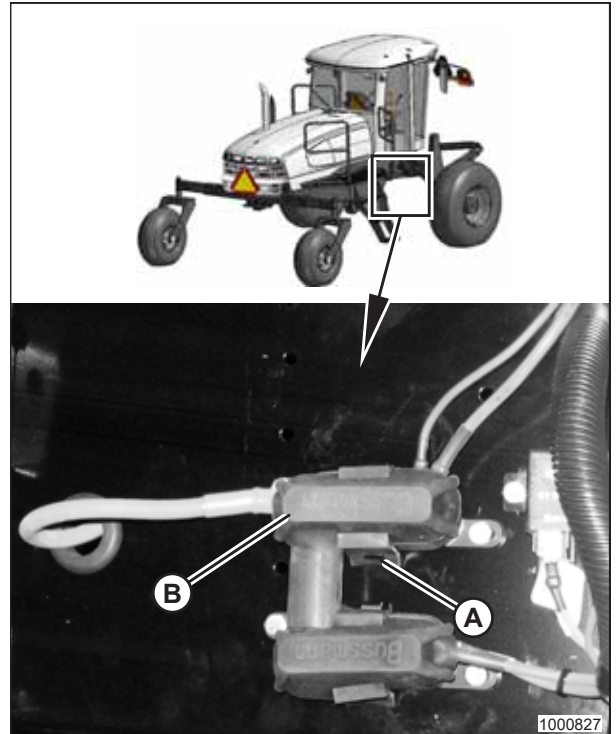


Figure 6.186: 125A Main Fuses

6.11 Hydraulic System

The hydraulic system provides oil pressure for the header lift, windrower drive, and header drive systems.

WARNING

- Avoid high pressure fluids. Escaping fluid can penetrate the skin, causing serious injury. Relieve the pressure in the hydraulic system before disconnecting any hydraulic fittings.
- Tighten all fittings before applying pressure to the hydraulic system.



Figure 6.187: Hydraulic Pressure Hazard

WARNING

- Use a piece of cardboard or paper to search for hydraulic leaks. Do NOT use your hand or any other part of your body.
- If ANY hydraulic fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type of injury. Otherwise, this injury becoming infected with gangrene.

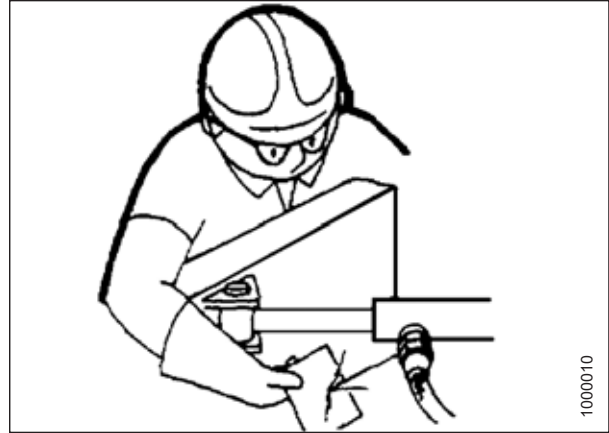


Figure 6.188: Checking Hydraulic Leaks

IMPORTANT:

Contaminants such as dirt, dust, and water are the major cause of damage to the hydraulic system.

- If the hydraulic system's components must be disconnected for service, protect the ends of hoses, tubing, and ports from contamination. Cover openings with properly fitting hydraulic caps and plugs. If such caps and plugs are not available, protect openings with clean, lint-free towels or clean plastic bags.
- Before installing a replacement hydraulic hose, flush the inside of the hose with clean diesel fuel or commercial petroleum cleaning solvent for a minimum of ten seconds. Do NOT use water, water soluble cleaners, or compressed air to clean a hydraulic hose.
- The hydraulic system's components are manufactured with a great degree of precision, and have been assembled in sanitary conditions at the factory. Do NOT attempt to service these components in the field, except to maintain the proper oil level, change the hydraulic oil and filters, and to adjust the relief pressures as described in this manual.

Contact your MacDon Dealer for all other hydraulic system service needs.

6.11.1 Checking and Filling Hydraulic Oil

The hydraulic oil reservoir can be found in the engine bay. The hydraulic oil level can be inspected using the sight glass on the side of the reservoir, or by using the dipstick.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Park the windrower on a level surface.
2. Lower the header.
3. Shut down the engine, and remove the key from the ignition.
4. Open the hood to the lower position. For instructions, refer to [6.3.1 Opening Hood – Lower Position, page 371](#).

NOTE:

Sight glass (A) can be found under the hood on the right side of the hydraulic fluid reservoir. It allows the Operator to inspect the hydraulic oil to determine its level. If there is no oil visible in the sight glass, then oil must be added to the hydraulic oil reservoir.

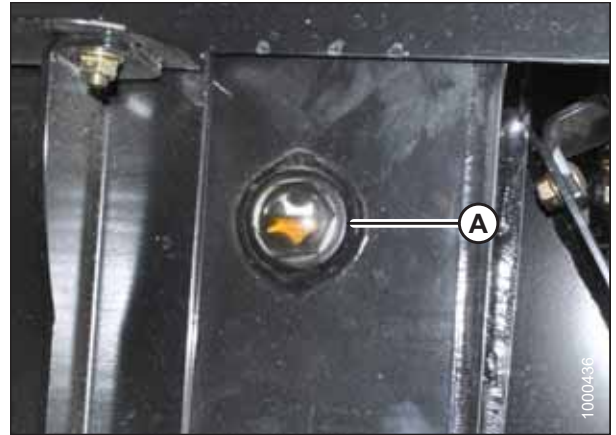


Figure 6.189: Hydraulic Oil Sight Glass

5. Stand on the left cab-forward platform to access the filler pipe.
6. Clean cap (A) and the surrounding area.
7. Turn filler cap (A) counterclockwise to unlock the cap. Remove the dipstick.

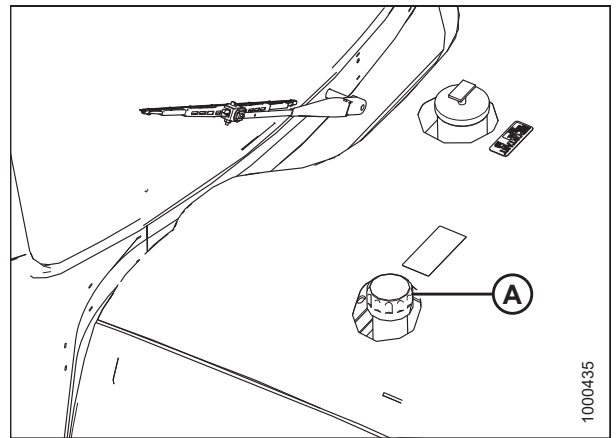


Figure 6.190: Engine Hood

8. If necessary, add hydraulic oil to the reservoir. Refer to the inside back cover of this manual for the hydraulic oil specifications and the capacity of the hydraulic fluid reservoir.

NOTE:

When the dipstick is showing low (L), approximately 4 liters (1 US gallon) of oil is needed to reach the full (H) mark.

IMPORTANT:

- Use new, good quality, prefiltered, clean hydraulic oil
- Exercise care to prevent debris from falling into the tank

9. Reinstall the dipstick and the filler cap. Turn the cap clockwise until it is secure.
10. Close the hood. For instructions, refer to [6.3.2 Closing Hood – Lower Position, page 372](#).

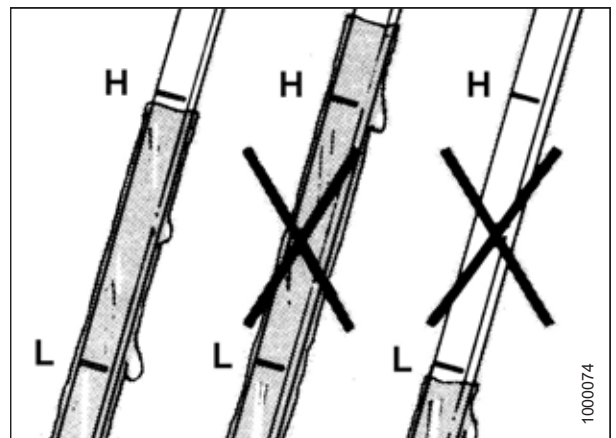


Figure 6.191: Hydraulic Oil Levels

6.11.2 Hydraulic Oil Cooler

The hydraulic oil cooler is located inside the cooling box behind the radiator.

It should be cleaned daily with compressed air. For instructions, refer to *Cleaning Cooler Box Components*, page 432.

6.11.3 Changing Hydraulic Oil

The hydraulic oil should be changed according to the interval specified in the maintenance schedule, which can be found in the windrower operator's manual.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Park the windrower on a level surface.
2. Lower the header.
3. Shut down the engine, and remove the key from the ignition.
4. Open the hood to the highest position. For instructions, refer to *6.3.3 Opening Hood – Highest Position*, page 372.
5. Place a clean container (at least 75 liters [20 US gallons]) under the drain at the bottom of the hydraulic oil reservoir.
6. Remove drain plug (A). Allow the oil to drain completely.

NOTE:

Some parts have been removed from the illustration for the sake of clarity.

7. Inspect magnetic drain plug (A). Using a clean cloth, remove any metal debris that may have accumulated on the surface of the plug. Check the condition of the O-ring on the drain plug. Look for cracking, breakage, or deformation. Replace the O-ring if it shows any sign of wear or damage.
8. Install drain plug (A), and torque it to 80 Nm (59 lbf-ft).
9. Fill the hydraulic oil reservoir. For instructions, refer to *6.11.1 Checking and Filling Hydraulic Oil*, page 474.

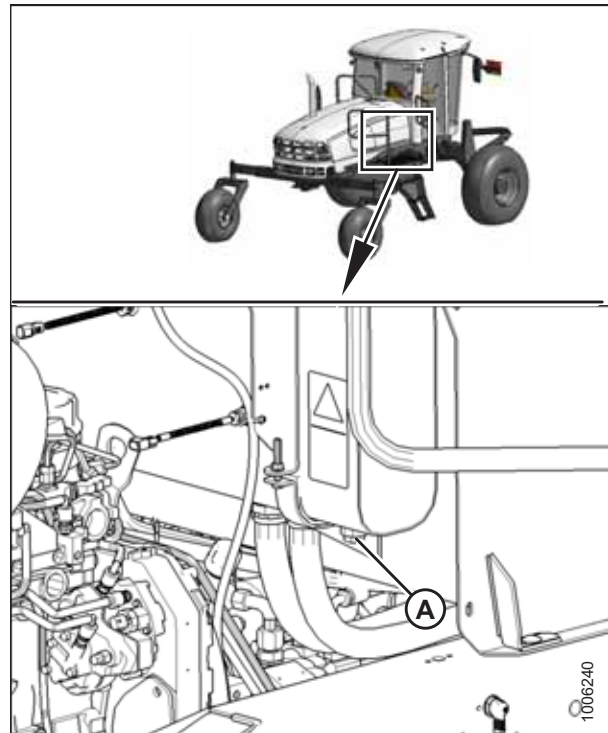


Figure 6.192: Hydraulic Oil Drain Plug

6.11.4 Changing Hydraulic Oil Filters

The charge and return hydraulic oil filters should be replaced at the same time, according to the intervals specified in the machine's maintenance schedule.

Change the hydraulic oil filters after the first 50 hours of operation, and after every 500 hours thereafter. The replacement part for filter (A) (MD #112419) and the service kit for filter (B) (MD #320360) can be obtained from your Dealer.

Charge oil filter (A) and return oil filter (B) are located just inside the frame on the left side of the windrower. They are accessible from underneath the windrower.

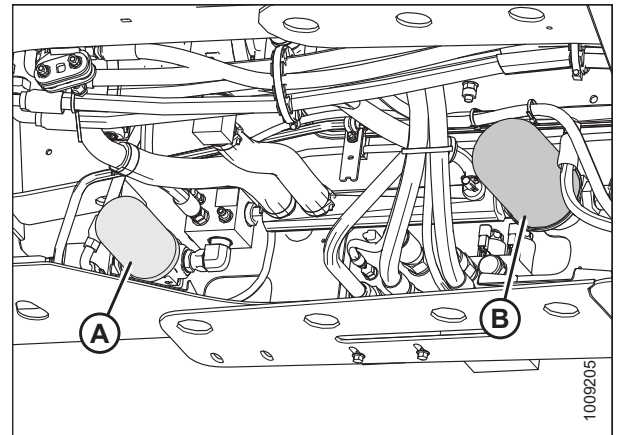


Figure 6.193: Hydraulic Oil Filters

Charge Oil Filter

The charge oil filter cleans the oil in the hydraulic charge circuit. The charge circuit replenishes oil losses that occur normally at the motor and pump case drains and associated circuits.

Refer to the following procedures to change the charge oil filter:

- [Removing Charge Oil Filter, page 477](#)
- [Installing Charge Oil Filter, page 478](#)

Removing Charge Oil Filter

The charge oil filter can be removed from the left side of the windrower so that it can be replaced.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Clean around head of filter (A).
3. Apply a vacuum to the hydraulic tank filler hole to prevent oil leakage during filter change. Place a 19 L (5 US gal) container beneath the filter to collect any oil that may leak out.
4. Unscrew filter (A) using a filter wrench.
5. Dispose of the used oil and the filter in accordance with local legislation.

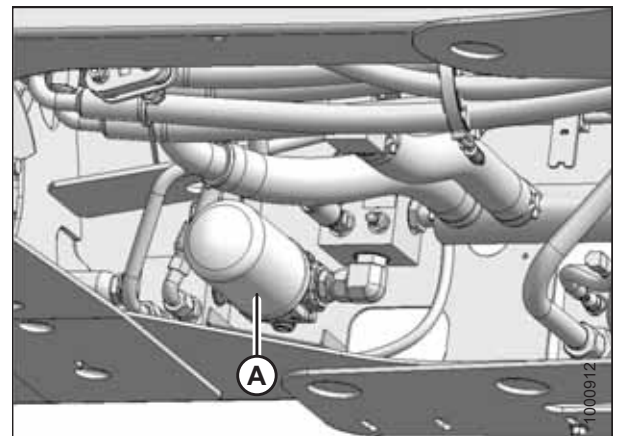


Figure 6.194: Charge Oil Filter

Installing Charge Oil Filter

Once the charge oil filter has been removed from the windrower's left side, a new filter can be installed.

NOTE:

For the charge oil filter replacement part number, refer to [9.2.4 Filter Part Numbers, page 533](#).

1. Clean the gasket surface of the filter head.
2. Apply a thin film of clean oil to the filter gasket.
3. Screw new filter (A) onto the mount. Tighten the filter until the gasket contacts the filter head.
4. Tighten the filter an additional 1/2 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install the oil filter. Overtightening can damage the gasket and the filter.

5. Check the hydraulic oil level and add oil if needed. For instructions, refer to [6.11.1 Checking and Filling Hydraulic Oil, page 474](#).

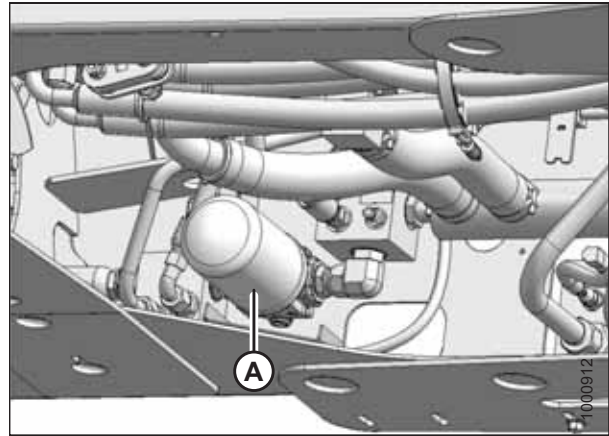


Figure 6.195: Charge Oil Filter

Return Oil Filter

The return oil filter filters the oil in the header drive systems. It should be changed according to the interval specified in the maintenance schedule.

To change the return oil filter, refer to the following procedures:

- [Removing Return Oil Filter, page 478](#)
- [Installing Return Oil Filter, page 479](#)

Removing Return Oil Filter

The return oil filter can be removed from the windrower's left side so that it can be replaced.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Move the platform on the left cab-forward side of the machine to the open position. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).

MAINTENANCE AND SERVICING

3. Clean around the head of filter (A).
4. Place a 19 L (5 US gal) container beneath filter (A) to collect any oil that may leak out.
5. Unscrew filter (A) using a filter wrench.
6. Dispose of the used oil and the filter in accordance with local legislation.

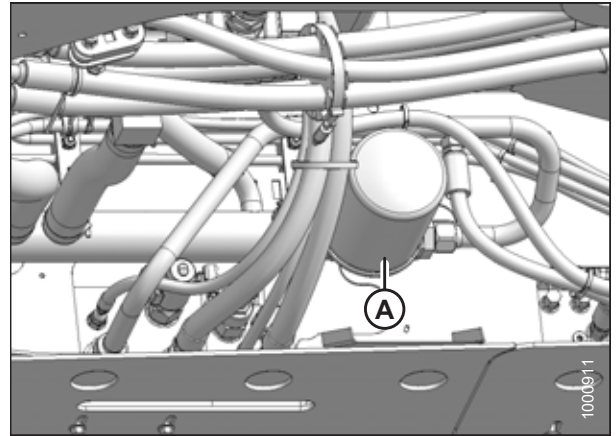


Figure 6.196: Return Oil Filter

7. Remove gasket (C) from groove (B) in filter head (A).

NOTE:

Filter (D) is shown for context.

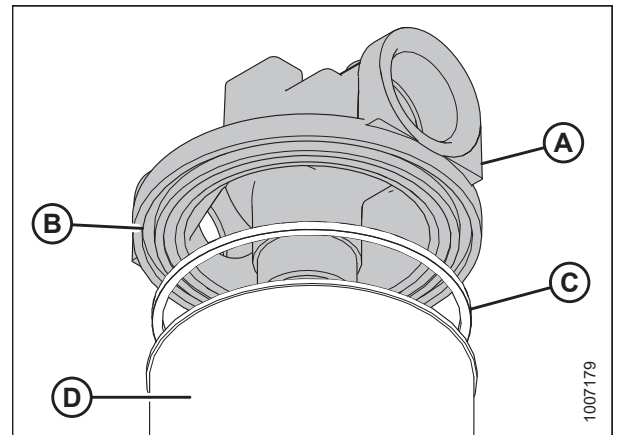


Figure 6.197: Return Oil Filter

Installing Return Oil Filter

Once the windrower's return oil filter has been removed from the windrower's left side, a new filter can be installed.

NOTE:

For the filter specifications, refer to [9.2.4 Filter Part Numbers, page 533](#).

1. Clean gasket groove (B) in filter head (A). If an O-ring is installed in the groove, remove and discard it.
2. Apply a thin film of clean oil to filter square cut gasket (C).
3. Install new square cut gasket (C) into groove (B) in filter head (A).
4. Screw new filter (D) onto the filter head until the gasket contacts the filter.

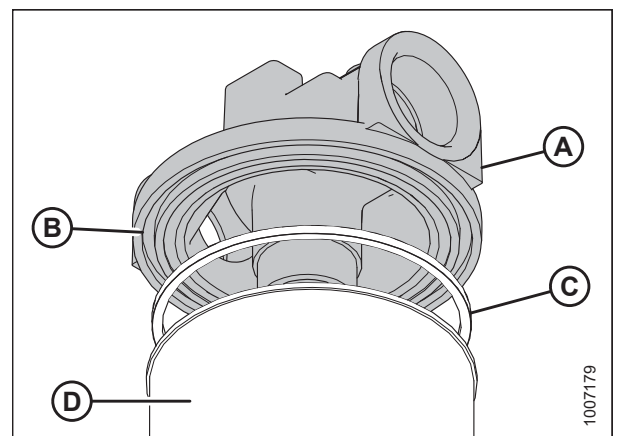


Figure 6.198: Return Oil Filter

- Tighten filter (A) an additional 1/2 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install the oil filter. Overtightening can damage the gasket and the filter.

- Check the hydraulic oil level. For instructions, refer to [6.11.1 Checking and Filling Hydraulic Oil, page 474](#).

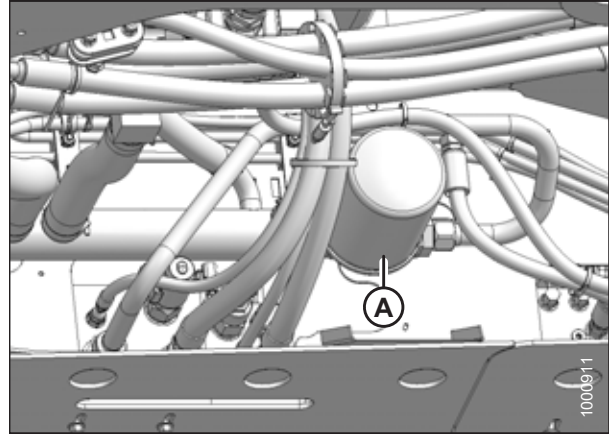


Figure 6.199: Return Oil Filter

6.11.5 Header and Reel Hydraulics

Refer to this section for information on the hydraulic components which affect the operating characteristics of the header and the reel (if the header is equipped with a reel).

Hoses and Lines

Check hydraulic hoses and lines daily for signs of leaks.

⚠ WARNING

- Avoid high pressure fluids. Escaping fluid can penetrate the skin, causing serious injury.
- Relieve the pressure in the hydraulic system before disconnecting any hydraulic fittings. Tighten all connections before applying pressure.
- Keep away from pin-holes and nozzles which can eject high-pressure fluids.



Figure 6.200: Hydraulic Pressure Hazard

WARNING

- Use a piece of cardboard or paper to search for hydraulic leaks. Do **NOT** use your hand or any other part of your body.
- If **ANY** hydraulic fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type of injury. Otherwise, this injury becoming infected with gangrene.

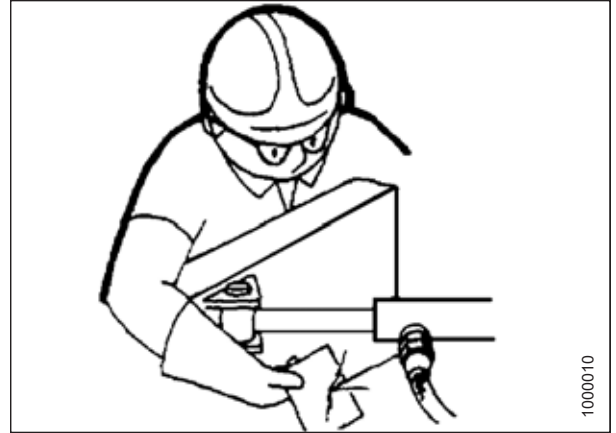


Figure 6.201: Checking Hydraulic Leaks

IMPORTANT:

Contaminants such as dirt, dust, and water are the major cause of damage to the hydraulic system.

- If the hydraulic system's components must be disconnected for service, protect the ends of hoses, tubing, and ports from contamination. Cover openings with clean, lint-free towels, or clean plastic bags.
- Before installing a replacement hydraulic hose, flush the inside of those with clean diesel fuel or commercial petroleum cleaning solvent for a minimum of ten seconds. Do **NOT** use water, water soluble cleaners, or compressed air to clean a hydraulic hose.
- The hydraulic system's components are manufactured with a great degree of precision, and have been assembled in sanitary conditions at the factory. Do **NOT** attempt to service these components in the field, except to maintain the proper oil level, change the hydraulic oil and filters, and to adjust the relief pressures as described in this manual.

Contact your MacDon Dealer for all other hydraulic system service needs.

Pressure Compensator Valve

The pressure compensator valve protects the header drive pumps from overheating under very heavy loads.

When the operating pressure reaches the absolute pressure limit setting (refer to Table 6.3, page 482 for hydraulic pressure setting) the compensator valve in the pump is activated and the header drive will slow down to avoid overheating the drive pumps. When this occurs, reduce the windrower's ground speed to reduce the hydraulic system pressure.

NOTE:

An optional pressure sensor is available which monitors the knife or reel drive hydraulic pressure. This sensor will cause the cab display module (CDM) to emit a warning tone if it detects that the hydraulic system pressure has reached a preset limit. The system pressure limit can be configured using the CDM. For information on the pressure sensor kit, refer to [8.3.7 Pressure Sensor Kit, page 517](#). The warning tone is only heard if the pressure sensor is installed and enabled.

NOTE:

The CDM emitting a warning tone is normal when the operating pressure is close to the compensator valve's pressure setting.

Table 6.3 Header Hydraulic Pressures

Header Model	Application/System	Windrower Absolute Pressure Limit Setting kPa (psi)	Suggested Overload Warning Setting kPa (psi)
R/R1 Series	Disc pressure	28,958 (4200)	27,579 (4000)
D/D1/D2 Series	Reel/drapper pressure	22,063 (3200)	20,684 (3000)
A Series	Knife/conditioner pressure	28,958 (4200)	27,579 (4000)

If lift or drive capacity problems occur, the pressure compensator valve may require adjusting. Contact your MacDon Dealer for assistance.

Flow Control Blocks

Two hydraulic valve blocks equipped with multiple cartridges are used for various windrower functions. The flow control blocks are regulated by the windrower control module (WCM), according to inputs from the Operator. The valve blocks are located behind the left cab-forward platform.

The valve blocks do not require any scheduled maintenance other than to check for leaking fittings or loose electrical connections. If service is required, contact your MacDon Dealer.

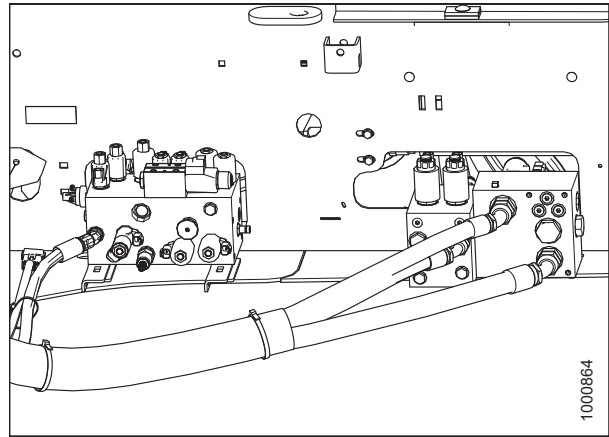


Figure 6.202: Hydraulic Valve Blocks

Adjusting Header Drop Rate

The header should fall gradually when the LOWER HEADER switch is pressed. Lowering the header from the fully raised to the fully lowered position should take 3–4 seconds. If the lowering speed falls outside of these specifications, the header drop rate requires adjustment.

⚠ DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator’s seat for any reason.

IMPORTANT:

The drop rate should **NOT** be less than 3–4 seconds; damage to the header or windrower may result if the drop rate is higher than this.

NOTE:

If the drop rate is too low (that is, if it requires more than 30 seconds for the header to move from the fully raised to the fully lowered position), the windrower control module (WCM) will disable the return to cut height, tilt, and float presets. This is done to prevent the hydraulic system from overheating.

MAINTENANCE AND SERVICING

1. Shut down the engine, and remove the key from the ignition.
2. Move the platform on the left cab-forward side of the machine to the open position. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).
3. Loosen inner knob (B) on the needle valve. Adjust the knob as follows:
 - Turn outer knob (A) clockwise to decrease the drop rate
 - Turn outer knob (A) counterclockwise to increase the drop rate
4. Tighten inner knob (B).
5. Check the drop rate. Repeat this procedure as needed.
6. Close the platform. For instructions, refer to [6.4.2 Closing Platforms – Standard Position, page 375](#).

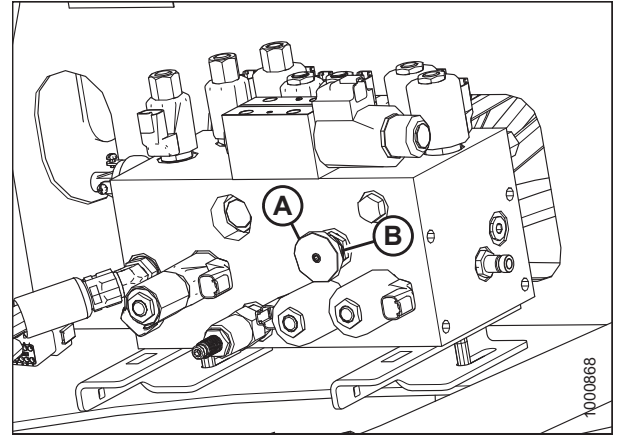


Figure 6.203: Multifunction Control Manifold

Adjusting Reel Drop Rate

When the lower reel switch is pressed, the reel should drop from fully raised to fully lowered in approximately 3–4 seconds. Operators can change the drop rate as needed.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

IMPORTANT:

The drop rate should **NOT** be less than 3–4 seconds; damage to the header or windrower may result if the drop rate is higher than this.

1. Lower the header.
2. Shut down the engine, and remove the key from the ignition.
3. Move the platform on the left cab-forward side of the machine to the open position. For instructions, refer to [6.4.1 Opening Platforms – Standard Position, page 374](#).

MAINTENANCE AND SERVICING

4. Locate drop rate control valve (A), installed at port D on the manifold.

NOTE:

This valve is installed on draper-ready windrowers; it affects draper headers only.

5. Loosen set screw (B). Turn cap (C) as follows:
 - Turn cap (C) clockwise to decrease the reel drop rate.
 - Turn cap (C) counterclockwise to increase the reel drop rate.
6. Check the reel drop rate. Repeat this procedure as needed.

NOTE:

To reset the drop rate to factory specifications, fully close the needle valve and then open it four turns counterclockwise.

7. Tighten set screw (B).

NOTE:

Reel drop rate decal (A) is provided as a guide when adjusting valve position.

8. Close the platform. For instructions, refer to [6.4.2 Closing Platforms – Standard Position, page 375](#).

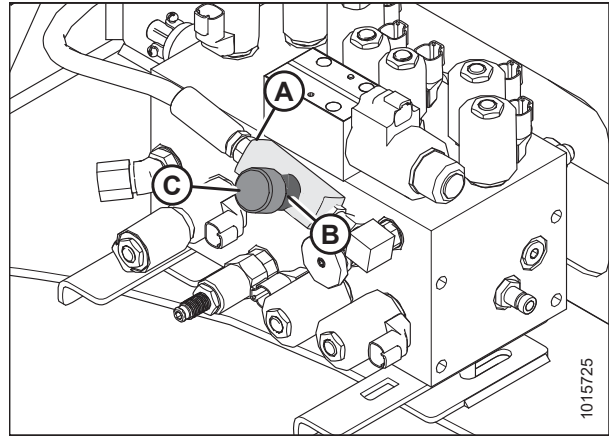


Figure 6.204: Multifunction Control Manifold

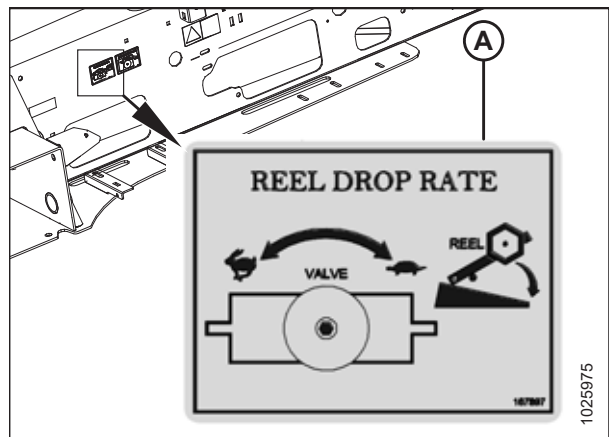


Figure 6.205: Reel Drop Rate Decal

6.11.6 Traction Drive Hydraulics

The windrower transmission consists of two variable-displacement axial-piston hydraulic pumps; each drive wheel has its own dedicated pump.

The pumps are driven through a gearbox from the engine. Each pump requires charge flow in order to:

- Compensate for internal hydraulic fluid leakage
- Maintain positive pressure in the main circuit
- Maintain the temperature of the hydraulic system
- Compensate for leakage losses from the external valving or auxiliary systems

The windrower control module (WCM) monitors the charge pressure. The cab display module (CDM) will emit a tone and display a flashing warning message if the charge pressure drops below 1725 kPa (250 psi). For more information, refer to [Display Warnings and Alarms, page 79](#).

Checking Transmission Oil Pressure

The transmission oil pressure must be within the correct range for the drive wheels to function correctly.

IMPORTANT:

The rated charge pressure **MUST** be maintained under all conditions of operation to prevent damage to the transmission.

If the TRANS OIL PRESSURE warning is displayed, shut down the engine, and proceed as follows:

1. Check the hydraulic fluid level in the tank. For instructions, refer to [6.11.1 Checking and Filling Hydraulic Oil, page 474](#).
2. Check the hoses and lines for leakage.
3. Check the charge pressure relief valve. For instructions, refer to [Checking Charge Pump Pressure, page 485](#).
4. If charge pressure still cannot be maintained, do **NOT** operate the windrower. Contact your MacDon Dealer.

Checking Charge Pump Pressure

The charge pump oil pressure must be within the correct range for the drive wheels to function correctly.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

The incorrect charge pressure setting may result in the charge pressure pump being unable to build the required system pressure and/or inadequate loop flushing flows.

The correct charge pressure **MUST** be maintained under all conditions, in order to maintain pump control performance and to operate the brake release.

Check the charge pump pressure as follows:

1. Open the hood fully. For instructions, refer to [6.3.3 Opening Hood – Highest Position, page 372](#).
2. Attach a 0–4000 kPa (0–600 psi) pressure gauge to a hose long enough to allow the pressure gauge to be read from the operator's seat.
3. Locate test port (A) on the charge filter head. Clean the test port fitting, and then attach the hose to the fitting.
4. Start the engine. Set the throttle to the idle position. The pressure should be 1655–2241 kPa (240–325 psi) when the hydraulic oil reaches a temperature of 40°C (100°F).
5. Record the reading and shut down the engine.
6. If the pressure reading is **NOT** within the appropriate range, contact your MacDon Dealer.
7. If the pressure reading is within the appropriate range, remove the hose from the test port and close the hood. For instructions, refer to [6.3.4 Closing Hood – Highest Position, page 373](#).

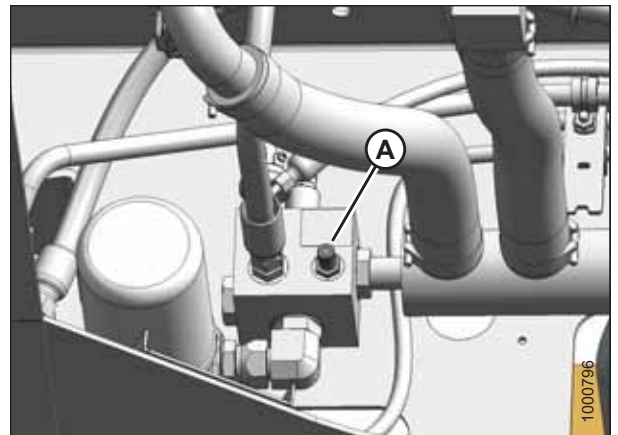


Figure 6.206: Charge Pump Test Port

6.12 Wheels and Tires

Refer to this section for information on maintaining the windrower's drive wheels and caster wheels.

6.12.1 Traction Drive

The windrower's traction drive consists of the drive wheels, the tires, the power wheel, and the hydraulic motor. Refer to the following procedures for information on maintaining the traction drive system.

Inflating Drive Wheel Tire

The tires on the windrower's drive wheels must be inflated to the correct pressure to ensure the windrower's performance in the field.

! DANGER

- Inflate the tire when the wheel is in a safety cage, if possible.
- Do NOT stand over the tire while inflating it. Use a clip-on chuck and extension hose.
- NEVER install a tube in a cracked wheel rim.
- NEVER weld a wheel rim.
- Do NOT exceed the maximum inflation pressure, which can be found on the tire's sidewall.
- Ensure that all the air is removed from a tire before attempting to remove the tire from the rim.

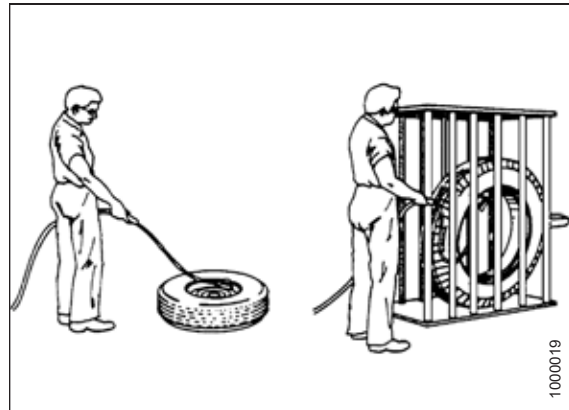


Figure 6.207: Drive Tire Inflation

! DANGER

- NEVER use force on an inflated or partially inflated tire. Ensure that the tire is correctly seated before inflating it to operating pressure.
- Do NOT remove, install, or make repairs to a tire on a rim unless you have the proper equipment and experience to perform the job. Take the tire and rim to a qualified tire repair shop.
- If the tire is NOT in the correct position on the rim, or if it is overinflated, the tire bead can loosen on one side, causing air to leak at high speed and with great force. An air leak of this nature can thrust the tire in any direction, endangering anyone in the area.

! DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Perform a daily visual check on the tires to ensure that they have not lost air pressure. Adjust the tire pressure as needed. Underinflated drive tires can cause sidewall cracks.

To inspect a tire's air pressure level, follow these steps:

1. Shut down the engine, and remove the key from the ignition.
2. Determine the type and size of tire installed on the windrower.
3. Refer to the following table to determine the appropriate tire pressure:

Table 6.4 Drive Wheel Tire Options (Ten Bolt)

18.4-26 Bar	600-65 R28 Bar	18.4-26 Turf	23.1-26 Turf
317 kPa (46 psi)	241 kPa (35 psi)	317 kPa (46 psi)	234 kPa (34 psi)

4. Adjust the tire pressure as needed.

IMPORTANT:

Check the maximum inflation rating on the tire’s sidewall. Do **NOT** inflate the tire beyond the maximum pressure specification.

Tightening Drive Wheel Nuts

The wheel nuts must be tightened in a specific pattern to prevent damage to the drive wheels.

Whenever a wheel is installed, retorque the drive wheel nuts after one hour of operation. Retorque the installed wheel every hour until two consecutive checks demonstrate that the wheel nut torque is unchanged.

IMPORTANT:

- To avoid damage to the wheel rims and studs, tighten the wheel nuts by hand. Do **NOT** use an impact wrench. Do **NOT** apply lubricant or anti-seize compound to the threads of the wheel studs. Do **NOT** overtighten the wheel nuts.
- Ensure that only the manufacturer-specified wheel nuts are used to secure the drive wheel.

1. Tighten drive wheel nuts (A). Ensure that the nuts and studs are dry. Do **NOT** apply lubricant or anti-seize compound to the threads of the wheel studs. Torque each nut to 510 Nm (375 lbf-ft) using the tightening sequence shown at right.
2. Repeat the tightening sequence twice more.
3. Retorque the installed wheel every hour until two consecutive checks demonstrate that the wheel nut torque is unchanged.

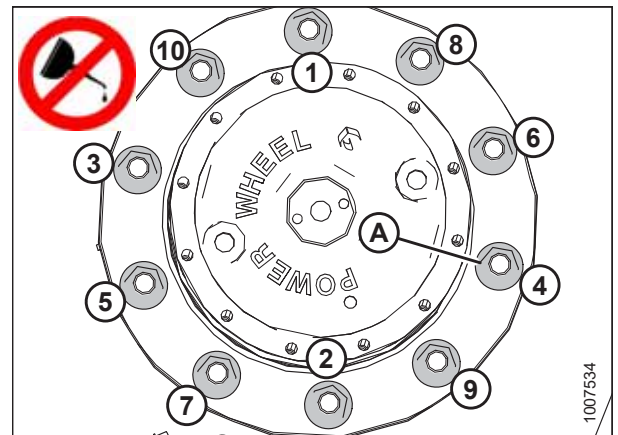


Figure 6.208: Drive Wheel – Nut Tightening Sequence

Checking Wheel Drive Lubricant Level

The lubricant level in the windrower’s wheel drives can be inspected through the lubricant ports.

! DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator’s seat for any reason.

! CAUTION

Park on a level surface with the ground speed lever (GSL) in the N-DETENT position and the steering wheel in the locked (centered) position. Wait for the cab display module (CDM) to beep and display an “In Park” message to confirm that the parking brake is engaged.

1. Park the windrower on level ground.

MAINTENANCE AND SERVICING

2. Rotate the wheel drive so that the imaginary line running through plugs (A) and (B) and hub center (C) is parallel with the ground, as shown.
3. Shut down the engine, and remove the key from the ignition.
4. Remove plug (A). The lubricant should be visible through the port. If lubricant needs to be added, refer to [Adding Wheel Drive Lubricant, page 488](#).

NOTE:

The type of lubricant used after the first wheel drive lubricant change differs from the type of lubricant used at the factory. Refer to the manual's inside back cover for the recommended wheel drive lubricant.

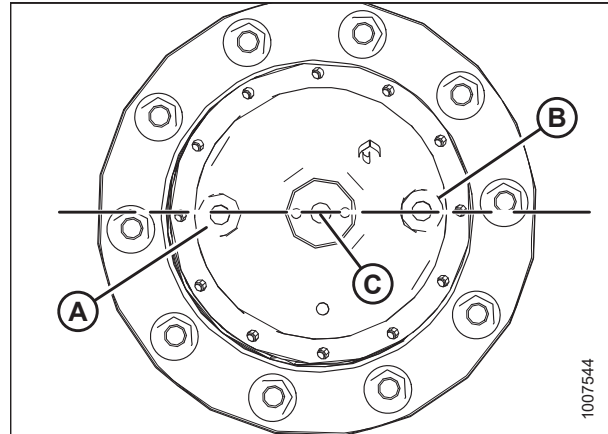


Figure 6.209: Drive Wheel Hub

5. Reinstall the plugs and tighten them.

Adding Wheel Drive Lubricant

If the level of lubricant in the wheel drives is insufficient, or if the lubricant has been drained, more will need to be added.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

CAUTION

Park on a flat, level surface with the header on the ground, the ground speed lever (GSL) in the N-DETENT position, and the steering wheel in the locked position (centered). To confirm that the parking brake is engaged, wait for the cab display module (CDM) to beep and display the message IN PARK.

IMPORTANT:

Do **NOT** mix lubricants of different brands or specifications.

1. Rotate the wheel drive so that the imaginary line running through plugs (A) and (B) and hub center (C) is parallel with the ground, as shown.
2. Shut down the engine, and remove the key from the ignition.
3. Remove two plugs (A) and (B). The oil should be visible through the hole.
4. If lubricant needs to be added, remove second plug (B), and add lubricant until lubricant runs out at port (A). Refer to the inside back cover for lubricant specifications.

NOTE:

The type of lubricant used after the first wheel drive lubricant change is not the same type of lubricant used in the factory. Refer to the manual's inside back cover for the recommended wheel drive lubricant.

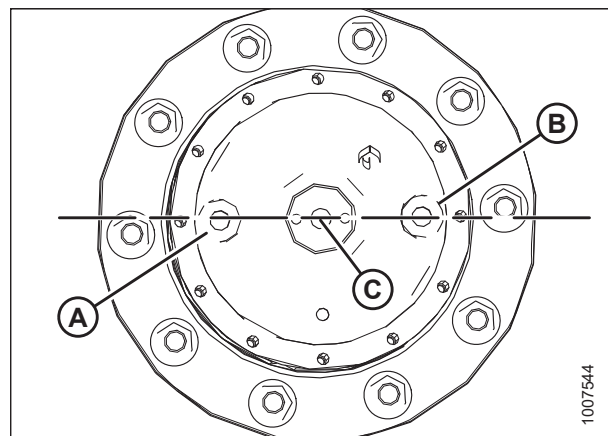


Figure 6.210: Drive Wheel Hub

5. Reinstall and tighten plugs (A) and (B).

6. Start the engine. Operate the windrower for a few minutes, then stop and check the oil level. If necessary, add more oil.

Changing Wheel Drive Lubricant

The wheel drive lubricant should be changed according to the interval specified in the maintenance schedule. Change the lubricant when it is warm.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

CAUTION

Park on a flat, level surface with the header on the ground, the ground speed lever (GSL) in the N-DETENT position, and the steering wheel in the locked position (centered). To confirm that the parking brake is engaged, wait for the cab display module (CDM) to beep and display the message IN PARK.

1. Park the windrower on level ground. Position the windrower so that one of drain plugs (A) or (B) is at the lowest point on the drive wheel hub, as shown.
2. Shut down the engine, and remove the key from the ignition.
3. Place a container large enough to hold at least 2 liters (2 quarts) of fluid under lower drain plug (B).
4. Remove both plugs (A) and (B). Allow the lubricant to drain completely into the container.

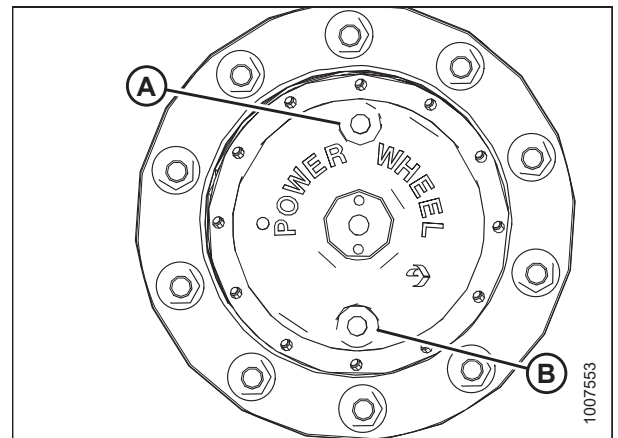


Figure 6.211: Drive Wheel Hub

CAUTION

Dispose of oil in a manner that complies with local rules and regulations.

5. After the lubricant has drained completely, start the windrower and position it so that the imaginary line running through (A) and (B) and center hub (C) is parallel with the ground, as shown.
6. Shut down the engine, and remove the key from the ignition.
7. Add lubricant to the wheel drive. For instructions, refer to [Adding Wheel Drive Lubricant, page 488](#).

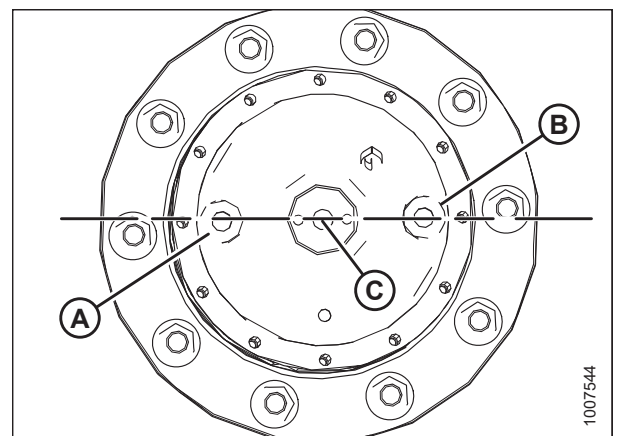


Figure 6.212: Drive Wheel Hub

Raising Drive Wheel – Jack Method

The windrower's drive wheel will need to be raised off of the ground to be removed or installed.

⚠ DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

⚠ CAUTION

Detach the header or weight box, if these are attached to the windrower. Use a jack with a minimum lifting capacity of 2268 kg (5000 lb.) to provide adequate support for the windrower.

1. Detach the header from the windrower. For instructions, refer to [5 Attaching and Detaching Headers, page 235](#).
2. Park the windrower on level ground. Ensure that caster wheels (A) are oriented so that they are parallel to drive wheels (B) as shown.

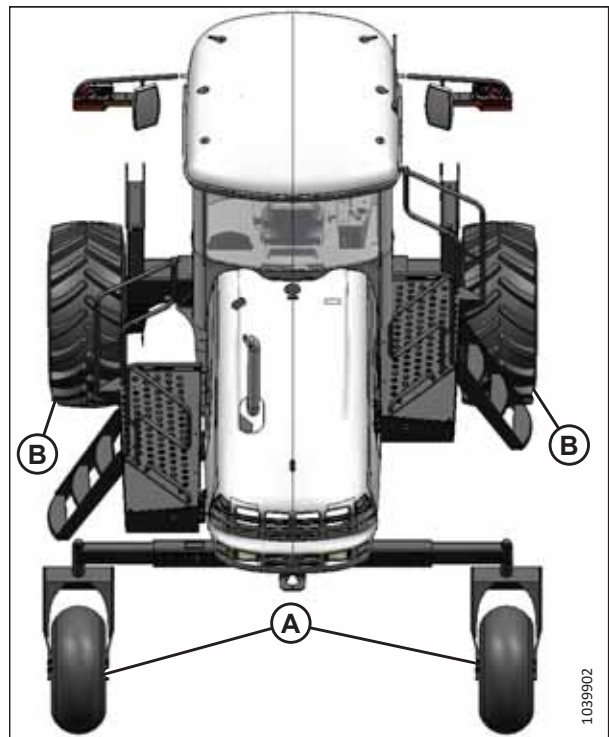


Figure 6.213: Caster Wheels Parallel to Drive Wheels

MAINTENANCE AND SERVICING

- Place blocks or wheel chocks (B) behind both caster wheels (A).

NOTE:

Blocking or chocking the caster wheels ensures that the windrower will not roll backward when the front of the machine is raised up.

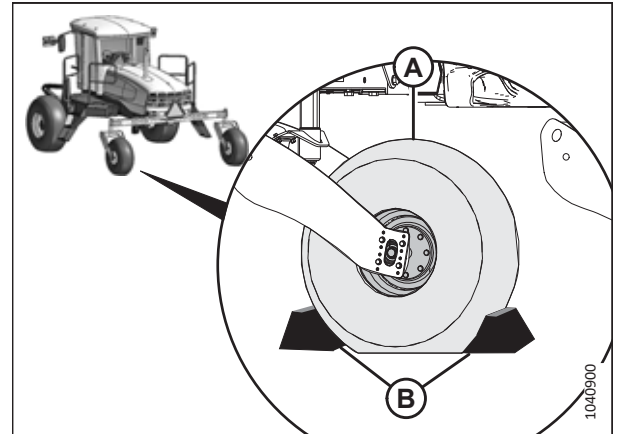


Figure 6.214: Chocked Caster Wheel

- Place ground speed lever (GSL) (A) in N-DETENT position (B).



CAUTION

The jack stand used to support the windrower must be capable of supporting a minimum of 2268 kg (5000 lb.).

- Shut down the engine, and remove the key from the ignition.



Figure 6.215: Ground Speed Lever

- Locate jacking point (A) on the back of the drive wheel leg.
- Place the head of the jacking device within retaining ring (B).

IMPORTANT:

The head of the jacking device **MUST** fit within retaining ring (B). To do so, the head will need to be 5 cm (2 in.) in diameter or smaller.

- Elevate the drive wheel slightly.
- Place a jack stand under lift cylinder mount (C).
- Lower the windrower onto the jack stand.

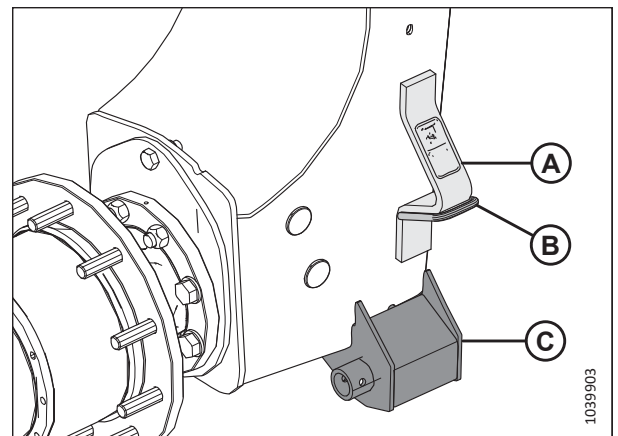


Figure 6.216: Drive Wheel Jacking Point

Removing Drive Wheel

Once the drive wheel has been raised, the wheel nuts can be removed and the wheel can be removed from the windrower.

CAUTION

Use a suitable lifting device capable of supporting a minimum of 907 kg (2000 lb.) to lift the wheel assembly away from the windrower.

1. Raise windrower drive wheel (A) off of the ground. For instructions, refer to *Raising Drive Wheel – Jack Method*, page 490.
2. Remove wheel nuts (B).
3. Use a suitable lifting device to remove drive wheel (A).

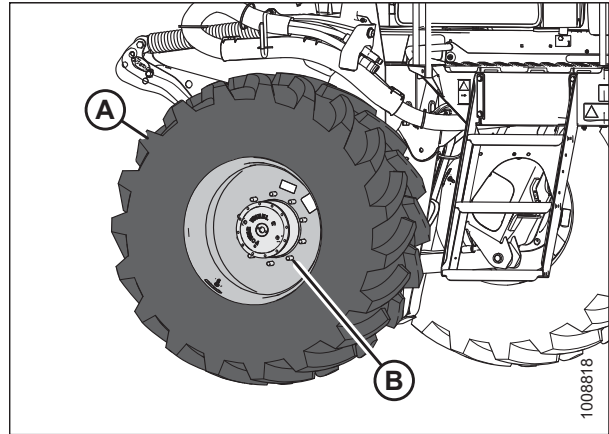


Figure 6.217: Drive Wheel

Installing Drive Wheel

The drive wheel will need to be handled with a lifting device to be safely installed on the windrower.

CAUTION

Use a suitable lifting device capable of supporting a minimum of 907 kg (2000 lb.) to lift the wheel.

1. Position drive wheel (A) against wheel drive hub (B) so that air valve (C) faces away from the windrower and tire tread (D) points in the cab-forward direction.

NOTE:

For turf tires (diamond-treaded), ensure that the arrow on the sidewall points in the direction of cab-forward rotation.

2. Install the wheel on the hub with the aid of a suitable lifting device.

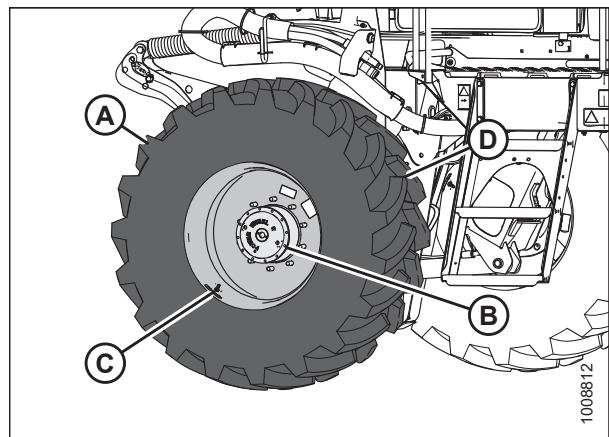


Figure 6.218: Drive Wheel

MAINTENANCE AND SERVICING

3. Install and hand-tighten wheel nuts (A).

IMPORTANT:

To prevent damage to the wheel rim, tighten the nuts by hand. Do **NOT** use an impact wrench to tighten the wheel nuts. Do **NOT** apply lubricant or anti-seize compound to the threads of the wheel studs. Do **NOT** overtighten the wheel nuts.

4. Remove the lifting device.
5. Torque the drive wheel nuts. For instructions, refer to [Tightening Drive Wheel Nuts, page 487](#).
6. Raise the windrower. For instructions, refer to [Lowering Drive Wheel – Jack Method, page 493](#).

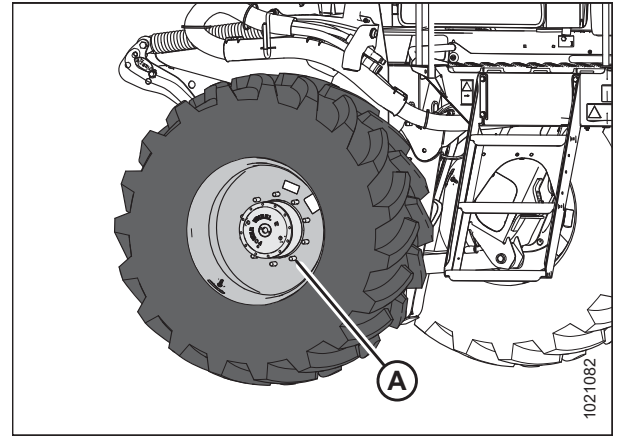


Figure 6.219: Drive Wheel Nuts

Lowering Drive Wheel – Jack Method

Once the drive wheel is secured to the wheel hub, the windrower can be lowered.

CAUTION

Jack stand must be capable of supporting a minimum of 2268 kg (5000 lb.).

1. Place a jack under leg jack point (A), and raise the drive wheel slightly off of the jack stand.
2. Remove the jack stand from under cylinder lift mount (B). Lower the drive wheel to the ground.
3. Remove the jack.

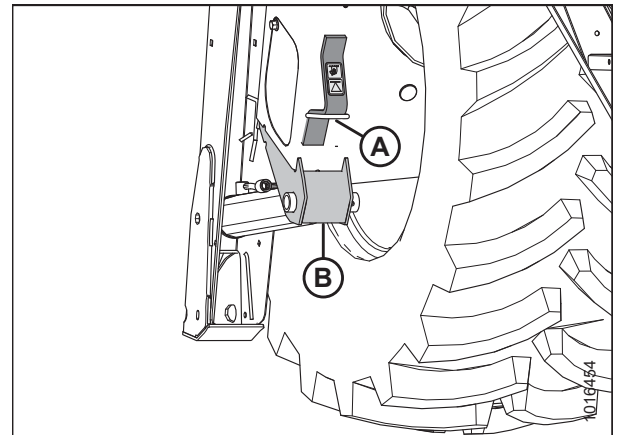


Figure 6.220: Drive Wheel Leg Jack Point

6.12.2 Caster Wheels

The casters wheels' tire pressure, wheel nut torque, and the anti-shimmy dampeners should be inspected regularly.

Inflating Caster Tire

Follow these procedures to safely inflate the tire on a caster wheel.

⚠ DANGER

- Inflate the tire when the wheel is in a safety cage, if possible.
- Do NOT stand over the tire while inflating it. Use a clip-on chuck and extension hose.
- NEVER install a tube in a cracked wheel rim.
- NEVER weld a wheel rim.
- Do NOT exceed the maximum inflation pressure, which can be found on the tire's sidewall.
- Ensure that all the air is removed from a tire before attempting to remove the tire from the rim.



Figure 6.221: Safely Filling a Tire with Air

⚠ DANGER

- NEVER use force on an inflated or partially inflated tire. Ensure that the tire is correctly seated before inflating it to operating pressure.
- Do NOT remove, install, or make repairs to a tire on a rim unless you have the proper equipment and experience to perform the job. Take the tire and rim to a qualified tire repair shop.
- If the tire is NOT in the correct position on the rim, or if it is overinflated, the tire bead can loosen on one side, causing air to leak at high speed and with great force. An air leak of this nature can thrust the tire in any direction, endangering anyone in the area.

Check the tire pressure according to the interval specified in the maintenance schedule. Caster tire pressure should be 69 kPa (10 psi).

To maintain pressure, visually check daily that tires have not lost pressure, and adjust the pressure as needed. Underinflation of tires can cause sidewall cracks.

NOTE:

Overinflation may cause the caster wheels to shimmy.

Table 6.5 Caster Tire Options

Formed Caster	Forked Caster
7.5–16SL single rib, 10–16 front steer tire	16.5L–16.1 rib implement flotation, 10–16 front steer tire
69 kPa (10 psi)	69 kPa (10 psi)

Tightening Caster Wheel Hardware

The caster wheel hardware must be tightened in a specific pattern to prevent damage to the caster wheels.

At first use or when a wheel is removed, check the wheel nut torque every 15 minutes when the windrower is operating on the road, or after every hour when it is operating in the field, until the specified torque is maintained across two checks.

MAINTENANCE AND SERVICING

Once the specified torque is maintained, check the wheel nut torque after every 10 and 50 hours (field or road operation) and then at 200 hour intervals thereafter.

To tighten the caster wheel hardware on a forked caster:

1. Position the wheel on the axle. Install wheel nuts (A).
2. Tighten wheel nuts (A) to 163 Nm (120 lbf-ft) using the tightening sequence shown. Repeat the tightening sequence three times.

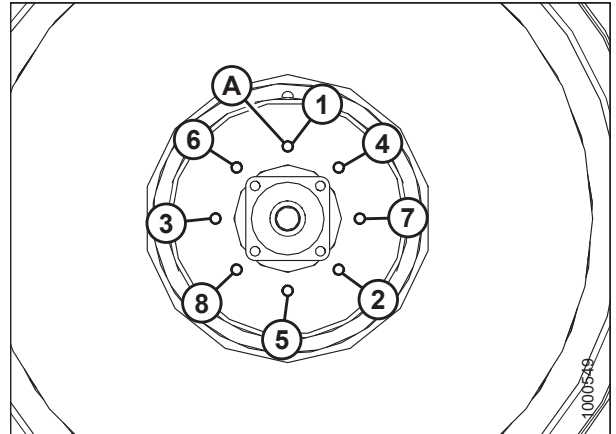


Figure 6.222: Forked Caster Wheel Nut Tightening Sequence

To tighten the caster wheel hardware on a formed caster:

1. Position wheel (B) on the hub. Install wheel bolts (A).
2. Tighten wheel bolts (A) to 163 Nm (120 lbf-ft) using the tightening sequence shown. Repeat the tightening sequence three times.

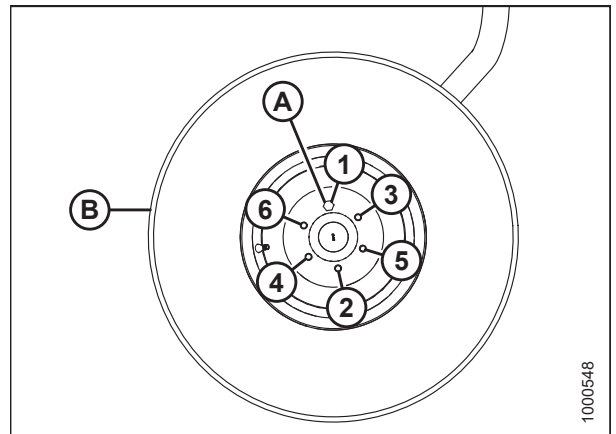


Figure 6.223: Formed Caster Wheel Bolt Tightening Sequence

Raising Caster Wheel – Formed and Forked

The caster wheel will need to be raised off of the ground to be removed or installed.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

CAUTION

The jack stand must be capable of supporting a minimum of 2268 kg (5000 lb.).

1. Park the windrower on level ground and block the drive wheels.

MAINTENANCE AND SERVICING

2. Place ground speed lever (GSL) in N-DETENT position (A).
3. Shut down the engine, and remove the key from the ignition.



Figure 6.224: GSL Position

4. Raise the end of walking beam (A) until caster wheel assembly (B) is no longer in contact with the ground. Use a suitable lifting device, capable of lifting a minimum of 2268 kg (5000 lb.) to lift the windrower.
5. Place a jack stand beneath the walking beam. Lower the jack until the beam rests on the stand.

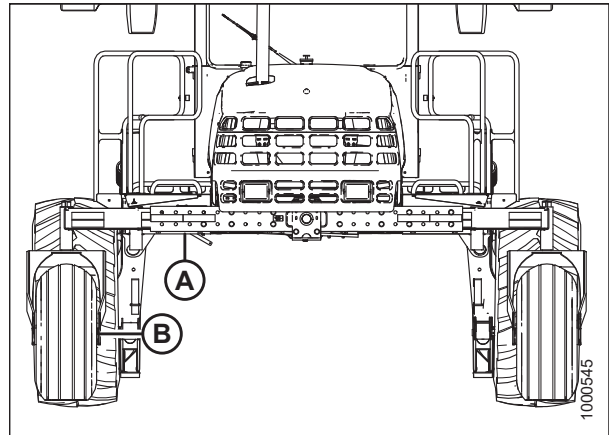


Figure 6.225: Caster Wheels and Walking Beam – Engine-Forward View

Lowering Caster Wheel – Formed and Forked

Once the caster wheel is secured to the caster, the windrower can be lowered.

CAUTION

The jack stand must be capable of supporting a minimum of 2268 kg (5000 lb.).

MAINTENANCE AND SERVICING

1. Raise the end of walking beam (A) slightly, using a suitable lifting device capable of lifting a minimum of 2268 kg (5000 lb.).
2. Remove the jack stand and lower the end of the walking beam until the caster wheel assembly (B) is on the ground.

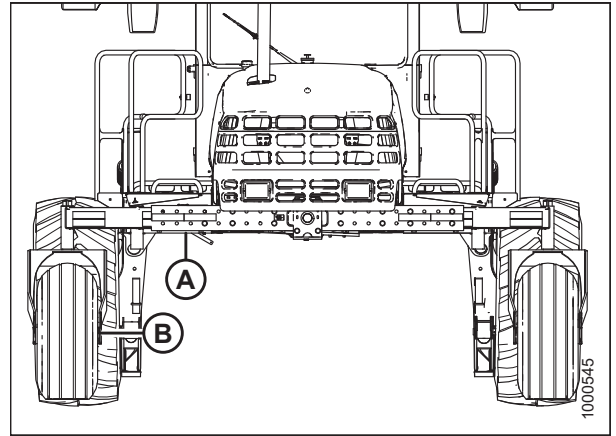


Figure 6.226: Caster Wheels and Walking Beam – Engine-Forward View

Removing Forked Caster Wheel

Once the caster wheel has been raised, the forked caster axle assembly can be removed from the windrower, and the wheel can be removed from the axle assembly.

CAUTION

The wheel assembly is heavy. Support the wheel assembly before removing the axle bolts.

1. Raise the caster wheel. For instructions, refer to [Raising Caster Wheel – Formed and Forked, page 495](#).
2. Remove eight bolts (A) (four on each side of the caster) attaching axle (B) and cover (C) to forked caster (E). Remove wheel assembly (D) from caster (E).

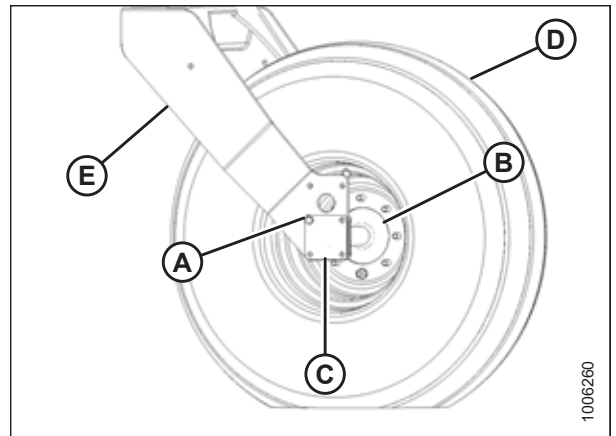


Figure 6.227: Forked Caster Wheel

MAINTENANCE AND SERVICING

3. Remove eight wheel nuts (A) securing axle (B) to wheel (C).
4. Separate axle (B) and wheel (C).

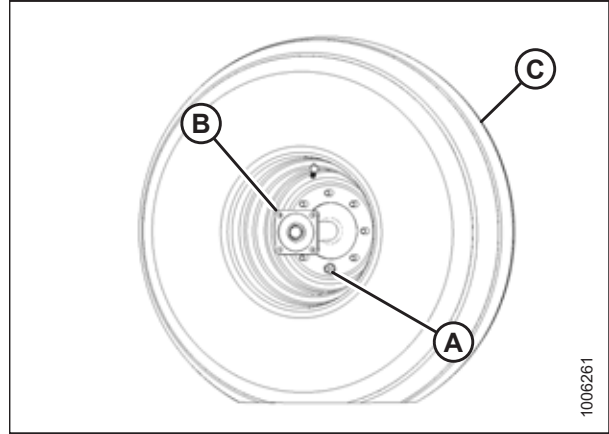


Figure 6.228: Forked Caster Wheel

Installing Forked Caster Wheel

The caster wheel will need to be attached to the axle assembly before it can be installed on the windrower.

CAUTION

The wheel assembly is heavy. Support the wheel assembly before removing the axle bolts.

1. Position wheel assembly (C) on axle assembly (B). Install wheel nuts (A).
2. Torque wheel nuts (A). For instructions, refer to [Tightening Caster Wheel Hardware](#), page 494.

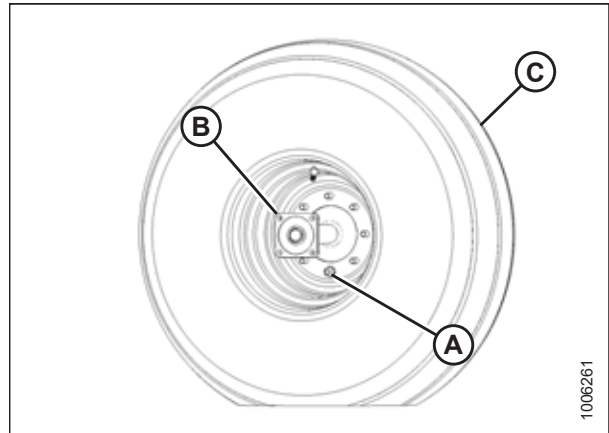


Figure 6.229: Forked Caster Wheel

3. Position wheel assembly (D) in forking caster (E).
4. Position cover plates (C) as shown and install eight bolts (A) (four on each side of caster) to secure axle (B) to caster (E). Torque the bolts to 102 Nm (75 lbf-ft).
5. Lower the caster wheel. For instructions, refer to [Lowering Caster Wheel – Formed and Forked](#), page 496.

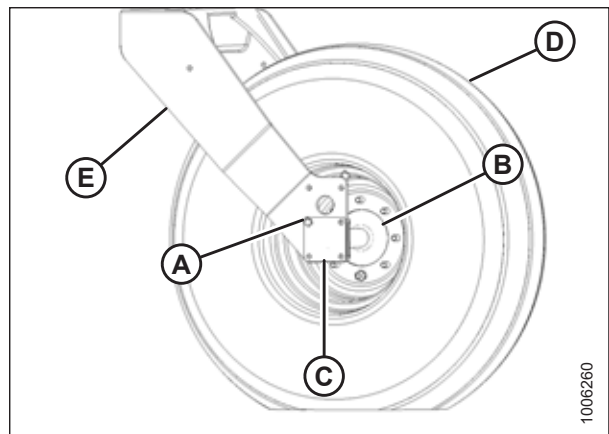


Figure 6.230: Forked Caster Wheel

Removing Formed Caster Wheel

Formed caster wheels are bolted directly to the caster hub. The windrower will need to be elevated to remove the caster wheel.

CAUTION

The wheel assembly is heavy. Support the wheel assembly before removing the axle bolts.

1. Raise the caster wheel. For instructions, refer to [Raising Caster Wheel – Formed and Forked, page 495](#).
2. Remove six bolts (A) securing wheel (B) to the hub.
3. Remove wheel (B).

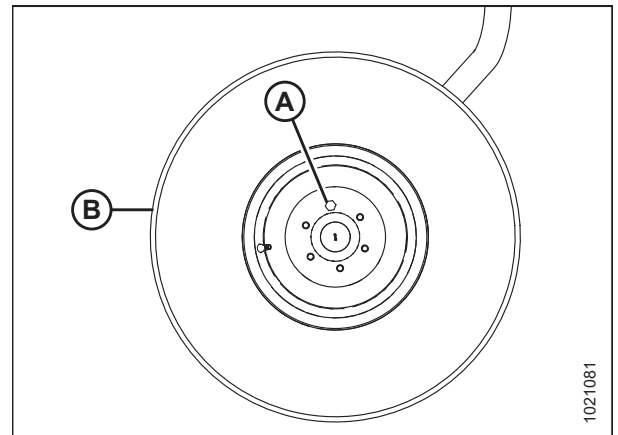


Figure 6.231: Formed Caster Wheel

Installing Formed Caster Wheel

Formed caster wheels are attached directly to the caster wheel hub.

CAUTION

The wheel assembly is heavy. Support the wheel assembly before removing the axle bolts.

1. Position wheel assembly (B) on the caster wheel hub. Secure the wheel with six wheel bolts (A).
2. Referring to the tightening sequence at right, torque bolts (A) to 163 Nm (120 lbf·ft).
3. Lower the caster wheel. For instructions, refer to [Lowering Caster Wheel – Formed and Forked, page 496](#).

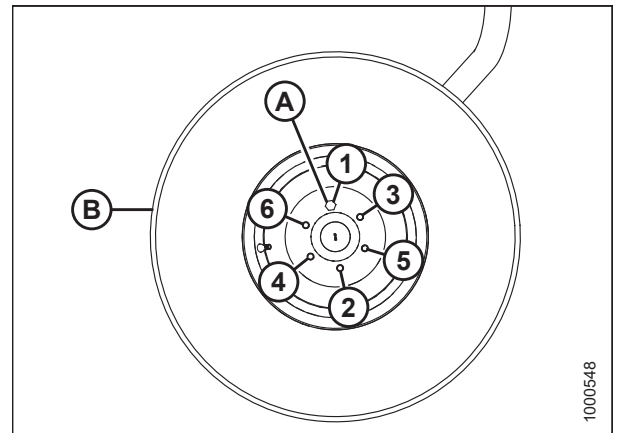


Figure 6.232: Formed Caster Wheel

Tightening Caster Wheel Anti-Shimmy Dampeners

The windrower’s anti-shimmy dampeners mitigate the tendency of caster wheels to shake. They may require tightening from time to time.

Each caster is equipped with a fluid-filled anti-shimmy dampener (for example, dampener [A]).

Mounting bolts (B) should be checked periodically to ensure that they are tight. For the inspection interval, refer to [6.1 Maintenance Schedule, page 365](#).

- The inboard bolt must be tightened to 135 Nm (100 lbf-ft).
- The outboard bolt must be tightened to 115 Nm (85 lbf-ft).

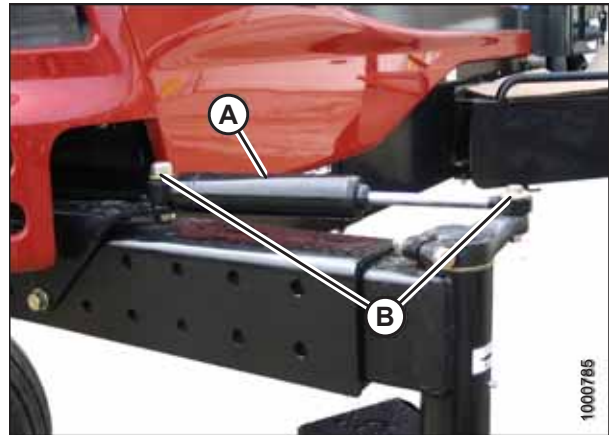


Figure 6.233: Anti-Shimmy Dampener

Adding Tire Ballast

Adding fluid ballast to the windrower’s caster tires will improve the windrower’s stability when it is paired with a heavy header. Tire ballast may only be needed for certain header-windrower combinations in certain types of terrain.

With respect to ballast capacity, a tire is considered to be full of ballast fluid when 75% of the inner volume of the tire is occupied by ballast fluid, or else when the ballast fluid is level with the wheel’s valve stem when the stem is at the 12 o’clock position while the windrower is on level ground. When adding ballast fluid to the caster wheels, always add an identical amount to each wheel. The caster wheels can safely hold any volume of ballast fluid up to and including their maximum capacity, as specified in the table below.

Table 6.6 Recommended Ballast Weight

Header Description	Recommended Ballast				Recommended Tire Size
	Level Terrain		Sloped Terrain		
	Per Tire	Both Tires	Per Tire	Both Tires	
Size	liters (US gal)	kg (lb.) ⁴⁸	liters (US gal)	kg (lb.) ⁴⁸	
A Series					
All	0				7.5 x 16 10 x 16 16.5 x 16.1
R Series					
All	0				7.5 x 16 10 x 16 16.5 x 16.1
D Series and D1 Series					
7.6 m (25 ft.) and smaller	0				7.5 x 16 10 x 16 16.5 x 16.1

48. If only water is used, increase volume of water by 20% (up to maximum allowable fill per tire) to compensate.

MAINTENANCE AND SERVICING

Table 6.6 Recommended Ballast Weight (continued)

9.1 m (30 ft.) single or double reel without conditioner 10.7 m (35-ft.) single reel	0	0	38 (10)	91 (200)	7.5 x 16 10 x 16 16.5 x 16.1
9.1 m (30 ft.) double reel steel fingers and conditioner 10.7 m (35 ft.) double reel (5 or 6-bat)	69 (18)	170 (380)	115 (30)	288 (630)	Level ground: 10 x 16 Level ground: 16.5 x 16.1 Hills: 16.5 x 16.1
12.1 m (40 ft.)	115 (30)	288 (630)	158 (41)	377 (830)	16.5 x 16.1
D2 Series					
D215	0	0	38 (10)	91 (200)	7.5 x 16 10 x 16 16.5 x 16.1
D220, D225	69 (18)	170 (380)	115 (30)	288 (630)	Level ground: 10 x 16 Level ground: 16.5 x 16.1 Hills: 16.5 x 16.1
D230, D235, D241 ⁴⁹	115 (30)	288 (630)	158 (41)	377 (830)	16.5 x 16.1

49. When paired with an M Series Self-Propelled Windrower, the D241 SP header **CANNOT** be equipped with any options.

Chapter 7: Troubleshooting

Refer to these topics if you encounter problems while operating the windrower.

7.1 Engine Troubleshooting

Refer to the table provided below if you encounter engine problems while operating the windrower.

Problem	Solution	Reference
Symptom: Engine hard to start or will not start		
Controls not in NEUTRAL	Move GSL to NEUTRAL.	<i>Starting Engine, page 160</i>
Controls not in NEUTRAL	Move steering wheel to locked position.	<i>Starting Engine, page 160</i>
Controls not in NEUTRAL	Disengage header drive switch.	<i>4.4.4 Header Drive Controls, page 201</i>
NEUTRAL Interlock misadjusted	Contact Dealer.	Contact Dealer
No fuel to engine	Fill empty fuel tank. Replace clogged filter.	<i>Filling Fuel Tank, page 163 and Maintaining Fuel Filters, page 412</i>
Old fuel in fuel tank	Drain tank. Refill with fresh fuel.	<i>6.9.5 Fuel System, page 411</i>
Water, dirt, or air in fuel system	Drain, flush, fill, and prime system.	<i>6.9.5 Fuel System, page 411</i>
Improper type of fuel in fuel tank	Use proper fuel for operating conditions.	<i>9.2.2 Fuel Specifications, page 531</i>
Oil in crankcase is the wrong type	Use recommended oil.	<i>9.2.3 Lubricants, Fluids, and System Capacities, page 532</i>
Low battery output	Have battery tested. Check battery electrolyte level.	<i>6.10.2 Battery, page 442</i>
Poor battery connection	Clean and tighten loose connections.	<i>6.10.2 Battery, page 442</i>
Faulty starter	Contact Dealer.	Contact Dealer
Loose electrical connection at fuel pump	Ensure connector at pump is fully pushed in.	Contact Dealer
Wiring shorted or circuit breaker open	Check continuity of wiring and breaker (manual reset).	<i>Checking and Replacing Fuses, page 469</i>
ECM fuse (1 of 2) blown	Replace.	<i>Checking and Replacing Fuses, page 469</i>
ECM Ignition relay faulty	Replace.	<i>Checking and Replacing Fuses, page 469</i>
NEUTRAL Logic relay faulty	Replace.	<i>Checking and Replacing Fuses, page 469</i>
Faulty injectors	Contact Dealer.	Contact Dealer
Symptom: Engine knocks		
Engine timing incorrect	Contact Dealer.	Contact Dealer
Insufficient oil in crankcase	Add oil.	<i>Adding Engine Oil, page 403</i>
Coolant temperature is too low or too high	Contact Dealer.	Contact Dealer
Fuel in fuel tank is the wrong type	Use proper fuel.	<i>9.2.2 Fuel Specifications, page 531</i>
Symptom: Low oil pressure		

TROUBLESHOOTING

Problem	Solution	Reference
Low oil level in crankcase	Add oil.	<i>Adding Engine Oil, page 403</i>
Improper type of oil in crankcase	Drain and fill crankcase with proper oil.	<i>9.2.3 Lubricants, Fluids, and System Capacities, page 532</i>
Worn components	Contact Dealer.	Contact Dealer
Symptom: High oil consumption		
Internal engine parts worn	Contact Dealer.	Contact Dealer
Engine oil viscosity too low	Use recommended oil.	<i>9.2.3 Lubricants, Fluids, and System Capacities, page 532</i>
Oil leaks	Check for leaks around gaskets, seals, and drain plugs.	<i>Checking Engine Oil Level, page 400</i>
Symptom: Engine runs irregularly or stalls frequently		
Erratic fuel supply	Change filter on fuel tank vent line. Replace clogged fuel filter.	<i>Replacing Fuel Tank Vent Filter, page 411 and 6.9.5 Fuel System, page 411</i>
Water or dirt in fuel system	Drain, flush, and fill fuel system.	<i>9.2.3 Lubricants, Fluids, and System Capacities, page 532</i>
Low coolant temperature	Remove and check thermostat.	Contact Dealer
Air in fuel system	Contact Dealer.	Contact Dealer
Dirty or faulty injectors	Contact Dealer.	Contact Dealer
Symptom: Lack of power		
Engine timing incorrect	Contact Dealer.	Contact Dealer
Engine oil viscosity too high	Use recommended oil.	<i>9.2.3 Lubricants, Fluids, and System Capacities, page 532</i>
Intake air restriction	Service air cleaner.	<i>6.9.4 Air Intake System, page 404</i>
Clogged fuel filter	Replace primary fuel filter, and if necessary, replace secondary fuel filter.	<i>Maintaining Fuel Filters, page 412</i>
High exhaust back pressure	Clean out or replace muffler.	<i>6.9.8 Inspecting Exhaust System, page 437</i>
Improper type of fuel in fuel tank	Use proper fuel.	<i>9.2.2 Fuel Specifications, page 531</i>
Engine temperature is too low or too high	Remove and check thermostat.	Contact Dealer
Improper valve clearance	Contact Dealer.	Contact Dealer
Faulty fuel injectors	Contact Dealer.	Contact Dealer
Symptom: Engine temperature below normal		
Defective thermostat	Remove and check thermostat.	Contact Dealer
Symptom: Warning alarm sounds		
Engine overheated	Check coolant level.	<i>Checking Coolant Level, page 424</i>
Engine overheated	Check thermostat.	Contact Dealer
Low engine oil pressure	Check oil level.	<i>Checking Engine Oil Level, page 400</i>
Low transmission oil pressure	Check oil level.	<i>6.11.1 Checking and Filling Hydraulic Oil, page 474</i>
Symptom: Engine overheats		

TROUBLESHOOTING

Problem	Solution	Reference
Low coolant level	Fill reserve tank to proper level. Check system for leaks.	6.9.6 Engine Cooling System, page 422
Only water in cooling system	Replace with antifreeze.	6.9.6 Engine Cooling System, page 422
Engine overloaded	Reduce ground speed.	Driving Forward in Cab-Forward Mode, page 168
Defective pressurized coolant tank cap	Replace cap.	Inspecting Radiator Cap, page 422
Defective fan belt	Replace belt.	Replacing Fan Belt, page 438
Dirty radiator screen, rotors turning	Check for obstructions in ducting from screen to fan shroud.	Maintaining Engine Cooling Box, page 429
Dirty radiator screen, rotors not turning	Check connections to rotor electric motor.	Maintaining Engine Cooling Box, page 429
Dirty radiator core	Clean radiator.	6.9.6 Engine Cooling System, page 422
Cooling system dirty	Flush cooling system.	6.9.6 Engine Cooling System, page 422
Defective thermostat	Remove and check thermostat.	Contact Dealer
Defective temperature gauge or sender	Check coolant temperature with thermometer. Replace gauge if necessary.	Contact Dealer
Defective water pump	Contact Dealer.	Contact Dealer
Symptom: High fuel consumption		
Clogged or dirty air cleaner	Service air cleaner.	6.9.4 Air Intake System, page 404
Engine overloaded	Reduce ground speed.	Driving Forward in Cab-Forward Mode, page 168
Improper valve clearance	Contact Dealer.	Contact Dealer
Engine timing incorrect	Contact Dealer.	Contact Dealer
Dirty fuel injector nozzles	Contact Dealer.	Contact Dealer
Low engine temperature	Check thermostat.	Contact Dealer
Improper type of fuel in fuel tank	Use proper fuel.	9.2.2 Fuel Specifications, page 531
Symptom: Engine emits black or grey exhaust		
Improper type of fuel in fuel tank	Consult your fuel supplier, and use proper type fuel for conditions.	9.2.2 Fuel Specifications, page 531
Engine overloaded	Reduce ground speed.	Driving Forward in Cab-Forward Mode, page 168
Clogged or dirty air cleaner	Service air cleaner.	Cleaning Engine Air Filter Primary Element, page 409
Defective muffler	Check muffler for possible damage that might create back pressure.	6.9.8 Inspecting Exhaust System, page 437
Dirty or faulty fuel injectors	Contact Dealer.	Contact Dealer
Engine timing incorrect	Contact Dealer.	Contact Dealer
Air in fuel system	Contact Dealer.	Contact Dealer
Symptom: Engine emits white exhaust		

TROUBLESHOOTING

Problem	Solution	Reference
Engine timing incorrect	Contact Dealer.	Contact Dealer
Improper type of fuel in fuel tank	Consult your fuel supplier, and use proper type fuel for conditions.	<i>9.2.2 Fuel Specifications, page 531</i>
Engine temperature too low	Warm engine up to normal operating temperature.	<i>Engine Warm-Up, page 162</i>
Defective thermostat	Remove and check thermostat.	Contact Dealer
Symptom: Starter cranks slowly or will not operate		
Low battery output	Check battery charge.	<i>Maintaining Batteries, page 442</i>
Loose or corroded battery connections	Clean and tighten loose connections.	<i>Maintaining Batteries, page 442</i>
Controls not in NEUTRAL	Move GSL to NEUTRAL.	<i>Driving Forward in Cab-Forward Mode, page 168</i>
Controls not in NEUTRAL	Move steering wheel to CENTER position.	<i>Driving in Reverse in Cab-Forward Mode, page 169</i>
Controls not in NEUTRAL	Disengage header.	<i>Engaging and Disengaging Header, page 201</i>
Relay not functioning	Check relay and wire connections.	<i>6.10 Electrical System, page 441</i>
Main fuse defective/blown	Replace main fuse.	<i>6.10 Electrical System, page 441</i>
Key power fuse blown	Replace key power fuse.	<i>6.10 Electrical System, page 441</i>
Key switch worn or terminals loose	Contact Dealer.	Contact Dealer
Switch at Interlock not closed or defective	Adjust switch or replace. Contact your Dealer.	Contact Dealer
Engine oil viscosity too high	Use recommended oil.	<i>9.2.3 Lubricants, Fluids, and System Capacities, page 532</i>
Symptom: Air filters require frequent cleaning		
Aspirator plugged	Clean out aspirator.	<i>6.9.4 Air Intake System, page 404</i>

7.2 Electrical Troubleshooting

Refer to the table provided below if you encounter problems with the electrical system while operating the windrower.

Problem	Solution	Reference
Symptom: Low voltage and/or battery will not charge		
Defective battery	Have battery tested.	<i>6.10.2 Battery, page 442</i>
Loose or corroded connections	Clean and tighten battery connections.	<i>Maintaining Batteries, page 442</i>
Defective alternator belt	Replace worn belt.	<i>Replacing Fan Belt, page 438</i>
Alternator or voltage regulator not connected properly	Connect properly.	<i>6.10.2 Battery, page 442</i>
Dirty or defective alternator, defective voltage regulator, or high resistance in circuit	Contact Dealer.	Contact Dealer
Symptom: Lights dim		
Defective light switch	Contact Dealer.	Contact Dealer
High resistance in circuit or poor ground on lights	Check the wiring circuit for a break in a wire or a poor ground.	—
Symptom: Lights do not light		

TROUBLESHOOTING

Problem	Solution	Reference
Burned out or defective light bulb	Replace light bulb.	<i>Replacing Headlight Bulb, page 450</i>
Burned out or defective light bulb	Replace light bulb.	<i>Replacing Bulb in Cab-Forward Floodlight, page 456</i>
Burned out or defective light bulb	Replace light bulb.	<i>Replacing Bulb in Rear Floodlight, page 462</i>
Broken wiring	Check wiring for broken wire or shorts.	—
Poor ground on lights	Clean and tighten ground wires.	—
Open or defective circuit breaker	Check circuit breaker.	<i>Accessing Main Fuse Box, page 468</i>
Defective relay	Replace relay.	<i>Replacing Circuit Breakers and Relays, page 469</i>
Defective light switch	Contact Dealer.	Contact Dealer
Symptom: Turn signals or indicators showing wrong direction		
Reversed wires	Contact Dealer.	Contact Dealer
Symptom: No current to cab		
Broken or disconnected wire	Contact Dealer.	Contact Dealer
Circuit breaker tripped	Breaker automatically resets.	—
Battery disconnect switch is OFF	Turn battery disconnect switch ON.	<i>Battery Main Disconnect Switch, page 442</i>

7.3 Hydraulics Troubleshooting

Refer to the table provided below if you encounter problems with the hydraulic system while operating the windrower.

Problem	Solution	Reference
Symptom: Header or reel not lifting		
Appropriate solenoids not being energized by activating switch	Contact Dealer.	Contact Dealer
Contaminant in relief valve	Clean relief valve at cylinder control valve.	Contact Dealer
Relief pressure too low or contaminant in relief valve	Check/adjust/clean relief valve at cylinder control valve.	Contact Dealer
Symptom: Reel and/or conveyor not turning		
HEADER DRIVE switch not engaged	Engage HEADER DRIVE switch.	<i>Engaging and Disengaging Header, page 201</i>
Flow controls adjusted too low	Toggle speed controls on CDM to increase flow.	D, D1, and D2 Series: <i>4.5.5 Draper Speed, page 219</i> , and <i>4.5.4 Reel Speed, page 216</i> A Series: <i>4.6.1 Auger Speed, page 227</i>
Appropriate solenoid on flow control block not being energized	Contact Dealer.	Contact Dealer
Symptom: Reel and/or conveyor turns but lacks power		
Relief pressure too low	Check/adjust/clean relief valve.	Contact Dealer
Symptom: Hydraulic oil high-temperature alarm		

TROUBLESHOOTING

Problem	Solution	Reference
Hydraulic oil cooling system not working properly	Check/clean cooling box.	<i>Maintaining Engine Cooling Box, page 429</i>
Faulty bypass valve	Clean or replace bypass valve.	Contact Dealer
Symptom: Hydraulic oil low-temperature alarm		
Hydraulic oil too cold	Run engine until hydraulic oil warms up.	—
Symptom: Header or reel lifts unevenly		
Air in system	Fully raise header or reel and hold switch.	<i>4.4.1 Engaging and Disengaging Header Safety Props, page 192</i>

7.4 Header Drive Troubleshooting

Refer to the table provided below if you encounter problems with the header drive while operating the windrower.

Problem	Solution	Reference
Symptom: Header drive not engaging		
HEADER DRIVE switch in cab not engaged	Engage HEADER DRIVE switch.	<i>Engaging and Disengaging Header, page 201</i>
Operator presence switch not closed or faulty	Occupy operator's seat or replace switch. Contact your Dealer.	Contact Dealer
Appropriate solenoid not being energized by activating switch	Contact Dealer.	Contact Dealer
Symptom: Header drive lacks power		
Relief valve setting too low	Contact Dealer.	Contact Dealer
Hydraulic couplers/unions not properly connected	Ensure hoses are connected correctly and hose couplers/unions are tight.	Refer to the header operator's manual.
Header drive overload	Reduce ground speed.	—
Symptom: Warning alarm sounds		
Header drive overload	Reduce ground speed.	—
Relief valve setting too low	Contact Dealer.	Contact Dealer

7.5 Traction Drive Troubleshooting

Refer to the table provided below if you encounter traction drive problems while operating the windrower.

Problem	Solution	Reference
Symptom: Warning alarm sounds and transmission oil light is on		
Low hydraulic oil level	Stop engine, and add oil to hydraulic system.	<i>6.11.1 Checking and Filling Hydraulic Oil, page 474</i>
Low hydraulic pressure	Contact Dealer.	Contact Dealer
Foreign material shorting sender	Contact Dealer.	Contact Dealer
Short in alarm wiring	Contact Dealer.	Contact Dealer
Faulty sender	Contact Dealer.	Contact Dealer
Symptom: Wheels lack pulling ability on a grade or pulling out of a ditch		
Internal pump or motor damage	Contact Dealer.	Contact Dealer
Insufficient torque at drive wheels	Move ground speed range control to field position, and reduce ground speed.	<i>Driving Forward in Engine-Forward Mode, page 170</i>

TROUBLESHOOTING

Problem	Solution	Reference
Loose or worn controls	Check controls.	6.6.3 Ground Speed Lever Adjustments, page 382
Air in system	Use proper oil.	9.2.3 Lubricants, Fluids, and System Capacities, page 532
Air in system	Check oil level and leaks.	6.11.1 Checking and Filling Hydraulic Oil, page 474
Air in system	Check hydraulic oil filters.	6.11 Hydraulic System, page 473
Brakes binding or not releasing fully	Check pressure on brake release valve (min. 1379 kPa [200 psi]).	Contact Dealer
Relief valve in tandem pump dirty or damaged	Replace relief valve.	Contact Dealer
Symptom: With steering wheel centered, one wheel pulls more than the other		
Leakage at pump or motor	Contact Dealer.	Contact Dealer
Wheels not in same speed range	Contact Dealer.	Contact Dealer
Faulty relief valve	Repair or replace valve. Contact Dealer.	Contact Dealer
Symptom: Both wheels will not pull in forward or reverse		
Pump arms have broken shaft or loose hardware	Repair or tighten parts and hardware.	Contact Dealer
Brakes binding or not releasing fully	Check pressure on brake release valve (min. 1379 kPa [200 psi]).	Contact Dealer
Low oil level	Check oil reservoir level.	6.11.1 Checking and Filling Hydraulic Oil, page 474
Power hubs disengaged	Engage final drives.	Engaging and Disengaging Wheel Drives, page 190
Damaged hydraulic lines preventing proper oil flow	Replace damaged lines.	Contact Dealer
Ground speed range control not working	Contact Dealer.	Contact Dealer
Steering controls worn or defective	Check GSL and steering for loose, worn, or damaged ball joints and connecting rods.	6.6.3 Ground Speed Lever Adjustments, page 382 and 6.6.4 Steering Adjustments, page 384
Charge pressure relief valve misadjusted or damaged	Check the valve adjustment. Check valve parts and seat.	Checking Charge Pump Pressure, page 485
Failed pump or motor	Contact Dealer.	Contact Dealer
Symptom: Excessive noise from drive system		
Mechanical interference in steering or ground speed linkage	Adjust, repair, and replace.	6.6.3 Ground Speed Lever Adjustments, page 382 and 6.6.4 Steering Adjustments, page 384
Brakes binding or not releasing fully	Check pressure on brake release valve (min. 1379 kPa [200 psi]).	Contact Dealer
Faulty pump or motor	Contact Dealer.	Contact Dealer
Air in system	Check lines for leakage.	—
Hydraulic line clamps loose	Tighten clamps.	—
Symptom: One wheel does not pull in forward or reverse		
Broken pump arm or shaft	Contact Dealer.	Contact Dealer

TROUBLESHOOTING

Problem	Solution	Reference
One final drive disengaged	Engage final drive.	<i>Engaging and Disengaging Wheel Drives, page 190</i>
Steering controls worn or defective	Check GSL and steering for loose, worn, or damaged ball joints and connecting rods.	<i>6.6.3 Ground Speed Lever Adjustments, page 382 and 6.6.4 Steering Adjustments, page 384</i>
High pressure relief valve stuck open, damaged seat	Check valve, and clean or replace.	Contact Dealer
Brakes binding or not releasing fully	Check pressure on brake release valve (min. 1379 kPa [200 psi]).	Contact Dealer
Damaged hydraulic lines preventing proper oil flow	Contact Dealer.	Contact Dealer
Ground speed range control not working	Contact Dealer.	Contact Dealer
Failed pump, motor, or power hub	Contact Dealer.	Contact Dealer
Symptom: Hydraulic oil filter leaks at seal		
Not properly tightened	Tighten filter element.	<i>6.11.4 Changing Hydraulic Oil Filters, page 477</i>
Damaged seal or threads	Replace filter or filter head.	<i>6.11.4 Changing Hydraulic Oil Filters, page 477</i>

7.6 Steering and Ground Speed Control Troubleshooting

Refer to the table provided below if you encounter problems with the steering system or with the ground speed lever (GSL) while operating the windrower.

Problem	Solution	Reference
Symptom: Machine will not steer straight		
Linkage worn or loose	Adjust steering chain tension. Replace worn parts. Adjust linkage.	<i>6.6.4 Steering Adjustments, page 384</i>
Symptom: Machine moves on flat ground with controls in neutral		
Neutral interlock adjusted incorrectly	Contact Dealer.	Contact Dealer
Parking brake not functioning	Contact Dealer.	Contact Dealer
GSL servo adjusted incorrectly	Contact Dealer.	Contact Dealer
GSL cable adjusted incorrectly	Contact Dealer.	Contact Dealer
Transmission interlock adjusted incorrectly	Contact Dealer.	Contact Dealer
Symptom: Steering wheel will not unlock		
Transmission interlock cylinder not working	Contact Dealer.	Contact Dealer
Symptom: Insufficient road speed		
Ground speed range control in field position	Move to road position.	<i>Driving on Road, page 176</i>
Symptom: Steering is too stiff or too loose		
Steering chain tension is out of adjustment	Adjust steering chain tension.	<i>6.6.4 Steering Adjustments, page 384</i>

TROUBLESHOOTING

7.7 Cab Air Troubleshooting

Refer to the table provided below if you encounter problems with the cab air system while operating the windrower.

Problem	Solution	Reference
Symptom: Blower fan will not run		
Burned out motor	Contact Dealer.	Contact Dealer
Burned out switch	Contact Dealer.	Contact Dealer
Motor shaft tight or bearings worn	Contact Dealer.	Contact Dealer
Faulty wiring—loose or broken	Contact Dealer.	Contact Dealer
Blower rotors in contact with housing	Contact Dealer.	Contact Dealer
Symptom: Blower fan operating but no air coming into cab		
Dirty fresh air filter	Clean fresh air filter.	<i>Inspecting and Cleaning Fresh Air Intake Filter Element, page 391</i>
Dirty recirculating air filter	Clean recirculating filter.	<i>Cleaning Return Air Cleaner/Filter, page 394</i>
Evaporator clogged	Clean evaporator.	<i>Cleaning Air Conditioning Evaporator Core, page 396</i>
Air flow passage blocked	Remove blockage.	—
Symptom: Heater not heating		
Heater shut-off valve at engine closed	Open valve.	<i>3.10.1 Heater Shut-Off, page 51</i>
Defective thermostat in engine water outlet manifold	Replace thermostat.	Contact Dealer
Heater temperature control defective	Replace control.	Contact Dealer
No thermostat in engine water outlet manifold	Install thermostat.	Contact Dealer
Symptom: Odor from air louvers		
Plugged drainage hose	Blow out hose with compressed air.	—
Dirty filters	Clean filters.	<i>Cleaning Return Air Cleaner/Filter, page 394</i>
Symptom: Air conditioning cools intermittently		
Unit icing up—thermostat set too low	Adjust thermostat.	Contact Dealer
Unit icing up—excessive moisture in system	Contact Dealer.	Contact Dealer
Unit icing up—incorrect super-heat adjustment in the expansion valve	Contact Dealer.	Contact Dealer
Thermostat defective	Contact Dealer.	Contact Dealer
Defective blower switch or blower motor	Contact Dealer.	Contact Dealer
Partially open connection, improper ground or loose connection in compressor clutch coil	Contact Dealer.	Contact Dealer
Compressor clutch slipping	Contact Dealer.	Contact Dealer
Symptom: Air conditioning not cooling		
Low refrigerant level	Add refrigerant. Contact Dealer.	Contact Dealer
Clutch coil burned out or disconnected	Contact Dealer.	Contact Dealer
Blower motor disconnected or burned out	Contact Dealer.	Contact Dealer

TROUBLESHOOTING

Problem	Solution	Reference
Switch contacts in thermostat burned, or sensing element defective	Replace thermostat.	Contact Dealer
Compressor partially or completely seized	Remove compressor for service or replacement.	Contact Dealer
Condenser fins plugged	Clean condenser.	<i>6.8.3 Air Conditioning Condenser, page 394</i>
Loose or broken compressor drive belt	Replace drive belt and/or tighten to specifications.	<i>Tensioning Air Conditioner Compressor Belt, page 439 and Replacing Air Conditioner Compressor Belt, page 439</i>
Dirty filters	Clean fresh air and recirculation filters.	<i>Cleaning Engine Air Filter Primary Element, page 409 and Cleaning Return Air Cleaner/Filter, page 394</i>
Broken or disconnected electrical wire	Check all terminals for loose connections; check wiring for hidden breaks.	—
Broken or disconnected ground wire	Check ground wire to see if the wire is loose, broken, or disconnected.	—
Expansion valve stuck in open or closed position	Contact Dealer.	Contact Dealer
Broken refrigerant line	Contact Dealer.	Contact Dealer
Leak in system	Contact Dealer.	Contact Dealer
Compressor shaft seal leaking	Contact Dealer.	Contact Dealer
Clogged screen in receiver-drier; plugged hose or coil	Contact Dealer.	Contact Dealer
Symptom: Air conditioning not producing sufficient cooling⁵⁰		
Compressor clutch slipping	Remove clutch assembly for service or replacement.	Contact Dealer
Thermostat defective or improperly adjusted	Replace thermostat.	Contact Dealer
Clogged air filters	Remove air filters, and clean or replace as necessary.	<i>Cleaning Engine Air Filter Primary Element, page 409 and Cleaning Return Air Cleaner/Filter, page 394</i>
Heater circuit is open	Close temperature control in cab, and valve on engine.	<i>3.10.3 Climate Controls, page 52 and 3.10.1 Heater Shut-Off, page 51</i>
Insufficient air circulation over condenser coil; fins clogged with dirt or insects	Clean condenser.	<i>6.8.3 Air Conditioning Condenser, page 394</i>
Evaporator fins clogged	Clean evaporator fins (under cab floor).	<i>Cleaning Air Conditioning Evaporator Core, page 396</i>

50. Sufficient cooling defined as when air temperature in cab, measured at louvered vent, can be maintained at 14°C (25°F) below ambient air temperature.

TROUBLESHOOTING

Problem	Solution	Reference
Refrigerant low	Contact Dealer.	Contact Dealer
Clogged expansion valve	Contact Dealer.	Contact Dealer
Clogged receiver-drier	Contact Dealer.	Contact Dealer
Excessive moisture in system	Contact Dealer.	Contact Dealer
Air in system	Contact Dealer.	Contact Dealer
Blower motor sluggish in operation	Contact Dealer.	Contact Dealer
Symptom: Air conditioning system too noisy		
Defective winding or improper connection in compressor clutch coil or relay	Contact Dealer.	Contact Dealer
Excessive charge in system	Contact Dealer.	Contact Dealer
Low charge in system	Contact Dealer.	Contact Dealer
Excessive moisture in system	Contact Dealer.	Contact Dealer
Loose or excessively worn drive belt	Tighten or replace as required.	<i>Tensioning Air Conditioner Compressor Belt, page 439 and Replacing Air Conditioner Compressor Belt, page 439</i>
Noisy clutch	Remove clutch for service or replacement as required.	Contact Dealer
Noisy compressor	Check mountings and repair. Remove compressor for service or replacement.	Contact Dealer
Compressor oil level low	Add SP-15 PAG refrigerant oil.	Contact Dealer
Blower fan noisy due to excessive wear	Remove blower motor for service or replacement as necessary.	Contact Dealer
Symptom: Windows fog up		
High humidity	Run A/C to dehumidify air and heater to control temperature.	<i>3.10.3 Climate Controls, page 52</i>

7.8 Operator's Station Troubleshooting

Refer to the table provided below if you encounter problems with the operator's station while operating the windrower.

Problem	Solution	Reference
Symptom: Rough ride		
Seat suspension not adjusted for operator's weight	Adjust seat suspension.	<i>3.3 Operator's Seat Adjustments, page 39</i>
High air pressure in tires	Deflate to proper pressure.	<i>Inflating Drive Wheel Tire, page 486 and Inflating Caster Tire, page 494</i>
Cab suspension too stiff	Adjust suspension.	Contact Dealer

Chapter 8: Options and Attachments

The following options and attachments are available through your MacDon Dealer. The Dealer will require the part number (MD #) to determine pricing and availability.

8.1 Cab

Several cab amenities are available which can make using the windrower more convenient for the Operator.

8.1.1 AM/FM Radio

The cab is pre-wired for easy installation of a single DIN audio component such as the optional AM/FM radio, which can be obtained from your MacDon Dealer. The windrower comes from the factory with speakers already installed.

In order to retain the radio settings and preset memory when the battery disconnect switch is turned off, install a radio with non-volatile memory.

For installation details, refer to the unloading and assembly instructions supplied with your windrower.

8.1.2 Automated Steering Systems

A MacDon-approved automated steering system is available from any MacDon Dealer which provides Trimble® global positioning system (GPS) installation and support services.

MacDon windrowers are partially pre-wired for either the Trimble® AutoPilot™ hydraulically integrated steering system or the Trimble® Electric on wheel system EZ-Pilot® Pro, or Autopilot™ Motor Drive [APMD]). The windrower's ground speed lever (GSL) has an automated steering (autosteer) engage switch; the Trimble® display mounting kit (MD #183348) is supplied in the cab.

Table 8.1 Autosteer System Bundles

Trimble® Autosteer System	Part Number
Electric on wheel (EZ-Pilot® Pro, or Autopilot™ Motor Drive [APMD])	B9003 ⁵¹
Integrated AutoPilot™	B5589 ⁵¹

Other GPS providers may supply vehicle-specific installation packages or make installation kits available through MacDon Dealers.

NOTE:

Additional completion kits may be required dependent upon the type of display being installed.

8.1.3 High Intensity Discharge Auxiliary Lighting

This kit includes two cab-mounted high intensity discharge (HID) lamps that provide additional field lighting.

B5596

Instruction MD #169621 is included in the bundle.

51. Instructions supplied in the kit.

8.1.4 Warning Beacons

This kit includes two rotating warning beacons designed for installation onto the pre-wired cab, a switch, mounting hardware, and instructions. The beacons are standard equipment for exported windrowers, and are optional for North America; fits model year 2009 and later machines.

B5582

Instruction MD #169538 is included in the bundle.

8.1.5 Windshield Shades

This kit includes retractable sun shades for front and rear windows. The necessary attachment hardware is also included in the kit.

B4866

Instruction MD #169218 is included in the bundle.

8.2 Engine

Several optional kits are available for your windrower's engine, depending on your particular performance needs.

8.2.1 Engine Block Heater

A block heater is an electrical resistance heater which warms the engine block, making starting the engine in cold climates much easier. Contact your nearest Cummins Engine Distributor to order an engine block heater. You will need to provide your engine's model and serial number to ensure that the proper heater is supplied.

8.2.2 Engine Fan Air Baffle

The Engine Fan Air Baffle kit prevents the windrow formed by the windrower from being disturbed by the exhaust from the engine cooling fan.

B5440

Instruction MD #169443 is included in the bundle.

8.3 Header Operation

Several kits are available which can augment the capabilities of the header attached to the windrower, or which allow the windrower to be used with different types of headers.

8.3.1 Draper Header Case Drain Kit

The Draper Header Case Drain kit must be installed on the windrower in order to attach a MacDon D50, D60, or D65 Draper Header equipped with an upper cross auger (UCA) without double-draper drive to the windrower. The case drain kit (B5842) is **NOT** required for double-draper drive headers equipped with kits B5606 and B6154.

B5842

8.3.2 Draper Header Reel Drive and Lift Plumbing

This kit must be installed on the windrower in order for it to be able to pair with a draper header. The kit includes the draper header reel drive and lift plumbing (less valve) and the reel fore-aft hydraulic components.

NOTE:

If the last digit of the windrower code is B, this bundle is already installed.

B5577

OPTIONS AND ATTACHMENTS

Instruction MD #169537 is included in the bundle.

8.3.3 Header Drive Reverser

This kit allows the conditioner, knife, auger, and reel on an auger header to operate in reverse. When the windrower is paired with a draper header, this kit allows the conditioner and knife to operate in reverse.

B4656 ^{52, 53, 54, 55}

Instruction MD #169213 is included with the bundle.

8.3.4 Hydraulic Center-Link

Allows remote adjustment of the header angle using a hydraulic cylinder between the header and the windrower.

- B4650 (hydraulic center-link)
- Instruction MD #169236 is included in the bundle
- B5269 (auxiliary valve)
- Instruction MD #169271 is included in the bundle

8.3.5 Light Header Flotation

This kit is recommended for headers which do not require a high degree of spring tension for the header float.

B4664

Instruction MD #169033 is included in the bundle.

8.3.6 Mechanical Center-Link

The mechanical center-link provides a manually adjustable connection between the windrower and the rotary disc header.

B4665

8.3.7 Pressure Sensor Kit

This kit provides enhanced monitoring of the knife drive (or reel drive) hydraulic pressure, and warns of overload conditions.

B5574

Instruction MD #169031 is included in the bundle.

8.3.8 R/R1 Disc Drive Kit

This kit includes a valve required to operate an R/R1 Series Rotary Disc Header with an M155 SP Windrower.

B4657

-
52. If installed on a windrower equipped with a D Series Draper Header, only the knife circuit will reverse.
 53. If installed on a windrower equipped with an A Series Auger Header, the knife, reel, auger, and conditioner will reverse. Grass seed auger headers are not equipped with conditioners.
 54. If installed on a windrower equipped with a D Series Draper Header and HC10 Hay Conditioner, knife and conditioner will reverse.
 55. R Series Disc Headers cannot use the reversing feature.

8.3.9 R80 and R85 Rotary Header Drive Hydraulics

This kit is needed to allow the windrower to operate with a 4.0 m (13 ft.) R80 or R85 Rotary Disc Header. The kit includes the header drive plumbing and installation instructions.

MD #B5510

The installation instructions are included in the bundle.

8.3.10 Self-Aligning Center-Link

This kit allows the Operator to remotely position the center-link cylinder without leaving the operator's station.

Hydraulic center-link (B4650) must be installed.

B4802

Instruction MD #169004 included in the bundle.

8.3.11 Spring with External Booster Spring

This kit increases the float capacity of the windrower. Install this kit on windrowers paired with headers that weigh more than 2724 kg (6000 lb.).

The Spring with External Booster Spring kit (B4659) includes two springs (one for each side) and mounting brackets.

Instruction MD #169032 is included in the bundle.

OPTIONS AND ATTACHMENTS

Table 8.2 External Booster Spring Kit (B4659) Required – Double Knife D and D1 Series SP Draper Headers

Header Size	Options and Attachments Installed on Header						
	HC10 Hay Conditioner	Slow Speed Transport	Upper Cross Auger	Slow Speed Transport and Upper Cross Auger	Slow Speed Transport and HC10 Hay Conditioner	HC10 Hay Conditioner and Upper Cross Auger	Slow Speed Transport, HC10 Hay Conditioner, and Upper Cross Auger
9.1 m (30 ft.)	Yes	Not Available	Factory Installed	Yes	Yes	Yes	Yes
10.8 m (35 ft.)	Not Available	Yes	Yes	Yes	Not Available	Not Available	Not Available
12.2 m (40 ft.)	Not Available	Yes	Yes	Yes	Not Available	Not Available	Not Available

8.3.12 Spring with Internal Booster Spring

MacDon windrowers have two large diameter springs on each side: an outboard spring and an inboard spring. This kit includes parts to replace one of the large-diameter springs with a new inboard spring assembly. The new inboard spring assembly comes with an internal booster spring inside.

The Spring with Internal Booster Spring kit (MD #B5303) includes one spring and castings for one side of the windrower.

Instruction MD #169316 is included in the bundle.

8.3.13 Swath Compressor

The MacDon Swath Compressor is a large, formed polyethylene sheet which is designed to mount to the underside of your windrower. The MacDon Swath Compressor is designed for use with draper headers when cutting canola.

When lowered, the swath compressor helps prevent wind damage by shaping the windrow and anchoring it into the stubble behind the header. This reduces the occurrence of shelling in the windrow.

The height of the swath compressor can be adjusted using a rocker switch on the operator's console. The current height setting can be monitored on the Cab Display Module (CDM).

C2061

8.3.14 Swath Roller

An axle-mounted swath roller increases the windrow's resistance to wind disturbance, especially in canola or similar crops. It can be fitted with a hydraulic lift with in-cab controls.

Contact your MacDon Dealer for information.

8.4 Transport

Several kits are available which facilitate moving the header from field to field.

8.4.1 Lighting and Marking for Cab-Forward Road Travel

This kit makes the windrower compliant with vehicle lighting regulations when the windrower is traveling on public roads while in cab-forward mode. This kit includes red tail lights, slow moving vehicle (SMV) markings, hardware, and installation instructions.

MD #B5412

OPTIONS AND ATTACHMENTS

Instruction MD #169426 is included in the bundle.

8.4.2 Towing Harness

The towing harness is used together with the weight box.

B5280 – Weight box harness only. Includes hitch pin and wiring for use with slow speed header transport option.

Instruction MD #169278 is included in the bundle.

8.4.3 Weight Box

A weight box installed onto the windrower header lift system is required to transport a header behind the windrower.

B5238 – Weight box without harness

Chapter 9: Reference

The reference chapter provides additional information such as the torque specification and a unit conversion chart.

9.1 Recommended Torque Values

Refer to this section to learn the standard torque values for various types of hardware.

9.1.1 Torque Specifications

The following tables provide torque values for various bolts, cap screws, and hydraulic fittings. Refer to these values only when no other torque value has been specified in a given procedure.

- Tighten all bolts to the torque values specified in the charts below, unless you are directed otherwise in this manual.
- Replace removed hardware with hardware of the same strength and grade.
- Refer to the torque value tables as a guide when periodically checking the tightness of bolts.
- Understand the torque categories for bolts and cap screws by reading the markings on their heads.

Jam nuts

Jam nuts require less torque than nuts used for other purposes. When applying torque to finished jam nuts, multiply the torque applied to regular nuts by 0.65 to obtain the modified torque value.

Self-tapping screws

Refer to the standard torque values when installing the self-tapping screws. Do **NOT** install the self-tapping screws on structural or otherwise critical joints.

SAE Bolt Torque Specifications

The torque values provided in the following SAE bolt torque tables apply to hardware installed dry; that is, hardware with no grease, oil, or threadlocker on the threads or heads. Do **NOT** grease or oil bolts or cap screws unless directed to do so in this manual.

Table 9.1 SAE Grade 5 Bolt and Grade 5 Free Spinning Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf-ft) (*lbf-in)	
	Min.	Max.	Min.	Max.
1/4-20	11.9	13.2	*106	*117
5/16-18	24.6	27.1	*218	*241
3/8-16	44	48	32	36
7/16-14	70	77	52	57
1/2-13	106	118	79	87
9/16-12	153	170	114	126
5/8-11	212	234	157	173
3/4-10	380	420	281	311
7/8-9	606	669	449	496
1-8	825	912	611	676

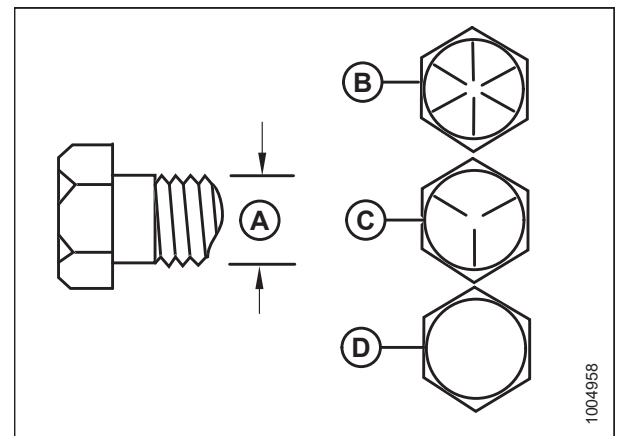


Figure 9.1: Bolt Grades

A - Nominal Size
C - SAE-5

B - SAE-8
D - SAE-2

1004958

REFERENCE

Table 9.2 SAE Grade 5 Bolt and Grade F Distorted Thread Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf-ft) (*lbf-in)	
	Min.	Max.	Min.	Max.
1/4-20	8.1	9	*72	*80
5/16-18	16.7	18.5	*149	*164
3/8-16	30	33	22	24
7/16-14	48	53	35	39
1/2-13	73	80	54	59
9/16-12	105	116	77	86
5/8-11	144	160	107	118
3/4-10	259	286	192	212
7/8-9	413	456	306	338
1-8	619	684	459	507

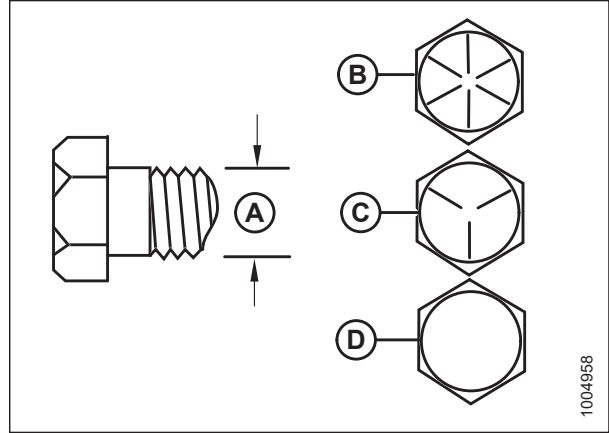


Figure 9.2: Bolt Grades

A - Nominal Size
 B - SAE-8
 C - SAE-5
 D - SAE-2

Table 9.3 SAE Grade 8 Bolt and Grade G Distorted Thread Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf-ft) (*lbf-in)	
	Min.	Max.	Min.	Max.
1/4-20	16.8	18.6	*150	*165
5/16-18	24	26	18	19
3/8-16	42	46	31	34
7/16-14	67	74	50	55
1/2-13	102	113	76	84
9/16-12	148	163	109	121
5/8-11	204	225	151	167
3/4-10	362	400	268	296
7/8-9	583	644	432	477
1-8	874	966	647	716

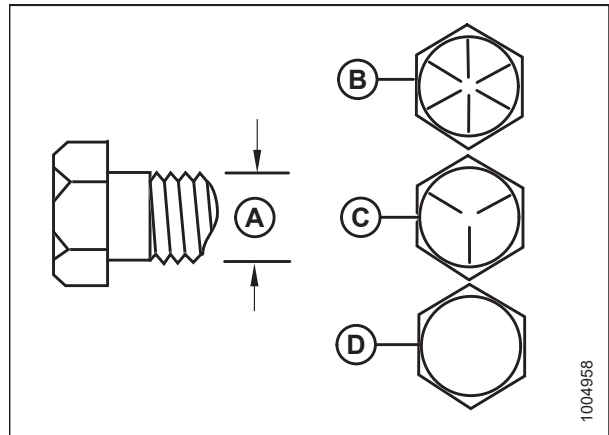


Figure 9.3: Bolt Grades

A - Nominal Size
 B - SAE-8
 C - SAE-5
 D - SAE-2

Table 9.4 SAE Grade 8 Bolt and Grade 8 Free Spinning Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf-ft) (*lbf-in)	
	Min.	Max.	Min.	Max.
1/4-20	16.8	18.6	*150	*165
5/16-18	35	38	26	28
3/8-16	61	68	46	50
7/16-14	98	109	73	81
1/2-13	150	166	111	123
9/16-12	217	239	160	177
5/8-11	299	330	221	345
3/4-10	531	587	393	435
7/8-9	855	945	633	700
1-8	1165	1288	863	954

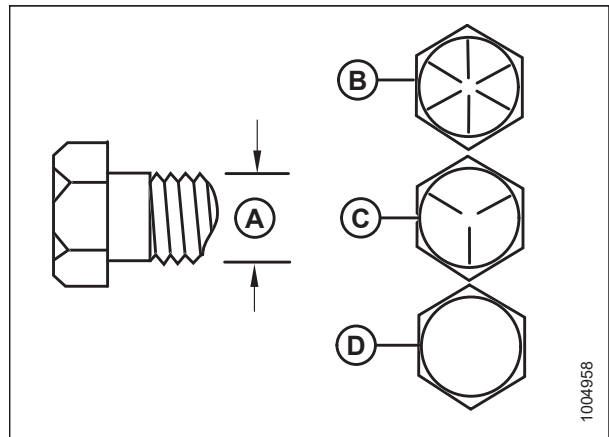


Figure 9.4: Bolt Grades

A - Nominal Size
 B - SAE-8
 C - SAE-5
 D - SAE-2

REFERENCE

Metric Bolt Specifications

Specifications are provided for the appropriate final torque values to secure various sizes of metric bolts.

NOTE:

The torque values provided in the following metric bolt torque tables apply to hardware installed dry; that is, hardware with no grease, oil, or threadlocker on the threads or heads. Do **NOT** add grease, oil, or threadlocker to bolts or cap screws unless you are directed to do so in this manual.

Table 9.5 Metric Class 8.8 Bolts and Class 9 Free Spinning Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf-ft) (*lbf-in)	
	Min.	Max.	Min.	Max.
3-0.5	1.4	1.6	*13	*14
3.5-0.6	2.2	2.5	*20	*22
4-0.7	3.3	3.7	*29	*32
5-0.8	6.7	7.4	*59	*66
6-1.0	11.4	12.6	*101	*112
8-1.25	28	30	20	23
10-1.5	55	60	40	45
12-1.75	95	105	70	78
14-2.0	152	168	113	124
16-2.0	236	261	175	193
20-2.5	460	509	341	377
24-3.0	796	879	589	651

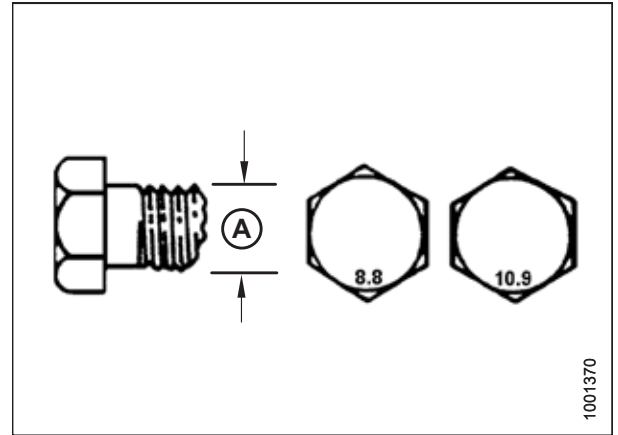


Figure 9.5: Bolt Grades

Table 9.6 Metric Class 8.8 Bolts and Class 9 Distorted Thread Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf-ft) (*lbf-in)	
	Min.	Max.	Min.	Max.
3-0.5	1	1.1	*9	*10
3.5-0.6	1.5	1.7	*14	*15
4-0.7	2.3	2.5	*20	*22
5-0.8	4.5	5	*40	*45
6-1.0	7.7	8.6	*69	*76
8-1.25	18.8	20.8	*167	*185
10-1.5	37	41	28	30
12-1.75	65	72	48	53
14-2.0	104	115	77	85
16-2.0	161	178	119	132
20-2.5	314	347	233	257
24-3.0	543	600	402	444

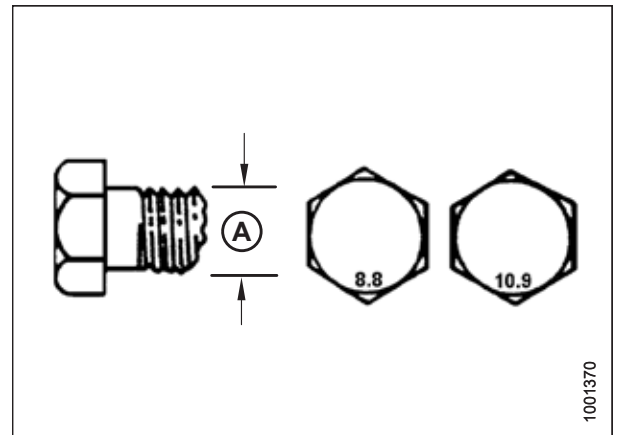


Figure 9.6: Bolt Grades

REFERENCE

Table 9.7 Metric Class 10.9 Bolts and Class 10 Free Spinning Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf-ft) (*lbf-in)	
	Min.	Max.	Min.	Max.
3-0.5	1.8	2	*18	*19
3.5-0.6	2.8	3.1	*27	*30
4-0.7	4.2	4.6	*41	*45
5-0.8	8.4	9.3	*82	*91
6-1.0	14.3	15.8	*140	*154
8-1.25	38	42	28	31
10-1.5	75	83	56	62
12-1.75	132	145	97	108
14-2.0	210	232	156	172
16-2.0	326	360	242	267
20-2.5	637	704	472	521
24-3.0	1101	1217	815	901

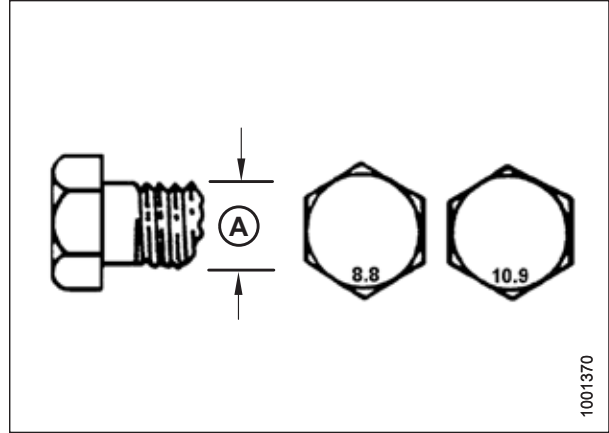


Figure 9.7: Bolt Grades

Table 9.8 Metric Class 10.9 Bolts and Class 10 Distorted Thread Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf-ft) (*lbf-in)	
	Min.	Max.	Min.	Max.
3-0.5	1.3	1.5	*12	*13
3.5-0.6	2.1	2.3	*19	*21
4-0.7	3.1	3.4	*28	*31
5-0.8	6.3	7	*56	*62
6-1.0	10.7	11.8	*95	*105
8-1.25	26	29	19	21
10-1.5	51	57	38	42
12-1.75	90	99	66	73
14-2.0	143	158	106	117
16-2.0	222	246	165	182
20-2.5	434	480	322	356
24-3.0	750	829	556	614

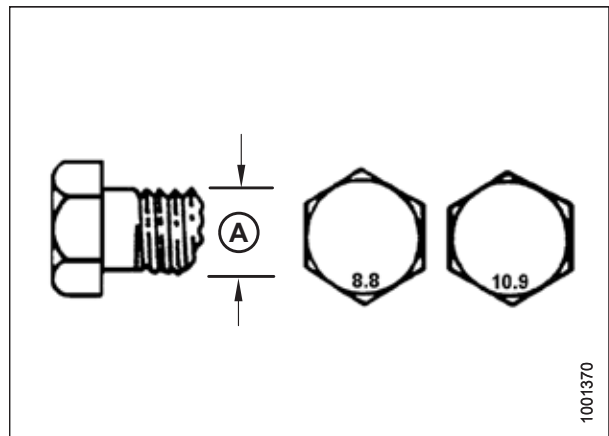


Figure 9.8: Bolt Grades

Metric Bolt Specifications – Cast Aluminum

Specifications are provided for the appropriate final torque values for various sizes of metric bolts in cast aluminum.

NOTE:

The torque values provided in the following metric bolt torque tables apply to hardware installed dry; that is, hardware with no grease, oil, or threadlocker on the threads or heads. Do **NOT** add grease, oil, or threadlocker to bolts or cap screws unless you are directed to do so in this manual.

REFERENCE

Table 9.9 Metric Bolt Bolting into Cast Aluminum

Nominal Size (A)	Bolt Torque			
	8.8 (Cast Aluminum)		10.9 (Cast Aluminum)	
	Nm	lbf-ft	Nm	lbf-ft
M3	–	–	–	1
M4	–	–	4	2.6
M5	–	–	8	5.5
M6	9	6	12	9
M8	20	14	28	20
M10	40	28	55	40
M12	70	52	100	73
M14	–	–	–	–
M16	–	–	–	–

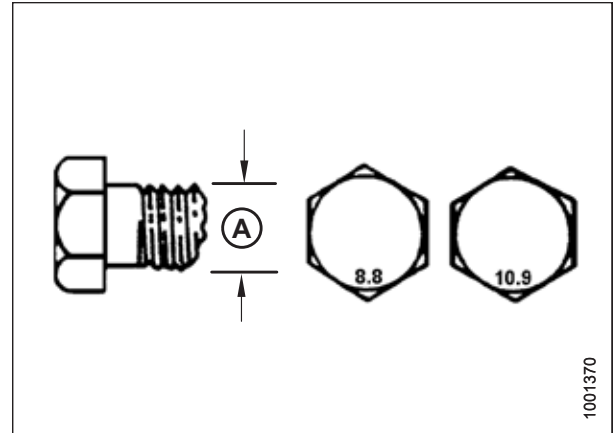


Figure 9.9: Bolt Grades

Flare-Type Hydraulic Fittings

The standard torque values are provided for flare-type hydraulic fittings. If a procedure specifies a different torque value for the same type and size of fitting found in this topic, refer to the value specified in the procedure instead.

1. Inspect flare (A) and flare seat (B) for defects that might cause leakage.
2. Align tube (C) with fitting (D) and thread nut (E) onto the fitting without lubrication until contact is made between the flared surfaces.
3. Torque fitting nut (E) to the specified number of flats from finger tight (FFFT) or to a given torque value in Table 9.10, page 525.
4. Secure fitting (D) with two wrenches. Place one wrench on fitting body (D), and tighten nut (E) with the other wrench to the torque value shown in Table 9.10, page 525.
5. Verify the final condition of connection.

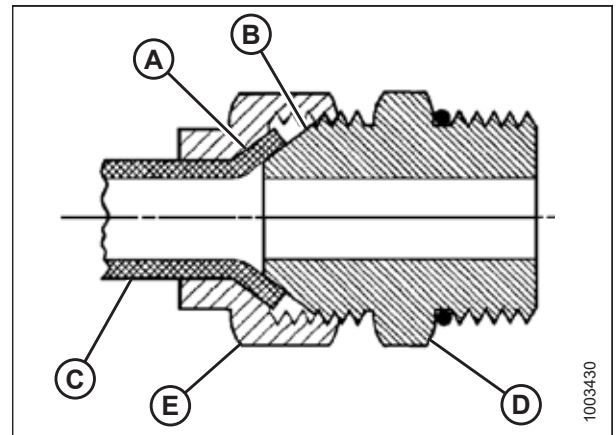


Figure 9.10: Hydraulic Fitting

Table 9.10 Flare-Type Hydraulic Tube Fittings

SAE Dash Size	Thread Size (in.)	Torque Value ⁵⁶		Flats from Finger Tight (FFFT)	
		Nm	lbf-ft	Tube	Swivel Nut or Hose
-2	5/16–24	4–5	3–4	–	–
-3	3/8–24	7–8	5–6	–	–
-4	7/16–20	18–19	13–14	2 1/2	2
-5	1/2–20	19–21	14–15	2	2
-6	9/16–18	30–33	22–24	2	1 1/2
-8	3/4–16	57–63	42–46	2	1 1/2
-10	7/8–14	81–89	60–66	1 1/2	1 1/2

56. Torque values shown are based on lubricated connections as in reassembly.

REFERENCE

Table 9.10 Flare-Type Hydraulic Tube Fittings (continued)

SAE Dash Size	Thread Size (in.)	Torque Value ⁵⁷		Flats from Finger Tight (FFFT)	
		Nm	lbf-ft	Tube	Swivel Nut or Hose
-12	1 1/16-12	113-124	83-91	1 1/2	1 1/4
-14	1 3/16-12	136-149	100-110	1 1/2	1 1/4
-16	1 5/16-12	160-176	118-130	1 1/2	1
-20	1 5/8-12	228-250	168-184	1	1
-24	1 7/8-12	264-291	195-215	1	1
-32	2 1/2-12	359-395	265-291	1	1
-40	3-12	—	—	1	1

O-Ring Boss Hydraulic Fittings – Adjustable

The standard torque values are provided for adjustable hydraulic fittings. If a procedure specifies a different torque value for the same type and size of fitting found in this topic, refer to the value specified in the procedure instead.

1. Inspect O-ring (A) and seat (B) for dirt or defects.
2. Back off lock nut (C) as far as possible. Ensure that washer (D) is loose and that it is pushed toward lock nut (C) as far as possible.
3. Ensure that O-ring (A) is **NOT** on the threads. Adjust O-ring (A) if necessary.
4. Apply hydraulic system oil to O-ring (A).

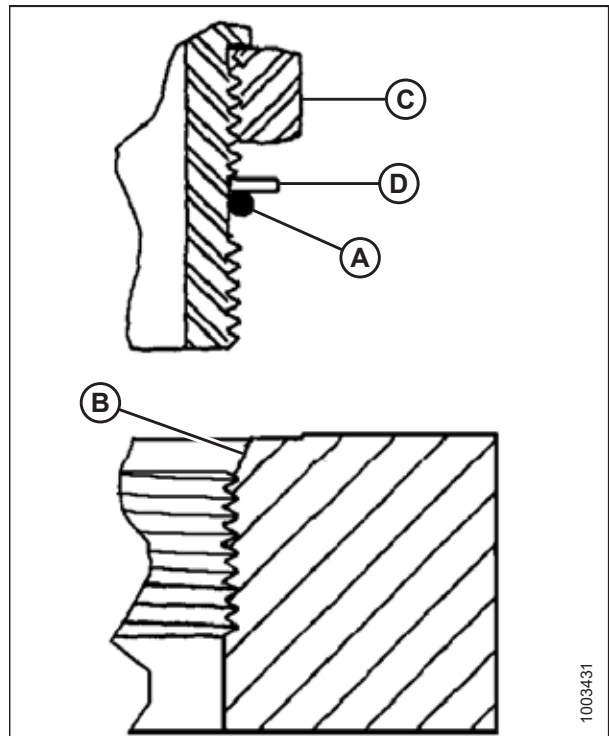


Figure 9.11: Hydraulic Fitting

57. Torque values shown are based on lubricated connections as in reassembly.

REFERENCE

5. Install fitting (B) into the port until backup washer (D) and O-ring (A) contact part face (E).
6. Position the angle fittings by unscrewing no more than one turn.
7. Turn lock nut (C) down to washer (D) and tighten it to the torque value indicated in the table. Use two wrenches, one on fitting (B) and the other on lock nut (C).
8. Verify the final condition of the fitting.

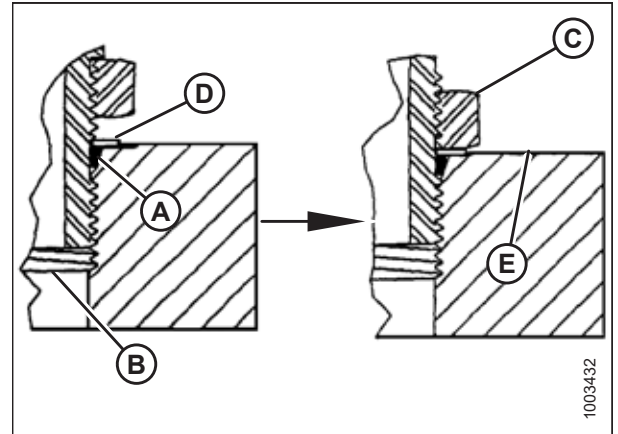


Figure 9.12: Hydraulic Fitting

Table 9.11 O-Ring Boss (ORB) Hydraulic Fittings – Adjustable and Non-Adjustable

SAE Dash Size	Thread Size (in.)	Torque Value ⁵⁸	
		Nm	lbf·ft (*lbf·in)
-2	5/16-24	10-11	*89-97
-3	3/8-24	18-20	*159-177
-4	7/16-20	29-32	21-24
-5	1/2-20	32-35	24-26
-6	9/16-18	40-44	30-32
-8	3/4-16	70-77	52-57
-10	7/8-14	115-127	85-94
-12	1 1/16-12	183-201	135-148
-14	1 3/16-12	237-261	175-193
-16	1 5/16-12	271-298	200-220
-20	1 5/8-12	339-373	250-275
-24	1 7/8-12	414-455	305-336
-32	2 1/2-12	509-560	375-413

58. Torque values shown are based on lubricated connections as in reassembly.

REFERENCE

O-Ring Boss Hydraulic Fittings – Non-Adjustable

The standard torque values for non-adjustable hydraulic fittings are provided. If a procedure specifies a different torque value for the same type and size of fitting found in this topic, use the value specified in the procedure instead.

1. Inspect O-ring (A) and seat (B) for dirt or defects.
2. Ensure that O-ring (A) is **NOT** on the threads. Adjust O-ring (A) if necessary.
3. Apply hydraulic system oil to the O-ring.
4. Install fitting (C) into the port until the fitting is hand-tight.
5. Torque fitting (C) according to values in Table 9.12, page 528.
6. Verify the final condition of the fitting.

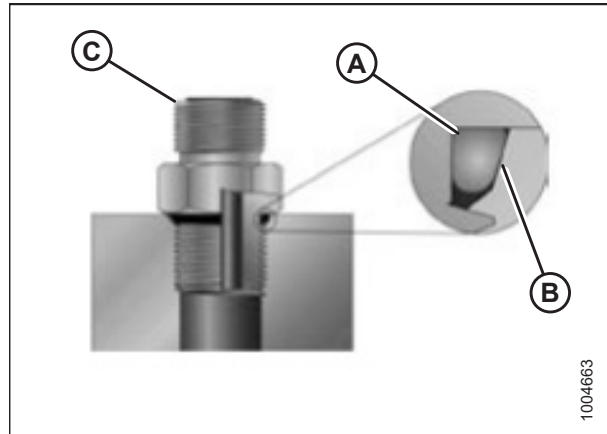


Figure 9.13: Hydraulic Fitting

Table 9.12 O-Ring Boss (ORB) Hydraulic Fittings – Adjustable and Non-Adjustable

SAE Dash Size	Thread Size (in.)	Torque Value ⁵⁹	
		Nm	lbf-ft (*lbf-in)
-2	5/16-24	10-11	*89-97
-3	3/8-24	18-20	*159-177
-4	7/16-20	29-32	21-24
-5	1/2-20	32-35	24-26
-6	9/16-18	40-44	30-32
-8	3/4-16	70-77	52-57
-10	7/8-14	115-127	85-94
-12	1 1/16-12	183-201	135-148
-14	1 3/16-12	237-261	175-193
-16	1 5/16-12	271-298	200-220
-20	1 5/8-12	339-373	250-275
-24	1 7/8-12	414-455	305-336
-32	2 1/2-12	509-560	375-413

O-Ring Face Seal Hydraulic Fittings

The standard torque values are provided for O-ring face seal hydraulic fittings. If a procedure specifies a different torque value for the same type and size of fitting found in this topic, refer to the value specified in the procedure instead.

Torque values are shown in the Table 9.13, page 529.

59. Torque values shown are based on lubricated connections as in reassembly.

REFERENCE

1. Ensure that the sealing surfaces and the fitting threads are free of burrs, nicks, scratches, and any foreign material.



Figure 9.14: Hydraulic Fitting

2. Apply hydraulic system oil to O-ring (B).
3. Align the tube or hose assembly so that the flat face of sleeve (A) or (C) comes into full contact with O-ring (B).
4. Thread tube or hose nut (D) until it is hand-tight. The nut should turn freely until it bottoms out.
5. Torque the fittings according to values in Table 9.13, page 529.

NOTE:

If applicable, hold the hex flange on fitting body (E) to prevent the rotation of the fitting body and the hose when tightening fitting nut (D).

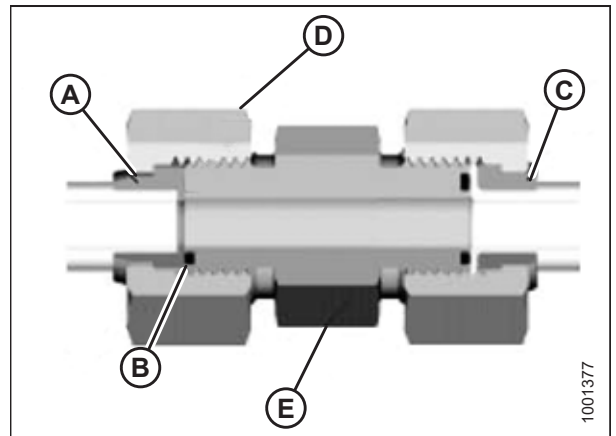


Figure 9.15: Hydraulic Fitting

6. Use three wrenches when assembling unions or joining two hoses together.
7. Verify the final condition of the fitting.

Table 9.13 O-Ring Face Seal (ORFS) Hydraulic Fittings

SAE Dash Size	Thread Size (in.)	Tube O.D. (in.)	Torque Value ⁶⁰	
			Nm	lbf-ft
-3	Note ⁶¹	3/16	–	–
-4	9/16	1/4	25–28	18–21
-5	Note ⁶¹	5/16	–	–
-6	11/16	3/8	40–44	30–32
-8	13/16	1/2	55–61	41–45
-10	1	5/8	80–88	59–65
-12	1 3/16	3/4	115–127	85–94
-14	Note ⁶¹	7/8	–	–
-16	1 7/16	1	150–165	111–122

60. Torque values and angles shown are based on lubricated connection as in reassembly.

61. O-ring face seal type end not defined for this tube size.

REFERENCE

Table 9.13 O-Ring Face Seal (ORFS) Hydraulic Fittings (continued)

SAE Dash Size	Thread Size (in.)	Tube O.D. (in.)	Torque Value ⁶²	
			Nm	lbf-ft
-20	1 11/16	1 1/4	205–226	151–167
-24	2	1 1/2	315–347	232–256
-32	2 1/2	2	510–561	376–414

Tapered Pipe Thread Fittings

The standard torque values are provided for tapered pipe thread fittings. If a procedure specifies a different torque value for the same type and size of fitting found in this topic, refer to the value specified in the procedure instead.

Assemble pipe fittings as follows:

1. Ensure that the fitting and the port threads are free of burrs, nicks, scratches, and any other form of contamination.
2. Apply paste-type pipe thread sealant to the external pipe threads.
3. Thread the fitting into the port until it is hand-tight.
4. Torque the connector to the appropriate torque angle. The turns from finger tight (TFFT) and flats from finger tight (FFFT) values are shown in Table 9.14, page 530. Ensure that the tube end of a shaped connector (typically a 45° or 90° elbow) is aligned to receive the incoming tube or hose assembly. Always finish the alignment of the fitting in the direction of tightening. Never loosen the threaded connectors to achieve alignment.
5. Clean all residue and any excess thread conditioner with an appropriate cleaner.
6. Inspect the final condition of the fitting. Pay special attention to the possibility of cracks in the port opening.
7. Mark the final position of the fitting. If a fitting leaks, disassemble the fitting and check it for damage.

NOTE:

The failure of fittings due to over-torquing may not be evident until the fittings are disassembled and inspected.

Table 9.14 Hydraulic Fitting Pipe Thread

Tapered Pipe Thread Size	Recommended TFFT	Recommended FFFT
1/8–27	2–3	12–18
1/4–18	2–3	12–18
3/8–18	2–3	12–18
1/2–14	2–3	12–18
3/4–14	1.5–2.5	12–18
1–11 1/2	1.5–2.5	9–15
1 1/4–11 1/2	1.5–2.5	9–15
1 1/2–11 1/2	1.5–2.5	9–15
2–11 1/2	1.5–2.5	9–15

⁶² Torque values and angles shown are based on lubricated connection as in reassembly.

9.2 Recommended Fuel, Fluids, and Lubricants

Use only the fuel, fluids, and lubricants specified in this manual.

9.2.1 Storing Lubricants and Fluids

To safely store lubricant and fluids without risk of degradation or contamination, follow these procedures.

- Buy good quality, clean fuel from a reputable supplier.
- Use clean containers to handle fuel and lubricants.
- Keep containers full to avoid condensation issues.
- Store fluids in an area protected from dust, moisture, and other contaminants.
- Avoid storing fuel over long periods of time. If there is a risk of the fuel remaining in the windrower’s fuel tank for a long period of time, add fuel conditioner to avoid condensation problems.
- Store fuel in a convenient place away from buildings.

9.2.2 Fuel Specifications

Use good quality diesel fuel from a reputable supplier. For most year-round service, a No. 2 diesel fuel that meets ASTM specification D975 Grade S15 will provide good performance.

If the vehicle is exposed to extreme cold (below -7°C [20°F]) or is required to operate at colder-than-normal conditions for prolonged periods, use climatized No.2 diesel fuel, or dilute the No.2 fuel with 50% No.1 fuel. This will provide better protection from fuel gelling or wax-plugging of the fuel filters.

Table 9.15 Fuel Specification

Fuel	Specification	Sulphur (by weight)	Water and Sediment (by volume)	Cetane No.	Lubricity
No.2 ULSD	ASTM D975	0.5% maximum	0.05% maximum	40°C (104°F) minimum	520 microns
No.1 and No.2 mix ⁶³ ULSD	n/a	0.5% maximum preferred (1% maximum)	0.1% maximum	45–55°C (113–131°F) cold weather / high altitude	460 microns

In extreme situations, when available fuels are of poor quality or problems exist which are specific to certain operations, additives can be used; however, the engine manufacturer recommends consulting the fuel supplier or engine manufacturer before using fuel additives. Situations where additives are useful include:

- A cetane improver additive can be used with low-cetane fuels.
- A wax crystal modifier can improve fuels with high cold filter plugging points (CFPP).
- An anti-icer can help prevent ice formation in wet fuel during cold weather.
- An antioxidant or storage stability additive can help with fuel system deposits and poor storage stability.
- A lubricity enhancer can be used to increase the lubricity of fuels so that they meet the requirements given in Table 9.15, page 531. Diesel fuel conditioner is available from your Dealer.

63. Optional when operating temperature is below 0°C (32°F).

9.2.3 Lubricants, Fluids, and System Capacities

Refer to the table below for information on the appropriate lubricants and fluids for the windrower, and for the capacity of each system. Follow the procedures for filling each system provided in this manual.

 **WARNING**

To avoid injury or death, do NOT allow ANY machine fluids to enter the body.

Table 9.16 Windrower System Capacities

Lubricant/Fluid	Location	Description	Capacity
Grease	As required unless otherwise specified	SAE multi-purpose high temperature extreme pressure (EP2) performance with 1% maximum molybdenum disulphide (NLGI Grade 2); lithium base	—
Diesel fuel	Fuel tank	Diesel Grade No. 2, or Diesel Grade No. 1 and 2 mix ⁶⁴ ; refer to <i>9.2.2 Fuel Specifications, page 531</i> for more information	367 L (97 U.S. gal)
Hydraulic oil	Hydraulic reservoir	SAE 15W-40 compliant with SAE specs for API class SJ and CH-4 engine oil.	65 L (17.2 U.S. gal)
Gear lubricant	Gearbox	SAE 80W-140 ⁶⁵ , API service class GL-5 fully synthetic gear lubricant (SAE J2360 preferred)	2.1 L (2.2 U.S. qt.)
Gear lubricant	Wheel drive ⁶⁶	SAE 75W-90, API service class GL-5 fully synthetic gear lubricant (SAE J2360 preferred)	1.4 L (1.5 U.S. qt.)
Coolant	Engine cooling system	ASTM D-6210 and CES-14603, Peak Final Charge Global™, Fleetguard® ES Compleat™ OAT; refer to <i>notes</i> following this table	24 L (6.3 U.S. gal) ⁶⁷
Engine oil	Engine oil pan	SAE 15W-40 compliant with SAE specs for API class SJ and CH-4 engine oil	11 L (11.6 U.S. qt.)
Air conditioning refrigerant ⁶⁸	Air conditioning system	R134A	2.27 kg (5 lb.)
Air conditioning refrigerant oil ⁶⁹	Air conditioning system total capacity	PAG SP-15	240 cc (8.1 fl. oz.)

64. Optional when operating temperature is below 0°C (32°F).

65. SAE 75W-140 may be substituted for SAE 80W-140 if necessary.

66. SAE 85W-140 API Service Class GL-5. Extreme Pressure Gear Lubricant is used before initial change.

67. Equal parts with high quality, soft, deionized or distilled water as recommended by Supplier.

68. For prior models that have not upgraded to 2.27 kg (5 lb.) of refrigerant order Kit MD #183180, which includes decal to advise of systems 2.27 kg (5 lb.) charge requirement, refer to Service Bulletin 1254.

69. New compressor (MD #183515) comes filled. If installing on 2014 and prior models, refer to Service Bulletin 1254.

REFERENCE

NOTE:

If Peak Final Charge Global™ or Fleetguard ES Compleat™ OAT are unavailable, use a coolant concentrate or prediluted coolant intended for use with heavy-duty diesel engines. Ensure that the coolant meets the following minimum standards:

- Provides cylinder cavitation protection according to fleet study run at or above 60% load capacity.
- Protects the cooling system metals (cast iron, aluminum alloys, and copper alloys such as brass) from corrosion.
- Coolant **MUST** be nitrite-free and **MUST** be free of 2-Ethylhexanoic (2-EH) acid.

NOTE:

Windrowers have Peak Final Charge Global™ coolant installed at the factory.

An additive package should contain one of the following coolant mixtures:

- Ethylene glycol or propylene glycol base prediluted (40–60%) heavy duty coolant.
- Ethylene glycol or propylene glycol base heavy duty coolant concentrate in a 40–60% mixture of concentrate with quality water.

Water quality is important to the performance of the cooling system. Distilled, deionized, or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

IMPORTANT:

Do **NOT** use cooling system sealing additives or antifreeze that contains sealing additives. Ethylene glycol and propylene glycol may alter the freeze temperature. Verify that the mixture meets the freeze protection criteria of its intended use.

9.2.4 Filter Part Numbers

Refer to this table before changing an engine, hydraulic system, or cabin tank filter to learn the correct part to order.

Table 9.17 M155 Filter Part Numbers

Filter	Part Number
Engine oil filter	MD #111974
Charge oil filter	MD #112419
Return oil filter service kit	MD #320360 ⁷⁰
Primary fuel filter element	MD #183800
Secondary fuel filter element	MD #166312
Fuel strainer filter (breather)	MD #111608
Fuel filler filter	MD #163989
Return air filter	MD #109797
Primary element (cab)	MD #111060
Primary air filter element	MD #111954
Safety air filter element	MD #111955

70. Includes filter with seal and O-ring.

9.3 Conversion Chart

This manual uses both SI units (including metric) and US customary units (sometimes referred to as standard units) of measurement. A list of those units along with their abbreviations and conversion factors is provided here for your reference.

Table 9.18 Conversion Chart

Quantity	SI Units (Metric)		Factor	US Customary Units (Standard)	
	Unit Name	Abbreviation		Unit Name	Abbreviation
Area	hectare	ha	x 2.4710 =	acre	acres
Flow	liters per minute	L/min	x 0.2642 =	US gallons per minute	gpm
Force	Newton	N	x 0.2248 =	pound force	lbf
Length	millimeter	mm	x 0.0394 =	inch	in.
Length	meter	m	x 3.2808 =	foot	ft.
Power	kilowatt	kW	x 1.341 =	horsepower	hp
Pressure	kilopascal	kPa	x 0.145 =	pounds per square inch	psi
Pressure	megapascal	MPa	x 145.038 =	pounds per square inch	psi
Pressure	bar (Non-SI)	bar	x 14.5038 =	pounds per square inch	psi
Torque	Newton meter	Nm	x 0.7376 =	pound feet or foot pounds	lbf-ft
Torque	Newton meter	Nm	x 8.8507 =	pound inches or inch pounds	lbf-in
Temperature	degrees Celsius	°C	(°C x 1.8) + 32 =	degrees Fahrenheit	°F
Velocity	meters per minute	m/min	x 3.2808 =	feet per minute	ft/min
Velocity	meters per second	m/s	x 3.2808 =	feet per second	ft/s
Velocity	kilometers per hour	km/h	x 0.6214 =	miles per hour	mph
Volume	liter	L	x 0.2642 =	US gallon	US gal
Volume	milliliter	mL	x 0.0338 =	ounce	oz.
Volume	cubic centimeter	cm ³ or cc	x 0.061 =	cubic inch	in. ³
Weight	kilogram	kg	x 2.2046 =	pound	lb.

9.4 Engine Error Codes

If an engine error occurs, the cab display module (CDM) will display an engine error code. Refer to the table below to learn the meaning of the code.

The following example explains the segments of an error code:

If the cab display module (CDM) displays the Error Code 629S 12F 28C, this is the meaning of the parts of the code:

629S: S represents the J1939 SPN column. Locate code 629 in that column.

12F: F represents the FMI column. Locate code 12 in that column.

28C: C represents the occurrences (count); 28 is the quantity.

J1939 SPN description: Controller #1. The Cummins description of this is engine control module critical internal failure — Bad intelligent device or component.

The Cummins Dealer will request the fault code that corresponds with the number that you have located in the J1939 SPN column.

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁷¹
719	22	3	Amber	Crankcase pressure	Extended crankcase blow-by pressure circuit — voltage above normal, or shorted to high source
729	22	4	Amber	Crankcase pressure	Extended crankcase blow-by pressure circuit — voltage below normal, or shorted to low source
2114	52	0	Red	Coolant temperature	Coolant temperature 2 — data valid but above normal operational range — most severe level
2111	52	3	Amber	Coolant temperature	Coolant temperature 2 sensor circuit — voltage above normal, or shorted to high source
2112	52	4	Amber	Coolant temperature	Coolant temperature 2 sensor circuit — voltage below normal, or shorted to low source
2113	52	16	Amber	Coolant temperature	Coolant temperature 2 — data valid but above normal operational range — moderately severe level
241	84	2	Amber	Wheel-based vehicle speed	Vehicle speed sensor circuit — data erratic, intermittent, or incorrect
242	84	10	Amber	Wheel-based vehicle speed	Vehicle speed sensor circuit tampering has been detected — abnormal rate of change
148	91	0	Red	Accelerator pedal position	Accelerator pedal or lever position sensor circuit — abnormal frequency, pulse width, or period
147	91	1	Red	Accelerator pedal position	Accelerator pedal or lever position sensor circuit — abnormal frequency, pulse width, or period
1242	91	2	Red	Accelerator pedal position	Accelerator pedal or lever position sensor 1 and 2 — data erratic, intermittent, or incorrect
131	91	3	Red	Accelerator pedal position	Accelerator pedal or lever position sensor circuit — voltage above normal, or shorted to high source
132	91	4	Red	Accelerator pedal position	Accelerator pedal or lever position sensor circuit — voltage below normal, or shorted to low source
287	91	19	Red	Accelerator pedal position	SAE J1939 multiplexing accelerator pedal or lever sensor system error — received network data in error
528	93	2	Amber	Switch — data	Auxiliary alternate torque validation switch — data erratic, intermittent, or incorrect
2216	94	1	Amber	Fuel delivery pressure	Fuel pump delivery pressure — data valid but above normal operational range — moderately severe level
268	94	2	Amber	Fuel delivery pressure	Fuel pressure sensor circuit — data erratic, intermittent, or incorrect
546	94	3	Amber	Fuel delivery pressure	Fuel delivery pressure sensor circuit — voltage above normal, or shorted to high source

71. The descriptions of Cummins J1939 SPN codes are subject to change at their discretion.

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁷²
547	94	4	Amber	Fuel delivery pressure	Fuel delivery pressure sensor circuit — voltage below normal, or shorted to low source
2261	94	15	Amber Blinking	Fuel delivery pressure	Fuel pump delivery pressure — data valid but above normal operational range — least severe level
2262	94	17	Amber Blinking	Fuel delivery pressure	Fuel pump delivery pressure — data valid but below normal operational range — least severe level
2215	94	18	Amber	Fuel delivery pressure	Fuel pump delivery pressure — data valid but below normal operational range — moderately severe level
2372	95	16	Amber	Engine fuel filter differential pressure	Fuel filter differential pressure — data valid but above normal operational range — moderately severe level
428	97	3	Amber	Water in fuel indicator	Water in fuel sensor circuit — voltage above normal, or shorted to high source
429	97	4	Amber	Water in fuel indicator	Water in fuel sensor circuit — voltage below normal, or shorted to low source
418	97	15	Amber Blinking	Water in fuel indicator	Water in fuel indicator high — data valid but above normal operational range — least severe level
1852	97	16	Amber	Water in fuel indicator	Water in fuel indicator — data valid but above normal operational range — moderately severe level
415	100	1	Red	Engine oil pressure	Oil pressure low — data valid but below normal operational range — most severe level
435	100	2	Amber	Engine oil pressure	Oil pressure sensor circuit — data erratic, intermittent, or incorrect
135	100	3	Amber	Engine oil pressure	Oil pressure sensor circuit — voltage above normal, or shorted to high source
141	100	4	Amber	Engine oil pressure	Oil pressure sensor circuit — voltage below normal, or shorted to low source
143	100	18	Amber	Engine oil pressure	Oil pressure low — data valid but below normal operational range — moderately severe level
2973	102	2	Amber	Boost pressure	Intake manifold pressure sensor circuit — data erratic, intermittent, or incorrect
122	102	3	Amber	Boost pressure	Intake manifold pressure sensor circuit — voltage above normal, or shorted to high source
123	102	4	Amber	Boost pressure	Intake manifold pressure sensor circuit — voltage below normal, or shorted to low source
124	102	16	Amber	Boost pressure	Intake manifold 1 pressure — data valid but above normal operational range — moderately severe level

72. The descriptions of Cummins J1939 SPN codes are subject to change at their discretion.

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁷³
2345	103	10	Amber	Turbocharger 1 speed	Turbocharger speed invalid rate of change detected — abnormal rate of change
595	103	16	Amber	Turbocharger 1 speed	Turbocharger #1 speed high — data valid but above normal operational range — moderately severe level
687	103	18	Amber	Turbocharger 1 speed	Turbocharger #1 speed low — data valid but below normal operational range — moderately severe level
155	105	0	Red	Intake manifold #1 temp	Intake manifold air temperature high — data valid but above normal operational range — most severe level
153	105	3	Amber	Intake manifold #1 temp	Intake manifold air temperature sensor circuit — voltage above normal, or shorted to high
154	105	4	Amber	Intake manifold #1 temp	Intake manifold air temperature sensor circuit — voltage below normal, or shorted to low source
488	105	16	Amber	Intake manifold	Intake manifold 1 temperature — data valid but above normal operational range — moderately severe level
295	108	2	Amber	Barometric pressure	Barometric pressure sensor circuit — data erratic, intermittent, or incorrect
221	108	3	Amber	Barometric pressure	Barometric pressure sensor circuit — voltage above normal, or shorted to high source
222	108	4	Amber	Barometric pressure	Barometric pressure sensor circuit — voltage below normal, or shorted to low source
231	109	3	Amber	Coolant pressure	Coolant pressure sensor circuit — voltage above normal, or shorted to high source
232	109	4	Amber	Coolant pressure	Coolant pressure sensor circuit — voltage below normal, or shorted to low source
233	109	18	Amber	Coolant pressure	Coolant pressure — data valid but below normal operational range — moderately severe level
151	110	0	Red	Engine coolant temperature	Coolant temperature high — data valid but above normal operational range — most severe level
334	110	2	Amber	Engine coolant temperature	Coolant temperature sensor circuit — data erratic, intermittent, or incorrect
144	110	3	Amber	Engine coolant temperature	Coolant temperature sensor circuit — voltage above normal, or shorted to high source
145	110	4	Amber	Engine coolant temperature	Coolant temperature sensor circuit — voltage below normal, or shorted to low source
2963	110	15	None	Engine coolant temperature	Engine coolant temperature high — data valid but above normal operational range — least severe level

73. The descriptions of Cummins J1939 SPN codes are subject to change at their discretion.

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁷⁴
146	110	16	Amber	Engine coolant temperature	Coolant temperature high — data valid but above normal operational range — moderately severe level
235	111	1	Red	Coolant level	Coolant level low — data valid but below normal operational range — most severe level
422	111	2	Amber	Coolant level	Coolant level — data erratic, intermittent, or incorrect
195	111	3	Amber	Coolant level	Coolant level sensor circuit — voltage above normal, or shorted to high source
196	111	4	Amber	Coolant level	Coolant level sensor circuit — voltage below normal, or shorted to low source
2448	111	17	Amber Blinking	Coolant level	Coolant level — data valid but below normal operating range — least severe level
197	111	18	Amber	Coolant level	Coolant level — data valid but below normal operational range — moderately severe level
449	157	0	Red	Injector metering rail 1 pressure	Fuel pressure high — data valid but above normal operational range — moderately severe level
1911	157	0	Amber	Injector metering rail	Injector metering rail 1 pressure — data valid but above normal operational range — most severe level
224 9	157	1	Amber	Injector metering rail 1 pressure	Injector metering rail 1 pressure — data valid but below normal operational range — most severe level
554	157	2	Amber	Injector metering rail 1 pressure	Fuel pressure sensor error — data erratic, intermittent, or incorrect
451	157	3	Amber	Injector metering rail 1 pressure	Injector metering rail #1 pressure sensor circuit — voltage above normal, or shorted to high source
452	157	4	Amber	Injector metering rail 1 pressure	Injector metering rail #1 pressure sensor circuit — voltage below normal, or shorted to low source
553	157	16	Amber	Injector metering rail 1 pressure	Injector metering rail #1 pressure high — data valid but above normal operational range — moderately severe level
559	157	18	Amber	Injector metering rail 1 pressure	Injector metering rail #1 pressure low — data valid but below normal operational range — moderately severe level
951	166	2	None	Cylinder power	Cylinder power imbalance between cylinders — data erratic, intermittent, or incorrect
598	167	1	Red	Alternate potential (voltage)	Electrical charging system voltage low — data valid but below normal operational range — most severe level
596	167	16	Amber	Alternate potential (voltage)	Electrical charging system voltage high — data valid but above normal operational range — moderately severe level

74. The descriptions of Cummins J1939 SPN codes are subject to change at their discretion.

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁷⁵
597	167	18	Amber	Alternate potential (voltage)	Electrical charging system voltage low — data valid but below normal operational range — moderately severe level
442	168	16	Amber	Electrical potential (voltage)	Battery #1 voltage high — data valid but above normal operational range — moderately severe level
441	168	18	Amber	Electrical potential (voltage)	Battery #1 voltage low — data valid but below normal operational range — moderately severe level
249	171	3	Amber	Ambient air temperature	Ambient air temperature sensor circuit — voltage above normal, or shorted to high source
256	171	4	Amber	Ambient air temperature	Ambient air temperature sensor circuit — voltage below normal, or shorted to low source
263	174	3	Amber	Fuel temperature	Engine fuel temperature sensor 1 circuit — voltage above normal, or shorted to high source
265	174	4	Amber	Fuel temperature	Engine fuel temperature sensor 1 circuit — voltage below normal, or shorted to low source
261	174	16	Amber	Fuel temperature	Engine fuel temperature — data valid but above normal operational range — moderately severe level
214	175	0	Red	Oil temperature	Engine oil temperature — data valid but above normal operational range — most severe level
425	175	2	Amber	Oil temperature	Engine oil temperature — data erratic, intermittent, or incorrect
212	175	3	Amber	Oil temperature	Engine oil temperature sensor 1 circuit — voltage above normal, or shorted to high source
213	175	4	Amber	Oil temperature	Engine oil temperature sensor 1 circuit — voltage below normal, or shorted to low source
234	190	0	Red	Engine speed	Engine speed high — data valid but above normal operational range — most severe level
689	190	2	Amber	Engine speed	Primary engine speed sensor error — data erratic, intermittent, or incorrect
2321	190	2	None	Engine speed	Engine speed/position sensor #1 — data erratic, intermittent, or incorrect
349	191	16	Amber	Transmission output shaft speed	Transmission output shaft speed — data valid but above normal operational range — moderately severe level
489	191	18	Amber	Transmission output shaft speed	Transmission output shaft speed — data valid but below normal operational range — moderately severe level

75. The descriptions of Cummins J1939 SPN codes are subject to change at their discretion.

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁷⁶
319	251	2	Amber Blinking	Real time clock power	Real time clock power interrupt — data erratic, intermittent, or incorrect
2375	412	3	Amber	Exhaust gas recirculation temperature	Exhaust gas recirculation temperature sensor circuit — voltage above normal, or shorted to high source
2376	412	4	Amber	Exhaust gas recirculation temperature	Exhaust gas recirculation temperature sensor circuit — voltage below normal, or shorted to low source
293	441	3	Amber	OEM temperature	Auxiliary temperature sensor input #1 circuit — voltage above normal, or shorted to high source
294	441	4	Amber	OEM temperature	Auxiliary temperature sensor input #1 circuit — voltage below normal, or shorted to low source
292	441	14	Red	Auxiliary temperature 1	Auxiliary temperature sensor input 1 — special instructions
431	558	2	Amber	Accelerator pedal low idle switch	Accelerator pedal or lever idle validation circuit — data erratic, intermittent, or incorrect
551	558	4	Amber	Accelerator pedal low idle switch	Accelerator pedal or lever idle validation circuit — voltage below normal, or shorted to low source
432	558	13	Red	Accelerator pedal low idle switch	Accelerator pedal or lever idle validation circuit — out of calibration
523	611	2	Amber	System diagnostic code #1	OEM intermediate (PTO) speed switch validation — data erratic, intermittent, or incorrect
2292	611	16	Amber	Fuel inlet meter device	Fuel inlet meter device — data valid but above normal operational range — moderately severe level
2293	611	18	Amber	Fuel inlet meter device	Fuel inlet meter device flow demand lower than expected — data valid but below normal operational range — moderately severe level
115	612	2	Red	System diagnostic code #2	Engine speed/position sensor circuit lost both of two signals from the magnetic pickup sensor — data erratic, intermittent, or incorrect
244	623	4	Amber	Red stop lamp	Red stop lamp driver circuit — voltage below normal, or shorted to low source
1117	627	2		Power supply	Power lost with ignition on — data erratic, intermittent, or incorrect
351	627	12	Amber	Controller #1	Injector power supply — bad intelligent device or component
111	629	12	Red	Controller #1	Engine control module critical internal failure — bad intelligent device or component
343	629	12	Amber	Controller #1	Engine control module warning internal hardware failure — bad intelligent device or component

76. The descriptions of Cummins J1939 SPN codes are subject to change at their discretion.

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁷⁷
341	630	2	Amber	Calibration memory	Engine control module data lost — data erratic, intermittent, or incorrect
342	630	13	Red	Calibration memory	Electronic calibration code incompatibility — out of calibration
2217	630	31	Amber	Calibration memory	ECM program memory (ram) corruption — condition exists
2311	633	31	Amber	Fuel control valve #1	Fueling actuator #1 circuit error — condition exists
285	639	9	Amber	SAE J1939 datalink	SAE J1939 multiplexing PGN timeout error — abnormal update rate
286	639	13	Amber	SAE J1939 datalink	SAE J1939 multiplexing configuration error — out of calibration
599	640	14	Red	Engine external protection input	Auxiliary commanded dual output shutdown — special instructions
237	644	2	Amber	External speed input	External speed input (multiple unit synchronization) — data erratic, intermittent, or incorrect
2377	647	3	Amber	Fan clutch output device driver	Fan control circuit — voltage above normal, or shorted to high source
245	647	4	Amber	Fan clutch output device driver	Fan control circuit — voltage below normal, or shorted to low source
322	651	5	Amber	Injector cylinder #01	Injector solenoid cylinder #1 circuit — current below normal, or open circuit
1139	651	7	Amber	Injector cylinder #01	Injector cylinder #1 — mechanical system not responding properly or out of adjustment
331	652	5	Amber	Injector cylinder #02	Injector solenoid cylinder #2 circuit — current below normal, or open circuit
1141	652	7	Amber	Injector cylinder #02	Injector cylinder #2 — mechanical system not responding properly or out of adjustment
324	653	5	Amber	Injector cylinder #03	Injector solenoid cylinder #3 circuit — current below normal, or open circuit
1142	653	7	Amber	Injector cylinder #03	Injector cylinder #3 — mechanical system not responding properly or out of adjustment
332	654	5	Amber	Injector cylinder #04	Injector solenoid cylinder #4 circuit — current below normal, or open circuit
1143	654	7	Amber	Injector cylinder #04	Injector cylinder #4 — mechanical system not responding properly or out of adjustment
323	655	5	Amber	Injector cylinder #05	Injector solenoid cylinder #5 circuit — current below normal, or open circuit
1144	655	7	Amber	Injector cylinder #05	Injector cylinder #5 — mechanical system not responding properly or out of adjustment
325	656	5	Amber	Injector cylinder #06	Injector solenoid cylinder #6 circuit — current below normal, or open circuit
1145	656	7	Amber	Injector cylinder #06	Injector cylinder #6 — mechanical system not responding properly or out of adjustment

77. The descriptions of Cummins J1939 SPN codes are subject to change at their discretion.

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁷⁸
584	677	3	Amber	Starter solenoid lockout relay driver circuit	Starter relay circuit — voltage above normal, or shorted to high source
585	677	4	Amber	Starter solenoid lockout relay driver circuit	Starter relay circuit — voltage below normal, or shorted to low source
2557	697	3	Amber	Auxiliary PWM driver #1	Auxiliary PWM driver #1 — voltage above normal, or shorted to high source
2558	697	4	Amber	Auxiliary PWM driver #1	Auxiliary PWM driver #1 — voltage below normal, or shorted to low source
527	702	3	Amber	Circuit — voltage	Auxiliary input/output 2 circuit — voltage above normal, or shorted to high source
529	703	3	Amber	Circuit — voltage	Auxiliary input/output 3 circuit — voltage above normal, or shorted to high source
779	703	11	Amber	Auxiliary equipment sensor input	Warning auxiliary equipment sensor input #3 (OEM switch) — root cause not known
2195	703	14	Red	Auxiliary equipment sensor	Auxiliary equipment sensor input 3 engine protection critical — special instructions
778	723	2	Amber	Engine speed sensor #2	Engine speed sensor (camshaft) error — data erratic, intermittent, or incorrect
2322	723	2	None	Engine speed sensor #2	Engine speed/position sensor #2 — data erratic, intermittent, or incorrect
731	723	7	Amber	Engine speed sensor #2	Engine speed/position #2 mechanical misalignment between camshaft and crankshaft sensors — mechanical system not responding properly or out of adjustment
2555	729	3	Amber	Inlet air heater driver #1	Intake air heater #1 circuit — voltage above normal, or shorted to high source
2556	729	4	Amber	Inlet air heater driver #1	Intake air heater #1 circuit — voltage below normal, or shorted to low source
2426	730	3	None	Intake air heater #2	Intake air heater 2 circuit — voltage above normal, or shorted to high source
2425	730	4	None	Intake air heater #2	Intake air heater 2 circuit — voltage below normal, or shorted to low source
133	974	3	Red	Remote accelerator	Remote accelerator pedal or lever position sensor circuit — voltage above normal, or shorted to high source
134	974	4	Red	Remote accelerator	Remote accelerator pedal or lever position sensor circuit — voltage below normal, or shorted to low source
288	974	19	Red	Remote accelerator	SAE J1939 multiplexing remote accelerator pedal or lever data error — received network data in error
284	1043	4	Amber	Internal sensor voltage supply	Engine speed/position sensor (crankshaft) supply voltage circuit — voltage below normal, or shorted to low source

78. The descriptions of Cummins J1939 SPN codes are subject to change at their discretion.

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁷⁹
2182	1072	3	Amber	Engine brake output #1	Engine brake actuator driver 1 circuit — voltage above normal, or shorted to high source
2183	1072	4	Amber	Engine brake output #1	Engine brake actuator driver 1 circuit — voltage below normal, or shorted to low source
2367	1073	3	Amber	Engine compression brake output #2	Engine brake actuator circuit #2 — voltage above normal, or shorted to high source
2363	1073	4	Amber	Engine compression brake output #2	Engine brake actuator circuit #2 — voltage below normal, or shorted to low source
2265	1075	3	Amber	Electric lift pump for engine fuel	Fuel priming pump control signal circuit — voltage above normal, or shorted to high source
2266	1075	4	Amber	Electric lift pump for engine fuel	Fuel priming pump control signal circuit — voltage below normal, or shorted to low source
2368	1112	3	Amber	Engine brake output #3	Engine brake actuator driver 3 circuit — voltage above normal, or shorted to high source
2365	1112	4	Amber	Engine brake output #3	Engine brake actuator driver output 3 circuit — voltage below normal, or shorted to low source
697	1136	3	Amber	Sensor circuit — voltage	ECM internal temperature sensor circuit — voltage above normal, or shorted to high source
698	1136	4	Amber	Sensor circuit — voltage	ECM internal temperature sensor circuit — voltage below normal, or shorted to low source
691	1172	3	Amber	Turbocharger #1 compressor inlet temperature	Turbocharger #1 compressor inlet temperature sensor circuit — voltage above normal, or shorted to high source
692	1172	4	Amber	Turbocharger #1 compressor inlet temperature	Turbocharger #1 compressor inlet temperature sensor circuit — voltage below normal, or shorted to low source
2373	1209	3	Amber	Exhaust gas pressure	Exhaust gas pressure sensor circuit — voltage above normal, or shorted to high source
2374	1209	4	Amber	Exhaust gas pressure	Exhaust gas pressure sensor circuit — voltage below normal, or shorted to low source
338	1267	3	Amber	Vehicle accessories relay driver	Idle shutdown vehicle accessories relay driver circuit — voltage above normal, or shorted to high source
339	1267	4	Amber	Vehicle accessories relay driver	Idle shutdown vehicle accessories relay driver circuit — voltage below normal, or shorted to low source
272	1347	3	Amber	Fuel pump pressurizing assembly #1	High fuel pressure solenoid valve circuit — voltage above normal, or shorted to high source

79. The descriptions of Cummins J1939 SPN codes are subject to change at their discretion.

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description⁸⁰
271	1347	4	Amber	Fuel pump pressurizing assembly #1	High fuel pressure solenoid valve circuit — voltage below normal, or shorted to low source
281	1347	7	Amber	Fuel pump pressurizing assembly #1	High fuel pressure solenoid valve #1 — mechanical system not responding properly or out of adjustment
497	1377	2	Amber	Switch circuit	Multiple unit synchronization switch circuit — data erratic, intermittent, or incorrect
649	1378	31	Amber Blinking	Engine oil change interval	Change lubricating oil and filter — condition exists
297	1388	3	Amber	Auxiliary pressure	Auxiliary pressure sensor input #2 circuit — voltage above normal, or shorted to high source
298	1388	4	Amber	Auxiliary pressure	Auxiliary pressure sensor input #2 circuit — voltage below normal, or shorted to low source
296	1388	14	Red	Auxiliary pressure	Auxiliary pressure sensor input 1 — special instructions
211	1484	31	None	J1939 error	Additional auxiliary diagnostic codes logged — condition exists
1256	1563	2	Amber	Control module identification input state	Control module identification input state error — data erratic, intermittent, or incorrect
1257	1563	2	Red	Control module identification input state	Control module identification input state error — data erratic, intermittent, or incorrect
199	1661	4	Amber	Engine automatic start lamp	Engine automatic start lamp driver circuit — voltage above normal, or shorted to high source
2263	1800	16	Amber	Battery temperature	Battery temperature — data valid but above normal operational range — moderately severe level
2264	1800	18	Amber	Battery temperature	Battery temperature — data valid but below normal operational range — moderately severe level
1239	2623	3	Amber	Accelerator pedal position	Accelerator pedal or lever position sensor 2 circuit — voltage above normal, or shorted to high source
1241	2623	4	Amber	Accelerator pedal position	Accelerator pedal or lever position sensor 2 circuit — voltage below normal, or shorted to low source
2346	2789	15	None	System diagnostic code #1	Turbocharger turbine inlet temperature (calculated) — data valid but above normal operational range — least severe level
2347	2790	15	None	System diagnostic code #1	Turbocharger compressor outlet temperature (calculated) — data valid but above normal operational range — least severe level
757	2802	31	Amber	Electronic control module	Electronic control module data lost — condition exists

80. The descriptions of Cummins J1939 SPN codes are subject to change at their discretion.

REFERENCE

Cummins Fault Code	J1939 SPN	J1939 FMI	Lamp	J1939 SPN Description	Cummins Description ⁸¹
2115	2981	3	Amber	Coolant pressure	Coolant pressure 2 circuit — voltage above normal, or shorted to high source
2116	2981	4	Amber	Coolant pressure	Coolant pressure 2 circuit — voltage below normal, or shorted to low source
2117	2981	18	Amber	Coolant pressure	Coolant pressure 2 — data valid but below normal operational range — moderately severe level
386	3509	3	Amber	5 volts dc supply	Sensor supply voltage #1 circuit — voltage above normal, or shorted to high source
352	3509	4	Amber	5 volts dc supply	Sensor supply voltage #1 circuit — voltage below normal, or shorted to low source
227	3510	3	Amber	5 volts dc supply	Sensor supply voltage #2 circuit — voltage above normal, or shorted to high source
187	3510	4	Amber	5 volts dc supply	Sensor supply voltage #2 circuit — voltage below normal, or shorted to low source
239	3511	3	Amber	System diagnostic code #2	Sensor supply voltage #3 circuit — voltage above normal, or shorted to high source
238	3511	4	Amber	System diagnostic code #1	Sensor supply voltage #3 circuit — voltage below normal, or shorted to low source
2185	3512	3	Amber	System diagnostic code #1	Sensor supply voltage #4 circuit — voltage above normal, or shorted to high source
2186	3512	4	Amber	System diagnostic code #1	Sensor supply voltage #4 circuit — voltage below normal, or shorted to low source
193	520199	3	Amber	Cruise control	Cruise control (resistive) signal circuit — voltage above normal, or shorted to high source
194	520199	4	Amber	Cruise control	Cruise control (resistive) signal circuit — voltage below normal, or shorted to low source

9.5 Cab Display Module Error Codes

The cab display module (CDM) displays error codes when there is a fault with one of the sensors that monitor and control windrower operation. Use the list of error codes to help identify a specific problem with the windrower.

NOTE:

In the case of dual codes being shown for an item (primarily the solenoid valves), the first code indicates a SHORT CIRCUIT condition, while the second code indicates an OPEN CIRCUIT condition. That is, E41 would be a SHORT in the reel aft solenoids (P55, P59), while E141 would indicate an OPEN circuit.

Codes	CDM Display	Description
E1	—	—
E2	RTCH NOT ALLOWED	Return to cut activated with the header off

⁸¹. The descriptions of Cummins J1939 SPN codes are subject to change at their discretion.

REFERENCE

Codes		CDM Display	Description
E3		CDM CAN BUS ERROR	E3 is triggered when the CDM module can not transmit and/or receive CANBUS. Check CAN signals on pin 22, 23, 24 and the power ground on 9, 11 and 25 in connector P38. If all signals check out OK, check CANBUS cabling and end bus terminations in place. The terminators are located behind the Cab Display Module (CDM) connector P41, and near the engine Electronic Control Module (ECM) connector P40. The resistance should be 120 ohm resistance
E4		HDR DRV NOT ALLOWED	HEADER ENGAGE switch activated while in engine-forward
E5		CHECK HEADER ID	Header ID change has been detected while the header was engaged
E6		TEMP GAUGE SHORT	Wiring/connection problem
E7		SPEED STICK SHORT	Wiring/connection problem
E8		HEADER ENABLE SHORT	Wiring/connection problem
E9		WCM ENABLE SHORT	Wiring/connection problem
E10		CDM INTERNAL ERROR	A generic internal CDM error summarizing a number of internal problems
E11		CDM POWER UP	Indicates that the voltage on CDM connector P38, pin 26 is too low or the ground connections are loose; could be a wiring issue
E12		WCM POWER UP	E12 indicates that the voltage on WCM connector P34, pin 2 is too low or the ground on pin 9 is loose; could be a wiring issue
E13		FUEL SOLENOID	WCM fuel solenoid output fault detected
E14		—	—
E15		KNIFE DRIVE PWM P68	Knife drive – PWM solenoid P68 drive fault detected
E16		DRAPER DRIVE PWM P69	Draper drive – PWM solenoid P69 drive fault detected
E17		REEL DRIVE PWM P70	Reel drive – PWM solenoid P70 drive fault detected
E18		—	—
E19	E119	Load Sense P75	Disc block valve – Solenoid P75 drive fault detected
E20		—	—
E21	E121	REVERSER P106	Reverser solenoid P106 fault detected
E22		—	—
E23	E123	REVERSER	Reverser – solenoid (P65, P66, P67) fault detected
E24	E124	DECK SHFT RIGHT P95	Right deck shift solenoid P95 fault detected
E25	E125	DECK SHFT LEFT P96	Left deck shift solenoid P96 fault detected
E26	E126	DWA UP	DWA raise solenoid P72, P73 fault detected
E27	E127	DWA DOWN	DWA lower solenoid P72, P73, fault detected circuit
E28	E128	TILT RETRACT	Header tilt retract solenoid P54, fault detected
E29	E129	TILT EXTEND	Header tilt extend solenoid P53, P54, fault detected
E30	E130	4 WAY VALVE P62	4-way valve solenoid P62 fault detected
E31	E131	BYPASS VALVE P52	Bypass valve solenoid P52 fault detected
E32	E132	HEADER UP/DOWN P57	Header up/down solenoid P57, fault detected
E33	E133	SCREEN CLEANERS	Screen cleaner output fault detected

REFERENCE

Codes		CDM Display	Description
E34	E134	RIGHT STOP LAMP	Right stop lamp output fault detected
E35	E135	LEFT STOP LAMP	Left stop lamp output fault detected ⁸²
E36	E136	RIGHT TURN LAMP	Right turn lamp output fault detected ⁸³
E37	E137	LEFT TURN LAMP	Left turn lamp output fault detected
E38	E138	MAIN DRIVE	Main header drive solenoid P71 fault detected
E39	E139	LOW RANGE P61	Low range solenoid P61 fault detected
E40	E140	HIGH RANGE P60	High range solenoid P60 fault detected
E41	E141	REEL AFT	Reel aft solenoid P55, P59, fault detected
E42	E142	REEL FORE	Reel fore solenoid P55, P59, fault detected
E43	E143	REEL UP/DOWN P58	Reel up/down solenoid P58, P52, P62 fault detected
E44	E144	FLOAT RHS P64	Right float solenoid P64, fault detected
E45	E145	FLOAT LHS P63	Left float solenoid P63, fault detected
E46		SENSOR VOLTS HIGH	WCM's 9V Sensor voltage output high (wire 5)
E47		SENSOR VOLTS LOW	WCM's 9V Sensor voltage output low (wire 5)
E48		WCM OVER TEMP	E49 the temp limits are set to -10C and +85C representing the board temp read by the chip inside the WCM module; this is to protect the module when operating at extreme temp; the WCM outputs will stop working (they stay off) when the board temp is below -20C or above 120C; the high temp may indicate a strong/ massive short circuit in the cabling on the WCM outputs
E49		WCM LOW TEMP	WCM low temp fault
E50		BATT+ OUT OF RANGE	System voltage above 15.5 VDC
E51	E151	DISK DRIVE PWM P68	Disk header drive solenoid P68 fault detected
E52		—	—
E53		—	—
E54		—	—
E55		DISK SPD OVERLOAD	Low disk speed detected < setpoint
Error codes E56 to E63 not allocated			
E64		HEADER OIL PRESSURE	Header drive charge pressure low (Switch MD #112848 on return manifold)
E65		KNIFE OVERLOAD	Low knife speed detected < setpoint
E66		### LOW VOLTS	Low system voltage <11.5 VDC
E67		TRANS OIL PRESSURE	Supercharge pressure low (switch MD #139775)
E68		HYDRAULIC OIL HOT	Oil tank temp >110°C (230°F)
E69		ENGINE AIR FILTER	Engine air filter plugged
E70		HYDRAULIC FILTER	Hydraulic filter pressure too high (MD #139722)
E71		LOW HYDRAULIC OIL	Low hydraulic oil level sensor tripped (MD #138473)
E72		### HIGH VOLTS	System voltage above 15.5 VDC
Error codes E73 to E100 not allocated			

82. If the road light kit is not installed, the CDM will display E135 LEFT STOP LAMP as a malfunction in CAB-FORWARD mode.

83. If the road light kit is not installed, the CDM will display E134 RIGHT STOP LAMP as a malfunction in CAB-FORWARD mode.

REFERENCE

Codes		CDM Display	Description
E101		SPI ERROR	Indicates that the communication between the two micros inside the WCM module is not working properly; could be resolved by reprogramming the WCM
E102		CAN ERROR	E102 is detected by the WCM module so the issue is related to the CANBUS signals on the WCM end; it may happen when the CDM sees the engine ECU but not the WCM (not hooked up or experiencing power or CANBUS problems; may also happen if the CDM connector P38, pin 8 signal is malfunctioning or the wire between the CDM connector P38, pin 8 and WCM connector P36, pin 30 is not making a proper connection). The wire at the CDM is CB60 and at the WCM CH60
E103		EEPROM READ ERROR	Internal errors specific to the WCM; try reprogramming the module
E104		EEPROM WRITE ERROR	Internal errors specific to the WCM; try reprogramming the module
E105		TEMP SENSOR ERROR	Internal errors specific to the WCM; try reprogramming the module

Index

A

A Series headers	
A30D	
auger speed	227
reel speed	228
A30S	
auger speed	227
A40D	
auger speed	227
reel speed	228–229
reel speed while moving	230
reel to ground speed	231
attaching header with hydraulic center-link and optional self-alignment kit	235
attaching header with mechanical center-link	246
attaching to M155	235
auger speed	227
knife speed	233
air conditioning, <i>See</i> HVAC systems	
air intake systems	404
antenna mountings	56
assembly	
attaching A Series header to M155	235
attaching R Series header to M155	
hydraulic center-link w/o self-alignment	326
attaching R Series header to M155 Windrower	
hydraulic center-link with optional self-alignment kit	320
attaching R1 Series header to M155	
hydraulic center-link w/o self-alignment	326
attaching R1 Series to M155 Windrower	
hydraulic center-link with optional self-alignment kit	320
attaching/detaching headers	
D2 Series Draper Headers	
attaching draper header supports	287
auger speeds	227
A30D header	227
A30S header	227
A40D header	227
auto raise height feature	208
programming auto raise height	208
using auto raise height feature	209
automated steering systems	515
autosteer, <i>See</i> automated steering systems	

B

batteries	
adding electrolyte to batteries	446

battery safety	7
boosting	445
charging	443
connecting	449
installing	448
main disconnect switch	442
maintaining	442
removing	447
belts	438
A/C compressor belt	
replacing	439
tensioning	439
engine belts	
alternator/fan belt	
replacing	438
tensioning	438
brakes	
park brake	387

C

cab	
climate controls, <i>See</i> HVAC systems	
cab display module	
cab display module / windrower control module fault codes	151
configuration guidelines	81
configuring CDM	82
configuring windrower	88
display and sound options	83
backlighting	86
buzzer volume	85
display contrast	87
display language	83
display units	84
engine and windrower functions	67
engine error codes	150, 534
engine warning lights	78
error codes	545
header functions	68
header sensors	119
header float sensor	124
header height sensor	119
header tilt sensor	121
locking buttons	
auger speed	112
displaying locked buttons	117
draper speed	111
header float	108
header tilt	107
knife speed	113

INDEX

reel fore-aft	109
reel speed	116
rotary disc speed	115
operating screens.....	69
programming	100
auger reel speed.....	103
auto raise height.....	94
double windrower attachment	95
engine intermediate speed control	105
hay conditioner	102
header cut width	99
header index mode	92
hydraulic center-link.....	97
hydraulic overload pressure.....	91
knife overload speed	89
knife speed	88
return to cut mode	93
rotary disc hydraulics.....	98
rotary disc overload speed	90
tire size	104
swath compressor sensor calibration	126
troubleshooting	
activating hydraulic purge	149
double windrow attachment activate function.....	145
draper drive activate function	140
engine error codes	128
forcing a header ID	132
header sensors	129
header tilt activate function.....	137
header up/down.....	134
knife drive circuit	139
reel drive circuit activate function.....	142
reel fore-aft activate function	147
reel up/down activate function	135
rotary disc drive circuit activate function.....	144
sensor input signals.....	131
windrower error codes	128
warning and alarms	78
cab suspension limit straps.....	390
CDM, <i>See</i> cab display module	
center-links	
self-locking center-link hook mechanism	204
charge air cooling	430
circuit breakers	468
accessing	468
replacing	469
climate controls	52
component locations	35
compressors, <i>See</i> HVAC systems	
configuring CDM, <i>See</i> cab display module	
configuring windrower	88
consoles	37
controls and automated functions	210
conversion chart	534

cutting height	205
----------------------	-----

D

D Series headers	
attaching	260
attaching header supports	260
deck shift.....	224
setting float options	225
detaching	279
draper index	
setting draper index	221
draper speed	
adjusting independent of ground speed.....	222
setting draper speed	219
setting draper to ground speed	220
setting minimum draper speed.....	220
header float	
float options with deck shift	225
header position	215
reel fore-aft position	216
knife speed	223
reel height	216
reel speed.....	216
reel index	217
reel minimum speed	217
reel only speed.....	219
reel to ground speed	217
D1 Series headers	
deck shift.....	224
setting float options	225
draper index	
setting draper index	221
draper speed	
adjusting independent of ground speed.....	222
setting draper speed	219
setting draper to ground speed	220
setting minimum draper speed.....	220
header float	
float options with deck shift	225
header position	215
reel fore-aft position	216
knife speed	223
reel height	216
reel speed	
reel index	217
reel minimum speed	217
reel only speed.....	219
reel to ground speed	217
D1 SP Series headers	
attaching	260
attaching header supports	260
detaching	279
D2 Series headers	
header position	215

INDEX

D2 SP Series Headers	
hydraulic center-link	
detaching	311
hydraulic center-link without self-alignment kit	
attaching	296
mechanical center-link	
attaching	304
detaching	316
self-aligning hydraulic center-link	
attaching	289
decals	
fuse box decal	471
GSL header switch functions	62
location of safety signs	13
deck shift control	224
definitions	27
double windrow attachment	212
activating in cab display module	145
deck position	213
draper speed	214
draper header supports	
attaching to windrower	287
draper headers	
deck shift control	224
draper index	
setting for D Series headers	221
setting for D1 Series headers	221
draper speed	
adjusting independent of ground speed	222
setting for D Series headers	219
setting for D1 Series headers	219
setting minimum draper speed	220
drive wheels	
installing	492
nut tightening procedure	487
driving the windrower	
driving on the road	176
driving windrower	166
driving forward in cab-forward mode	168
driving forward in engine-forward mode	170
driving in reverse in cab-forward mode	169
driving in reverse in engine-forward mode	172
entering and exiting	167
spin turning	173
stopping	173
DWA, <i>See</i> double windrow attachment	
E	
electrical systems	165, 441
accessing circuit breakers and fuses	468
batteries	442
adding electrolyte	446
boosting	445
charging	443
connecting	449
installing	448
maintaining	442
removing	447
battery main disconnect switch	442
checking and replacing fuses	469
circuit breakers and fuses	468
fuse box decal	471
inspecting 125A main fuse	472
preventing damage to electrical system	441
replacing 125A main fuse	472
replacing circuit breaker/relay	469
engaging and disengaging	190
engine compartment hoods, <i>See</i> hoods	
engine cooling systems	
changing coolant	425
cooler box	429
cleaning cooler	430
cleaning cooler box components	432
screen cleaner duct to screen clearance	433
cooler box screen	
adjusting clearance	433
cleaning screen	430
closing	434
opening	429
engine coolant	
adding coolant	428
checking level	424
checking strength	423
cleaning tank	425
draining coolant	425
radiator	
inspecting radiator cap	422
engine operation	
adjusting throttle	440
engine speed	440
engine temperature	164
fuelling	163
intermediate speed control	162
oil pressure	164
starting the engine	160
engine warm-up	162
stopping engine	162
engines	398
air filters	
cleaning air filter primary element	409
installing primary air filter	407
installing secondary air filter	410
removing primary air filter	405
removing secondary air filter	410
air intake system	404
belts	438
charge air cooling	430
checking interlock	382
controls and gauges	58

INDEX

- electronics 9
 - engine cooling system 422
 - engine error codes on cab display module 150
 - gearbox maintenance 435
 - adding lubricant 435
 - changing lubricant 436
 - checking lubricant level 435
 - general inspection 398
 - inspecting exhaust system 437
 - manuals 398
 - power 9
 - safety 8
 - speed 9
 - turning engine manually 398
 - warning lights 78, 165
 - error codes
 - cab display module 545
 - engine error codes 534
 - displaying 128
 - windrower error codes
 - displaying 128
 - evaporator heater cores 395
 - cleaning 396
- ## F
- filters
 - engine air filters
 - cleaning air filter primary element 409
 - installing primary air filter 407
 - installing secondary air filter 410
 - removing primary air filter 405
 - removing secondary air filter 410
 - servicing air filter restriction indicator 405
 - fuel filters 412
 - primary fuel filter
 - installing 415
 - removing 413
 - secondary fuel filter
 - installing 418
 - removing 418
 - HVAC filters
 - fresh air intake filter
 - inspecting/cleaning 391
 - installing 392
 - removing 390
 - return air cleaner/filter
 - cleaning 394
 - servicing 393
 - hydraulic filters
 - changing oil filters 477
 - charge oil filter 477
 - installing 478
 - removing 477
 - return oil filter 478
 - installing 9
 - removing 478
 - float booster springs
 - spring with external booster spring kit 518
 - spring with internal booster spring kit 519
 - floats, *See* header float
 - fluids, fuel, and lubricants 531
 - fuel systems 411
 - fluids, fuel, and lubricants 531
 - fuel filters 412
 - fuel/water separator 421
 - primary fuel filter
 - installing 415
 - removing 413
 - secondary fuel filter
 - installing 418
 - removing 418
 - fuel specifications 531
 - fuel tanks
 - draining 419
 - filling 163
 - fuel tank vent filter
 - installing 411
 - removing 411
 - fuel/water separator 421
 - removing water from fuel system 421
 - priming
 - procedure 421
 - fuel, fluids, and lubricants
 - capacities 532
 - engine oil 400
 - fuel specifications 531
 - hydraulic oil 473
 - storing 531
 - fuse box decals 471
 - fuses 468
 - accessing 468
 - checking and replacing 469
 - inspecting and replacing 125A 472

G

 - gearbox 435
 - GPS automated steering systems, *See* automated steering systems
 - GSL 62
 - See also* header controls

H

 - header angles 202
 - header controls 60
 - console header switches 65
 - deck shift/float preset switch 65

INDEX

DWA/swath roller switch (if installed).....	66	attaching to M155 SP Windrowers	
display selector switch	63	connecting hydraulics	357
ground speed lever header switches.....	62	D Series headers	
header drive reverse button.....	61	attaching	
header drive switch	61	mechanical center-link	273
header position switches	63	non-self-aligning hydraulic center-link	268
reel and disc speed switches	64	self-aligning hydraulic center-link	261
header drives.....	201	attaching header supports.....	260
header float	194	detaching	279
adjusting float using drawbolts	196	hydraulic center-link	279
checking float	195	mechanical center-link	284
float operating guidelines	194	D1 SP Series headers	
float options and presets.....	196	attaching	
float options with deck shift – D Series and		mechanical center-link	273
D1 Series.....	225	non-self-aligning hydraulic center-link	268
header levelling.....	198	self-aligning hydraulic center-link	261
header operation	192	attaching header supports.....	260
engaging the header.....	201	detaching	279
header and reel hydraulics.....	480	hydraulic center-link	279
header angle	202	D2 SP Series Headers	
header drive.....	201	attaching	
header drop rate.....	209	hydraulic center-link without self-alignment	
levelling the header	198	kit	296
operating with header		mechanical center-link	304
A Series header	227	self-aligning hydraulic center-link	289
D Series header	215	detaching	
D1 Series header	215	hydraulic center-link	311
D2 Series header	215	mechanical center-link	316
R Series header	233	drop rate	482
R1 Series header.....	233	R Series headers	
R2 Series header.....	233	attaching.....	320
reversing header	202	hydraulic center-link w/o self-alignment	326
header sensors		mechanical center-link	332
calibrating header sensors	119	self-aligning hydraulic center-link	320
header float sensor	124	detaching	337
header height sensor.....	119	hydraulic center-link	337
header tilt sensor.....	121	mechanical center-link	341
switching installed sensors on or off	129	R1 Series headers	
header tilt		attaching.....	320
calibrating header tilt sensor.....	121	hydraulic center-link w/o self-alignment	326
header tilt control lockout on cab display		mechanical center-link	332
module.....	107	self-aligning hydraulic center-link	320
testing header tilt activate function	137	detaching	337
headers		hydraulic center-link	337
A Series headers		mechanical center-link	341
attaching		R216 Rotary Disc Header	
mechanical center-link	246	attaching.....	344
non-self-aligning hydraulic center-link	241	detaching	358
self-aligning hydraulic center-link	235	heater shut-off valves.....	51
detaching	251	heating, <i>See</i> HVAC systems	
hydraulic center-link	252	hoods	
mechanical center-link	256	closing from highest position.....	373
attaching header to M155 SP Windrowers		closing from lower position.....	372
self-aligning hydraulic center-link.....	344	opening to highest position.....	372
without self-aligning hydraulic center-link	351	opening to lowest position.....	371

INDEX

horns	57	hydraulic hoses and lines.....	480
HVAC systems		hydraulic oil cooler	476
A/C compressor		hydraulic safety	5
compressor belt		knife drive	
replacing.....	439	testing knife drive circuit using cab display	
tensioning	439	module	139
coolant cycling	159	traction drive hydraulics.....	484
servicing the compressor	398	charge pump pressure	485
A/C condenser.....	394	transmission oil pressure.....	485
A/C covers			
installing cover	397		
removing cover	395		
air distribution.....	51		
compressor.....	397		
controls	52		
evaporator heater core	395		
cleaning	396		
filters			
fresh air intake filter			
cleaning filter element.....	391		
installing	392		
removing	390		
return air cleaner/filter			
cleaning	394		
servicing	393		
fresh air intake filter	390		
heater shut-off valve.....	51		
hydraulic oil.....	473		
changing hydraulic oil	476		
checking and filling.....	474		
hydraulics			
changing hydraulic oil filters.....	477		
connecting			
R2 Series Rotary Disc Headers – M155 SP			
Windrowers	357		
filters			
filter part numbers.....	533		
fittings			
flare-type	525		
O-ring boss – adjustable.....	526		
O-ring boss – non-adjustable	528		
O-ring face seal	528		
tapered pipe thread fittings.....	530		
header and reel hydraulics.....	480		
flow control blocks.....	482		
header drop rate	482		
pressure compensator valve	481		
reel drop rate.....	483		
hydraulic filters			
charge oil filter	477		
installing	478		
removing	477		
return oil filter	478		
installing	479		
removing	478		
		K	
		knife drives	
		testing knife drive circuit using cab display	
		module.....	139
		knife speeds	
		A Series header.....	233
		D Series header	223
		D1 Series header.....	223
		L	
		lighting	45–46
		beacons.....	465
		engine-forward lighting.....	47
		field lights	
		adjusting field lights	455
		replacing bulb	456
		floodlights	
		adjusting cab-forward floodlights.....	456
		adjusting rear floodlights.....	461
		replacing bulb in cab-forward floodlight.....	456
		replacing bulb in rear floodlight.....	462
		headlights	
		aligning headlights	453
		replacing bulb	450
		HID auxiliary lighting.....	49, 458, 515
		adjusting HID lights	461
		replacing lamp	458
		interior lights.....	52
		ambient light	467
		console gauge light	465
		dome light.....	467
		red and amber lights	
		replacing bulbs.....	463
		red taillights	
		replacing bulb	464
		turn signal indicators	468
		lubricating windrower	378
		lubricants, fluids, and system capacities	532
		lubricating engine gearbox.....	435
		lubricating wheel drive	
		adding lubricant	488
		changing wheel drive lubricant.....	489

INDEX

<ul style="list-style-type: none"> checking lubricant levels 487 lubrication points 380 lubrication procedure 379 recommended fuel, fluids, and lubricants 531 storing lubricants and fluids 531 <p>M</p> <ul style="list-style-type: none"> maintenance and servicing 365 <ul style="list-style-type: none"> A/C compressor belt <ul style="list-style-type: none"> replacing 439 tensioning 439 battery 442 daily checks and maintenance 159 electrical system 441 engine 398 <ul style="list-style-type: none"> charge air cooling 430 engine belt 438 general engine inspection 398 turning the engine manually 398 engine compartment <ul style="list-style-type: none"> opening and closing platforms 374 engine cooling system 422 engine exhaust system 437 engine gearbox 435 engine oil 400 <ul style="list-style-type: none"> checking level 400 filter part numbers 533 fuel system 411 fuel, fluids, and lubricants 531 HVAC system 390 <ul style="list-style-type: none"> fresh air intake filter <ul style="list-style-type: none"> cleaning filter element 391 installing 392 hydraulic oil tank <ul style="list-style-type: none"> checking and filling hydraulic oil 474 lighting <ul style="list-style-type: none"> aligning headlights 453 lubricating windrower 378 maintenance safety 4 operator presence system 381 operator's station 381 <ul style="list-style-type: none"> checking engine interlock 382 preparing for servicing 370 priming <ul style="list-style-type: none"> procedure 421 safety systems 381 system overviews <ul style="list-style-type: none"> electrical system 441 wheels and tires 486 <ul style="list-style-type: none"> caster wheels 494 maintenance platforms 374 metric bolts <ul style="list-style-type: none"> torque specifications 523 minimum reel speed 217 	<p>O</p> <ul style="list-style-type: none"> oil, engine 400 <ul style="list-style-type: none"> adding 403 capacities and specifications 532 changing engine oil 401 checking level 400 draining 402 replacing engine oil filter 402 operating windrower header <ul style="list-style-type: none"> variables affecting performance <ul style="list-style-type: none"> float 194 operations 156 <ul style="list-style-type: none"> <i>See also</i> engine operation <i>See also</i> header operation auto raise height feature 208 <ul style="list-style-type: none"> programming auto raise height feature 208 using auto raise height 209 break-in period 157 daily checks 159 double windrowing 212 <ul style="list-style-type: none"> deck position 213 draper speed 214 driving windrower 166 header float 194 operating with header 192 <ul style="list-style-type: none"> A Series header 227 D Series header 215 D1 Series header 215 D2 Series header 215 R Series header 233 R1 Series header 233 R2 Series header 233 owner/operator responsibilities 153 preseason checks/annual service 158 <ul style="list-style-type: none"> distributing A/C compressor coolant 159 return to cut feature <ul style="list-style-type: none"> programming return to cut feature 206 using return to cut feature 207 safety props – M Series Windrowers 192 symbols 153 operator presence system 38 <ul style="list-style-type: none"> engine and transmission 38 header drive 38 operator's seat <ul style="list-style-type: none"> adjusting armrest 40 adjusting armrest angle 42 adjusting fore-aft position 39 adjusting lumbar support 42 adjusting seat tilt 41 adjusting suspension and seat height 39 adjusting vertical dampener 40 fore-aft isolator lock 41 operator's station <ul style="list-style-type: none"> console 37
--	--

INDEX

operator's station..... 37, 381
AM/FM radio..... 56
amenities..... 54
climate controls 52
emergency exit..... 53
engine controls and gauges..... 58
GSL adjustments 382
 adjusting GSL fore-aft movement 384
 adjusting GSL lateral movement 382
header controls 60
HID lighting – option..... 49
horn 57
interior light..... 52
lighting..... 45–47
operator presence system 38, 381
 engine and transmission 38
 header drive 38
parking brake 387
rearview mirror 50
safety systems 381
seat belts..... 44, 381
steering adjustments 384
steering column 45
training seat..... 43
windrower controls 59
windshield wiper..... 50
options and attachments 515
 automated steering systems..... 515
 booster spring kit – internal 519
 cab
 AM/FM radio 515
 windshield shades..... 516
 center-link
 hydraulic 517
 mechanical 517
 draper header case drain kit 516
 draper header reel drive and lift plumbing..... 516
 engine
 block heater..... 516
 engine fan air baffle 516
 header drive reverser 517
 hydraulic
 hydraulic center-link..... 517
 rotary header drive hydraulics..... 518
 light header flotation 517
 lighting
 HID auxiliary lighting 515
 lighting/marketing for cab-forward travel 519
 warning beacons 516
 pressure sensor kit 517
 R/R1 disc drive kit 517
 self-aligning center-link 518
 spring with external booster spring kit 518
 swath compressor..... 519
 swath roller..... 519

transport
 lighting/marketing for cab-forward travel 519
 towing harness..... 520
 weight box 520
weight box..... 186

P

platforms 374
 closing platform
 major service position 377
 standard position..... 375
 opening platform
 major service position 376
 standard position..... 374
product overview 27
programming
 auto raise height feature 208
 return to cut-feature 206
programming CDM, *See* cab display module

R

R Series headers..... 233
 attaching 320
 hydraulic center-link w/o self-alignment 326
 hydraulic center-link with optional self-alignment
 kit 320
 disc speed..... 233
 setting disc speed..... 234
R1 Series headers 233
 attaching 320
 hydraulic center-link w/o self-alignment 326
 hydraulic center-link with optional self-alignment
 kit 320
R2 Series headers 233
R216 Rotary Disc Header
 attaching 344
 detaching 358
radiators
 inspecting radiator cap..... 422
radios..... 56, 515
rearview mirrors..... 50
reel height
 D Series header 216
 D1 Series header..... 216
reel index..... 217
reel minimum speed 217
reel speed 216
 A30D header 228
 A40D header 228
 D Series header 216
 D1 Series header..... 216
reel-to-ground speed 217

INDEX

reels	
reel drop rate	483
relays	
replacing	469
responsibilities, owner/operator	153
return to cut feature	206
programming return to cut	206
using return to cut	207

S

SAE	
bolt torques	521
safety	1
alert symbols.....	1
battery safety.....	7
engine safety.....	8
engine electronics.....	9
high-pressure rail.....	9
general safety.....	2
hydraulic safety	5
maintenance safety	4
operational safety	156
safety sign decals	12
installing decals	12
interpreting decals	17
sign location.....	13
signal words.....	1
tire safety	6
welding precautions	8
safety props	
M Series Windrowers.....	192
screen cleaners	
adjusting clearance.....	433
seat belts	44
maintaining seat belts.....	381
serial numbers	
location	iii
specifications.....	28
filter part numbers	533
fuel.....	531
torque specifications	521
windrower dimensions.....	32
springs	
float springs	
spring with internal booster spring kit	519
starting the engine	160
engine warm-up.....	162
steering	
adjusting steering chain tension.....	386
adjusting steering column.....	45
adjustments	384
automated steering systems.....	515
checking steering chain tension	386
checking steering link pivots.....	384

stopping engine	162
storing windrower	191
swath compressors	
calibrating sensor.....	126
using swath compressor.....	210
symbols	
definitions	153
engine function.....	154
header function	156
windrower operating	155

T

temperatures	
engine.....	164
torque specifications.....	521
flare-type hydraulic fittings	525
metric bolt specifications.....	523
cast aluminum.....	524
O-ring boss hydraulic fittings – adjustable.....	526
O-ring boss hydraulic fittings – non-adjustable	528
O-ring face seal fittings	528
SAE bolt torque specifications	521
tapered pipe thread fittings	530
towing	
attaching tow-bar to windrower	186
towing header with windrower.....	179
towing harness	520
towing headers	
weight box.....	520
towing windrower	
engaging and disengaging wheel drives.....	190
towing windrowers	190
training seats.....	43
transporting	
attaching header transport hitch to header.....	186
converting from field to transport mode	180
converting from transport to field mode	183
Trimble® automated steering systems	515
troubleshooting	
cab air.....	511
electrical.....	506
engine.....	503
header drive.....	508
header problems.....	134
hydraulics	507
operator's station	513
steering and ground speed control	510
traction drive	508
windrower problems	128
turn signals	
indicators	468

V

ventilating, *See* HVAC systems

W

weight boxes 520, *See* towing draper headers
 attaching to windrower 186
welding..... 8
wheel drives 190
 adding lubricant..... 488
 changing lubricant..... 489
 checking lubricant level..... 487
wheels and tires 486
 caster wheels174, 494
 anti-shimmy dampener..... 500
 ballast requirement..... 500
 forked caster wheels
 installing 498
 lowering 496
 raising 495
 removing 497
 formed caster wheels
 installing 499
 lowering 496
 raising 495
 removing 499
 inflating caster tire..... 494
 tightening caster wheel nuts..... 494
 drive wheels
 inflating tire..... 486
 lowering..... 493
 nut tightening procedure 487
 raising using jack method 490
 removing..... 492
 tire safety 6
 wheel drives
 checking lubricant levels 487
 lubricating wheel drive
 adding lubricant 488
 changing lubricant 489
windrower control module
 calibrating header sensors 119
windrowers
 M205 Windrowers
 attaching to header, *See* M155, M155E4 Windrowers
windshield wipers..... 50

Lubricants, Fluids, and System Capacities

This page acts as a quick reference for the Operator. It provides information on the types of lubricants and fluids used in the windrower

CAUTION

To avoid injury or death, do NOT allow ANY machine fluids to enter the body.

Lubricant/Fluid	Location	Description	Capacity
Grease	Various	SAE multi-purpose high temperature extreme pressure (EP2) performance with 1% maximum molybdenum disulphide (NLGI Grade 2) lithium base	—
Diesel fuel	Fuel tank	Diesel Grade No.2, or Diesel Grade No.1 and 2 mix ⁸⁴ ; refer to 9.2.2 Fuel Specifications, page 531 for more information	367 liters (97 US gallons)
Hydraulic oil	Hydraulic reservoir	SAE 15W-40 compliant with SAE specs for API class SJ and CH-4 engine oil.	65 liters (17.2 US gallons)
Gear lubricant	Gearbox	SAE 80W-140 ⁸⁵ , API service class GL-5 fully synthetic gear lubricant (SAE J2360 preferred)	2.1 liters (2.2 US quarts)
Gear lubricant	Wheel drive ⁸⁶	SAE 75W-90, API service class GL-5 fully synthetic gear lubricant (SAE J2360 preferred)	1.4 liters (1.5 US quarts)
Coolant	Engine cooling system	ASTM D-6210 and CES-14603, Fleetguard® ES Compleat™ OAT, Peak Final Charge Global®. For more information, refer to 9.2.3 Lubricants, Fluids, and System Capacities, page 532	27.5 liters (7.3 US gallons) ⁸⁷
Engine oil	Engine oil pan	SAE 15W-40 compliant with SAE specs for API class SJ and CH-4 engine oil	11 liters (11.6 US quarts)
Air conditioning refrigerant ⁸⁸	Air conditioning system	R134A	2.27 kg (5 lb.)
Air conditioning refrigerant oil ⁸⁹	Air conditioning system total capacity	SP-15 PAG	240 cc (8.1 fl. oz.)

84. Optional when operating temperature is below 0°C (32°F).

85. SAE 75W-140 may be substituted for SAE 80W-140 if necessary.

86. SAE 85W-140 API Service Class GL-5. Extreme Pressure Gear Lubricant is used before initial change.

87. Equal parts with water, high quality, soft, deionized or distilled water as recommended by Supplier.

88. For prior models who have not upgraded to 2.27 kg (5 lb.) of refrigerant order Kit MD #183180, which includes decal to advise of systems 2.27 kg (5 lb.) charge requirement, refer to Service Bulletin 1254.

89. New compressor (MD #183515) comes filled. If installing on 2014 and prior models, refer to Service Bulletin 1254.

MacDon®

CUSTOMERS
MacDon.com

DEALERS
Portal.MacDon.com

Trademarks of products are the marks of their
respective manufacturers and/or distributors.

Printed in Canada