



Model 9000 Windrower Tractor NATURALLY ASPIRATED MUFFLER REPLACEMENT INSTALLATION INSTRUCTIONS

NOTE: The muffler you ordered is no longer available, so use this instruction to retro-fit the new muffler and parts you received.

1. Loosen hardware on muffler clamp and aspirator hose connection at the muffler.
2. Remove existing muffler (A) from the engine.

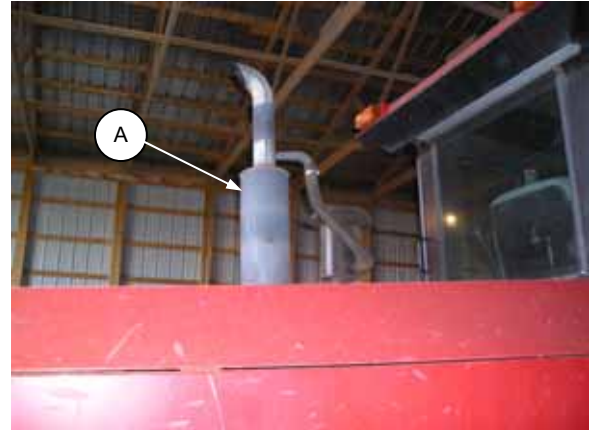

3. Assemble new muffler (B) as shown in photo.
NOTE: New muffler needs to have upper bent stand pipe section of pipe cut off to allow installation of new components as shown in photo.
NOTE: Be sure to leave enough straight pipe on muffler to allow installation of new components.
4. Using existing clamp, clamp muffler onto engine stand pipe and tighten clamps.

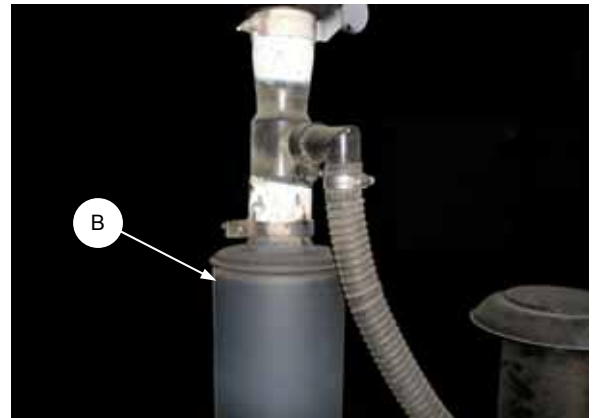

5. Attach aspirator hose (C) to new muffler using existing clamp.
NOTE: Air cleaner may need to be loosened and rotated so that hose reaches connection.

