

M205 Windrower Tractor HOSE KIT INSTALLATION INSTRUCTIONS

1. Remove existing steel hydraulic line. Leave the adapter fittings at both ends of the steel line in place.
2. Install new hose and hydraulic fitting elbow as shown in Figure 1.

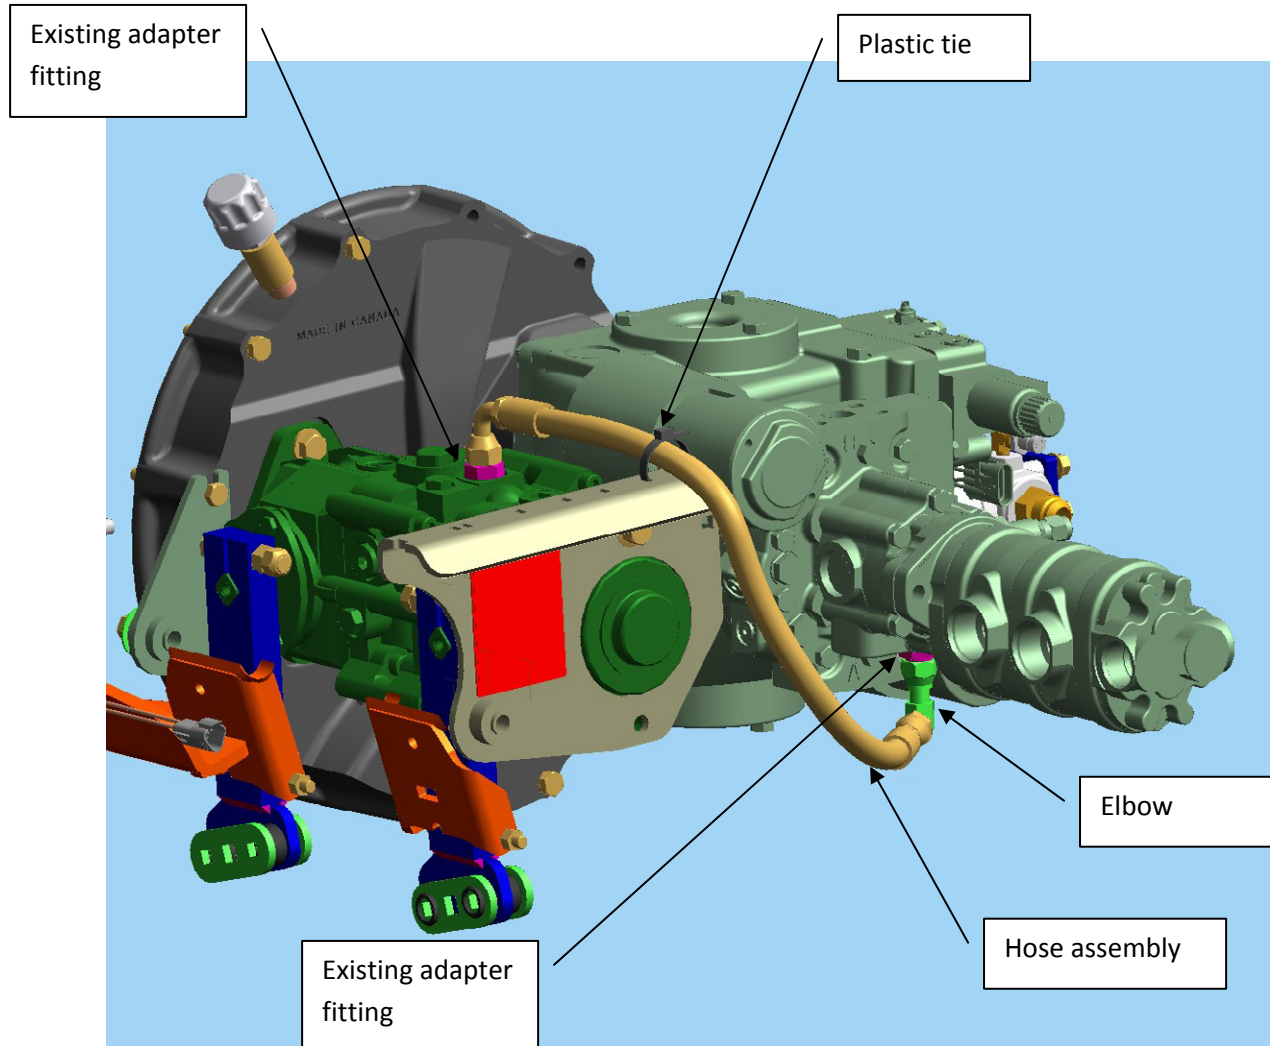


Figure 1