



QUICK REFERENCE CARD – CASE IH 77, 80 & 88 Series COMBINES

Combine Initial Settings

- Fully retract header tilt cylinder and lower header until it slightly contacts the ground. At this point adjust feeder faceplate angle to align pendulum with rear face of adapter (if applicable).

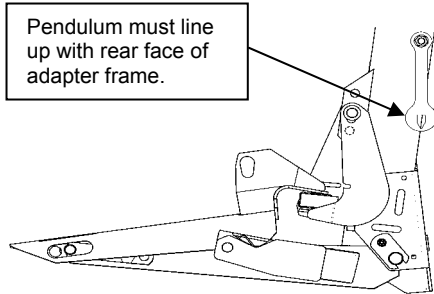


- Set the conveyer drum to the middle position to achieve a 1/8" (3mm) dimension from the bottom of the chain slat to the feeder house floor. (Figure A).
- Adjust stone retarder blocks to position recommended in Combine Operator's Manual. **(Figure A).** **NOTE:** For best performance, replacement of the rock retarder drum with a standard drum with serrated feed chain is recommended.

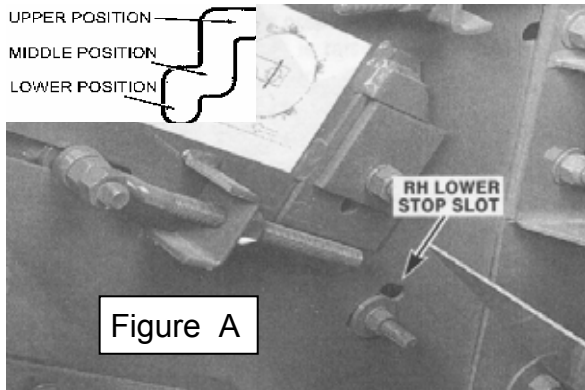


- Remove all feeder house dust shields, enclosure panels, etc.

873 Adapter Initial Settings


- Place adapter float pin in proper hole for your header model as follows:
 - 963/2042/972/1052/973/2052/974/2062 headers in hole (A).
- Place adapter down stop pin in proper hole for your header model as follows:
 - 973/2052/974/2062 headers in hole (2), (factory set).
 - 963/2042/972/1052 headers in hole (3).

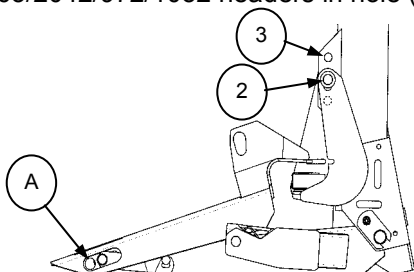


- If mounting adapter to a header, ensure down stop pads are orientated properly.
 - 963/972/973 header with dust shields removed and 973 with dust shields on, orientation is correct as shipped (D).
 - 963/972 with dust shields on, orient pads to position (F).
 - 974 headers, orient pads to position (E).

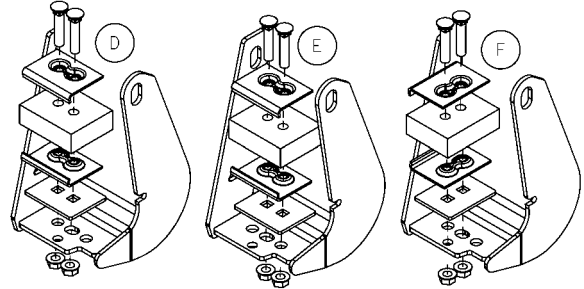

- For 972/973/974 - Install skid plate on adapter feed pan so dim. D = 3-1/2" (90 mm)
- For 963 - Slide transition plate rearward until feed pan bolts bit rear of slot.

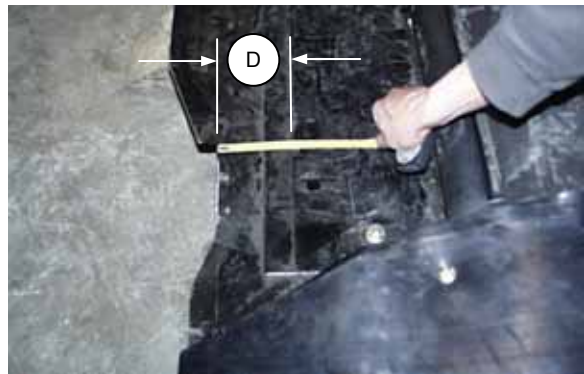

- Refer to 873 Operators Manual for adjustment details.
- Adjust RTD position to achieve 1" to 2" dimension. **Note:** To achieve this feed chain on combine may need to be fully extended.

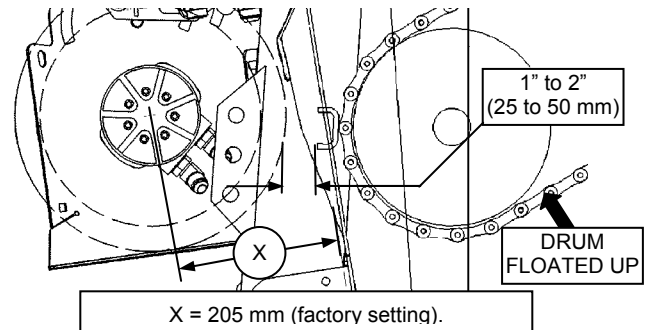


- Set the center link between the header and adapter to 19-1/4" (490 mm) length (pin to pin).
- Set the float to specs given on pages 3 & 4.
- Set the draper speed flow control so number "4" is at the 12 o'clock position.


QUICK REFERENCE CARD – CASE IH 77, 80 & 88 Series COMBINES

Header Initial Settings


- See page 4 for 963/2042 Header.
- For 973/974 and 2052/2062 Model Headers: Set the center delivery opening to **42"** (1067 mm).

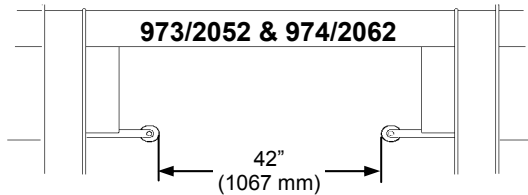

- Increase opening if bridging occurs in bulky crops such as Mustard, Canola or Peas.
- Position the decks so there is equal overlap of adapter feed draper each side.
- Align the vertical edge of the rear deflectors on the feed pan just inside the edge of the feeder house opening to ensure smooth crop flow.
- Re-check skid plate clearance (set during 873 initial settings) with adapter inserted in header. (see appropriate dimensions below) Refer to 873 Operator's Manual for further details.

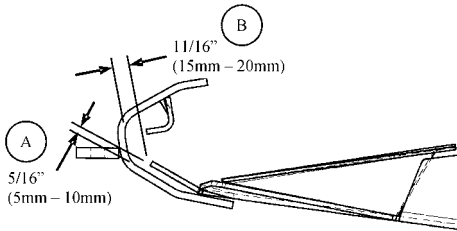


- Gauge wheels are intended to help float the header when cutting off the ground. For such applications set gauge wheels in the Short – Tall setting depending on cut height. **Note:** When cutting on the ground place gauge wheels in the storage position.

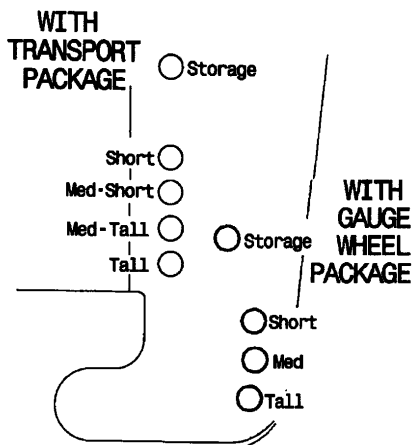


Pickup Reel Initial Settings

- See page 4 for 963/2042 Header.
- Install bolt (C) through the cam arm with head inboard and torque to 120 ft. lbs. (162 N·m.)

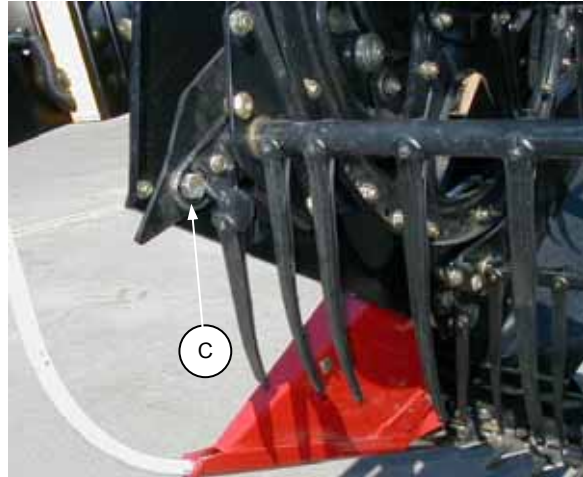

- Adjust the finger pitch to position **5**.

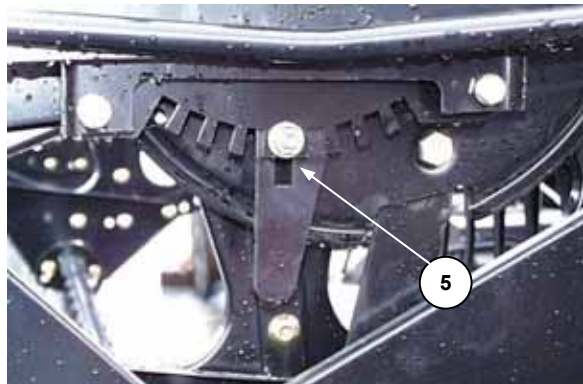

- Set the fore/aft position to between **4** and **5** on the gauge decal at left reel support arms.



- Reel finger to sickle guard minimum clearance with reel fully lowered is 5/8" (15mm), **measured at both ends of the cutterbar for 973/2052 headers. For 974/2062 headers, flex to full frown and see Header Operator's Manual for settings.**
- Recommended reel speed is 10% above ground speed.

QUICK REFERENCE CARD – CASE IH 77, 80 & 88 Series COMBINES

973/2052 & 974/2062 Initial Set-up

<u>Average Cereal Crops</u>	<u>Rice</u>		<u>Soybeans</u>	
	<u>Normal Cutting</u>	<u>Tough Cutting</u>	<u>Dry Conditions</u>	<u>Wet Conditions</u>
Sickle- Check daily that guards are aligned. Clearance from hold down to sickle 0.020" (0.5mm)	-	-	-	-
2100 reel Fore/Aft- 4 or 5 on decal Finger Pitch Adjustment- Slot 5 Reel Clearance- 5/8" (15mm) for 973/2052 headers. For 974/2062, flex to full frown and refer to Header Operator's Manual for settings. Speed- +10 % ground speed.	5 - -	7 - -	6 Slot 7 ½" (13mm)	6 Slot 7 ½" (13mm)
Draper Speed- Dial position "4". Draper opening- 42" (1067 mm) Reduce opening to 39.5" (1005 mm) or less if side drapers are back feeding.	- -	Position 3 or 4 50.6" (1285 mm)	- -	- -
Guard Angle- center link 19-¼" (490 mm) length (pin to pin). Poly Skids- Optional on 973/2052	- Yes	- Yes	- Yes	Center link fully retracted. Yes
Gauge Wheels (if equipped)- Most cereals require "medium" stubble height setting Note: Gauge wheels should be in storage position for on the ground cutting applications.	Not Applicable	Not Applicable	Storage	Storage
Float- Adjust float to achieve 0" gap at downstop pad. (Refer to 873 Operator's Manual)	½" gap	½" gap	½" gap	½" gap

QUICK REFERENCE CARD – CASE IH 77, 80 & 88 Series COMBINES

963/2042 Initial Set-up.	Field Peas		Soybeans	
	Dry Conditions	Wet Condition	Dry Conditions	Wet Condition
Average Cereal Crops				
Sickle -Check daily that guards are aligned. Clearance from hold down to sickle 0.020" (0.5mm)	-	-	-	-
2000B Reel Fore/ Aft -5 th hole/frt. Cam Arm -Y Range Slot - P Finger Pitch - L or M Reel Clearance - 2" (50 mm) Speed - +10% of ground speed	2 nd from front Y Q M 2" (50mm)	2 nd from front. Y P J 2" (50mm)	2 nd from front X P M 2" (50mm)	2 nd from front. X P M 2" (50mm)
Draper Speed - Dial position "4".	-	-	-	-
Draper opening - 41.7" (1060 mm)	-	-	-	-
Guard Angle - 1.0" (25mm) of threads showing on center link. Poly Skids - None	- Yes	- Yes	- Yes	Center link fully retracted. Yes
Gauge Wheels (if equipped) - Most cereals require "position 2" stubble height setting. Note: Gauge wheels should be in storage position for on the ground cutting applications.	Storage	Storage	Storage	Storage
Float - Adjust float to achieve 0" gap at downstop pad. (Refer to 873 Operator's Manual)	½" gap	½" gap	½" gap	½" gap

