

Ground Speed Lever (GSL) Buttons	
Callout	Function
A	Reel speed / disc speed
B	Back
C	Select
D	Autosteer engage (if installed)
E	Reel position
F	One-Touch-Return presets <sup>1</sup>
G	Header position
H	Shift
J	Scroll wheel and select

<sup>1</sup> German export machines only: When in engine-forward mode, the GSL button "C" (F) enables the secondary brake system.


Ground Speed Lever (GSL) Shortcuts	
Buttons	Function
Shift + back	Home page
Shift + select	Main menu access
Shift + scroll	Adjust maximum ground speed

**Pro Tip**

Easily activate the turn signals when transporting by using the REEL/DISC SPEED +/- buttons on the GSL.



Harvest Performance Tracker (HPT) Display	
Callout	Function
A	Soft keys 1–4 (opens run pages 1–4)
B	Home (returns to the last run page)
C	Scroll and select (scrolling highlights menu options, pressing knob activates selection)
D	Back (moves up one level in menu structure)
E	Main menu (accesses windrower and header settings)

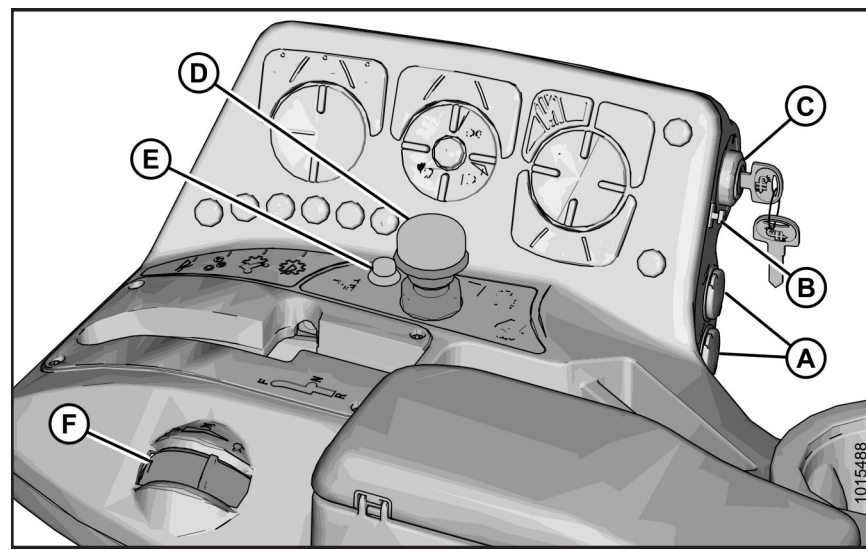

Operator Console Features			
Callout	Function	Callout	Function
A	Auxiliary power outlets	D	Header drive
B	USB jack	E	Header drive reverse
C	Ignition	F	Throttle

Subject to change without notice

### Operator's Station Features

Operator Console Buttons			
Callout	Function	Callout	Function
A	Double window attachment (DWA) / swath roller attachment raise/lower	N	High beams
B	Deck shift draper right side deliver	P	Windshield defog/defrost
C	Deck shift draper center delivery	Q	Air conditioning
D	Deck shift draper left side delivery	R	Temperature
E	Draper / double windrow attachment (DWA) speed	S	Blower speed (manual mode)
F	Harvest performance tracker (HPT) shortcuts	T	Horn
G	Cab-forward field lights	U	Auto fan speed
H	Beacon lights	V	Cab air recirculation
J	Turn signals	W	Eco Engine Control (EEC)
K	Hazard light	X	Windshield wiper (rear)
L	Clearance lights	Y	Wiper fluid (front and rear)
M	Road lights	Z	Windshield wiper (front)

HPT Shortcut Buttons (F)	
Button	Shortcut
F1	Float menu
F2	One-Touch-Return
F3	Windrower settings
F4	Header settings
F5	Drive wheel leg width adjust
F6	Walking beam width adjust

- #### Normal Start – Engine Temperature above 15°C (60°F)
1. Seat locked in either cab-forward or engine-forward position, GSL in PARK, and HEADER DRIVE switch OFF.
  2. Seat belt ON. Throttle set to LOW IDLE position (fully back).
  3. If HPT is still booting up (up to 45 sec.), allow the Wait to Start (WTS) symbol to disappear before starting the engine.
  4. Sound the horn three times.
  5. Turn ignition key to START position until engine starts, release key, and idle engine until temperature reaches 40°C (104°F).
  6. HPT displays the header disengage page after boot up (up to 45 sec).

Break-In Inspections		
Hr(s)	Item	Check
1	Drive wheel nuts	Torque: 510 Nm (375 lbf-ft) dry. Refer to Operator's Manual.
5	A/C compressor belt	Tension
	Caster wheel nuts	Torque: 170 Nm (125 lbf-ft)
	Caster wheel anti-shimmy dampener bolts	Torque bolts: Inboard: 136 Nm (100 lbf-ft) Outboard: 244 Nm (180 lbf-ft) Outboard jam nut: 136 Nm (100 lbf-ft)
50	Hose clamps: air intake, radiator, heater, and hydraulic	Hand-tighten unless otherwise noted.
	Caster wheel anti-shimmy dampener bolts	Torque bolts to the same specification as 5 hour check.
	Main gearbox oil	Change
	Drive wheel oil lubricant	
	Hydraulic return filter	
Hydraulic charge filter		


Ongoing Maintenance Intervals	
Time	Service
Every 10 hours or daily	Check tire inflation. Check engine oil level. Check engine coolant level at reserve tank. Check hydraulic oil level. Drain fuel filter water trap. Fill fuel tank. Check hydraulic hoses and lines for leaks. Check diesel exhaust fluid (DEF) level.
Every 50 hours	Grease caster pivots. Grease top lift link pivots (x4). Grease caster wheel bearings. Clean cab fresh air intake filter. Check gearbox oil level.
Every 100 hours or annually	Clean cab air return filter. Clean radiator, hydraulic oil cooler, charge air cooler, and A/C condenser.
Every 250 hours	Change engine oil and filter. Change engine gearbox oil. Change air cleaner primary filter. Check wheel drive oil level.
<b>NOTE:</b> Refer to M1170N75 Operator's Manual for service beyond 250 hours.	

Fluids and Lubricants			
Fluid	Capacity	Spec	Description / Information
Diesel exhaust fluid (DEF)	49 L (13 U.S. Gallons)	Must meet ISO 22241 requirements	Diesel exhaust system
Fuel: diesel No.2	518 L (137 U.S. Gallons)	ASTM D-975 Grade S15	Sulphur (by weight) 0.5% max. water and sediment (by vol) 0.05% max. lubricity 520 microns
Fuel: diesel no.1 and no. 2 mix	518 L (137 U.S. Gallons)	n/a	Sulphur (by weight) 0.5% pref. 1% max. water and sediment (by weight) 0.1% max. lubricity 460 microns
Engine coolant / antifreeze	31 L (8.2 U.S. Gallons)	ASTM D-6120 and CES-14603, Peak Final Charge Global™ or Fleetguard ES Compleat™ OAT	Refer to Operator's Manual for more information
Wheel Drive lubricant	Standard: 1.4 L (1.5 U.S. Quarts)	SAE 75W-140 (or 80W-140) API service class GL-5	Fully synthetic gear lubricant (SAE J2360 preferred)
Grease	As needed	SAE multi-purpose	High temperature extreme pressure EP2. max 1% molybdenum disulphide, lithium base unless otherwise noted
Engine oil	11 L (11.6 U.S. Quarts)	SAE 15W-40 for API class SJ and CJ-4	Engine oil pan
Hydraulic oil	60 L (15.8 U.S. Gallons)	Single grade transmission/hydraulic fluid (THF). Refer to Operator's Manual for more information	Windrower drive and header drive
Gearbox oil	2.1 L (2.2 U.S. Quarts)	SAE 75W-140 (or 80W-140) API service class GL-5 (SAE J2360 preferred)	Fully synthetic gear lubricant for engine gearbox
A/C refrigerant	2.38 kg (5.25 lb.)	R134A	Cab A/C system
A/C compressor oil	240 cc (8.1 fl. Oz.)	PAG SP-15	Cab A/C compressor lubricant

Tire Pressures
The recommended tire pressure will vary depending on header type and attachments installed. Refer to your M1170N75 Operator's Manual for a complete list of recommended tire pressures.

**QuickMenu**

Pressing the encoder knob (A) (or the SELECT button on the GSL) opens the QuickMenu on the HPT display. The QuickMenu is the main way to adjust on-screen values. Adjustable parameters are highlighted by a white border (B). The cursor position is highlighted with a red border (C). Use the encoder knob to move the red cursor to the desired area. Press SELECT to access the adjustment (D). Once the parameter is selected, use the scroll wheel to change the value. Press BACK or HOME to save the adjustment.

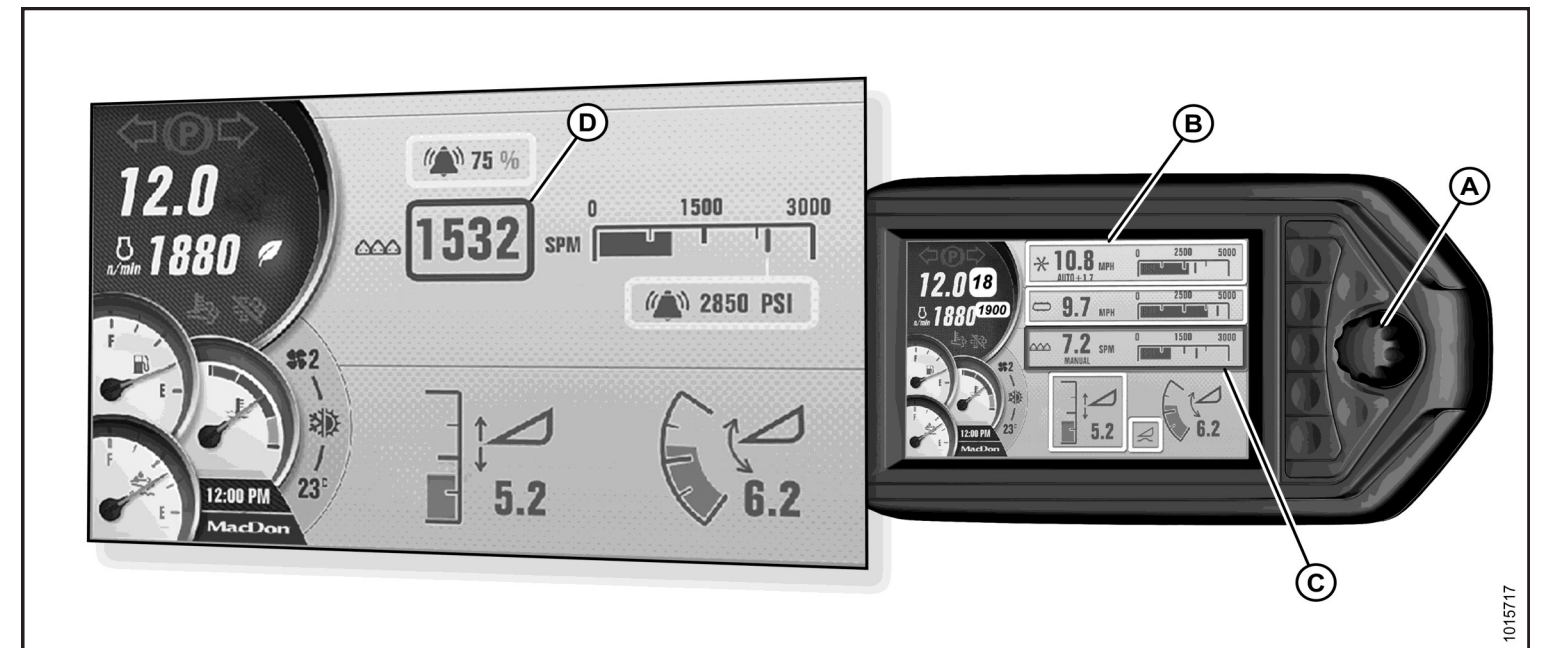

QuickMenu Features		
• Adjust float	• Set knife speed	• Access maintenance information
• Adjust Eco Engine Control (EEC) speed	• Adjust auto speed settings	• Manage telltales
• Set maximum ground speed	• Define header alarm speeds	• Turn auto speeds ON/OFF
• Set header alarm pressure		

**NOTE:** Press soft key 5 (A) to open the Harvest Performance Tracker (HPT) main menu.

<b>Information:</b>	Contains information about the windrower, header, and performance data.
<b>Settings:</b>	Provides access to adjustable settings for the display, windrower, header, and One-Touch-Return.
<b>Maintenance:</b>	Contains the maintenance scheduler. Turn ON/OFF individual maintenance notifications and log your maintenance history.
<b>Diagnostics:</b>	Provides access to diagnostic information, engine faults, and windrower faults.
<b>Engine Aftertreatment:</b>	Provides access to the selective catalytic reduction (SCR) catalyst conditioning MANUAL (FORCE) and INHIBIT switches.